

MITSUBISHI



GRAPHIC OPERATION TERMINAL

GOT1000

GOT1000 Series Connection Manual 1/3



● SAFETY PRECAUTIONS ●

(Always read these precautions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product.


In this manual, the safety precautions are ranked as "DANGER" and "CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the  caution level may lead to a serious accident according to the circumstances. Always follow the instructions of both levels because they are important to personal safety.

Please save this manual to make it accessible when required and always forward it to the end user.

[DESIGN PRECAUTIONS]

DANGER

- Some failures of the GOT, communication unit or cable may keep the outputs on or off.
An external monitoring circuit should be provided to check for output signals which may lead to a serious accident.
Not doing so can cause an accident due to false output or malfunction.
- If a communication fault (including cable disconnection) occurs during monitoring on the GOT, communication between the GOT and PLC CPU is suspended and the GOT becomes inoperative.
For bus connection : The CPU becomes faulty and the GOT becomes inoperative.
For other than bus connection : The GOT becomes inoperative.
A system where the GOT is used should be configured to perform any significant operation to the system by using the switches of a device other than the GOT on the assumption that a GOT communication fault will occur.
Not doing so can cause an accident due to false output or malfunction.
- Do not use the GOT as the warning device that may cause a serious accident.
An independent and redundant hardware or mechanical interlock is required to configure the device that displays and outputs serious warning.
Failure to observe this instruction may result in an accident due to incorrect output or malfunction.

[DESIGN PRECAUTIONS]

DANGER

- Incorrect operation of the touch switch(s) may lead to a serious accident if the GOT backlight is gone out.

When the GOT backlight goes out, the POWER LED flickers (green/orange) and the display section turns black and causes the monitor screen to appear blank, while the input of the touch switch(s) remains active.

This may confuse an operator in thinking that the GOT is in "screensaver" mode, who then tries to release the GOT from this mode by touching the display section, which may cause a touch switch to operate.

Note that the following occurs on the GOT when the backlight goes out.

The POWER LED flickers (green/orange) and the monitor screen appears blank.

CAUTION

- Do not bundle the control and communication cables with main-circuit, power or other wiring. Run the above cables separately from such wiring and keep them a minimum of 100mm apart. Not doing so noise can cause a malfunction.

[MOUNTING PRECAUTIONS]

DANGER

- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the GOT to/from the panel.
Not doing so can cause the GOT to fail or malfunction.
- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the communication unit, option function board or multi-color display board onto/from the GOT.
Not doing so can cause the unit to fail or malfunction.
- Before mounting an optional function board or Multi-color display board, wear a static discharge wrist strap to prevent the board from being damaged by static electricity.

CAUTION

- Use the GOT in the environment that satisfies the general specifications described in this manual.
Not doing so can cause an electric shock, fire, malfunction or product damage or deterioration.
- When mounting the GOT to the control panel, tighten the mounting screws in the specified torque range.
Undertightening can cause the GOT to drop, short circuit or malfunction.
Overtightening can cause a drop, short circuit or malfunction due to the damage of the screws or the GOT.

[MOUNTING PRECAUTIONS]

CAUTION

- When loading the communication unit to the GOT, fit it to the connection interface of the GOT and tighten the mounting screws in the specified torque range.
Overtightening can cause a drop, failure or malfunction due to the damage of the screws or unit.
- When mounting the multi-color display board onto the GOT, tighten the mounting screws within the specified torque range.
Loose tightening may cause the unit and/or GOT to malfunction due to poor contact.
Overtightening may damage the screws, unit and/or GOT; they might malfunction.
- When mounting an optional function board onto the GT15□□, fully connect it to the connector until you hear a click.
- When mounting an optional function board onto the GT15□□, fully connect it to the connector.
- Push the multi-color display board onto the corresponding connector so that it will be secured firmly.
- When inserting a CF card into the GOT, push it into the insertion slot until the CF card eject button will pop out.
Failure to do so may cause a malfunction due to poor contact.
- When inserting/removing a CF card into/from the GOT, turn the CF card access switch off in advance.
Failure to do so may corrupt data within the CF card.
- When removing a CF card from the GOT, make sure to support the CF card by hand, as it may pop out.
Failure to do so may cause the CF card to drop from the GOT and break.

[WIRING PRECAUTIONS]

DANGER

- Be sure to shut off all phases of the external power supply used by the system before wiring.
Failure to do so may result in an electric shock, product damage or malfunctions.

[WIRING PRECAUTIONS]

CAUTION

- Please make sure to ground FG terminal and LG terminal of the GOT power supply section by applying Class D Grounding (Class 3 Grounding Method) or higher which is used exclusively for the GOT.
Not doing so may cause an electric shock or malfunction.
- Be sure to tighten any unused terminal screws with a torque of 0.5 to 0.8N•m.
Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Use applicable solderless terminals and tighten them with the specified torque.
If any solderless spade terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Correctly wire the GOT power supply section after confirming the rated voltage and terminal arrangement of the product.
Not doing so can cause a fire or failure.
- Tighten the terminal screws of the GOT power supply section in the specified torque range.
Undertightening can cause a short circuit or malfunction.
Overtightening can cause a short circuit or malfunction due to the damage of the screws or the GOT.
- Exercise care to avoid foreign matter such as chips and wire offcuts entering the GOT. Not doing so can cause a fire, failure or malfunction.
- Plug the bus connection cable by inserting it into the connector of the connected unit until it "clicks".
After plugging, check that it has been inserted snugly.
Not doing so can cause a malfunction due to a contact fault.
- Plug the communication cable into the connector of the connected unit and tighten the mounting and terminal screws in the specified torque range.
Undertightening can cause a short circuit or malfunction.
Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

[TEST OPERATION PRECAUTIONS]

DANGER

- Before performing the test operations of the user creation monitor screen (such as turning ON or OFF bit device, changing the word device current value, changing the settings or current values of the timer or counter, and changing the buffer memory current value), read through the manual carefully and make yourself familiar with the operation method.
During test operation, never change the data of the devices which are used to perform significant operation for the system.
False output or malfunction can cause an accident.

[STARTUP/MAINTENANCE PRECAUTIONS]

DANGER

- When power is on, do not touch the terminals.
Doing so can cause an electric shock or malfunction.
- Connect the battery correctly.
Do not discharge, disassemble, heat, short, solder or throw the battery into the fire.
Incorrect handling may cause the battery to generate heat, burst or take fire, resulting in injuries or fires
- Before starting cleaning or terminal screw retightening, always switch off the power externally in all phases.
Not switching the power off in all phases can cause a unit failure or malfunction.
Undertightening can cause a short circuit or malfunction.
Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

[STARTUP/MAINTENANCE PRECAUTIONS]

CAUTION

- Do not disassemble or modify the unit.
Doing so can cause a failure, malfunction, injury or fire.
- Do not touch the conductive and electronic parts of the unit directly.
Doing so can cause a unit malfunction or failure.
- The cables connected to the unit must be run in ducts or clamped.
Not doing so can cause the unit or cable to be damaged due to the dangling, motion or accidental pulling of the cables or can cause a malfunction due to a cable connection fault.
- When unplugging the cable connected to the unit, do not hold and pull the cable portion.
Doing so can cause the unit or cable to be damaged or can cause a malfunction due to a cable connection fault.
- Do not drop or apply strong impact to the unit.
Doing so may damage the unit.
- Do not drop or give an impact to the battery mounted to the unit.
Doing so may damage the battery, causing the battery fluid to leak inside the battery.
If the battery is dropped or given an impact, dispose of it without using.
- Before touching the unit, always touch grounded metal, etc. to discharge static electricity from human body, etc.
Not doing so can cause the unit to fail or malfunction.

[BACKLIGHT REPLACEMENT PRECAUTIONS]

DANGER

- Be sure to shut off all phases of the external power supply of the GOT (and the PLC CPU in the case of a bus topology) and remove the GOT from the control panel before replacing the backlight (when using the GOT with the backlight replaceable by the user).
Not doing so can cause an electric shock.
Replacing a backlight without removing the GOT from the control panel can cause the backlight or control panel to drop, resulting in an injury.

CAUTION

- Wear gloves for the backlight replacement when using the GOT with the backlight replaceable by the user.
Not doing so can cause an injury.
- Before replacing a backlight, allow 5 minutes or more after turning off the GOT when using the GOT with the backlight replaceable by the user.
Not doing so can cause a burn from heat of the backlight.

[DISPOSAL PRECAUTIONS]

CAUTION

- When disposing of the product, handle it as industrial waste.

[TRANSPORTATION PRECAUTIONS]

CAUTION

- When transporting lithium batteries, make sure to treat them based on the transport regulations.
(For details on models subject to restrictions, refer to the User's Manual for the GOT you are using.)
- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of the User's Manual, as they are precision devices.
Failure to do so may cause the unit to fail.
Check if the unit operates correctly after transportation.

REVISIONS

* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Oct., 2004	SH(NA)-080532ENG-A	First edition
Mar., 2005	SH(NA)-080532ENG-B	<p>Compatible with GT Designer2 Version2.09K</p> <p>Addition</p> <p>Chapter 5, Chapter 6, Chapter 7, Chapter 8, Chapter 10, Chapter 11, Chapter 12, Chapter 13, Chapter 19, Chapter 20, Chapter 21, Chapter 22, Chapter 23, Section 3.1.8, Section 3.1.9</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>SAFETY PRECAUTIONS, ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1, Section 1.1, 1.2, 2.1.3, 2.1.5, 2.1.7, 2.3, 3.1.4, 3.1.5, 3.1.6, 3.1.7, 4.1.7, 4.4.1, 14.1.3, 14.2, 15.3.3, 21.3, 21.4.4, 21.5</p>
Oct., 2005	SH(NA)-080532ENG-C	<p>Compatible with GT Designer2 Version2.18U</p> <p>Addition</p> <p>Chapter 10, Chapter 20, Chapter 21, Chapter 22, Chapter 23, Chapter 26, Chapter 27, Section 14.1.9, Section 18.1.2, Section 24.4.3</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>SAFETY PRECAUTIONS, ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1 to 9, Chapter 11 to 19, Chapter 24, Chapter 25 Chapter 28 to 30</p> <p>Volume separated</p> <p>Separated the manual as the following. SH(NA)-080532ENG-C 1/2:Chapter 1 to 18 SH(NA)-080532ENG-C 2/2:Chapter 19 to 30</p>

(Continued to next page)

Print Date	* Manual Number	Revision
Jan., 2006	SH(NA)-080532ENG-D	<p>Compatible with GT Designer2 Version2.27D</p> <p>Addition</p> <p>Chapter 26, Section 29.2.2, Section 29.4.5, Section 29.5.1, Section 29.5.3</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1, Section 2.2, 3.3, 4.3, 5.2, 6.2, 7.2, 8.2, 9.1.2, 9.2, 9.3, 10.3, 11.3, 12.3, 13.3, 14.3, 15.3, 16.3, 17.3, 18.3, 19.6, 20.3, 21.3, 22.3, 23.3, 24.3, 25.1, 25.2, 25.4, 27.1, 27.2, 27.3, 27.4, 28.3, 29.3, 30.3, 31.2</p>
Apr., 2006	SH(NA)-080532ENG-E	<p>Compatible with GT Designer2 Version2.32J</p> <p>Addition</p> <p>Chapter 5, Section 7.1.2, Section 7.1.3, Section 7.3.2, Section 7.3.3, Section 18.1.3, Chapter 14, Chapter 23, Chapter 29, Chapter 36</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1, Section 2.2, 3.3, 4.3, 6.2, 7.2, 8.2, 9.2, 10.3, 11.3, 12.3, 13.3, 15.3, 16.3, 17.3, 18.3, 19.3, 20.3, 21.6, 22.3, 24.3, 25.3, 26.3, 27.3, 28.2, 30.2, 31.1.3, 31.2.2, 31.3.2, 31.4.2, 32.3, 34.3, 35.2</p>
Nov., 2006	SH(NA)-080532ENG-F	<p>Compatible with GT Designer2 Version2.43V</p> <p>Addition</p> <p>Chapter 16, Chapter 17, Chapter 25, Chapter 28, Section 19.2, Section 20.2 Chapter 40</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1 to 6, 9, 10, 13, 23, 30, 35, 37, 40</p> <p>Volume separated</p> <p>Separated the manual as the following.</p> <p>SH(NA)-080532ENG-F 1/3:Chapter 1 to 9</p> <p>SH(NA)-080532ENG-F 2/3:Chapter 10 to 22</p> <p>SH(NA)-080532ENG-F 3/3:Chapter 23 to 40</p>

(Continued to next page)

Print Date	* Manual Number	Revision
Feb., 2007	SH(NA)-080532ENG-G	Compatible with GT Designer2 Version2.47Z <div style="border: 1px solid black; padding: 2px;">Partial correction</div> HOW TO READ THIS MANUAL, Chapter 1, 10, 19, 20, 23, 39, 40
May., 2007	SH(NA)-080532ENG-H	Compatible with GT Designer2 Version2.58L <div style="border: 1px solid black; padding: 2px;">Addition</div> Section 18.1.10, 21.1.3, 21.2, 30.1.3 Chapter 26, 33, 34 <div style="border: 1px solid black; padding: 2px;">Section numbers revised</div> Revised throughout the manual due to addition of the new connection types and functions. <div style="border: 1px solid black; padding: 2px;">Partial correction</div> HOW TO READ THIS MANUAL, Chapter 3, 4, 10, 23, 40, 41

Japanese Manual Version SH-080511-M

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2004 MITSUBISHI ELECTRIC CORPORATION

INTRODUCTION

Thank you for choosing Mitsubishi Graphic Operation Terminal (Mitsubishi GOT).

Read this manual and make sure you understand the functions and performance of the GOT thoroughly in advance to ensure correct use.

CONTENTS

SAFETY PRECAUTIONS	A - 1
REVISIONS.....	A - 8
INTRODUCTION.....	A - 11
CONTENTS	A - 11
ABOUT MANUALS	A - 34
ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL.....	A - 35

Connection Manual 1/3

1. OVERVIEW 1 - 1 to 1 - 22

1.1 Connections and Functions Supported by GOT	1 - 4
1.2 Overall System Configurations	1 - 7

MITSUBISHI PLC CONNECTIONS

2. BUS CONNECTION 2 - 1 to 2 - 54

2.1 System Configuration	2 - 2
2.1.1 Connecting to QCPU (Q mode).....	2 - 3
2.1.2 Connecting to QnACPU or AnCPU type.....	2 - 5
2.1.3 Connecting to QnASCPU or AnSCPU type.....	2 - 8
2.1.4 Connecting to A0J2HCPU	2 - 14
2.1.5 Connecting to motion controller CPU (Q Series).....	2 - 15
2.1.6 Connecting to motion controller CPU (A273UCPU, A273UHCPU(-S3), A373UCPU(-S3)).....	2 - 16
2.1.7 Connecting to motion controller CPU (A171SHCPUN, A172SHCPUN, A173UHCPU(-S1)).....	2 - 20
2.2 Preparatory Procedures for Monitoring	2 - 26
2.2.1 Installing OS onto GOT	2 - 27
2.2.2 Checking OS installation on GOT.....	2 - 28
2.2.3 Setting communication interface (Communication settings).....	2 - 29
2.2.4 Downloading project data	2 - 36
2.2.5 Attaching communication unit and connecting cable.....	2 - 37
2.2.6 Verifying GOT recognizes controllers	2 - 39
2.2.7 Checking for normal monitoring.....	2 - 42

2.3	Precautions	2 - 44
2.4	Communication Check Sheet	2 - 51
2.5	List of Functions Added by Version Upgrade	2 - 53

3. DIRECT CONNECTION TO CPU 3 - 1 to 3 - 54

3.1	System Configuration	3 - 2
3.1.1	Connecting to QCPU	3 - 2
3.1.2	Connecting to QnACPU	3 - 5
3.1.3	Connecting to ACPU	3 - 7
3.1.4	Connecting to FXCPU (FX0, FX0S, FX0N, FX1, FX2, FX2C Series).....	3 - 9
3.1.5	Connecting to FXCPU (FX1S, FX1N, FX2N Series).....	3 - 12
3.1.6	Connecting to FXCPU (FX1NC, FX2NC Series).....	3 - 17
3.1.7	Connecting to FXCPU (FX3U, FX3UC Series)	3 - 20
3.1.8	Connecting to motion controller CPU (Q Series).....	3 - 25
3.1.9	Connecting to motion controller CPU (A Series)	3 - 25
3.1.10	Connecting to remote I/O station in MELSECNET/H network system.....	3 - 25
3.2	Connection Cable	3 - 26
3.2.1	RS-232 cable	3 - 27
3.2.2	RS-422 cable	3 - 30
3.3	Preparatory Procedure for Monitoring	3 - 32
3.3.1	Installing OS onto GOT.....	3 - 33
3.3.2	Checking OS installation on GOT.....	3 - 34
3.3.3	Setting communication interface (Communication settings).....	3 - 35
3.3.4	Downloading project data	3 - 40
3.3.5	Attaching communication unit and connecting cable.....	3 - 41
3.3.6	Verifying GOT recognizes controllers.....	3 - 46
3.3.7	Checking for normal monitoring.....	3 - 49
3.4	Precautions	3 - 52
3.5	List of Functions Added by Version Upgrade	3 - 53

4. COMPUTER LINK CONNECTION 4 - 1 to 4 - 60

4.1	System Configuration	4 - 2
4.1.1	Connecting to QCPU (Q mode).....	4 - 2
4.1.2	Connecting to QCPU (A mode)	4 - 6
4.1.3	Connecting to QnACPU type.....	4 - 8
4.1.4	Connecting to QnASCPU type.....	4 - 12
4.1.5	Connecting to AnCPU type.....	4 - 15
4.1.6	Connecting to AnSCPU type	4 - 17
4.1.7	Connecting to motion controller CPU (Q Series).....	4 - 19
4.1.8	Connecting to motion controller CPU (A Series)	4 - 19
4.1.9	Connecting to remote I/O station in MELSECNET/H network system.....	4 - 19
4.2	Connection Cable	4 - 20
4.2.1	RS-232 cable	4 - 21
4.2.2	RS-422 cable	4 - 25
4.3	Preparatory Procedures for Monitoring	4 - 27

4.3.1	Installing OS onto GOT	4 - 28
4.3.2	Checking OS installation on GOT	4 - 29
4.3.3	Setting communication interface (Communication settings).....	4 - 30
4.3.4	Downloading project data	4 - 35
4.3.5	Attaching communication unit and connecting cable.....	4 - 36
4.3.6	Verifying GOT recognizes controllers	4 - 41
4.3.7	Checking for normal monitoring.....	4 - 43
4.4	PLC Side Setting	4 - 46
4.4.1	Connecting serial communication module (Q Series)	4 - 47
4.4.2	Connecting serial communication module (QnA Series)	4 - 50
4.4.3	Connecting computer link module	4 - 53
4.5	Precautions	4 - 59
4.6	List of Functions Added by Version Upgrade	4 - 60

5. MELSECNET/H CONNECTION (PLC TO PLC NETWORK) 5 - 1 to 5 - 32

5.1	System Configuration	5 - 2
5.1.1	Connecting to optical loop system.....	5 - 3
5.1.2	Connecting to the coaxial bus system	5 - 5
5.2	Preparatory Procedures for Monitoring	5 - 7
5.2.1	Installing OS onto GOT	5 - 8
5.2.2	Checking OS installation on GOT.....	5 - 9
5.2.3	Setting communication interface (Communication settings).....	5 - 10
5.2.4	Downloading project data	5 - 14
5.2.5	Attaching communication unit and connecting cable.....	5 - 15
5.2.6	Verifying GOT recognizes controllers	5 - 19
5.2.7	Checking for normal monitoring.....	5 - 21
5.3	PLC Side Setting	5 - 25
5.4	Precautions	5 - 31
5.5	List of Functions Added by Version Upgrade	5 - 32

6. MELSECNET/10 CONNECTION (PLC TO PLC NETWORK) 6 - 1 to 6 - 50

6.1	System Configuration	6 - 2
6.1.1	Connecting to optical loop system.....	6 - 3
6.1.2	Connecting to the coaxial bus system	6 - 5
6.2	Preparatory Procedures for Monitoring	6 - 7
6.2.1	Installing OS onto GOT	6 - 8
6.2.2	Checking OS installation on GOT.....	6 - 9
6.2.3	Setting communication interface (Communication settings).....	6 - 10
6.2.4	Downloading project data	6 - 16
6.2.5	Attaching communication unit and connecting cable.....	6 - 17
6.2.6	Verifying GOT recognizes controllers	6 - 21
6.2.7	Checking for normal monitoring.....	6 - 23
6.3	PLC Side Setting	6 - 27
6.3.1	Connecting to MELSECNET/H network module	6 - 27
6.3.2	Connecting to MELSECNET/10 network module (QnA Series)	6 - 33

6.3.3	Connecting to MELSECNET/10 network module (A Series)	6 - 41
6.4	Precautions	6 - 49
6.5	List of Functions Added by Version Upgrade	6 - 50

7. CC-Link CONNECTION (INTELLIGENT DEVICE STATION) 7 - 1 to 7 - 60

7.1	System Configuration	7 - 2
7.1.1	Connecting with CC-Link Ver.1 compatible	7 - 2
7.1.2	Connecting with CC-Link Ver.2 compatible	7 - 4
7.1.3	Connecting with CC-Link Ver.1/Ver.2 compatibles mixed	7 - 5
7.2	Preparatory Procedures for Monitoring	7 - 7
7.2.1	Installing OS onto GOT	7 - 8
7.2.2	Checking OS installation on GOT	7 - 9
7.2.3	Setting communication interface (Communication settings)	7 - 10
7.2.4	Downloading project data	7 - 16
7.2.5	Attaching communication unit and connecting cable	7 - 17
7.2.6	Verifying GOT recognizes controllers	7 - 20
7.2.7	Checking for normal monitoring	7 - 22
7.3	PLC Side Setting	7 - 25
7.3.1	Connecting to CC-Link module (Q Series) with Ver.1 compatible	7 - 26
7.3.2	Connecting to CC-Link module (Q Series) with Ver.2 compatible	7 - 31
7.3.3	Connecting to CC-Link module (Q Series) with Ver.1/Ver.1 compatibles mixed	7 - 36
7.3.4	Connecting to CC-Link module (QnA Series)	7 - 41
7.3.5	Connecting to CC-Link module (A Series)	7 - 49
7.4	Precautions	7 - 58
7.5	List of Functions Added by Version Upgrade	7 - 59

8. CC-Link CONNECTION (Via G4) 8 - 1 to 8 - 24

8.1	System Configuration	8 - 2
8.1.1	Connecting to QCPU (Q mode)	8 - 2
8.1.2	Connecting to motion controller CPU (Q Series)	8 - 4
8.2	Preparatory Procedures for Monitoring	8 - 5
8.2.1	Installing OS onto GOT	8 - 6
8.2.2	Checking OS installation on GOT	8 - 7
8.2.3	Setting communication interface (Communication settings)	8 - 8
8.2.4	Downloading project data	8 - 10
8.2.5	Attaching communication unit and connecting cable	8 - 11
8.2.6	Verifying GOT recognizes controllers	8 - 14
8.2.7	Checking for normal monitoring	8 - 16
8.3	PLC Side Settings	8 - 18
8.4	List of Functions Added by Version Upgrade	8 - 23

9. ETHERNET CONNECTION 9 - 1 to 9 - 40

9.1	System Configuration	9 - 2
-----	----------------------------	-------

9.2	Preparatory Procedures for Monitoring	9 - 4
9.2.1	Installing OS onto GOT	9 - 5
9.2.2	Checking OS installation on GOT	9 - 6
9.2.3	Setting communication interface (Communication settings)	9 - 7
9.2.4	Downloading project data	9 - 12
9.2.5	Attaching communication unit and connecting cable	9 - 13
9.2.6	Verifying GOT recognizes controllers	9 - 14
9.2.7	Checking for normal monitoring	9 - 16
9.3	PLC Side Setting	9 - 20
9.3.1	Connecting to Ethernet module (Q Series)	9 - 20
9.3.2	Connecting to Ethernet module (QnA Series)	9 - 26
9.3.3	Connecting to Ethernet module (A Series)	9 - 32
9.4	Precautions	9 - 38
9.5	List of Functions Added by Version Upgrade	9 - 39

Connection Manual 2/3

THIRD PARTY PLC CONNECTIONS

10. CONNECTION TO OMRON PLC 10 - 1 to 10 - 66

10.1	System Configuration	10 - 2
10.1.1	When connecting to CPM1, CPM1A, CPM2A or CPM2C	10 - 2
10.1.2	Connecting to CQM1, CQM1H, CJ1 or CP1	10 - 6
10.1.3	Connecting to C200HS, C200H, C200H or CS1	10 - 12
10.1.4	Connecting to C1000H/C2000H, CV500/CV1000/CV2000, CVM1	10 - 18
10.2	Connection Cable	10 - 22
10.2.1	RS-232 cable	10 - 23
10.2.2	RS-422 cable	10 - 26
10.3	Preparatory Procedures for Monitoring	10 - 31
10.3.1	Installing OS onto GOT	10 - 32
10.3.2	Checking OS installation on GOT	10 - 33
10.3.3	Setting communication interface (Communication settings)	10 - 34
10.3.4	Downloading project data	10 - 37
10.3.5	Attaching communication unit and connecting cable	10 - 38
10.3.6	Verifying GOT recognizes controllers	10 - 43
10.3.7	Checking for normal monitoring	10 - 45
10.4	PLC Side Setting	10 - 48
10.4.1	Connecting CPM2A, CQM1, CQM1H, C200H or RS-232C adapter	10 - 49
10.4.2	Connecting CJ1, CS1 or CP1	10 - 50
10.4.3	Connecting CV500/CV1000/CV2000 or CVM1	10 - 53
10.4.4	Connecting connection cable	10 - 55
10.4.5	Connecting rack type host link unit	10 - 56
10.4.6	Connecting serial communication unit	10 - 61
10.4.7	Connecting communication board, serial communication board (CQM1-SCB41)	10 - 62
10.4.8	Connecting serial communication board (CS1W-SCB21, CS1W-SCB41)	10 - 63
10.4.9	Connecting RS-422A/485 Option board	10 - 65
10.5	List of Functions Added by Version Upgrade	10 - 66

11. CONNECTON TO KEYENCE PLC

11 - 1 to 11 - 36

11.1	System configuration	11 - 2
11.1.1	Connecting to KV-1000.....	11 - 3
11.1.2	Connecting to KV-700.....	11 - 6
11.2	Connection cable	11 - 9
11.2.1	RS-232 cable.....	11 - 10
11.2.2	RS-422 cable.....	11 - 13
11.2.3	RS-485 cable.....	11 - 15
11.3	Preparatory Procedures for Monitoring	11 - 17
11.3.1	Installing OS onto GOT.....	11 - 18
11.3.2	Checking OS installation on GOT.....	11 - 18
11.3.3	Setting communication interface (Communication settings).....	11 - 20
11.3.4	Downloading project data.....	11 - 23
11.3.5	Attaching communication unit and connecting cable.....	11 - 24
11.3.6	Verifying GOT recognizes controllers.....	11 - 29
11.3.7	Checking for normal monitoring.....	11 - 31
11.4	PLC Side Setting	11 - 33
11.4.1	Connecting KV-1000.....	11 - 33
11.4.2	Connecting KV-700.....	11 - 33
11.4.3	Connecting multi-communication unit (KV-L20R, KV-L20).....	11 - 34
11.5	List of Functions Added by Version Upgrade	11 - 36

12. CONNECTION TO SHARP PLC

12 - 1 to 12 - 42

12.1	System Configuration	12 - 2
12.1.1	Connecting to JW-21CU or JW-22CU.....	12 - 2
12.1.2	Connecting to JW-31CUH, JW-32CUH or JW-33CUH.....	12 - 5
12.1.3	Connecting to JW-50CUH.....	12 - 8
12.1.4	Connecting to JW-70CUH, JW-100CUH or JW-100CU.....	12 - 10
12.1.5	Connecting to Z-512J.....	12 - 13
12.2	Connection Cable	12 - 15
12.2.1	RS-232 cable.....	12 - 16
12.2.2	RS-422 cable.....	12 - 18
12.3	Preparatory Procedures for Monitoring	12 - 21
12.3.1	Installing OS onto GOT.....	12 - 22
12.3.2	Checking OS installation on GOT.....	12 - 23
12.3.3	Setting communication interface (Communication settings).....	12 - 24
12.3.4	Downloading project data.....	12 - 26
12.3.5	Attaching communication unit and connecting cable.....	12 - 27
12.3.6	Verifying GOT recognizes controllers.....	12 - 31
12.3.7	Checking for normal monitoring.....	12 - 33
12.4	PLC Side Setting	12 - 35
12.4.1	Connecting to JW-22CU, JW-70CUH, JW-100CUH or JW-100CU.....	12 - 36
12.4.2	Connecting to JW-32CUH, JW-33CUH or Z-512J.....	12 - 37
12.4.3	Connecting to the link unit (JW-31CM).....	12 - 38
12.4.4	Connecting to the link unit (JW-10CM or ZW-10CM).....	12 - 40

13. CONNECTION TO JTEKT PLC**13 - 1 to 13 - 44**

13.1	System Configuration	13 - 2
13.1.1	Connecting to PC3JG or PC3JG-P	13 - 2
13.1.2	Connecting to PC3J or PC3JL.....	13 - 5
13.1.3	Connecting to PC2J.....	13 - 9
13.1.4	Connecting to PC2JC, PC2J16P or PC2J16PR.....	13 - 12
13.2	Connection Cable	13 - 15
13.2.1	RS-232 cable.....	13 - 15
13.2.2	RS-422 cable.....	13 - 17
13.3	Preparatory Procedures for Monitoring	13 - 21
13.3.1	Installing OS onto GOT	13 - 22
13.3.2	Checking OS installation on GOT.....	13 - 23
13.3.3	Setting communication interface (Communication settings).....	13 - 24
13.3.4	Downloading project data	13 - 27
13.3.5	Attaching communication unit and connecting cable.....	13 - 28
13.3.6	Verifying GOT recognizes controllers.....	13 - 32
13.3.7	Checking for normal monitoring.....	13 - 34
13.4	PLC Side Setting	13 - 36
13.4.1	Connecting to PC3JG, PC3JG-P, PC3J, PC3JL or PC2J	13 - 36
13.4.2	Connecting to PC2JC.....	13 - 37
13.4.3	Connecting to PC2J16P or PC2J16PR	13 - 38
13.4.4	RS-232/RS-422 interface converter setting.....	13 - 39
13.4.5	Link unit setting.....	13 - 40
13.4.6	Station NO. settings.....	13 - 41
13.5	Precautions	13 - 42
13.5.1	Station No. settings of the PLC side.....	13 - 42
13.5.2	GOT clock function	13 - 42
13.5.3	System configuration	13 - 42
13.5.4	System alarm.....	13 - 42
13.5.5	Version of PC3J.....	13 - 42
13.5.6	Device range	13 - 42
13.6	List of Functions Added by Version Upgrade	13 - 43

14. CONNECTION TO TOSHIBA PLC**14 - 1 to 14 - 28**

14.1	System Configuration	14 - 2
14.1.1	Connecting to T2 (PU224), T2E, T2N, T3 or T3H	14 - 2
14.1.2	Connecting to model 2000(S2), model 3000 (S3)	14 - 5
14.2	Connection Cable	14 - 7
14.2.1	RS-232 cable.....	14 - 8
14.2.2	RS-422 cable.....	14 - 10
14.3	Preparatory Procedures for Monitoring	14 - 12
14.3.1	Installing OS onto GOT	14 - 13
14.3.2	Checking OS installation on GOT.....	14 - 14
14.3.3	Setting communication interface (Communication settings).....	14 - 15

14.3.4	Downloading project data	14 - 17
14.3.5	Attaching communication unit and connecting cable	14 - 18
14.3.6	Verifying GOT recognizes controllers	14 - 22
14.3.7	Checking for normal monitoring	14 - 24
14.4	PLC Side Setting	14 - 26
14.4.1	Connecting to T2 (PU224), T2E or T2N	14 - 26
14.4.2	Connecting to T3 or T3H	14 - 27
14.4.3	Connecting to model 3000 (S2/S3).....	14 - 27
14.5	List of Functions Added by Version Upgrade	14 - 28

15. CONNECTION TO HITACHI IES PLC

15 - 1 to 15 - 28

15.1	System Configuration	15 - 2
15.1.1	Connecting to large-sized H series	15 - 2
15.1.2	Connecting to H-200 to 252 series, H series board type or EH-150 series	15 - 5
15.2	Connection Cable	15 - 6
15.2.1	RS-232 cable	15 - 7
15.2.2	RS-422 cable	15 - 9
15.3	Preparatory Procedures for Monitoring	15 - 11
15.3.1	Installing OS onto GOT	15 - 12
15.3.2	Checking OS installation on GOT	15 - 13
15.3.3	Setting communication interface (Communication settings).....	15 - 14
15.3.4	Downloading project data	15 - 17
15.3.5	Attaching communication unit and connecting cable	15 - 18
15.3.6	Verifying GOT recognizes controllers	15 - 22
15.3.7	Checking for normal monitoring	15 - 24
15.4	PLC Side Setting	15 - 26
15.5	List of Functions Added by Version Upgrade	15 - 28

16. CONNECTION TO HITACHI PLC

16 - 1 to 16 - 28

16.1	System Configuration	16 - 2
16.1.1	Connecting to S10V Series.....	16 - 2
16.1.2	Connecting to S10mini Series	16 - 5
16.2	Connection Cable	16 - 7
16.2.1	RS-232 cable	16 - 8
16.2.2	RS-422 cable	16 - 10
16.3	Preparatory Procedures for Monitoring	16 - 11
16.3.1	Installing OS onto GOT	16 - 12
16.3.2	Checking OS installation on GOT	16 - 13
16.3.3	Setting communication interface (Communication settings).....	16 - 14
16.3.4	Downloading project data	16 - 17
16.3.5	Attaching communication unit and connecting cable	16 - 18
16.3.6	Verifying GOT recognizes controllers	16 - 22
16.3.7	Checking for normal monitoring	16 - 24
16.4	PLC Side Setting	16 - 26
16.4.1	Connecting to communication module.....	16 - 27

17. CONNECTION TO FUJI FA PLC **17 - 1 to 17 - 42**

17.1	System Configuration	17 - 2
17.1.1	Connecting to MICREX-F55	17 - 2
17.1.2	Connecting to MICREX-F70	17 - 4
17.1.3	Connecting to MICREX-F120S/140S/150S	17 - 7
17.2	Connection Cable	17 - 10
17.2.1	RS-232 cable	17 - 11
17.2.2	RS-485 cable	17 - 13
17.3	Preparatory Procedures for Monitoring	17 - 15
17.3.1	Installing OS onto GOT	17 - 16
17.3.2	Checking OS installation on GOT	17 - 17
17.3.3	Setting communication interface (Communication settings)	17 - 18
17.3.4	Downloading project data	17 - 21
17.3.5	Attaching communication unit and connecting cable	17 - 22
17.3.6	Verifying GOT recognizes controllers	17 - 26
17.3.7	Checking for normal monitoring	17 - 28
17.4	PLC Side Setting	17 - 30
17.4.1	Connecting to NV1L-RS2, NC1L-RS2	17 - 31
17.4.2	Connecting to NC1L-RS4	17 - 33
17.4.3	Connecting to FFU120B	17 - 35
17.4.4	RS-232/RS-422 interface converter setting	17 - 37
17.4.5	Station NO. settings	17 - 39
17.5	Precautions	17 - 40
17.5.1	Station No. settings of the PLC side	17 - 40
17.5.2	GOT clock function	17 - 40
17.6	List of Functions Added by Version Upgrade	17 - 41

18. CONNECTION TO MATSUSHITA PLC **18 - 1 to 18 - 42**

18.1	System Configuration	18 - 2
18.1.1	Connecting to FP0-C16CT or FP0-C32CT	18 - 2
18.1.2	Connecting to FP1-C24C or FP1-C40C	18 - 4
18.1.3	Connecting to FP2 or FP2SH	18 - 6
18.1.4	Connecting to FP3	18 - 8
18.1.5	Connecting to FP5	18 - 10
18.1.6	Connecting to FP10 (S)	18 - 12
18.1.7	Connecting to FP10SH	18 - 14
18.1.8	Connecting to FP-M (C20TC) or FP-M (C32TC)	18 - 16
18.1.9	Connecting to FP SIGMA	18 - 17
18.1.10	Connecting to FP-X	18 - 19
18.2	Connection Cable	18 - 22
18.2.1	RS-232 Cable	18 - 22
18.2.2	RS-422 Cable	18 - 25
18.3	Preparatory Procedures for Monitoring	18 - 27
18.3.1	Installing OS onto GOT	18 - 28

18.3.2	Checking OS installation on GOT	18 - 29
18.3.3	Setting communication interface (Communication settings).....	18 - 30
18.3.4	Downloading project data	18 - 32
18.3.5	Attaching communication unit and connecting cable.....	18 - 33
18.3.6	Verifying GOT recognizes controllers	18 - 35
18.3.7	Checking for normal monitoring.....	18 - 37
18.4	PLC Side Setting	18 - 39
18.5	List of Functions Added by Version Upgrade	18 - 41

19. CONNECTION TO YASKAWA PLC 19 - 1 to 19 - 60

19.1	Serial Connection	19 - 2
19.1.1	System configuration(GL120 or GL130).....	19 - 2
19.1.2	System configuration(GL60S, GL60H or GL70H).....	19 - 4
19.1.3	System configuration(MP-920/930, CP-9300MS/9200(H) or PROGIC-8).....	19 - 6
19.1.4	System configuration(MP-940)	19 - 9
19.1.5	System configuration(CP-9200SH).....	19 - 11
19.1.6	System configuration(MP2200 or MP2300).....	19 - 13
19.1.7	Connection Cable	19 - 15
19.1.8	Preparatory Procedure for Monitoring	19 - 22
19.1.9	Installing OS onto GOT.....	19 - 23
19.1.10	Checking OS installation on GOT.....	19 - 24
19.1.11	Setting communication interface (Communication settings).....	19 - 25
19.1.12	Downloading project data	19 - 28
19.1.13	Attaching communication unit and connecting cable.....	19 - 29
19.1.14	Verifying GOT recognizes controllers	19 - 33
19.1.15	Checking for normal monitoring.....	19 - 35
19.1.16	PLC Side Setting	19 - 36
19.2	Ethernet Connection	19 - 37
19.2.1	System configuration(MP-920)	19 - 37
19.2.2	System configuration(MP2200 or MP2300).....	19 - 39
19.2.3	Preparatory procedures for monitoring	19 - 40
19.2.4	Installing OS onto GOT.....	19 - 41
19.2.5	Checking OS installation on GOT.....	19 - 42
19.2.6	Setting communication interface (Communication settings).....	19 - 43
19.2.7	Downloading project data	19 - 48
19.2.8	Attaching communication unit and connecting cable.....	19 - 49
19.2.9	Verifying GOT recognizes controller.....	19 - 50
19.2.10	Checking for normal monitoring.....	19 - 52
19.2.11	PLC side setting.....	19 - 56
19.2.12	Precautions.....	19 - 59
19.3	List of Functions Added by Version Upgrade	19 - 60

20. CONNECTION TO YOKOGAWA PLC 20 - 1 to 20 - 62

20.1	Serial Connection	20 - 2
20.1.1	System configuration(FA-M3).....	20 - 2
20.1.2	System configuration(FA500)	20 - 5
20.1.3	System configuration(STARDOM).....	20 - 7

20.1.4	Connection Cable	20 - 8
20.1.5	Preparatory Procedure for Monitoring	20 - 14
20.1.6	Installing OS onto GOT	20 - 15
20.1.7	Checking OS installation on GOT	20 - 16
20.1.8	Setting communication interface (Communication settings).....	20 - 17
20.1.9	Downloading project data	20 - 20
20.1.10	Attaching communication unit and connecting cable.....	20 - 21
20.1.11	Verifying GOT recognizes controllers	20 - 25
20.1.12	Checking for normal monitoring.....	20 - 27
20.1.13	PLC side setting	20 - 28
20.1.14	Connecting CPU port/D-sub 9-pin conversion cable	20 - 29
20.1.15	Connecting PC link module (F3LC01-1N, F3LC11-1N, F3LC11-2N).....	20 - 30
20.1.16	Connecting PC link module (F3LC11-1F, F3LC12-1F)	20 - 32
20.1.17	Connecting PC link module (LC01-0N, LC02-0N).....	20 - 34
20.1.18	Connecting to STARDOM	20 - 36
20.1.19	Precautions.....	20 - 38
20.2	Ethernet Connection	20 - 39
20.2.1	System configuration(FA-M3).....	20 - 39
20.2.2	Preparatory procedures for monitoring	20 - 41
20.2.3	Installing OS onto GOT	20 - 42
20.2.4	Checking OS installation on GOT.....	20 - 43
20.2.5	Setting communication interface (Communication settings).....	20 - 44
20.2.6	Downloading project data	20 - 49
20.2.7	Attaching communication unit and connecting cable.....	20 - 50
20.2.8	Verifying GOT recognizes controllers	20 - 51
20.2.9	Checking for normal monitoring.....	20 - 53
20.2.10	PLC side setting	20 - 57
20.2.11	Connecting to Ethernet Interface Module (F3LE01-5T, F3LE11-0T).....	20 - 58
20.2.12	Connecting to Ethernet Interface Module (F3LE12-0T).....	20 - 59
20.2.13	Precautions.....	20 - 60
20.3	List of Functions Added by Version Upgrade	20 - 61

21. CONNECTION TO ALLEN-BRADLEY PLC

21 - 1 to 21 - 50

21.1	Serial Connection	21 - 2
21.1.1	System Configuration (SLC500 Series).....	21 - 2
21.1.2	System Configuration (MicroLogix1000/1200/1500 Series)	21 - 4
21.1.3	System Configuration (Control/Compact/FlexLogix Series)	21 - 6
21.1.4	Connection Cable	21 - 7
21.1.5	Preparatory Procedures for Monitoring	21 - 11
21.1.6	Installing OS onto the GOT	21 - 12
21.1.7	Checking OS installation on GOT.....	21 - 13
21.1.8	Setting communication interface (Communication settings).....	21 - 14
21.1.9	Downloading project data	21 - 20
21.1.10	Attaching communication unit and connecting cable.....	21 - 21
21.1.11	Verifying GOT recognizes controllers	21 - 24
21.1.12	Checking for normal monitoring.....	21 - 27
21.1.13	PLC Side Setting	21 - 30
21.2	Ethernet Connection	21 - 32
21.2.1	System configuration when connecting to ControlLogix, CompactLogix, FlexLogix.....	21 - 32

21.2.2	Preparatory Procedures for Monitoring.....	21 - 34
21.2.3	Installing OS onto GOT.....	21 - 35
21.2.4	Checking OS installation on GOT.....	21 - 36
21.2.5	Setting communication interface (Communication settings).....	21 - 37
21.2.6	Downloading project data.....	21 - 40
21.2.7	Attaching communication unit and connecting cable.....	21 - 41
21.2.8	Verifying GOT recognizes connected equipment.....	21 - 42
21.2.9	Checking for normal monitoring.....	21 - 44
21.2.10	PLC side setting.....	21 - 48
21.2.11	Precautions.....	21 - 48
21.3	List of Functions Added by Version Upgrade.....	21 - 49

22. CONNECTION TO SIEMENS PLC

22 - 1 to 22 - 26

22.1	System Configuration.....	22 - 2
22.1.1	Connecting to a SIMATIC S7-300/400 Series.....	22 - 3
22.1.2	Connecting to a SIMATIC S7-200 Series.....	22 - 4
22.2	Connection Cable.....	22 - 5
22.3	Preparatory Procedures for Monitoring.....	22 - 7
22.3.1	Installing OS onto GOT.....	22 - 8
22.3.2	Checking OS installation on GOT.....	22 - 9
22.3.3	Setting communication interface (Communication settings).....	22 - 10
22.3.4	Downloading project data.....	22 - 14
22.3.5	Attaching communication unit and connecting cable.....	22 - 15
22.3.6	Verifying GOT recognizes controllers.....	22 - 18
22.3.7	Checking for normal monitoring.....	22 - 21
22.4	PLC Side Setting.....	22 - 23
22.4.1	Connecting to HMI Adapter.....	22 - 23
22.4.2	Connecting to SIMATIC S7-200.....	22 - 24
22.5	Precautions.....	22 - 25
22.6	List of Functions Added by Version Upgrade.....	22 - 26

Connection Manual 3/3

MICROCOMPUTER CONNECTION

23. MICROCOMPUTER CONNECTION

23 - 1 to 23 - 100

23.1	Microcomputer Connection.....	23 - 2
23.2	System Configuration.....	23 - 4
23.3	Connection Cable.....	23 - 6
23.3.1	RS-232 cable.....	23 - 6
23.3.2	RS-422 cable.....	23 - 9
23.4	Device Data Area.....	23 - 11
23.4.1	D devices.....	23 - 13
23.4.2	R devices.....	23 - 17
23.4.3	L devices.....	23 - 17

23.4.4	M devices	23 - 19
23.4.5	SD devices	23 - 20
23.4.6	SM devices	23 - 23
23.5	Message Formats	23 - 26
23.5.1	Data format type and application	23 - 26
23.5.2	List of commands	23 - 28
23.5.3	Formats 1, 2 (GOT-A900 series microcomputer connection)	23 - 31
23.5.4	Formats 3 to 6 (A compatible 1C frame)	23 - 44
23.5.5	Formats 7 to 10 (QnA compatible 3C/4C frame)	23 - 49
23.5.6	Formats 11 to 13 (Digital Electronics Corporation's memory link method)	23 - 57
23.5.7	Formats 14, 15 (GOT-F900 series microcomputer connection)	23 - 63
23.6	Preparatory Procedures for Monitoring	23 - 78
23.6.1	Installing OS onto GOT	23 - 79
23.6.2	Checking OS installation on GOT	23 - 80
23.6.3	Setting communication interface (Communication settings)	23 - 81
23.6.4	Downloading project data	23 - 84
23.6.5	Attaching communication unit and connecting cable	23 - 85
23.6.6	Verifying GOT recognizes controllers	23 - 90
23.6.7	Checking for normal monitoring	23 - 92
23.7	System Configuration Examples	23 - 94
23.8	Precautions	23 - 98
23.9	List of Functions Added by Version Upgrade	23 - 99

24. CONNECTION TO OMRON TEMPERATURE CONTROLLER

24 - 1 to 24 - 34

24.1	System configuration	24 - 2
24.1.1	Connecting E5AN, E5EN	24 - 2
24.1.2	Connecting to E5CN, E5GN	24 - 4
24.1.3	Connecting to E5ZN	24 - 6
24.2	Connection Cable	24 - 8
24.2.1	RS-232 cable	24 - 9
24.2.2	RS-485 cable	24 - 11
24.3	Preparatory Procedures for Monitoring	24 - 14
24.3.1	Installing OS onto GOT	24 - 15
24.3.2	Checking OS installation on GOT	24 - 16
24.3.3	Setting communication interface (Communication settings)	24 - 17
24.3.4	Downloading project data	24 - 20
24.3.5	Attaching communication unit and connecting cable	24 - 21
24.3.6	Verifying GOT recognizes controllers	24 - 24
24.3.7	Checking for normal monitoring	24 - 26
24.4	Temperature Controller Side Setting	24 - 28
24.4.1	Connecting E5AN, E5EN, E5CN, E5GN	24 - 28
24.4.2	Connecting E5ZN	24 - 28
24.4.3	Connecting to interface converter (K3SC-10)	24 - 29

24.4.4	Station NO. settings.....	24 - 31
24.5	Precautions	24 - 32
24.6	List of Functions Added by Version Upgrade	24 - 33

25. CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER

25 - 1 to 25 - 28

25.1	System Configuration	25 - 2
25.1.1	Connecting to ACS-13A, JC, JCM-33A, JIR-301-M Series	25 - 2
25.1.2	Connecting to FCD-100, FCR-100, FCR-23A, FIR, PC-900 Series	25 - 4
25.1.3	Connecting to DCL-33A Series.....	25 - 5
25.2	Connection Cable	25 - 6
25.2.1	RS-232 cable	25 - 7
25.2.2	RS-485 cable	25 - 9
25.3	Preparatory Procedures for Monitoring	25 - 10
25.3.1	Installing OS onto GOT.....	25 - 11
25.3.2	Checking OS installation on GOT.....	25 - 12
25.3.3	Setting communication interface (Communication settings).....	25 - 13
25.3.4	Downloading project data	25 - 16
25.3.5	Attaching communication unit and connecting cable.....	25 - 17
25.3.6	Verifying GOT recognizes controllers	25 - 19
25.3.7	Checking for normal monitoring.....	25 - 21
25.4	Indicating controller Side Setting	25 - 23
25.4.1	Connecting to ACS-13A, DCL-33A, JC, JCM-33A, JIR-301-M Series	25 - 24
25.4.2	Connecting to FCD-100, FCR-100, FCR-23A, FIR, PC-900 Series	25 - 24
25.4.3	Connecting to communication converter (IF-400).....	25 - 24
25.4.4	Station NO. settings.....	25 - 25
25.5	Precautions	25 - 26
25.6	List of Functions Added by Version Upgrade	25 - 27

26. CONNECTION TO CHINO CONTROLLER

26 - 1 to 26 - 42

26.1	System Configuration	26 - 2
26.1.1	Connecting to LT300, LT400, DZ1000 or DZ2000 series.....	26 - 2
26.1.2	Connecting to LT230, LT830	26 - 5
26.1.3	Connecting to GT120.....	26 - 7
26.2	Connection Cable	26 - 9
26.2.1	RS-232 cable	26 - 10
26.2.2	RS-422 cable	26 - 12
26.2.3	RS-485 cable	26 - 15
26.3	Preparatory Procedures for Monitoring	26 - 19
26.3.1	Installing OS onto GOT.....	26 - 20
26.3.2	Checking OS installation on GOT.....	26 - 21
26.3.3	Setting communication interface (Communication settings).....	26 - 22
26.3.4	Downloading project data	26 - 25
26.3.5	Attaching communication unit and connecting cable.....	26 - 26
26.3.6	Verifying GOT recognizes controllers	26 - 31

26.3.7	Checking for normal monitoring.....	26 - 33
26.4	Controller Side Setting	26 - 35
26.4.1	Connecting to LT230, LT300 Series.....	26 - 35
26.4.2	Connecting to LT400, LT830 Series.....	26 - 36
26.4.3	Connecting to DZ1000, DZ2000 Series.....	26 - 36
26.4.4	Connecting to GT120 Series.....	26 - 37
26.4.5	Connecting SC8-10.....	26 - 38
26.4.6	Station NO. settings.....	26 - 39
26.5	Precautions	26 - 40
26.5.1	Station number settings of temperature controller.....	26 - 40
26.5.2	GOT clock function.....	26 - 40
26.5.3	Cutting the portion of multipul connection of the controller.....	26 - 40
26.6	List of Functions Added by Version Upgrade	26 - 41

27. CONNECTION TO FUJI SYS TEMPERATURE CONTROLLER

27 - 1 to 27 - 38

27.1	System Configuration	27 - 2
27.1.1	Connecting to PXR3, PXR4, PXR5 or PXR9.....	27 - 2
27.1.2	Connecting to PXG4, PXG5, PXG9 or PXH9.....	27 - 4
27.2	Connection Cable	27 - 6
27.2.1	RS-232 cable.....	27 - 7
27.2.2	RS-485 cable.....	27 - 10
27.3	Preparatory Procedures for Monitoring	27 - 14
27.3.1	Installing OS onto GOT.....	27 - 15
27.3.2	Checking OS installation on GOT.....	27 - 16
27.3.3	Setting communication interface (Communication settings).....	27 - 17
27.3.4	Downloading project data.....	27 - 19
27.3.5	Attaching communication unit and connecting cable.....	27 - 20
27.3.6	Verifying GOT recognizes controllers.....	27 - 23
27.3.7	Checking for normal monitoring.....	27 - 25
27.4	Temperature Controller Side Setting	27 - 27
27.4.1	Connecting to PXR3/4/5/9.....	27 - 27
27.4.2	Connecting to PXG4, PXG5 or PXG9.....	27 - 28
27.4.3	Connecting to PXH9.....	27 - 29
27.4.4	Connecting to interface converter (RC-77).....	27 - 30
27.4.5	Connecting to interface converter (SI-30A).....	27 - 32
27.4.6	Connecting to interface converter (KS-485).....	27 - 33
27.4.7	Connecting to interface converter (K3SC-10).....	27 - 34
27.4.8	Station NO. settings.....	27 - 36
27.5	Precautions	27 - 37
27.6	List of Functions Added by Version Upgrade	27 - 38

28. CONNECTION TO YAMATAKE TEMPERATURE CONTROLLER

28 - 1 to 28 - 44

28.1	System Configuration	28 - 2
------	----------------------	--------

28.1.1	Connecting to DMC10	28 - 2
28.1.2	Connecting to SDC15, SDC25/26 or SDC35/36.....	28 - 4
28.1.3	Connecting to SDC20/21	28 - 6
28.1.4	Connecting to SDC30/31	28 - 9
28.1.5	Connecting to SDC40A/40B/40G	28 - 11
28.2	Connection Cable	28 - 14
28.2.1	RS-232 cable	28 - 15
28.2.2	RS-485 cable	28 - 18
28.3	Preparatory Procedures for Monitoring	28 - 24
28.3.1	Installing OS onto GOT	28 - 25
28.3.2	Checking OS installation on GOT	28 - 26
28.3.3	Setting communication interface (Communication settings).....	28 - 27
28.3.4	Downloading project data	28 - 30
28.3.5	Attaching communication unit and connecting cable	28 - 31
28.3.6	Verifying GOT recognizes controllers	28 - 34
28.3.7	Checking for normal monitoring	28 - 36
28.4	Temperature Controller Side Setting	28 - 38
28.4.1	Connecting to DMC10	28 - 38
28.4.2	Connecting SDC40A/40B/40G	28 - 39
28.4.3	Connecting SDC15, SDC25/26, SDC35/36.....	28 - 39
28.4.4	Connecting SDC20/21, SDC30/31	28 - 40
28.4.5	Connecting CMC10L	28 - 40
28.4.6	Station NO. settings.....	28 - 42
28.5	Precautions	28 - 43
28.6	List of Functions Added by Version Upgrade	28 - 44

29. CONNECTION TO YOKOGAWA TEMPERATURE CONTROLLER

29 - 1 to 29 - 48

29.1	System Configuration	29 - 2
29.1.1	Connecting to GREEN Series.....	29 - 2
29.1.2	Connecting to UT100 Series.....	29 - 6
29.1.3	Connecting to UT2000 Series.....	29 - 8
29.2	Connection Cable	29 - 11
29.2.1	RS-232 cable	29 - 11
29.2.2	RS-485 cable	29 - 13
29.3	Preparatory Procedures for Monitoring	29 - 23
29.3.1	Installing OS onto GOT	29 - 24
29.3.2	Checking OS installation on GOT	29 - 25
29.3.3	Setting communication interface (Communication settings).....	29 - 26
29.3.4	Downloading project data	29 - 29
29.3.5	Attaching communication unit and connecting cable	29 - 30
29.3.6	Verifying GOT recognizes controllers	29 - 35
29.3.7	Checking for normal monitoring	29 - 37
29.4	Temperature Controller Side Setting	29 - 39
29.4.1	Connecting to GREEN Series.....	29 - 40
29.4.2	Connecting to UT100 Series.....	29 - 41
29.4.3	Connecting to UT2000 Series.....	29 - 42

29.4.4	Connecting to RS232C/RS485 converter.....	29 - 44
29.4.5	Station NO. settings.....	29 - 45
29.5	Precautions	29 - 46
29.6	List of Functions Added by Version Upgrade	29 - 47

30. CONNECTION TO RKC TEMPERATURE CONTROLLER

30 - 1 to 30 - 50

30.1	System Configuration	30 - 2
30.1.1	Connecting to H-PCP-J	30 - 2
30.1.2	Connecting to H-PCP-A or H-PCP-B.....	30 - 6
	Connecting to SRZ 9	
30.2	Connection Cable	30 - 13
30.2.1	RS-232 cable.....	30 - 14
30.2.2	RS-422 cable.....	30 - 16
30.2.3	RS-485 cable.....	30 - 19
30.3	Preparatory Procedures for Monitoring	30 - 23
30.3.1	Installing OS onto GOT	30 - 24
30.3.2	Checking OS installation on GOT.....	30 - 25
30.3.3	Setting communication interface (Communication settings).....	30 - 26
30.3.4	Downloading project data	30 - 29
30.3.5	Attaching communication unit and connecting cable.....	30 - 30
30.3.6	Verifying GOT recognizes controllers.....	30 - 35
30.3.7	Checking for normal monitoring.....	30 - 37
30.4	Temperature Controller Side Setting	30 - 39
30.4.1	Connecting to H-PCP-J	30 - 39
30.4.2	Connecting to H-PCP-A, H-PCP-B.....	30 - 42
30.4.3	Connecting to Z-TIO, Z-DIO	30 - 44
30.4.4	Connecting to Z-COM.....	30 - 46
30.4.5	Station No. settings	30 - 48
30.5	Precautions	30 - 49
30.6	List of Functions Added by Version Upgrade	30 - 50

31. INVERTER CONNECTION

31 - 1 to 31 - 32

31.1	System Configuration	31 - 2
31.1.1	Connecting to FREQROL A500/F500	31 - 2
31.1.2	Connecting to FREQROL E500/S500	31 - 5
31.1.3	Connecting to FREQROL A700/F700	31 - 7
31.2	Connection Cable	31 - 9
31.3	Preparatory Procedures for Monitoring	31 - 15
31.3.1	Installing OS onto GOT	31 - 16
31.3.2	Checking OS installation on GOT.....	31 - 17
31.3.3	Setting communication interface (Communication settings).....	31 - 18
31.3.4	Downloading project data	31 - 21
31.3.5	Attaching communication unit and connecting cable.....	31 - 22

31.3.6	Verifying GOT recognizes controllers	31 - 25
31.3.7	Checking for normal monitoring	31 - 27
31.4	FREQROL Series Inverter Side Settings	31 - 28
31.5	Precautions	31 - 30
31.6	List of Functions Added by Version Upgrade	31 - 31

32. SERVO AMPLIFIER CONNECTION 32 - 1 to 32 - 34

32.1	System Configuration	32 - 2
32.1.1	Connecting to the MELSERVO-J2-Super series	32 - 2
32.1.2	Connecting to the MELSERVO-J2M series	32 - 4
32.1.3	Connecting to the MELSERVO-J3 Series	32 - 6
32.2	Connection Cable	32 - 9
32.2.1	RS-232 cable	32 - 9
32.2.2	RS-422 cable	32 - 11
32.3	Preparatory Procedures for Monitoring	32 - 14
32.3.1	Installing OS onto GOT	32 - 15
32.3.2	Checking OS installation on GOT	32 - 16
32.3.3	Setting communication interface (Communication settings)	32 - 17
32.3.4	Downloading project data	32 - 19
32.3.5	Attaching communication unit and connecting cable	32 - 20
32.3.6	Verifying GOT recognizes controllers	32 - 24
32.3.7	Checking for normal monitoring	32 - 26
32.4	Setting on Servo Amplifier Side	32 - 28
32.4.1	Connecting to the MELSERVO-J2-Super series	32 - 28
32.4.2	Connecting to the MELSERVO-J2M series	32 - 30
32.4.3	Connecting to the MELSERVO-J3 series	32 - 31
32.4.4	Station NO. settings	32 - 32
32.5	Precautions	32 - 33
32.6	List of Functions Added by Version Upgrade	32 - 34

33. CNC CONNECTION 33 - 1 to 33 - 90

33.1	Direct Connection To CPU	33 - 2
33.1.1	System Configuration	33 - 2
33.1.2	Connection Cable	33 - 4
33.1.3	Preparatory Procedures for Monitoring	33 - 6
33.1.4	Installing OS onto GOT	33 - 7
33.1.5	Checking OS installation on GOT	33 - 8
33.1.6	Setting communication interface (Communication settings)	33 - 9
33.1.7	Downloading project data	33 - 11
33.1.8	Attaching communication unit and connecting cable	33 - 12
33.1.9	Verifying GOT recognizes controllers	33 - 16
33.1.10	Checking for normal monitoring	33 - 18
33.1.11	Precautions	33 - 20
33.2	MELSECNET/10 Connection (PLC To PLC Network)	33 - 21
33.2.1	System Configuration	33 - 21

33.2.2	Preparatory Procedures for Monitoring	33 - 23
33.2.3	Installing OS onto GOT	33 - 24
33.2.4	Checking OS installation on GOT.....	33 - 25
33.2.5	Setting communication interface (Communication settings).....	33 - 26
33.2.6	Downloading project data	33 - 31
33.2.7	Attaching communication unit and connecting cable.....	33 - 32
33.2.8	Verifying GOT recognizes controllers	33 - 36
33.2.9	Checking for normal monitoring.....	33 - 38
33.2.10	CNC Side Settings.....	33 - 40
33.2.11	Precautions.....	33 - 43
33.3	CC-Link Connection (Intelligent Device Station)	33 - 44
33.3.1	System Configuration	33 - 44
33.3.2	Preparatory Procedures for Monitoring	33 - 46
33.3.3	Installing OS onto GOT	33 - 47
33.3.4	Checking OS installation on GOT.....	33 - 48
33.3.5	Setting communication interface (Communication settings).....	33 - 49
33.3.6	Downloading project data	33 - 55
33.3.7	Attaching communication unit and connecting cable.....	33 - 56
33.3.8	Verifying GOT recognizes controllers	33 - 59
33.3.9	Checking for normal monitoring.....	33 - 61
33.3.10	CNC Side Settings.....	33 - 64
33.3.11	Precautions.....	33 - 67
33.4	Ethernet Connection	33 - 68
33.4.1	System Configuration	33 - 68
33.4.2	Preparatory Procedures for Monitoring	33 - 70
33.4.3	Installing OS onto GOT	33 - 71
33.4.4	Checking OS installation on GOT.....	33 - 72
33.4.5	Setting communication interface (Communication settings).....	33 - 73
33.4.6	Downloading project data	33 - 78
33.4.7	Attaching communication unit and connecting cable.....	33 - 79
33.4.8	Verifying GOT recognizes controllers	33 - 80
33.4.9	Checking for normal monitoring.....	33 - 82
33.4.10	CNC Side Settings.....	33 - 86
33.4.11	Precautions.....	33 - 89
33.5	List of Functions Added by Version Upgrade	33 - 90

34. CONNECTION TO SOUND OUTPUT UNIT **34 - 1 to 34 - 14**

34.1	System Configuration	34 - 2
34.2	Preparatory Procedures for Monitoring	34 - 4
34.2.1	Installing OS onto GOT	34 - 5
34.2.2	Checking OS installation on GOT.....	34 - 6
34.2.3	Setting communication interface (Communication settings).....	34 - 7
34.2.4	Downloading project data	34 - 8
34.2.5	Attaching communication unit and connecting cable.....	34 - 9
34.2.6	Verifying GOT recognizes controllers	34 - 10
34.3	Precautions	34 - 12
34.4	List of Functions Added by Version Upgrade	34 - 13

35. CONNECTION TO EXTERNAL I/O DEVICE

35 - 1 to 35 - 22

35.1	System Configuration	35 - 2
35.2	Connection Cable	35 - 5
35.2.1	Connection cable between external I/O unit and operation panel	35 - 5
35.2.2	Connection cable between external I/O unit and connector/terminal block converter module	35 - 7
35.3	Connection Diagram	35 - 9
35.3.1	Connection diagram between external I/O unit and connector/terminal block converter module	35 - 9
35.3.2	Connection cable between connector/terminal block converter module and user-created original operation panel	35 - 11
35.4	Preparatory Procedures for Monitoring	35 - 12
35.4.1	Installing OS onto GOT	35 - 13
35.4.2	Checking OS installation on GOT	35 - 14
35.4.3	Setting communication interface (Communication settings)	35 - 15
35.4.4	Downloading project data	35 - 16
35.4.5	Attaching communication unit and connecting cable	35 - 17
35.4.6	Verifying GOT recognizes controllers	35 - 18
35.4.7	Checking for normal monitoring	35 - 20
35.5	Precautions	35 - 21
35.6	List of Functions Added by Version Upgrade	35 - 22

36. BAR CODE READER CONNECTION

36 - 1 to 36 - 20

36.1	System Configuration	36 - 2
36.2	Preparatory Procedures for Monitoring	36 - 4
36.2.1	Installing OS onto GOT	36 - 5
36.2.2	Checking OS installation on GOT	36 - 6
36.2.3	Setting communication interface (Communication settings)	36 - 7
36.2.4	Downloading project data	36 - 9
36.2.5	Attaching communication unit and connecting cable	36 - 10
36.2.6	Verifying GOT recognizes controllers	36 - 11
36.2.7	Checking for normal monitoring	36 - 13
36.3	Precautions	36 - 14
36.4	System Configuration Examples	36 - 15
36.5	List of Functions Added by Version Upgrade	36 - 19

37. VIDEO/RGB CONNECTION

37 - 1 to 37 - 24

37.1	System Configuration	37 - 2
37.1.1	Displaying video image on GOT	37 - 3
37.1.2	Displaying GOT screen on external monitor	37 - 6
37.2	Connection Cable	37 - 7
37.2.1	Coaxial cable	37 - 7
37.2.2	Analog RGB cable	37 - 10

37.3	Preparatory Procedures for Monitoring	37 - 12
37.3.1	Installing OS onto GOT	37 - 13
37.3.2	Checking OS installation on GOT.....	37 - 14
37.3.3	Setting communication interface (Communication settings).....	37 - 15
37.3.4	Downloading project data	37 - 17
37.3.5	Attaching option unit and connecting cable	37 - 18
37.3.6	Verifying GOT recognizes controllers	37 - 20
37.4	Precautions	37 - 22
37.4.1	Connecting to PC	37 - 22
37.4.2	Connecting to NEC PC-9800 (PC-9801, PC-9821, etc.) series	37 - 22
37.5	List of Functions Added by Version Upgrade	37 - 23

38. PRINTER CONNECTION 38 - 1 to 38 - 14

38.1	System Configuration	38 - 2
38.2	Preparatory Procedures for Monitoring	38 - 4
38.2.1	Installing OS onto GOT	38 - 5
38.2.2	Checking OS installation on GOT.....	38 - 6
38.2.3	Setting communication interface (Communication settings).....	38 - 7
38.2.4	Downloading project data	38 - 8
38.2.5	Attaching communication unit and connecting cable.....	38 - 9
38.2.6	Verifying GOT recognizes controllers	38 - 10
38.3	Precautions	38 - 12
38.4	List of Functions Added by Version Upgrade	38 - 13

39. MULTI-CHANNEL FUNCTION 39 - 1 to 39 - 16

39.1	What is Multi-channel Function?	39 - 2
39.2	System Configuration Examples	39 - 3
39.3	Preparatory Procedures for Monitoring	39 - 4
39.3.1	Installing OS onto GOT	39 - 5
39.3.2	Checking OS installation on GOT.....	39 - 6
39.3.3	Setting communication interface (Communication settings).....	39 - 7
39.3.4	Downloading project data	39 - 8
39.3.5	Attaching option function board/communication unit and connecting cable	39 - 9
39.3.6	Verifying GOT recognizes controllers	39 - 10
39.3.7	Checking for normal monitoring.....	39 - 12
39.4	Connected Equipment Side Settings	39 - 14
39.5	List of Functions Added by Version Upgrade	39 - 15

40. FA TRANSPARENT FUNCTION 40 - 1 to 40 - 42

40.1	FA Transparent Function	40 - 2
40.2	System Configuration	40 - 2
40.2.1	GX Developer	40 - 3

40.2.2	PX Developer, GX Configurator.....	40 - 6
40.2.3	MT Developer	40 - 8
40.2.4	MR Configurator	40 - 10
40.2.5	FR Configurator	40 - 13
40.3	Compatible Software	40 - 15
40.4	Preparatory Procedure for Accessing	40 - 18
40.4.1	Setting communication interface (Communication settings).....	40 - 19
40.4.2	Attaching the communication unit and connecting the cable.....	40 - 21
40.4.3	Verifying GOT recognizes controllers	40 - 23
40.4.4	Accessing the PLC by the GX Developer, PX Developer, GX Configurator.....	40 - 25
40.4.5	Accessing by the MT Developer	40 - 28
40.4.6	Accessing the servo amplifier by the MR Configurator.....	40 - 31
40.4.7	Accessing the inverter by the FR Configurator	40 - 32
40.5	Precautions	40 - 34
40.5.1	Precautions common to each software.....	40 - 34
40.5.2	When using GX Developer	40 - 37
40.5.3	When using MT Developer	40 - 39
40.5.4	When using MR Configurator	40 - 39
40.5.5	When using FR Configurator	40 - 40
40.6	List of Functions Added by Version Upgrade	40 - 41

41. MULTIPLE-GT11, GT10 CONNECTION FUNCTION 41 - 1 to 41 -26

41.1	System Configuration	41 - 2
41.2	Connection Cable	41 - 5
41.3	Preparatory Procedures for Monitoring	41 - 7
41.3.1	Installing OS onto GOT.....	41 - 8
41.3.2	Checking OS installation on GOT.....	41 - 9
41.3.3	Setting communication interface (Communication settings).....	41 - 10
41.3.4	Downloading project data	41 - 15
41.3.5	Attaching communication unit and connecting cable.....	41 - 16
41.3.6	Verifying GOT recognizes controllers	41 - 17
41.3.7	Checking for normal monitoring.....	41 - 20
41.4	Precautions	41 - 23
41.5	List of Functions Added by Version Upgrade	41 - 25

42. GATEWAY FUNCTION 42 - 1 to 42 - 22

42.1	System Configuration	42 - 2
42.2	Preparatory Procedures for Monitoring	42 - 6
42.2.1	Installing OS onto GOT.....	42 - 7
42.2.2	Checking OS installation on GOT.....	42 - 8
42.2.3	Setting communication interface (Communication settings).....	42 - 9
42.2.4	Downloading project data	42 - 15
42.2.5	Attaching communication unit and connecting cable.....	42 - 16
42.2.6	Verifying GOT recognizes controllers	42 - 17
42.2.7	Checking for normal monitoring.....	42 - 19

43. MES INTERFACE FUNCTION**43 - 1 to 43 - 18**

43.1	System Configuration	43 - 2
43.2	Preparatory Procedures for Monitoring	43 - 5
43.2.1	Installing OS onto GOT	43 - 6
43.2.2	Checking OS installation on GOT	43 - 7
43.2.3	Setting communication interface (Communication settings).....	43 - 8
43.2.4	Downloading project data	43 - 12
43.2.5	Attaching communication unit and connecting cable.....	43 - 13
43.2.6	Verifying GOT recognizes controllers	43 - 14
43.2.7	Checking for normal monitoring.....	43 - 16
43.3	List of Functions Added by Version Upgrade	43 - 18

INDEX**Index - 1 to Index - 4**

ABOUT MANUALS

The following manuals are also related to this product.
In necessary, order them by quoting the details in the tables below.

Related Manuals

Manual Name	Manual Number (Model Code)
GT15 User's Manual - Describes the GT15 hardware-relevant contents, including the specifications, part names, mounting, power supply wiring, external dimensions, and option devices. - Describes the GT15 functions, including the utility. (Sold separately)	SH-080528ENG (1D7M23)
GT11 User's Manual - Describes the GT11 hardware-relevant contents, including the specifications, part names, mounting, power supply wiring, external dimensions, and option devices. - Describes the GT11 functions, including the utility. (Sold separately)	JY997D17501 (09R815)
GT10 User's Manual - Describes the GT10 hardware-relevant contents, including the specifications, part names, mounting, power supply wiring, external dimensions, and option devices. - Describes the GT10 functions, including the utility. (Sold separately)	JY997D24701 (09R819)
Handy GOT User's Manual - Describes the Handy GOT hardware-relevant contents, including the system configurations, specifications, part names, mounting, power supply wiring, external dimensions, and option devices. - Describes the Handy GOT functions, including the utility, and how to make cables. (Sold separately)	JY997D20101 (09R817)
GT SoftGOT1000 Version2 Operating Manual Describes the screen configuration, functions and using method of GT SoftGOT1000. (Sold separately)	SH-080602ENG (1D7M48)
GT Designer2 Version2 Basic Operation/Data Transfer Manual (For GOT1000 Series) Describes methods of the GT Designer2 installation operation, basic operation for drawing and transmitting data to GOT1000 series (Sold separately) *1	SH-080529ENG (1D7M24)
GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 1/3 GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 2/3 GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 3/3 Describes specifications and settings of each object function applicable to GOT1000 series. (Sold separately)*1	SH-080530ENG (1D7M25)
GOT1000 Series Gateway Functions Manual Describes specifications, system configurations and setting method of the gateway function. (Sold separately) *1	SH-080545ENG (1D7M33)
GOT1000 Series MES Interface Function Manual Describes the specifications, system configurations, and setting method of GT MES interface function. (Sold separately) *1	SH-080654ENG (1D7M63)

*1 The manual in PDF-format is included in the GT Works2 and GT Designer2 products.

ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL

Abbreviations and generic terms used in this manual are described as follows.

■ GOT

Abbreviations and generic terms		Description
GT SoftGOT1000		Abbreviation of GT SoftGOT1000
GT1595	GT1595-X	Abbreviation of GT1595-XTBA, GT1595-XTBD
GT1585	GT1585V-S	Abbreviation of GT1585V-STBA
	GT1585-S	Abbreviation of GT1585-STBA, GT1585-STBD
GT157□	GT1575V-S	Abbreviation of GT1575V-STBA
	GT1575-S	Abbreviation of GT1575-STBA, GT1575-STBD
	GT1575-V	Abbreviation of GT1575-VTBA, GT1575-VTBD
	GT1575-VN	Abbreviation of GT1575-VNBA, GT1575-VNBD
GT156□	GT1572-VN	Abbreviation of GT1572-VNBA, GT1572-VNBD
	GT1565-V	Abbreviation of GT1565-VTBA, GT1565-VTBD
GT156□	GT1562-VN	Abbreviation of GT1562-VNBA, GT1562-VNBD
	GT155□	GT1555-V
GT1555-Q		Abbreviation of GT1555-QTBD, GT1555-QSBD
GT1550-Q		Abbreviation of GT1550-QLBD
GT15□□, GT15		Abbreviation of GT1595, GT1585, GT157□, GT156□, GT155□
GT115□	GT1155-Q	Abbreviation of GT1155-QTBDQ, GT1155-QSBDQ, GT1155-QTBDA, GT1155-QSBDA, GT1155-QSBD
	GT1150-Q	Abbreviation of GT1150-QLBDQ, GT1150-QLBDA, GT1150-QLBD
Handy GOT	GT1155HS-Q	Abbreviation of GT1155HS-QSBD
	GT1150HS-Q	Abbreviation of GT1150HS-QLBD
GT11□□, GT11		Abbreviation of GT1155-Q, GT1150-Q, GT11 Handy GOT
GT1030		Abbreviation of GT1030-LBD, GT1030-LBD2, GT1030-LBDW, GT1030-LBDW2
GT1020		Abbreviation of GT1020-LBD, GT1020-LBD2, GT1020-LBL, GT1020-LBDW, GT1020-LBDW2, GT1020-LBLW
GT10□□, GT10		Abbreviation of GT1030, GT1020
GOT900 Series		Abbreviation of GOT-A900 series, GOT-F900 series
GOT800 Series		Abbreviation of GOT-800 series

■ Communication unit

Abbreviations and generic terms	Description			
Bus connection unit	GT15-QBUS, GT15-75QBUSL,	GT15-QBUS2, GT15-75QBUS2L,	GT15-ABUS, GT15-75ABUSL,	GT15-ABUS2, GT15-75ABUS2L
Serial communication unit	GT15-RS2-9P,	GT15-RS4-9S,	GT15-RS4-TE	
RS-422 conversion unit	GT15-RS2T4-9P,	GT15-RS2T4-25P		
Ethernet communication unit	GT15-J71E71-100			
MELSECNET/H communication unit	GT15-J71LP23-25,	GT15-J71BR13		
MELSECNET/10 communication unit	GT15-75J71LP23-Z ^{*1} ,	GT15-75J71BR13-Z ^{*2}		
CC-Link communication unit	GT15-J61BT13,	GT15-75J61BT13-Z ^{*3}		
Interface converter unit	GT15-75IF900			

*1 A9GT-QJ71LP23 + GT15-75IF900 set

*2 A9GT-QJ71BR13 + GT15-75IF900 set

*3 A8GT-J61BT13 + GT15-75IF900 set

Option unit

Abbreviations and generic terms		Description
Printer unit		GT15-PRN
Video/RGB unit	Video input unit	GT15V-75V4
	RGB input unit	GT15V-75R1
	Video/RGB input unit	GT15V-75V4R1
	RGB output unit	GT15V-75ROUT
CF card unit		GT15-CFCD
CF card extension unit*1		GT15-CFEX-C08SET
External I/O unit		GT15-DIO
Sound output unit		GT15-SOUT

*1 GT15-CFEX + GT15-CFEXIF + GT15-C08CF set.

Option

Abbreviations and generic terms		Description			
Memory card	CF card	GT05-MEM-16MC, GT05-MEM-128MC,	GT05-MEM-32MC, GT05-MEM-256MC	GT05-MEM-64MC,	
Memory card adaptor		GT05-MEM-ADPC			
Option function board		GT15-FNB, GT15-QFNB48M,	GT15-QFNB, GT11-50FNB	GT15-QFNB16M,	GT15-QFNB32M,
Battery		GT15-BAT,	GT11-50BAT		
Protective Sheet		GT15-90PSCB, GT15-80PSCB, GT15-70PSCB, GT15-60PSCB, GT15-50PSCB, GT11-50PSCB, GT11H-50PSC, GT10-30PSCB, GT10-20PSCB,	GT15-90PSGB, GT15-80PSGB, GT15-70PSGB, GT15-60PSGB, GT15-50PSGB, GT11-50PSGB, GT10-30PSGB, GT10-20PSGB,	GT15-90PSCW, GT15-80PSCW, GT15-70PSCW, GT15-60PSCW, GT15-50PSCW, GT11-50PSCW, GT10-30PSCW, GT10-20PSCW,	GT15-90PSGW, GT15-80PSGW, GT15-70PSGW, GT15-60PSGW, GT15-50PSGW, GT11-50PSGW, GT10-30PSGW, GT10-20PSGW
USB environmental protection cover		GT15-UCOV,	GT11-50UCOV		
Stand		GT15-90STAND, GT05-50STAND	GT15-80STAND,	GT15-70STAND,	A9GT-50STAND,
Attachment		GT15-60ATT-97,	GT15-60ATT-96		
Backlight		GT15-90XLTT, GT15-70VLTN,	GT15-80SLTT, GT15-60VLTT,	GT15-70SLTT, GT15-60VLTN	GT15-70VLTT,
Multi-color display board		GT15-XHNB,	GT15-VHNB		
Connector conversion box		GT11H-CNB-37S			
Emergency stop sw guard cover		GT11H-50ESCOV			

Software

Abbreviations and generic terms	Description
GT Works2 Version□	SW□D5C-GTWK2-E, SW□D5C-GTWK2-EV
GT Designer2 Version□	SW□D5C-GTD2-E, SW□D5C-GTD2-EV
GT Designer2	Abbreviation of screen drawing software GT Designer2 for GOT1000/GOT900 series
GT Converter2	Abbreviation of data conversion software GT Converter2 for GOT1000/GOT900 series
GT Simulator2	Abbreviation of screen simulator GT Simulator 2 for GOT1000 / GOT900 series
GT SoftGOT1000	Abbreviation of monitoring software GT SoftGOT1000
GT SoftGOT2	Abbreviation of monitoring software GT SoftGOT2
GX Developer	Abbreviation of SW□D5C-GPPW-E(-EV)/SW□D5F-GPPW-E type software package
GX Simulator	Abbreviation of SW□D5C-LLT-E(-EV) type ladder logic test tool function software packages (SW5D5C-LLT (-EV) or later versions)
Document Converter	Abbreviation of document data conversion software Document Converter for GOT1000 series
PX Developer	Abbreviation of SW□D5C-FBDQ-E type FBD software package for process control

■ License key (for GT SoftGOT1000)

Abbreviations and generic terms	Description
License	GT15-SGTKEY-U, GT15-SGTKEY-P

■ License key (for GT SoftGOT2)

Abbreviations and generic terms	Description
License key	A9GTSOFT-LKEY-P (For DOS/V PC)
License key FD	SW5D5F-SGLKEY-J (For PC CPU module)

■ Others

Abbreviations and generic terms	Description	
Omron PLC	Abbreviation of PLC manufactured by OMRON Corporation	
KEYENCE PLC	Abbreviation of PLC manufactured by KEYENCE	
Sharp PLC	Abbreviation of PLC manufactured by SHARP Corporation	
JTEKT PLC	Abbreviation of PLC manufactured by JTEKT Corporation	
Toshiba PLC	Abbreviation of PLC manufactured by TOSHIBA CORPORATION	
HITACHI IES PLC	Abbreviation of PLC manufactured by Hitachi Industrial Equipment Systems Co., Ltd.	
HITACHI PLC	Abbreviation of PLC manufactured by Hitachi, Ltd.	
FUJI FA PLC	Abbreviation of PLC manufactured by Fuji Electric FA Components & Systems Co., Ltd.	
Matsushita PLC	Abbreviation of PLC manufactured by Matsushita Electric Works, Ltd	
Yaskawa PLC	Abbreviation of PLC manufactured by YASKAWA Electric Corporation	
Yokogawa PLC	Abbreviation of PLC manufactured by Yokogawa Electric Corporation	
Allen-Bradley PLC	Abbreviation of PLC manufactured by Allen-Bradley	
SIEMENS PLC	Abbreviation of PLC manufactured by SIEMENS	
Temperature controller	OMRON temperature controller	Abbreviation of temperature controller manufactured by OMRON
	SHINKO indicating controller	Abbreviation of temperature controller manufactured by Shinko Technos Co., Ltd.
	CHINO controller	Abbreviation of temperature controller manufactured by CHINO CORPORATION
	FUJI SYS temperature controller	Abbreviation of temperature controller manufactured by Fuji Electric Systems Co., Ltd.
	YAMATAKE temperature controller	Abbreviation of temperature controller manufactured by YAMATAKE
	YOKOGAWA temperature controller	Abbreviation of temperature controller manufactured by Yokogawa Electric Corporation
	RKC temperature controller	Abbreviation of temperature controller manufactured by RKC
PC CPU module	Abbreviation of PC CPU Unit manufactured by CONTEC CO., LTD	
GOT (server)	Abbreviation of GOTs that use the server function	
GOT (client)	Abbreviation of GOTs that use the client function	
Windows® font	Abbreviation of TrueType font and OpenType font available for Windows® (Differs from the True Type fonts settable with GT Designer2)	
Intelligent function module	Indicates the modules other than the PLC CPU, power supply module and I/O module that are mounted to the base unit.	

HOW TO READ THIS MANUAL

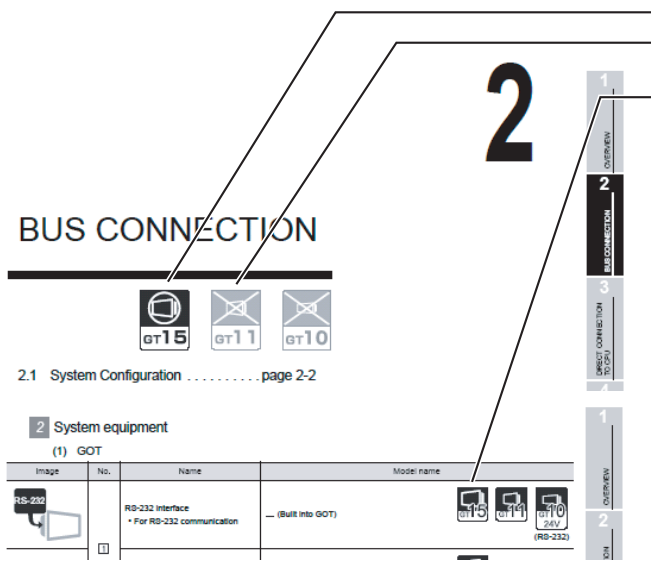
1 About each of functions

This manual includes information of GT Designer2 Version2.58L.

For additional functions of upgraded version, refer to the List of functions added by version upgrade.

2 Symbols

Following symbols are used in this manual.



Connectable model name
Not connectable model name

Applicable model name



Shows GT15.



Shows GT11.



Shows GT11 (BUS).



Shows GT11 (SERIAL).



Shows GT10.



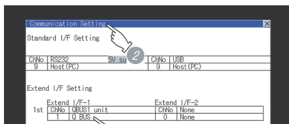
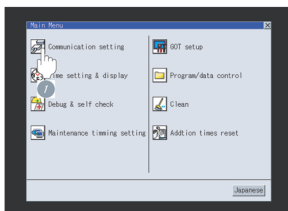
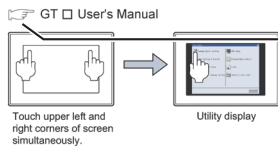
Shows GT10(input power supply : 24V).



Shows GT10(input power supply : 5V).

2.2.6 Verifying GOT recognizes connected equipment

Remark How to display Utility
To display the Utility (at default), touch the upper right and upper left positions on the screen at the same time (pressing 2 points).
For how to start and operate the Utility, refer to the following manual.



1 After powering up the GOT, touch [Main Menu] - [Communication setting] from the Utility.

2 The [Communication setting] screen appears.
3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.



Refers to the information required.



Refers to information useful for operation.



Refers to the supplementary explanations for reference.

Indicates the items in which the detailed explanation is described (manual, chapter, section, item of the manual).

1 → 2 → 3 ...

Indicates the operation steps.

Menu and items are differentiated with parentheses.

[] : refers to menu in menu bar, refers, dialog box item or GOT utility menu.

□ : refers to dialog box buttons or PC keyboard.

*Since the above page was created for explanation purpose, it differs from the actual page

OVERVIEW

This manual describes the specifications, system configuration, setting method, connection cables and other information on each connection type supported by GOT. When applying the following program examples to the actual system, make sure to examine the applicability and confirm that it will not cause system control problems.

1.1 Connections and Functions Supported by GOT page 1-4

This section describes the connections and functions supported by the GOT1000 Series. Please read this section to confirm the connection overview.

1.2 Overall System Configurations . . . page 1-7

This section describes the system configuration of the GT15, GT11 and GT10. Please read this section and check the GOT connection and system configuration optimum for your application.



PLC CPUs that can be Monitored from GOT and Access Ranges

For details on PLC CPUs that can be monitored from GOT and access ranges, refer to the following:










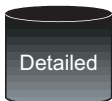

- ☞ GT Designer2 Version □ Screen Design Manual (Section2.7 PLC CPU that can be monitored and the accessible range)

1 Relevant Manuals

There are the following manuals available for use of the GOT1000 series.
Refer to each of them according to the intended purpose.

(1) Installing software → Drawing → Data transfer













For operations from creating project data to transferring data to GOT, refer to the following manuals.

		
Purpose	GT Designer2 Version <input type="checkbox"/> Basic Operation/ Data Transfer Manual ^{*1}	GT Designer2 Version <input type="checkbox"/> Screen Design Manual ^{*1}
Installing product on PC		
Creating projects		
Creating screens		
Drawing figures		
Making common settings		
Placing/setting objects		
Transferring data for GOT		

*1 Stored in the GT Works2/GT Designer2 in PDF format.

(2) Installing a GOT → Connecting with a PLC

For the operations from installing a GOT to communicating with a PLC CPU, refer to the following manuals.

	 (Included)		
Purpose	GT15 General Description GT11 General Description	GT15 User's Manual GT11 User's Manual	GOT1000 Series Connection Manual* ¹
Confirming part names and specifications of the GOT	 Overview	 Detailed	
Confirming the GOT installation method	 Overview	 Detailed	
Confirming the mounting method for communication units or option devices		 Detailed	 Overview
Confirming the PLC connection method			 Detailed
Confirming the utility operation method		 Detailed	
Confirming error codes (system alarm) displayed on GOT		 Detailed	

*1 Stored in the GT Works2/GT Designer2 in PDF format.

(3) Other manuals

The following manuals are also available.








The following manuals are stored in the GT Works2/GT Designer2 in PDF format.





- (a) GOT1000 Series Extended/Option Functions Manual
Describes how to use the ladder monitoring function, system monitor function and list editor for A/F, network monitor function, Q motion monitor function, servo amplifier monitor function, CNC monitor function, intelligent module monitor function.
- (b) GOT1000 Series Gateway Functions Manual
Describes how to use the gateway function.
- (c) GT Simulator2 Version □ Operating Manual
Describes how to simulate the created project data with the GT Simulator2.
- (d) GT Converter2 Version □ Operating Manual
Describes how to use the GT Converter2.
- (e) GOT1000 Series MES Interface Function Manual
Describes how to use the MES Interface Function.

1.1 Connections and Functions Supported by GOT

1 Various connection types


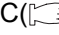







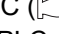
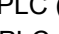
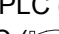
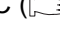
The GOT can perform monitoring with the following connection types for MITSUBISHI PLC. The connection type suitable for your system configuration or usage can be selected.

Connection type	Application	Reference
Bus connection	<p>Bus connection is a method using an extension connector of a base unit in order to connect a GOT (connection by I/O bus).</p> <p>This connection type enables the fastest response to a PLC CPU among all GOT connection types.</p> <p>Multiple GOTs can be connected to a PLC CPU placed in a distant position.</p>	 Chapter 2 BUS CONNECTION
Direct connection to CPU	<p>Direct connection to CPU represents a connection type in which a GOT is connected to the RS-232/RS-422 connector on a PLC CPU.</p> <p>This is the most economical way of connection since an RS-232 or RS-422 cable only is needed for the connection. (When connecting the GT15 to an RS-422 connector on a PLC CPU, the RS-422 conversion unit is required.)</p>	 Chapter 3 DIRECT CONNECTION TO CPU
Computer link connection	<p>In this connection type, a GOT is connected to a computer link module or a serial communication module mounted together with a PLC CPU.</p> <p>Connection of multiple GOTs is available depending on the model type of the computer link module or the serial communication module mounted with the PLC CPU. For the serial communication module (QJ71C24(N)(-R2/-R4)), 2 GOTs can also be connected to 2 channels.</p>	 Chapter 4 COMPUTER LINK CONNECTION
MELSECNET/H connection (PLC to PLC network)	<p>As a normal station of the MELSECNET/H (PLC to PLC network), the GOT can be connected to the network. It can monitor cyclic data of the MELSECNET/10 (PLC to PLC network) and devices of the PLC CPU within the same network.</p>	 Chapter 5 MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
MELSECNET/10 connection (PLC to PLC network)	<p>As a normal station of the MELSECNET/10 (PLC to PLC network), the GOT can be connected to the network. It can monitor cyclic data of the MELSECNET/10 (PLC to PLC network) and devices of the PLC CPU within the same network.</p>	 Chapter 6 MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
CC-Link connection (intelligent device station)	<p>As an intelligent device station of the CC-Link System, the GOT can be connected to the network. It can monitor cyclic data of the CC-Link System and devices of the PLC CPU on the master or local station.</p>	 Chapter 7 CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
CC-Link connection (via G4)	<p>The GOT can be connected to a peripheral connection module in the CC-Link System. It can monitor devices of the QCPU (Q mode) on the master or local station via the peripheral connection module.</p>	 Chapter 8 CC-Link CONNECTION (Via G4)

Connection type	Application	Reference
Ethernet connection	This allows PLC CPU devices monitoring via Ethernet (UDP/IP communications). Networks can be configured with commercially available products such as hubs and cables.	<p> Chapter 9 ETHERNET CONNECTION</p> <p> Chapter 19 CONNECTION TO YASKAWA PLC</p> <p> Chapter 20 CONNECTION TO YOKOGAWA PLC</p> <p> Chapter 21 CONNECTION TO ALLEN-BRADLEY PLC</p>






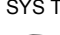

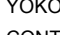
2 Connection with another manufacture's PLC

Since the GOT can monitor a PLC manufactured by a vendor other than Mitsubishi, the flexible system configuration is available.




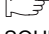

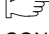
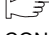
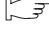
- OMRON PLC ( Chapter 10 CONNECTION TO OMRON PLC)
- KEYENCE PLC( Chapter 11 CONNECTON TO KEYENCE PLC)
- SHARP PLC ( Chapter 12 CONNECTION TO SHARP PLC)
- TOSHIBA PLC ( Chapter 14 CONNECTION TO TOSHIBA PLC)
- JTEKT PLC ( Chapter 13 CONNECTION TO JTEKT PLC)
- HITACHI IES PLC ( Chapter 15 CONNECTION TO HITACHI IES PLC)
- HITACHI PLC( Chapter 16 CONNECTION TO HITACHI PLC)
- FUJI FA PLC( Chapter 17 CONNECTION TO FUJI FA PLC)
- MATSUSHITA PLC ( Chapter 18 CONNECTION TO MATSUSHITA PLC)
- YASKAWA PLC ( Chapter 19 CONNECTION TO YASKAWA PLC)
- YOKOGAWA PLC ( Chapter 20 CONNECTION TO YOKOGAWA PLC)
- Allen-Bradley PLC ( Chapter 21 CONNECTION TO ALLEN-BRADLEY PLC)
- SIEMENS PLC ( Chapter 22 CONNECTION TO SIEMENS PLC)

3 Connection with devices other than PLCs

The GOT can monitor devices other than PLCs.






Devices	Application	Reference
Microcomputer	This type of connection allows data reading/writing to a virtual device on GOT from a PC, microcomputer board, PLC, etc. (hereinafter, referred to as host). Interrupt output is also available from a GOT to a host.	 Chapter 23 MICROCOMPUTER CONNECTION
Temperature controller	Various kinds of monitoring and parameter change are available to temperature controller.	<p> Chapter 24 CONNECTION TO OMRON TEMPERATURE CONTROLLER</p> <p> Chapter 25 CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER</p> <p> Chapter 26 CONNECTION TO CHINO CONTROLLER</p> <p> Chapter 27 CONNECTION TO FUJI SYS TEMPERATURE CONTROLLER</p> <p> Chapter 28 CONNECTION TO YAMATAKE TEMPERATURE CONTROLLER</p> <p> Chapter 29 CONNECTION TO YOKOGAWA TEMPERATURE CONTROLLER</p> <p> Chapter 29 CONNECTION TO RKC TEMPERATURE CONTROLLER</p>

1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)

Devices	Application	Reference
Inverter	Various kinds of monitoring and parameter change are available to inverter.	 Chapter 31 INVERTER CONNECTION
Servo amplifier	Various kinds of monitoring and parameter change are available to servo amplifiers.	 Chapter 32 SERVO AMPLIFIER CONNECTION
CNC	Various kinds of monitoring and parameter change are available to CNC.	 Chapter 33 CNC CONNECTION
Sound output function	This function allows to press the touch switches and to output the sound file from a speaker with the sound output unit when it meets the set condition.	 Chapter 34 CONNECTION TO SOUND OUTPUT UNIT
External I/O function	This function allows to import the input data from the external input device (switch, operation panel and etc.) to GOT or to output the data from GOT to the general output device (lamp, relay and etc.) with the external I/O unit .	 Chapter 35 CONNECTION TO EXTERNAL I/O DEVICE
Bar code reader	Data read by the bar code reader can be written to the PLC CPU.	 Chapter 36 BAR CODE READER CONNECTION
Video/RGB	Images from a video camera or a vision sensor can be displayed on the GOT. Also, GOT screens can be displayed on the external monitor.	 Chapter 37 VIDEO/RGB CONNECTION
Printer	The printing data in GOT can be printable to a PictBrige Compatible printer.	 Chapter 38 PRINTER CONNECTION

4 Various useful functions

The GOT offers various functions convenient for connection with the PLC CPU.



Devices	Application	Reference
Multi-channel function	Installing two or more communication units and communication drivers in GOT, one GOT can monitor maximum four FA controllers (PLC CPU, temperature controller, inverter etc.).	 Chapter 39 MULTI-CHANNEL FUNCTION
FA transparent function	With the GOT connected to a Mitsubishi PLC, a personal computer can be connected to the GOT and the sequence programs in the PLC can be read from or written to the computer via the GOT.	 Chapter 40 FA TRANSPARENT FUNCTION
Multiple-GT11 connection function	By connecting the built-in RS-232 and RS-422 interfaces alternately among the GT11s, multiple GT11s can be connected.	 Chapter 41 MULTIPLE-GT11, GT10 CONNECTION FUNCTION
Gateway function	This function allows data transfer between GOTs, remote monitoring and remote maintenance via Ethernet. Reading or writing the gateway device (EG) in the GOT is also available from a personal computer where MX Component is installed.	 Chapter 42 GATEWAY FUNCTION
MES interface function	This function allows sending SQL texts to the database in the server computer connected to the GOT via Ethernet, writing the GOT device values to the database, and reading values from the database to set for the devices of the GOT.	 Chapter 43 MES INTERFACE FUNCTION





1.2 Overall System Configurations

The following shows the system configurations for each GOT model.

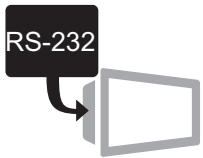

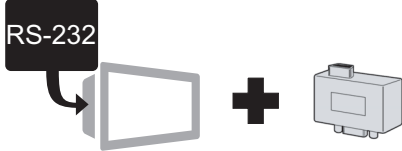

1 GT15 system configuration

Bus connection Chapter 2)



Communication Type	Communication Interface on GOT Side	Connected to
Bus connection	Bus connection unit • GT15-75QBUSL • GT15-75QBUS2L • GT15-QBUS • GT15-QBUS2 	• QCPU (Q mode) • Motion controller CPU (Q Series)
	Bus connection unit • GT15-75ABUSL • GT15-75ABUS2L • GT15-ABUS • GT15-ABUS2 	• QnACPU • ACPUCPU • Motion controller CPU (A Series)

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT15 body 	<ul style="list-style-type: none"> • QCPU (Q mode) • QCPU (A mode) • FXCPU • Motion controller CPU (Q Series) • Remote I/O station in the MELSECNET/H network system
	RS-232 Communication Unit • GT15-RS2-9P 	
RS-422 communication	RS-422 conversion unit • GT15-RS2T4-9P 	<ul style="list-style-type: none"> • QnACPU • ACPU • FXCPU • Motion controller CPU (A Series)
	RS-422/485 Communication Unit • GT15-RS4-9S 	



Computer link connection (Chapter 4)

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT15 body 	Serial communication module <ul style="list-style-type: none"> • QCPU (Q mode) • QnACPU • Motion controller CPU (Q Series) • Remote I/O station in the MELSECNET/H network system Computer link module <ul style="list-style-type: none"> • QCPU (A mode) • QnACPU • ACPU • Motion controller CPU (A Series)
	RS-232 Communication Unit <ul style="list-style-type: none"> • GT15-RS2-9P 	
RS-422 communication	RS-422 conversion unit <ul style="list-style-type: none"> • GT15-RS2T4-9P 	
	RS-422/485 Communication Unit <ul style="list-style-type: none"> • GT15-RS4-9S 	



MELSECNET/H connection (PLC to PLC network) (Chapter 5)

Communication Type	Communication Interface on GOT Side	Connected to
Optical loop	MELSECNET/H communication unit <ul style="list-style-type: none"> • GT15-J71LP23-25 	MELSECNET/H network module <ul style="list-style-type: none"> • QCPU (Q mode) • Motion controller CPU (Q Series)
Coaxial bus	MELSECNET/H communication unit <ul style="list-style-type: none"> • GT15-J71BR13 	


MELSECNET/10 connection (PLC to PLC network) (☞ Chapter 6)

Communication Type	Communication Interface on GOT Side	Connected to
Optical loop	<p>MELSECNET/H communication unit (Use the unit in the MELSECNET/10 mode.)</p> <ul style="list-style-type: none"> • GT15-J71LP23-25 <p>MELSECNET/10 communication unit</p> <ul style="list-style-type: none"> • GT15-75J71LP23-Z 	<p>MELSECNET/H network module</p> <ul style="list-style-type: none"> • QCPU (Q mode) • Motion controller CPU (Q Series) <p>MELSECNET/10 network module</p> <ul style="list-style-type: none"> • QCPU (A mode) • QnACPU • ACPU • Motion controller CPU (A Series)
Coaxial bus	<p>MELSECNET/H communication unit (Use the unit in the MELSECNET/10 mode.)</p> <ul style="list-style-type: none"> • GT15-J71BR13 <p>MELSECNET/10 communication unit</p> <ul style="list-style-type: none"> • GT15-75J71BR13-Z 	


CC-Link connection (intelligent device station) (☞ Chapter 7)

Communication Type	Communication Interface on GOT Side	Connected to
CC-Link (Ver. 2)	<p>CC-Link communication unit</p> <ul style="list-style-type: none"> • GT15-J61BT13 	<p>CC-Link module</p> <ul style="list-style-type: none"> • QCPU (Q mode) • QCPU (A mode) • QnACPU • ACPU • Motion controller CPU (Q Series) • Motion controller CPU (A Series)
CC-Link	<p>CC-Link communication unit</p> <ul style="list-style-type: none"> • GT15-J61BT13 <p>(Use the unit in the ver. 1 mode.)</p> <ul style="list-style-type: none"> • GT15-75J61BT13-Z 	

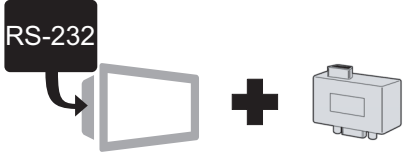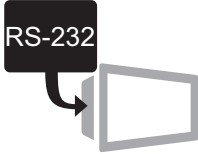

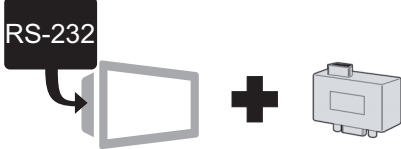


CC-Link connection (via G4) (☞ Chapter 8)

Communication Type	Communication Interface on GOT Side	Connected to
RS-422 communication	<p>RS-422 conversion unit</p> <ul style="list-style-type: none"> • GT15-RS2T4-9P 	<p>Peripheral connection module</p> <ul style="list-style-type: none"> • QCPU (Q mode) • Motion controller CPU (Q Series)

Ethernet connection Chapter 9)

Communication Type	Communication Interface on GOT Side	Connected to
Ethernet	Ethernet communication unit • GT15-J71E71-100 	Ethernet module • QCPU (Q mode) • QCPU (A mode) • QnACPU • ACPU • Motion controller CPU (Q Series) • Motion controller CPU (A Series)

Third party PLC connections Chapter 10 to Chapter 22)

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT15 body 	<ul style="list-style-type: none"> • OMRON PLC • KEYENCE PLC • SHARP PLC • TOSHIBA PLC • JTEKT PLC • HITACHI IES PLC • MATSUSITA PLC • YASKAWA PLC • YOKOGAWA PLC • Allen-Bradley PLC • SIEMENS PLC • HITACHI PLC • FUJI FA PLC
	RS-232 Communication Unit • GT15-RS2-9P 	
RS-422 communication	RS-422 conversion unit • GT15-RS2T4-9P 	<ul style="list-style-type: none"> • OMRON PLC • KEYENCE PLC • SHARP PLC • TOSHIBA PLC • JTEKT PLC • HITACHI IES PLC • YASKAWA PLC • YOKOGAWA PLC • HITACHI PLC • FUJI FA PLC
	RS-422/485 Communication Unit • GT15-RS4-9S 	
Ethernet	Ethernet communication unit • GT15-J71E71-100 	<ul style="list-style-type: none"> • YASKAWA PLC • YOKOGAWA PLC • Allen-Bradly PLC

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

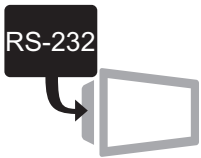



MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

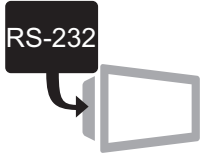

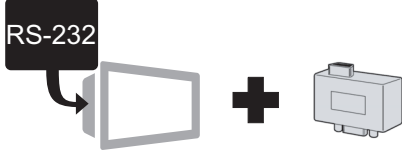



CC-Link CONNECTION (INTELLIGENT DEVICE STATION)



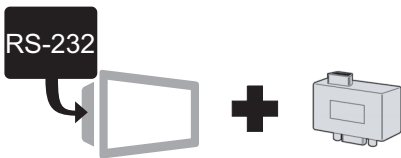





8






CC-Link CONNECTION (Via G4)

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT15 body 	<ul style="list-style-type: none"> • PC • Microcomputer • PLC, etc.
	RS-232 Communication Unit • GT15-RS2-9P 	
RS-422 communication	RS-422 conversion unit • GT15-RS2T4-9P 	
	RS-422/485 Communication Unit • GT15-RS4-9S 	

Temperature controller connection (☞ Chapter 24 to Chapter 30)

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT15 body 	<ul style="list-style-type: none"> • OMRON temperature controller • FUJI SYS temperature controller • YAMATAKE temperature controller • RKC temperature controller • SHINKO TECHNOS indicating controller • YOKOGAWA temperature controller • CHINO controller
	RS-232 Communication Unit • GT15-RS2-9P 	
RS-422 communication	RS-422 conversion unit • GT15-RS2T4-9P 	<ul style="list-style-type: none"> • RKC temperature controller • YOKOGAWA temperature controller • CHINO controller
	RS-422/485 Communication Unit • GT15-RS4-9S 	
RS-485 communication	RS-422/485 Communication Unit • GT15-RS4-9S 	<ul style="list-style-type: none"> • YAMATAKE temperature controller • YOKOGAWA temperature controller
	RS-422/485 Communication Unit • GT15-RS4-TE 	

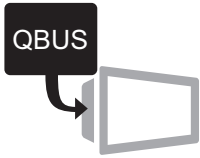

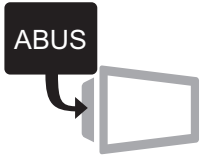

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT15 body 	<ul style="list-style-type: none"> • Inverter • Servo amplifier • Bar code reader • CNC
	RS-422/485 Communication Unit • GT15-RS4-9S 	<ul style="list-style-type: none"> • Inverter • Servo amplifier • CNC
RS-422 communication	RS-422 conversion unit • GT15-RS2T4-9P 	<ul style="list-style-type: none"> • Inverter • Servo amplifier • CNC
	RS-422/485 Communication Unit • GT15-RS4-9S 	
Optical loop	MELSECNET/10 communication unit • GT15-75J71LP23-Z 	<ul style="list-style-type: none"> • CNC
Coaxial bus	MELSECNET/10 communication unit • GT15-75J71BR13-Z 	
CC-Link	CC-Link communication unit • GT15-75J61BT13-Z 	
Ethernet	Ethernet communication unit • GT15-J71E71-100 	

Communication Type	Communication Interface on GOT Side	Connected to
Video signal	Video input unit • GT15-75V4 	<ul style="list-style-type: none"> • Video camera • Vision sensor
RGB signal	RGB input unit • GT15-75R1 	<ul style="list-style-type: none"> • Vision sensor • PC
Video signal RGB signal	Video/RGB input unit • GT15-75V4R1 	<ul style="list-style-type: none"> • Video camera • Vision sensor • PC
RGB signal	RGB output unit • GT15-75ROUT 	<ul style="list-style-type: none"> • External monitor
USB	Printer unit • GT15-PRN 	<ul style="list-style-type: none"> • Printer





1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)

2 GT11 system configuration

Bus connection Chapter 2



Communication Type	Communication Interface on GOT Side	Connected to
BUS connection	Built in GT11 body 	<ul style="list-style-type: none"> • QCPU (Q mode) • Motion controller CPU (Q Series)  (QBUS)
	Built in GT11 body 	<ul style="list-style-type: none"> • QnACPU • ACPU • Motion controller CPU (A Series)  (ABUS)

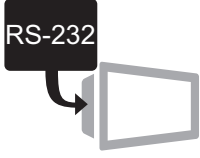Direct connection to CPU Chapter 3

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT11 body 	<ul style="list-style-type: none"> • QCPU (Q mode) • QCPU (A mode) • FXCPU • Motion controller CPU (Q Series) • Remote I/O station in the MELSECNET/H network system* 
RS-422 communication	Built in GT11 body 	<ul style="list-style-type: none"> • QnACPU • ACPU • FXCPU • Motion controller CPU (A Series) 


* GT11 can not access the master station on MELSECNET/H network system. GT11 can access only the connected host station (remote I/O station).

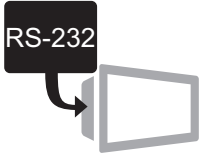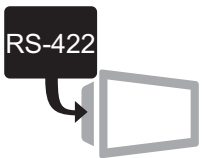Computer link connection Chapter 4)

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT11 body 	Serial communication module <ul style="list-style-type: none"> • QCPU (Q mode) • QnACPU • Motion controller CPU (Q Series) • Remote I/O station in the MELSECNET/H network system*
RS-422 communication	Built in GT11 body 	Computer link module <ul style="list-style-type: none"> • QCPU (A mode) • QnACPU • ACPU • Motion controller CPU (A Series)

* GT11 can not access the master station on MELSECNET/H network system. GT11 can access only the connected host station (remote I/O station).

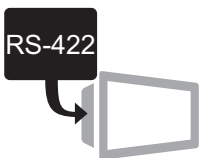CC-Link connection (via G4) Chapter 8)

Communication Type	Communication Interface on GOT Side	Connected to
RS-422 communication	Built in GT11 body 	Peripheral connection module <ul style="list-style-type: none"> • QCPU (Q mode) • Motion controller CPU (Q Series)

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

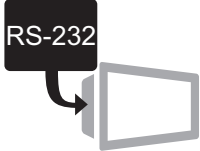



CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)




Third party PLC connections

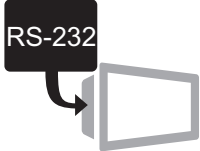(☞ Chapter 10 to Chapter 22)

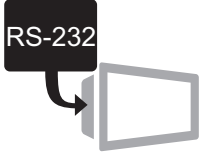

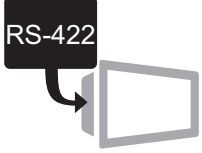

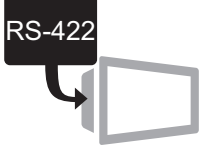

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	<p>Built in GT11 body</p> 	<ul style="list-style-type: none"> • OMRON PLC • KEYENCE PLC • SHARP PLC • TOSHIBA PLC • JTEKT PLC • HITACHI IES PLC • MATSUSHITA PLC • YASKAWA PLC • YOKOGAWA PLC • Allen-Bradley PLC • SIEMENS PLC • HITACHI PLC • FUJI FA PLC 
RS-422 communication	<p>Built in GT11 body</p> 	<ul style="list-style-type: none"> • OMRON PLC • KEYENCE PLC • SHARP PLC • TOSHIBA PLC • JTEKT PLC • HITACHI IES PLC • YASKAWA PLC • YOKOGAWA PLC • HITACHI PLC • FUJI FA PLC 

Microcomputer connection

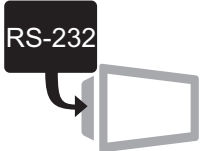

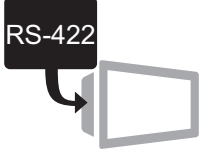

(☞ Chapter 23)

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	<p>Built in GT11 body</p> 	<ul style="list-style-type: none"> • PC • Microcomputer • PLC, <p>etc.</p> 
RS-422 communication	<p>Built in GT11 body</p> 	

Temperature controller connection (☞ Chapter 24 to Chapter 30)

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT11 body 	<ul style="list-style-type: none"> • OMRON temperature controller • FUJI SYS temperature controller • YAMATAKE temperature controller • RKC temperature controller • SHINKO TECHNOS indicating controller • YOKOGAWA temperature controller • CHINO controller 
RS-422 communication	Built in GT11 body 	<ul style="list-style-type: none"> • RKC temperature controller • CHINO controller 
RS-485 communication	Built in GT11 body 	<ul style="list-style-type: none"> • YAMATAKE temperature controller • YOKOGAWA temperature controller 

Other connections (☞ Chapter 31 to Chapter 38)

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT11 body 	<ul style="list-style-type: none"> • Inverter • Servo amplifier • Bar code reader • CNC 
RS-422 communication	Built in GT11 body 	<ul style="list-style-type: none"> • Inverter • Servo amplifier • CNC 

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

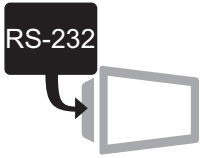

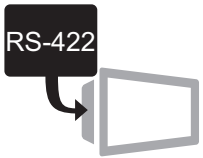


CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

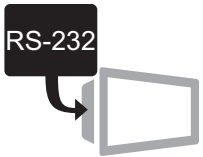

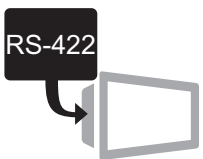

CC-Link CONNECTION (Via G4)

3 GT10 system configuration




Direct connection to CPU Chapter 3)

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT10 body 	<ul style="list-style-type: none"> • QCPU (Q mode) • FXCPU  (RS-232)
RS-422 communication	Built in GT10 body 	<ul style="list-style-type: none"> • QCPU (Q mode) • QnACPU • ACPU • FXCPU  (RS-422)
		<ul style="list-style-type: none"> • FXCPU  (RS-422)

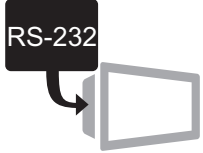

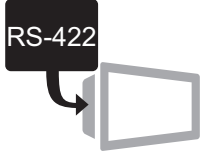

Computer link connection Chapter 4)

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT10 body 	Serial communication module <ul style="list-style-type: none"> • QCPU (Q mode)  (RS-232)
RS-422 communication	Built in GT10 body 	Serial communication module <ul style="list-style-type: none"> • QCPU (Q mode) • QnACPU Computer link module <ul style="list-style-type: none"> • QnACPU  (RS-422)

Microcomputer connection Chapter 23)

Communication Type	Communication Interface on GOT Side	Connected to
RS-232 communication	Built in GT10 body 	<ul style="list-style-type: none"> • PC • Microcomputer • PLC, etc.  (RS-232)
RS-422 communication	Built in GT10 body 	

Third party PLC connections (☞ Chapter 10)

Communication Type	Communication Interface on GOT Side	Connected to	
RS-232 communication	Built in GT10 body 	<ul style="list-style-type: none"> • OMRON PLC • Allen-Bradley PLC • SIEMENS PLC 	 (RS-232)
RS-422 communication	Built in GT10 body 	<ul style="list-style-type: none"> • OMRON PLC 	 (RS-422)

4 Handy GOT

Connect the handy GOT and the controllers (PLC CPU, temperature controller, inverter, etc.), referring to the following manual.

☞ Handy GOT User's Manual

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)



MITSUBISHI PLC CONNECTIONS

Chapter 2 BUS CONNECTION

Chapter 3 DIRECT CONNECTION TO CPU

Chapter 4 COMPUTER LINK CONNECTION

Chapter 5 MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

Chapter 6 MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

Chapter 7 CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

(Continued to next page)

Chapter 8 CC-Link CONNECTION (Via G4)

Chapter 9 ETHERNET CONNECTION

BUS CONNECTION



2.1 System Configuration page 2-2

This section describes the equipment and cables needed for bus connection.

Select a system suitable for your application.

2.2 Preparatory Procedures for Monitoring page 2-26

This section describes the procedures to be followed before monitoring in bus connection.

The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

2.3 Precautions page 2-44

This section provides the precautions on bus connection. Be sure to read this when establishing a bus connection.

2.4 Communication Check Sheet . . . page 2-51

The items to be checked before actual communication by bus connection can be written down to the check sheet.

2.1 System Configuration

Select a system configuration suitable for your application.



- (1) Conventions used in this section
Numbers (e.g. ①) of ⑦ System configuration and connection conditions correspond to the numbers (e.g. ①) of ② System equipment.
Use these numbers as references when confirming models and applications.
- (2) About connection cables
Select a proper connection cable whose length satisfies the distance conditions according to the connection conditions.



Write Check Sheet



Section 2.4
Communication
Check Sheet

Write down the items selected in this section to the check sheet.



OS selection


- Communication driver: Name of the communication driver



Unit selection

- Communication module: Model name
 - Bus extension connector box/Bus connector conversion box: Model name
-

2.1.1 Connecting to QCPU (Q mode)



1 System configurations and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance from main base unit to 1st GOT	
1	13.2m or less	
	More than 13.2m	
2 to 5	13.2m or less	
	More than 13.2m*3	


*1 When an extension base unit is used, this includes the extension cable length (between the base unit and extension base unit).

*2 Attach the bus extension connector box to the extension connector of the base unit as follows.

Also, connect the connection cable to the bus extension connector box.

When using no extension base unit : Attach it to the main base unit.

When using the extension base unit : Attach it to the extension base unit on the last stage.



*3 When connecting 3 or more GOTs, the overall cable length is restricted.

☞ Section 2.3 9 When connecting to a QCPU (Q mode)

*4 The overall extension cable length must be 13.2m or less.

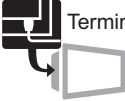







Bus extension connector box

When installing the 1st GOT 13.2m or more away from the main base unit, the bus extension connector box is required.

2 System equipment

(1) GOT

Image	No.	Name	Model name
 Terminal	1	Bus connection unit* ¹ • For terminal GOT	GT15-75QBUSL, GT15-75QBUS2L, GT15-QBUS, GT15-QBUS2 
 Q Bus	1	Bus interface (Built into GOT)* ²	GT1155-QTBDQ, GT1155-QSBDQ, GT1150-QLBDQ 
 Intermediary	2	Bus connection unit* ¹ • For intermediary GOT	GT15-75QBUS2L, GT15-QBUS2 


*1 The bus connection unit

GT15-75QBUSL, GT15-QBUS: Used for a terminal GOT. (Not available for an intermediary GOT.)


GT15-75QBUS2L, GT15-QBUS2: Used for an intermediary GOT. (Can be used for a terminal GOT.)

*2 About the connection of multiple GOTs


When connecting to multiple GOTs with GT15 and GT11 mixed, use GT11 as a terminal.

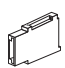Image	No.	Name	Model name
	3	Bus extension connector box* ³ • Unit used for extending distance between GOT and base unit	A9GT-QCNB

*3 Set the bus extension connector box to the same Stage No. as that of the GOT unit.
For details on the Stage No. setting, refer to the following.

 Section 2.2.3 Setting communication interface (Communication settings)

(2) Cable

Image	No.	Name	Model name
	4	Connection cable • Between base unit and GOT	GT15-QC06B(0.6m), GT15-QC12B(1.2m), GT15-QC30B(3m), GT15-QC50B(5m), GT15-QC100B(10m)
	5	Connection cable • Between bus extension connector box and GOT • Between GOTs	GT15-QC06B(0.6m), GT15-QC12B(1.2m), GT15-QC30B(3m), GT15-QC50B(5m), GT15-QC100B(10m), GT15-QC150BS(15m), GT15-QC200BS(20m), GT15-QC250BS(25m), GT15-QC300BS(30m), GT15-QC350BS(35m)

2.1.2 Connecting to QnACPU or AnCPU type

Communication driver
Bus(A/QnA) MAX 3 MAX 36.6m
30.0m

1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs *2	Distance from main base unit to 1st GOT	
1	6.6m or less	
	More than 6.6m	
2	6.6m or less	
	More than 6.6m	
3	6.6m or less	

*1 When an extension base unit is used, this includes the extension cable length (between the base unit and the extension base unit).

*2 The number of connectable GOTs is limited by the type of the connected CPU and the number of the intelligent function modules.

☞ Section 2.3 **11** When connecting multiple GOTs






Bus connector conversion box

When installing the 1st GOT 6.6m or more away from the main base unit, the bus connector conversion box is required.

2 System equipment

(1) GOT

Image	No.	Name	Model name
 Terminal	1	Bus connection unit* ¹ • For terminal GOT	GT15-75ABUSL, GT15-75ABUS2L, GT15-ABUS GT15-ABUS2
 Q Bus	1	Bus interface (Built into GOT)* ²	GT1155-QTBDA, GT1155-QSBDA, GT1150-QLBDA
 Intermediary	2	Bus connection unit* ¹ • For intermediary GOT	GT15-75ABUS2L, GT15-ABUS2

*1 The bus connection unit


GT15-75ABUSL, GT15-ABUS: Used for a terminal GOT. (Not available for an intermediary GOT.)

GT15-75ABUS2L, GT15-ABUS2: Used for an intermediary GOT. (Can be used for a terminal GOT.)


*2 About the connection of multiple GOTs

When connecting to multiple GOTs with GT15 and GT11 mixed, use GT11 as a terminal.

(2) PLC

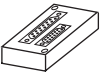Image	No.	Name	Model name
	3	Bus connector conversion box • Unit used for converting connection cable connector and extending distance between GOT and base unit	A7GT-CNB

(3) Cable

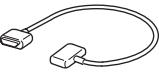
Image	No.	Name	Model name
	4	Connection cable • Between base unit and GOT	GT15-C12NB(1.2m), GT15-C30NB(3m), GT15-C50NB(5m)
	5	Connection cable* ³ * ⁴ * ⁵ • Between bus connector conversion box and GOT	GT15-C100EXSS-1(10m), GT15-C200EXSS-1(20m), GT15-C300EXSS-1(30m)
	6	Connection cable • Between base unit and bus connector conversion box	GT15-AC06B(0.6m), GT15-AC12B(1.2m), GT15-AC30B(3m), GT15-AC50B(5m)
	7	Connection cable* ⁴ • Between GOTs	GT15-C07BS(0.7m), GT15-C12BS(1.2m), GT15-C30BS(3m), GT15-C50BS(5m), GT15-C100BS(10m), GT15-C200BS(20m), GT15-C300BS(30m)

*3 Connect the GT15-C □ EXSS-1 connectors as follows:

Connector [COM1] → PLC CPU side

Connector [COM2] → GOT side

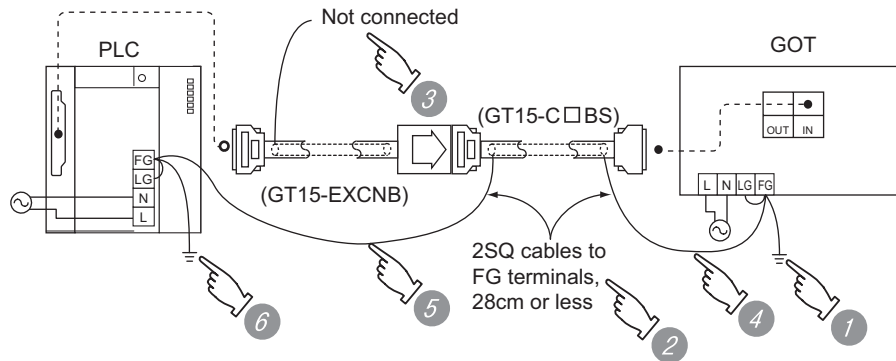- *4 When using GT15-C □ EXSS-1 or GT15-C □ BS, perform the grounding in the following steps.
 (1) When using GT15-C □ EXSS-1




- 1 Connect the LG and FG terminals of the terminal block on the GOT unit power and ground them with a cable.
- 2 Use the GT15-C □ BS's FG cable of 28cm or less.
- 3 Do not connect the GT15-EXCNCB's FG ground cable.
- 4 Connect the GT15-C □ BS's FG cable on the GOT side to FG of the GOT unit power's terminal block.
- 5 Connect the GT15-C □ BS's FG cable on the PLC side to FG of the PLC's power supply module.
- 6 Connect the LG and FG terminals of the terminal block on the PLC and ground them with a cable.


- (2) When using GT15-C □ BS
 Follow the GOT side grounding steps in (1) above for both GOTs.

- *5 About GT15-C □ EXSS-1

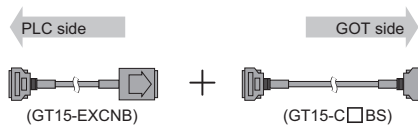- It is composed of GT15-EXCNCB (0.5m) and GT15-C □ BS (10 to 30m).
- Calculate the cable length based on GT15-C100EXSS-1 (10m), GT15-C200EXSS-1 (20m) and GT15-C300EXSS-1 (30m).
- Connect the connectors as follows:
 GX15-EXCNCB → PLC CPU side
 GT15-C □ BS → GOT side



2.1.3 Connecting to QnASCPU or AnSCPU type



1 System configuration and connection conditions

(1) When using no extension base unit

Connection conditions		System configuration
Number of GOTs *1	Distance from main base unit to 1st GOT	
1	5m or less	
	More than 5m, 30m or less	
	More than 30m	

(Continued to next page)

*1 The number of connectable GOTs is limited by the type of the connected CPU and the number of the intelligent function modules.

➡ Section 2.3 **11** When connecting multiple GOTs

Connection conditions		System configuration
Number of GOTs *1	Distance from main base unit to 1st GOT	
2	5m or less	
	More than 5m	
3	5m or less	

*1 The number of connectable GOTs is limited by the type of the connected CPU and the number of the intelligent function modules.

☞ Section 2.3 11 When connecting multiple GOTs

1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)

(2) When using the extension base unit

Connection conditions		System configuration
Number of GOTs *2	Distance from main base unit to 1st GOT	
1	6m or less	<p>(a) (b)</p> <p>4 Connection cable</p> <p>(a)+(b)=MAX6m^{*1}</p>
	More than 6m	<p>(a) (b)</p> <p>5 Connection cable</p> <p>(b)=MAX30m</p> <p>(a)+(b)=MAX36m^{*1}</p>
		<p>(a) (b) (c)</p> <p>3 Bus connector conversion box</p> <p>6 Connection cable</p> <p>5 Connection cable</p> <p>(a)+(b)=MAX6m^{*1}</p> <p>(a)+(b)+(c)=MAX36m^{*1}</p>

(Continued to next page)

*1 This includes the extension cable length (between the base unit and the extension base unit).

*2 The number of connectable GOTs is limited by the type of the connected CPU and the number of the intelligent function modules.

☞ Section 2.3 **77** When connecting multiple GOTs

Connection conditions		System configuration
Number of GOTs *2	Distance from main base unit to 1st GOT	
2	6m or less	
	More than 6m	
3	6m or less	

*1 This includes the extension cable length (between the base unit and the extension base unit).

*2 The number of connectable GOTs is limited by the type of the connected CPU and the number of the intelligent function modules.

☞ Section 2.3 **11** When connecting multiple GOTs




Point

Bus connector conversion box

When installing the 1st GOT 30m or more away from the main base unit, the bus connector conversion box is required.

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	Bus connection unit*1 • For terminal GOT	GT15-75ABUSL, GT15-75ABUS2L, GT15-ABUS GT15-ABUS2
	1	Bus interface (Built into GOT)*2	GT1155-QTBDA, GT1155-QSBDA, GT1150-QLBDA
	2	Bus connection unit*1 • For intermediary GOT	GT15-75ABUS2L, GT15-ABUS2

*1 The bus connection unit


GT15-75ABUSL, GT15-ABUS: Used for a terminal GOT. (Not available for an intermediary GOT.)

GT15-75ABUS2L, GT15-ABUS2: Used for an intermediary GOT. (Can be used for a terminal GOT.)


*2 About the connection of multiple GOTs

When connecting to multiple GOTs with GT15 and GT11 mixed, use GT11 as a terminal.

(2) PLC

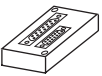Image	No.	Name	Model name
	3	Bus connector conversion box • Unit used for converting connection cable connector and extending distance between GOT and base unit	A7GT-CNB

(3) Cable

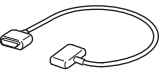
Image	No.	Name	Model name
	4	Connection cable • Between base unit and GOT	GT15-A1SC07B(0.7m), GT15-A1SC12B(1.2m), GT15-A1SC30B(3m), GT15-A1SC50B(5m)
	5	Connection cable*3*4*5 • Between base unit and bus conversion box • Between bus connector conversion box and GOT	GT15-C100EXSS-1(10m), GT15-C200EXSS-1(20m), GT15-C300EXSS-1(30m)
	6	Connection cable • Between base unit and bus connector conversion box	GT15-A1SC05NB(0.45m), GT15-A1SC07NB(0.7m), GT15-A1SC30NB(3m), GT15-A1SC50NB(5m)
	7	Connection cable*4 • Between GOTs	GT15-C07BS(0.7m), GT15-C12BS(1.2m), GT15-C30BS(3m), GT15-C50BS(5m), GT15-C100BS(10m), GT15-C200BS(20m), GT15-C300BS(30m)

*3 Connect the GT15-C □ EXSS-1 connectors as follows:

Connector [COM1] → PLC CPU side

Connector [COM2] → GOT side

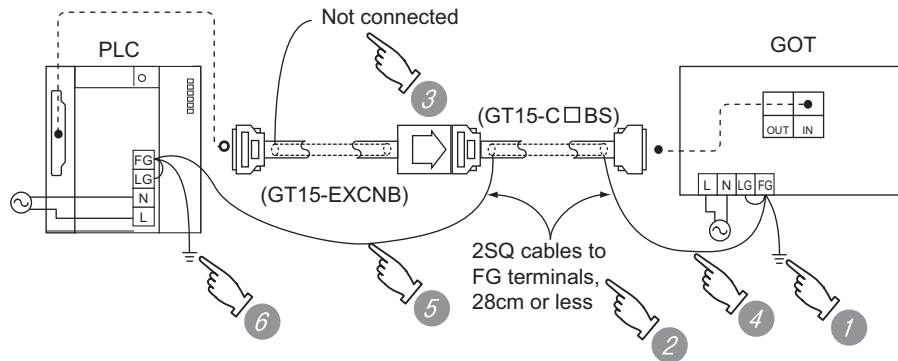- *4 When using GT15-C □ EXSS-1 or GT15-C □ BS, perform the grounding in the following steps.
 (1) When using GT15-C □ EXSS-1




- 1 Connect the LG and FG terminals of the terminal block on the GOT unit power and ground them with a cable.
- 2 Use the GT15-C □ BS's FG cable of 28cm or less.
- 3 Do not connect the GT15-EXCNCB's FG ground cable.
- 4 Connect the GT15-C □ BS's FG cable on the GOT side to FG of the GOT unit power's terminal block.
- 5 Connect the GT15-C □ BS's FG cable on the PLC side to FG of the PLC's power supply module.
- 6 Connect the LG and FG terminals of the terminal block on the PLC and ground them with a cable.


(2) When using GT15-C □ BS
 Follow the GOT side grounding steps in (1) above for both GOTs.

- *5 About GT15-C □ EXSS-1

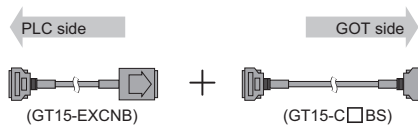- It is composed of GT15-EXCNCB (0.5m) and GT15-C □ BS (10 to 30m).
- Calculate the cable length based on GT15-C100EXSS-1 (10m), GT15-C200EXSS-1 (20m) and GT15-C300EXSS-1 (30m).
- Connect the connectors as follows:
 GX15-EXCNCB → PLC CPU side
 GT15-C □ BS → GOT side



2.1.4 Connecting to A0J2HCPU



1 System configurations and connection conditions

Connection conditions		System configuration
Number of GOTs*1	Distance from main base unit to 1st GOT	
1	1m or less	

*1 The number of connectable GOTs is restricted depending on the number of intelligent function modules mounted to the A0J2HCPU.

➔ Section 2.3 // When connecting multiple GOTs

2 System equipment

(1) GOT

Image	No.	Name	Model name
Terminal	1	Bus connection unit • For terminal GOT	GT15-75ABUSL, GT15-75ABUS2L, GT15-ABUS, GT15-ABUS2
A Bus	1	Bus interface (Built into GOT)*2	GT1155-QTBDA, GT1155-QSBDA, GT1150-QLBDA


(2) PLC

Image	No.	Name	Model name
	2	Power supply module • Module that supplies power to A0J2HCPU	A0J2-PW

(3) Cable


Image	No.	Name	Model name
	3	Connection cable • Between A0J2HCPU and Power supply module	A0J2C03(0.3m), A0J2C06(0.55m), A0J2C10(1m), A0J2C20(2m)
	4	Connection cable • Between Power supply module and GOT	GT15-J2C10B(1m)

2.1.5 Connecting to motion controller CPU (Q Series)



A motion controller CPU (Q Series) mounted to the multiple CPU system of the QCPU (Q mode) can be monitored.

The system configuration, connection conditions, and system equipment for connection to a motion controller CPU (Q Series) are the same as those for connection to the QCPU (Q mode).

( Section 2.1.1 Connecting to QCPU (Q mode))

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION
TO CPU

4

COMPUTER LINK
CONNECTION

5

MELSECNET/H
CONNECTION (PLC TO
PLC NETWORK)

6

MELSECNET/10
CONNECTION (PLC TO
PLC NETWORK)


7

CC-Link CONNECTION
(INTELLIGENT DEVICE
STATION)

8

CC-Link CONNECTION
(Via G4)

2.1.6 Connecting to motion controller CPU (A273UCPU, A273UHCPU(-S3), A373UCPU(-S3))



1 System configuration and connection conditions

(1) When using no extension base unit

Connection conditions		System configuration
Number of GOTs *1	Distance from main base unit to 1st GOT	
1	2.5m or less	
	More than 2.5m	
2	2.5m or less	
	More than 2.5m	
3	2.5m or less	

*1 The number of connectable GOTs is limited by the type of the connected CPU and the number of the intelligent function modules.

➡ Section 2.3 77 When connecting multiple GOTs

(2) When using the extension base unit

Connection conditions		System configuration
Number of GOTs *2	Distance from main base unit to 1st GOT	
1	6.6m or less	
	More than 6.6m	
2	6.6m or less	
	More than 6.6m	
3	6.6m or less	

*1 This includes the extension cable length (between the base unit and the extension base unit).

*2 The number of connectable GOTs is limited by the type of the connected CPU and the number of the intelligent function modules.

☞ Section 2.3 **11** When connecting multiple GOTs






Bus connector conversion box

A bus connector conversion box is required when installing the first GOT in a place 2.5m or more away from the main base unit (6.6m or more when using an extension base unit.)

1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)


2 System equipment

(1) GOT


Image	No.	Name	Model name
	1	Bus connection unit* ¹ * ² • For terminal GOT	GT15-75ABUSL, GT15-75ABUS2L, GT15-ABUS GT15-ABUS2
	1	Bus interface (Built into GOT) * ²	GT1155-QTBDA, GT1155-QSBDA, GT1150-QLBDA
	2	Bus connection unit* ¹ * ² • For intermediary GOT	GT15-75ABUS2L, GT15-ABUS2

- *1 About the bus connection unit
GT15-75ABUSL, GT15-ABUS: Used for a terminal GOT. (Not available for an intermediary GOT.)
GT15-75ABUS2L, GT15-ABUS2: Used for an intermediary GOT. (Can be used for a terminal GOT.)
- *2 About the connection of multiple GOTs
When connecting to multiple GOTs with GT15 and GT11 mixed, use GT11 as a terminal.

(2) PLC

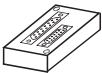Image	No.	Name	Model name
	3	Bus connector conversion box • Unit used for converting connection cable connector and extending distance between GOT and base unit	A7GT-CNB

(3) Cable

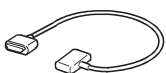Image	No.	Name	Model name
	4	Connection cable* ⁶ • Between base unit and GOT	GT15-A370C12B-S1(1.2m), GT15-A370C25B-S1(2.5m)
	5	Connection cable* ⁶ • Between base unit and GOT • Between base unit and bus connector conversion box • Between base units	GT15-A370C12B(1.2m), GT15-A370C25B(2.5m)
	6	Connection cable • Between base unit and bus connector conversion box	GT15-AC06B(0.6m), GT15-AC12B(1.2m), GT15-AC30B(3m), GT15-AC50B(5m)
	7	Connection cable* ³ * ⁴ * ⁵ • Between bus connector conversion box and GOT	GT15-C100EXSS-1(10m), GT15-C200EXSS-1(20m), GT15-C300EXSS-1(30m)
	8	Connection cable* ⁴ • Between GOTs	GT15-C07BS(0.7m), GT15-C12BS(1.2m), GT15-C30BS(3m), GT15-C50BS(5m), GT15-C100BS(10m), GT15-C200BS(20m), GT15-C300BS(30m)
	9	Connection cable Between base unit and GOT	GT15-C12NB(1.2m), GT15-C30NB(3m), GT15-C50NB(5m)

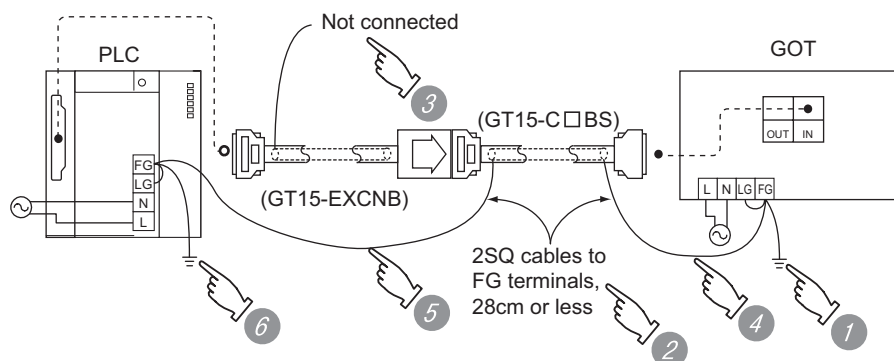
*3 Connect the GT15-C □ EXSS-1 connectors as follows:

Connector [COM1] → PLC CPU side

Connector [COM2] → GOT side

*4 When using GT15-C □ EXSS-1 or GT15-C □ BS, perform the grounding in the following steps.

(1) When using GT15-C □ EXSS-1



① Connect the LG and FG terminals of the terminal block on the GOT unit power and ground them with a cable.

② Use the GT15-C □ BS's FG cable of 28cm or less.

③ Do not connect the GT15-EXCNB's FG ground cable.

④ Connect the GT15-C □ BS's FG cable on the GOT side to FG of the GOT unit power's terminal block.

⑤ Connect the GT15-C □ BS's FG cable on the PLC side to FG of the PLC's power supply module.

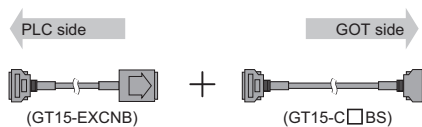
⑥ Connect the LG and FG terminals of the terminal block on the PLC and ground them with a cable.

(2) When using GT15-C □ BS

Follow the GOT side grounding steps in (1) above for both GOTs.


*5 About GT15-C □ EXSS-1

- It is composed of GT15-EXCNB (0.5m) and GT15-C □ BS (10 to 30m).
- Calculate the cable length based on GT15-C100EXSS-1 (10m), GT15-C200EXSS-1 (20m) and GT15-C300EXSS-1 (30m).
- Connect the connectors as follows:
GT15-EXCNB → PLC CPU side
GT15-C □ BS → GOT side



*6 Connect the cable to the connector dedicated to PLC extension.

2.1.7 Connecting to motion controller CPU (A171SHCPUN, A172SHCPUN, A173UHCPU(-S1))



1 System configuration and connection conditions

(1) When using no extension base unit

Connection conditions		System configuration
Number of GOTs *1	Distance from main base unit to 1st GOT	
1	3m or less	<p>4 Connection cable MAX3m</p>
	More than 3m, 30m or less	<p>5 Connection cable MAX30m</p>
	More than 3m, 33m or less	<p>6 Connection cable MAX3m</p> <p>3 Bus connector conversion box</p> <p>5 Connection cable MAX33m</p>

(Continued to next page)

*1 The number of connectable GOTs is limited by the type of the connected CPU and the number of the intelligent function modules.

➡ Section 2.3 **77** When connecting multiple GOTs

Connection conditions		System configuration
Number of GOTs *1	Distance from main base unit to 1st GOT	
2	3m or less	
	More than 3m	
3	3m or less	

*1 The number of connectable GOTs is limited by the type of the connected CPU and the number of the intelligent function modules.

☞ Section 2.3 **11** When connecting multiple GOTs

1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)

(2) When using the extension base unit^{*1}

Connection conditions		System configuration
Number of GOTs ^{*3}	Distance from main base unit to 1st GOT	
1	3m or less	<p>(a) (b)</p> <p>4 Connection cable</p> <p>$(a)+(b)=MAX3m^{*2}$</p>
	More than 3m	<p>(a) (b)</p> <p>5 Connection cable</p> <p>1</p> <p>$(b)=MAX30m$</p> <p>$(a)+(b)=MAX33m^{*2}$</p>
	More than 3m	<p>(a) (b) (c)</p> <p>6 Connection cable</p> <p>3 Bus connector conversion box</p> <p>5 Connection cable</p> <p>1</p> <p>$(a)+(b)=MAX3m^{*2}$</p> <p>$(a)+(b)+(c)=MAX33m^{*2}$</p>

(Continued to next page)

*1 Use the A168B extension base unit for connecting GOTs.

*2 This includes the extension cable length (between the base unit and the extension base unit).

*3 The number of connectable GOTs is limited by the type of the connected CPU and the number of the intelligent function modules.

☞ Section 2.3 11 When connecting multiple GOTs

Connection conditions		System configuration
Number of GOTs *3	Distance from main base unit to 1st GOT	
2	3m or less	<p>(a) (b) (c)</p> <p>4 Connection cable 7 Connection cable</p> <p>$(a)+(b)=\text{MAX}3\text{m}^*2$</p> <p>$(a)+(b)+(c)=\text{MAX}33\text{m}^*2$</p>
	More than 3m	<p>(a) (b) (c)</p> <p>5 Connection cable 7 Connection cable</p> <p>$(b)+(c)=\text{MAX}30\text{m}$</p> <p>$(a)+(b)+(c)=\text{MAX}33\text{m}^*2$</p>
		<p>(a) (b) (c) (d)</p> <p>6 Connection cable 3 Bus connector conversion box 5 Connection cable 7 Connection cable</p> <p>$(a)+(b)=\text{MAX}3\text{m}^*2$</p> <p>$(c)+(d)=\text{MAX}30\text{m}$</p> <p>$(a)+(b)+(c)+(d)=\text{MAX}33\text{m}^*2$</p>
3	3m or less	<p>(a) (b) (c) (d)</p> <p>4 Connection cable 7 Connection cable 7 Connection cable</p> <p>$(a)+(b)=\text{MAX}3\text{m}^*2$</p> <p>$(c)+(d)=\text{MAX}30\text{m}$</p> <p>$(a)+(b)+(c)+(d)=\text{MAX}33\text{m}^*2$</p>

*1 Use the A168B extension base unit for connecting GOTs.

*2 This includes the extension cable length (between the base unit and the extension base unit).

*3 The number of connectable GOTs is limited by the type of the connected CPU and the number of the intelligent function modules.

☞ Section 2.3 **11** When connecting multiple GOTs


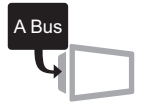



Bus connector conversion box

When installing the 1st GOT 30m or more away from the main base unit, the bus connector conversion box is required.


2 System equipment

(1) GOT


Image	No.	Name	Model name
	1	Bus connection unit* ¹ * ² • For terminal GOT	GT15-75ABUSL, GT15-75ABUS2L, GT15-ABUS GT15-ABUS2
	1	Bus interface (Built into GOT) * ²	GT1155-QTBDA, GT1155-QSBDA, GT1150-QLBDA
	2	Bus connection unit* ¹ * ² • For intermediary GOT	GT15-75ABUS2L, GT15-ABUS2

- *1 About the bus connection unit
GT15-75ABUSL, GT15-ABUS: Used for a terminal GOT. (Not available for an intermediary GOT.)
GT15-75ABUS2L, GT15-ABUS2: Used for an intermediary GOT. (Can be used for a terminal GOT.)
- *2 About the connection of multiple GOTs
When connecting to multiple GOTs with GT15 and GT11 mixed, use GT11 as a terminal.

(2) PLC

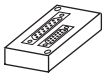
Image	No.	Name	Model name
	3	Bus connector conversion box • Unit used for converting connection cable connector and extending distance between GOT and base unit	A7GT-CNB

(3) Cable

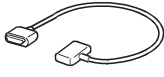Image	No.	Name	Model name
	4	Connection cable • Between base unit and GOT	GT15-A1SC07B(0.7m), GT15-A1SC12B(1.2m), GT15-A1SC30B(3m)
	5	Connection cable* ³ * ⁴ * ⁵ • Between base unit and GOT • Between bus connector conversion box and GOT	GT15-C100EXSS-1(10m), GT15-C200EXSS-1(20m), GT15-C300EXSS-1(30m)
	6	Connection cable • Between base unit and bus connector conversion box	GT15-A1SC05NB(0.45m), GT15-A1SC07NB(0.7m), GT15-A1SC30NB(3m)
	7	Connection cable* ⁴ • Between GOTs	GT15-C07BS(0.7m), GT15-C12BS(1.2m), GT15-C30BS(3m), GT15-C50BS(5m), GT15-C100BS(10m), GT15-C200BS(20m), GT15-C300BS(30m)

- *3 Connect the GT15-C □ EXSS-1 connectors as follows:
Connector [COM1] → PLC CPU side
Connector [COM2] → GOT side

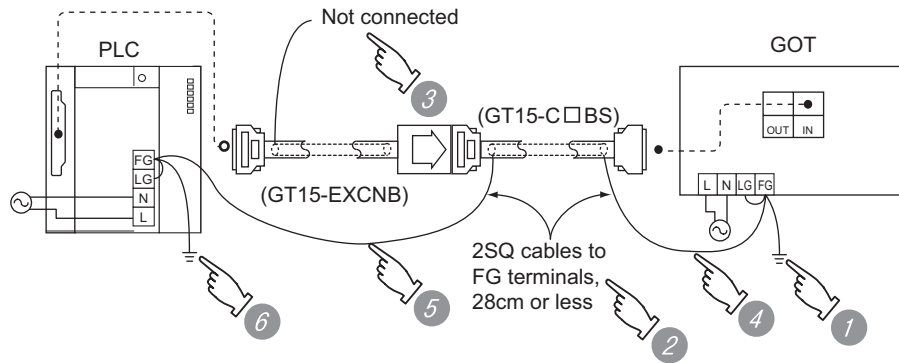- *4 When using GT15-C □ EXSS-1 or GT15-C □ BS, perform the grounding in the following steps.
 (1) When using GT15-C □ EXSS-1




- 1 Connect the LG and FG terminals of the terminal block on the GOT unit power and ground them with a cable.
- 2 Use the GT15-C □ BS's FG cable of 28cm or less.
- 3 Do not connect the GT15-EXCNCB's FG ground cable.
- 4 Connect the GT15-C □ BS's FG cable on the GOT side to FG of the GOT unit power's terminal block.
- 5 Connect the GT15-C □ BS's FG cable on the PLC side to FG of the PLC's power supply module.
- 6 Connect the LG and FG terminals of the terminal block on the PLC and ground them with a cable.

(2) When using GT15-C □ BS

Follow the GOT side grounding steps in (1) above for both GOTs.


- *5 About GT15-C □ EXSS-1

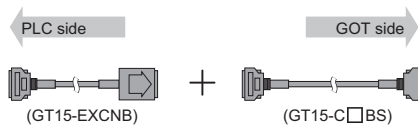- It is composed of GT15-EXCNCB (0.5m) and GT15-C □ BS (10 to 30m).
- Calculate the cable length based on GT15-C100EXSS-1 (10m), GT15-C200EXSS-1 (20m) and GT15-C300EXSS-1 (30m).
- Connect the connectors as follows:
 GX15-EXCNCB → PLC CPU side
 GT15-C □ BS → GOT side




2.2 Preparatory Procedures for Monitoring

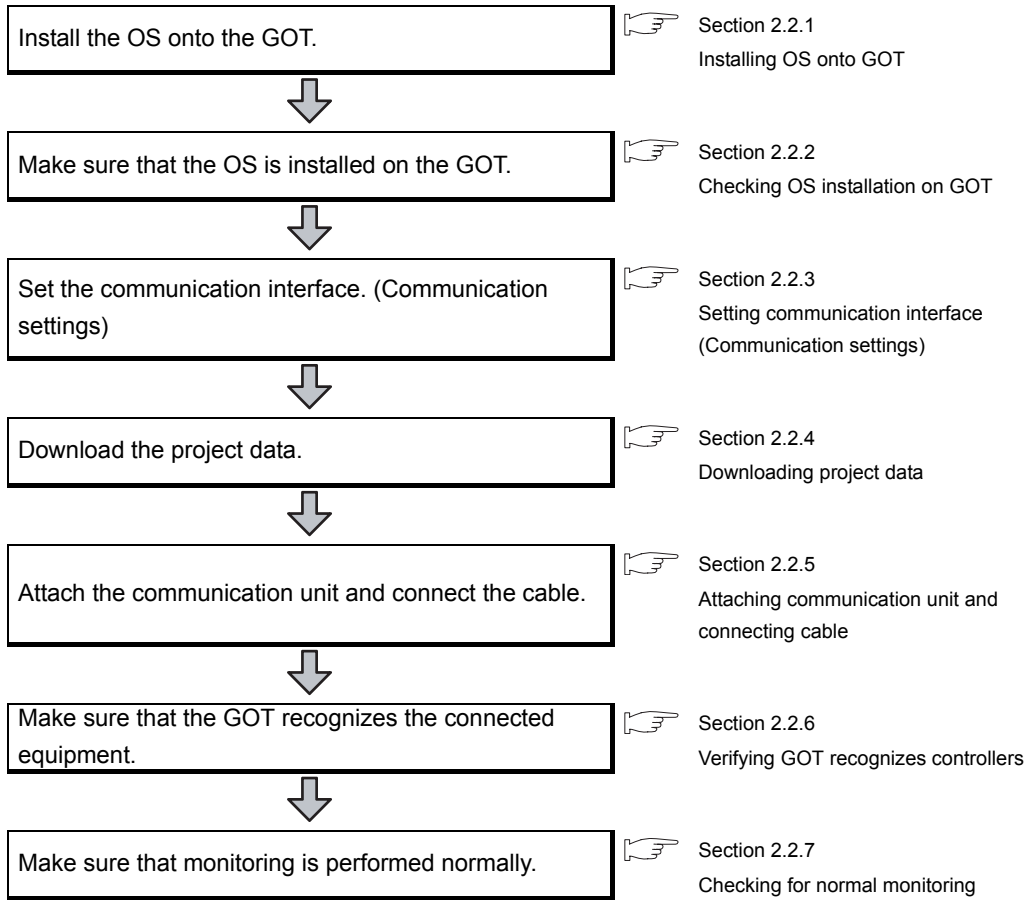
The following shows the procedures to be taken before monitoring and corresponding reference sections.



2.2.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

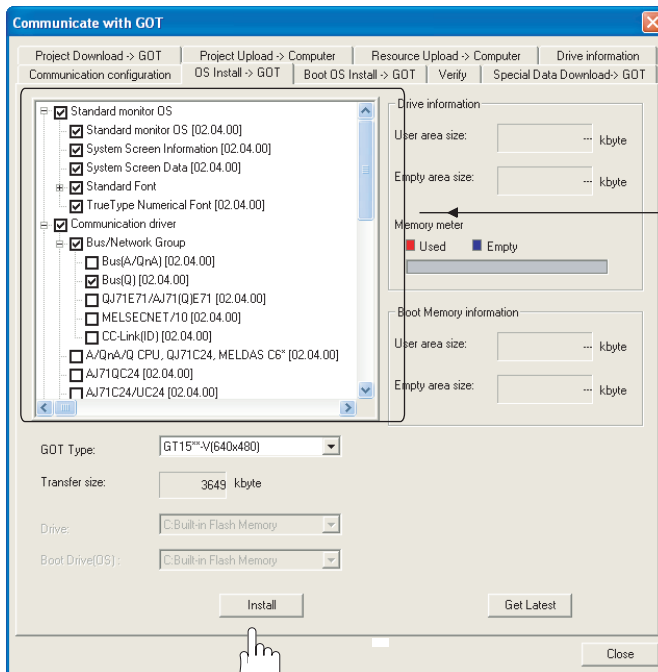 GT Designer2 Version □ Basic Operation/Data Transfer Manual



Check either of the following under the Communication driver.

- When connecting to QCPU (Q mode) or motion controller CPU (Q Series): Bus (Q)
- When connecting to other than the above: Bus (A/QnA)

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.



Write Check Sheet



Section 2.4

Communication
Check Sheet

Write down the items selected in this section to the check sheet.




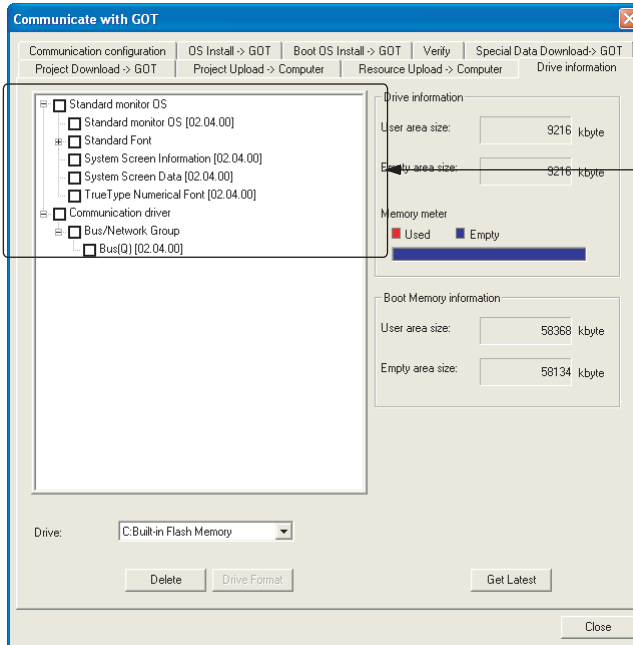
OS selection

- Standard monitor OS : Version, font
- Communication driver : Version
- Option OS : Name of the option OS, version

2.2.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver (either of the following):
 - Bus(Q)
 - Bus(A/QnA)



Check

After making sure at the Drive information that the OS has been successfully installed on the GOT, mark the check sheet.



OS selection (Standard monitor OS, Communication driver, Option OS)



Section 2.4

Communication

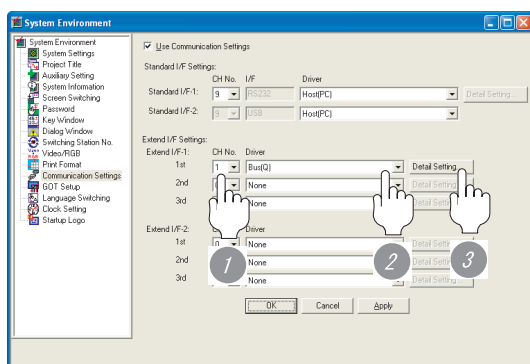
Check Sheet


2.2.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set "1" to the channel No. used.
- 2 Set the following to the driver.
 - When connecting to QCPU (Q mode) or motion controller CPU (Q Series): Bus(Q)
 - When connecting to other than the above: Bus(A/QnA)
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings


(1) Bus(Q)

Item	Description	Range
Stage No.	<Default: 1>	1 to 7
Slot No.	<Default: 0>	0 to 9
Monitor	<Default: Normal>	High/Normal/Low

(2) Bus(A/QnA)

Item	Description	Range
Stage No.	<Default: 1>	1 to 7
Slot No.	<Default: 0>	0 to 7

Point

- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's [Communication Settings] after downloading [Communication Settings] of project data.
For details on the Utility, refer to the following manual.
 GT User's Manual
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.
- (3) When changing Stage No. and Slot No.
Change these settings with the PLC CPU turned OFF, and then reapply the power to the PLC CPU and GOT.
Failure to do so may generate a system alarm (No.487).

3 Setting Stage No. and Slot No.



Before setting Stage No. and Slot No.

The PLC CPU recognizes the GOT as follows.

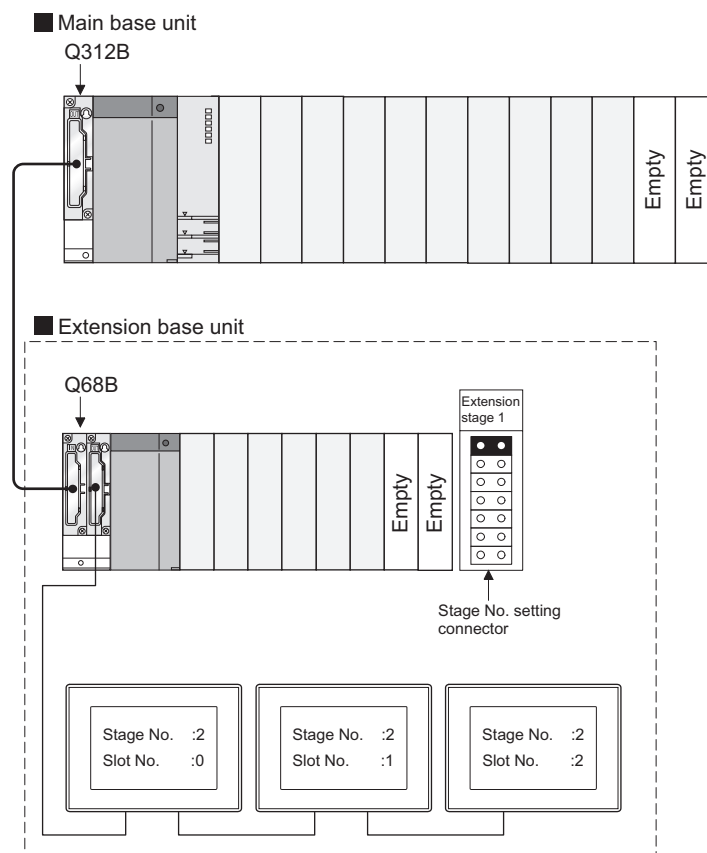
- QCPU (Q mode) : Intelligent function module of 16 I/O points
- Other than QCPU (Q mode) : Intelligent function module of 32 I/O points

At the [Communication Detail Settings], assign the GOT to an empty I/O slot on the PLC CPU.

(1) When connecting to QCPU (Q mode)

Set an additional stage (16 points x 10 slots) for GOT connection, and assign a GOT to one of the I/O slots.

(The GOT cannot be assigned to empty slots of the main base unit or extension base unit.)



When using the bus extension connector box

Set the Stage No. switch on the bus extension connector box to the same Stage No. as the GOT.

For setting details, refer to the following manual:

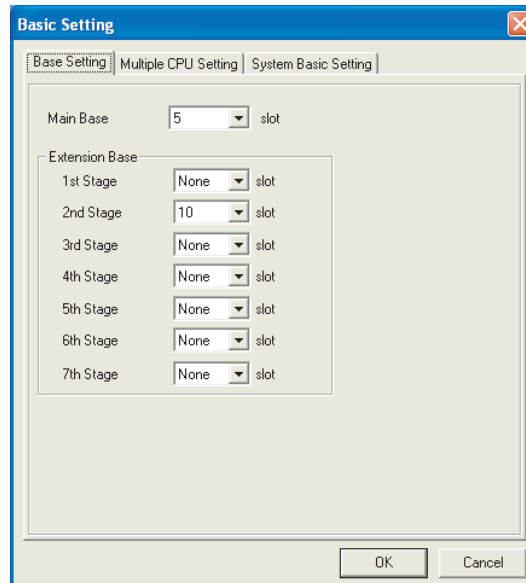
👉 A9GT-QCNB Bus Extension Connector Box User's Manual




When connecting to motion controller CPU (Q Series)

In the [Base Setting] on MT Developer, set "10" to the number of slots for the extension base used for GOT connection.


Example: When setting "2" to Stage No. and "0" to Slot No. in the communication interface settings, set "10" to [2nd Stage].



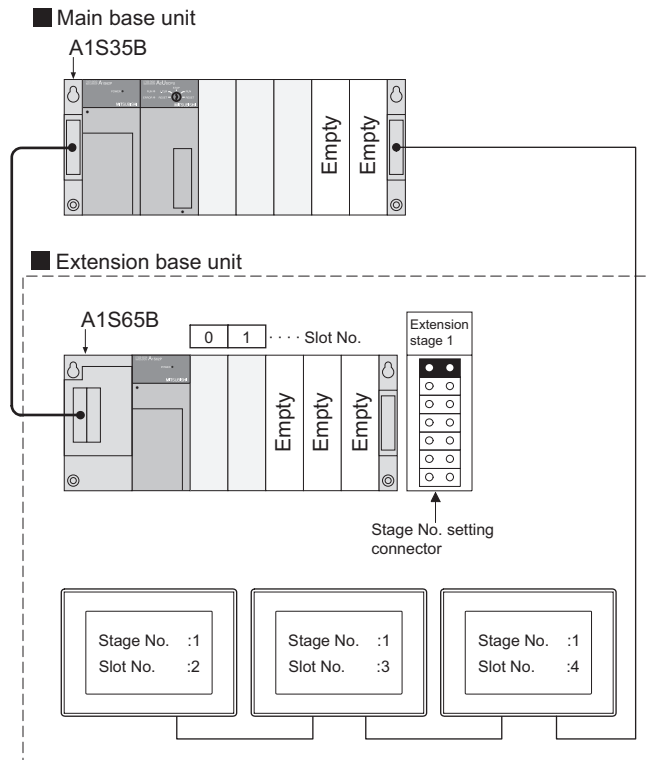- (2) When connecting to other than QCPU (Q mode)
 Assign the GOT to an empty I/O slot on the extension base unit.
 When there is no extension base unit or no empty I/O slots are left on an extension base unit, set an additional stage, and assign the GOT to one of the I/O slots.
 (Assigning the GOT to an empty slot on the main base unit is not allowed.)
- (a) When there is an empty I/O slot on the extension base unit



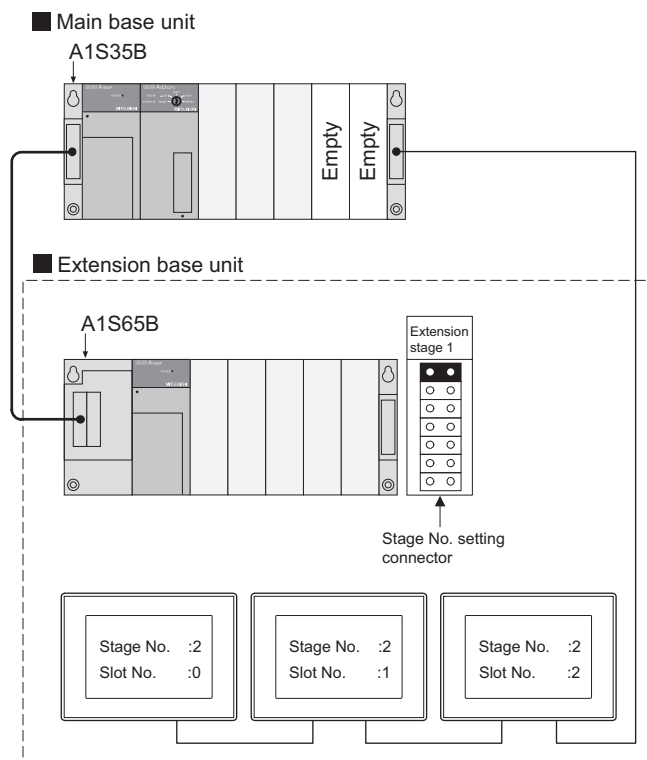- (b) When there are no empty I/O slots on the extension base unit





Write Check Sheet



Section 2.4
Communication
Check Sheet

Write down the items selected in this section to the check sheet.



Communication setting. (Stage No., Slot No.)



Check



Section 2.4
Communication
Check Sheet

When using the bus extension connector box, mark the check sheet after confirming that the Stage No. of the GOT is the same as the Stage No. of the bus extension connector box.



Unit selection (Bus extension connector box/Bus connector conversion box)

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION
TO CPU

4

COMPUTER LINK
CONNECTION

5

MELSECNET/H
CONNECTION (PLC TO
PLC NETWORK)

6

MELSECNET/10
CONNECTION (PLC TO
PLC NETWORK)

7

CC-Link CONNECTION
(INTELLIGENT DEVICE
STATION)


8

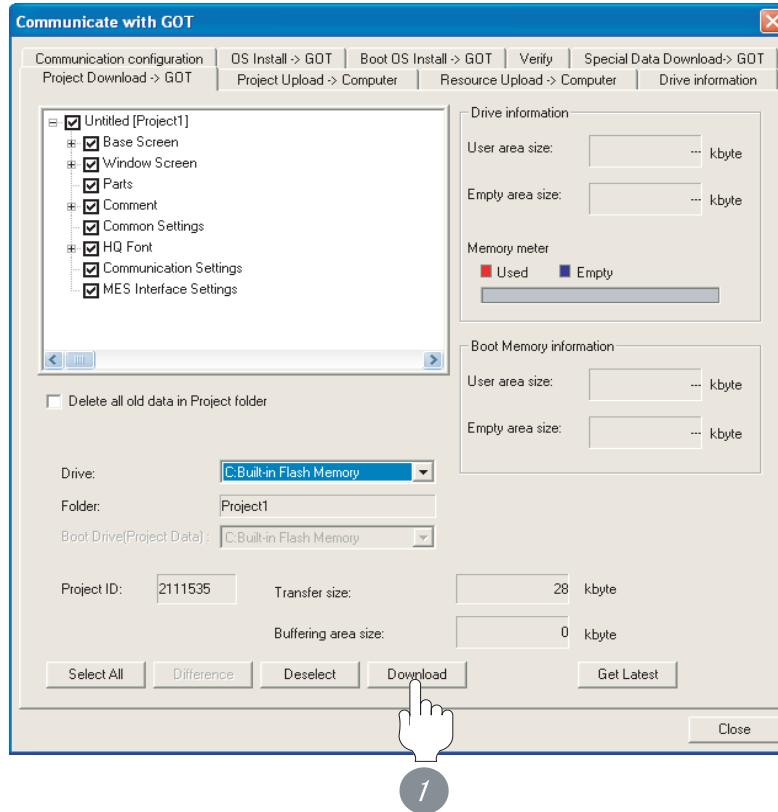
CC-Link CONNECTION
(Via G4)

2.2.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.

2.2.5 Attaching communication unit and connecting cable




Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.


1 Attaching the communication unit

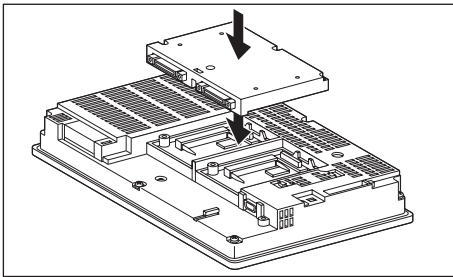(1) When mounting GT15-75QBUS, GT15-75QBUS2, GT15-75ABUSL, GT15-75ABUS2L




1 Attach the bus connection unit to the extension unit connector on the GOT.

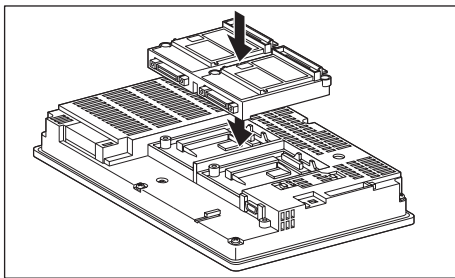(2) When mounting GT15-QBUS2, GT15-ABUS2



2 Attach the bus connection unit to the extension unit connector on the GOT.

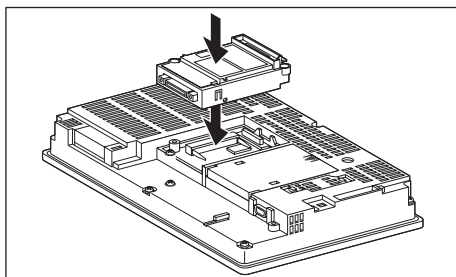(3) When mounting GT15-QBUS, GT15-ABUS



3 Attach the bus connection unit to the extension unit connector on the GOT.



Bus connection unit

For details on the bus connection unit, refer to the following manual:

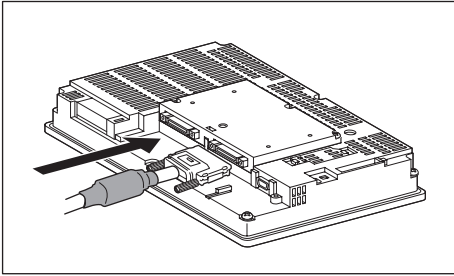
☞ GT15 BUS CONNECTION UNIT User's Manual

☞ GT15-QBUS/GT15-QBUS2/GT15-ABUS/GT15-ABUS2

GT15 BUS CONNECTION UNIT User's Manual


2 Connecting the cable

(1) When using GT15



1 Connect the bus connection cable to the bus connection unit.

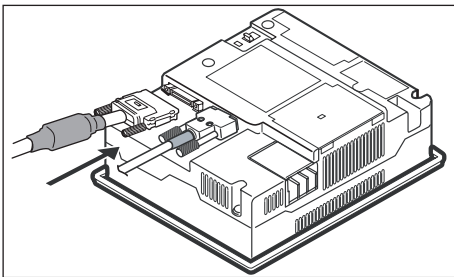(2) When using GT11



1 Connect the bus connection cable to the bus interface of GOT.

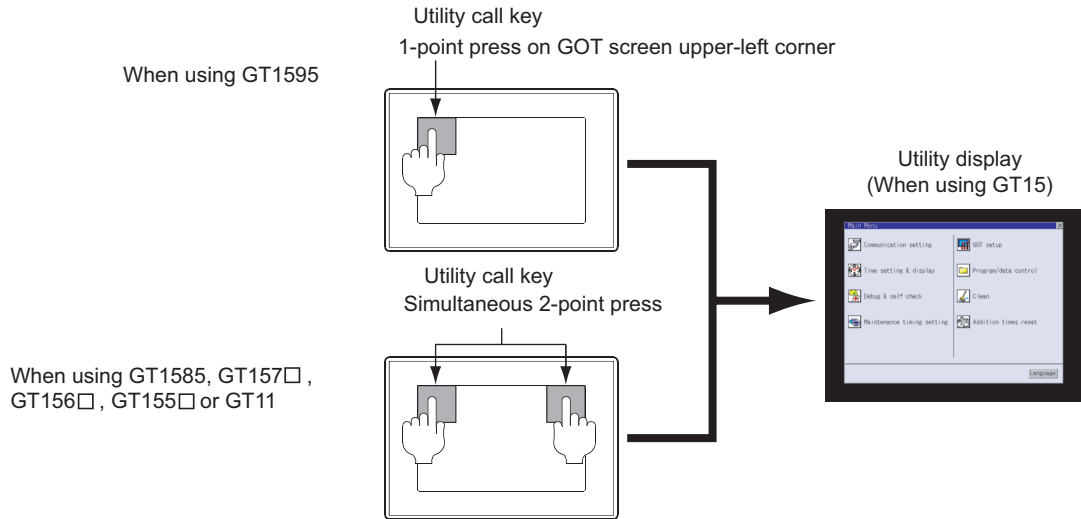
2.2.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point

When setting the utility call key to 1-point


When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.

For the setting of the utility call key, refer to the following.

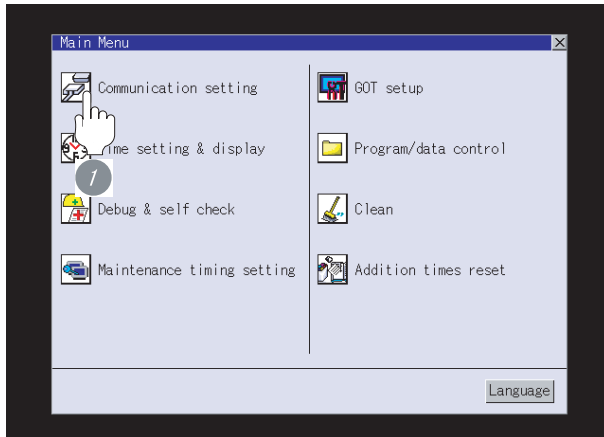☞ GT□ User's Manual



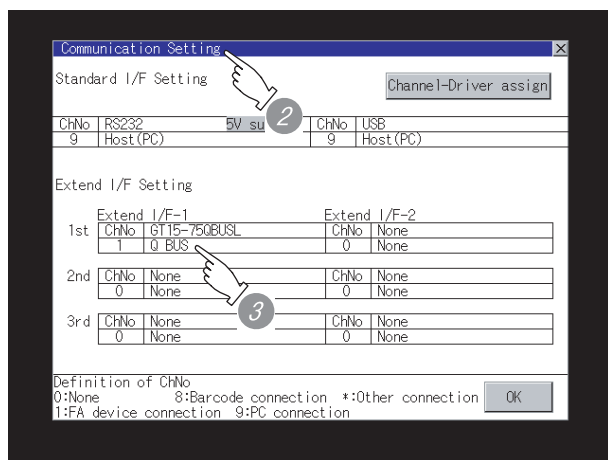- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver (either of the following)
 - Q BUS
 - A/QnA BUS
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 2.2 Preparatory Procedures for Monitoring



When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

GT User's Manual



Check

When you have verified in the Communication setting that the GOT recognizes the connected equipment, mark the check sheet.



Unit selection (Communication module)



Section 2.4

Communication


Check Sheet

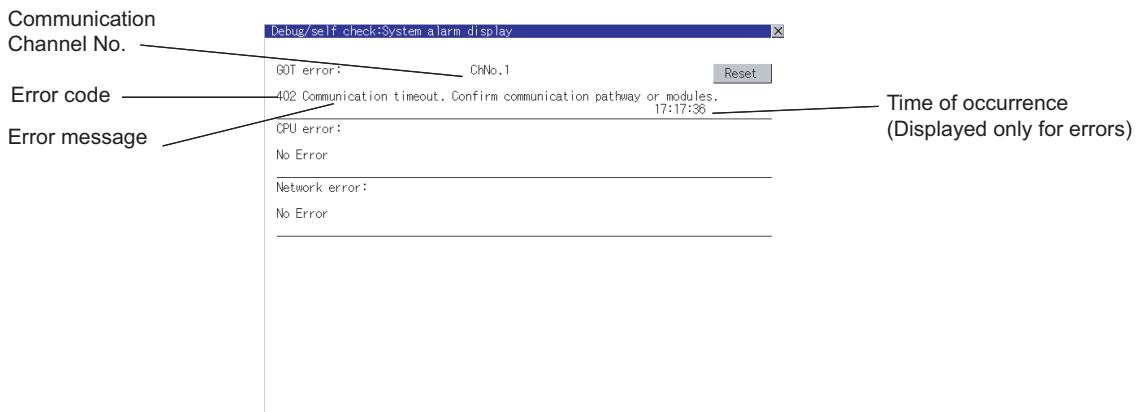
2.2.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)



Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual



2 Check if the PLC CPU recognizes the GOT. (QCPU (Q mode) only)

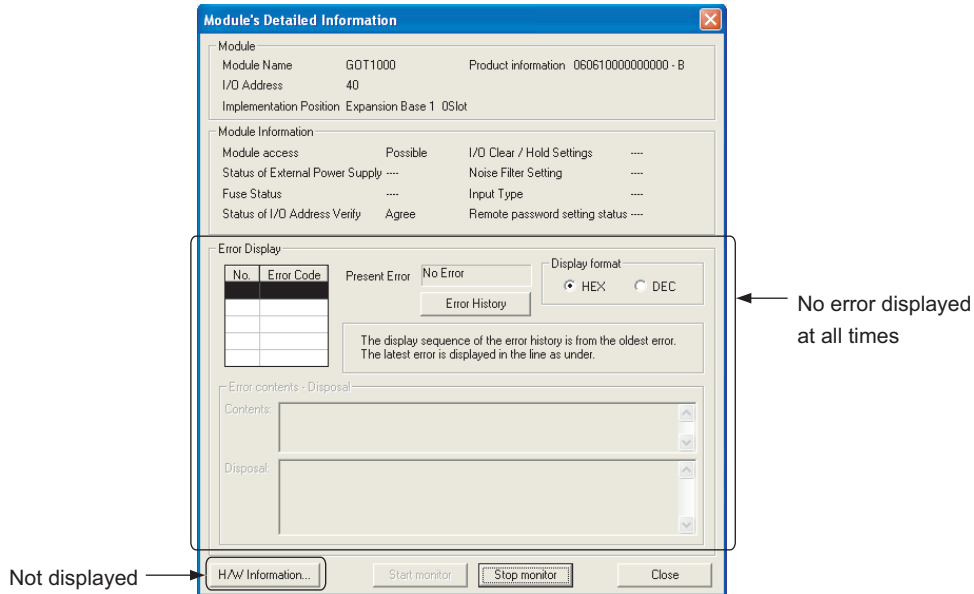
Using the [System monitor] of GX Developer, check if the PLC CPU recognizes the GOT or not. For details on GX Developer operations, refer to the following manual.

GX Developer Version □ Operating Manual

- (1) Check the Module Name, I/O Address and Implementation Position. (The display example is based on GX Developer Version 8.)

Startup procedure

GX Developer → [Diagnostics] → [System monitor]



All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.



Check



Section 2.4
Communication Check
Sheet

- (1) When you have made sure that the Stage No. and Slot No. currently set to the GOT are correct, mark the check sheet.

3 Communication setting (Stage No., Slot No.)

- (2) If no problems are identified by **1** and **2**, then mark the check sheet.

4 Communication check (System alarm of GOT, [System monitor] on GX Developer)

2.3 Precautions

1 Turning the GOT ON

(1) System configuration

The PLC CPU remains in the reset status until the GOT is started.

Therefore, no sequence program will run until then.

The system configuration, in which the GOT is turned on from a sequence program, is not available.

(2) Time taken until the PLC runs after power-on of the GOT

After powering on to start the GOT, it takes 10 seconds or more for the PLC to RUN.

When introducing a new GOT to the existing system or replacing the existing GOT, take the PLC's start-up time into account and adjust the timings in the system.

(3) Power-up sequence for connection of 3 GOTs or more (when connecting QCPU (Q mode))

 **9** (1) Restrictions in overall cable length to No. of GOTs

(4) Power-up sequence for connection of the Q4ARCPU redundant system

 **13** (2) Power-On sequence for GOT and Q4ARCPU redundant system

(5) Power-up sequence for cases other than (3) and (4)

The GOT and PLC can both be started up whichever of these devices is turned ON first. (There is no specific sequence in which they are powered ON.)

Note, however, that operation is as follows when the GOT is turned ON followed by the PLC:

When the PLC power is OFF with the GOT turned ON, the system alarm (No.402: timeout error) is generated.

Upon power-on of the PLC CPU, the GOT automatically starts monitoring.

Use System Information to reset the alarm.

For the System Information, refer to the following manual:

 GT Designer2 Version □ Screen Design Manual

2 Powering OFF the GOT, reapplying the power (OFF to ON)

(1) Precautions for reapplying the power to the GOT (OFF to ON)

Do not power-cycle the GOT (OFF to ON) while the PLC is ON.

Before doing so, be sure to turn off the PLC first.

Remark

Operations causing automatic reboot of the GOT1000 Series

Since the GOT1000 Series is automatically rebooted in the following cases, the power does not need to be reapplied to the GOT (OFF to ON).

- When an OS is installed from GT Designer2 or a CF card
- When utility settings have been changed

(2) When turning OFF the GOT before display of the user creation screen

When the GOT is turned OFF before the user creation screen is displayed on the GOT, subsequent communications may be no longer possible.

In such a case, reapply the power to the PLC CPU and GOT.

(3) Precautions for connection of 3 GOTs or more (when connecting QCPU (Q mode))

 **9** (1) Restrictions in overall cable length to No. of GOTs

3 Reset switch on GOT

When bus connection is used, the reset switch on the GOT does not function.


4 Powering OFF or resetting the PLC

- (1) When turning OFF or resetting the PLC during monitoring
When turning OFF or resetting the PLC during monitoring, the system alarm (No.402: timeout error) is generated.

When the PLC CPU is restored, the GOT automatically resumes monitoring.

Use System Information to reset the alarm.

For the System Information, refer to the following manual:

 GT Designer2 Version □ Screen Design Manual

- (2) When turning OFF or resetting the PLC CPU before display of the user creation screen
When the PLC CPU is turned OFF or reset before the user creation screen is displayed on the GOT, subsequent communications may be no longer possible.
In such a case, reapply the power to the PLC CPU and GOT.

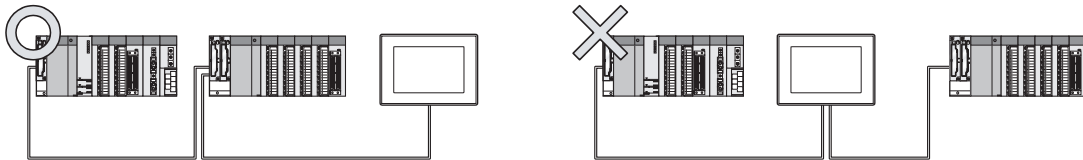
- (3) Precautions for connection of 3 GOTs or more (when connecting QCPU (Q mode))

 **9** (1) Restrictions in overall cable length to No. of GOTs

5 Position of the GOT

Always connect the GOT to the last base unit.

Connecting a GOT between base units is not allowed.



6 When the GOT is bus-connected to a PLC CPU without the communication driver installed

When the GOT is bus-connected to a PLC CPU without the standard monitor OS and the communication driver for the bus connection being installed onto the GOT, the PLC CPU is reset.
(Communications with the PLC CPU using GX Developer are no longer possible.)

In this case, disconnecting the bus connection cable from the GOT will cancel the reset status of the PLC CPU.

7 When designing the system

When the GOT is OFF, the following currents are supplied to the GOT from the PLC CPU side (the power supply module on the main base unit). (The GOT does not operate when it is OFF.)

Design the system so that the 5V DC current consumption of the modules on the main base unit and the total current consumption of the GOTs will not exceed the rated output current of 5V DC of the power supply module in use.

When connecting to	No. of GOTs	Total current consumption
QCPU (Q mode)	5	2200mA
	4	1760mA
	3	1320mA
	2	880mA
	1	440mA
Other than QCPU (Q mode)	3	360mA
	2	240mA
	1	120mA

8 When assigning GOT I/O signals

Do not use the I/O signals assigned to the PLC CPU in sequence programs, as these signals are used by the GOT system.

When these signals are used, GOT functions cannot be assured.

9 When connecting to a QCPU (Q mode)

(1) Restrictions in overall cable length to No. of GOTs


The following restrictions apply when 3 or more GOTs are connected:

Number of GOTs	Overall Cable Length	Restriction	Overall Cable Length	Restriction
1		(No restrictions)		
2				
3	Less than 25m	(No restrictions)	25 to 37m	Use the same power supply for the PLC and all GOTs, and turn these devices ON and OFF simultaneously.
4	Less than 20m		20 to 37m	
5	Less than 15m		15 to 37m	

(2) When using a Q00JCPU

The bus extension connector box can be connected only to the extension base unit.

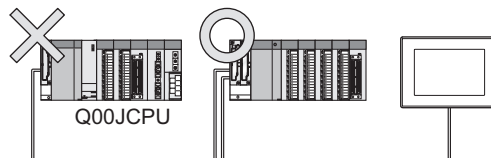
(Connecting to the main base unit is not allowed.)



(3) When using a Q00J/Q00/Q01CPU

When a GOT is bus-connected to a Q00JCPU, number of extension stages including the GOT must be 2 or less.

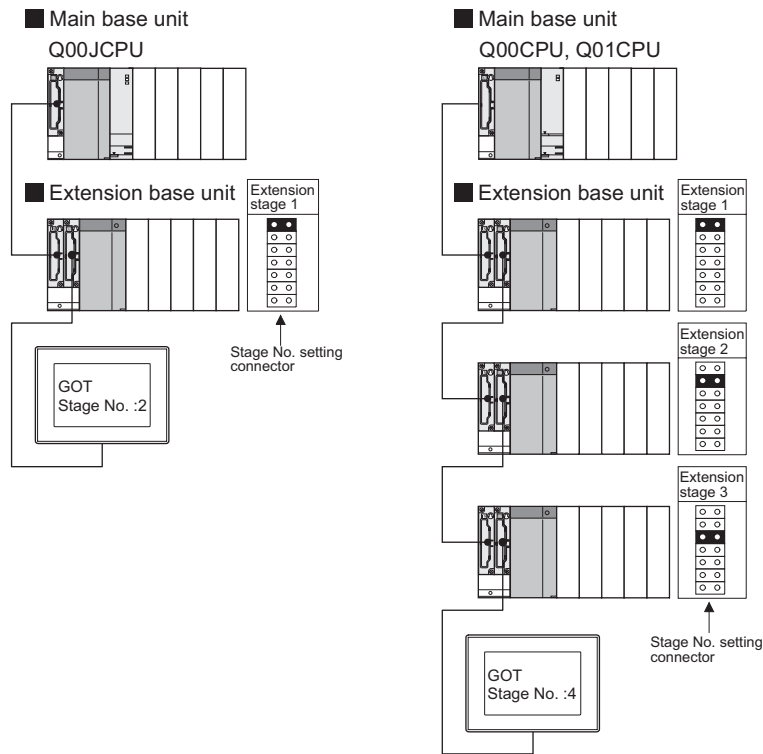
When a GOT is bus-connected to a Q00CPU or Q01CPU, number of extension stages including the GOT must be 4 or less.



(4) When using the QA1S6 □ B extension base unit


A GOT is physically connected to the last of all extension base units. In the Stage No. setting, however, assign the GOT as a stage next to the last Q □ □ B type extension base unit.

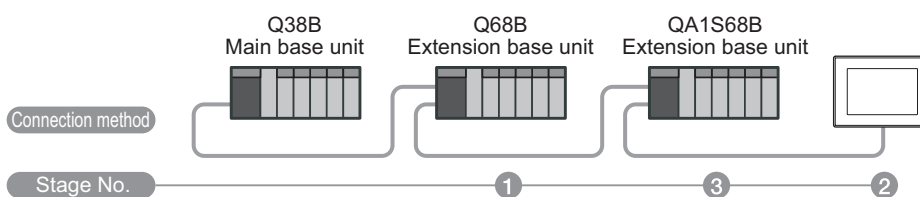Assign the QA1S6 □ B type extension base unit as a stage next to the GOT.



10 When connecting to a QnA(S)CPU or An(S)CPU type

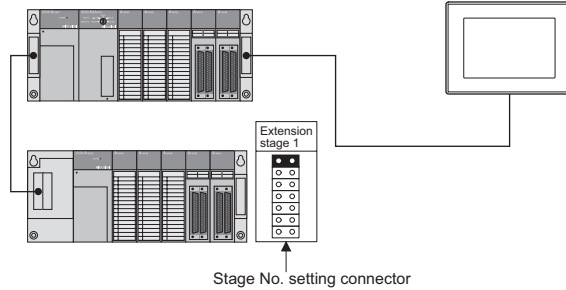- (1) When connecting with a QnASCPU type and an AnSCPU type
 A GOT can be connected to an extension connector on only one side of the main base unit.
 (Concurrently connecting GOTs to extension connectors on both sides is not allowed.)



- (2) In the case of Q4A(R)CPU, Q3ACPU, A3 □ CPU, A4UCPU
 Empty I/O slots are required within the max. number of extension stages.
- (3) For A0J2HCPU
 Assign the GOT to the I/O slots 0 to 3 of extension stage 1.
- (4) In the case of CPUs other than (2) (3) above
 Even if the max. number of stages are used with no empty I/O slots, when there is a free space of 32 I/O points or more, a GOT can be connected under the following communication interface setting.
 For the communication interface setting, refer to the following.


☞ Section 2.2.3 Setting communication interface (Communication settings)

When connecting to	Max. stage No.	Communication interface setting	
		Stage No.	Slot No.
A1 □ CPU/A2USCPU(-S1)	1	2	0
A2 □ CPU/Q2ACPU	3	4	0
A3 □ CPU/A4 □ CPU	7	Cannot be used	
Q3ACPU/Q4ACPU	7		
A0J2HCPU	1		

11 When connecting multiple GOTs

(1) System including different GOT series

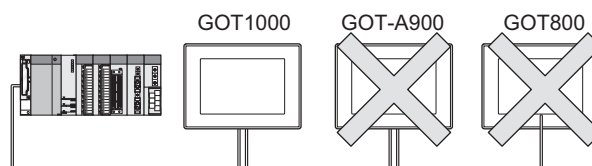The GOT1000 series cannot be used with different GOT series in a system.



(2) Restrictions on No. of GOTs

The number of connectable GOTs is restricted according to the CPU type and the number of intelligent function modules.

When connecting to		Number of connectable GOTs	Total number of connectable GOTs and intelligent function modules*1
QCPU (Q mode), motion controller CPU (Q Series)		Up to 5	5 GOTs + 6 intelligent function modules*2
QCPU (A mode)		Not connectable	—————
QnACPU		Up to 3	6 in total
ACPU	AnUCPU, AnACPU, A2US(H)CPU	Up to 3	6 in total
	AnNCPU, AnS(H)CPU, A1SJ(H)CPU	Up to 2	2 in total
	A0J2HCPU	Up to 1	2 in total
	A1FXCPU	Not connectable	—————
Motion controller CPU (A Series)	A273UCPU, A273UHCPU(-S3), A373UCPU(-S3), A173UHCPU(-S1)	Up to 3	6 in total
	A171SHCPUN, A172SHCPUN	Up to 2	2 in total

*1 Indicates the following models:

AD51(S3), AD51H(S3), AD51FD(S3), AD57G(S3), AJ71C21(S1), AJ71C22(S1), AJ71C23, AJ71C24(S3/S6/S8), AJ71UC24, AJ71E71(-S3), AJ71E71N-B2/B5/T/B5T, AJ71E71N3-T, AJ61BT11(in intelligent mode only), A1SJ71C24(-R2/PRF/R4), A1SJ71UC24(-R2/PRF/R4), A1SJ71E71-B2/B5(-S3), A1SJ71E71N-B2/B5/T/B5T, A1SJ71E71N3-T, A1SD51S, A1SJ61BT11(in intelligent mode only)

*2 Only the A1SD51S can be connected to the QCPU (Q Mode).

12 When using a PLC CPU in the direct mode

Note that when the I/O control mode of the PLC CPU is the direct mode, and if the 1st GOT is connected to the main or extension base unit with a 5m extension cable (GT15-AC50B, GT15-A1SC50NB), the input X of the empty I/O slot cannot be used.

No restrictions apply when the I/O control mode is the refresh mode.

On PLC CPUs whose I/O control mode can be selected by a switch, set the I/O control mode to the refresh mode before use.



Point

In the cases where input X of an empty I/O slot is used

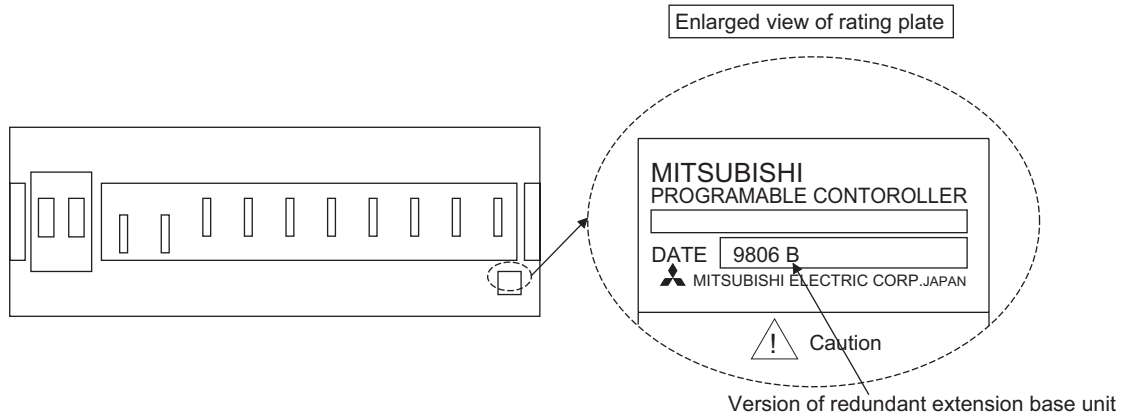
- (1) When input X is assigned on the MELSECNET/10 network
- (2) When input X of an empty I/O slot is turned ON/OFF by the computer link module
- (3) When input X of the I/O slot is turned ON/OFF by the touch switch function (Bit SET/RST/Alternate/Momentary) of GOT

13 When connecting to a Q4ARCPU redundant system

- (1) When the GOT is bus-connected to a Q4ARCPU redundant system
Connect the GOT to the last redundant extension base unit (A68RB) of the Q4ARCPU redundant system.

For the redundant extension base units, use version B or later.

The version can be confirmed in the DATE field of the rating plate.



Point

Precautions for Q4ARCPU redundant system configurations

The GOT does not operate normally in the following system configurations.

- (1) When the GOT is bus connected to the bus switching module (A6RAF) on a redundant main base unit (A32RB/A33RB)
 - (2) When the GOT is bus connected to a version-A redundant main base unit (A68RB)
- (2) Power-On sequence for GOT and Q4ARCPU redundant system
Apply the power to the GOT and Q4ARCPU redundant system in the following sequence.
 - 1 Turn ON the GOT.
 - 2 After the monitor screen is displayed on the GOT, turn ON the Q4ARCPU redundant system. At this time, a timeout is displayed on the system alarm. Use System Information to reset the alarm.

For the system alarm, refer to the following manual:

GT Designer2 Version □ Screen Design Manual

2.4 Communication Check Sheet

This section explains a check sheet by which the information can be checked beforehand when starting communications by bus connection.

1 How to use the check sheet

Sections 2.1 and 2.2 contain explanations of the items to be checked on the check sheet. Checking items explained these sections using the check sheet on the following page allows you to complete the procedures for communications between the GOT and the PLC CPU.

2.2.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

GT Designer2 Version □ Basic Operation/Data Transfer Manual

Check either of the following under the Communication driver.
 • When connecting to QCPU (Q mode) or motion controller CPU (Q series): Bus (Q)
 • When connecting to other than the above: Bus (A/QnA)

1 Check-mark a desired standard monitor OS, communication driver and option OS, and click the **Install** button.

Write down the items selected in this section to the check sheet.

Write Check Sheet

Section 2.4 Communication Check Sheet

Shows items to be written or checked on the check sheet.
Lists the same items as those on the check sheet.

The following symbols are used for each purpose.

- Write Check Sheet
 - Check
- Indicates parts where items and details are to be written. Confirm the details and write them to the check sheet.
- Indicates parts where written details are to be checked. Confirm the details and check the check sheet.

2 Example of how to fill in the check sheet

3 Communication check sheet [Sheet No.]

OS selection	OS type	Item (Refer to)	Version (Refer to)	Check mark (Refer to)
		Standard monitor OS	Standard monitor OS Font <i>12 dot Standard</i> (Section 2.2.1)	Ver. <i>01.00.00</i> (Section 2.2.1)
	Communication driver	<i>BUS connection Q</i> (Section 2.1)	Ver. <i>01.00.00</i> (Section 2.2.1)	OK <input checked="" type="checkbox"/> Not OK <input type="checkbox"/> (Section 2.2.2)

*Since the above page was created for explanation purpose, it differs from the actual page.

3 Communication check sheet [Sheet No.]

1 OS selection	OS type	Item (Refer to)	Version (Refer to)	Check mark (Refer to)
	Standard monitor OS	Standard monitor OS	Ver. . . . (Section 2.2.1)	OK Not OK <input type="checkbox"/> <input type="checkbox"/> (Section 2.2.2)
		Font (Section 2.2.1)	Ver. . . . (Section 2.2.1)	OK Not OK <input type="checkbox"/> <input type="checkbox"/> (Section 2.2.2)
	Communication driver (Section 2.1)	Ver. . . . (Section 2.2.1)	OK Not OK <input type="checkbox"/> <input type="checkbox"/> (Section 2.2.2)	
	Option OS (Section 2.2.1)	Ver. . . . (Section 2.2.1)	OK Not OK <input type="checkbox"/> <input type="checkbox"/> (Section 2.2.2)	


2 Unit selection	Item	Model name (Refer to)	Check mark (Refer to)
	Communication module (Section 2.1)	OK Not OK <input type="checkbox"/> <input type="checkbox"/> (Section 2.2.6)	
Bus extension connector box or Bus connector conversion box (only when necessary) (Section 2.1)	OK Not OK <input type="checkbox"/> <input type="checkbox"/> (Section 2.2.3)		

3 Communication settings	Item	Setting (Refer to)	Check mark (Refer to)
	Stage No.	(Section 2.2.3)	OK Not OK <input type="checkbox"/> <input type="checkbox"/> (Section 2.2.7)
	Slot No.	(Section 2.2.3)	OK Not OK <input type="checkbox"/> <input type="checkbox"/> (Section 2.2.7)

4 Communication check	Item	Check mark (Refer to)
	Check for errors occurring on the GOT. (GOT system alarm)	OK Not OK <input type="checkbox"/> <input type="checkbox"/> (Section 2.2.7)
	Check if the PLC CPU has recognized the GOT. (QCPU (Q mode) only) ([System Monitor] on GX Developer)	OK Not OK <input type="checkbox"/> <input type="checkbox"/> (Section 2.2.7)

2.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
 Bus connection	Supporting the connection to GT11	2.58L	Communication driver Bus(Q) [03.03.**] Bus(A/QnA) [03.03.**]

DIRECT CONNECTION TO CPU



3.1 System Configuration page 3-2

This section describes the equipment and cables needed for direct connection to a CPU.

Select a system suitable for your application.

3.2 Connection Cable page 3-26

This section describes the specifications of the cables needed when connecting a GOT to a FX PLC.

Check the specifications of the connection cables.

3.3 Preparatory Procedure for Monitoring page 3-32

This section describes the procedures to be followed before monitoring in direct connection to a CPU.

The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

3.4 Precautions page 3-52

This section describes the precautions about direct connection.

Refer to this section without fail before monitoring FXCPU(FX3U/FX3UC series).

3.5 List of Functions Added by Version Upgrade page 3-53

This section describes the functions added by version upgrade of GT Designer2 or OS.

3.1 System Configuration

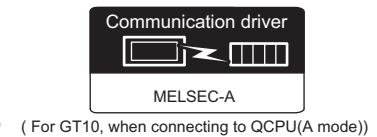
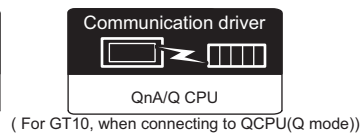
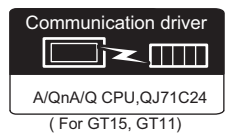
Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.

3.1.1 Connecting to QCPU



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	3m or less	
	30.5m or less	
	3m or less	
	30.5m or less	







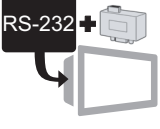



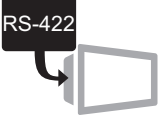


*1 GT10 does not support the following CPU models.

CPU models : Q12PHCPU, Q25PHCPU, Q12PRHCPU, Q25PRHCPU

*2 When connecting GT10 to a multi-CPU system, only the system that consists of High performance model CPUs (Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU, Q25HCPU) is supported.

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)    (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT)   (RS-422)

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)




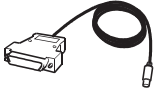



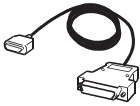






7


CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8


CC-Link CONNECTION (Via G4)

(2) Cable

Image	No.	Name	Model name	
	3	RS-232 cable • Between QCPU and GOT	GT01-C30R2-6P (3m)	
				 
	4	RS-422 conversion cable • Between QCPU and RS-422	FA-CNV2402CBL (0.2m),	FA-CNV2405CBL (0.5m)
				   (RS-422)
	5	RS-422 cable • Between RS-422 conversion cable and GOT	GT01-C30R4-25P (3m), GT01-C200R4-25P (20m),	GT01-C100R4-25P (10m), GT01-C300R4-25P (30m)
				 
	6	RS-232 cable 3) ^{*1} • Between QCPU and GOT	GT10-C30R2-6P(3m)	
				 (RS-232)
	7	RS-422 cable 2) ^{*1} • Between QCPU and GOT	GT10-C30R4-25P(3m), GT10-C200R4-25P (20m),	GT10-C100R4-25P(10m) GT10-C300R4-25P (30m)
				 (RS-422)

*1 For the connection to GOT, refer to the connection diagram. ( 3.2.1RS-232 cable)

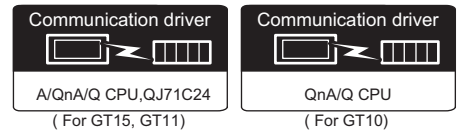3.1.2 Connecting to QnACPU



1 System configuration and connection conditions

Connection conditions		System configuration	
Number of GOTs	Distance		
1	30m or less		
1	30m or less		

2 System equipment

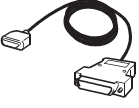
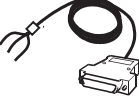
(1) GOT

Image	No.	Name	Model name
	1	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S
		RS-422 interface • For RS-422 communication	— (Built into GOT)

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

1 OVERVIEW
2 BUS CONNECTION
3 DIRECT CONNECTION TO CPU
4 COMPUTER LINK CONNECTION
5 MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6 MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7 CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8 CC-Link CONNECTION (Via G4)

(2) Cable


Image	No.	Name	Model name	
	2	RS-422 cable • Between QnACPU and GOT	GT01-C30R4-25P (3m), GT01-C200R4-25P (20m),	GT01-C100R4-25P (10m), GT01-C300R4-25P (30m)
	3	RS-422 cable 2)* ¹ • Between QnACPU and GOT	GT10-C30R4-25P(3m), GT10-C200R4-25P (20m),	GT10-C100R4-25P(10m), GT10-C300R4-25P (30m)



(RS-422)

*1 For the connection to GOT, refer to the connection diagram. (☞ 3.2.1RS-232 cable)

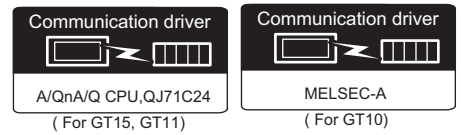3.1.3 Connecting to ACPU



1 System configuration and connection conditions

Connection conditions		System configuration	
Number of GOTs	Distance		
1	30m or less		
1	30m or less		

2 System equipment

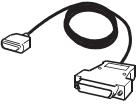
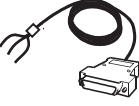
(1) GOT

Image	No.	Name	Model name
	1	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S
		RS-422 interface • For RS-422 communication	— (Built into GOT)

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

- 1 OVERVIEW
- 2 BUS CONNECTION
- 3 DIRECT CONNECTION TO CPU
- 4 COMPUTER LINK CONNECTION
- 5 MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
- 6 MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
- 7 CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
- 8 CC-Link CONNECTION (Via G4)

(2) Cable

Image	No.	Name	Model name	
	2	RS-422 cable • Between ACPU and GOT	GT01-C30R4-25P (3m), GT01-C200R4-25P (20m),	GT01-C100R4-25P (10m), GT01-C300R4-25P (30m)
	3	RS-422 cable 2)* ¹ • Between ACPU and GOT	GT10-C30R4-25P(3m), GT10-C200R4-25P (20m),	GT10-C100R4-25P(10m) GT10-C300R4-25P (30m)



(RS-422)

*1 For the connection to GOT, refer to the connection diagram. (→ 3.2.1RS-232 cable)

3.1.4 Connecting to FXCPU (FX0, FX0S, FX0N, FX1, FX2, FX2C Series)



1 System configuration and connection conditions

Connecting to FXCPU (FX0 Series)

Connection conditions		System configuration	
Number of GOTs	Distance		
1	30m or less		
1	30m or less		 (RS-422)

Connecting to FXCPU (FX0S, FX0N Series)

Connection conditions		System configuration	
Number of GOTs	Distance		
1	30m or less		
	GT10 (input power supply : 24V) 30m or less		 (RS-422)
	GT10 (input power supply : 5V) 3m or less		 (RS-422)









1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)

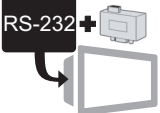Connecting to FXCPU (FX₁, FX₂, FX_{2C} Series)

Connection conditions		System configuration
Number of GOTs	Distance	
1	30m or less	<p>3 RS-422 cable</p> <p>MAX30m</p> <p>1</p> <p>GT15</p> <p>GT11 Serial</p>
1	30m or less	<p>5 RS-422 cable 2)</p> <p>1</p> <p>GT10 24V (RS-422)</p>


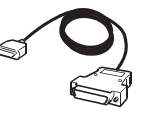


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT)    (RS-422) (RS-422)

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) Cable

Image	No.	Name	Model name
	2	RS-422 cable • Between FXCPU (FX0, FX0s, FX0N) and GOT	GT01-C10R4-8P (1m), GT01-C100R4-8P (10m), GT01-C300R4-8P (30m) GT01-C30R4-8P (3m), GT01-C200R4-8P (20m)
	3	RS-422 cable • Between FXCPU (FX1, FX2, FX2c) and GOT	GT01-C30R4-25P (3m), GT01-C100R4-25P (10m), GT01-C200R4-25P (20m), GT01-C300R4-25P (30m)
	4	RS-422 cable 1)*1 • Between FXCPU (FX0, FX0s, FX0N) and GOT	GT10-C10R4-8P(1m), GT10-C100R4-8P(10m), GT10-C300R4-8P(30m) GT10-C30R4-8P(3m), GT10-C200R4-8P(20m)
	4	RS-422 cable 1)*1 • Between FXCPU (FX0s, FX0N) and GOT	GT10-C10R4-8P(1m) GT10-C30R4-8P(3m)
	5	RS-422 cable 2)*1 • Between FXCPU (FX1, FX2, FX2c) and GOT	GT10-C30R4-25P(3m), GT10-C100R4-25P(10m), GT10-C200R4-25P(20m), GT10-C300R4-25P(30m)

*1 For the connection to GOT, refer to the connection diagram. (☞ 3.2.1RS-232 cable)

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)


7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

3.1.5 Connecting to FXCPU (FX1S, FX1N, FX2N Series)



1 System configuration and connection conditions

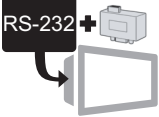













Connection conditions		System configuration
Number of GOTs	Distance	
1	30m or less	<p>8 RS-422 cable MAX30m 1</p> <p>GT15 GT11 Serial</p>
		<p>3 Function expansion board 8 RS-422 cable MAX30m 1</p> <p>GT15 GT11 Serial</p>
	15m or less	<p>4 Function expansion board 9 RS-232 cable MAX15m 2</p> <p>GT15 GT11 Serial</p>
		<p>5 Function expansion board 6 Function adapter 9 RS-232 cable MAX15m 2</p> <p>GT15 GT11 Serial</p>
		<p>5 Function expansion board 7 Function adapter 10 RS-232 cable MAX15m 2</p> <p>GT15 GT11 Serial</p>

Connection conditions		System configuration
Number of GOTs	Distance	
1	GT10 (input power supply : 24V) 30m or less	<p>11 RS-422 cable 1)</p> <p>(RS-422)</p>
	GT10 (input power supply : 5V) 3m or less	<p>(RS-422)</p>
	GT10 (input power supply : 24V) 30m or less	<p>3) Function expansion board</p> <p>11 RS-422 cable 1)</p> <p>(RS-422)</p>
	GT10 (input power supply : 5V) 3m or less	<p>11 RS-422 cable 1)</p> <p>(RS-422)</p>
	15m or less	<p>4) Function expansion board</p> <p>12 RS-232 cable 4)</p> <p>MAX15m</p> <p>(RS-232)</p>
		<p>5) Function expansion board</p> <p>6) Function adapter</p> <p>12 RS-232 cable 4)</p> <p>MAX15m</p> <p>(RS-232)</p>
		<p>5) Function expansion board</p> <p>7) Function adapter</p> <p>13 RS-232 cable 5)</p> <p>MAX15m</p> <p>(RS-232)</p>

1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)


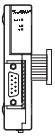
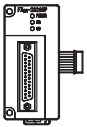
2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-422 conversion unit ^{*1} • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT)    (RS-422) (RS-422)
	2	RS-232 interface • For RS-232 communication	— (Built into GOT)    (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 


*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name	
	3	Function expansion board ^{*1*2} • Unit for simultaneously connecting GOT and peripheral equipment (GX Developer, etc.) to FXCPU	FX1N-422-BD,	FX2N-422-BD
	4		FX1N-232-BD,	FX2N-232-BD
	5		FX1N-CNV-BD,	FX2N-CNV-BD
	6	Function adapter ^{*1}	FX2NC-232ADP	
	7		FX0N-232ADP	

*1 When the function expansion board or function adapter is used, a GOT and a peripheral such as a PC with GX Developer installed can be connected to the FXCPU and the function expansion board or function adapter individually.

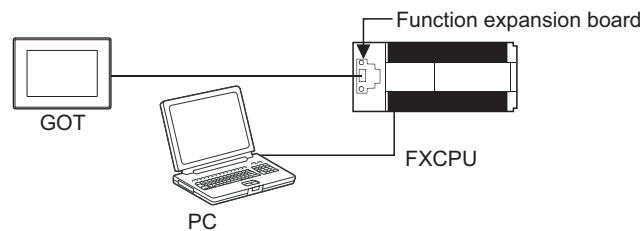(Example) In the case of the function expansion board



*2 The function expansion board to be used differs according to the type of the FXCPU to be connected. Use the applicable function expansion board shown in the following table.

Item	Function expansion board to be used	
	When connecting to FX1N, FX1S Series	When connecting to FX2N Series
RS-232 communication	FX1N-232-BD	FX2N-232-BD
RS-422 communication	FX1N-422-BD	FX2N-422-BD
When the function adapter is used	FX1N-CNV-BD	FX2N-CNV-BD

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)




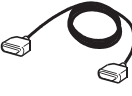


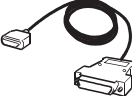










7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)


8

CC-Link CONNECTION (Via G4)

(3) Cable

Image	No.	Name	Model name		
	8	RS-422 cable • Between FXCPU and GOT • Between FX1N-422-BD or FX2N-422-BD and GOT	GT01-C10R4-8P (1m), GT01-C100R4-8P (10m), GT01-C300R4-8P (30m)	GT01-C30R4-8P (3m), GT01-C200R4-8P (20m),	 
	9	RS-232 cable*1 • Between FX1N-232-BD or FX2N-232-BD and GOT • Between GOT and FX2NC-232ADP	GT01-C30R2-9S (3m)		 
	10	RS-232 cable*1 • Between GOT and FX0N-232ADP	GT01-C30R2-25P (3m)		 
	11	RS-422 cable 1)*2 • Between FXCPU and GOT • Between FX1N-422-BD or FX2N-422-BD and GOT	GT10-C10R4-8P(1m) GT10-C100R4-8P(10m) GT10-C300R4-8P(30m)	GT10-C30R4-8P(3m) GT10-C200R4-8P(20m),	 (RS-422)
			GT10-C10R4-8P(1m)	GT10-C30R4-8P(3m)	 (RS-422)
	12	RS-232 cable 4) • Between FX1N-232-BD or FX2N-232-BD and GOT • Between GOT and FX2NC-232ADP	(To be prepared by the user.  Section 3.2 Connection Cable)		
	13	RS-232 cable 5) • Between GOT and FX0N-232ADP			 (RS-232)

*1 The RS-232 cable can be prepared by the user.

*2 For the connection to GOT, refer to the connection diagram. ( 3.2.1RS-232 cable)

3.1.6 Connecting to FXCPU (FX1NC, FX2NC Series)



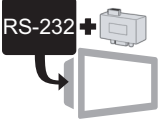












1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	30m or less	
	15m or less	
	15m or less	
	GT10 (input power supply : 24V) 30m or less	
	GT10 (input power supply : 5V) 3m or less	
	15m or less	

1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)



2 System equipment

(1) GOT


Image	No.	Name	Model name
	1	RS-422 conversion unit ^{*1} • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT)    (RS-422) (RS-422)
	2	RS-232 interface • For RS-232 communication	— (Built into GOT)   (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 

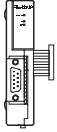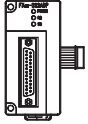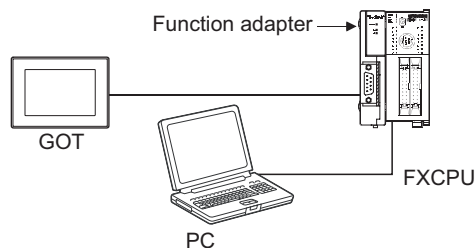*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.


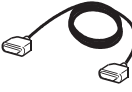
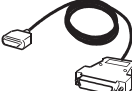




(2) PLC

Image	No.	Name	Model name
	3	Function adapter ^{*1}	FX2NC-232ADP
	4		FX0N-232ADP


*1 When the function adapter is used, a GOT and a peripheral such as a PC with GX Developer installed can be connected to the FXCPU and the function adapter individually.



(3) Cable

Image	No.	Name	Model name
	5	RS-422 cable • Between FXCPU and GOT	GT01-C10R4-8P (1m), GT01-C100R4-8P (10m), GT01-C300R4-8P (30m) GT01-C30R4-8P (3m), GT01-C200R4-8P (20m), GT15 GT11 Serial
	6	RS-232 cable*1 • Between GOT and FX2NC-232ADP	GT01-C30R2-9S (3m) GT15 GT11 Serial
	7	RS-232 cable*1 • Between GOT and FX0N-232ADP	GT01-C30R2-25P (3m) GT15 GT11 Serial
	8	RS-422 cable*2 • Between FXCPU and GOT	GT10-C10R4-8P(1m) GT10-C30R4-8P(3m) GT10-C100R4-8P(10m) GT10-C200R4-8P(20m), GT10-C300R4-8P(30m) GT10 24V (RS-422)
			GT10-C10R4-8P(1m) GT10-C30R4-8P(3m) GT10 5V (RS-422)
	9	RS-232 cable • Between GOT and FX2NC-232ADP	(To be prepared by the user.  Section 3.2 Connection Cable) GT10 (RS-232)
	10	RS-232 cable • Between GOT and FX0N-232ADP	

*1 The RS-232 cable can be prepared by the user.

*2 For the connection to GOT, refer to the connection diagram. ( 3.2.1RS-232 cable)

1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)

3.1.7 Connecting to FXCPU (FX3U, FX3UC Series)



1 System configuration and connection conditions

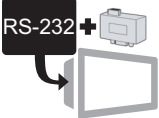













Connection conditions		System configuration
Number of GOTs	Distance	
1	30m or less	<p>8 RS-422 cable MAX30m 1</p> <p>GT15 GT11 Serial</p>
		<p>3 Function expansion board 8 RS-422 cable MAX30m 1</p> <p>GT15 GT11 Serial</p>
	15m or less	<p>4 Function expansion board 9 RS-232 cable MAX15m 2</p> <p>GT15 GT11 Serial</p>
		<p>3 4 5 Function expansion board 7 Function adapter 9 RS-232 cable MAX15m 2</p> <p>GT15 GT11 Serial</p>
		<p>5 Function expansion board 7 Function adapter 9 RS-232 cable MAX15m 2</p> <p>GT15 GT11 Serial</p>

Connection conditions		System configuration	
Number of GOTs	Distance		
1	GT10 (input power supply : 24V) 30m or less		 (RS-422)
	GT10 (input power supply : 5V) 3m or less		 (RS-422)
	GT10 (input power supply : 24V) 30m or less		 (RS-422)
	GT10 (input power supply : 5V) 3m or less		 (RS-422)
			 (RS-232)
	15m or less		 (RS-232)
			 (RS-232)

1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)



2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-422 conversion unit ^{*1} • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT)    (RS-422) (RS-422)
	2	RS-232 interface • For RS-232 communication	— (Built into GOT)    (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 


*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	3	Function expansion board ^{*2*3*4}	FX3U-422-BD
	4	• Unit for simultaneously connecting GOT and peripheral equipment (GX Developer, etc.)	FX3U-232-BD
	5		FX3U-CNV-BD
	7	Function adapter ^{*2*3*4}	FX3U-232ADP, FX3U-485ADP

*2 When the function expansion board or function adapter is used, a GOT and a peripheral such as a PC with GX Developer installed can be connected to the FXCPU and the function expansion board or function adapter individually.

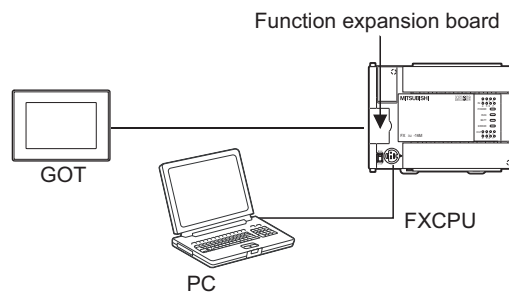(Example) In the case of the function expansion board



*3 When the function expansion board (communication board) and the function adapter are connected, a GOT and a peripheral such as a PC with GX Developer installed can be connected to them individually.

*4 Only the FX3U-232-BD and FX3U-422-BD function extension boards and the FX3U-232ADP function adapters can be connected to GOTs.

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)




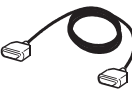








7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)


8

CC-Link CONNECTION (Via G4)


(3) Cable

Image	No.	Name	Model name		
	8	RS-422 cable • Between FXCPU and GOT • Between GOT and FX3U-422-BD	GT01-C10R4-8P (1m), GT01-C100R4-8P (10m), GT01-C300R4-8P (30m)	GT01-C30R4-8P (3m), GT01-C200R4-8P (20m), GT01-C300R4-8P (30m)	 
	9	RS-232 cable*1 • Between GOT and FX3U-232-BD • Between FX3U-232ADP and GOT	GT01-C30R2-9S (3m)		 
	10	RS-422 cable 1)*2 • Between FXCPU and GOT • Between GOT and FX3U-422-BD	GT10-C10R4-8P(1m) GT10-C100R4-8P(10m) GT10-C300R4-8P(30m)	GT10-C30R4-8P(3m) GT10-C200R4-8P(20m),	 (RS-422)
			GT10-C10R4-8P(1m)	GT10-C30R4-8P(3m)	 (RS-422)
	11	RS-232 cable 4) • Between GOT and FX3U-232-BD • Between FX3U-232ADP and GOT	(To be prepared by the user.  Section 3.2 Connection Cable)		 (RS-232)

*1 The RS-232 cable can be prepared by the user.

*2 For the connection to GOT, refer to the connection diagram. ( 3.2.1RS-232 cable)

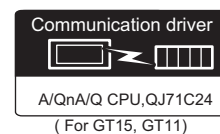3.1.8 Connecting to motion controller CPU (Q Series)




A motion controller CPU (Q Series) mounted to the multiple CPU system of the QCPU (Q mode) can be monitored.

The system configuration, connection conditions, and system equipment when connecting a GOT to a motion controller CPU (Q Series) are the same as those for the QCPU.

(☞ Section 3.1.1 Connecting to QCPU)



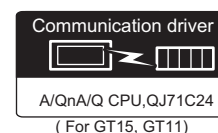3.1.9 Connecting to motion controller CPU (A Series)




The system configuration, connection conditions, and system equipment when connecting to a motion controller CPU (A Series) are the same as those for the ACPU.

(☞ Section 3.1.3 Connecting to ACPU)



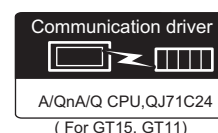3.1.10 Connecting to remote I/O station in MELSECNET/H network system



When the GOT is connected to a remote I/O station in the MELSECNET/H network system, the system configuration, connection conditions and system equipment are identical with those in the case of QCPU connection.

(☞ Section 3.1.1 Connecting to QCPU)



Connection to GT11 and remote I/O station on MELSECNET/H

GT11 can not access the master station on MELSECNET/H network system.

GT11 can access only the connected host station (remote I/O station).

3.2 Connection Cable

The RS-232 cable used for connecting the GOT to the FX PLC can be prepared by the user.
The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable	
		RS-232 cable (Refer to Section 3.2.1)	RS-422 cable (Refer to Section 3.2.1)
PC	QCPU	RS-232 cable 3)	RS-422 cable 2)
	QnACPU	-	RS-422 cable 2)
	FXCPU	-	RS-422 cable 1) RS-422 cable 2)
Function expansion board	FX1N-232-BD, FX2N-232-BD,FX3U-232-BD	RS-232cable 1) RS-232cable 4)	-
Function adapter	FX2NC-232ADP,FX3U-232ADP, CFX3U-485ADP		-
Function adapter	FX0N-232ADP	RS-232cable 2) RS-232cable 5)	-

3.2.1 RS-232 cable

1 Connection diagram

(1) RS-232cable 1) (for GT15, GT11)

GOT Side PIN No.	Cable connection	FX PLC side (Dsub9 pin)	
		PIN No.	Pin layout ^{*1}
1		1	<p>D-SUB 9 pins:female</p>
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	

*1 The pin layout shows the engagement face.

(2) RS-232cable 2) (for GT15, GT11)

GOT Side PIN No.	Cable connection	FX PLC side (Dsub25 pin)	
		PIN No.	Pin layout ^{*1}
2		2	<p>D-SUB 25 pins:male</p>
3		3	
8		5	
4		6	
5		7	
6		20	

*1 The pin layout shows the engagement face.

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

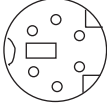
7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)



8

CC-Link CONNECTION (Via G4)

(3) RS-232cable 3) (for GT10)



GOT Side (terminal block)	Cable connection	Untied wire color of GT10-C30R2-6P	PLC side
Signal name			Pin layout
SD		Brown	 MINI-DIN 6Pin: male
RD		Red	
ER		Blue	
DR		Yellow	
SG		Green	
RS		Purple	
CS			
NC			
NC			

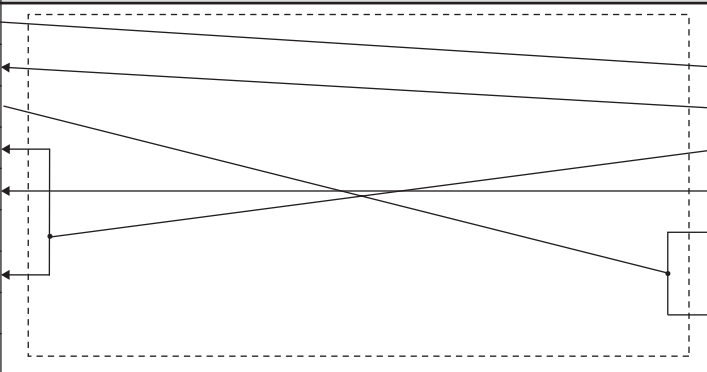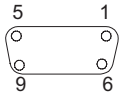(4) RS-232cable 4) (for GT10)

GOT Side (terminal block)	Cable connection	FX PLC side (Dsub 9 pin)	
		PIN No.	Pin layout* ¹
SD		1	 D-SUB 9 pins: female
RD		2	
ER		3	
DR		4	
SG		5	
RS		6	
CS		7	
NC		8	
NC		9	

*1 The pin layout shows the engagement face.

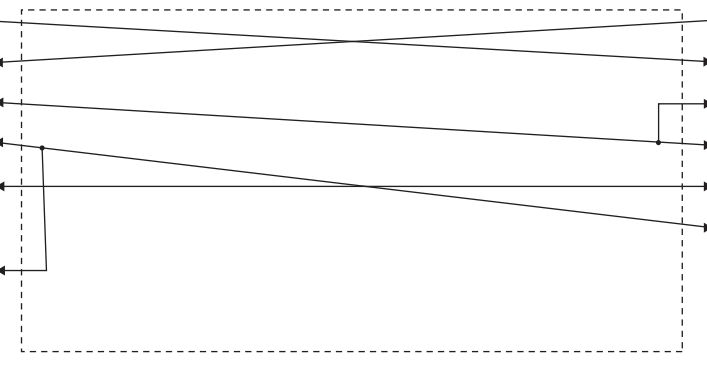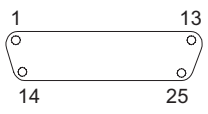(5) RS-232cable 5) (for GT10)

GOT Side (terminal block)	Cable connection	FX PLC side (Dsub 25 pin)	
		PIN No.	Pin layout* ¹
SD		2	 D-SUB 25 pins: male
RD		3	
ER		5	
DR		6	
SG		7	
RS		20	
CS			
NC			
NC			

*1 The pin layout shows the engagement face.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

GOT	Hardware version*1	Connector type	Model	Manufacturer	
GT1595-X	-	9-pin D-sub (male) inch screw fixed type	17LE-23090-27(D4CK)	DDK Ltd	
GT1585V-S	-		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd	
GT1585-STBA	B		17LE-23090-27(D4CK)	DDK Ltd	
	C		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.	
GT1585-STBD	-		17LE-23090-27(D4CK)	DDK Ltd	
GT1575V-S	-		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.	
GT1575-STBA	B		17LE-23090-27(D4CK)	DDK Ltd	
	C		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.	
GT1575-STBD	-		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.	
GT1575-VTBA	D		17LE-23090-27(D4CK)	DDK Ltd	
GT1575-VTBD	E				
	-				
GT1575-VN	-				
GT1572-VN	-				
GT1565-V	-				
GT1562-VN	-				
GT155□	-		17LE-23090-27(D3CC)		
GT1155-Q, GT1150-Q	-		9-pin terminal block*2	MC1.5/9-G-3.5THT	PHOENIX CONTACT Inc.
GT15-RS2-9P	-		9-pin D-sub (male) inch screw fixed typ	17LE-23090-27(D4CK)	DDK Ltd

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

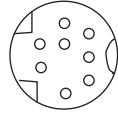
*2 The terminal block (MC1.5/9-ST-3.5BK or corresponding product)of the cable side is packed together with the GT10.

3 Precautions when preparing a cable

The length of the RS-232 cable must be 15m or less.

3.2.2 RS-422 cable

(1) RS-422 cable 1) (for GT10)

GOT Side (terminal block)		Cable connection	Untied wire color of GT10-C□□□R4-8P	PLC side
Signal name				Pin layout
24V products	5V products			
SDA			Brown	 MINI-DIN 8Pin: male
SDB			Red	
RDA			Orange	
RDB			Yellow	
SG			Green	
RSA			Black	
RSB			White	
CSA	INPUT --			
CSB	5VDC +			

(2) RS-422 cable 2) (for GT10)

GOT Side (terminal block)		Cable connection	Untied wire color of GT10-C□□□R4-8P	PLC side
Signal name				Pin layout
SDA				
SDB			Red	
RDA			Orange	
RDB			Yellow	
SG			Green	
RSA			Blue	
RSB			Purple	
CSA			Black	
CSB			White	

1 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface on the GOT(only GT10).

GOT	Hardware version*1	Connector type	Model	Manufacturer
GT10	-	9-pin terminal block*1	MC1.5/9-G-3.5THT	PHOENIX CONTACT Inc.

*1 The terminal block (MC1.5/9-ST-3.5BK or corresponding product)of the cable side is packed together with the GT10.

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

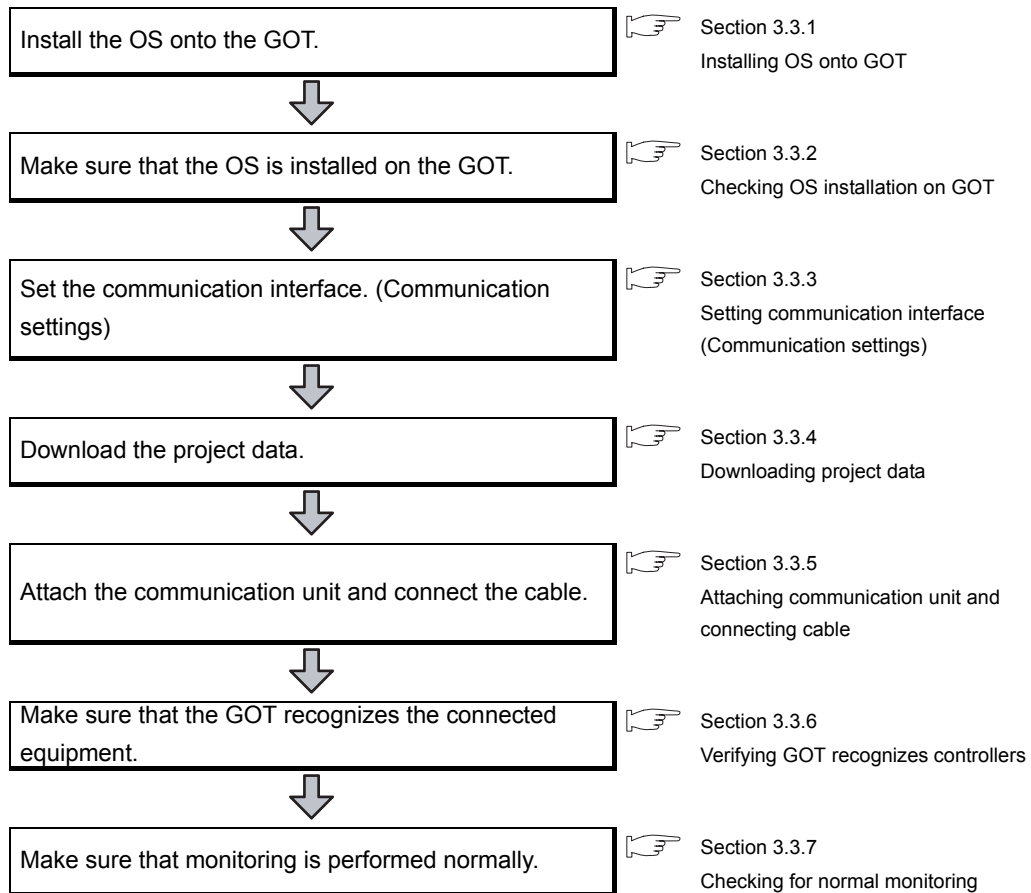
CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

3.3 Preparatory Procedure for Monitoring


The following shows the procedures to be taken before monitoring and corresponding reference sections.



3.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

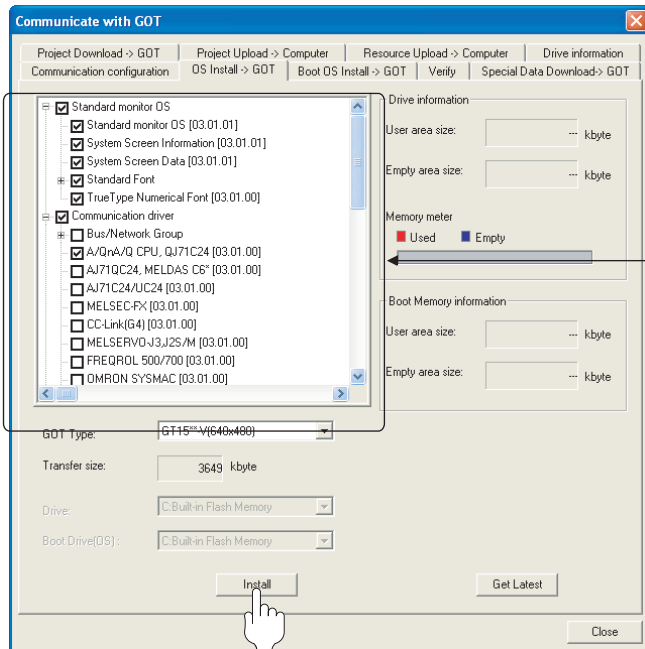GT Designer2 Version □ Basic Operation/Data Transfer Manual



Check either of the following under the Communication driver.

(for GT15, GT11)
•A/QnA/Q CPU, QJ71C24
•MELESEC-FX

(for GT10)
•QnA/Q CPU
•MELESEC-FX
•MELESEC-A

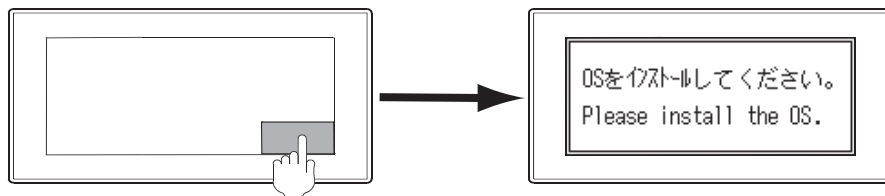
- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

Installing communication driver onto GT10

When installing communication driver onto the GOT, turn on the GOT in the OS transfer mode.

GT10 User's Manual


(Operating of transmission mode)




Turn on the GOT while the bottom right corner is touched.

3.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

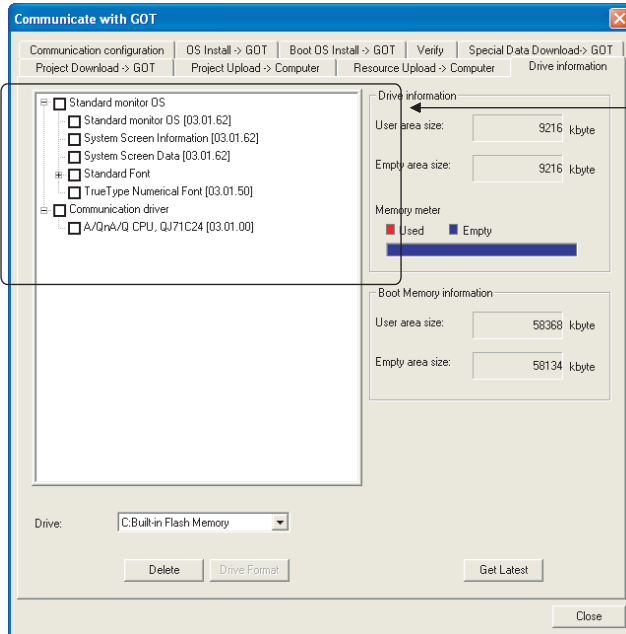 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

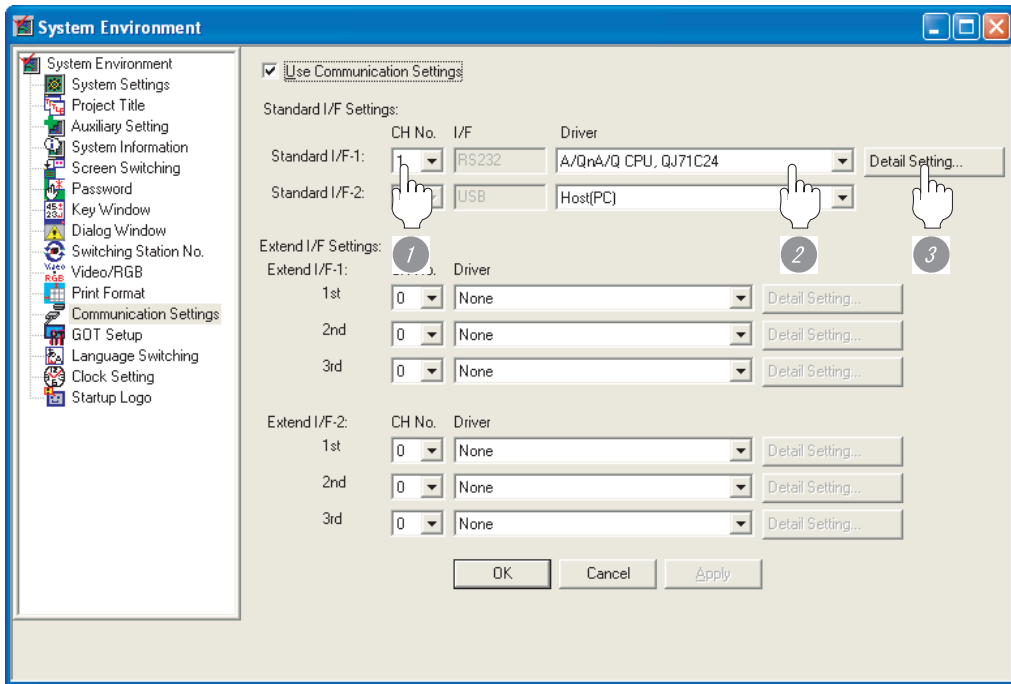
- 1) Standard monitor OS
- 2) Communication driver (either of the following)
 - (for GT15, GT11)
 - A/QnA/Q CPU, QJ71C24
 - MELESEC-FX
 - (for GT10)
 - QnA/Q CPU
 - MELESEC-FX
 - MELESEC-A


3.3.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set "1" to the channel No. used.
- 2 Set the following to the driver.
(For GT15, GT11)
 - When connecting to an A/QnA/QCPU or a motion controller: A/QnA/Q CPU, QJ71C24
 - When connecting to a FXCPU: MELSEC-FX
(For GT10)
When connecting to an QnA/QCPU
 - When connecting to a ACPUCPU: MELSEC-A
 - When connecting to a FXCPU: MELSEC-FX
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

(1) A/QnA/QCPU, QJ71C24

The screenshot shows a dialog box titled "Communication Detail Settings" with a close button (X) in the top right corner. The driver is set to "A/QnA/Q CPU, QJ71C24". The settings are as follows:

- Transmission Speed: 115200 (BPS)
- Data Bit: [Dropdown]
- Stop Bit: [Dropdown]
- Parity: [Dropdown]
- Sum Check: [Dropdown]
- Sum Check Type: [Dropdown]
- Retry: 0 (Times)
- Startup Time: 3 (Sec)
- Timeout Time: 3 (Sec)
- Adapter Address: 0
- Host Address: 1
- Delay Time: 0 (x 10 ms)
- Format: 1
- Interrupt Data Byte: 1 (Byte)
- Station No. Selection: [Dropdown]
- Special Interrupt Code: [Dropdown]
- Control Method: [Dropdown]

Buttons: OK, Cancel

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 115200bps> When the setting exceeds the limit of the connected equipment, communication is performed at the fastest transmission speed supported by the connected equipment	9600bps, 19200bps, 38400bps, 57600bps, 115200bps

(2) MELSEC-FX

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 38400bps>	9600bps, 19200bps, 38400bps, 57600bps, 115200bps

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

(3) QnA/Q CPU

Communication Detail Settings

Driver: QnA/Q CPU

Transmission Speed: 115200 (BPS)

Data Bit: []

Stop Bit: []

Parity: []

Sum Check: []

Sum Check Type: []

Retry: 0 (Times)

Startup Time: 3 (Sec)

Timeout Time: 3 (Sec)

Adapter Address: 0

Host Address: 1

Delay Time: 0 (x 10 ms)

Format: 1

Interrupt Data Byte: 1 (Byte)

Station No. Selection: []

Special Interrupt Code: []

Control Method: []

OK Cancel

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 115200bps> When the setting exceeds the limit of the connected equipment, communication is performed at the fastest transmission speed supported by the connected equipment.	9600bps, 19200bps, 38400bps, 57600bps, 115200bps

(4) MELSEC-A

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps> When the setting exceeds the limit of the connected equipment, communication is performed at the fastest transmission speed supported by the connected equipment.	9600bps,

Point


- (1) For GT15, GT11
 - (a) Communication interface setting by the Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
For details on the Utility, refer to the following manual.
 - ☞ GT15 User's Manual, GT11 User's Manual
 - (b) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.
- (2) For GT10
 - (a) Communication interface setting by the Utility
Although the communication interface setting can be checked, it cannot be changed.
For details on the Utility, refer to the following manual.
 - ☞ GT10 User's Manual
 - (b) Communication settings
Communication settings can be changed on only GT Designer2.


1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)

3.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

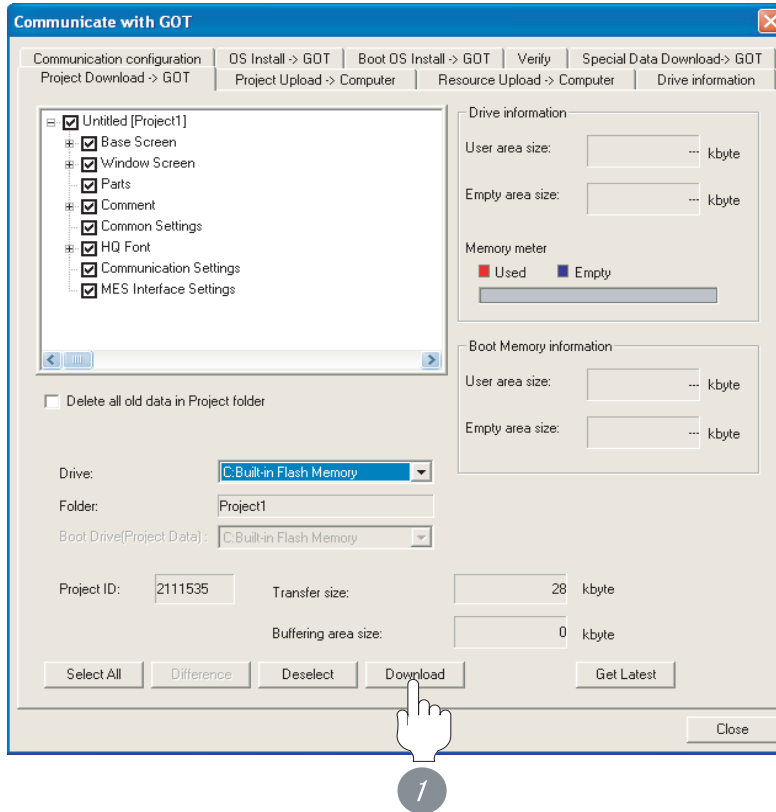 GT Designer2 Version Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


3.3.5 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

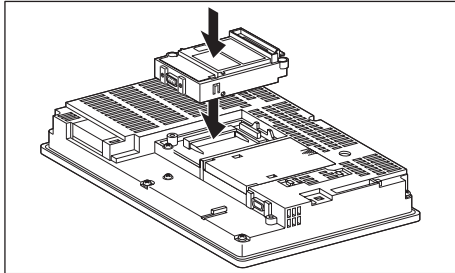1 Attaching the communication unit



- 1 Attach the serial communication unit to the extension unit connector on the GOT.



Serial communication unit

For details on the serial communication unit, refer to the following manual:

GT15 Serial Communication Unit User's Manual

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION
TO CPU

4

COMPUTER LINK
CONNECTION

5

MELSECNET/H
CONNECTION (PLC TO
PLC NETWORK)

6

MELSECNET/10
CONNECTION (PLC TO
PLC NETWORK)

7

CC-Link CONNECTION
(INTELLIGENT DEVICE
STATION)

8

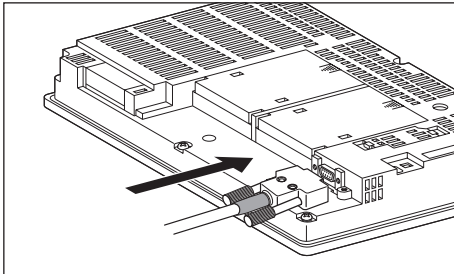
CC-Link CONNECTION
(Via G4)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

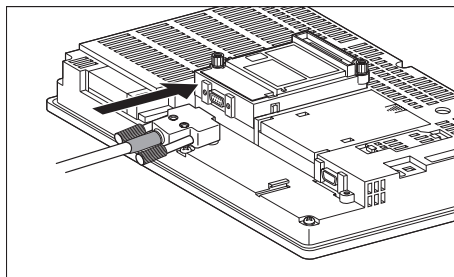- connection to the RS-232 communication unit




- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

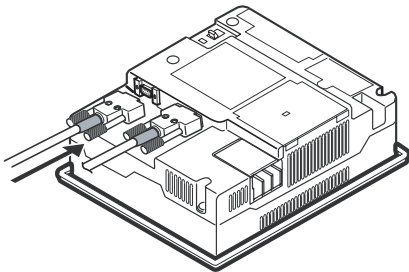(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

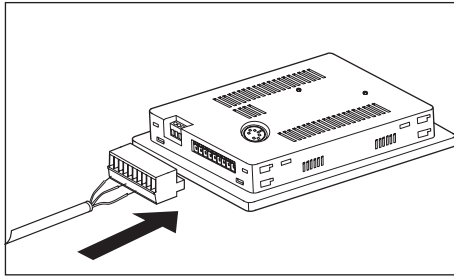(c) For the GT10 (built-in RS-232 interface)



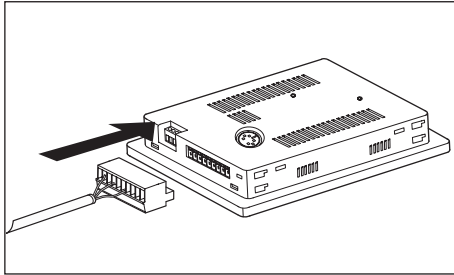- 1 Connect the RS-232 cable to the terminal block packed together with the GOT.




- 2 Connect the terminal block to the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

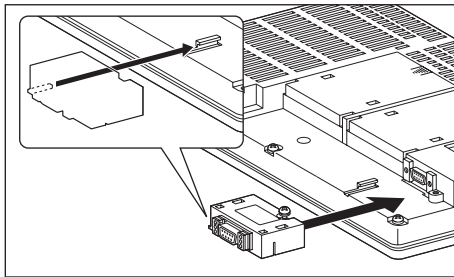- connection to the RS-232 interface




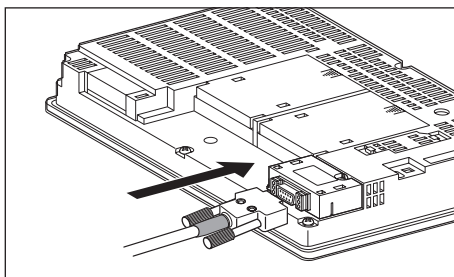- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

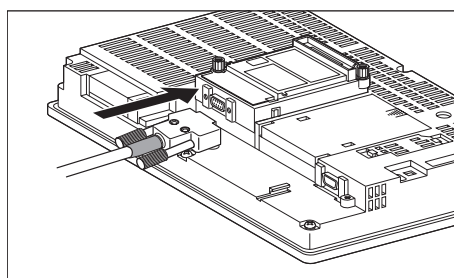- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)



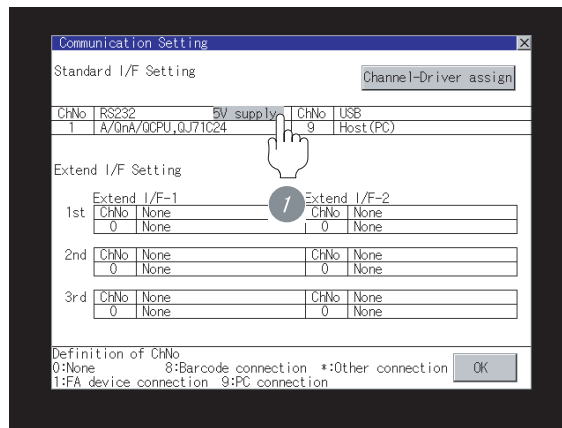
When using the RS-422 conversion unit

On "Communication settings" on the GOT utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the RS-422 conversion unit and the GOT utility, refer to the following manual:


GT15 Serial Communication Unit User's Manual

GT □ User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to "YES".

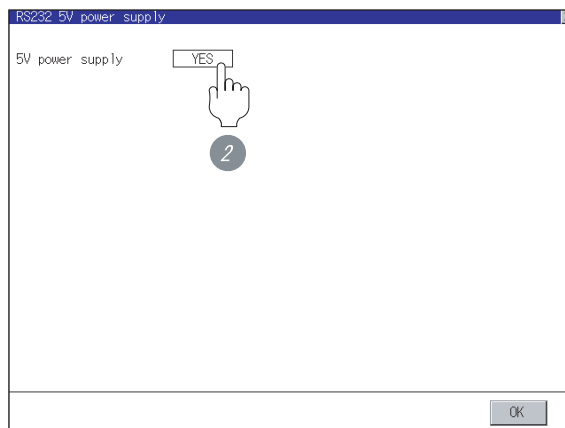


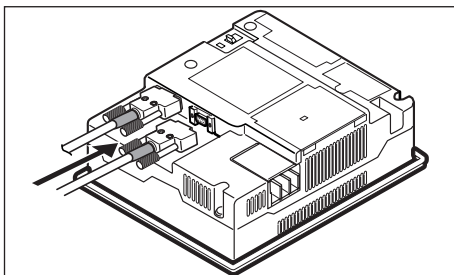(b) In the case of the GT11




1 Connect the RS-422 cable to the RS-422 interface on the GOT.

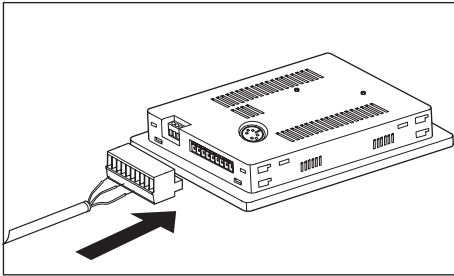(c) For the GT10 (built-in RS-422 interface)



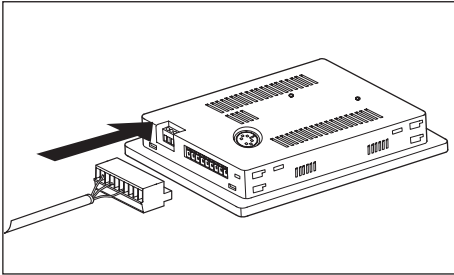- 1 Connect the RS-422 cable to the terminal block packed together with the GOT.



- 2 Connect the terminal block to the GOT.

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION
TO CPU

4

COMPUTER LINK
CONNECTION

5

MELSECNET/H
CONNECTION (PLC TO
PLC NETWORK)

6

MELSECNET/10
CONNECTION (PLC TO
PLC NETWORK)

7

CC-Link CONNECTION
(INTELLIGENT DEVICE
STATION)

8

CC-Link CONNECTION
(Via G4)

3.3.6 Verifying GOT recognizes controllers

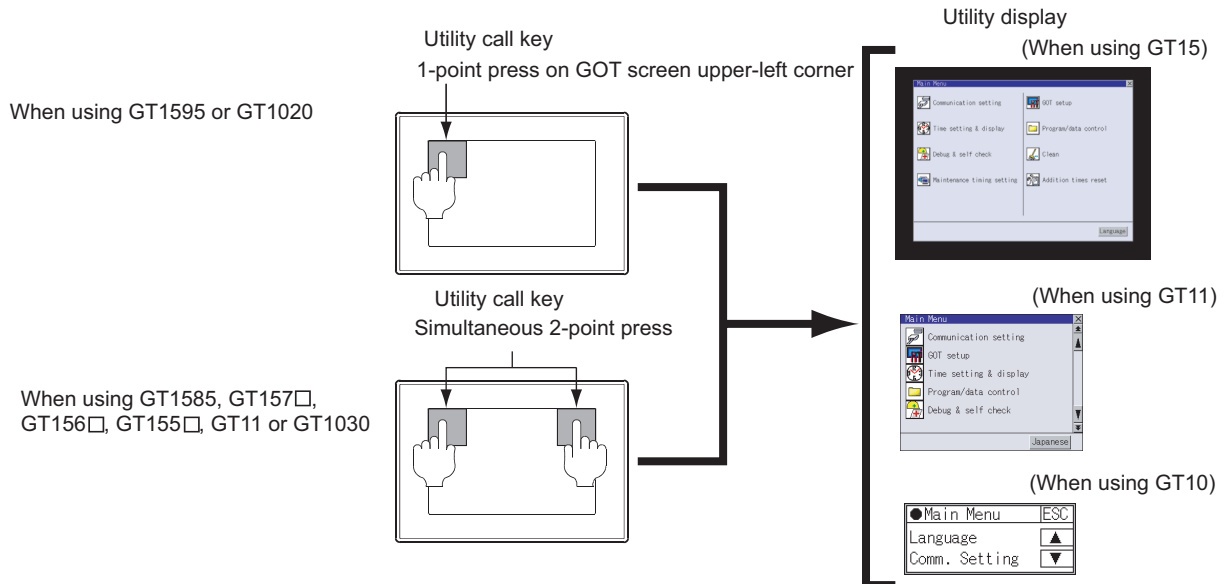
Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status



Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

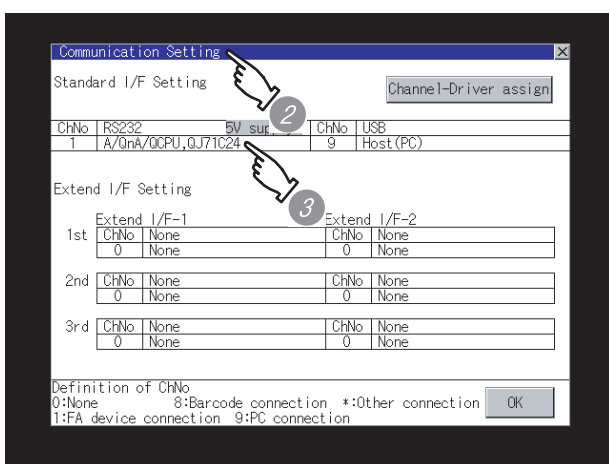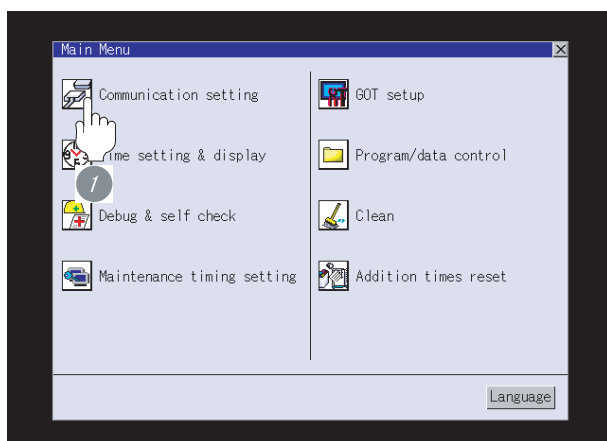GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

(For GT15, GT11)

- Communication driver (either of the following)
 A/QnA/Q CPU, QJ71C24
 MELSEC-FX

(For GT10)

- Communication driver (either of the following)
 QnA/Q CPU
 MELSEC-A
 MELSEC-FX

4 When the communication driver name is not displayed normally, carry out the following procedure again.

➡ Section 3.3 Preparatory Procedure for Monitoring




(1) For GT15, GT11

(a) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT15 User's Manual, GT11 User's Manual

(b) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

(2) For GT10

(a) Communication interface setting by the Utility

Although the communication interface setting can be checked, it cannot be changed.

For details on the Utility, refer to the following manual.

 GT10 User's Manual

(b) Communication settings

Communication settings can be changed on only GT Designer2.

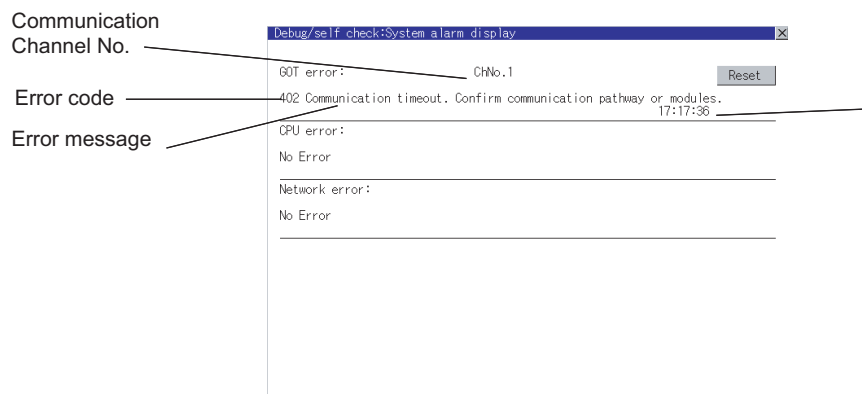
3.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT(for GT15, GT11)

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)




Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

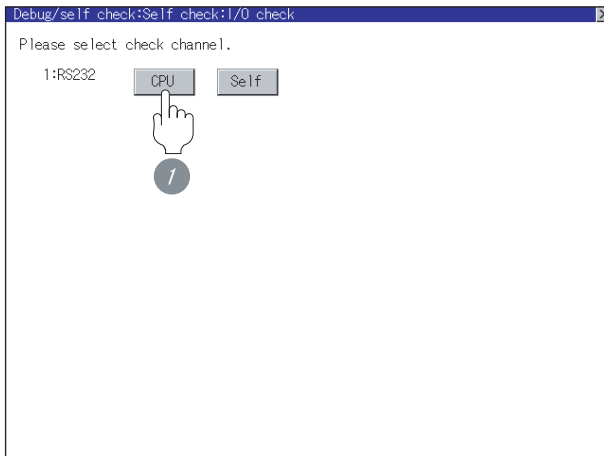
 GT Designer2 Version □ Screen Design Manual

2 Perform an I/O check(for GT15, GT11)


Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].
For details on the I/O check, refer to the following manual:

 GT □ User's Manual



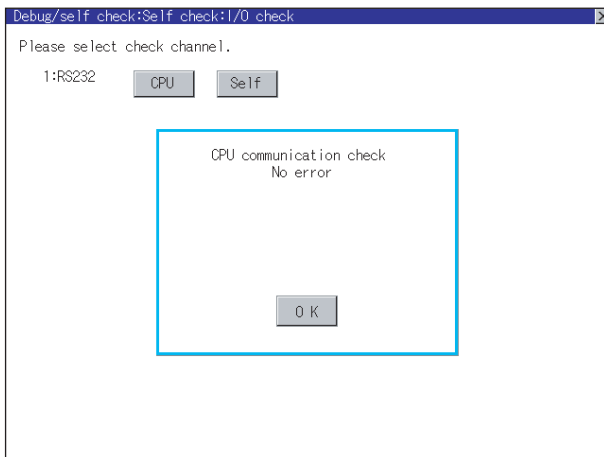- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Communication monitoring function (for GT10)

The communication monitoring is a function that checks whether the PLC can communicate with the GOT.

If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the communication monitoring function screen by [Main Menu] → [Comm. Setting] → [Comm. Monitor].

For details on the communication monitoring function, refer to the following manual:

 GT10 User's Manual

(Operation of communication monitoring function screen)

Main Menu



Touch [Comm. Setting]



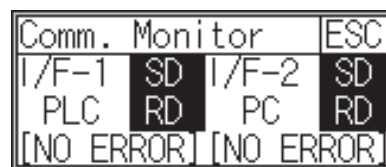
Touch [▼]



Communication settings



Touch [Comm. Monitor]



All settings related to communications are complete now.

Create screens on GT Designer2 and download the project data again.

3.4 Precautions

1 Communication settings

The communication driver names differs depending on the GT Designer2 versions.

GT Designer2 versions	
2.32J or before	2.43V or later
A/QnA/Q CPU, QJ71C24, MELDAS C6*	A/QnA/Q CPU, QJ71C24
AJ71QC24	AJ71QC24, MELDAS C6*

2 When connecting to FXCPU (FX3U/FX3UC series)







When the keyword of FXCPU (FX3U/FX3UC series) has been set, GOT may not be able to monitoring.

Perform an I/O check again. (☞ **2** Perform an I/O check(for GT15, GT11))

When the result of the I/O check is normal, check the status of keyword registration.

3.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
 DIRECT CONNECTION TO CPU 	Supporting the FX3U/FX3UC (Ver2.20 and above) connection	2.18U	Communication driver MELSEC-FX[02.01.**]
 DIRECT CONNECTION TO CPU 	Changing communication driver names	2.40	Communication driver A/QnA/Q CPU, QJ71C24 [03.01.**] AJ71QC24, MELDAS C6* [03.01.**]
 DIRECT CONNECTION TO CPU	Supporting the connections to GT10	2.43V	Communication driver QnA/Q CPU [01.00.**] MELSEC-FX [01.00.**] MELSEC-A [01.00.**]
 DIRECT CONNECTION TO CPU	Supporting the connections to GT1030	2.58L	Standard monitor OS [01.03.**] Communication driver QnA/Q CPU [01.00.**] MELSEC-FX [01.00.**] MELSEC-A [01.00.**]

COMPUTER LINK CONNECTION



4.1 System Configuration page 4-2

This section describes the equipment and cables needed for computer link connection.
Select a system suitable for your application.

4.2 Connection Cable page 4-20

This section describes the specifications of the cables needed for establishing a computer link connection.
Check the specifications of the connection cables.

4.3 Preparatory Procedures for Monitoring page 4-27

This section provides the procedures to be followed before performing monitoring in computer link connection.
The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

4.4 PLC Side Setting page 4-46

The PLC side settings for GOT connection are explained.
When checking the PLC side settings, refer to this section.

4.5 Precautions page 4-59

This section describes the precautions about computer link connection.

4.6 List of Functions Added by Version Upgrade page 4-60

This section describes the functions added by version upgrade of GT Designer2 or OS.

4.1 System Configuration

Select a system configuration suitable for your application.

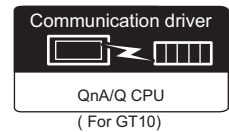
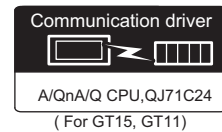


Conventions used in this section

Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.

4.1.1 Connecting to QCPU (Q mode)



1 System configuration and connection conditions

Connection conditions		System configuration *1
Number of GOTs	Distance	
1	15m or less	<p>3 4 Serial communication module</p> <p>7 RS-232 cable 1)</p> <p>MAX15m</p> <p>1</p> <p>GT15 GT11 Serial</p>
	1200m or less	<p>3 5 Serial communication module</p> <p>8 RS-422 cable</p> <p>MAX1200m</p> <p>2</p> <p>GT15 GT11 Serial</p>
1	15m or less	<p>3 4 Serial communication module</p> <p>9 RS-232 cable 3)</p> <p>MAX15m</p> <p>1 *2</p> <p>GT10 24V (RS-232)</p>
	1200m or less	<p>3 5 Serial communication module</p> <p>10 RS-422 cable 2)</p> <p>MAX1200m</p> <p>2 *2*3</p> <p>GT10 24V (RS-422)</p>

*1 Direct connection from the GOT to a basic model QCPU is recommended. For this reason, the GOT does not support the serial communication function of the basic model QCPU.

(☞ Section 3.1.1 Connecting to QCPU)

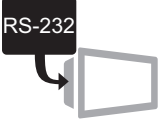





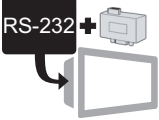






*2 GT10 is not supporting the connections to following CPU models .

CPU models : Q12PHCPU, Q25PHCPU, Q12PRHCPU, Q25PRHCPU

*3 When connecting GT10 to a multi-CPU system, the system configurations which consist of only High performance model CPUs (Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU, Q25HCPU) are supported.


2 System equipment

(1) GOT


Image	No.	Name	No.	Model name
	1	RS-232 interface • For RS-232 communication	—	(Built into GOT)    (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P	
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P	
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S	
		RS-422 interface • For RS-422 communication	—	(Built into GOT)   (RS-422)

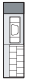*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

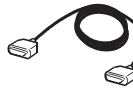


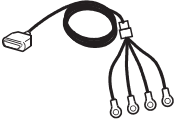





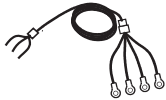
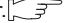

(2) PLC


Image	No.	Name	Model name	
	3	Serial communication module *2	QJ71C24,	QJ71C24N
	4		QJ71C24-R2,	QJ71C24N-R2
	5		QJ71C24N-R4	

*2 For details on the system configuration on the serial communication module side, refer to the following manual.

 Q Corresponding Serial Communication Module User's Manual (Basic)

(3) Cable

Image	No.	Name	Model name
	7	RS-232 cable 1)* ¹	GT09-C30R2-9P(3m)  
	8	RS-422 cable)* ¹	GT09-C30R4-6C(3m), GT09-C100R4-6C(10m) GT09-C200R4-6C(20m), GT09-C300R4-6C(30m)  
	7	RS-232 cable 3)	(To be prepared by the user.  Section 4.2 Connection Cable)  (RS-232)
	8	RS-422 cable 2)	(To be prepared by the user.  Section 4.2 Connection Cable)  (RS-422)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( 4.2 Connection Cable)

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)


7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

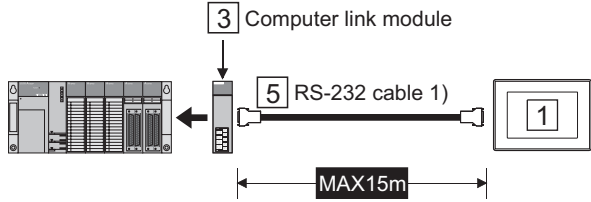


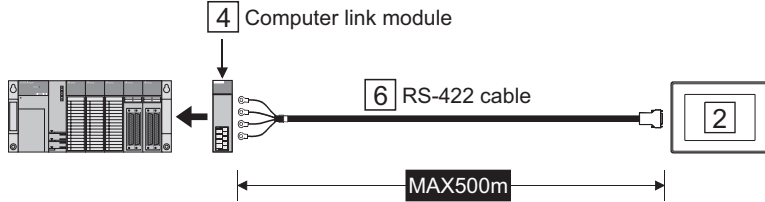


8

CC-Link CONNECTION (Via G4)

4.1.2 Connecting to QCPU (A mode)

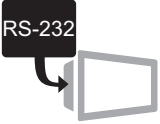



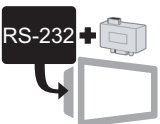

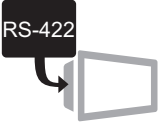



Communication driver

 AJ71C24/UC24
 (For only GT15, GT11)

1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	15m or less	 <p>3 Computer link module</p> <p>5 RS-232 cable 1)</p> <p>1</p> <p>MAX15m</p>  
	500m or less	 <p>4 Computer link module</p> <p>6 RS-422 cable</p> <p>2</p> <p>MAX500m</p>  


2 System equipment

(1) GOT


Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.


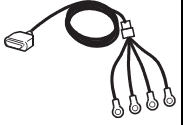
(2) PLC


Image	No.	Name	Model name
	3	Computer link module *2	A1SJ71UC24-R2, A1SJ71C24-R2, A1SJ71UC24-PRF,
	4		A1SJ71C24-PRF
			A1SJ71UC24-R4, A1SJ71C24-R4

*2 For the system configuration on the computer link module side, refer to the following manual.


 Computer Link Module (Com. link func./Print. func.) User's Manual

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 1)*1	GT09-C30R2-9P(3m)
	6	RS-422 cable*1	GT09-C30R4-6C(3m), GT09-C100R4-6C(10m) GT09-C200R4-6C(20m), GT09-C300R4-6C(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( 4.2 Connection Cable)

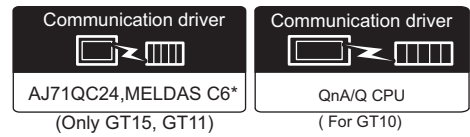4.1.3 Connecting to QnACPU type



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	15m or less	<p>3 4 Serial communication module 6 Computer link module *1 7 RS-232 cable 2) MAX15m</p> <div style="display: flex; justify-content: flex-end; align-items: center;"> </div>
	30m or less	<p>5 Serial communication module 8 RS-422 cable MAX30m</p> <div style="display: flex; justify-content: flex-end; align-items: center;"> </div>
	1200m or less	<p>3 5 Serial communication module 9 RS-422 cable MAX1200m</p> <div style="display: flex; justify-content: flex-end; align-items: center;"> </div>
	500m or less	<p>6 Computer link module *1 9 RS-422 cable MAX500m</p> <div style="display: flex; justify-content: flex-end; align-items: center;"> </div>
	15m or less	<p>3 4 Serial communication module 10 RS-232 cable 4) MAX15m</p> <div style="display: flex; justify-content: flex-end; align-items: center;"> </div>
	1200m or less	<p>3 5 Serial communication module 11 RS-422 cable 2) MAX1200m</p> <div style="display: flex; justify-content: flex-end; align-items: center;"> </div>

Connection conditions		System configuration
Number of GOTs	Distance	
1	30m or less	<p>The diagram illustrates the system configuration for connecting one GOT to a QnACPU type PLC. A rack of PLC modules is shown on the left. A 'Serial communication module' (labeled 5) is inserted into the rack. A 'GT10 24V (RS-422)' icon is shown to the right. An 'RS-422 cable 3)' (labeled 12) connects the serial communication module to a 'Computer Link Module' (labeled 2). A dimension line below the cable indicates a maximum distance of 'MAX30m'.</p>

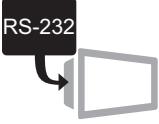





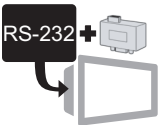






*1 When connecting to a computer link module, set the communication driver to "AJ71C24/UC24".

*2 GT10 does not support [6] Computer Link Module .

1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)


2 System equipment

(1) GOT


Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)    (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT)   (RS-422)

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

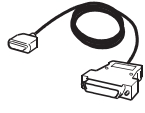


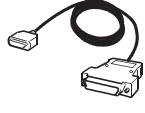


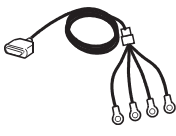










(2) PLC


Image	No.	Name	Model name
	3	Serial communication module *2	AJ71QC24, AJ71QC24N
	4		AJ71QC24-R2, AJ71QC24N-R2
	5		AJ71QC24-R4, AJ71QC24N-R4
	6	Computer link module *2	AJ71UC24

*2 For the system configuration on the serial communication module side, refer to the following manual.

-  • Serial Communications Module User's Manual (Modem Function Additional Version)
- Computer Link Module (Com. link func./Print. func.) User's Manual

(3) Cable

Image	No.	Name	Model name
	7	RS-232 cable 2)*1	GT09-C30R4-25P(3m)  
	8	RS-422 cable *1	GT01-C30R4-25P (3m), GT01-C100R4-25P (10m), GT01-C200R4-25P (20m), GT01-C300R4-25P (30m)  
	9		GT09-C30R4-6C(3m), GT09-C100R4-6C(10m), GT09-C200R4-6C(20m), GT09-C300R4-6C(30m)  
	10	RS-232 cable 4)	(To be prepared by the user.  Section 4.2 Connection Cable)  (RS-232)
	11	RS-422 cable 2)	(To be prepared by the user.  Section 4.2 Connection Cable)  (RS-422)
	12	RS-422 cable 3)	GT10-C30R4-25P(3m), GT10-C100R4-25P(10m), GT10-C200R4-25P(20m), GT10-C300R4-25P(30m)  (RS-422)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( 4.2 Connection Cable)

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

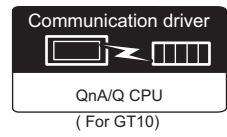
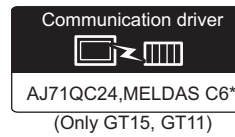
7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

4.1.4 Connecting to QnASCPU type



1 System configuration and connection conditions







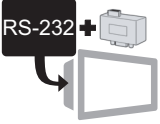



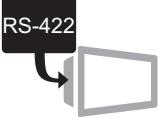


Connection conditions		System configuration
Number of GOTs	Distance	
1	15m or less	<p>3 4 Serial communication module 5 Computer link module *1 7 RS-232 cable 1) MAX15m 1</p> <p>GT15 GT11 Serial</p>
	1200m or less	<p>3 Serial communication module 8 RS-422 cable MAX1200m 2</p> <p>GT15 GT11 Serial</p>
	500m or less	<p>6 Computer link module *1 8 RS-422 cable MAX500m 2</p> <p>GT15 GT11 Serial</p>
	15m or less	<p>3 4 Serial communication module 9 RS-232 cable 3) MAX15m 1 *2</p> <p>GT10 24V (RS-232)</p>
	1200m or less	<p>3 Serial communication module 10 RS-422 cable 2) MAX1200m 2 *2</p> <p>GT10 24V (RS-422)</p>

*1 When connecting to a computer link module, set the communication driver to "AJ71C24/UC24".

*2 GT10 does not support [5] [6] Computer Link Module.


2 System equipment

(1) GOT


Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)    (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT)   (RS-422)

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	3	Serial communication module *2	A1SJ71QC24, A1SJ71QC24N, A1SJ71QC24N1
	4		A1SJ71QC24-R2, A1SJ71QC24N-R2, A1SJ71QC24N1-R2
	5	Computer link module *2	A1SJ71UC24-R2, A1SJ71C24-R2, A1SJ71UC24-PRF,
	6		A1SJ71UC24-R4, A1SJ71C24-R4

*2 For the system configuration on the serial communication module side, refer to the following manual.

-  • Serial Communications Module User's Manual (Modem Function Additional Version)
- Computer Link Module (Com. link func./Print. func.) User's Manual

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

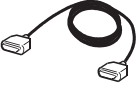
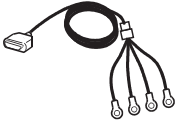






7


CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

(3) Cable

Image	No.	Name	Model name
	7	RS-232 cable 1)* ¹	GT09-C30R2-9P(3m)
	8	RS-422 cable)* ¹	GT09-C30R4-6C(3m), GT09-C100R4-6C(10m) GT09-C200R4-6C(20m), GT09-C300R4-6C(30m)
	9	RS-232 cable 3)	(To be prepared by the user.  Section 4.2 Connection Cable)  (RS-232)
	10	RS-422 cable 2)	(To be prepared by the user.  Section 4.2 Connection Cable)  (RS-422)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( 4.2 Connection Cable)

4.1.5 Connecting to AnCPU type

Communication driver
 AJ71C24/UC24
 (For only GT15, GT11)

1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	15m or less	<p>3 Computer link module</p> <p>4 RS-232 cable 2)</p> <p>1</p> <p>MAX15m</p> <p>GT11 Serial</p>
	500m or less	<p>3 Computer link module</p> <p>5 RS-422 cable</p> <p>2</p> <p>MAX500m</p> <p>GT11 Serial</p>

1
OVERVIEW

2
BUS CONNECTION

3
DIRECT CONNECTION TO CPU

4
COMPUTER LINK CONNECTION

5
MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

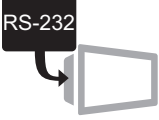



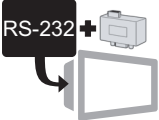

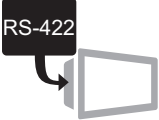



6
MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7
CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8
CC-Link CONNECTION (Via G4)


2 System equipment

(1) GOT


Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

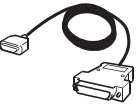
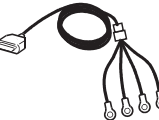
(2) PLC

Image	No.	Name	Model name
	3	Computer link module *2	AJ71UC24

*2 For the system configuration on the computer link module side, refer to the following manual.

 Computer Link Module (Com. link func./Print. func.) User's Manual

(3) Cable

Image	No.	Name	Model name
	4	RS-232 cable 2)*1	GT09-C30R2-25P(3m)
	5	RS-422 cable*1	GT09-C30R4-6C(3m), GT09-C100R4-6C(10m) GT09-C200R4-6C(20m), GT09-C300R4-6C(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( 4.2 Connection Cable)

4.1.6 Connecting to AnSCPU type

Communication driver
AJ71C24/UC24
(For only GT15, GT11)

1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	15m or less	<p>3 Computer link module</p> <p>5 RS-232 cable 1)</p> <p>MAX15m</p> <p>1</p> <p>GT15</p> <p>GT11 Serial</p>
	500m or less	<p>4 Computer link module</p> <p>6 RS-422 cable</p> <p>MAX500m</p> <p>2</p> <p>GT15</p> <p>GT11 Serial</p>

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7





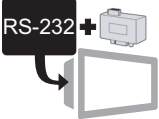





CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)


2 System equipment

(1) GOT


Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

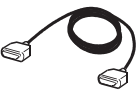
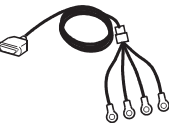
(2) PLC

Image	No.	Name	Model name
	3	Computer link module *2	A1SJ71UC24-R2, A1SJ71C24-R2, A1SJ71UC24-PRF, A1SJ71C24-PRF, A1SCPUC24-R2, A2CCPUC24, A2CCPUC24-PRF
	4		A1SJ71UC24-R4, A1SJ71C24-R4

*2 For the system configuration on the computer link module side, refer to the following manual.


 Computer Link Module (Com. link func./Print. func.) User's Manual

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 1)*1	GT09-C30R2-9P(3m)
	6	RS-422 cable*1	GT09-C30R4-6C(3m), GT09-C100R4-6C(10m) GT09-C200R4-6C(20m), GT09-C300R4-6C(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( 4.2 Connection Cable)

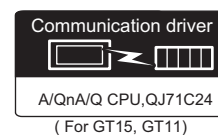4.1.7 Connecting to motion controller CPU (Q Series)



A motion controller CPU (Q Series) mounted to the multiple CPU system of the QCPU (Q mode) can be monitored.

The system configuration, connection conditions and system equipment when connecting the GOT to a motion controller CPU (Q Series) are the same as the case of the QCPU (Q mode).

(☞ Section 4.1.1 Connecting to QCPU (Q mode))



4.1.8 Connecting to motion controller CPU (A Series)

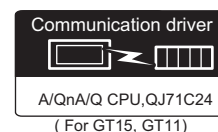


The system configuration, connection conditions and system equipment when connecting the GOT to a motion controller CPU (A273UCPU, A273UHCPU (-S3), A373UCPU (-S3)) are the same as the case of the AnCPU type. (☞ Section 4.1.5 Connecting to AnCPU type)

The system configuration, connection conditions and system equipment when connecting the GOT to a motion controller CPU (A171SHCPUN, A172SHCPUN, A173UHCPU (-S1)) are the same as the case of the AnSCPU type. (☞ Section 4.1.6 Connecting to AnSCPU type)



4.1.9 Connecting to remote I/O station in MELSECNET/H network system



When the GOT is connected to a remote I/O station in the MELSECNET/H network system, the system configuration, connection conditions and system equipment is identical with those in the case of QCPU connection. (☞ Section 4.1.1 Connecting to QCPU (Q mode))



Connection to GT11 and remote I/O station on MELSECNET/H

GT11 can not access the master station on MELSECNET/H network system.
Only the connected host station (remote I/O station) can be monitored.

4.2 Connection Cable

The RS-232 cable or RS-422 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model		Connection cable	
		RS-232 cable (See section 4.2.1)	RS-422 cable (See section 4.2.2)
Serial communication module (Q Series)	QJ71C24N, QJ71C24	RS-232 cable 1) RS-232 cable 3)	RS-422 cable 1) RS-422 cable 2)
	QJ71C24N-R2, QJ71C24-R2		—
	QJ71C24N-R4	—	RS-422 cable 1) RS-422 cable 2)
Serial communication module (QnA Series)	AJ71QC24N, AJ71QC24	RS-232 cable 2) RS-232 cable 4)	RS-422 cable 1) RS-422 cable 2)
	AJ71QC24N-R2, AJ71QC24-R2		—
	AJ71QC24N-R4, AJ71QC24-R4	—	RS-422 cable 1) RS-422 cable 2)
	A1SJ71QC24N1, A1SJ71QC24N, A1SJ71QC24	RS-232 cable 1) RS-232 cable 3)	RS-422 cable 1) RS-422 cable 2)
	A1SJ71QC24N1-R2, A1SJ71QC24N-R2, A1SJ71QC24-R2		—
Computer link module	AJ71UC24	RS-232 cable 2)	RS-422 cable 1)
	A1SJ71UC24-R2, A1SJ71UC24-PRF, A1SJ71C24-R2, A1SJ71C24-PRF	RS-232 cable 1)	—
	A1SJ71UC24-R4, A1SJ71C24-R4	—	RS-422 cable 1)
	A1SCPUC24-R2	RS-232 cable 1)	—
	A2CCPUC24, A2CCPUC24-PRF	RS-232 cable 1)	RS-422 cable 1)


4.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.

1 Connection diagram


(1) RS-232 cable 1) (when PLC CPU side connector is D-sub 9-pin)

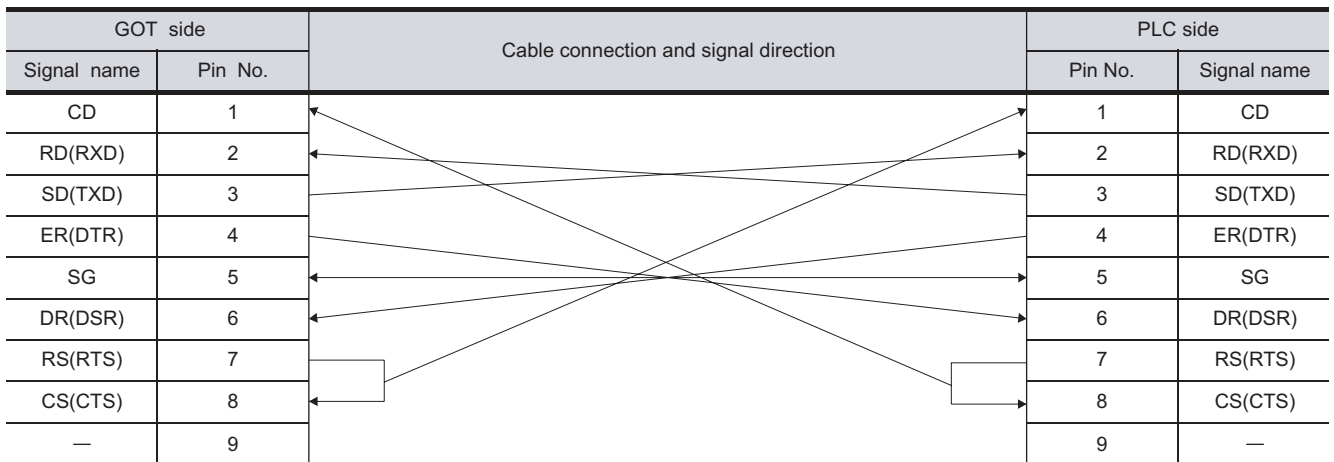(a) For the GT15




(b) For the GT11
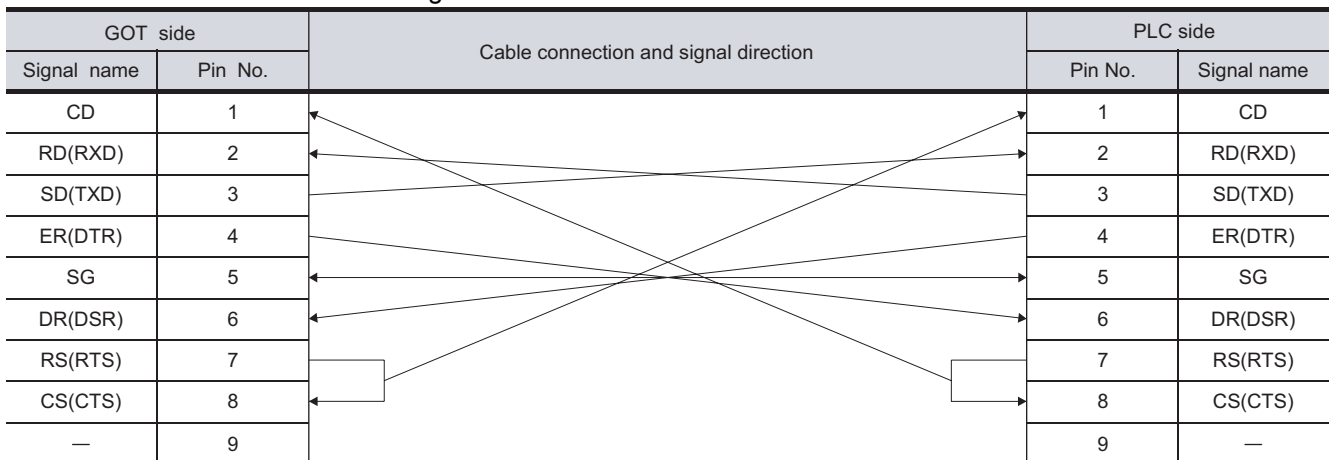
<When connecting to the Q/Qn Serial Communication Module>


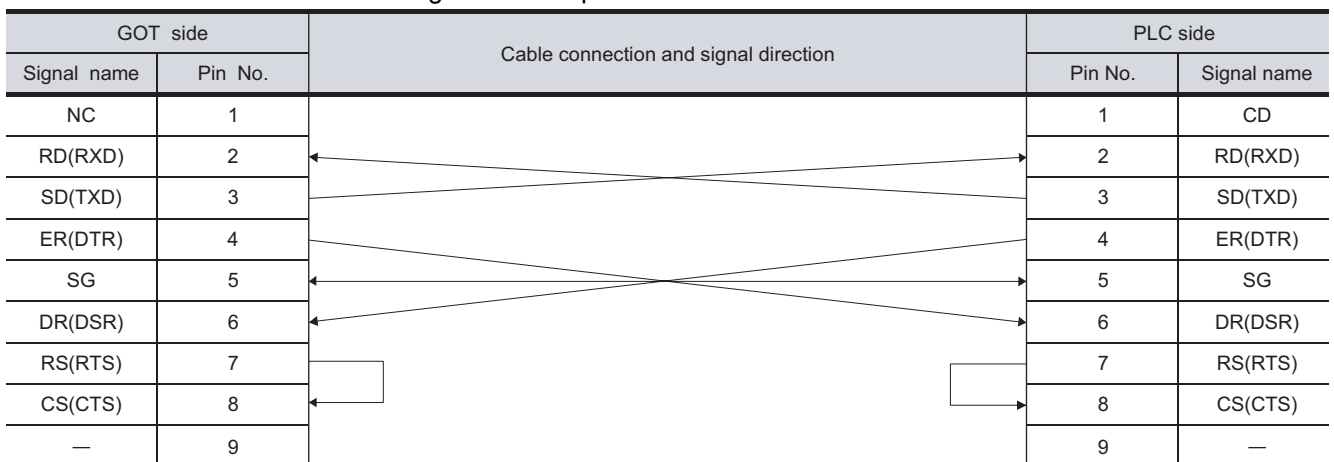
<When connecting to the Computer Link Module>



(2) RS-232 cable 2) (when PLC CPU side connector is D-sub 25-pin)

(a) For the GT15

GOT side		Cable connection and signal direction	PLC side	
Signal name	Pin No.		Pin No.	Signal name
CD	1		1	FG
RD(RXD)	2		2	SD(TXD)
SD(TXD)	3		3	RD(RXD)
ER(DTR)	4		4	RS(RTS)
SG	5		5	CS(CTS)
DR(DSR)	6		6	DR(DSR)
RS(RTS)	7		7	SG
CS(CTS)	8		8	CD
—	9		20	ER(DTR)

(b) For the GT11

<When connecting to the Q/Qn Serial Communication module>

GOT side		Cable connection and signal direction	PLC side	
Signal name	Pin No.		Pin No.	Signal name
CD	1		1	FG
RD(RXD)	2		2	SD(TXD)
SD(TXD)	3		3	RD(RXD)
ER(DTR)	4		4	RS(RTS)
SG	5		5	CS(CTS)
DR(DSR)	6		6	DR(DSR)
RS(RTS)	7		7	SG
CS(CTS)	8		8	CD
—	9		20	ER(DTR)

<When connecting to the Computer Link Module>

GOT side		Cable connection and signal direction	PLC side	
Signal name	Pin No.		Pin No.	Signal name
NC	1		1	FG
RD(RXD)	2		2	SD(TXD)
SD(TXD)	3		3	RD(RXD)
ER(DTR)	4		4	RS(RTS)
SG	5		5	CS(CTS)
DR(DSR)	6		6	DR(DSR)
RS(RTS)	7		7	SG
CS(CTS)	8		8	CD
—	9		20	ER(DTR)

(3) RS-232 cable 3) (when PLC CPU side connector is D-sub 9-pin)(for GT10)
 <Only for connecting to the Q/Qn Serial Communication module>

GOT side (terminal block)	Cable connection and signal direction	PLC side	
		Pin No.	Signal name
SD		1	CD
RD		2	RD(RXD)
ER		3	SD(TXD)
DR		4	ER(DTR)
SG		5	SG
RS		6	DR(DSR)
CS		7	RS(RTS)
NC		8	CS(CTS)
NC		9	—

(4) RS-232 cable 4) (when PLC CPU side connector is D-sub 25-pin)(for GT10)
 <Only for connecting to the Q/Qn Serial Communication module>

GOT side (terminal block)	Cable connection and signal direction	PLC side	
		Pin No.	Signal name
SD		1	FG
RD		2	SD(TXD)
ER		3	RD(RXD)
DR		4	RS(RTS)
SG		5	CS(CTS)
RS		6	DR(DSR)
CS		7	SG
NC		8	CD
NC		20	ER(DTR)

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

GOT	Hardware version*1	Connector type	Model	Manufacturer	
GT1595-X	-	9-pin D-sub (male) inch screw fixed type	17LE-23090-27(D4CK)	DDK Ltd	
GT1585V-S	-				
GT1585-STBA	B			GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C				
GT1585-STBD	-			17LE-23090-27(D4CK)	DDK Ltd
GT1575V-S	-				
GT1575-STBA	B			GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C				
GT1575-STBD	-			17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBA	D			GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E				
GT1575-VTBD	-				
GT1575-VN	-				
GT1572-VN	-			17LE-23090-27(D4CK)	DDK Ltd
GT1565-V	-				
GT1562-VN	-				
GT155□	-				
GT1155-Q, GT1150-Q	-			17LE-23090-27(D3CC)	
GT10	-		9-pin terminal block*2	MC1.5/9-G-3.5THT	PHOENIX CONTACT Inc.
GT15-RS2-9P	-		9-pin D-sub (male) inch screw fixed typ	17LE-23090-27(D4CK)	DDK Ltd

*1 For the confirmation method of GT15 hardware version, refer to the following manual.


 GT15 User's Manual

*2 The terminal block (MC1.5/9-ST-3.5BK or corresponding product)of the cable side is packed together with the GT10.

(2) PLC side connector

Use the connector compatible with the PLC side module.

For details, refer to the following manual.

 User's Manual for the serial communication module or computer link module

3 Precautions when preparing a cable

The length of the RS-232 cable must be 15m or less.

4.2.2 RS-422 cable

The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a PLC.

1 Connection diagram

(1) RS-422 cable 1) (for GT15, GT11)

GOT side		Cable connection and signal direction	PLC side
Signal name	Pin No.		Signal name
SDA	1		RDA
RDA	2		SDA
RSA	3		—
CSA	4		—
SG	5		SG
SDB	6		RDB
RDB	7		SDB
RSB	8		—
CSB	9		—
FG	—		FG

(2) RS-422 cable 2) (for GT10)

GOT side (terminal block)		Cable connection and signal direction	PLC side
Signal name			Signal name
SDA			RDA
RDA			SDA
RSA			—
CSA			—
SG			SG
SDB			RDB
RDB			SDB
RSB			—
CSB			—
			FG

(3) RS-422 cable 3) (for GT10)

GOT side (terminal block)	Cable connection	Untied wire color of GT10-C □□□ R4-25P	PLC side
Signal name			Pin layout
SDA		Brown	<p>D-SUB 25 pins: male</p>
SDB		Red	
RDA		Orange	
RDB		Yellow	
SG		Green	
RSA		Blue	
RSB		Purple	
CSA		Black	
CSB		White	

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Connector type	Model	Manufacturer
RS-422 conversion unit	9-pin D-sub (female)	17LE-13090-27(D2AC)	DDK Ltd.
GT11		17LE-13090-27(D3AC)	DDK Ltd.
GT10	9-pin terminal block*1	MC1.5/9-G-3.5THT	PHOENIX CONTACT Inc.
GT15-RS4-9S	9-pin D-sub (female)	17LE-13090-27(D3AC)	DDK Ltd.

*1 The terminal block (MC1.5/9-ST-3.5BK or corresponding product) of the cable side is packed together with the GT10.

(2) PLC side connector

Use the connector compatible with the PLC side module.

For details, refer to the following manual.

 User's Manual for the serial communication module or computer link module


3 Precautions when preparing a cable

The length of the RS-422 cable must be 1200m or less.

4 Connecting terminating resistors

Connect the terminating resistors (330 1/4W (orange/orange/brown/□)) on the serial communication module or computer link module side. No terminating resistor needs to be connected on the GOT side as one is already built into the GOT.

For details, refer to the following manual:

 The User's Manual of the serial communication module or computer link module

(1) Other than A2CCPUC24(-PRF)

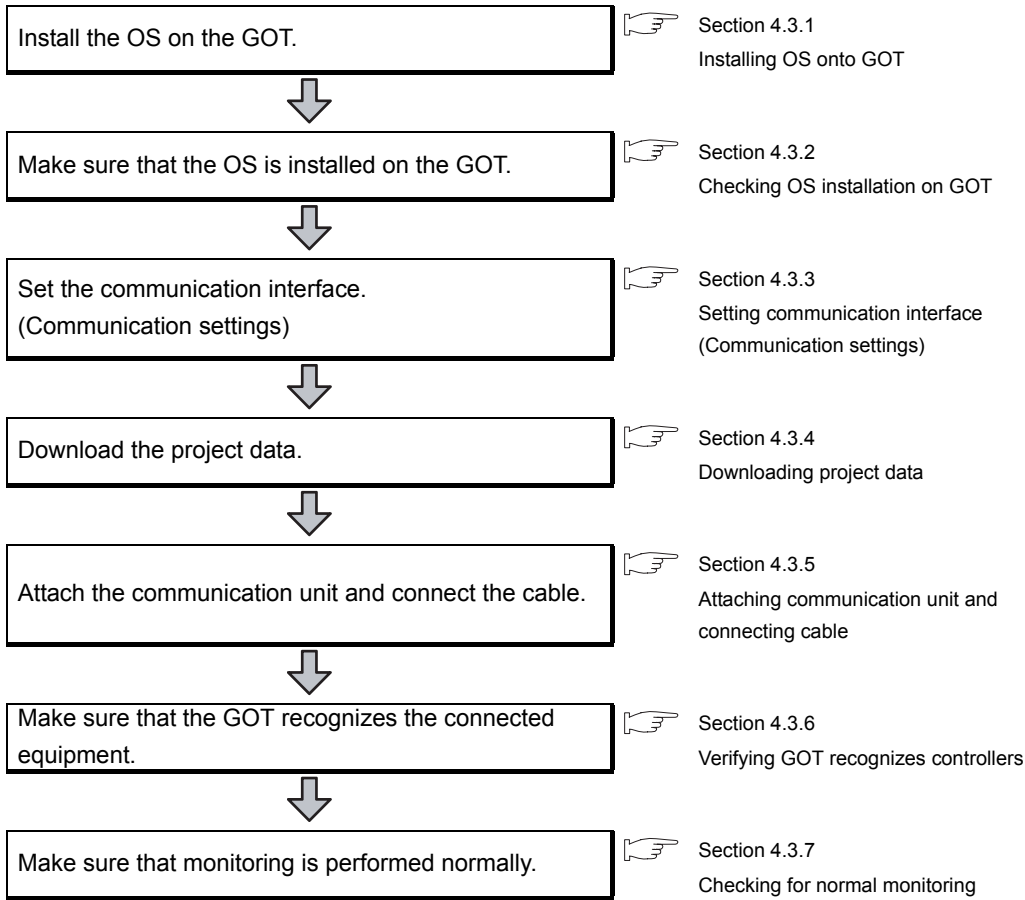
Connect the terminating resistors supplied with the module across RDA and RDB.

(2) A2CCPUC24(-PRF)

Set TXD and RXD on the terminating resistor setting pin to "A".

4.3 Preparatory Procedures for Monitoring

The following shows the procedures to be taken before monitoring and corresponding reference sections.



Confirming the PLC side setting

This section explains the GOT side setting.


When confirming the PLC side settings, refer to the following.

Section 4.4 PLC Side Setting

4.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

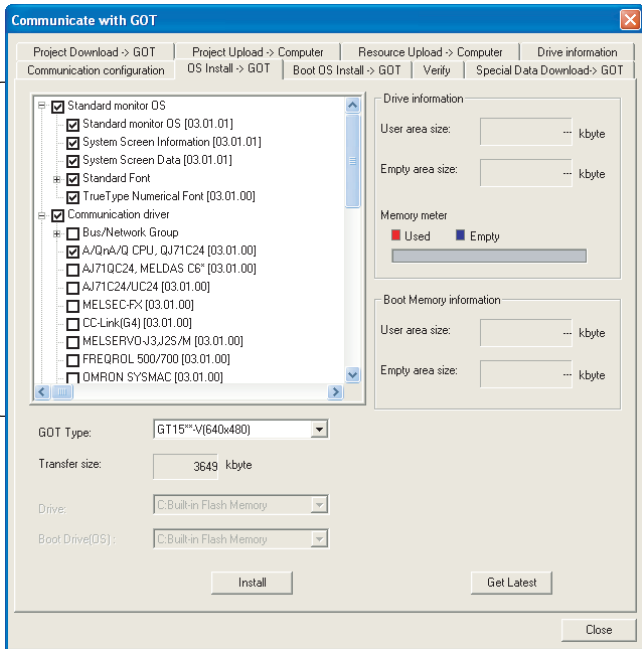GT Designer2 Version □ Basic Operation/Data Transfer Manual



①

Check any of the following under the Communication driver.

<For GT15, GT11>

- When connecting to QCPU (Q mode) or motion controller CPU (Q Series): A/QnA/QCPU, QJ71C24
- When connecting to QnACPU: AJ71QC24, MELDAS C6*
- When connecting to ACPU, QCPU (A mode) or motion controller CPU (A Series): AJ71C24/UC24

<For GT10>

QnA/Q CPU

- ① Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **[Install]** button.

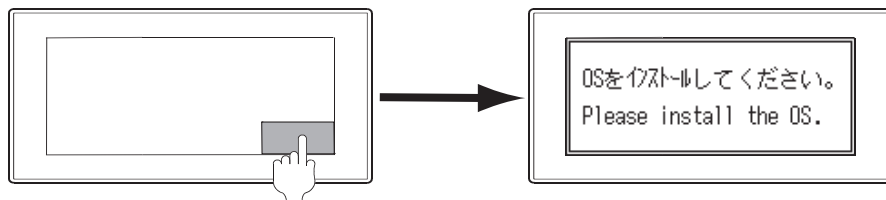


Installing communication driver onto GT10

When installing communication driver onto the GOT, turn on the GOT in the OS transfer mode.

GT10 User's Manual


(Operating of transmission mode)




Turn on the GOT while the bottom right corner is touched.

4.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

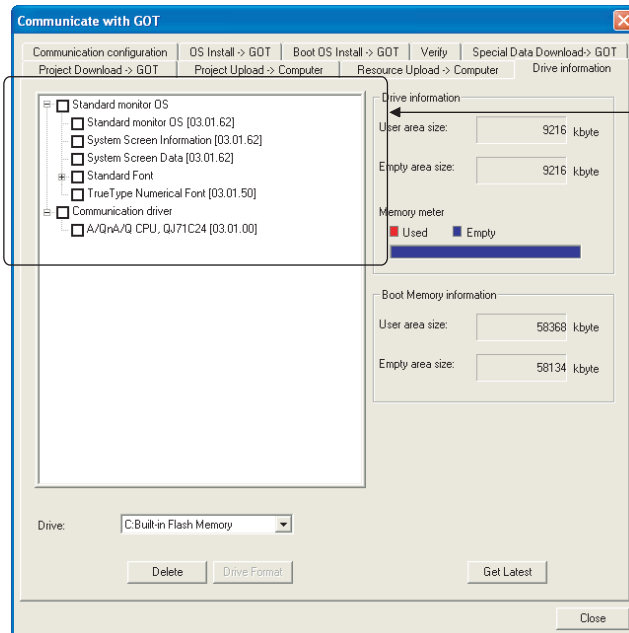 GT Designer2 Version □ Basic Operation/Data Transfer Manual



The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver (any of the following):

<For GT15, GT11>

- A/QnA/QCPU, QJ71C24
- AJ71QC24
- AJ71C24/UC24

<For GT10>

- QnA/Q CPU

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION
TO CPU

4

COMPUTER LINK
CONNECTION

5

MELSECNET/H
CONNECTION (PLC TO
PLC NETWORK)

6

MELSECNET/10
CONNECTION (PLC TO
PLC NETWORK)

7


CC-Link CONNECTION
(INTELLIGENT DEVICE
STATION)

8

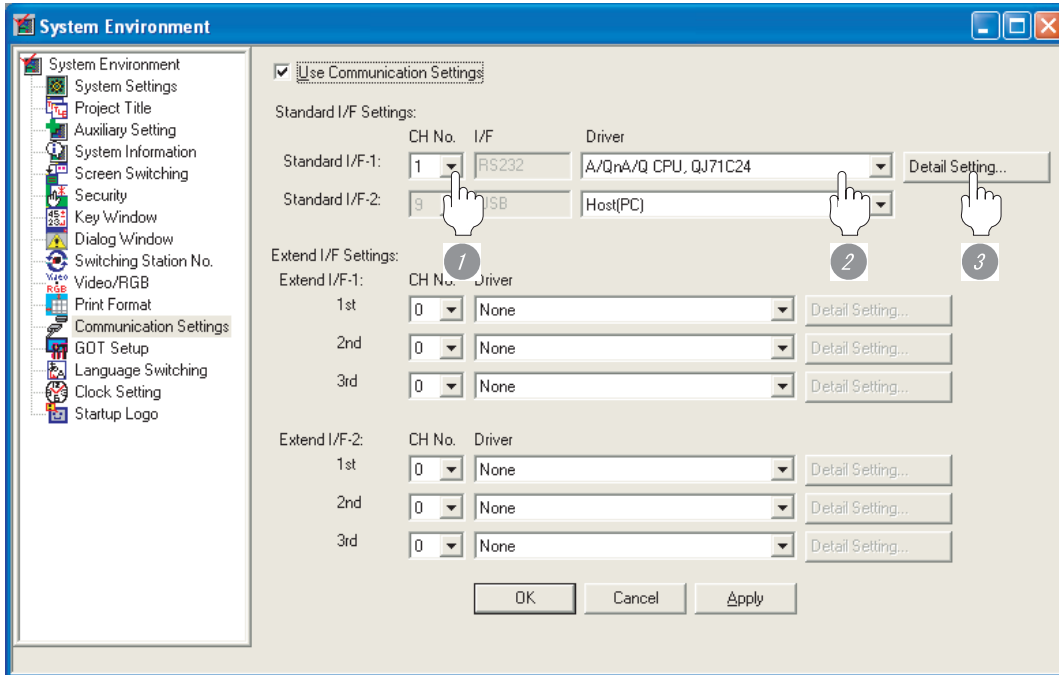
CC-Link CONNECTION
(Via G4)

4.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set [1] to the channel No. used.
- 2 Set the following in the driver setting box.
<For GT15, GT11>
 - When connecting to QCPU (Q mode) or motion controller CPU (Q Series):
A/QnA/QCPU, QJ71C24
 - When connecting to QnACPU: AJ71QC24, MELDAS C6*
 - When connecting to ACP, QCPU (A mode), motion controller CPU (A Series):
AJ71C24/UC24<For GT10>
 - When connecting to QCPU (Q mode) or QnACPU:QnA/Q CPU
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

(1) A/QnA/QCPU, QJ71C24

Item	Description	Range
Transmission Speed	<p>Set this item when change the transmission speed used for communication with the connected equipment.</p> <p><Default: 115200bps></p> <p>When the setting exceeds the limit of the connected equipment, communication is performed at the fastest transmission speed supported by the connected equipment</p>	<p>9600bps, 19200bps, 38400bps, 57600bps, 115200bps</p>

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION
TO CPU

4

COMPUTER LINK
CONNECTION

5

MELSECNET/H
CONNECTION (PLC TO
PLC NETWORK)

6

MELSECNET/10
CONNECTION (PLC TO
PLC NETWORK)

7

CC-Link CONNECTION
(INTELLIGENT DEVICE
STATION)

8

CC-Link CONNECTION
(Via G4)

(2) AJ71QC24, MELDAS C6*


The screenshot shows a 'Communication Detail Settings' dialog box with the following fields and values:

- Driver: AJ71QC24, MELDAS C6*
- Transmission Speed: 19200 (BPS)
- Data Bit: 8 bit
- Stop Bit: 1 bit
- Parity: Odd
- Sum Check: (empty)
- Sum Check Type: (empty)
- Retry: 0 (Times)
- Startup Time: 3 (Sec)
- Timeout Time: 3 (Sec)
- Adapter Address: 0
- Host Address: 1
- Delay Time: 0 (x 10 ms)
- Format: 1
- Interrupt Data Byte: 1 (Byte)
- Station No. Selection: (empty)
- Special Interrupt Code: (empty)
- Control Method: (empty)

Buttons: OK, Cancel

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps

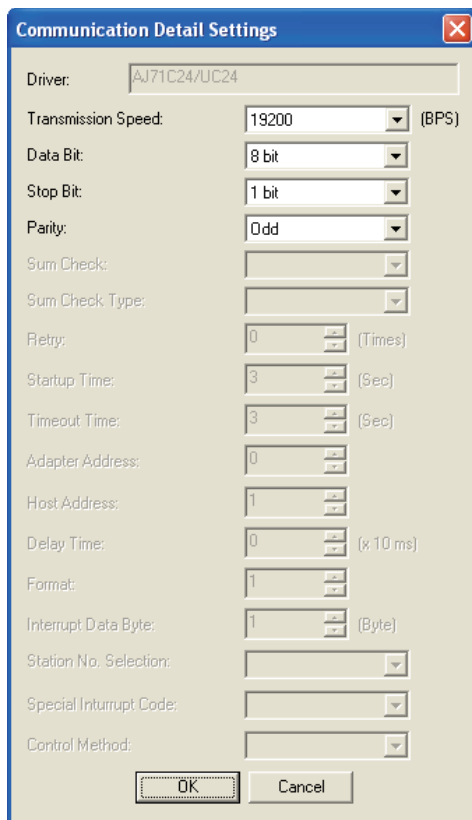(3) AJ71C24/UC24



Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	4800bps, 9600bps, 19200bps

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

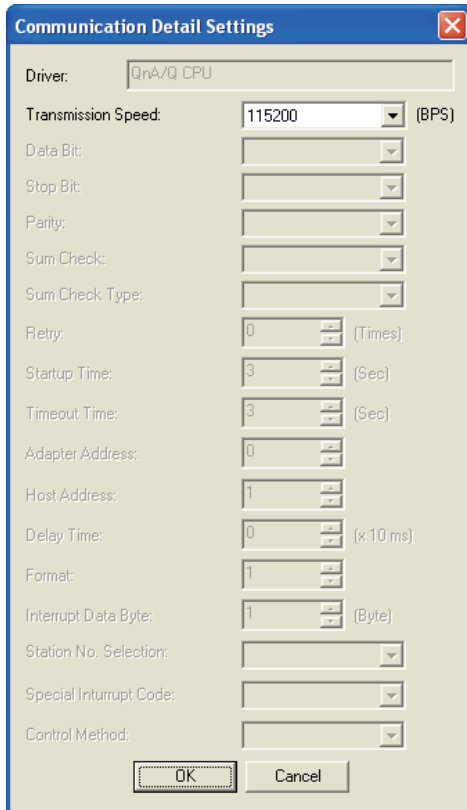
7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

(4) QnA/Q CPU



Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 115200bps> When the setting exceeds the limit of the connected equipment, communication is performed at the fastest transmission speed supported by the connected equipment	9600bps, 19200bps, 38400bps, 57600bps, 115200bps



(1) For GT15, GT11

(a) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

☞ GT15 User's Manual, GT11 User's Manual

(b) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

(2) For GT10

(a) Communication interface setting by the Utility

Although the communication interface setting can be checked, it cannot be changed.

For details on the Utility, refer to the following manual.

☞ GT10 User's Manual


(b) Communication settings

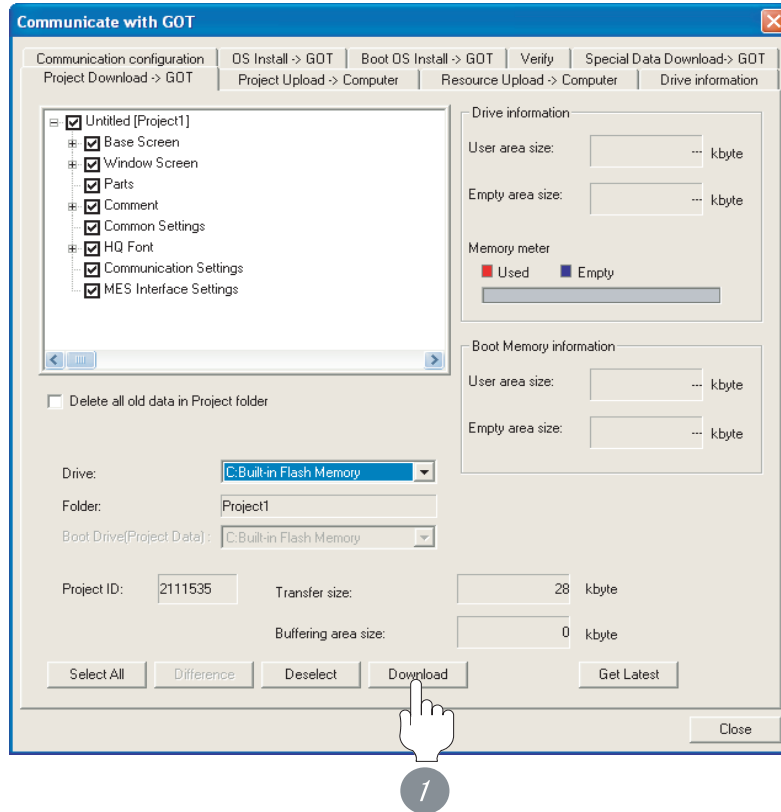
Communication settings can be changed on only GT Designer2.

4.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


4.3.5 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

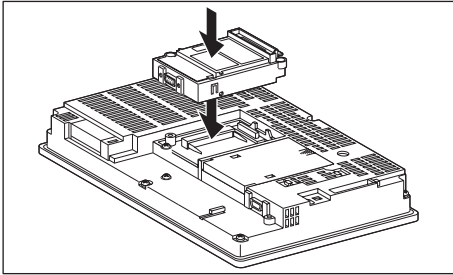1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.



Serial communication unit

For details on the serial communication unit, refer to the following manual:

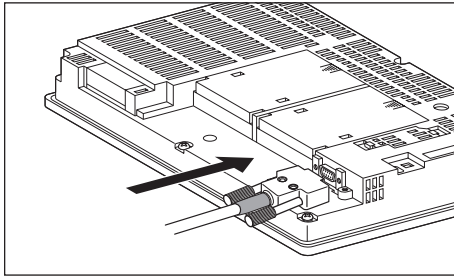
 [GT15 Serial Communication Unit User's Manual](#)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

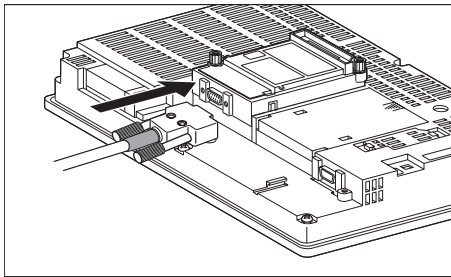- connection to the RS-232 communication unit




- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

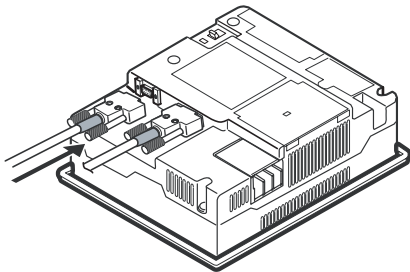(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

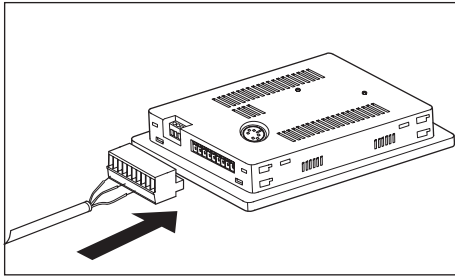(c) For the GT10 (built-in RS-232 interface)



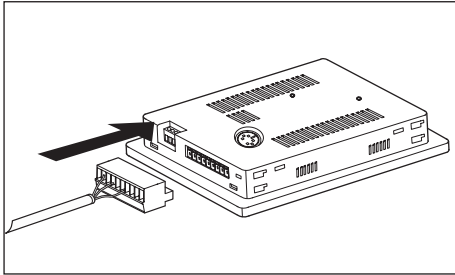1 Connect the RS-232 cable to the terminal block packed together with the GOT.




2 Connect the terminal block to the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

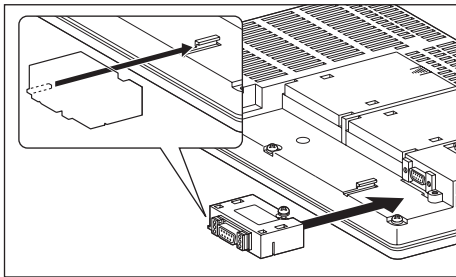• connection to the RS-232 interface




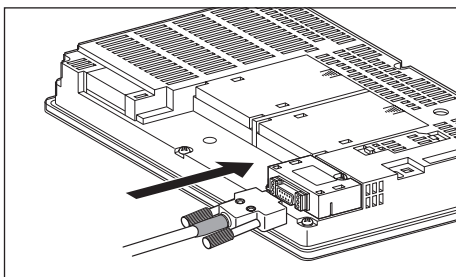1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



2 Connect the RS-422 cable to the RS-422 conversion unit.

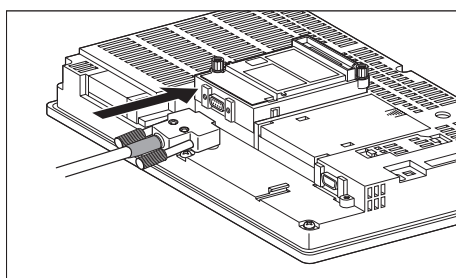• connection to the RS-422/485 communication unit



1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



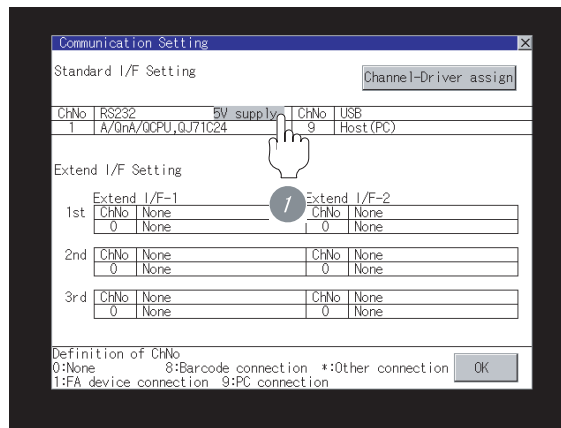
When using the RS-422 conversion unit

On "Communication settings" on the GOT utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the RS-422 conversion unit and the GOT utility, refer to the following manual:


➔ GT15 Serial Communication Unit User's Manual

➔ GT □ User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to "YES".

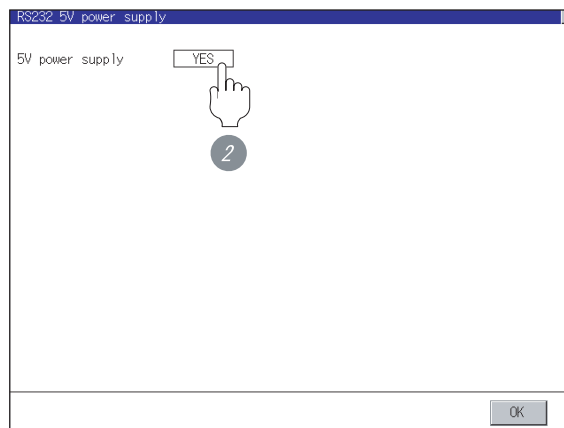


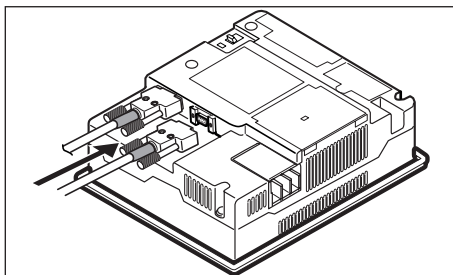(b) In the case of the GT11




1 Connect the RS-422 cable to the RS-422 interface on the GOT.

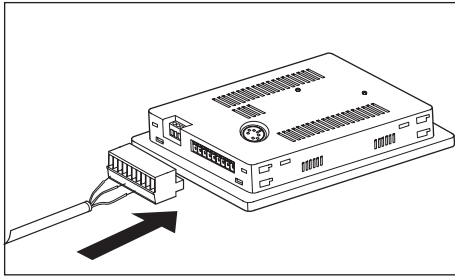(c) For the GT10 (built-in RS-422 interface)



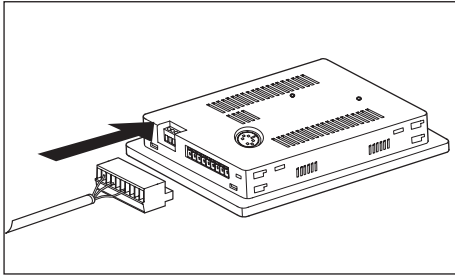- 1 Connect the RS-422 cable to the terminal block packed together with the GOT.



- 2 Connect the terminal block to the GOT.

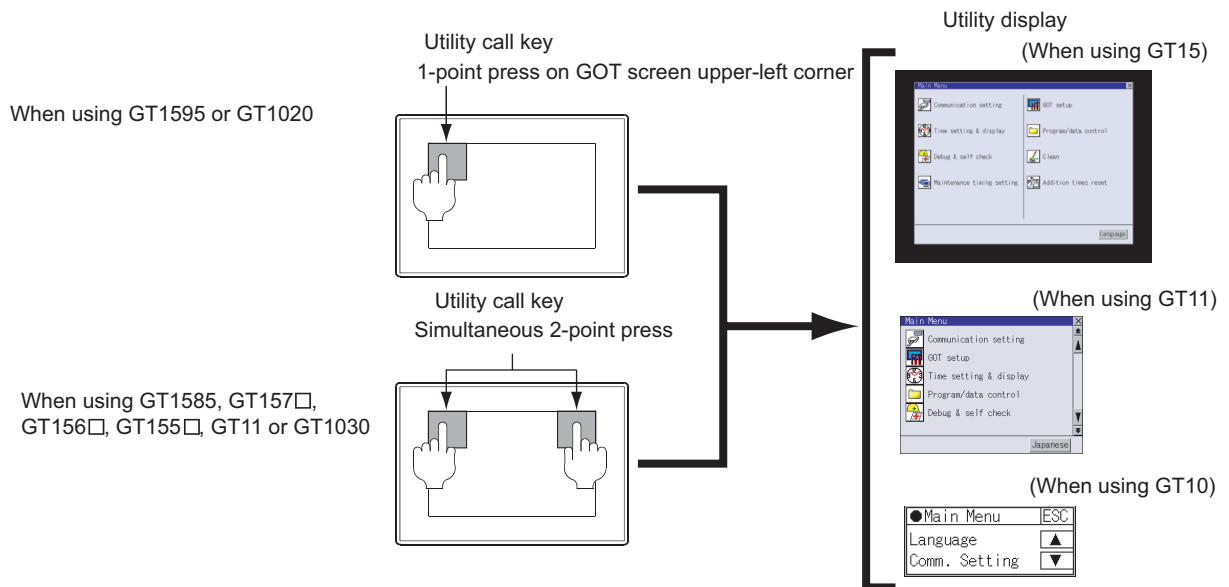
4.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point


When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

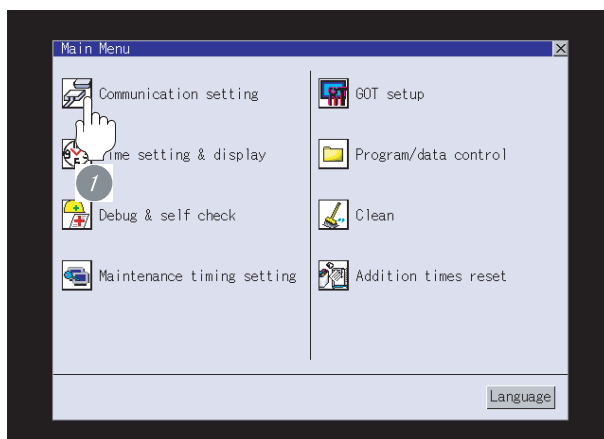☞ GT□ User's Manual



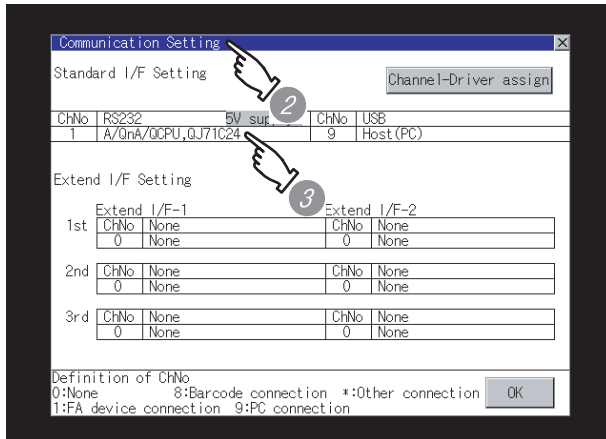- 1 After powering up the GOT, touch [Main Menu] → [Communication Setting] from the Utility.



2 The [Communication Settings] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver (either of the following)
 - <For GT15, GT11>
 - A/QnA/QCPU, QJ71C24
 - AJ71QC24, MELDAS C6*
 - AJ71C24/UC24
 - <For GT10>
 - QnA/Q CPU

4 When the communication driver name is not displayed normally, carry out the following procedure again.

Section 4.3 Preparatory Procedures for Monitoring

Point

(1) For GT15, GT11

(a) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

GT15 User's Manual, GT11 User's Manual

(b) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

(2) For GT10

(a) Communication interface setting by the Utility

Although the communication interface setting can be checked, it cannot be changed.

For details on the Utility, refer to the following manual.

GT10 User's Manual

(b) Communication settings

Communication settings can be changed on only GT Designer2.

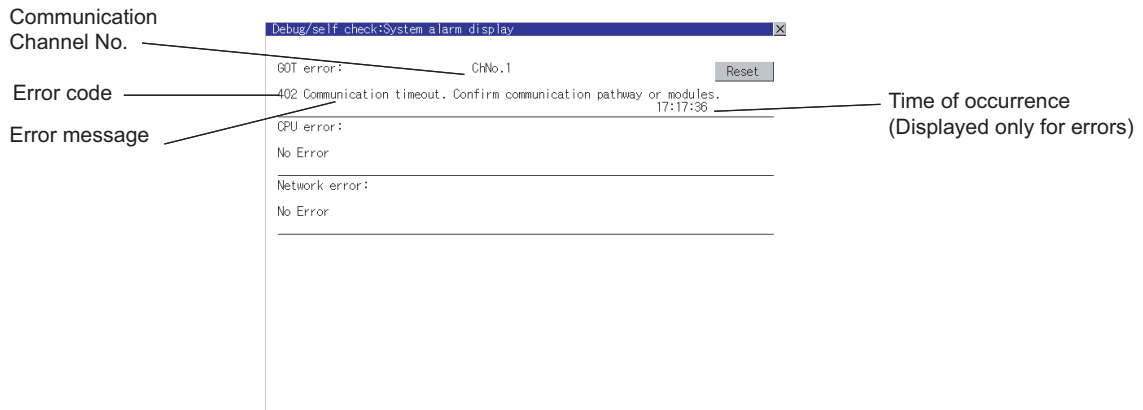
4.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT(for GT15, GT11)

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT User's Manual (When using GT15)



Communication Channel No. —

Error code —

Error message —

Time of occurrence (Displayed only for errors) —



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version Screen Design Manual

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

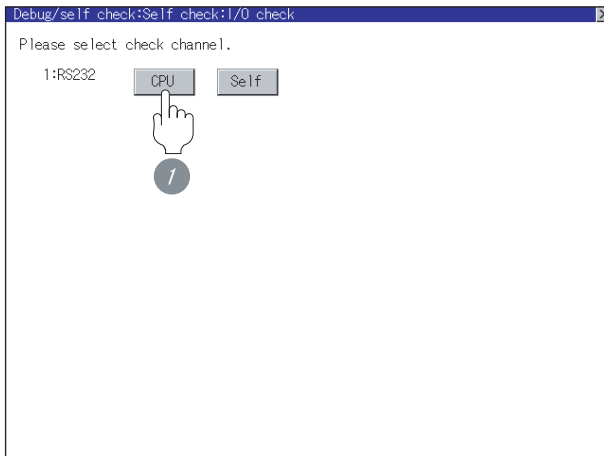
CC-Link CONNECTION (Via G4)

2 Perform an I/O check(for GT15, GT11)


Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check]. For details on the I/O check, refer to the following manual:

 GT □ User's Manual



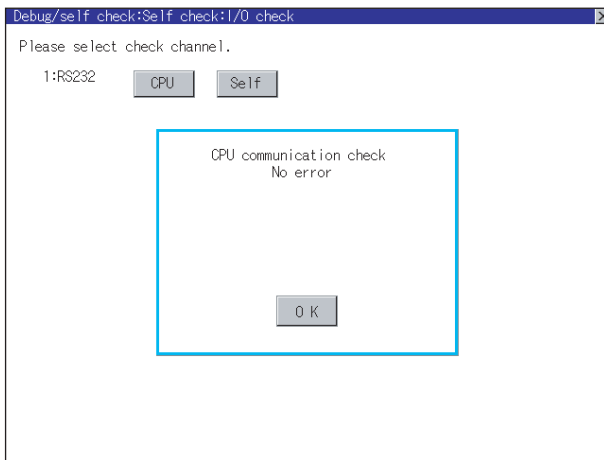- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side. Confirm if the PLC side setting is correct.

 Section 4.4 PLC Side Setting

4 Communication monitoring function(for GT10)

The communication monitoring is a function that checks whether the PLC can communicate with the GOT.

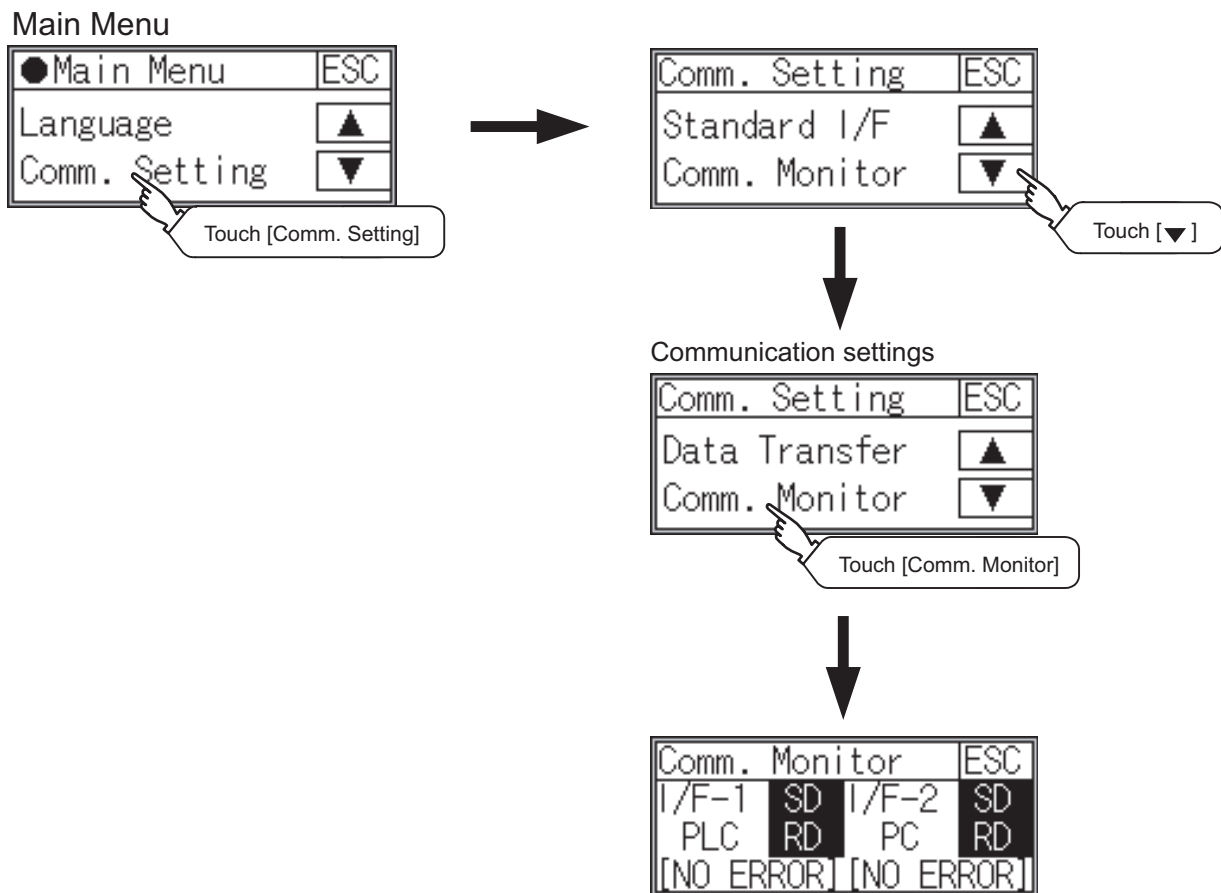
If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the communication monitoring function screen by [Main Menu] → [Comm. Setting] → [Comm. Monitor] .

For details on the communication monitoring function, refer to the following manual:

 GT10 User's Manual

(Operation of communication monitoring function screen)



All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

4.4 PLC Side Setting

The GOT operates under the following transmission specifications when it is connected to a Mitsubishi PLC in the computer link connection.

Transmission specifications	Setting
Data bit	8 bits
Parity bit	Yes (Odd)
Stop bit	1 bit
Sum check	Yes
Transmission speed	Set the same transmission speed on both the GOT and the PLC.

The PLC side settings (the serial communication module, computer link module) are explained in section 4.4.1 to 4.4.3.

Model		Connection channel	
		CH1	CH2
Serial communication module (Q Series)	QJ71C24N, QJ71C24	Section 4.4.1	Section 4.4.1
	QJ71C24N-R2, QJ71C24-R2		
	QJ71C24N-R4		
Serial communication module (QnA Series)	AJ71QC24N, AJ71QC24	Section 4.4.2	Section 4.4.2
	AJ71QC24N-R2, AJ71QC24-R2		
	AJ71QC24N-R4, AJ71QC24-R4		
	A1SJ71QC24N1, A1SJ71QC24N, A1SJ71QC24		
	A1SJ71QC24N1-R2, A1SJ71QC24N-R2, A1SJ71QC24-R2		

Model		Connection interface	
		RS-232	RS-422
Computer link module	AJ71UC24	Section 4.4.3	Section 4.4.3
	A1SJ71UC24-R2, A1SJ71UC24-PRF, A1SJ71C24-R2, A1SJ71C24-PRF	Section 4.4.3	—
	A1SJ71UC24-R4, A1SJ71C24-R4	—	Section 4.4.3
	A1SCPUC24-R2	Section 4.4.3	—
	A2CCPUC24, A2CCPUC24-PRF	Section 4.4.3	Section 4.4.3

4.4.1 Connecting serial communication module (Q Series)



Serial communication module (Q Series)

For details of the serial communication module (Q Series), refer to the following manual.

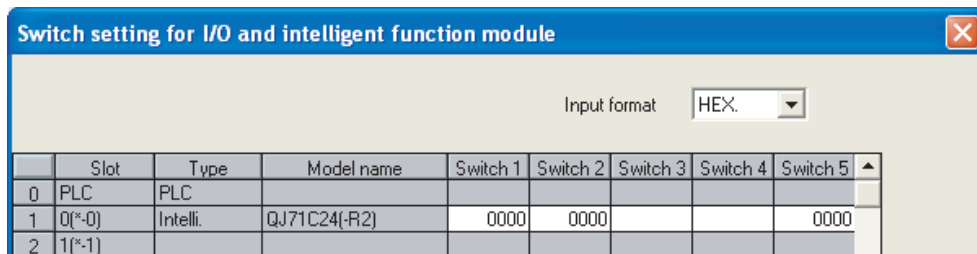
Q Corresponding Serial Communication Module User's Manual (Basic)

1 [Intelligent function module switch setting] on GX Developer

[The intelligent function module switch setting] on GX Developer is not necessary. (When no [intelligent function module switch setting] is made, the module runs in the GX Developer connection mode.)


A module can be also connected to a GOT by making the following [intelligent function module switch setting] on GX Developer.

(1) When connecting to the CH1 side



Switch No.	Bit		Description	Setting
	Position	Specified value		
Switch 1	b0	OFF	CH1 transmission settings *1	(Operates according to the GOT side specifications.)
	b1	OFF		
	b2	OFF		
	b3	OFF		
	b4	OFF		
	b5	OFF		
	b6	OFF		
	b7	OFF		
	b8 to b15	—	CH1 transmission speed setting *2	
Switch 2	—	—	CH1 Communication protocol setting	GX Developer connection
Switch 5	—	—	Station number setting	0th station

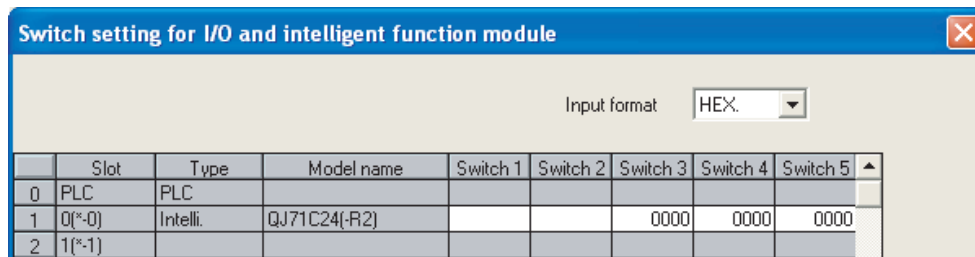(2) When connecting to the CH2 side



Switch No.	Bit		Description	Setting
	Position	Specified value		
Switch 3	b0	OFF	CH2 transmission setting *1	(Operates according to the GOT side specifications.)
	b1	OFF		
	b2	OFF		
	b3	OFF		
	b4	OFF		
	b5	OFF		
	b6	OFF		
	b7	OFF		
	b8 to b15	—	CH2 transmission speed setting *2	
Switch 4	—	CH2 Communication protocol setting	GX Developer connection	0000H
Switch 5	—	Station number setting	0th station	0000H

*1 The module operates under the following transmission specifications.

Transmission specifications	Setting details
Operation setting	Independent
Data bit	8 bits
Parity bit	Yes
Even/odd parity	Odd
Stop bit	1 bit
Sum check code	Yes

*2 The serial communication module operates at the transmission speed set on the GOT. For details on the transmission speed setting on the GOT side, refer to the following.

Section 4.3.3 Setting communication interface (Communication settings)



- (1) When the [intelligent function module switch setting] has been set
After writing PLC parameters to the PLC CPU, turn the PLC CPU OFF then back ON again, or reset the PLC CPU.
- (2) Connection of multiple GOTs
To some serial communication module models, two GOTs can be connected using both CH1 and CH2.

Model	Connection of 2 GOTs	
	Function version A	Function version B
QJ71C24(-R2)	△	○
QJ71C24N(-R2/R4)	—	○

○: 2 GOTs connectable, △: 1 GOT connectable, —: Not applicable

4.4.2 Connecting serial communication module (QnA Series)



Serial communication module (QnA Series)

For details of the serial communication module (QnA Series), refer to the following manual.

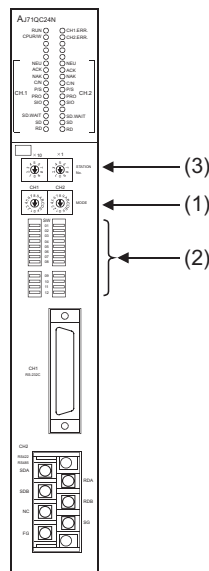


Serial Communication Module User's Manual (Modem Function Additional Version)


1 Switch setting on serial communication module

Set the Station number switches, the Mode switch for the channel used for GOT connection, and the Transmission specifications switches.

AJ71QC24N, AJ71QC24N-R2, AJ71QC24-R4,
AJ71QC24, AJ71QC24-R2, AJ71QC24-R4



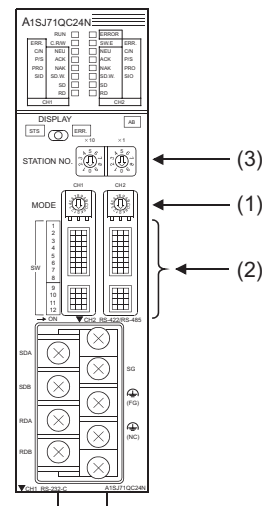A1SJ71QC24N1, A1SJ71QC24N1-R2,
A1SJ71QC24N, A1SJ71QC24N-R2,
A1SJ71QC24, A1SJ71QC24-R2



(1) Mode switch


Mode switch *1	Description	Setting
	Dedicated protocol (Format 5) (Binary mode)	5

*1 The mode switch in the figure is for the AJ71QC24 (N) (-R2/R4).





When connecting a GOT to CH2

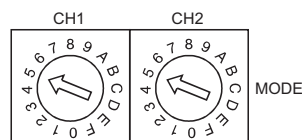
Set the CH1 side mode switch to any other than "0" (interlocked operation).



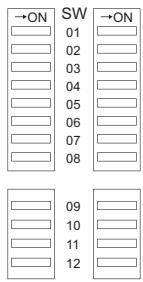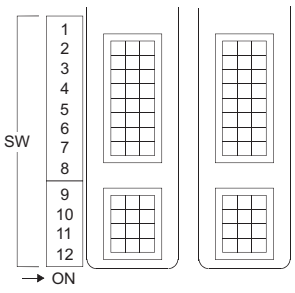(2) Transmission specifications setting switch

Transmission specifications setting switch	Setting switch	Description		Setting
<p>AJ71QC24 (N) (-R2/R4)</p>  <p>A1SJ71QC24 (N) (N1) (-R2) *1</p> 	SW01	Operation setting	Independent operation	OFF
	SW02	Data bit setting	8 bits	ON
	SW03	Parity bit enable/disable setting	Enable	ON
	SW04	Even/odd parity setting	Odd	OFF
	SW05	Stop bit setting	1 bit	OFF
	SW06	Sum check enable/disable setting	Enable	ON
	SW07	Write during RUN enable/disable setting	Enable	ON
	SW08	Setting change enable/disable	Disable (prohibit)	OFF
	SW09 to SW12	Transmission speed setting	(Consistent with the GOT side specifications.)	See (a)
	SW13 to SW15	—	The switch is located on the left side of the module. (only on AJ71QC24N (-R2/R4))	All OFF

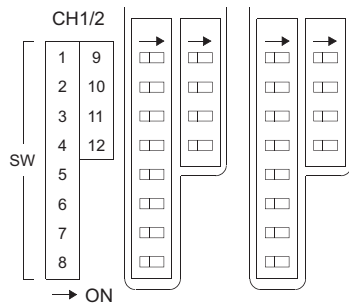*1 The following shows the layout of switches in the case of the following hardware versions for the module, Switch settings and switch ON/OFF directions are the same.



Target unit	Hardware version
A1SJ71QC24	Version E hardware or earlier
A1SJ71QC24-R2	Version D hardware or earlier
A1SJ71QC24N, A1SJ71QC24N-R2	Version A hardware

(a) Transmission speed setting (SW09 to SW12)

Set the transmission speed (SW09 to SW12) as follows.

The transmission speed setting must be consistent with that of the GOT side.

For how to set the GOT side transmission speed, refer to the following.

 Section 4.3.3 Setting communication interface (Communication settings)

Setting Switch	Transmission speed ^{*1*2*3}					
	4800bps	9600bps	19200bps	38400bps ^{*4}	57600bps ^{*4}	115200bps ^{*4}
SW09	OFF	ON	OFF	ON	OFF	ON
SW10	OFF	OFF	ON	ON	ON	ON
SW11	ON	ON	ON	ON	OFF	OFF
SW12	OFF	OFF	OFF	ON	ON	ON

*1 Only transmission speeds available on the GOT side are shown.

*2 When the software version of AJ71QC24 (-R2/R4) and A1SJ71QC24 (-R2) is "L" or earlier, and when 2 devices are connected to the two interfaces individually, make the setting so that the total transmission speed of the two interfaces is within 19200bps.

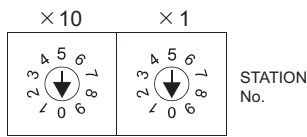
When only one device is connected to either of the interfaces, a maximum transmission speed of 19200bps can be set to the one where the device is connected. In this instance, set 300bps to the other side.

*3 When 3 devices are connected to the two interfaces individually in the case of AJ71QC24N(-R2/R4), A1SJ71QC24N(-R2), and A1SJ71QC24N1(-R2), make the setting so that the total transmission speed of the two interfaces is within 115200bps (230400bps or more in the case of A1SJ71QC24N1(-R2)).

When only one device is connected to either of the interfaces, a maximum transmission speed of 115200bps can be set to the one where the device is connected. In this instance, set 300bps to the other side.

*4 This can be set only in the case of AJ71QC24N (-R2/R4), A1SJ71QC24N (-R2) or A1SJ71QC24N1 (-R2).

(3) Station number switch (for both CH1 and CH2)

Station number switch ^{*5}	Description	Setting
	Set the station number of the serial communication module to which an access is made from the GOT.	0

*5 The station number switch in the figure is for the AJ71QC24 (N) (-R2/R4).



When the switch setting has been changed

Turn the PLC CPU OFF then ON again, or reset the PLC CPU.

4.4.3 Connecting computer link module



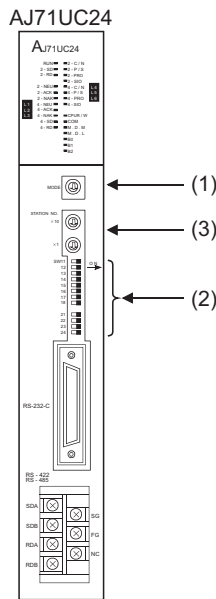
Computer link module

For details of the computer link module, refer to the following manual.


Computer Link Module (Com. link func./Print. func.) User's Manual

1 Switch setting on the computer link module


Set the Mode setting switch, the Transmission specifications switches and the Station number setting switches.



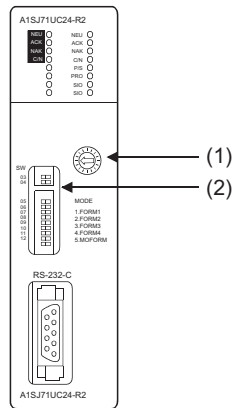
A1SJ71UC24-R2, A1SJ71UC24-PRF,
A1SJ71C24-R2, A1SJ71C24-PRF




A1SJ71UC24-R4, A1SJ7124-R4

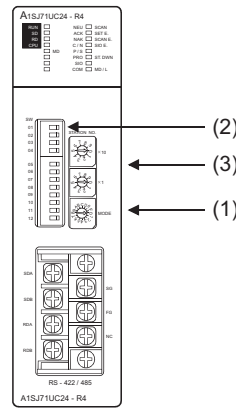


A1SCPUC24-R2

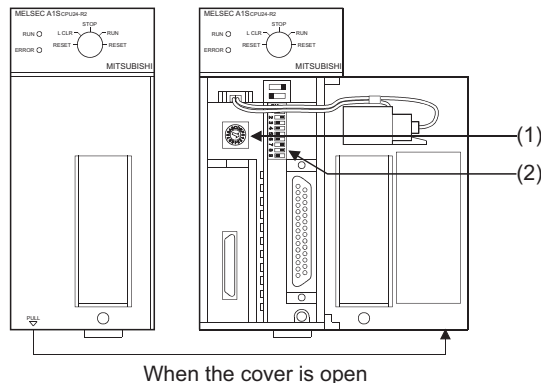

A2CCPUC24, A2CCPUC24-PRF

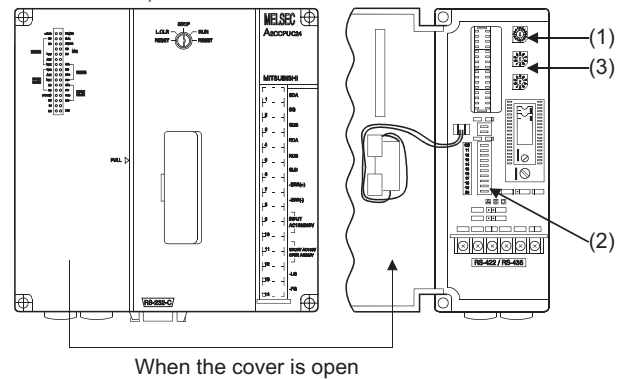


(1) Mode setting switch

Mode setting switch	Description		Setting
	Dedicated protocol type 1	RS-232 connection	1
		RS-422 connection	5

(2) Transmission specifications switch

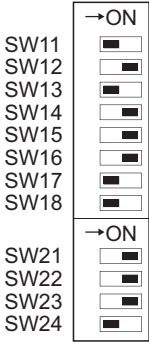(a) AJ71UC24

Transmission specifications switch	Setting switch	Description		Setting
	SW11	Main channel setting	RS-232 connection	OFF
			RS-422 connection	ON
	SW12	Data bit setting	8 bits	ON
	SW13	Transmission speed setting	(Consistent with the GOT side specifications.)	See descriptions below.
	SW14			
	SW15			
	SW16	Parity bit setting	Set	ON
	SW17	Even/odd parity setting	Odd	OFF
	SW18	Stop bit setting	1 bit	OFF
	SW21	Sum check setting	Set	ON
	SW22	Write during RUN enabled/disabled setting	Enabled	ON
	SW23	Computer link/Multidrop selection	Computer link	ON
	SW24	Master station/Local station setting	(Setting ignored)	OFF

• Transmission speed setting (SW13 to SW15)

Set the transmission speed (SW13 to SW15) as follows.

The transmission speed setting must be consistent with that of the GOT side.


For how to set the GOT side transmission speed, refer to the following.

 Section 4.3.3 Setting communication interface (Communication settings)


Setting switch	Transmission speed *1		
	4800bps	9600bps	19200bps
SW13	OFF	ON	OFF
SW14	OFF	OFF	ON
SW15	ON	ON	ON

*1 Only transmission speeds available on the GOT side are shown.

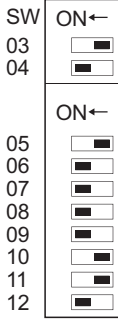(b) A1SJ71UC24-R2, A1SJ71UC24-PRF, A1SJ71C24-R2, A1SJ71C24-PRF

Transmission specifications switch	Setting switch	Description		Setting
	SW03	Unused	—	OFF
	SW04	Write during RUN enabled/disabled setting	Enabled	ON
	SW05	Transmission speed setting	(Consistent with the GOT side specifications.)	See descriptions below.
	SW06			
	SW07			
	SW08	Data bit setting	8 bits	ON
	SW09	Parity bit setting	set	ON
	SW10	Even/odd parity setting	Odd	OFF
	SW11	Stop bit setting	1 bit	OFF
	SW12	Sum check setting	Set	ON


- Transmission speed setting (SW05 to SW07)
Set the transmission speed (SW05 to SW07) as follows.
The transmission speed setting must be consistent with that of the GOT side.
For how to set the GOT side transmission speed, refer to the following.

 Section 4.3.3 Setting communication interface (Communication settings)

Setting switch	Transmission speed ^{*1}		
	4800bps	9600bps	19200bps
SW05	OFF	ON	OFF
SW06	OFF	OFF	ON
SW07	ON	ON	ON

*1 Only transmission speeds available on the GOT side are shown.

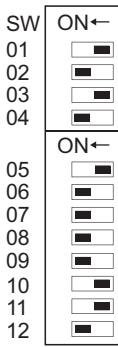(c) A1SJ71UC24-R4, A1SJ71C24-R4


Transmission specifications switch	Setting switch	Description		Setting
	SW01	Master station/ Local station setting	(Setting ignored)	OFF
	SW02	Computer link/ multidrop link selection	Computer link	ON
	SW03	Unused	—	OFF
	SW04	Write during RUN enabled/disabled setting	Enabled	ON
	SW05	Transmission speed setting	(Consistent with the GOT side specifications.)	See descriptions below.
	SW06			
	SW07			
	SW08	Data bit setting	8 bits	ON
	SW09	Parity bit setting	Set	ON
	SW10	Even /odd parity setting	Odd	OFF
	SW11	Stop bit setting	1 bit	OFF
	SW12	Sum check setting	Set	ON

- Transmission speed setting (SW05 to SW07)

Set the transmission speed (SW05 to SW07) as follows.

The transmission speed setting must be consistent with that of the GOT side.


For how to set the GOT side transmission speed, refer to the following.

 Section 4.3.3 Setting communication interface (Communication settings)

Setting switch	Transmission speed *1		
	4800bps	9600bps	19200bps
SW05	OFF	ON	OFF
SW06	OFF	OFF	ON
SW07	ON	ON	ON

*1 Only transmission speeds available on the GOT side are shown.

(d) A1SCPUC24-R2

Transmission specifications switch	Setting switch	Description		Setting
	1	Write during RUN enabled/disabled setting	Enabled	ON
	2	Transmission speed setting	(Consistent with the GOT side specifications.)	See descriptions below.
	3			
	4			
	5	Data bit setting	8 bits	ON
	6	Parity bit setting	Set	ON
	7	Even/odd parity setting	Odd	OFF
	8	Stop bit setting	1 bit	OFF
	9	Sum check setting	Set	ON

- Transmission speed setting (2 to 4)

Set the transmission speed (2 to 4) as follows.

The transmission speed setting must be consistent with that of the GOT side.

For how to set the GOT side transmission speed, refer to the following.

 Section 4.3.3 Setting communication interface (Communication settings)

Setting switch	Transmission speed *2		
	4800bps	9600bps	19200bps
2	OFF	ON	OFF
3	OFF	OFF	ON
4	ON	ON	ON

*2 Only transmission speeds available on the GOT side are shown.

(e) A2CCPUC24, A2CCPUC24-PRF

Transmission specifications switch	Setting switch	Description		Setting
	SW11	Transmission speed setting	(Consistent with the GOT side specifications.)	See descriptions below.
	SW12			
	SW13			
	SW14	Data bit setting	8 bits	ON
	SW15	Parity bit setting	Set	ON
	SW16	Even/odd parity setting	Odd	OFF
	SW17	Stop bit setting	1 bit	OFF
	SW18	Sum check setting	Set	ON
	SW19	Main channel setting	RS-232	OFF
	SW20	Write during RUN enabled/disabled setting	Enabled	ON

- Transmission speed setting (SW11 to SW13)
Set the transmission speed (SW11 to SW13) as follows.
The transmission speed setting must be consistent with that of the GOT side.
For how to set the GOT side transmission speed, refer to the following.

☞ Section 4.3.3 Setting communication interface (Communication settings)

Setting switch	Transmission speed *1		
	4800bps	9600bps	19200bps
SW11	OFF	ON	OFF
SW12	OFF	OFF	ON
SW13	ON	ON	ON

*1 Only transmission speeds available on the GOT side are shown.

(3) Station number setting switch

Station number setting switch *2	Description	Setting
	Set the station number of the computer link module to which an access is made from the GOT.	0

*2 The station number setting switch in the figure is for the A1SJ71UC24-R4.



When the switch setting has been changed

Turn the PLC CPU OFF then ON again, or reset the PLC CPU.



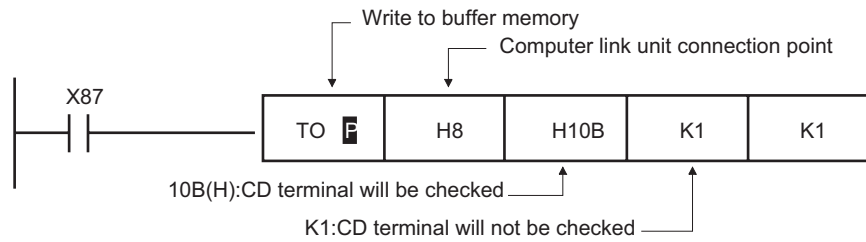
When connecting the GT11 and the computer link unit

When the GT11 and the computer link unit are connected via RS-232C, set the buffer memory in the computer link unit using the sequence program so that CD signals are not checked.

Examples of the CPU units equipped with built-in computer link are explained below also.


(1) In the case of A computer link

Refer to the program example below in which the I/O signals of the computer link unit are 80 to 9F (H).




(2) In the case of CPU equipped with built-in computer link

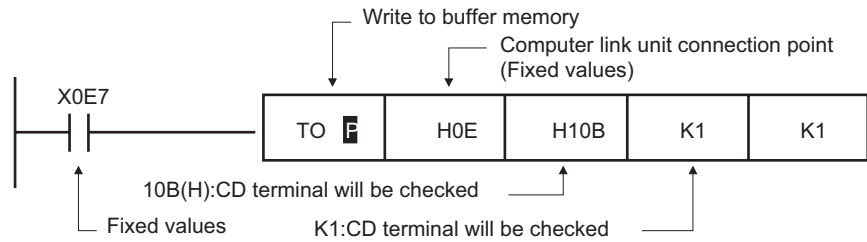(a) A1SCPUC24-R2



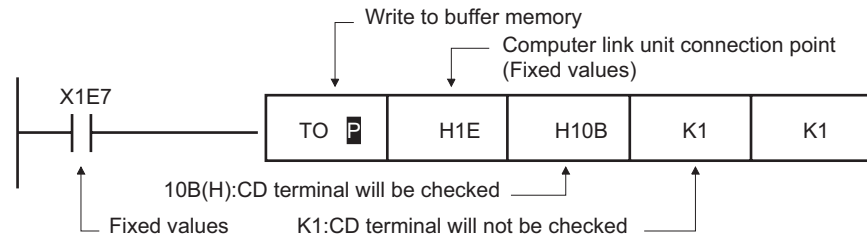(b) A2CCPUC2



4.5 Precautions





1 Communication settings

The communication driver names differs depending on the GT Designer2 versions.

GT Designer2 versions	
2.32J or before	2.43V or later
A/QnA/Q CPU, QJ71C24, MELDAS C6*	A/QnA/Q CPU, QJ71C24
AJ71QC24	AJ71QC24, MELDAS C6*

4.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
 COMPUTER LINK CONNECTION 	Changing communication driver names	2.43V	Communication driver A/QnA/Q CPU, QJ71C24 [03.01.**] AJ71QC24, MELDAS C6* [03.01.**]
 COMPUTER LINK CONNECTION	Supporting the connections to GT1020	2.43V	Communication driver QnA/Q CPU [01.00.**]
 COMPUTER LINK CONNECTION	Supporting the connection to GT1030	2.58L	Standard monitor OS [01.03.**] Communication driver QnA/Q CPU [01.00.**]

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)



5.1 System Configuration page 5-2

This section describes the equipment and cables needed when connecting to MELSECNET/H (PLC to PLC network). Select a system suitable for your application.

5.2 Preparatory Procedures for Monitoring page 5-7

This section describes the procedures to be followed before monitoring in MELSECNET/H connection (PLC to PLC network).

The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

5.3 PLC Side Setting page 5-25

The PLC side settings for GOT connection are explained. When checking the PLC side settings, refer to this section.

5.4 Precautions page 5-31

This section describes the precautions on MELSECNET/H connection (PLC to PLC network).

Be sure to read this when establishing a MELSECNET/H connection (PLC to PLC network).

5.5 List of Functions Added by Version Upgrade page 5-32

This section describes the functions added by version upgrade of GT Designer2 or OS.

5.1 System Configuration

Select a system configuration suitable for your application.



- (1) Connectable network
Connect the GOT to the following network systems as an ordinary station.
 - MELSECNET/H network system (PLC to PLC network) optical loop system
 - MELSECNET/H network system (PLC to PLC network) coaxial bus system
- (2) MELSECNET/H network module
When connecting the MELSECNET/H network module to the MELSECNET/H network system, specify the MELSECNET/H Mode or the MELSECNET/H Extended Mode as a network type.
- (3) Conventions used in this section
Numbers (e.g. ①) of ① System configuration and connection conditions correspond to the numbers (e.g. ①) of ② System equipment.
Use these numbers as references when confirming models and applications.

5.1.1 Connecting to optical loop system



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
63 (max.)	*1	

*1 The overall extension cable length and the length between stations vary depending on the cable type to be used and the total number of stations.

For details, refer to the following manual.

Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	MELSECNET/H communication unit • For optical loop system	GT15-J71LP23-25



(2) PLC

Image	No.	Name	Model name
	2	MELSECNET/H network module*2	QJ71LP21, QJ71LP21-25, QJ71LP21S-25


*2 For the system configuration of the MELSECNET/H network module, refer to the following manual.

Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

(3) Cable

Image	No.	Name	Model name
	3	Optical fiber cable	For the optical fiber cable, refer to the following manual.  Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

5.1.2 Connecting to the coaxial bus system



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
31 (max.)	*1	

*1 The overall extension cable length and the length between stations vary depending on the cable type to be used and the total number of stations.

For details, refer to the following manual.

Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

*2 Use a PLC CPU of function version B or a later version.

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	MELSECNET/H communication unit • For coaxial bus system	GT15-J71BR13

(2) PLC



Image	No.	Name	Model name
	2	MELSECNET/H network module*1	QJ71BR11*2

*1 For the system configuration of the MELSECNET/H network module, refer to the following manual.

Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)


*2 Use a MELSECNET/H network module of function version B or a later version.

(3) Cable

Image	No.	Name	Model name
	3	Coaxial cable	For the coaxial cable, refer to the following manual.  Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

5.2 Preparatory Procedures for Monitoring

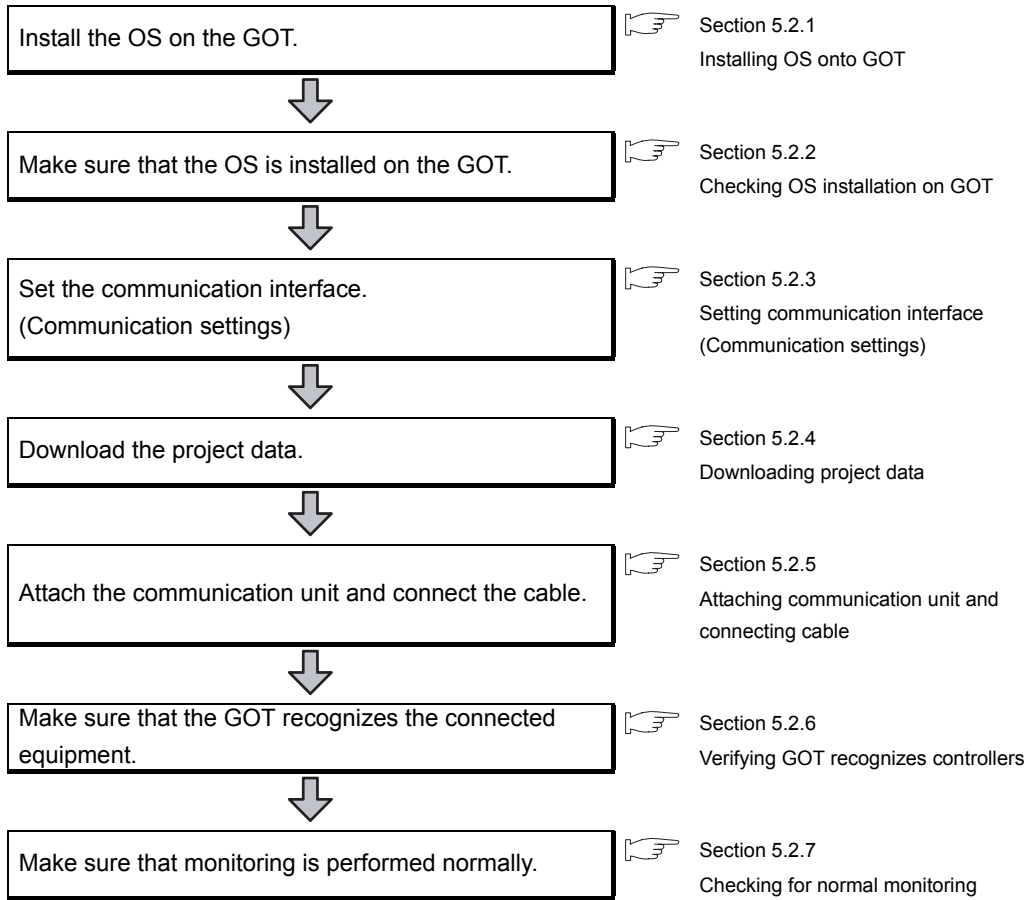The following shows the procedures to be taken before monitoring and corresponding reference sections.



Confirming the PLC side setting


This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

Section 5.3 PLC Side Setting

5.2.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

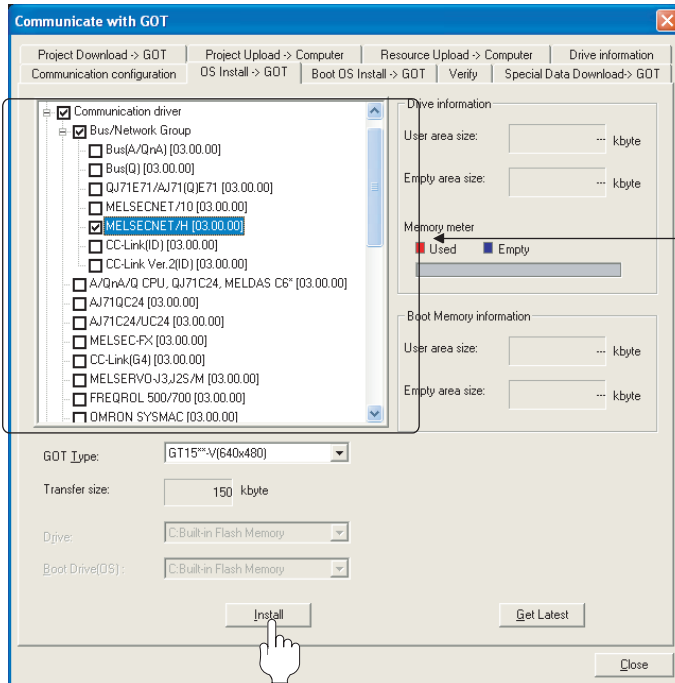 GT Designer2 Version Basic Operation/Data Transfer Manual




Check the following under the Communication driver.

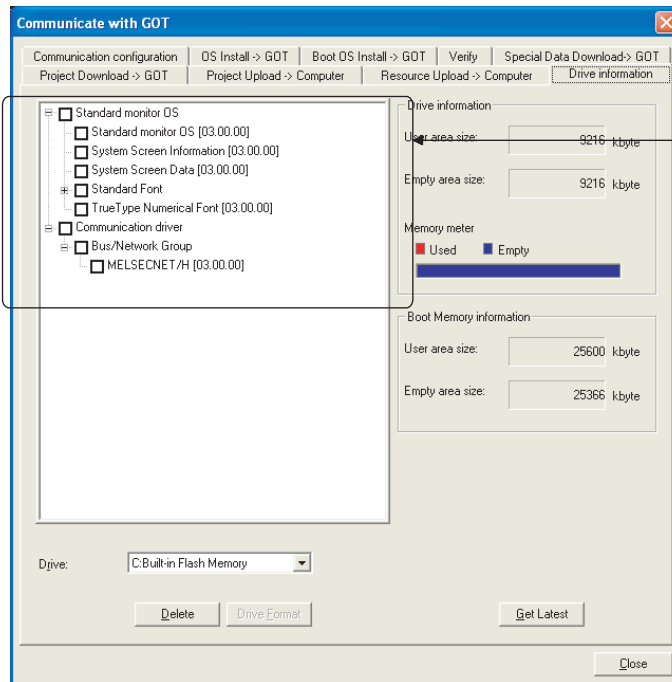
- MELSECNET/H

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

5.2.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

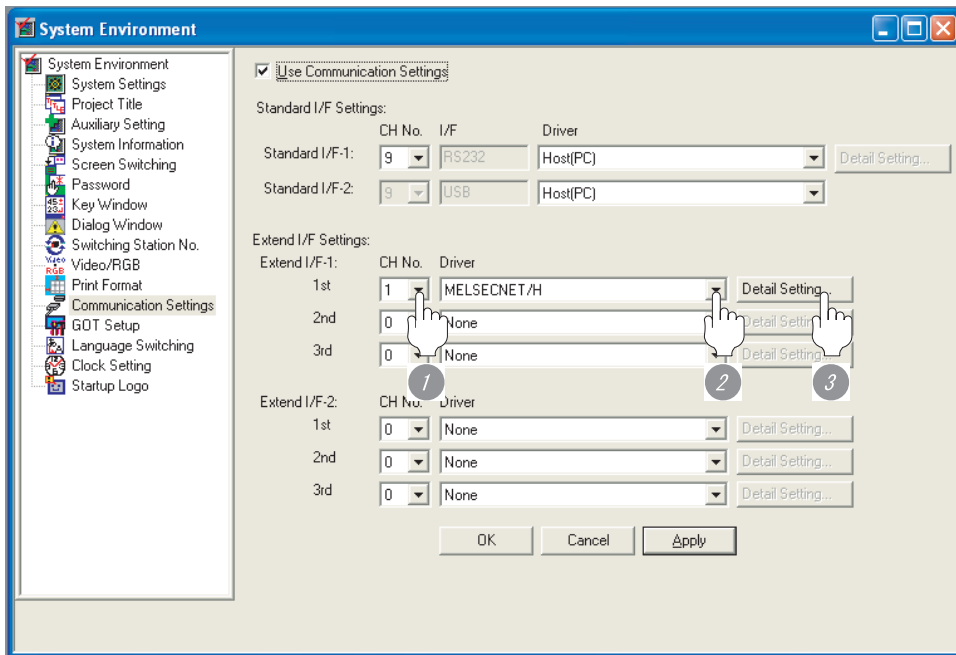
- 1) Standard monitor OS
- 2) Communication driver: MELSECNET/H

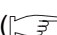
5.2.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Setting] of GT Designer2.
Select the same communication driver as the one installed on the GOT for each communication interface.
For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set "1" to the channel No. used.
- 2 Set the driver to "MELSECNET/H".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)


2 Communication detail settings

Item	Description	Range
Network Type	Set the network type. <Default: MNET/H Mode>	<ul style="list-style-type: none"> • MNET/H mode • MNET/10 mode • MNET/H Extended mode *1
Network No.	Set the network No. <Default: 1>	1 to 239
Station No.	Set the station No. of the GOT. <Default: 1>	1 to 64
Mode Setting	Set the operation mode of the GOT. <Default: Online (auto. reconnection)>	<ul style="list-style-type: none"> • Online (auto. reconnection) • Offline • Test between slave station *2 • Self-loopback test *2 • Internal self-loopback test *2 • H/W test *2
Retry	Set the number of retries to be performed when a communication times out. When no response is received after retries, a communication times out. <Default: 3 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 90 Sec
Delay Time	Set the delay time for reducing the load of the network/destination PLC. <Default: 0ms>	0 to 300ms

Item	Description	Range
Refresh Interval	Set the number of refreshes to secure the send/receive data in station units during communication. <Default: 1 Time> Valid when "Secured data send/Secured data receive" is marked by the control station side network parameters of the MELSECNET/H network system.	1 to 1000 Times
Transmission Speed	Set the communication transmission speed. <Default: 25Mbps> When specifying "MENT/10 Mode" as the network type, only 10Mbps can be set applicable.	10Mbps/25Mbps

*1 Cannot be set for the QCPU redundant system.


*2 For details, refer to the following manual.

 Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

Point

(1) Switch setting example

For the switch setting example, refer to the following.

 Section 5.3 PLC Side Setting

(2) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's [Communication Settings] after downloading [Communication Settings] of project data.

For details on the Utility, refer to the following manual.

 GT □ User's Manual

(3) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

3 Routing parameter setting

Up to 64 [Transfer Network No.]s can be set.

However, the same transfer network number cannot be set twice or more (multiple times).


Therefore, the one that can access to other station from the request source host GOT is 64 kinds of [Transfer Network No.]s.

Point

Routing parameter setting

When communicating within the host network, routing parameter setting is unnecessary.

For details of routing parameters, refer to the following manual.

 Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

Routing Information Setting ✖

Set the routing information of MELSECNET/H Ethernet.

	Transfer Network No.	Relay Network No.	Relay Station No.
1	3	1	2
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			

Item	Range
Transfer Network No	1 to 239
Relay Network No.	1 to 239
Relay Station No.	1 to 64



Routing parameter setting of relay station


Routing parameter setting is also necessary for the relay station.
For the setting, refer to the following.


Section 5.3 PLC Side Setting

5.2.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

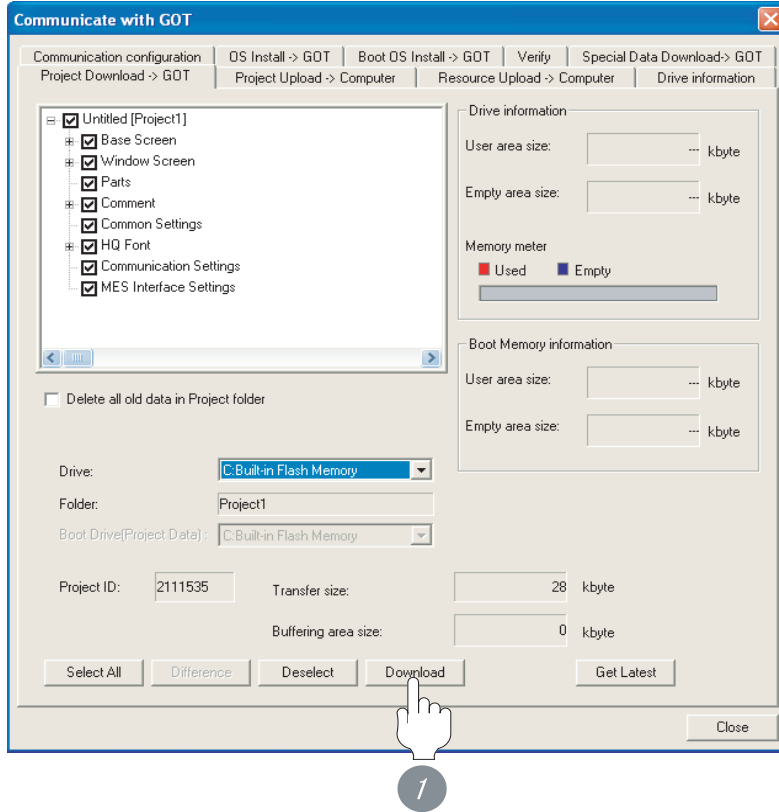 GT Designer2 Version Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


5.2.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

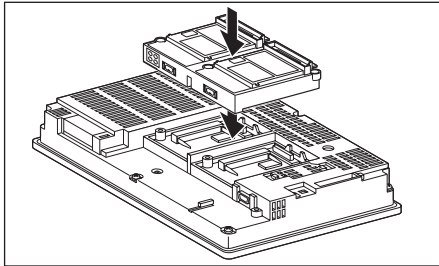1 Attaching the communication unit



- 1 Mount the MELSECNET/H communication unit on the extension unit connector of the GOT.

Point

MELSECNET/H communication unit

For the details of mounting the MELSECNET/H communication unit, refer to the following manual.

☞ GT15 MELSECNET/H communication unit User's Manual

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION
TO CPU

4

COMPUTER LINK
CONNECTION

5

MELSECNET/H
CONNECTION (PLC TO
PLC NETWORK)

6

MELSECNET/10
CONNECTION (PLC TO
PLC NETWORK)

7

CC-Link CONNECTION
(INTELLIGENT DEVICE
STATION)

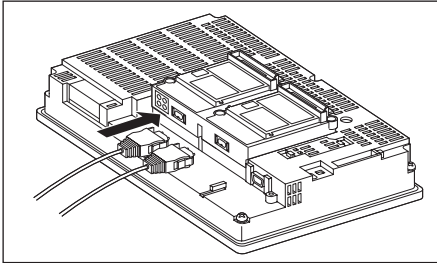
8

CC-Link CONNECTION
(Via G4)

2 Connecting the cable

(1) Optical fiber cable


(a) Optical fiber cable connection method



- 1 Mount the optical fiber cable to the MELSECNET/H communication unit.


(b) Wiring diagram

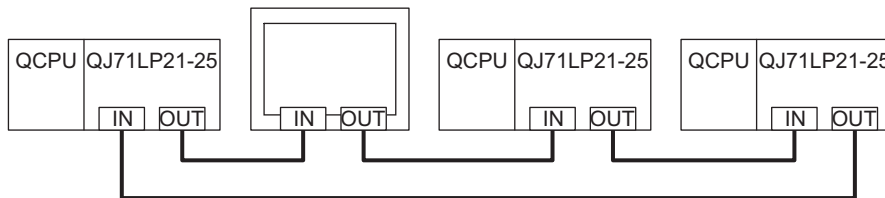When connecting the adjacent stations, connect the IN with the adjacent OUT as follows.




(2) Coaxial cable

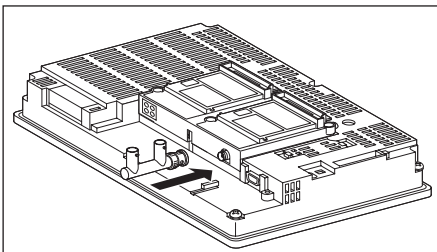(a) Coaxial cable connection method



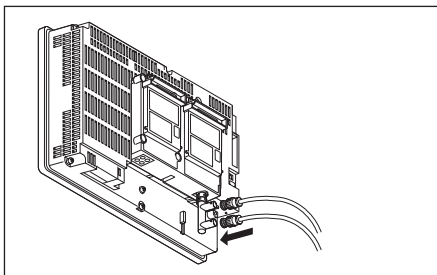- 1 Mount the F-type connector to the MELSECNET/H communication unit.



- 2 Mount the coaxial cable to the F-type connector.
If the MELSECNET/H communication unit is terminal station of the network, be sure to connect a terminating resistor (sold separately: A6RCON-R75) to the F-type connector.

Point

Precautions for connection of coaxial cable

Before connecting or disconnecting the coaxial connector, touch a grounded metal object to discharge the static electricity from the human body.

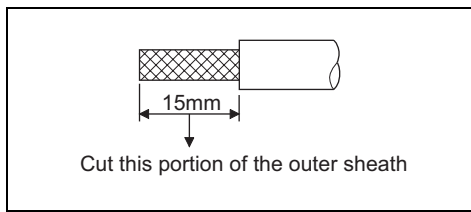
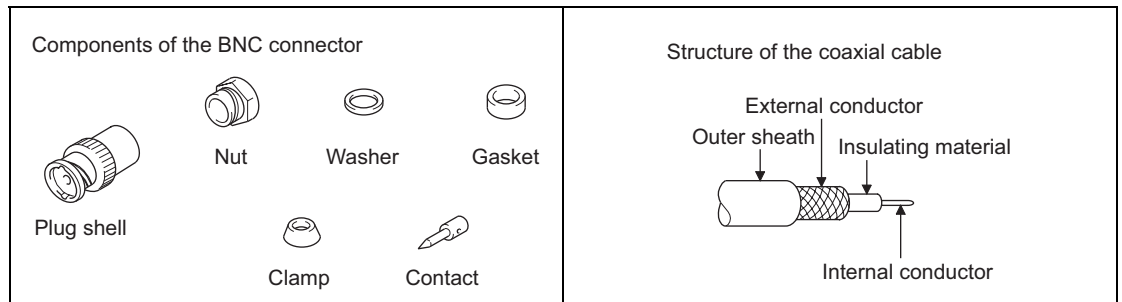
Failure to do so may result in a MELSECNET/H communication unit malfunction.

(b) Coaxial cable connector connection method


The following describes the method for connecting the BNC connector (connector plug for coaxial cable) and the cable.

CAUTION


- Solder the coaxial cable connectors properly. Insufficient soldering may result in malfunctions.



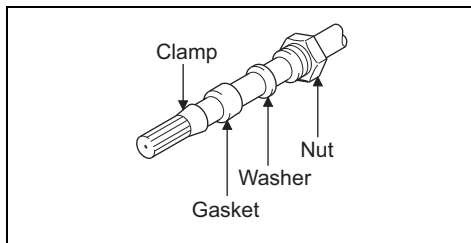- 1 Remove the external sheath of the coaxial cable with dimensions as shown on the left.




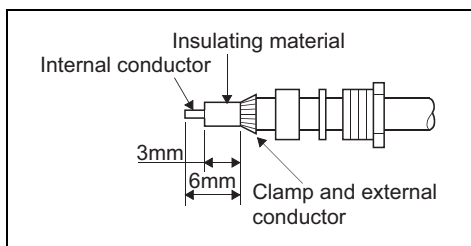- 2 Pass the nut, washer, gasket, and clamp through the coaxial cable as shown on the left and loosen the external conductor.




- 3 Cut the external conductor, insulating material, and internal conductor with the dimensions as shown on the left.

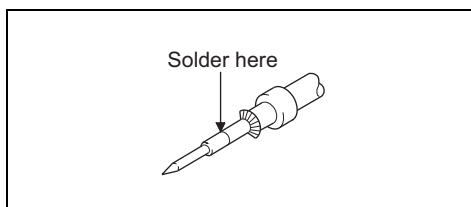Note that the external conductor should be cut to the same dimension as the tapered section of the clamp and smoothed down to the clamp.



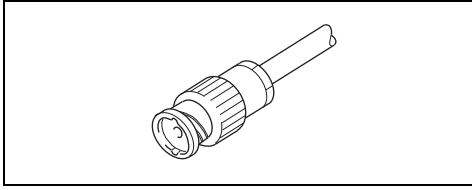- 4 Solder the contact to the internal conductor.



- 5 Insert the connector assembly shown in 4 into the plug shell and screw the nut into the plug shell.

Point

Precautions for soldering

Note the following precautions when soldering the internal conductor and contact.

- Make sure that the solder does not bead up at the soldered section.
- Make sure there are no gaps between the connector and cable insulator or they do not cut into each other.
- Perform soldering quickly so the insulation material does not become deformed.

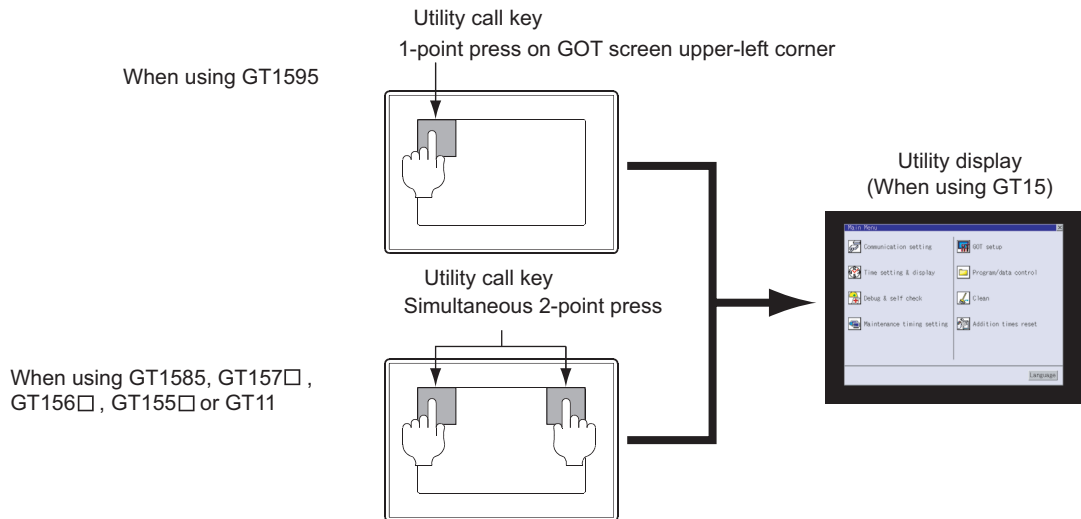
5.2.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)



Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.

For the setting of the utility call key, refer to the following.

☞ GT□ User's Manual

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION
TO CPU

4

COMPUTER LINK
CONNECTION

5

MELSECNET/H
CONNECTION (PLC TO
PLC NETWORK)

6

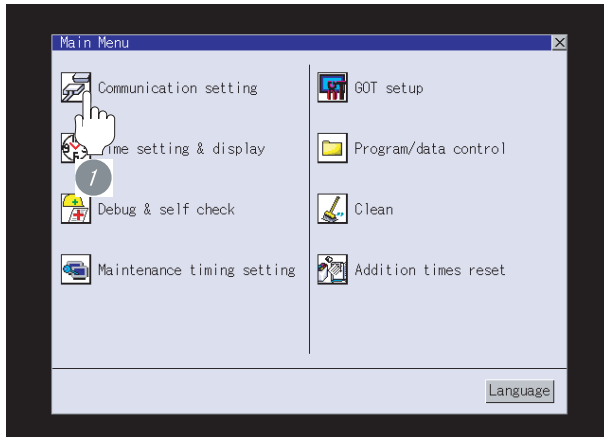
MELSECNET/10
CONNECTION (PLC TO
PLC NETWORK)

7


CC-Link CONNECTION
(INTELLIGENT DEVICE
STATION)

8

CC-Link CONNECTION
(Via G4)



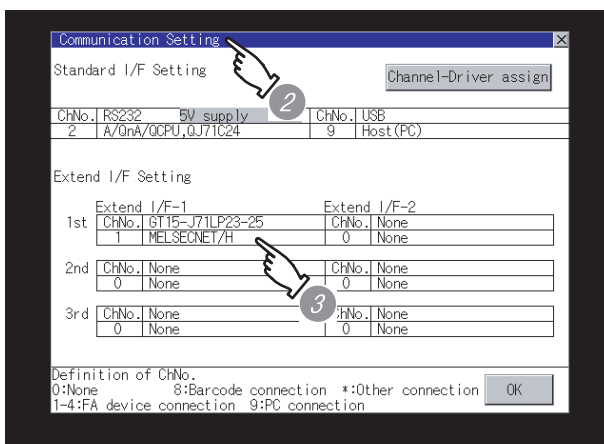- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver: MELSECNET/H
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 6.3 PLC Side Setting



When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

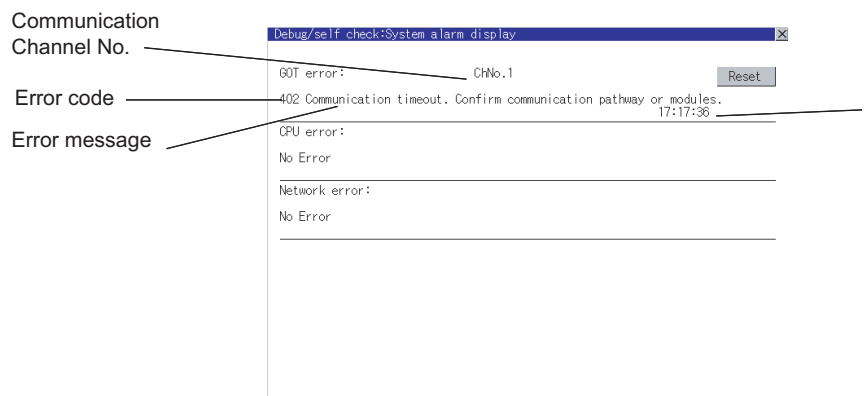
5.2.7 Checking for normal monitoring

1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)




Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual



1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

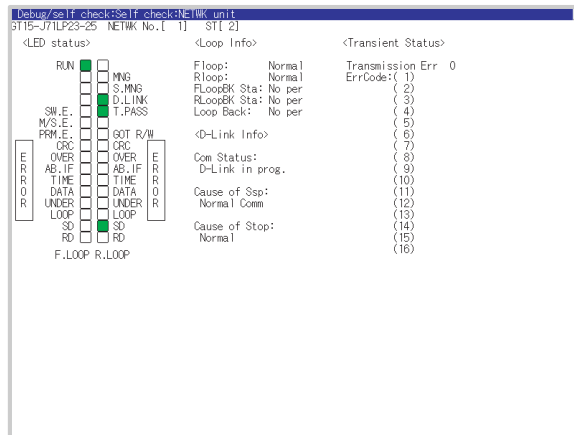
CC-Link CONNECTION (Via G4)

2 Confirming the communication status with network unit by GOT

The communication status between the GOT and the MELSECNET/H network system can be confirmed by the Utility screen of the GOT.

For details on the operation method of the GOT Utility screen, refer to the following manual.


 GT15 User's Manual



3 Confirming the PLC side setting


When connecting the GOT, setting is required for the PLC side.

Confirm if the PLC side setting is correct.

 Section 5.3 PLC Side Setting

4 Checking the wiring state (for optical loop system only)

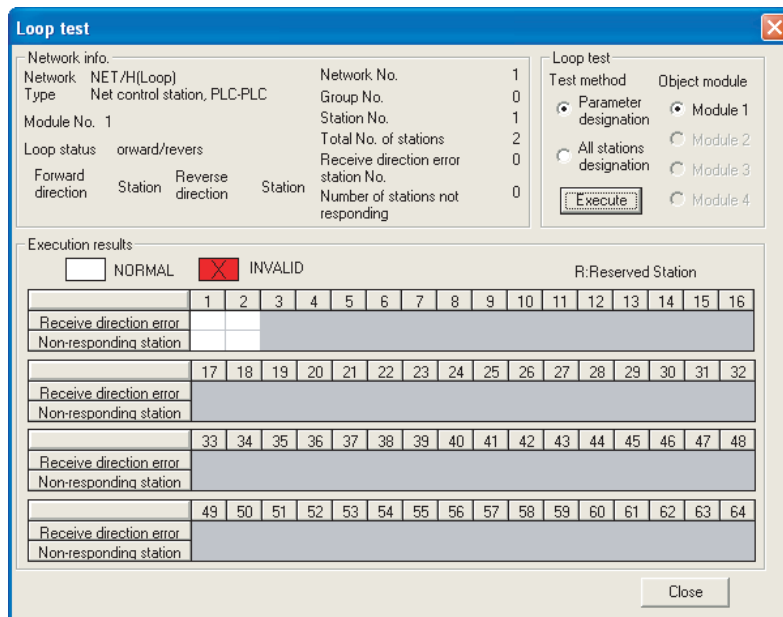
Check if the optical fiber cable is connected correctly in [Loop test] of GX Developer.
For the GX Developer operation method, refer to the following manual.

 Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

- (1) Check the [Receive direction error]. (The display example on GX Developer Version 8)

Startup procedure

GX Developer → [Diagnostics] → [MELSECNET (II)/10/H diagnostics] → Loop test



Loop test

Network info.

Network	NET/H(Loop)	Network No.	1
Type	Net control station, PLC-PLC	Group No.	0
Module No.	1	Station No.	1
Loop status	orward/revers	Total No. of stations	2
Forward direction	Station	Receive direction error station No.	0
Reverse direction	Station	Number of stations not responding	0

Loop test

Test method	Object module
<input checked="" type="radio"/> Parameter designation	<input checked="" type="radio"/> Module 1
<input type="radio"/> All stations designation	<input type="radio"/> Module 2
	<input type="radio"/> Module 3
	<input type="radio"/> Module 4

Execution results

NORMAL INVALID R:Reserved Station

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Receive direction error																
Non-responding station																
	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Receive direction error																
Non-responding station																
	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
Receive direction error																
Non-responding station																
	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64
Receive direction error																
Non-responding station																

5.3 PLC Side Setting

This section describes the settings of the GOT and MELSECNET/H network module in the case of system configuration shown as 1.

When connecting the MELSECNET/H network module to the MELSECNET/H network system, specify the MELSECNET/H Mode or the MELSECNET/H Extended Mode as a network type.

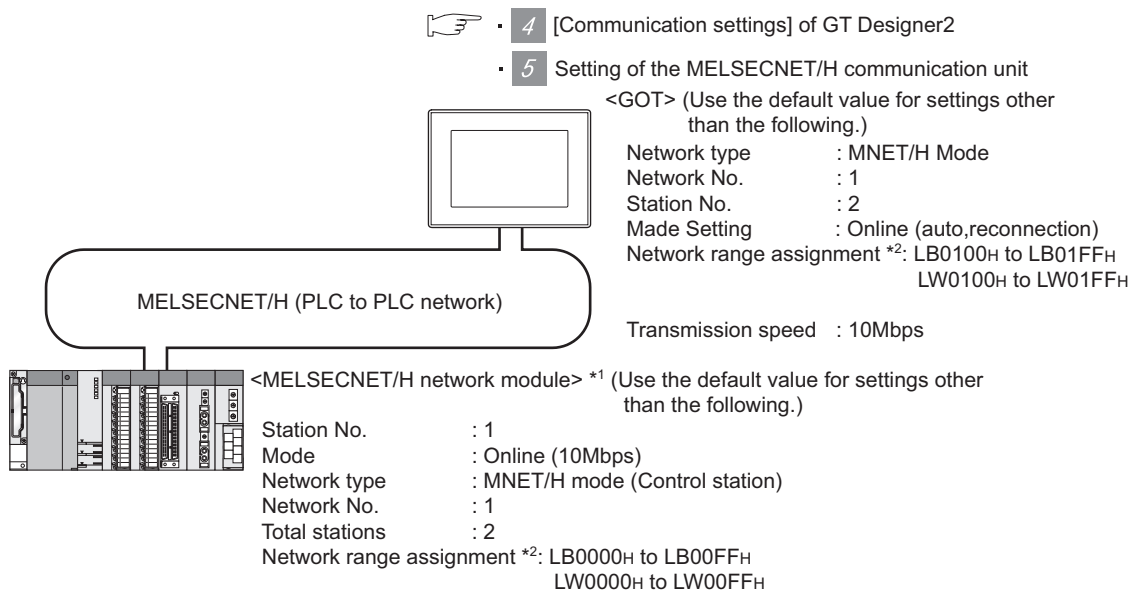


MELSECNET/H network module

For details of the MELSECNET/H network module, refer to the following manual.

☞ Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

1 System configuration



- ☞ 2 Switch setting of MELSECNET/H network module
- 3 [Network parameter] of GX Developer

*1 The MELSECNET/H network module is mounted at slot 0 of the base unit.
The start I/O No. of the MELSECNET/H network module is set at "0".


*2 The network type must be set according to the number of assignment of send points for each station.
When the number of assignment is 2000 bytes or less: MELSECNET/H Mode
When the number of assignment is 2000 bytes or more: MELSECNET/H Extended Mode

1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)


2 Switch setting of MELSECNET/H network module

Set the station number setting switch and mode setting switch.

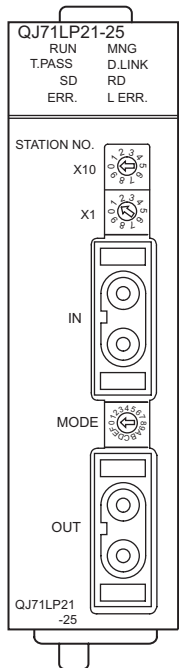
QJ71LP21, QJ71LP21-25



QJ71LP21S-25

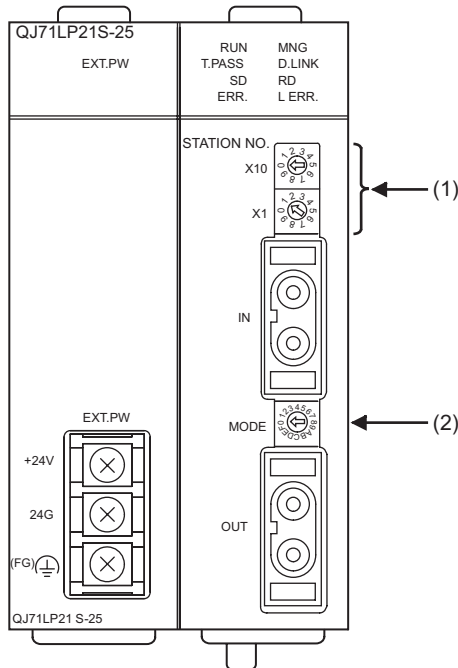

QJ71BR11

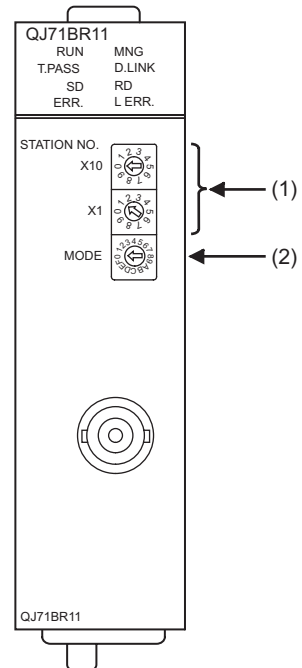

(1) Station number setting switch

Station number setting switch	Description	Setting	Setting necessity at GOT connection
STATION NO. X10 X1	Station number setting (Station number) ^{*1}	1	○

○ : Necessary △ : As necessary × : Not necessary

*1 Set to not duplicate with the station No. of the GOT.

(2) Mode setting switch

Mode setting switch	Description	Setting	Setting necessity at GOT connection
MODE	Mode setting (Online: 10Mbps) ^{*2}	0	○

○ : Necessary △ : As necessary × : Not necessary

*2 Set the same mode setting and transmission speed as those of the GOT.

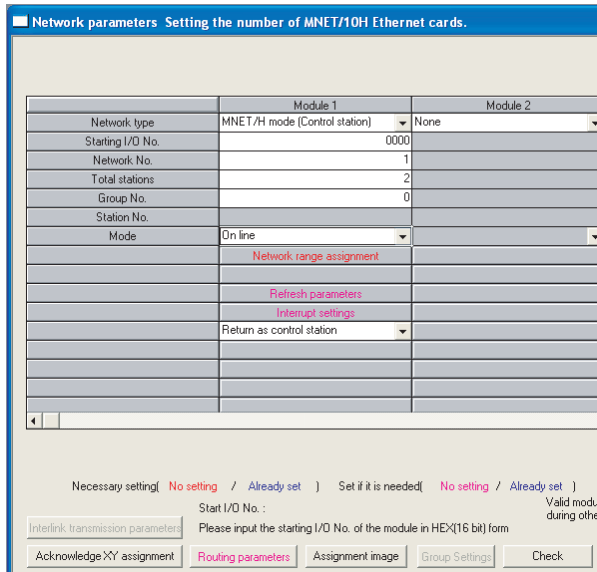


When the switch setting has been changed

Turn the PLC CPU OFF then ON again, or reset the PLC CPU.

3 [Network parameter] of GX Developer

(1) Network parameter



Item	Setting	Setting necessity at GOT connection
Network type	MNET/H mode (Control station) (fixed)	○
Starting I/O No.	0000H	○
Network No.* ¹	1	○
Total stations	2	○
Group No.	0 (fixed)	○
Mode	Online	○
Network range assignment	Refer to (2)	△
Refresh parameters	(Use default value)	△
Interrupt settings		×
Control station return setting		△
Redundant settings* ²		△
Interlink transmission parameters		×
Routing parameters	Refer to (3)	△

○ : Necessary △ : As necessary × : Not necessary

*1 Set the same network No. as that of the GOT.

*2 Set the same mode setting as that of the GOT.

*3 Set it when the MELSECNET/H network module is used in the redundant QnPRHCPU system.

(2) Network range assignment

Network parameters Assignment the MNET/10H network range. Module No.: 1.

Setup common and station inherent parameters.

Assignment method
 Points/Start
 Start/End

Monitoring time: 200 × 10ms
 Parameter name:
 Total slave stations: 2
 Switch screens: LB/LW settings

StationNo.	Send range for each station			Send range for each station			Points	Start	End	Points	Start	End	Pairing
	Points	Start	End	Points	Start	End							
1	256	0000	00FF	256	0000	00FF							Disable
2	256	0100	01FF	256	0100	01FF							Disable

Specify I/O master station
 Specify reserved station
 Equal assignment
 Identical point assignment
 Points
 Supplementary setting
 Station inherent parameters
 Clear
 Check
 End
 Cancel

Item				Setting	Setting necessity at GOT connection
Monitoring time				200	△
LB/LW setting*1	Send range for station (LB)	Station No.1	Start	0000H	△
			End	00FFH	△
		Station No.2	Start	0100H	△
			End	01FFH	△
	Send range for station (LW)	Station No.1	Start	0000H	△
			End	00FFH	△
		Station No.2	Start	0100H	△
			End	01FFH	△
Pairing setting*2				Disable	△
LX/LY setting*1				No setting	△
Specify I/O master station*1				No setting	△
Specify reserved station				No setting	△
Supplementary setting				(Use default value)	△
Station inherent parameters					△

○ : Necessary △ : As necessary × : Not necessary

*1 Be sure to set it to perform the cyclic transmission.

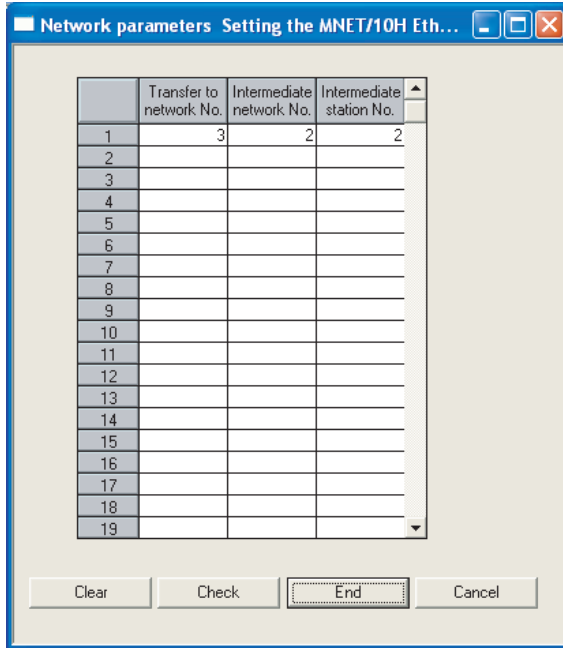
*2 Set it when the MELSECNET/H network module is used in the redundant QnPRHCPU system.



When changing the network parameter

After writing the network parameter to the PLC CPU, operate the PLC CPU ether turning OFF and then ON or resetting.

- (3) Routing parameter setting
 Up to 64 [Transfer Network No.]s can be set.
 However, the same transfer network number cannot be set twice or more (multiple times).
 Therefore, the one that can access to other station from the request source host GOT is 64 kinds of [Transfer Network No.]s.



Item	Range
Transfer to network No.	1 to 239
Intermediate network No.	1 to 239
Intermediate station No.	1 to 64



Point Routing parameter setting of request source

Routing parameter setting is also necessary for the request source GOT.
 For the setting, refer to the following.

☞ Section 5.2.3 **3** Routing parameter setting

4 [Communication settings] of GT Designer2

Item	Setting
Network type	MENT/H Mode
Network No.	1: Network No.1
Station No.	2: Station No.2
Mode Setting	Online (auto. reconnection)
Retry	3 Times (Use default)
Timeout Time	3 Sec (Use default)
Delay Time	0 Sec (Use default)
Refresh Interval	1 Time (Use default)
Transmission Speed	10 Mbps



[Communication Settings] of GT Designer2

For the setting method of [Communication Settings] of GT Designer2, refer to the following.

Section 5.2.3

5.4 Precautions

1 Network configuration

Use MELSECNET/H (PLC to PLC network) to configure a network including the GOT.

The following networks including the GOT cannot be configured.

- MELSECNET/H (Remote I/O network)

2 Network type setting

(1) Specify all the network modules on the same network as the same network type.

(MELSECNET/H Mode and MELSECNET/H Extended Mode cannot be mixed.)

(2) When connecting to MELSECNET/H in the QCPU redundant system, "MELSECNET/H Extended Mode" cannot be specified as the network type.

3 Monitoring range

Only PLC CPU of the same networks No. can be monitored in GOT.

For details, refer to the following manual.

 GT Designer2 Version□ Screen Design Manual

4 GOT startup in the MELSECNET/H connection

In the MELSECNET/H connection, the data link is started approximately 10 seconds after the GOT startup.


5 When a network error occurs in the system alarm

In the MELSECNET/H connection, when a network error occurs in the system alarm, the system alarm message cannot be canceled even though the causes are removed.

To cancel the system alarm display, restart the GOT.

6 MELSECNET/H network module version

For version restrictions of the MELSECNET/H network module, refer to the following manual.

 Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

5.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
MELSECNET/H connection (PLC to PLC network)	Supporting the MELSECNET/H connection (PLC to PLC network)	2.32J	Communication driver MELSECNET/H [03.00.**]
	Supporting the routing parameter setting by GT Designer2	2.43V	Communication driver MELSECNET/H [03.01.**]

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)



6.1 System Configuration page 6-2

This section describes the equipment and cables needed when connecting to MELSECNET/10 (PLC to PLC network). Select a system suitable for your application.

6.2 Preparatory Procedures for Monitoring page 6-7

This section describes the procedures to be followed before monitoring in MELSECNET/10 connection (PLC to PLC network).

The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

6.3 PLC Side Setting page 6-27

The PLC side settings for GOT connection are explained. When checking the PLC side settings, refer to this section.

6.4 Precautions page 6-49

This section describes the precautions on MELSECNET/10 connection (PLC to PLC network).

Be sure to read this when establishing a MELSECNET/10 connection (PLC to PLC network).

6.5 List of Functions Added by Version Upgrade page 6-50

This section describes the functions added by version upgrade of GT Designer2 or OS.

6.1 System Configuration

Select a system configuration suitable for your application.



(1) Connectable network

Connect the GOT to the following network systems as an ordinary station.

- MELSECNET/10 network system (PLC to PLC network) optical loop system
- MELSECNET/10 network system (PLC to PLC network) coaxial bus system

(2) MELSECNET/H network module

When connecting the MELSECNET/H network module to the MELSECNET/10 network system, specify the MELSECNET/10 Mode as a network type.

(3) Conventions used in this section

Numbers (e.g. ①) of ① System configuration and connection conditions correspond to the numbers (e.g. ①) of ② System equipment.

Use these numbers as references when confirming models and applications.

6.1.1 Connecting to optical loop system



(When MELSECNET/H communication unit is used)



(When MELSECNET/10 communication unit is used)

1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
63 (max.)	*1	

*1 The overall extension cable length and the length between stations vary depending on the cable type to be used and the total number of stations.

For details, refer to the following manuals.

- Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)
- For QnA/Q4AR MELSECNET/10 Network System Reference Manual
- Type MELSECNET/10 Network System (PLC to PLC network) Reference Manual

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	MELSECNET/H ^{*1} communication unit • For optical loop system	GT15-J71LP23-25
		MELSECNET/10 communication unit • For optical loop system	GT15-75J71LP23-Z ^{*2 *3}

*1 Specify the MELSECNET/10 Mode as the Communication Settings.

For details of the settings, refer to the following.

• Section 6.2.3 Setting communication interface (Communication settings)

*2 Not available for the GT155□.

*3 Routing parameters cannot be set in the GT15-75J71LP23-Z.

When setting routing parameters, use the GT15-J71LP23-25.

(2) PLC



Image	No.	Name	Model name
	2	MELSECNET/H, MELSECNET/10 network module ^{*4}	QJ71LP21, QJ71LP21-25, QJ71LP21S-25
			AJ71QLP21, AJ71QLP21S, A1SJ71QLP21, A1SJ71QLP21S
			AJ71LP21, A1SJ71LP21

*4 For the system configuration of the MELSECNET/H and MELSECNET/10 network module, refer to the following manuals.



- Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)
- For QnA/Q4AR MELSECNET/10 Network System Reference Manual
- Type MELSECNET/10 Network System (PLC to PLC network) Reference Manual

1 OVERVIEW
2 BUS CONNECTION
3 DIRECT CONNECTION TO CPU
4 COMPUTER LINK CONNECTION
5 MELSECNET/H CONNECTION (PLC TO PLC NETWORK)
6 MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7 CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8 CC-Link CONNECTION (Via G4)

(3) Cable

Image	No.	Name	Model name
	3	Optical fiber cable	For the optical fiber cable, refer to the following manuals.  <ul style="list-style-type: none">• Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)• For QnA/Q4AR MELSECNET/10 Network System Reference Manual• Type MELSECNET/10 Network System (PLC to PLC network) Reference Manual

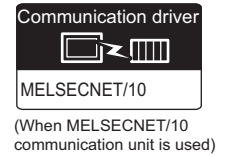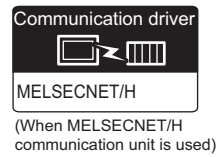6.1.2 Connecting to the coaxial bus system



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
31 (max.)	*1	

*1 The overall extension cable length and the length between stations vary depending on the cable type to be used and the total number of stations.

For details, refer to the following manuals.

- Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)
- For QnA/Q4AR MELSECNET/10 Network System Reference Manual
- Type MELSECNET/10 Network System (PLC to PLC network) Reference Manual

*2 Use a PLC CPU of function version B or a later version.

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	MELSECNET/H communication unit*1 • For coaxial bus system	GT15-J71BR13
		MELSECNET/10 communication unit • For coaxial bus system	GT15-75J71BR13-Z*2 *3

*1 Specify the MELSECNET/10 mode as the Communication Settings to use.

For the detailed settings, refer to the following.

- Section 6.2.3 Setting communication interface (Communication settings)

*2 Not available for the GT155□.

*3 Routing parameters cannot be set in the GT15-75J71BR13-Z.

When setting routing parameters, use the GT15-J71LP23-25.

(2) PLC


Image	No.	Name	Model name
	2	MELSECNET/H, MELSECNET/10 network module*4	QJ71BR11*5
			AJ71QBR11, A1SJ71QBR11
			AJ71BR11, A1SJ71BR11

*4 For the system configuration of the MELSECNET/H and MELSECNET/10 network modules, refer to the following manuals.

- Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)
- For QnA/Q4AR MELSECNET/10 Network System Reference Manual
- Type MELSECNET/10 Network System (PLC to PLC network) Reference Manual


*5 Use a MELSECNET/H network module of function version B or a later version.

(3) Cable

Image	No.	Name	Model name
	3	Coaxial cable	<p>For the coaxial cable, refer to the following manuals.</p> <ul style="list-style-type: none">• Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)• For QnA/Q4AR MELSECNET/10 Network System Reference Manual• Type MELSECNET/10 Network System (PLC to PLC network) Reference Manual

6.2 Preparatory Procedures for Monitoring

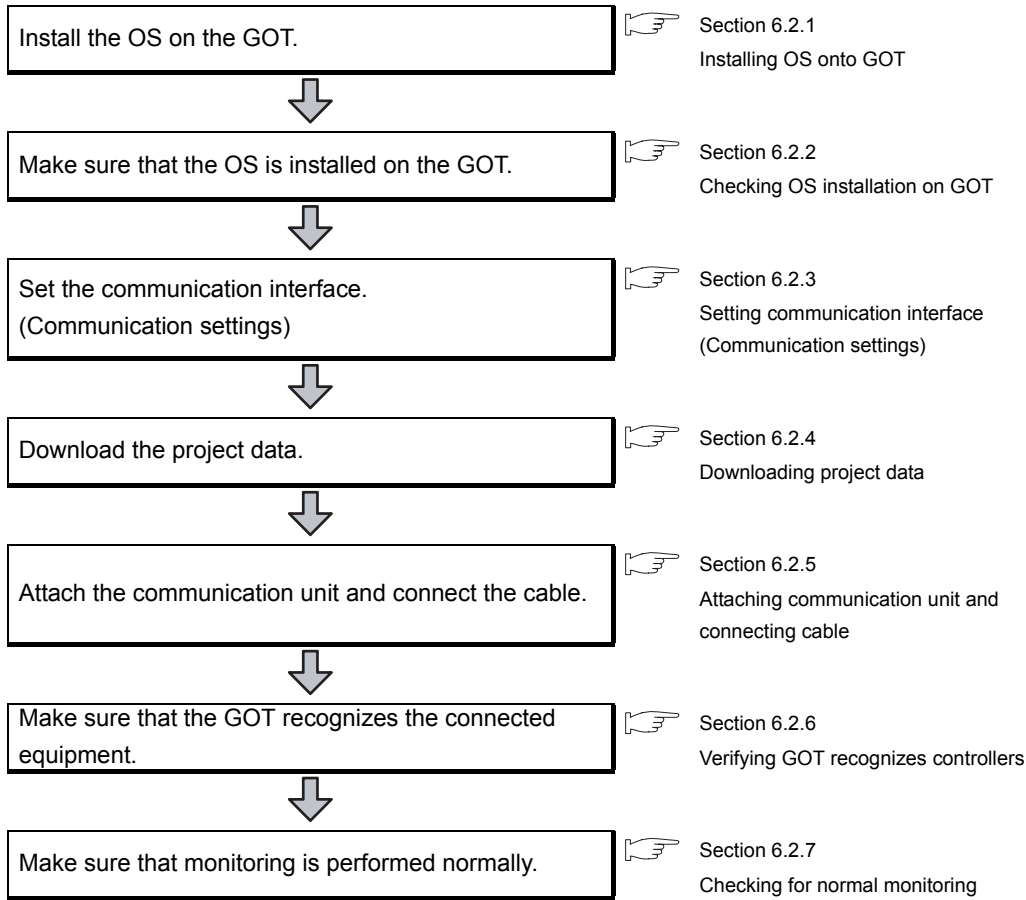The following shows the procedures to be taken before monitoring and corresponding reference sections.




Point

Confirming the PLC side setting


This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

 Section 6.3 PLC Side Setting

6.2.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

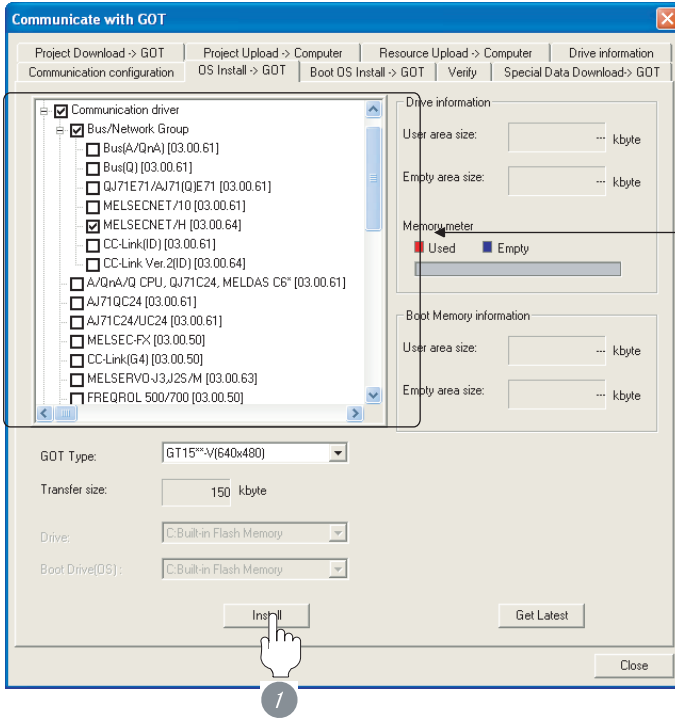 GT Designer2 Version □ Basic Operation/Data Transfer Manual




Check the following under the Communication driver.

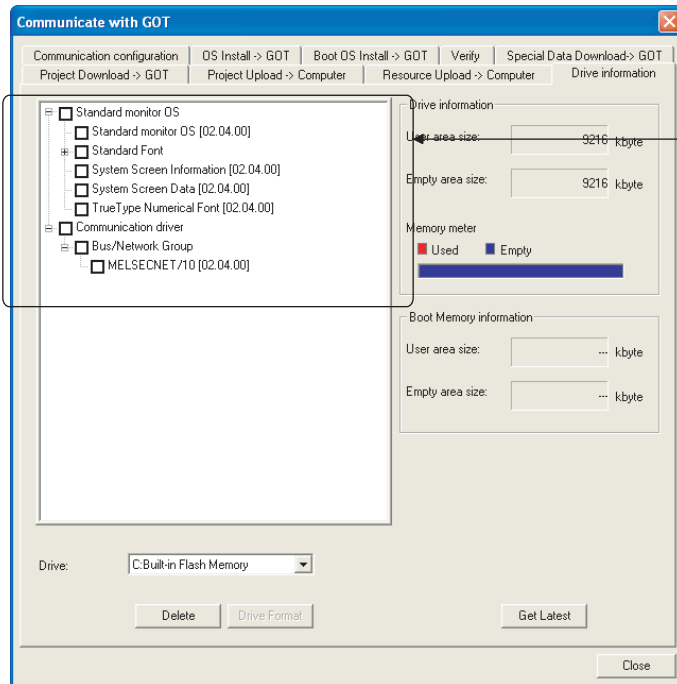
- When using the MELSECNET/10 communication unit : MELSECNET/10
- When using the MELSECNET/H communication unit : MELSECNET/H

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

6.2.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver
 - When using the MELSECNET/10 communication unit : MELSECNET/H
 - When using the MELSECNET/H communication unit : MELSECNET/10

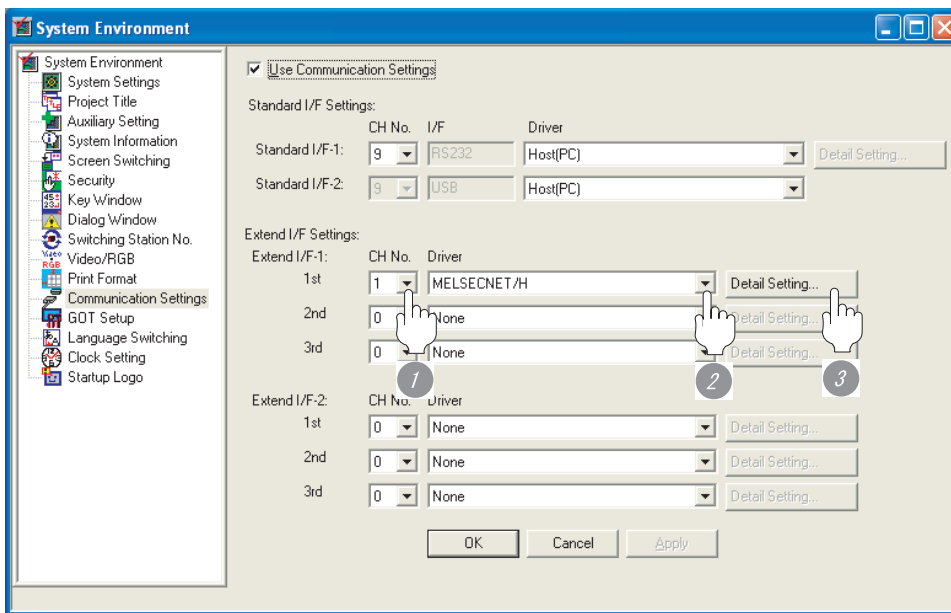
6.2.3 Setting communication interface (Communication settings)


To configure the communication interface of the GOT, use the [Communication settings] of GT Designer2 and the switches of the communication unit.

Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set "1" to the channel No. used.
- 2 Set the driver
 - When using the MELSECNET/H communication unit : "MELSELNET/H"
 - When using the MELSECNET/10 communication unit : "MELSELNET/10"
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

(1) MELSECNET/H

Item	Description	Range
Network Type	Set the network type. <Default: MNET/H mode>	<ul style="list-style-type: none"> MNET/H mode MNET/10 mode MNET/H EXT mode
Network No.	Set the network No. <Default: 1>	• 1 to 239
Station No.	Set the station No. of the GOT. <Default: 1>	• 1 to 64
Mode Setting	Set the operation mode of the GOT. <Default: Online (auto. reconnection)>	<ul style="list-style-type: none"> Online (auto. reconnection) Offline Test between slave station Self-loopback test Internal self-loopback test H/W test
Retry	Set the number of retries to be performed when a communication time out. When no response is received after retries, a communication times out. <Default: 3 Times>	0 to 5 Times
Timeout time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 90 Sec
Delay Time	Set the delay time for reducing the load of the network/destination PLC. <Default: 0ms>	0 to 300ms
Refresh Interval	Set the number of refreshes to secure the send/receive data in station units during communication. <Default: 1 Time> Valid when "Secured data send/Secured data receive" is marked by the control station side network parameters of the MELSECNET/H network system.	1 to 1000 Times
Transmission Speed	Set the communication transmission speed. <Default: 25Mbps>	10Mbps/25Mbps

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION
TO CPU

4

COMPUTER LINK
CONNECTION

5

MELSECNET/H
CONNECTION (PLC TO
PLC NETWORK)

6

MELSECNET/10
CONNECTION (PLC TO
PLC NETWORK)

7

CC-Link CONNECTION
(INTELLIGENT DEVICE
STATION)

8

CC-Link CONNECTION
(Via G4)

(2) MELSECNET/10

Item	Description	Range
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec



- (1) When MELSECNET/H communication unit is used
When connecting to the MELSECNET/10 network, specify "MELSECNET/10 Mode" as "Network Type".
- (2) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's [Communication Settings] after downloading [Communication Settings] of project data.
For details on the Utility, refer to the following manual.
 GT User's Manual
- (3) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

3 Routing parameter setting

Up to 64 [Transfer Network No.]s can be set.

However, the same transfer network number cannot be set twice or more (multiple times).

Therefore, the one that can access to other station from the request source host GOT is 64 kinds of [Transfer Network No.]s.

Point

(1) Routing parameter setting

When communicating within the host network, routing parameter setting is unnecessary.

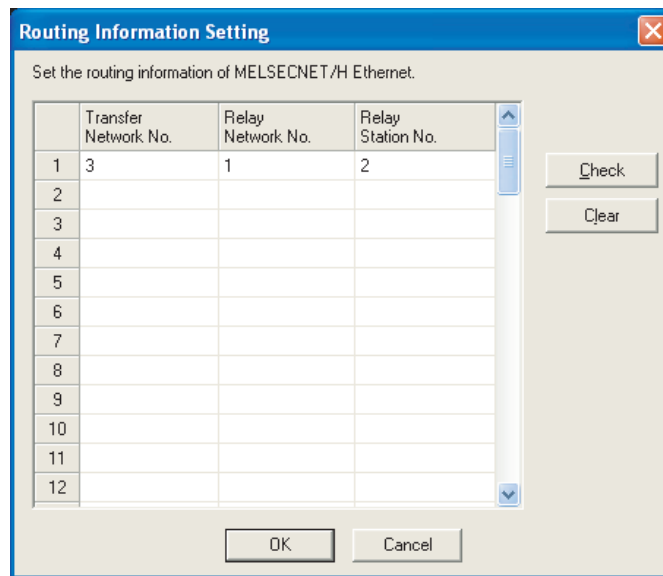
(2) Selection of communication unit

Routing parameters cannot be set in the GT15-75J71LP23-Z and the GT15-75J71BR13-Z.

When setting routing parameters, use the GT15-J71LP23-25 or the GT15-J71BR13 according to the connection type to be used.

For details of routing parameters, refer to the following manual.

Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)



Item	Range
Transfer Network No	1 to 239
Relay Network No.	1 to 239
Relay Station No.	1 to 64

Point

Routing parameter setting of relay station

Routing parameter setting is also necessary for the relay station.

For the setting, refer to the following.

Section 6.3 PLC Side Setting

4 Switch setting (Only when MELSECNET/10 communication unit is used)




Switch setting of the communication unit

When the MELSECNET/H communication unit is used, the switch setting is not needed.

For details of each setting switch and LED, refer to the following manual.

GT15 MELSECNET/10 communication unit User's Manual

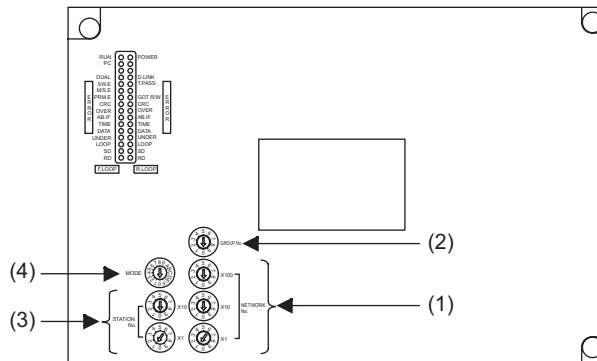GT15-75J71LP23-Z, GT15-75J71BR13-Z



(1) Network number setting switch


Network number setting switch	Description	Setting
	Set the network No. of the MELSECNET/10 communication unit. <Default: 001>	1 to 239

(2) Group number setting switch


Group number setting switch	Description	Setting
	Set the group No. of the MELSECNET/10 communication unit. <Default: 0>	0: No group setting (fixed) ^{*1}

*1 The GOT does not use the group number.
Specify "0".

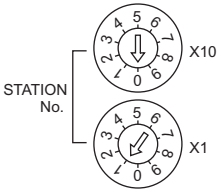(3) Station number setting switch

Station number setting switch	Description	Setting
	<p>Set the station No. of the MELSECNET/10 communication unit. Set to not duplicate other stations in the network. <Default: 01></p>	<p>1 to 64: GT15-75J71LP23-Z 1 to 32: GT15-75J71BR13-Z</p>


(4) Mode setting switch

Mode setting switch	Description	Setting
	<p>On-line <Default: 0></p>	<p>0</p>

Point 

(1) Switch setting example

For the switch setting example, refer to the following.

 Section 6.3 PLC Side Setting

(2) When the switch setting is changed

When changing the switch setting after mounting the MELSECNET/10 communication unit to the GOT, reset the GOT.

(3) Self check test

Select "3" to "9" as the mode setting switch to provide a self check test of the MELSECNET/10 communication unit.


For details, refer to the following manual.

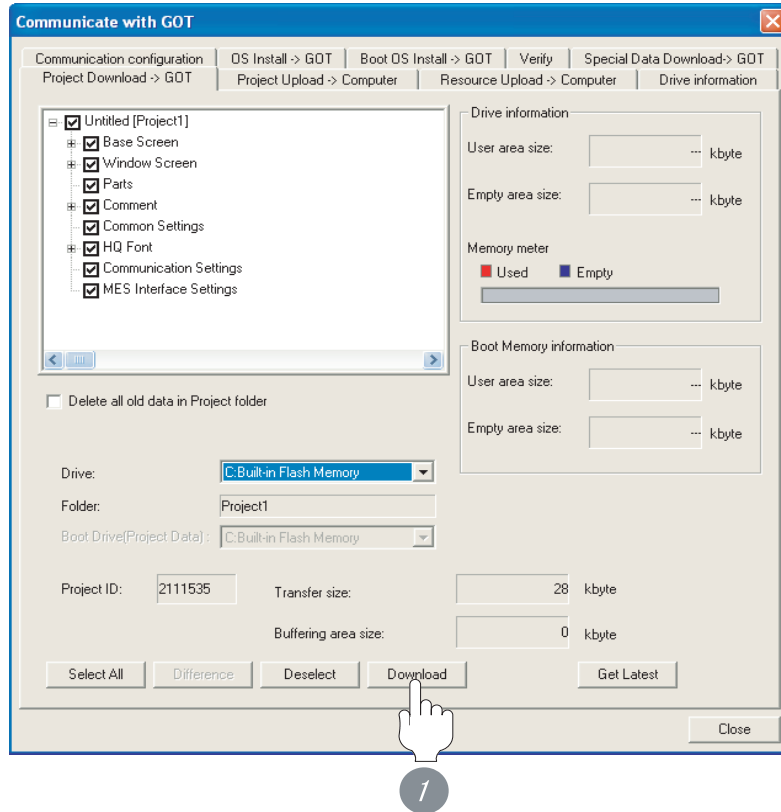
 GT15 MELSECNET/10 communication unit User's Manual

6.2.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.

6.2.5 Attaching communication unit and connecting cable


Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

1 Attaching the communication unit

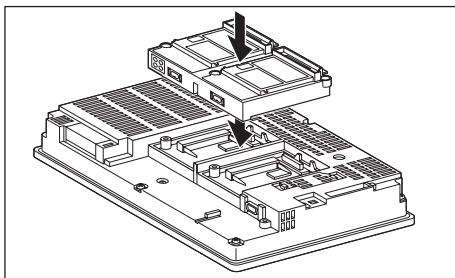(1) When MELSECNET/H communication unit is used



- 1 Mount the MELSECNET/H communication unit on the extension unit connector of the GOT.

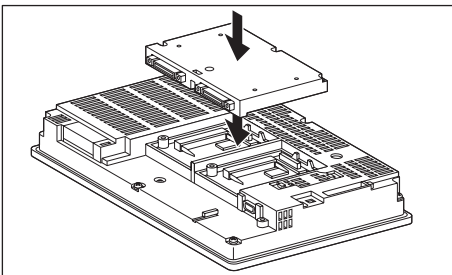
Point

MELSECNET/H communication unit


For the details of mounting the MELSECNET/H communication unit, refer to the following manual.

➔ GT15 MELSECNET/H communication unit User's Manual

(2) When MELSECNET/10 communication unit is used



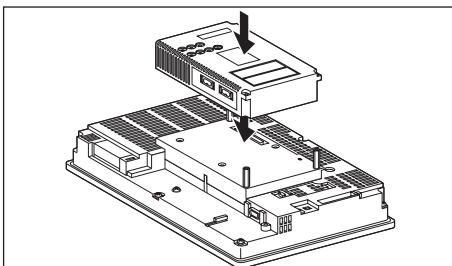- 1 Mount the interface converter unit to the extension unit connector of the GOT.



- 2 Mount the MELSECNET/10 communication unit to the interface converter unit.

Point

MELSECNET/10 communication unit

For details of the MELSECNET/10 communication unit, refer to the following manual.

➔ GT15 MELSECNET/10 communication unit User's Manual

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

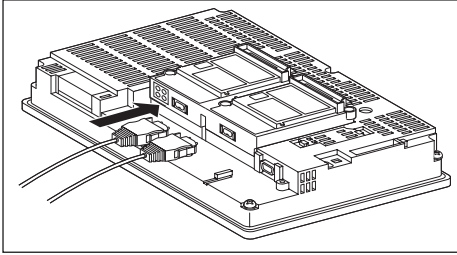
8

CC-Link CONNECTION (Via G4)

2 Connecting the cable

(1) Optical fiber cable


(a) Optical fiber cable connection method



- 1 Mount the optical fiber cable to the MELSECNET/H communication unit or the MELSECNET/10 communication unit.


(b) Wiring diagram

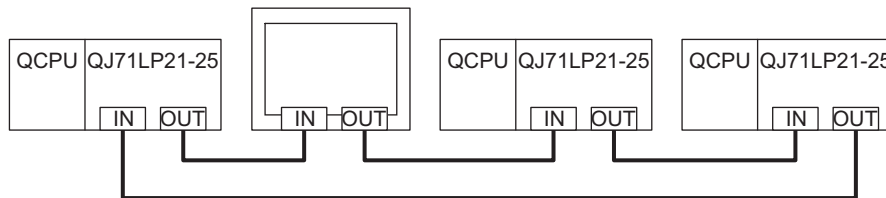When connecting the adjacent stations, connect the IN with the adjacent OUT as follows.




(2) Coaxial cable

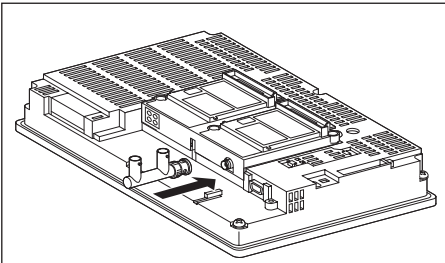(a) Coaxial cable connection method



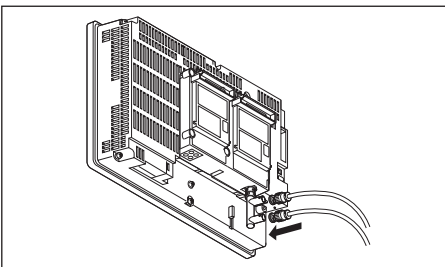- 1 Mount the F-type connector to the MELSECNET/H communication unit or the MELSECNET/10 communication unit.



- 2 Mount the coaxial cable to the F-type connector. If the MELSECNET/H communication unit or the MELSECNET/10 communication unit is a terminal station of the network, be sure to connect a terminating resistor (sold separately: A6RCON-R75) to the F-type connector.

Point

Precautions for connection of coaxial cable

Before connecting or disconnecting the coaxial connector, touch a grounded metal object to discharge the static electricity from the human body.

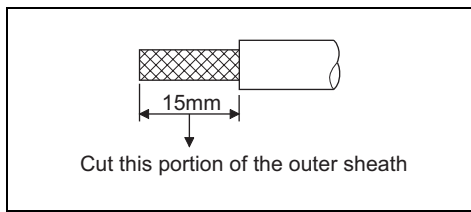
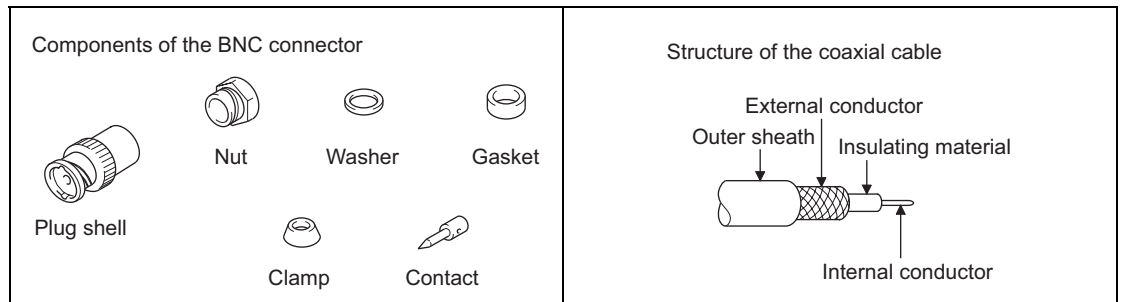
Failure to do so may result in a MELSECNET/H or MELSECNET/10 communication unit malfunction.

(b) Coaxial cable connector connection method


The following describes the method for connecting the BNC connector (connector plug for coaxial cable) and the cable.

CAUTION


- Solder the coaxial cable connectors properly. Insufficient soldering may result in malfunctions.



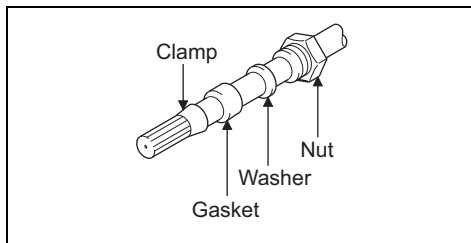- 1 Remove the external sheath of the coaxial cable with dimensions as shown on the left.




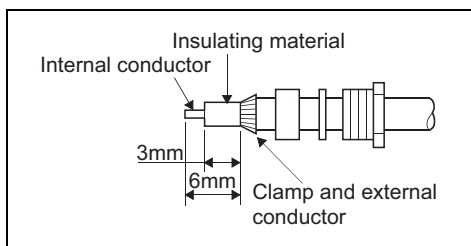- 2 Pass the nut, washer, gasket, and clamp through the coaxial cable as shown on the left and loosen the external conductor.




- 3 Cut the external conductor, insulating material, and internal conductor with the dimensions as shown on the left.

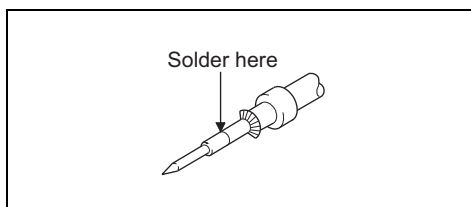Note that the external conductor should be cut to the same dimension as the tapered section of the clamp and smoothed down to the clamp.



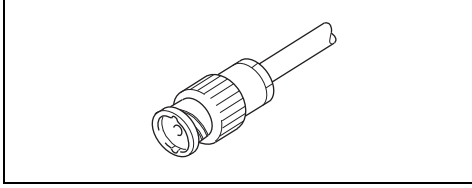- 4 Solder the contact to the internal conductor.



- 5 Insert the connector assembly shown in 4 into the plug shell and screw the nut into the plug shell.

Point

Precautions for soldering

Note the following precautions when soldering the internal conductor and contact.

- Make sure that the solder does not bead up at the soldered section.
- Make sure there are no gaps between the connector and cable insulator or they do not cut into each other.
- Perform soldering quickly so the insulation material does not become deformed.

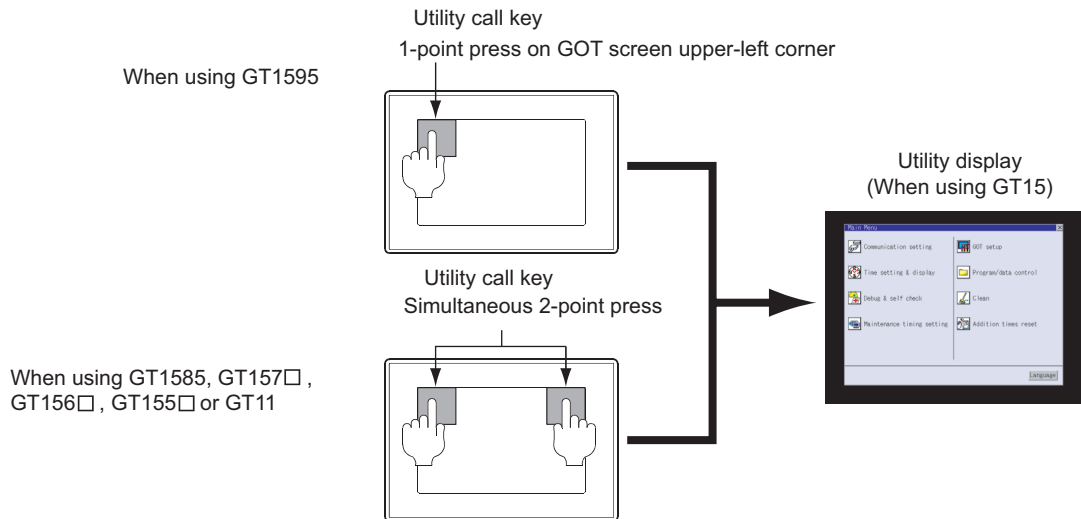
6.2.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point

When setting the utility call key to 1-point


When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.

For the setting of the utility call key, refer to the following.

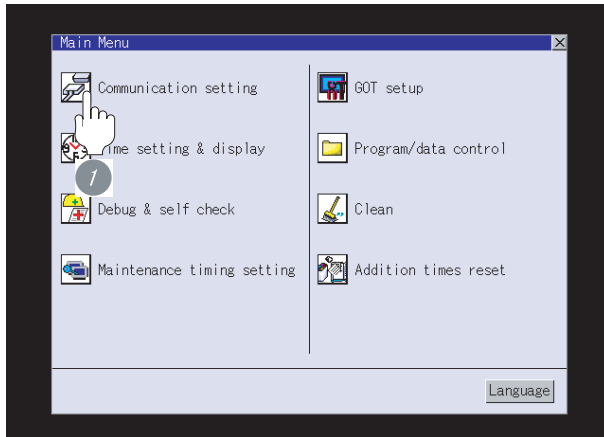☞ GT□ User's Manual



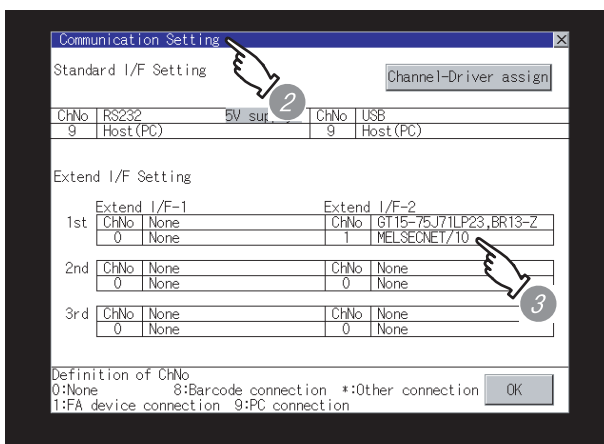- 1 After powering up the GOT, touch [Main Menu] → [Communication Settings] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver
 (When using the MELSCNET/H communication unit : MELSECNET/H)
 (When using the MELSCNET/10 Communication unit : MELSECNET/10)
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

➡ Section 6.3 PLC Side Setting



When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

➡ GT □ User's Manual

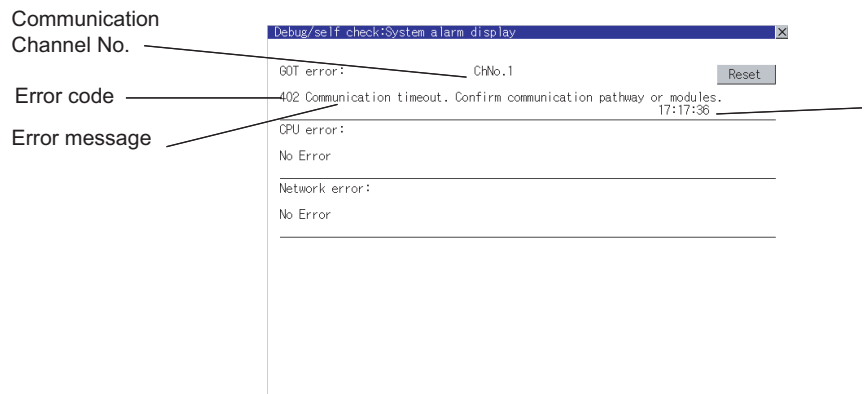
6.2.7 Checking for normal monitoring

1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

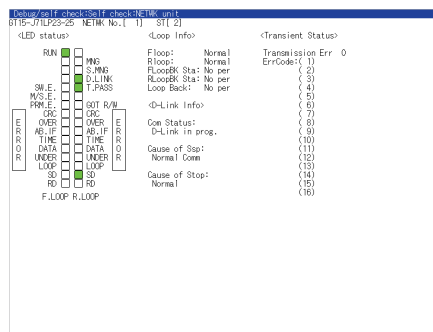
CC-Link CONNECTION (Via G4)

2 Confirming the communication status with network unit by GOT

The communication status between the GOT and the MELSECNET/10 network system can be confirmed by the Utility screen of the GOT.


For details on the operation method of the GOT Utility screen, refer to the following manual

 GT15 User's Manual




3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side. Confirm if the PLC side setting is correct.

 Section 6.3 PLC Side Setting

4 Checking the wiring state (for optical loop system only)

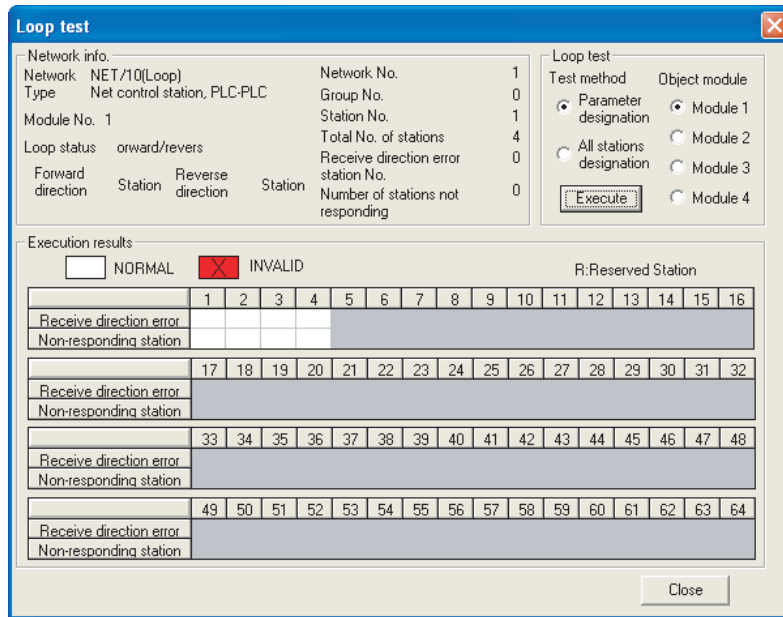
Check if the optical fiber cable is connected correctly in [Loop test] of GX Developer.
For the GX Developer operation method, refer to the following manual.

 Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

- (1) Check the [Receive direction error]. (The display example on GX Developer Version 8)

Startup procedure

GX Developer → [Diagnostics] → [MELSECNET (II)/10/H diagnostics] → Loop test



Loop test

Network info.
Network NET/10(Loop) Network No. 1
Type Net control station, PLC-PLC Group No. 0
Module No. 1 Station No. 1
Loop status orward/revers Total No. of stations 4
Forward direction Station Reverse direction Station Receive direction error station No. 0
Number of stations not responding 0

Loop test
Test method Object module
 Parameter designation Module 1
 All stations designation Module 2
 Module 3
 Module 4

Execution results
 NORMAL INVALID R: Reserved Station

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Receive direction error	INVALID	INVALID	INVALID	INVALID	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL
Non-responding station																

	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Receive direction error	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL
Non-responding station																

	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
Receive direction error	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL
Non-responding station																

	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64
Receive direction error	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL
Non-responding station																

5 Checking if the GOT is performed the data link correctly

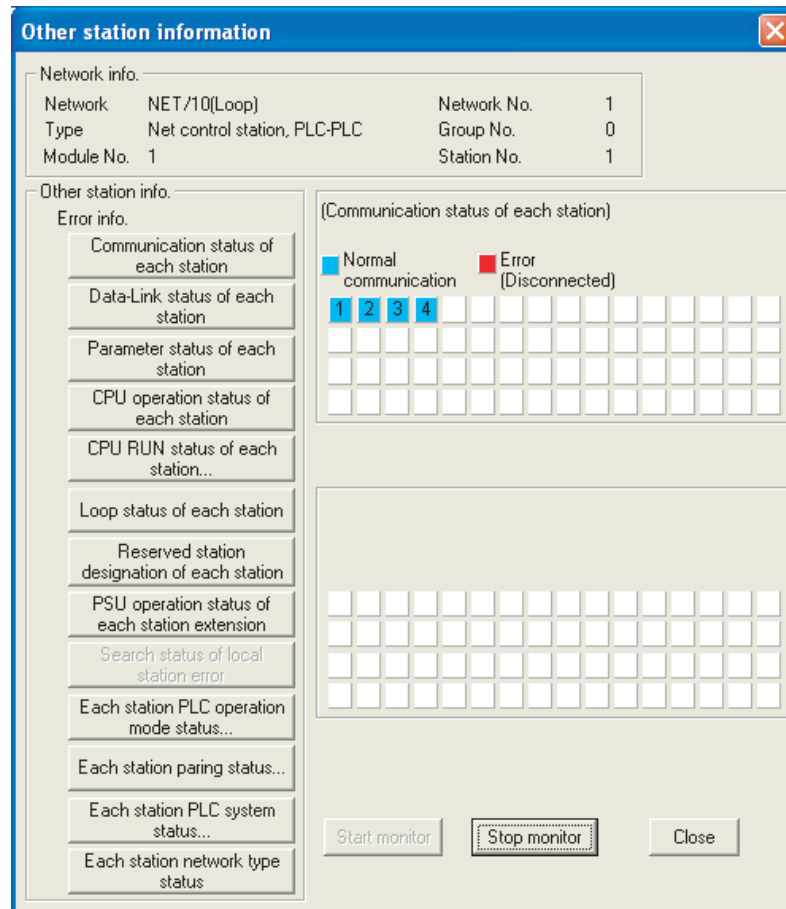
Check if the GOT is performed the data link correctly in [Other station info.].
For the GX Developer operation method, refer to the following manual.

☞ Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

- (1) Check [Communication status of each station] and [Data-Link status of each station]. (The display example on GX Developer Version 8)

Startup procedure

GX Developer → [Diagnostics] → [MELSECNET (II)/10/H diagnostics] → [Other station info.]



All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

6.3 PLC Side Setting

Model name	Reference	
MELSECNET/H network module	QJ71LP21, QJ71LP21-25, QJ71LP21S-25, QJ71BR11	Section 6.3.1
MELSECNET/10 network module (QnA Series)	AJ71QLP21, AJ71QLP21S, AJ71QBR11, A1SJ71QLP21, A1SJ71QLP21S, A1SJ71QBR11	Section 6.3.2
MELSECNET/10 network module (A Series)	AJ71LP21, AJ71BR11, A1SJ71LP21, A1SJ71BR11	Section 6.3.3

6.3.1 Connecting to MELSECNET/H network module

This section describes the settings of the GOT and MELSECNET/H network module in the case of system configuration shown as **1**.

To connect the MELSECNET/H network module to the MELSECNET/10 network system, specify the MELSECNET/10 Mode as a network type.

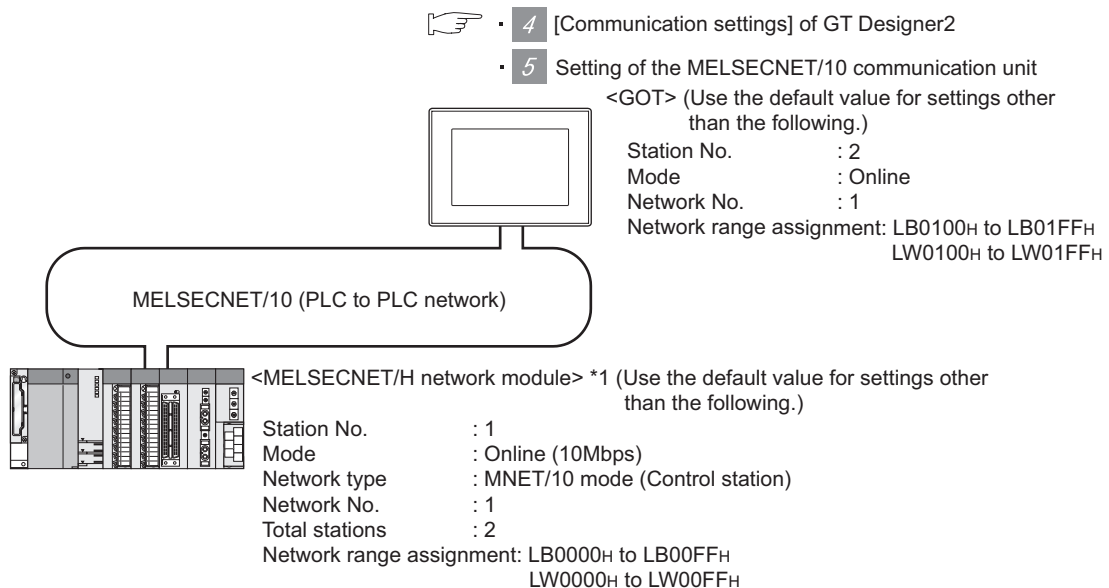


MELSECNET/H network module

For details of the MELSECNET/H network module, refer to the following manual.

Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)

1 System configuration




- 2** Switch setting of MELSECNET/H network module
- 3** [Network parameter] of GX Developer

*1 The MELSECNET/H network module is mounted at slot 0 of the base unit.
The start I/O No. of the MELSECNET/H network module is set at "0".


2 Switch setting of MELSECNET/H network module

Set the station number setting switch and mode setting switch.

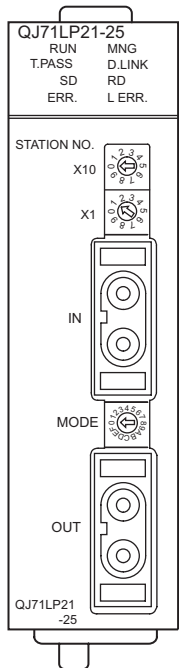
QJ71LP21, QJ71LP21-25



QJ71LP21S-25

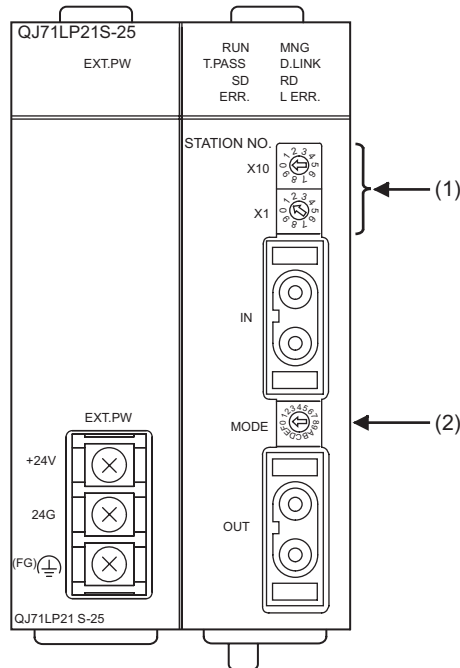

QJ71BR11

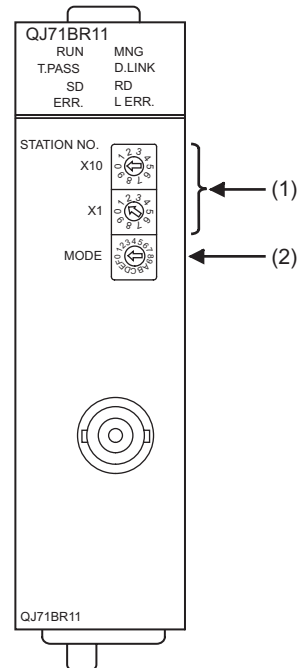

(1) Station number setting switch

Station number setting switch	Description	Setting	Setting necessity at GOT connection
STATION NO. X10 X1	Station number setting (Station number)*1	1	○

○ : Necessary △ : As necessary × : Not necessary

*1 Set to not duplicate with the station No. of the GOT.

(2) Mode setting switch

Mode setting switch	Description	Setting	Setting necessity at GOT connection
MODE	Mode setting (Online: 10Mbps)	0 (fixed)	○

○ : Necessary △ : As necessary × : Not necessary

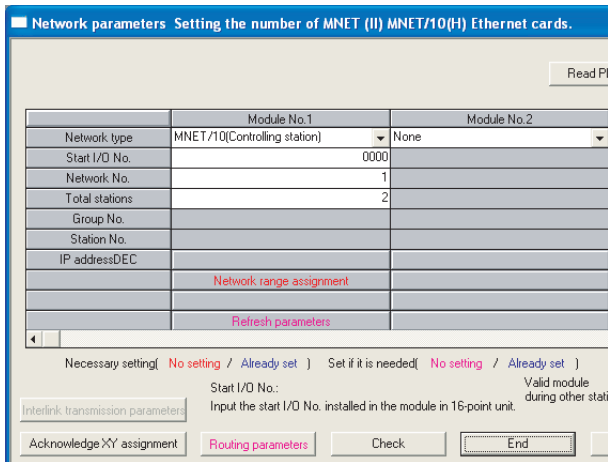


When the switch setting has been changed

Turn the PLC CPU OFF then ON again, or reset the PLC CPU.

3 [Network parameter] of GX Developer

(1) Network parameter



Item	Setting	Setting necessity at GOT connection
Network type	MNET/10 mode (Control station) (fixed)	○
Starting I/O No.	0000H	○
Network No. *1	1	○
Total stations	2	○
Group No.	0 (fixed)	○
Mode	Online (fixed)	○
Network range assignment	Refer to (2)	△
Refresh parameters	(Use default value)	△
Interrupt settings		×
Control station return setting		△
Redundant settings *2		△
Interlink transmission parameters		×
Routing parameters	Refer to (3)	△

○ : Necessary △ : As necessary × : Not necessary

*1 Set the same network No. as that of the GOT.

*2 Set it when the MELSECNET/H network module is used in the redundant QnPRHCPU system.

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

(2) Network range assignment

Network parameters Assignment the MNET/10H network range. Module No.: 1.

Setup common and station inherent parameters.

Assignment method
 Points/Start
 Start/End

Monitoring time: 200 × 10ms
 Parameter name:
 Total slave stations: 2
 Switch screens: LB/LW settings

StationNo.	Send range for each station			Send range for each station									Pairing
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End	
1	256	0000	00FF	256	0000	00FF							Disable
2	256	0100	01FF	256	0100	01FF							Disable

Specify I/O master station
 Specify reserved station
 Equal assignment
 Identical point assignment
 Points
 Supplementary setting
 Station inherent parameters
 Clear
 Check
 End
 Cancel

Item				Setting	Setting necessity at GOT connection
Monitoring time				200	△
LB/LW setting*1	Send range for station (LB)	Station No.1	Start	0000H	△
			End	00FFH	△
		Station No.2	Start	0100H	△
			End	01FFH	△
	Send range for station (LW)	Station No.1	Start	0000H	△
			End	00FFH	△
		Station No.2	Start	0100H	△
			End	01FFH	△
Pairing setting*2				Disable	△
LX/LY setting*1				No setting	△
Specify I/O master station*1				No setting	△
Specify reserved station				No setting	△
Supplementary setting				(Use default value)	△
Station inherent parameters					△

○ : Necessary △ : As necessary × : Not necessary

*1 Be sure to set it to perform the cyclic transmission.

*2 Set it when the MELSECNET/H network module is used in the redundant QnPRHCPU system.



When changing the network parameter

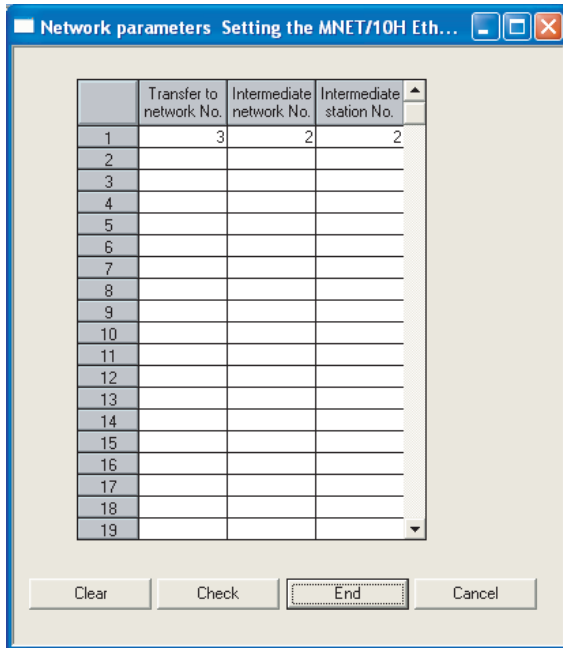
After writing the network parameter to the PLC CPU, operate the PLC CPU ether turning OFF and then ON or resetting.

(3) Routing parameter setting

Up to 64 [Transfer Network No.]s can be set.

However, the same transfer network number cannot be set twice or more (multiple times).

Therefore, the one that can access to other station from the request source host GOT is 64 kinds of [Transfer Network No.]s.



Item	Range
Transfer to network No.	1 to 239
Intermediate network No.	1 to 239
Intermediate station No.	1 to 64



Routing parameter setting of request source

Routing parameter setting is also necessary for the request source GOT.
For the setting, refer to the following.

☞ Section 6.2.3 ³ Routing parameter setting

4 [Communication settings] of GT Designer2

Item	Setting
Network type	MENT/H Mode
Network No.	1: Network No.1
Station No.	2: Station No.2
Mode Setting	Online (auto. reconnection)
Retry	3 Times (Use default)
Timeout Time	3 Sec (Use default)
Delay Time	0 Sec (Use default)
Refresh Interval	1 Time (Use default)
Transmission Speed	10 Mbps



[Communication Settings] of GT Designer2

For the setting method of [Communication Settings] of GT Designer2, refer to the following.

Section 6.2.3 Setting communication interface (Communication settings)

5 Setting of the MELSECNET/10 communication unit

Item	Setting
Network number setting switch	1: Network No.1
Group number setting switch	0: No group setting (fixed)
Station number setting switch	2: Station number 2
Mode setting switch	0: On-line (fixed)



Setting of the MELSECNET/10 communication unit

For the setting method of the MELSECNET/10 communication unit, refer to the following.

Section 6.2.3 Setting communication interface (Communication settings)

6.3.2 Connecting to MELSECNET/10 network module (QnA Series)

This section describes the settings of the GOT and MELSECNET/10 network module (QnA series) in the case of system configuration shown as **1**.
In this section, the network parameter (common parameter) of GX Developer is taken as an example to provide explanations.

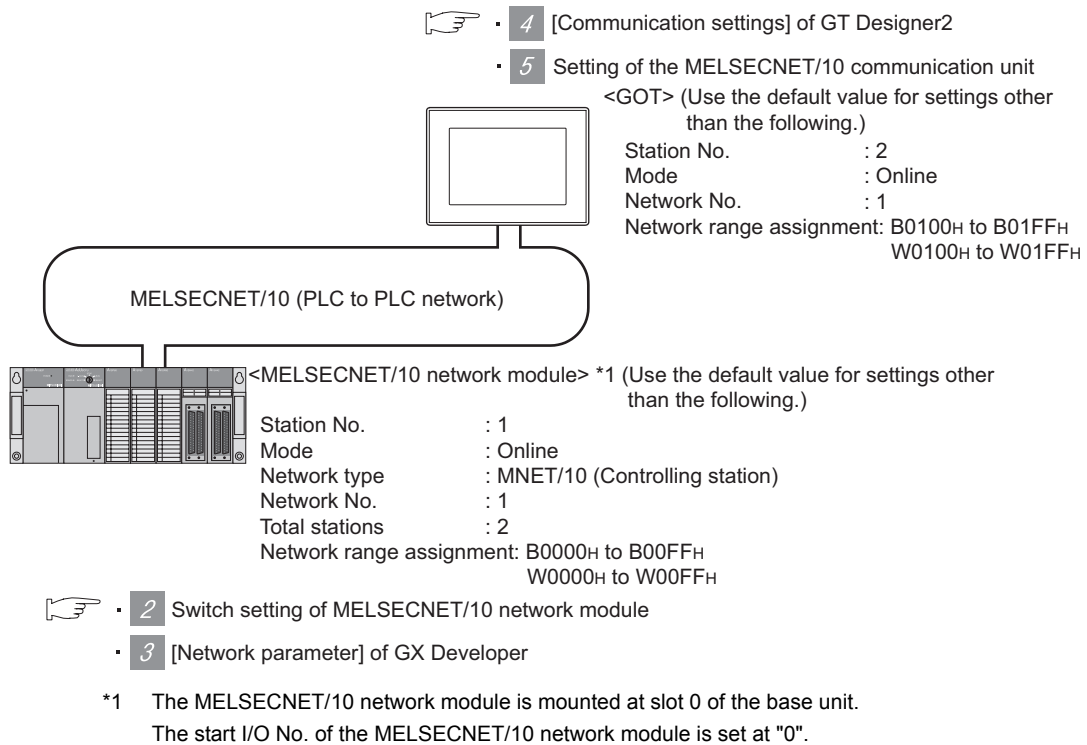


MELSECNET/10 network module (QnA Series)

For details of the MELSECNET/10 network module (QnA Series), refer to the following manual.

For QnA/Q4AR MELSECNET/10 Network System Reference Manual

1 System configuration



1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

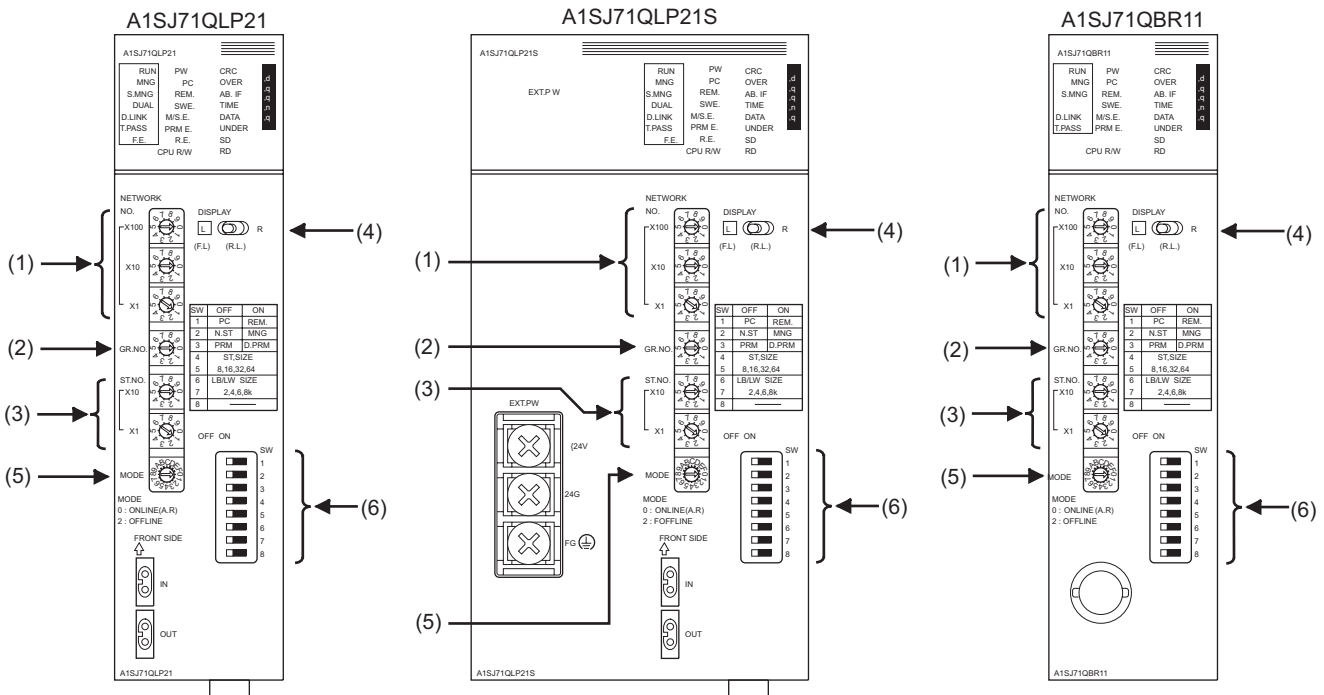
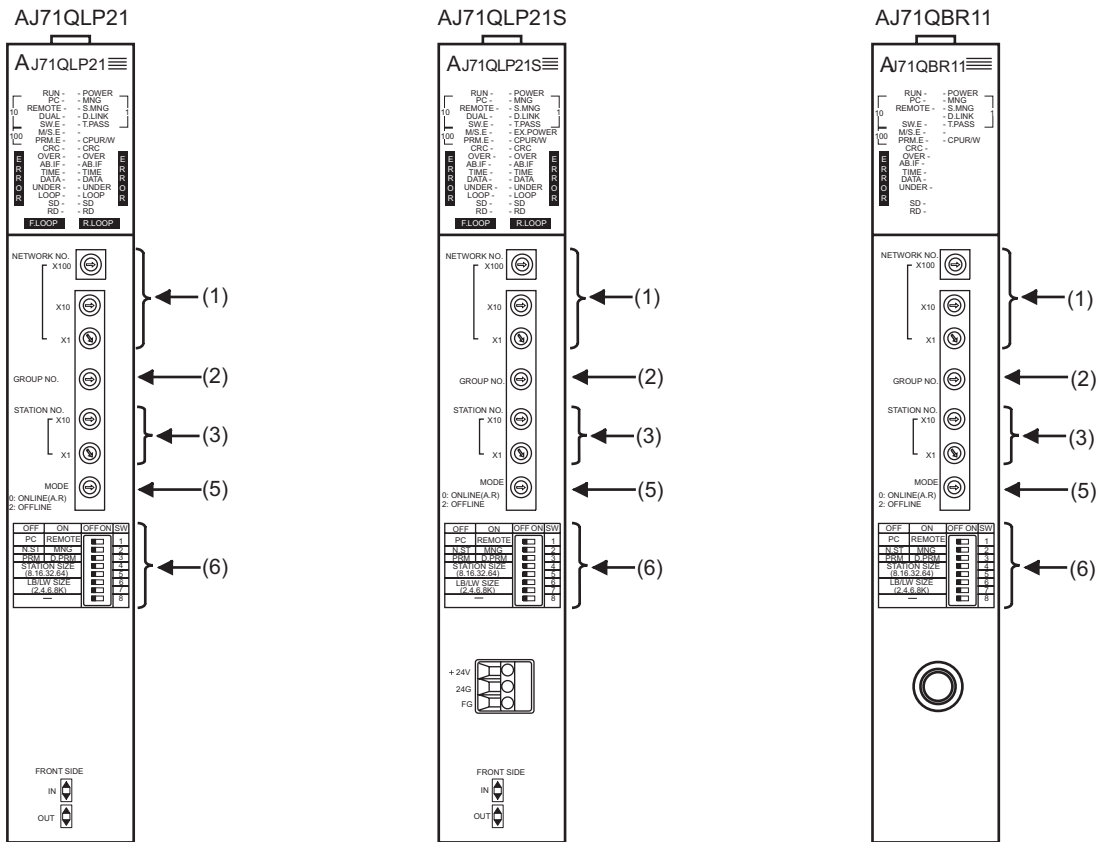
CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

2 Switch setting of MELSECNET/10 network module

Set for each setting switch.



(1) Network number setting switch

Network number setting switch	Description	Setting	Setting necessity at GOT connection
	Network No. setting (Network No.1) ^{*1}	1	○

○ : Necessary △ : As necessary × : Not necessary

*1 Specify the same network number as that of the GOT.

(2) Group number setting switch

Group number setting switch	Description	Setting	Setting necessity at GOT connection
	Group No. setting (No group setting)	0 (fixed)	○

○ : Necessary △ : As necessary × : Not necessary

(3) Station number setting switch

Station number setting switch	Description	Setting	Setting necessity at GOT connection
	Station No. setting (Station No. 1) ^{*2}	1	○

○ : Necessary △ : As necessary × : Not necessary


*2 Set to not duplicate with the station No. of the GOT.

(4) LED indication select switch

LED indication select switch	Description	Setting	Setting necessity at GOT connection
	LED indication select	L (F.L.)	△


○ : Necessary △ : As necessary × : Not necessary

(5) Mode setting switch

Mode setting switch	Description	Setting	Setting necessity at GOT connection
 <p>MODE 0 : ONLINE(A.R) 2 : OFFLINE</p>	Mode setting (Online)	0 (fixed)	○


○ : Necessary △ : As necessary × : Not necessary

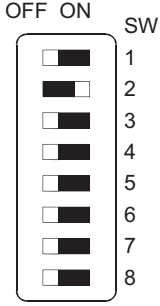(6) Condition setting switches

Condition setting switches	Setting switch	Description	Setting	Setting necessity at GOT connection
	SW1	Network type (PLC to PLC network (PC))	OFF (fixed)	○
	SW2	Station type (Control station (MNG))	ON (fixed)	○
	SW3	Parameter for using* ¹ (common parameter (PRM))	OFF (fixed)	○
	SW4	No. of stations* ¹	OFF (fixed)	×
	SW5			
	SW6	Total B/W points* ¹	OFF (fixed)	×
	SW7			
	SW8	Not used	OFF (fixed)	×

○ : Necessary △ : As necessary × : Not necessary

*¹ The MELSECNET/10 network module can be communicated by default parameters.
For details, refer to the following manual.

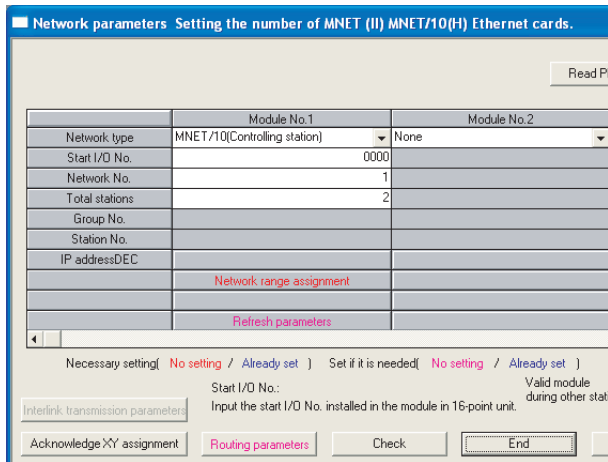
 For QnA/Q4AR MELSECNET/10 Network System Reference Manual



When the switch setting (other than the LED indication select switch) is changed
Turn the PLC CPU OFF then ON again, or reset the PLC CPU.

3 [Network parameter] of GX Developer

(1) Network parameter



Item	Setting	Setting necessity at GOT connection
Network type	MNET/10 (Controlling station) (fixed)	○
Start I/O No.	0000H	○
Network No. *1	1	○
Total stations	2	○
Network range assignment	Refer to (2)	△
Refresh parameters	(Use default value)	△
Interlink transmission parameters		×
Routing parameters	Refer to (3)	△

○ : Necessary △ : As necessary × : Not necessary

*1 Specify the same network No. as that of the network number setting switch of the MELSECNET/10 network module.

(2) Network range assignment

Item				Setting	Setting necessity at GOT connection
Monitoring time				200	△
BW setting ^{*1}	Send range for station (B)	Station No.1	Start	0000H	△
			End	00FFH	△
		Station No.2	Start	0100H	△
			End	01FFH	△
	Send range for station (W)	Station No.1	Start	0000H	△
			End	00FFH	△
		Station No.2	Start	0100H	△
			End	01FFH	△
XY setting ^{*1}				No setting	△
Specify I/O master station ^{*1}				No setting	△
Specify reserved station				No setting	△
Supplementary setting				(Use default value)	△
Station inherent parameters					△

○ : Necessary △ : As necessary × : Not necessary

^{*1} Be sure to set the setting to perform the cyclic transmission.



When changing the network parameter

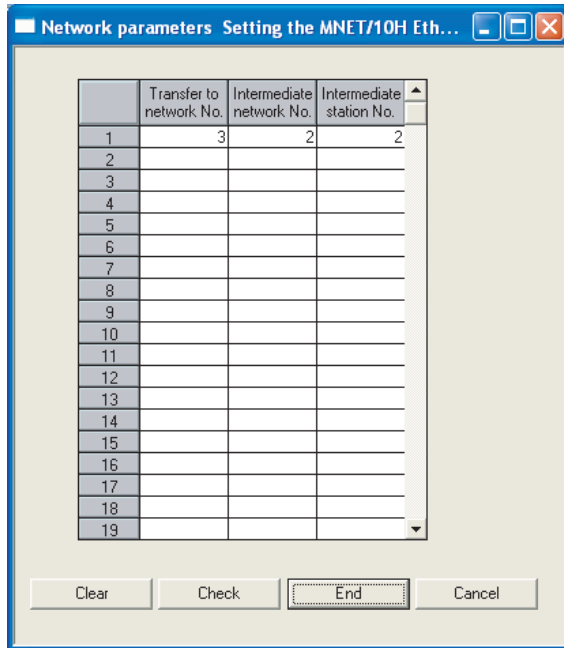
After writing the network parameter to the PLC CPU, operate the PLC CPU ether turning OFF and then ON or resetting.

(3) Routing parameter setting

Up to 64 [Transfer Network No.]s can be set.

However, the same transfer network number cannot be set twice or more (multiple times).

Therefore, the one that can access to other station from the request source host GOT is 64 kinds of [Transfer Network No.]s.



Item	Range
Transfer to network No.	1 to 239
Intermediate network No.	1 to 239
Intermediate station No.	1 to 64



Routing parameter setting of request source

Routing parameter setting is also necessary for the request source GOT.
For the setting, refer to the following.

➔ Section 6.2.3 ³ Routing parameter setting

4 [Communication settings] of GT Designer2

Item	Setting
Network type	MENT/H Mode
Network No.	1: Network No.1
Station No.	2: Station No.2
Mode Setting	Online (auto. reconnection)
Retry	3 Times (Use default)
Timeout Time	3 Sec (Use default)
Delay Time	0 Sec (Use default)
Refresh Interval	1 Time (Use default)
Transmission Speed	10 Mbps



[Communication Settings] of GT Designer2

For the setting method of [Communication Settings] of GT Designer2, refer to the following.

Section 6.2.3 Setting communication interface (Communication settings)

5 Setting of the MELSECNET/10 communication unit

Item	Setting
Network number setting switch	1: Network No.1
Group number setting switch	0: No group setting (fixed)
Station number setting switch	2: Station number 2
Mode setting switch	0: On-line (fixed)



Setting of the MELSECNET/10 communication unit

For the setting method of the MELSECNET/10 communication unit, refer to the following.

Section 6.2.3 Setting communication interface (Communication settings)

6.3.3 Connecting to MELSECNET/10 network module (A Series)

This section describes the settings of the GOT and MELSECNET/10 network module (A Series) in the case of system configuration shown as **1**. In this section, the network parameter (common parameter) of GX Developer is taken as an example to provide explanations.

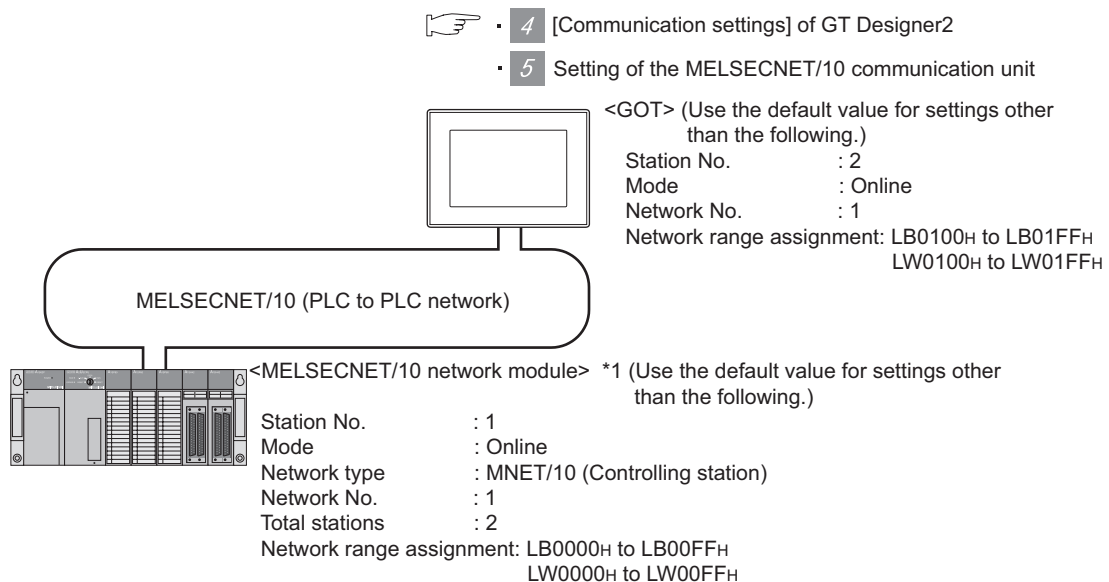


MELSECNET/10 network module (A Series)

For details of the MELSECNET/10 network module (A Series), refer to the following manual.

Type MELSECNET/10 Network system (PLC to PLC network) Reference Manual





1 System configuration






- 2** Switch setting of MELSECNET/10 network module
- 3** [Network parameter] of GX Developer

*1 The MELSECNET/10 network module is mounted at slot 0 of the base unit. The start I/O No. of the MELSECNET/10 network module is set at "0".

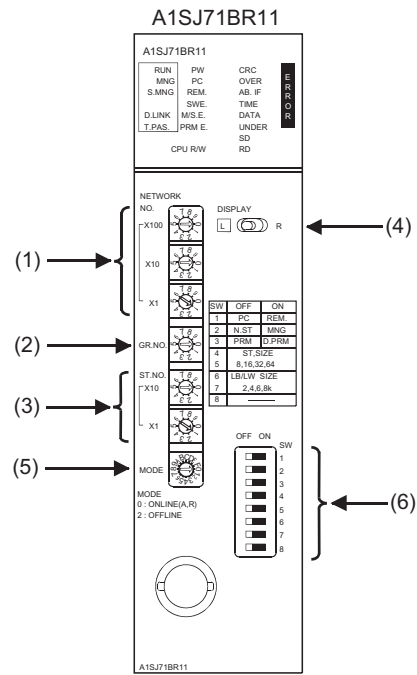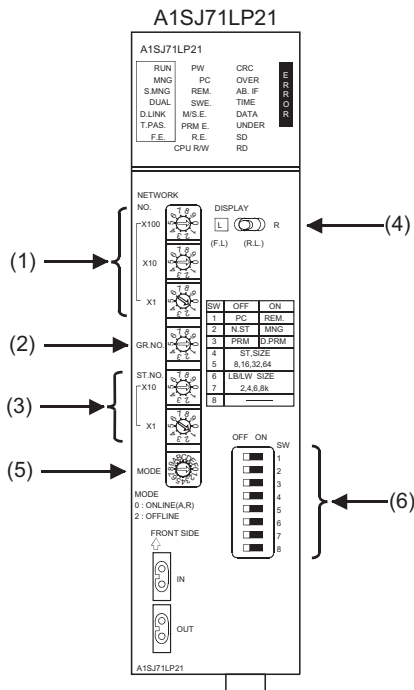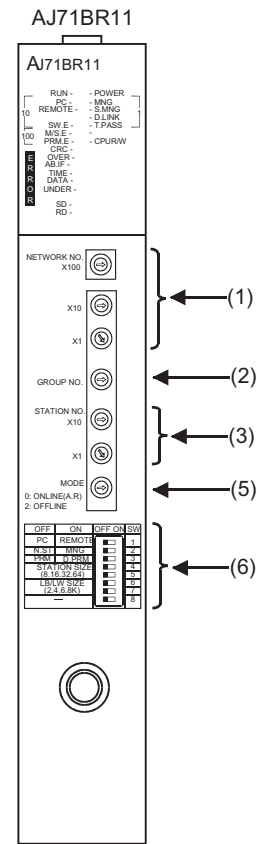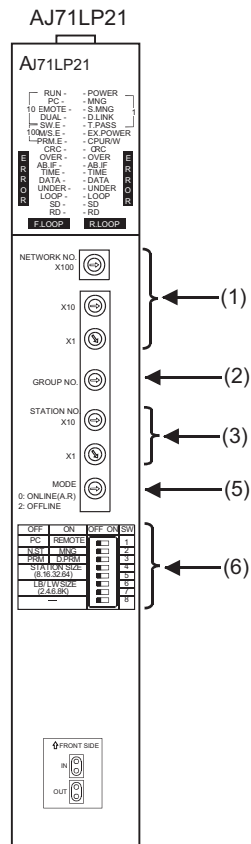2 Switch setting of MELSECNET/10 network module Set for each setting switch.



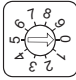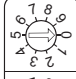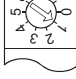(1) Network number setting switch


Network number setting switch	Description	Setting	Setting necessity at GOT connection
NETWORK NO. X100  X10  X1 	Network No. setting (Network No.1) ^{*1 *2}	1	○

○: Necessary △: As necessary ×: Not necessary

*1 Specify the same network No. as that of the GOT.



*2 Do not specify a number between 240 and 255.

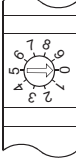(2) Group number setting switch

Group number setting switch	Description	Setting	Setting necessity at GOT connection
GROUP.NO. 	Group No. setting (No group setting)	0 (fixed)	○

○: Necessary △: As necessary ×: Not necessary

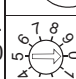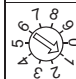
(3) Station number setting switch

Station number setting switch	Description	Setting	Setting necessity at GOT connection
STATION.NO. X10  X1 	Station No. setting (Station number 1) ^{*3}	1	○

○: Necessary △: As necessary ×: Not necessary


*3 Set to not duplicate with the station No. of the GOT.

(4) LED indication select switch

LED indication select switch	Description	Setting	Setting necessity at GOT connection
DISPLAY  R (F.L) (R.L.)	LED indication select	L (F.L.)	△


○: Necessary △: As necessary ×: Not necessary

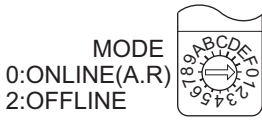(5) Mode setting switch

Mode setting switch	Description	Setting	Setting necessity at GOT connection
	Mode setting (Online)	0 (fixed)	○


○ : Necessary △ : As necessary × : Not necessary

(6) Condition setting switches

Condition setting switches	Setting switch	Description	Setting	Setting necessity at GOT connection
	SW1	Network type (PLC to PLC network (PC))	OFF (fixed)	○
	SW2	Station type (Control station (MNG))	ON (fixed)	○
	SW3	Parameter for using ^{*1} (common parameter (PRM))	OFF (fixed)	○
	SW4	No. of stations ^{*1}	OFF (fixed)	×
	SW5			
	SW6	Total B/W points ^{*1}	OFF (fixed)	×
	SW7			
	SW8	Not used	OFF (fixed)	×

○ : Necessary △ : As necessary × : Not necessary

*1 The MELSECNET/10 network module can be communicated by default parameters. For details, refer to the following manual.

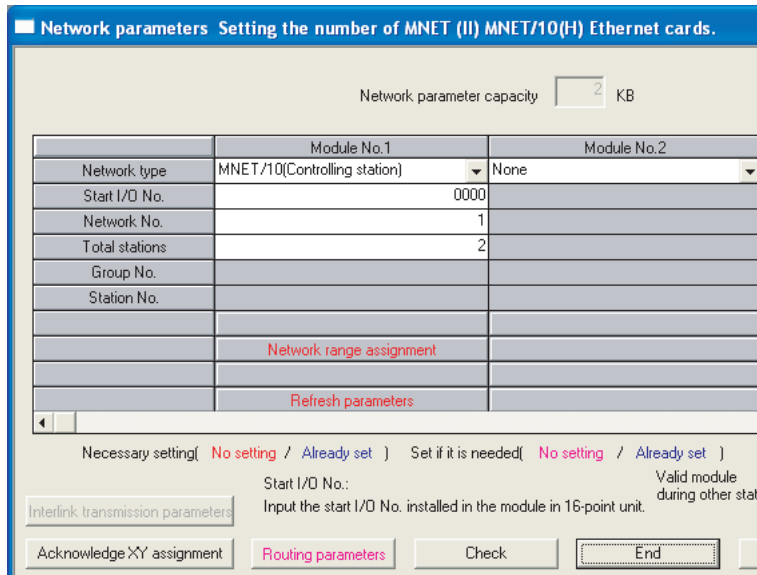
 Type MELSECNET/10 Network system (PLC to PLC network) Reference Manual



When the switch setting (other than the LED indication select switch) is changed
Turn the PLC CPU OFF then ON again, or reset the PLC CPU.

3 [Network parameter] of GX Developer

(1) Network parameter



Item	Setting	Setting necessity at GOT connection
Network type	MNET/10 (Controlling station) (fixed)	○
Start I/O No.	0000H	○
Network No.*1	1	○
Total stations	2	○
Network range assignment	Refer to (2)	△
Refresh parameters	(Use default value)	△
Interlink transmission parameters		×
Routing parameters	Refer to (3)	△

○ : Necessary △ : As necessary × : Not necessary

*1 Specify the same network No. as that of the network number setting switch of the MELSECNET/10 network module.

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

(2) Network range assignment

Network parameters Assignment the MNET/10(H) network range. Module No.: 1.

Setup common and station inherent parameters.

Assignment method
 Points/Start
 Start/End

Monitoring time: 200 X 10ms
 Parameter name:

Total slave stations: 2
 Switch screens: LB/LW settings

StationNo.	Send range for each station			Send range for each station								
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End
1	256	0000	00FF	256	0000	00FF						
2	256	0100	01FF	256	0100	01FF						

Specify I/O master station Specify reserved station Equal assignment Identical point assignment Points

Supplementary setting Station inherent parameters Clear Check End Cancel

Item				Setting	Setting necessity at GOT connection
Monitoring time				200	△
LB/LW settings*1	Send range for each station (LB)	Station No.1	Start	0000H	△
			End	00FFH	△
		Station No.2	Start	0100H	△
			End	01FFH	△
	Send range for each station (LW)	Station No.1	Start	0000H	△
			End	00FFH	△
		Station No.2	Start	0100H	△
			End	01FFH	△
LX/LY settings*1				No setting	△
Specify I/O master station*1				No setting	△
Specify reserved station				No setting	△
Supplementary setting				(Use default value)	△
Station inherent parameters					△

○ : Necessary △ : As necessary × : Not necessary

*1 Be sure to set to perform the cyclic transmission.



When changing the network parameter

After writing the network parameter to the PLC CPU, operate the PLC CPU ether turning OFF and then ON or resetting.

- (3) Routing parameter setting
 Up to 64 [Transfer Network No.]s can be set.
 However, the same transfer network number cannot be set twice or more (multiple times).
 Therefore, the one that can access to other station from the request source host GOT is 64 kinds of [Transfer Network No.]s.

Item	Range
Transfer Network No.	1 to 239
Relay Network No.	1 to 239
Relay Station No.	1 to 64



Routing parameter setting of request source

Routing parameter setting is also necessary for the request source GOT.
 For the setting, refer to the following.

☞ Section 6.2.3 ³ Routing parameter setting

4 [Communication settings] of GT Designer2

Item	Setting
Network type	MENT/H Mode
Network No.	1: Network No.1
Station No.	2: Station No.2
Mode Setting	Online (auto. reconnection)
Retry	3 Times (Use default)
Timeout Time	3 Sec (Use default)
Delay Time	0 Sec (Use default)
Refresh Interval	1 Time (Use default)
Transmission Speed	10 Mbps



[Communication Settings] of GT Designer2

For the setting method of [Communication Settings] of GT Designer2, refer to the following.

Section 6.2.3 Setting communication interface (Communication settings)

5 Setting of the MELSECNET/10 communication unit

Item	Setting
Network number setting switch	1: Network No.1
Group number setting switch	0: No group setting (fixed)
Station number setting switch	2: Station number 2
Mode setting switch	0: On-line (fixed)



Setting of the MELSECNET/10 communication unit

For the setting method of the MELSECNET/10 communication unit, refer to the following.

Section 6.2.3 Setting communication interface (Communication settings)

6.4 Precautions

1 Network configuration


Use the MELSECNET/10 mode of MELSECNET/H (PLC to PLC network) or MELSECNET/10 (PLC to PLC network) to configure a network including the GOT.

- (1) The following networks including the GOT cannot be configured.
 - MELSECNET/10 (Remote I/O network)
 - MELSECNET/H (Remote I/O network)
- (2) When configuring the network (MELSECNET/H (PLC to PLC network) including the GOT, refer to the following.

 Chapter 5 MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

2 Monitoring range

Only PLC CPU of the same networks No. can be monitored in GOT.
For details, refer to the following manual.

 GT Designer2 Version□ Screen Design Manual

3 Connecting to QCPU (Q mode)

Use function version B or later of the MELSECNET/H network module and QCPU (Q mode).

6.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
MELSECNET/10 connection (PLC to PLC network)	Supporting the MELSECNET/10 connection (PLC to PLC network)	2.09K	Communication driver MELSECNET/10 [01.02.**]
	Supporting the MELSECNET/10 mode of the communication unit for the MELSECNET/H (The communication unit uses the GT15-J71LP23-25 and the GT15-J71BR13, and the communication driver uses the MELSECNET/H.)	2.43V	Communication driver MELSECNET/H [03.01.**]
	Supporting the routing parameter setting by GT Designer2	2.43V	Communication driver MELSECNET/H [03.01.**]

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)



7.1 System Configuration page 7-2

This section describes the equipment and cables needed for CC-Link connection (intelligent device station). Select a system suitable for your application.

7.2 Preparatory Procedures for Monitoring page 7-7

This section describes the procedures to be followed before monitoring in CC-Link connection (intelligent device station).

The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

7.3 PLC Side Setting page 7-25

The PLC side settings for GOT connection are explained. When checking the PLC side settings, refer to this section.

7.4 Precautions page 7-58

This section describes precautions for CC-Link connection (intelligent device station). Be sure to read this when establishing CC-Link connection (intelligent device station).

7.5 List of Functions Added by Version Upgrade page 7-59

This section describes the functions added by version upgrade of GT Designer2 or OS.

7.1 System Configuration


Select a system configuration suitable for your application.




Conventions used in this section

Numbers (e.g. ①) of ① System configuration and connection conditions correspond to the numbers (e.g. ①) of ② System equipment.
Use these numbers as references when confirming models and applications.

7.1.1 Connecting with CC-Link Ver.1 compatible



(When MODEL GT15-J61BT13
CC-Link communication unit is used)



(When MODEL GT15-75J61BT13-Z
CC-Link communication unit is used)

① System configuration and connection conditions




Connection condition		System configuration
Number of GOTs	Distance	
26 (max.)	*1	

*1 The maximum overall extension cable length and the length between stations vary depending on the cable type to be used and the transmission speed.
For details, refer to the following manuals.

- ☞ • CC-Link System Master/Local Module User's Manual QJ61BT11N
- Control & Communication Link System Master/Local Module type AJ61QBT11/A1SJ61QBT11 User's Manual
- Control & Communication Link System Master/Local Module type AJ61BT11/A1SJ61BT11 User's Manual

2 System equipment


(1) GOT

Image	No.	Name	Model name
	1	MODEL GT15-J61BT13 CC-Link communication unit *2 • Intelligent device station	GT15-J61BT13 
		MODEL GT15-75J61BT13-Z CC-Link communication unit • Intelligent device station	GT15-75J61BT13-Z 


*2 Specify Ver.1 as the mode setting in the Communication Settings.
For details of the settings, refer to the following the manual.

 Section 7.2.3 Setting communication interface (Communication settings)

(2) PLC

Image	No.	Name	Model name
	2	CC-Link module*3	QJ61BT11, QJ61BT11N
			AJ61QBT11*4, A1SJ61QBT11*4
			AJ61BT11*4, A1SJ61BT11*4



*3 For the system configuration of the CC-Link module, refer to the following manuals.

-  • CC-Link System Master/Local Module User's Manual QJ61BT11N
- Control & Communication Link System Master/Local Module type AJ61QBT11/A1SJ61QBT11 User's Manual
- Control & Communication Link System Master/Local Module type AJ61BT11/A1SJ61BT11 User's Manual

*4 The GOT can be performed transient transmission to only CC-Link modules of function version B or later and software version J or later.

 Section 7.4 **2** For transient transmission

(3) Cable

Image	No.	Name	Model name
	3	CC-Link dedicated cable	For the specifications and inquiries of the CC-Link dedicated cable, refer to the following.  CC-Link Partner Association's home page: http://www.cc-link.org/

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

7.1.2 Connecting with CC-Link Ver.2 compatible



(When MODEL GT15-J61BT13
CC-Link communication unit is used)

1 System configuration and connection conditions

Connection condition		System configuration
Number of GOTs	Distance	
26 (max.)	*1	

*1 The maximum overall extension cable length and the cable length between stations vary depending on the cable type to be used and the transmission speed.

For details, refer to the following manual.

☞ CC-Link System Master/Local Module User's Manual QJ61BT11N

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	MODEL GT15-J61BT13 CC-Link communication unit *2 • Intelligent device station	GT15-J61BT13

*2 Specify Ver.2 as the mode setting in the Communication Settings.

For details of the settings, refer to the following the manual.

☞ Section 7.2.3 Setting communication interface (Communication settings)

(2) PLC

Image	No.	Name	Model name
	2	CC-Link module*3	QJ61BT11N


*3 For the system configuration of the CC-Link module, refer to the following manual.

☞ CC-Link System Master/Local Module User's Manual QJ61BT11N


(3) Cable

Image	No.	Name	Model name
	3	CC-Link dedicated cable	For the specifications and inquiries of the CC-Link dedicated cable, refer to the following. ☞ CC-Link Partner Association's home page: http://www.cc-link.org/

7.1.3 Connecting with CC-Link Ver.1/Ver.2 compatibles mixed



(When MODEL GT15-J61BT13
CC-Link communication unit is used)



(When MODEL GT15-75J61BT13-Z
CC-Link communication unit is used)

1 System configuration and connection conditions

Connection condition		System configuration
Number of GOTs	Distance	
26 (max.)	*1	

*1 The maximum overall extension cable length and the length between stations vary depending on the cable type to be used and the transmission speed.

For details, refer to the following manual.

CC-Link System Master/Local Module User's Manual QJ61BT11N

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	MODEL GT15-J61BT13 CC-Link communication unit *2 • Intelligent device station	GT15-J61BT13
		MODEL GT15-J61BT13 CC-Link communication unit *3 • Intelligent device station	GT15-J61BT13
		MODEL GT15-75J61BT13-Z CC-Link communication unit • Intelligent device station	GT15-75J61BT13-Z


*2 Specify Ver.2 as the mode setting in the Communication Settings to use it.
For details of the settings, refer to the following the manual.

Section 7.2.3 Setting communication interface (Communication settings)

*3 Specify Ver.1 as the mode setting in the Communication Settings to use it.
For details of the settings, refer to the following the manual.

Section 7.2.3 Setting communication interface (Communication settings)



(2) PLC

Image	No.	Name	Model name
	2	CC-Link module*4	QJ61BT11N

*4 For the system configuration of the CC-Link module, refer to the following manual.


 CC-Link System Master/Local Module User's Manual QJ61BT11N

(3) Cable

Image	No.	Name	Model name
	3	CC-Link dedicated cable	For the specifications and inquiries of the CC-Link dedicated cable, refer to the following.  CC-Link Partner Association's home page: http://www.cc-link.org/

7.2 Preparatory Procedures for Monitoring

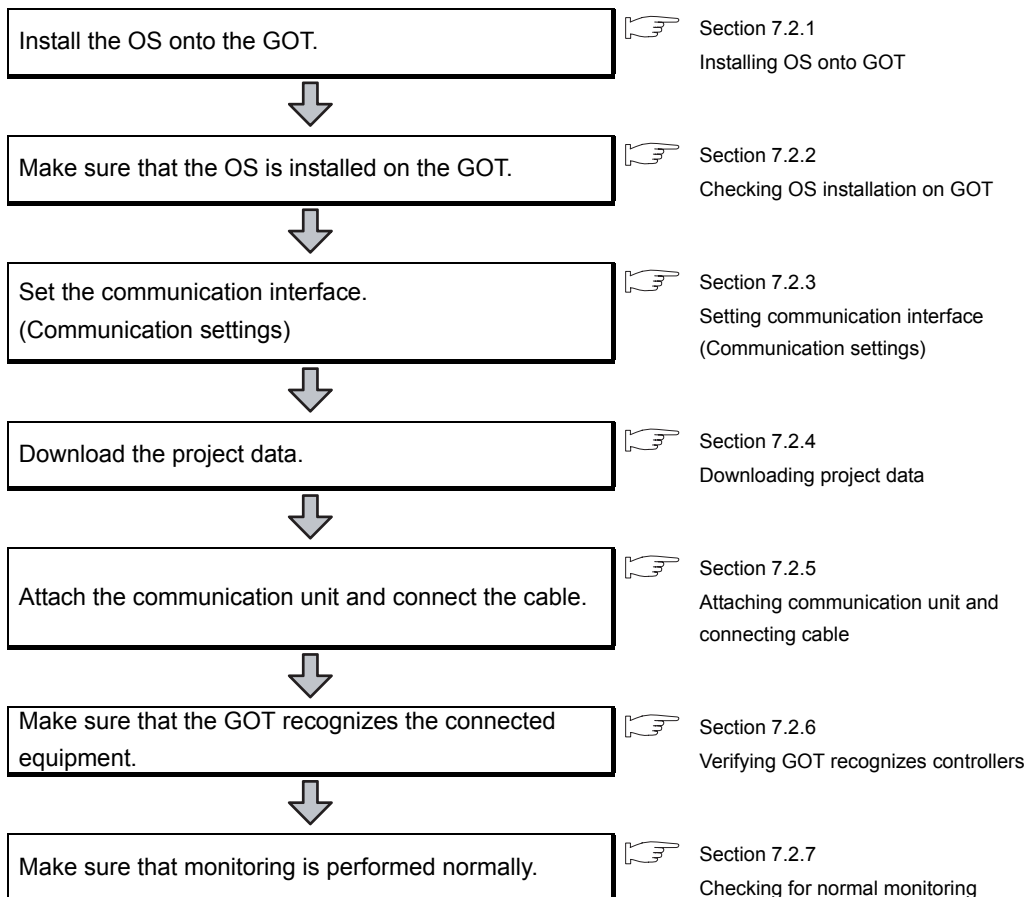The following the procedures to be taken before monitoring and corresponding reference sections.




Point

Confirming the PLC side setting


This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

 Section 7.3 PLC Side Setting

7.2.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

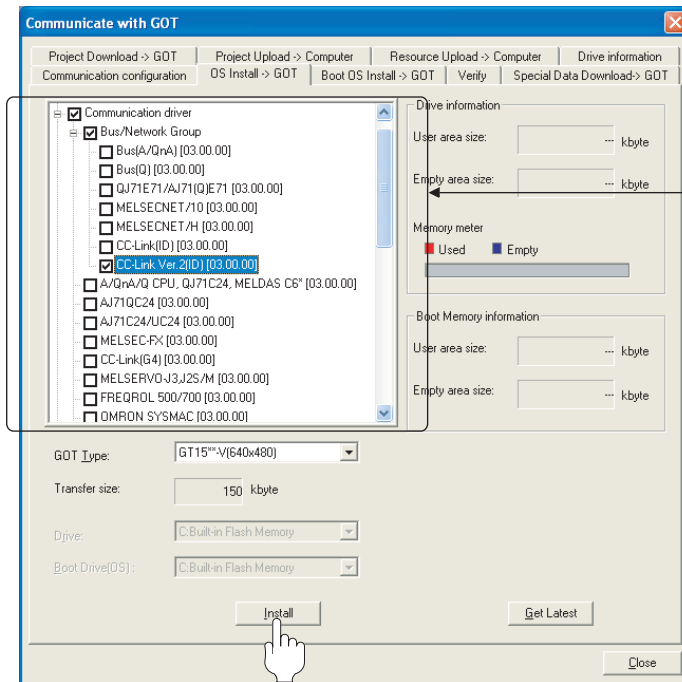 GT Designer2 Version □ Basic Operation/Data Transfer Manual




Check the following communication drivers as necessary.

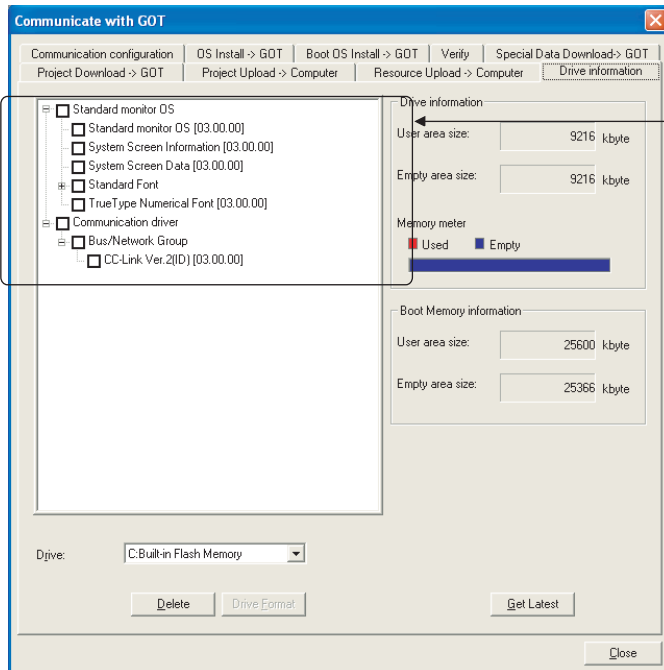
- When MODEL GT15-J61BT13 CC-Link communication unit is used : CC-Link Ver2(ID)
- When MODEL GT15-75J61BT13-Z CC-Link communication unit is used : CC-Link Ver(ID)

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

7.2.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver (any of the following)
 - When MODEL GT15-J61BT13 CC-Link communication unit is used : CC-Link Ver2(ID)
 - When MODEL GT15-75J61BT13-Z CC-Link communication unit is used : CC-Link(ID)

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)


8

CC-Link CONNECTION (Via G4)

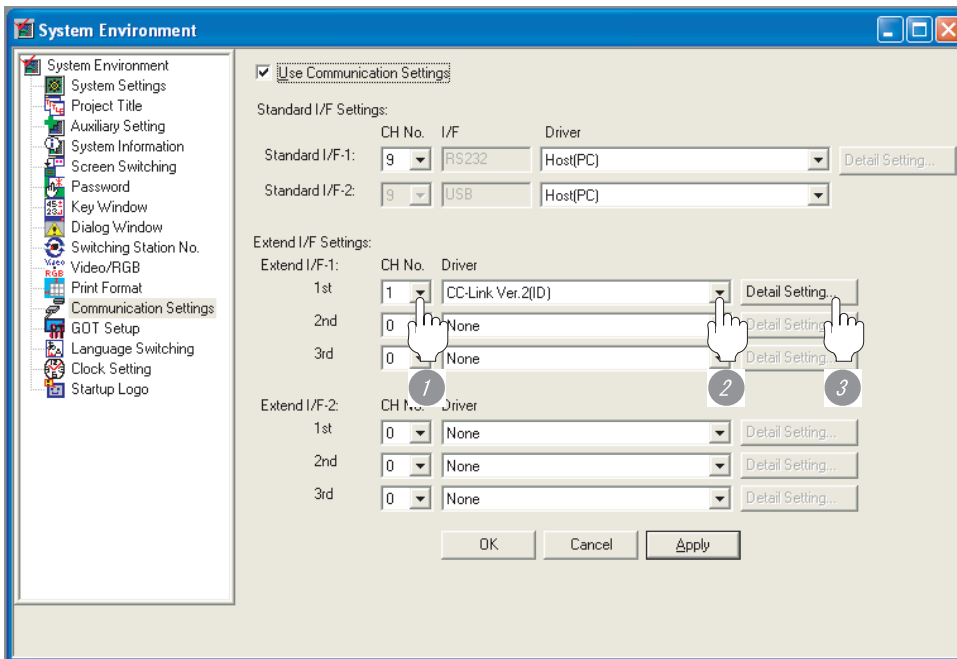
7.2.3 Setting communication interface (Communication settings)


To set the communication interface of the GOT, use the [Communication settings] of GT Designer2 and the switches of the communication unit.

Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication Settings



- 1 Set "1" to the channel No. used.
- 2 Set the driver as follows:
When MODEL GT15-J61BT13 CC-Link communication unit is used: CC-Link Ver2 (ID)
When MODEL GT15-75J61BT13-Z CC-Link communication unit is used: CC-Link (ID)
- 5 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

(1) CC-Link Ver.2(ID)

The screenshot shows a 'Communication Detail Settings' dialog box with the following fields and values:

- Driver: CC-Link Ver.2(ID)
- Station No.: 1
- Transmission Rate: 0:Online:156kbps
- Mode: Ver.1
- Expanded Cyclic: Single
- Occupied Station: 1 Station
- Input for Error Station: Clear
- Retry: 3 (Times)
- Timeout Time: 3 (Sec)
- Delay Time: 0 (ms)

Item	Description	Range
Station No.	Set the station No. of the GOT. <Default: 1>	1 to 64
Transmission Rate *1	Set the transmission speed and the mode of the GOT. <Default: 0>	0 to E
Mode	Set the mode of CC-Link. <Default: Ver.1>	Ver.1/Ver.2/Additional/Offline
Expanded Cyclic	Set the cyclic point expansion. <Default: Single>	Single/Double/Quadruple/ Octuple
Occupied Station	Set the number of stations occupied by the GOT. <Default: 1 Station>	1 Station/4 Stations
Input for Error Station	Set Clear/Hold at an error occurrence. <Default: Clear>	Clear/Hold
Retry	Set the number of retries to be performed when a communication times out. When no response is received after retries, a communication times out. <Default: 3 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 90 Sec
Delay Time	Set the delay time for reducing the load of the network/destination PLC. <Default: 0ms>	0 to 300 (ms)

For details of *1, refer to the next page.

*1 Transmission speed settings

The following lists the transmission speed settings of the CC-Link communication.

Setting	Description
0	Online : 156kbps
1	Online : 625kbps
2	Online : 2.5Mbps
3	Online : 5Mbps
4	Online : 10Mbps
A	Hardware test : 156kbps
B	Hardware test : 625kbps
C	Hardware test : 2.5Mbps
D	Hardware test : 5Mbps
E	Hardware test : 10Mbps

For details of the hardware test, refer to the following manual.

☞ CC-Link System Master/Local Module User's Manual for CC- Link module to be used

(2) CC-Link(ID)

Item	Description	Range
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec



- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT User's Manual

- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

3 Switch setting (Only when MODEL GT15-75J61BT13-Z CC-Link communication unit is used)

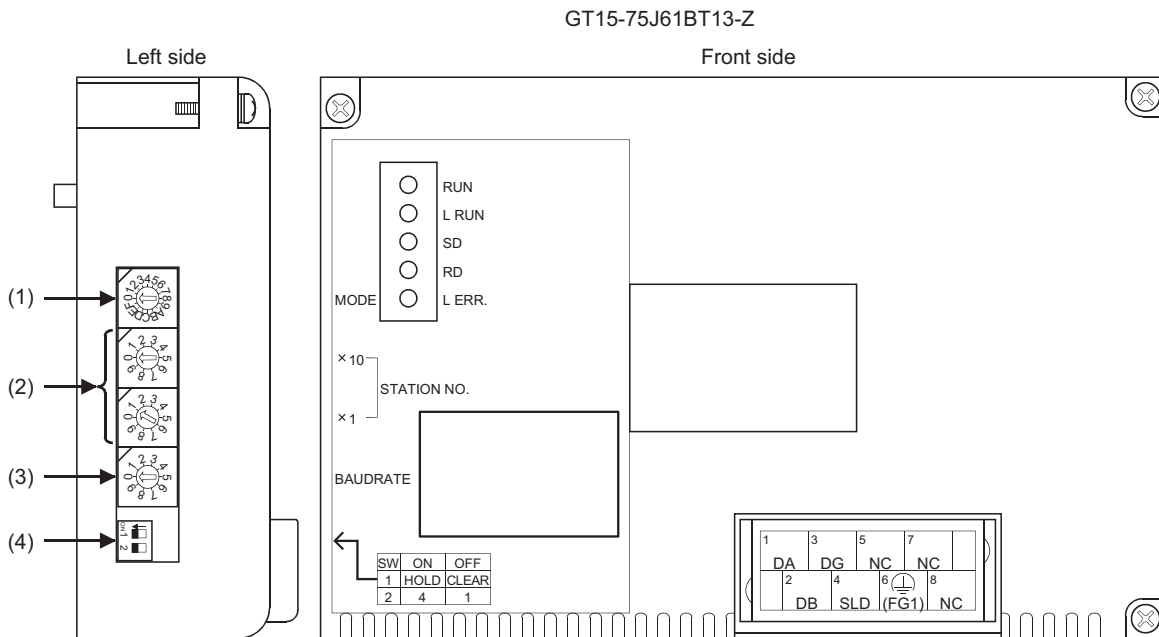


Switch setting of the communication unit

When the MODEL GT15-J61BT13 CC-Link communication unit is used, the switch setting is not needed.

For details of each setting switch and LED, refer to the following manual.

GT15 CC-Link communication unit User's Manual




(1) Mode setting switch

Mode setting switch	Description	Setting
	Select the online mode. <Default: 0>	0 (fixed)


(2) Station number setting switch

Station number setting switch	Description	Setting
	Specify the station No. of the CC-Link communication unit. <Default: 01>	1 to 64

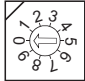(3) Transmission baudrate setting switch

Transmission baudrate setting switch	Description	Setting
	Specify the transmission speed. <Default: 0>	0: 156kbps 1: 625kbps 2: 2.5Mbps 3: 5Mbps 4: 10Mbps

(4) Condition setting switches

Condition setting switches	Setting switch	Description	Setting
	SW1	Specify input data status of the data link error station. <Default: OFF>	OFF: Cleared ON: Held
	SW2	Specify the number of stations occupied. <Default: OFF>	OFF: 1 station ON: 4 stations

Point 

(1) Switch setting example

For the switch setting example, refer to the following.



Section 7.3 PLC Side Setting


(2) When the switch setting is changed

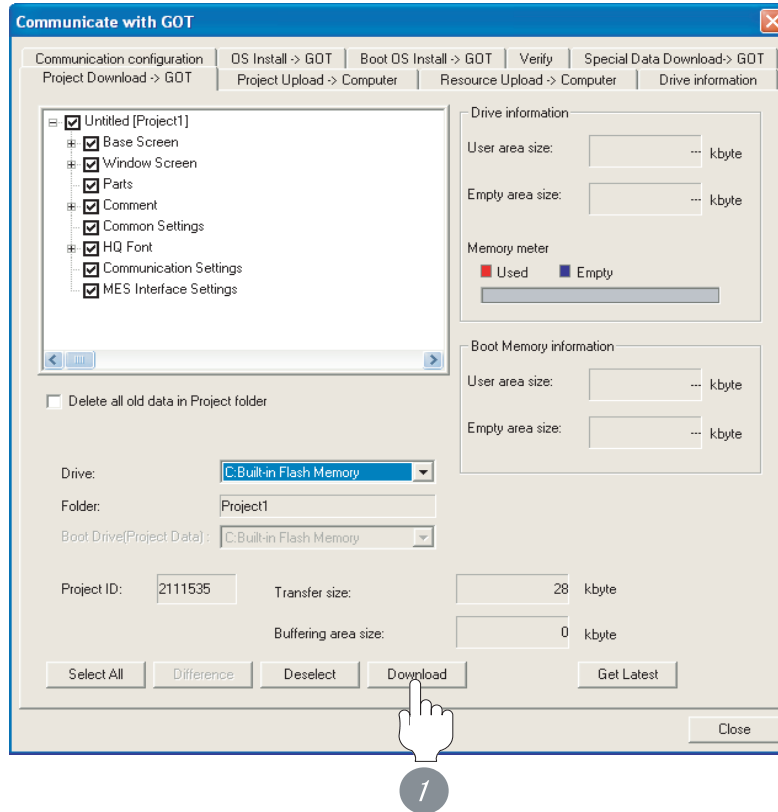
When changing the switch setting after mounting the MODEL GT15-75J61BT13-Z CC-Link communication unit on the GOT, reset the GOT.

7.2.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.

7.2.5 Attaching communication unit and connecting cable




Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.


1 Attaching the communication unit

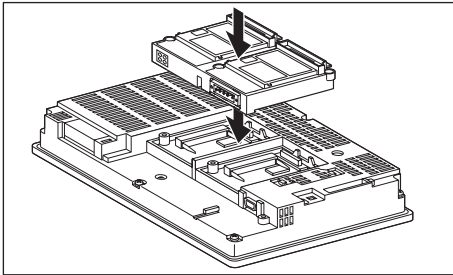(1) When MODEL GT15-J61BT13 CC-Link communication unit is used




- 1 Mount the CC-Link communication unit on the extension unit connector of the GOT.

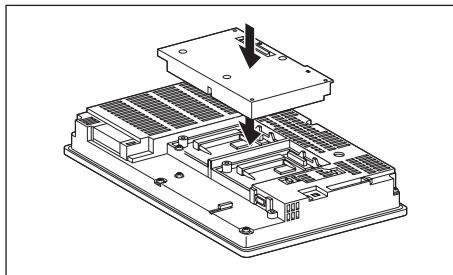(2) When MODEL GT15-75J61BT13-Z CC-Link communication unit is used



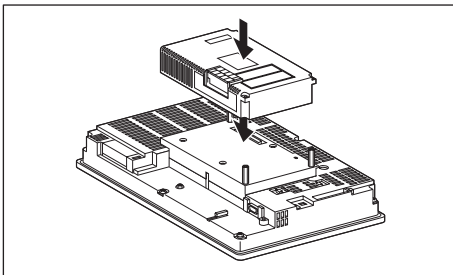- 1 Mount the interface converter unit to the extension unit connector of the GOT.



- 2 Mount the CC-Link communication unit to the interface converter unit.



CC-Link communication unit

For the details of mounting the CC-Link communication unit, refer to the following manuals.

- MODEL GT15-J61BT13 CC-Link communication unit User's Manual
- GT15 CC-Link communication unit User's Manual

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION
TO CPU

4

COMPUTER LINK
CONNECTION

5

MELSECNET/H
CONNECTION (PLC TO
PLC NETWORK)

6

MELSECNET/10
CONNECTION (PLC TO
PLC NETWORK)

7

CC-Link CONNECTION
(INTELLIGENT DEVICE
STATION)

8

CC-Link CONNECTION
(Via G4)

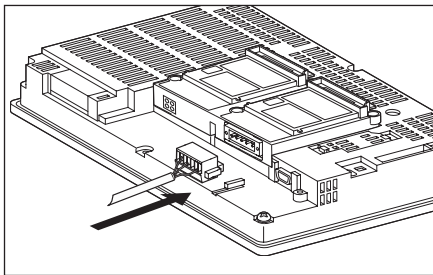
2 Connecting the cable

(1) When MODEL GT15-J61BT13 CC-Link communication unit is used


! CAUTION

- Always ground the FG terminal of the GOT power supply and that of this unit separately by applying Class D Grounding (Class 3 Grounding) or higher. Failure to do so may cause an electric shock or malfunction.

(a) CC-Link dedicated cable connection method




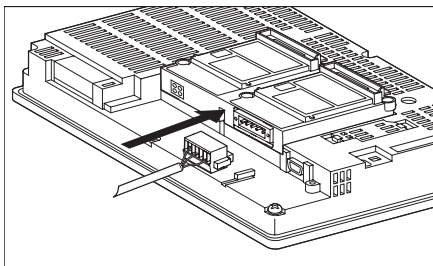- 1 Connect the CC-Link cable to the terminal block socket (packed together) of the CC-Link communication unit. If the communication unit is a terminal station of the network, be sure to connect a terminating resistor (packed together with the CC-Link communication unit) to the terminal block



- 2 Mount the terminal block socket on the CC-Link communication unit connector of the GOT.

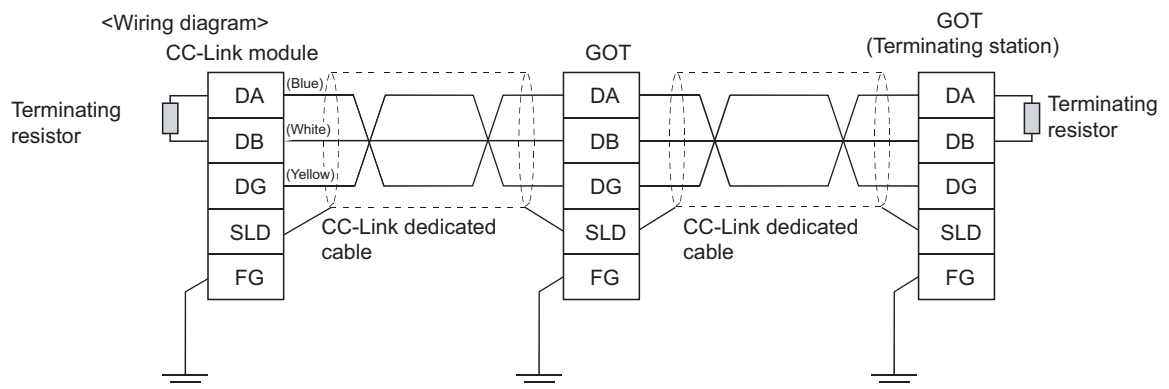(b) Wiring diagram




(2) When MODEL GT15-75J61BT13-Z CC-Link communication unit is used

⚠ CAUTION


- Always ground the FG terminal of the GOT power supply and the FG1 terminal of this unit to the protective ground conductor.
Be sure to ground the GOT and this unit separately.
Failure to do so may cause an electric shock or malfunctions.
- Use applicable solderless terminals and tighten them with the specified torque.
If any solderless spade terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Be sure to tighten any unused terminal screws with a torque of 0.36 to 0.48N•m.
Failure to do so may cause a short circuit due to contact with a solderless terminal.

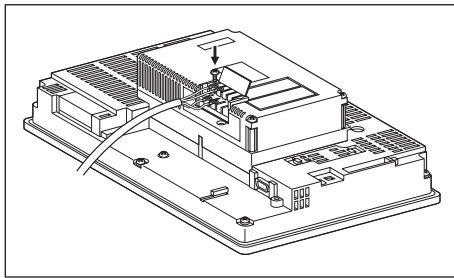(a) CC-Link dedicated cable connection method



- 1 Connect the CC-Link cable to the terminal block of the CC-Link communication unit.
If the CC-Link communication unit is terminal station of the network, be sure to connect a terminating resistor (packed together with the CC-Link module) to the terminal block.

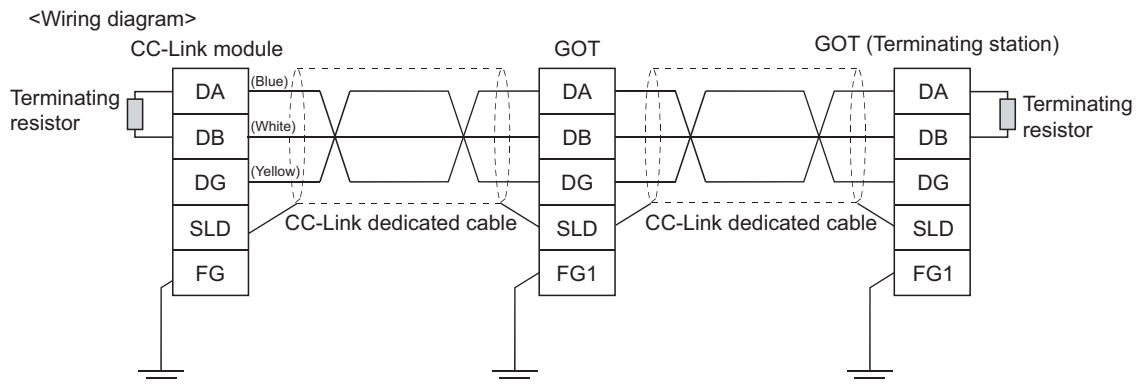(b) Wiring diagram




7.2.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

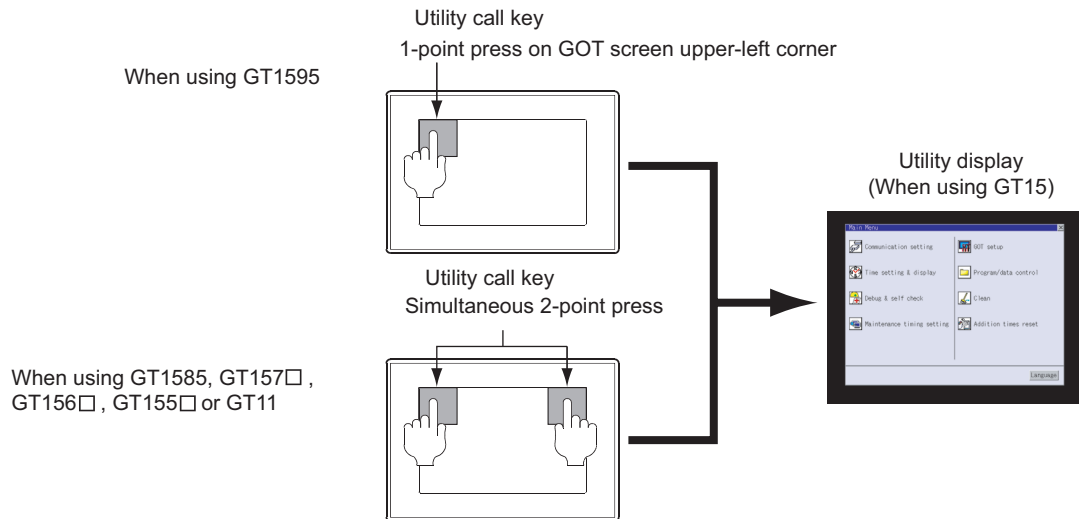How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

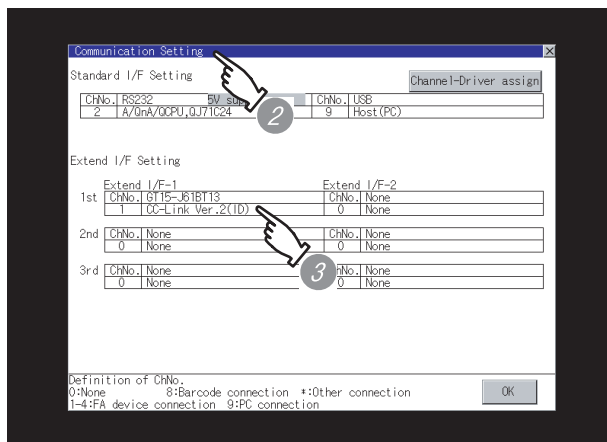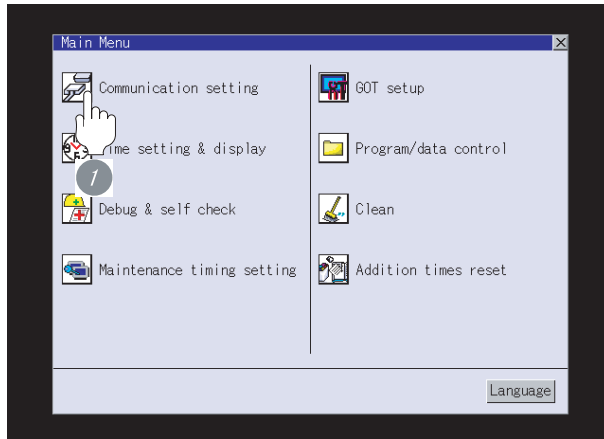 [GT□ User's Manual](#)



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver (any of the following)
- When MODEL GT15-J61BT13
CC-Link communication unit is used : CC-Link Ver.2(ID)
- When MODEL GT15-75J61BT13-Z
CC-Link communication unit is used : CC-Link (ID)

4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 7.2 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

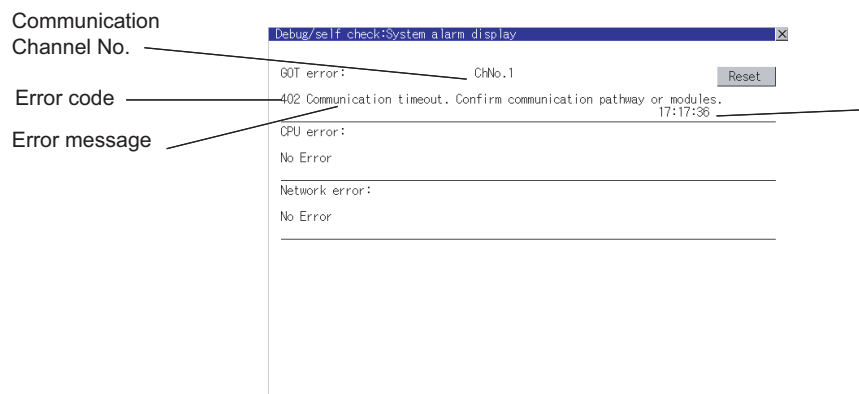
7.2.7 Checking for normal monitoring

1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)




Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

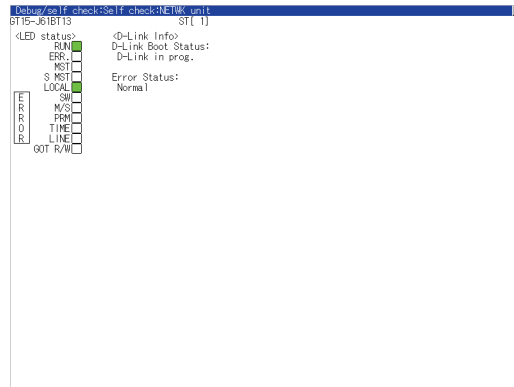
 GT Designer2 Version □ Screen Design Manual

2 Confirming the communication status with network unit by GOT

The communication status between the GOT and the CC-Link system can be confirmed by the Utility screen of the GOT.

For details on the operation method of the GOT Utility screen, refer to the following manual.

 GT15 User's Manual



Point

CC-Link communication unit when network module status is displayed


When displaying the network module status, use the CC-Link communication unit of MODEL GT15-J61BT13.

For the MODEL GT15-75J61BT13-Z, the network module status cannot be displayed.

3 Checking the wiring state of the CC-Link dedicated cable

Check if the CC-Link dedicated cable is connected correctly to all the modules in the CC-Link system. Perform the line test from the master station of the CC-Link System to check the wiring state of the CC-Link dedicated cable.


For the line testing method, refer to the following manuals.

-  • CC-Link System Master/Local Module User's Manual QJ61BT11N
- Control & Communication Link System Master/Local Module Type AJ61QBT11/A1SJ61QBT11 User's Manual
- Control & Communication Link System Master/Local Module Type AJ61BT11/A1SJ61BT11 User's Manual

4 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.


Confirm if the PLC side setting is correct.

 Section 7.3 PLC Side Setting

5 Checking if the GOT is correctly performed the data link

Use [Monitoring other station] of the GX Developer to check if the GOT is correctly performed the data link.

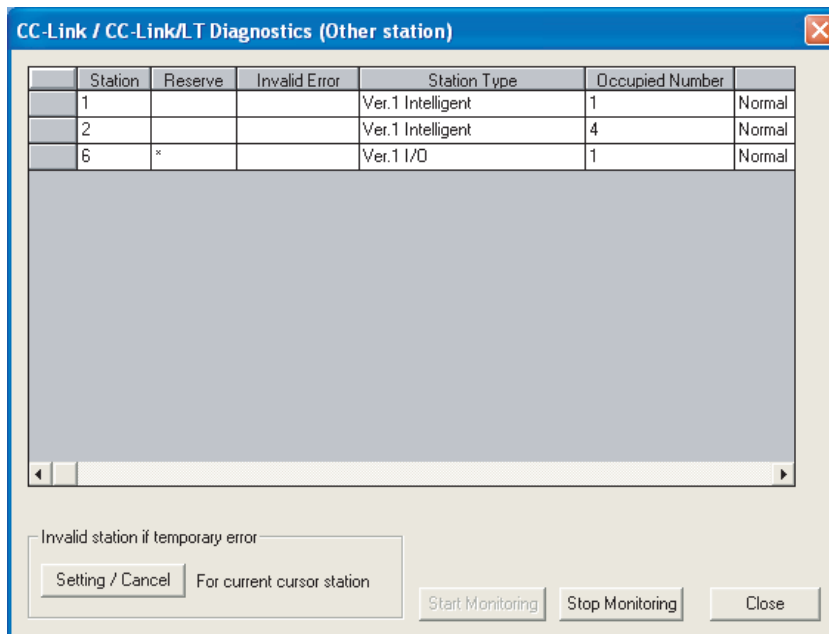
For the GX Developer operation method, refer to the following manual.

 CC-Link System Master/Local Module User's Manual QJ61BT11N

(1) Checking the [Status] (The display example on the GX Developer Version 8)

Startup procedure

GX Developer → [Diagnostics] → [CC-Link / CC-Link/LT diagnostics] → Monitoring other station



All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

7.3 PLC Side Setting

The GOT operates as the stations of which are shown below in the CC-Link system.

Station data	Description
Station type	Intelligent device station, Ver.1 intelligent device station or Ver.2 intelligent device station
Number of stations occupied	Station 1 or Station 4

The switch settings and parameter settings of the PLC side (CC-Link module) are described in Section 7.3.1 to Section 7.3.5.

Model name		Refer to
CC-Link module (Q Series)	Connecting with Ver.1 compatible	QJ61BT11, QJ61BT11N
	Connecting with Ver.2 compatible	QJ61BT11N
	Connecting with Ver.1/ Ver.2 compatibles mixed	QJ61BT11N
CC-Link module (QnA Series)		AJ61QBT11, A1SJ61QBT11
CC-Link module (A Series)		AJ61BT11, A1SJ61BT11



Hint!

Number of stations occupied

The number of stations occupied is setting for determining number of link device points (RX/RX/RWw/RWr) used by the GOT.

To use multiple numbers of link device points in the case of cyclic transmission between the GOT and CC-Link module, set the number of stations occupied as the exclusive station 4.

The number of link device points at the exclusive station 1 and 4 is shown below.

CC-Link Ver.2

Link device	Expanded cyclic setting							
	Single		Double		Quadruple		Octuple	
	Exclusive station 1	Exclusive station 4	Exclusive station 1	Exclusive station 4	Exclusive station 1	Exclusive station 4	Exclusive station 1	Exclusive station 4
Remote input (RX)	32 points	128 points	32 points	224 points	64 points	448 points	128 points	896 points
Remote output (RY)	32 points	128 points	32 points	224 points	64 points	448 points	128 points	896 points
Remote register (RWw)	4 points	16 points	8 points	32 points	16 points	64 points	32 points	128 points
Remote register (RWr)	4 points	16 points	8 points	32 points	16 points	64 points	32 points	128 points

CC-Link Ver.1

Link device	Number of stations occupied	
	Exclusive station	Exclusive of station 4
Remote input (RX)	32 points	128 points
Remote output (RY)	32 points	128 points
Remote register (RWw)	4 points	16 points
Remote register (RWr)	4 points	16 points

7.3.1 Connecting to CC-Link module (Q Series) with Ver.1 compatible

This section describes the settings of the GOT and the CC-Link module (Q Series) with Ver.1 compatible in the system configuration shown as **1**.

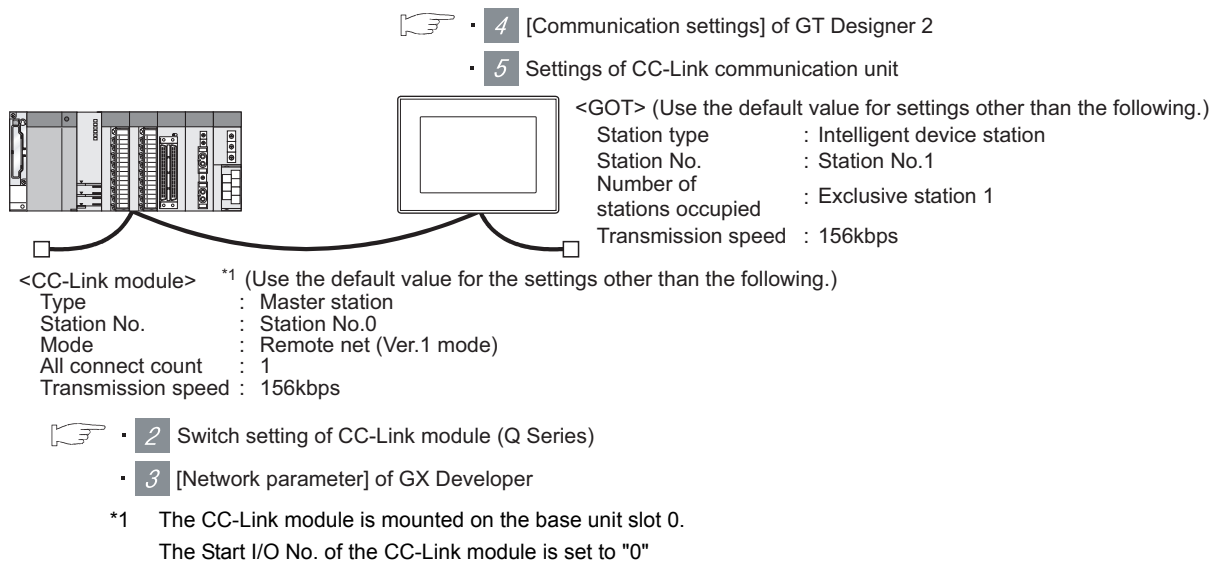


CC-Link module (Q Series)

For details of the CC-Link module (Q Series), refer to the following manual.

CC-Link System Master/Local Module User's Manual QJ61BT11N


1 System configuration



2 Switch setting of CC-Link module (Q Series)

Set the station number setting switch, transmission speed / mode setting switch.

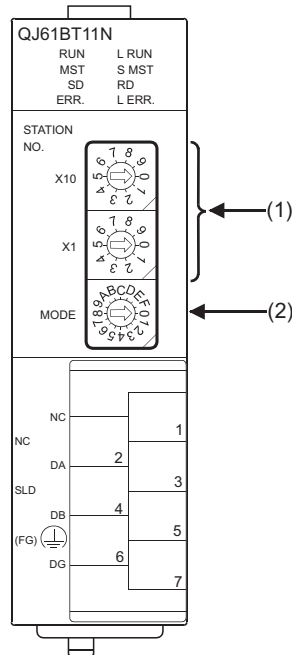QJ61BT11, QJ61BT11N



(1) Station number setting switch

Station number setting switch	Description	Setting	Setting necessity at GOT connection
	Station number setting (master station)	0 (fixed)	○

○ : Necessary △ : As necessary × : Not necessary

(2) Transmission rate/mode setting switch

Transmission rate/mode setting switch	Description	Setting	Setting necessity at GOT connection
	Transmission rate/mode setting (Online: 156kbps) ^{*1}	0	○

○ : Necessary △ : As necessary × : Not necessary

*1 Specify the same transmission speed as that of GOT.



When the switch setting has been changed

Turn the PLC CPU OFF then ON again, or reset the PLC CPU.

3 [Network parameter] of GX Developer

(1) Network parameter

Network parameters Setting the CC-Link list.

No. of boards in module Boards Blank: no setting.

Start I/O No.	1	0000
Operational setting	Operational settings	
Type	Master station	
Master station data link type	PLC parameter auto start	
Mode	Remote net(Ver.1 mode)	
All connect count	1	
Remote input(RX)	X400	
Remote output(RY)	Y400	
Remote register(RW/r)	D300	
Remote register(RW/w)	D200	
Ver.2 Remote input(RX)		
Ver.2 Remote output(RY)		
Ver.2 Remote register(RW/r)		
Ver.2 Remote register(RW/w)		
Special relay(SB)	SB0	
Special register(SW)	SW0	
Retry count	3	
Automatic reconnection station count	1	
Stand by master station No.		
PLC down select	Stop	
Scan mode setting	Asynchronous	
Delay information setting	0	
Station information setting	Station information	
Remote device station initial setting	Initial settings	
Interrupt setting	Interrupt settings	

Item	Setting	Setting necessity at GOT connection
No. of boards in module	1	○
Start I/O No.	0000H	○
Operational setting	(Use default value.)	△
Type	Master station (fixed)	○
Mode	Remote net (Ver.1 mode)	○
All connect count	1	○
Remote input (RX)	X400	△
Remote output (RY)	Y400	△
Remote register (RWr)	D300	△
Remote register (RWw)	D200	△
Special relay (SB)	SB0	△
Special register (SW)	SW0	△
Retry count	(Use default value.)	△
Automatic reconnection station count		△
Stand by master station No.		×
PLC down select		△
Scan mode setting		△
Delay information setting		△
Station information setting		Refer to (2).
Remote device station initial setting	(Use default value.)	×
Interrupt setting		×

○ : Necessary △ : As necessary × : Not necessary

(2) Station information setting

Station No	Station type	Expanded cyclic setting	Exclusive station count	Remote station points	Reserve/invalid station select	Intelligent buffer select(word)		
1/1	Intelligent device station	single	Exclusive station 1	32 points	No setting	Send	Receive	Automatic
						64	64	128

Buttons: Default, Check, End, Cancel

Item ^{*1}	Setting	Setting necessity at GOT connection
Station type	Intelligent device station (fixed)	○
Exclusive station count ^{*2}	Exclusive station 1	○
Reserve/invalid station select	No setting	○
Intelligent buffer select (word)	(Use default value.)	×

○ : Necessary △ : As necessary × : Not necessary

*1 When the [Mode] of the CC-Link module is set at [Remote net - (Ver. 1 mode)], [Remote station points] cannot be set.

*2 Set the same number of occupied stations as that on the GOT.



When changing the network parameter

After writing the network parameter to the PLC CPU, operate the PLC CPU ether turning OFF and then ON or resetting.

4 [Communication Settings] of GT Designer2

(1) When MODEL GT15-J61BT13 CC-Link communication unit is used

Item	Setting
Station No.	1: Station No.1
Transmission Rate	0: Online: 156kbps
Mode	Ver.1: Remote net (Ver.1 mode)
Expanded Cyclic	Single (Use default value.)
Occupied Station	1 Station
Input for Error Station	Clear
Retry	3 Times (Use default value.)
Timeout Time	3 Sec (Use default value.)
Delay Time	0ms (Use default value.)

(2) When MODEL GT15-75J61BT13-Z CC-Link communication unit is used

Item	Setting (Use default value.)
Retry	3 Times
Timeout Time	3 Sec



[Communication Settings] of GT Designer2

For the setting method of [Communication Settings] of GT Designer2, refer to the following.

Section 7.2.3 Setting communication interface (Communication settings)

5 Setting of the CC-Link communication unit (Only when MODEL GT15-75J61BT13-Z CC-Link communication unit is used)

Item	Setting	
Mode setting switch	0: Online (fixed)	
Station number setting switch	1: Station No.1	
Transmission baudrate setting switch	0: 156kbps	
Condition setting switches	SW1 (Input data status of the data link error station)	OFF: Cleared
	SW2 (Number of occupied stations)	OFF: 1 station



Setting of the CC-Link communication unit

For the setting method of the CC-Link communication unit, refer to the following.

Section 7.2.3 Setting communication interface (Communication settings)

7.3.2 Connecting to CC-Link module (Q Series) with Ver.2 compatible

This section describes the settings of the GOT and CC-Link module (QnA Series) in the case of system configuration shown as **1**.

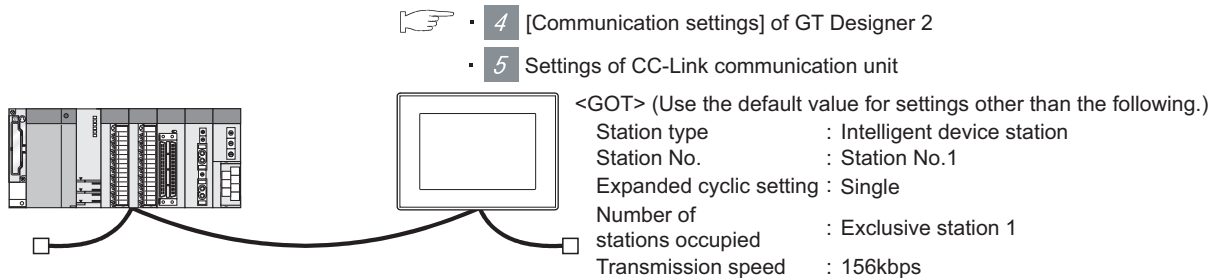


CC-Link module (QnA Series)

For details of the CC-Link module (QnA Series), refer to the following manual.

Control & Communication Link System Master/Local Module Type
AJ61QBT11/A1SJ61QBT11 User's Manual

1 System configuration



<CC-Link module> *1 (Use the default value for the settings other than the following.)


Type	: Master station
Station No.	: Station No.0
Mode	: Remote net (Ver.2 mode)
All connect count	: 1
Transmission speed	: 156kbps

- **2** Switch setting of CC-Link module (Q Series)
- **3** [Network parameter] of GX Developer

*1 The CC-Link module is mounted on the base unit slot 0.
The Start I/O No. of the CC-Link module is set to "0"

2 Switch setting of CC-Link module (Q Series)

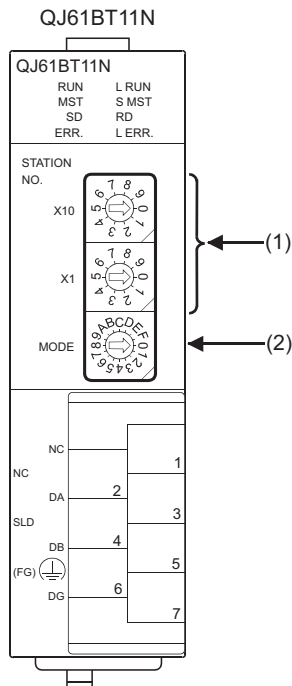Set the station number setting switch, transmission speed / mode setting switch.



(1) Station number setting switch

Station number setting switch	Description	Setting	Setting necessity at GOT connection
	Station number setting (master station)	0 (fixed)	○

○ : Necessary △ : As necessary × : Not necessary

(2) Transmission rate/mode setting switch

Transmission rate/mode setting switch	Description	Setting	Setting necessity at GOT connection
	Transmission rate/mode setting (Online: 156kbps) *1	0	○

○ : Necessary △ : As necessary × : Not necessary

*1 Specify the same transmission speed as that of GOT.

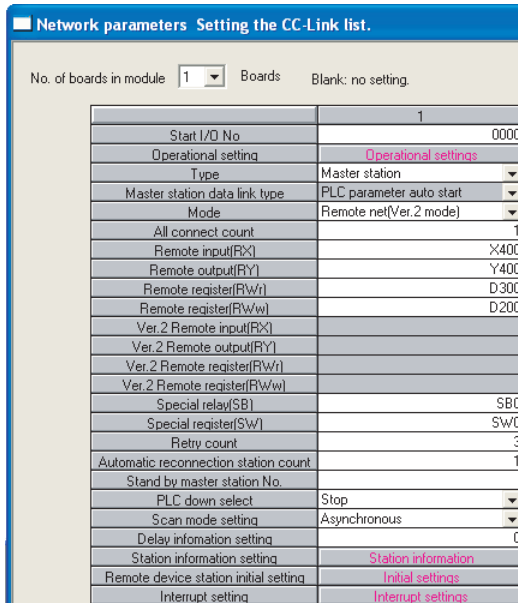


When the switch setting has been changed

Turn the PLC CPU OFF then ON again, or reset the PLC CPU.

3 [Network parameter] of GX Developer

(1) Network parameter



Item	Setting	Setting necessity at GOT connection
No. of boards in module	1	○
Start I/O No.	0000H	○
Operational setting	(Use default value.)	△
Type	Master station (fixed)	○
Mode	Remote net (Ver.2 mode)	○
All connect count	1	○
Remote input (RX)	X400	△
Remote output (RY)	Y400	△
Remote register (RWrl)	D300	△
Remote register (RWw)	D200	△
Special relay (SB)	SB0	△
Special register (SW)	SW0	△
Retry count	(Use default value.)	△
Automatic reconnection station count		△
Stand by master station No.		×
PLC down select		△
Scan mode setting		△
Delay information setting	△	
Station information setting	Refer to (2).	○
Remote device station initial setting	(Use default value.)	×
Interrupt setting		×

○ : Necessary △ : As necessary × : Not necessary

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

(2) Station information setting

Station No.	Station type	Expanded cyclic setting	Exclusive station count	Remote station points	Reserve/invalid station select	Intelligent buffer select(word)		
17/1	Ver.2 intelligent device station	single	Exclusive station 1	32 points	No setting	Send	Receive	Automatic
						64	64	128

Buttons: Default, Check, End, Cancel

Item ^{*1}	Setting	Setting necessity at GOT connection
Station type	Ver.2 intelligent device station (fixed)	○
Expanded cyclic setting ^{*2}	Single	○
Exclusive station count	Exclusive station 1	○
Remote station points	32 points (fixed)	○
Reserve/invalid station select	No setting	○
Intelligent buffer select (word)	(Use default value.)	×

○ : Necessary △ : As necessary × : Not necessary

- *1 When the [Mode] of the CC-Link module is set at [Remote net - (Ver. 2 mode)], [Remote station points] can be set.
[Remote station points] is a setting for the remote I/O station.
The default value (32 points) must be used on the GOT.
- *2 Set the same setting as that of the GOT.



When changing the network parameter

After writing the network parameter to the PLC CPU, operate the PLC CPU ether turning OFF and then ON or resetting.

4 [Communication Settings] of GT Designer2


(1) When MODEL GT15-J61BT13 CC-Link communication unit is used

Item	Setting
Station No.	1: Station No.1
Transmission Rate	0: Online 156kbps
Mode	Ver.2: Remote net (Ver.2 mode)
Expanded Cyclic	Single
Occupied Station	1 Station
Input for Error Station	Clear
Retry	3 Times (Use default value.)
Timeout Time	3 Sec (Use default value.)
Delay Time	0ms (Use default value.)



[Communication Settings] of GT Designer2

For the setting method of [Communication Settings] of GT Designer2, refer to the following.

 Section 7.2.3 Setting communication interface (Communication settings)

7.3.3 Connecting to CC-Link module (Q Series) with Ver.1/Ver.1 compatibles mixed

This section describes the setting of the GOT and CC-Link module (Q Series) with Ver.1/Ver.2 compatibles mixed in the system configuration shown as **1**.



CC-Link module (Q Series)

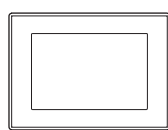
For details of the CC-Link module (Q Series), refer to the following manual.

CC-Link System Master/Local Module User's Manual QJ61BT11N

1 System configuration

- 4** [Communication settings] of GT Designer 2
- 5** Settings of CC-Link communication unit


<GOT (Ver.1 compatible)> (Use default value for settings other than the following.)




Station type : Intelligent device station
 Station No. : Station No. 1
 Number of stations occupied : Exclusive station 1
 Transmission speed : 156kbps

<GOT (Ver.2 compatible)>

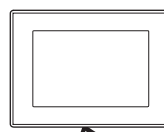(Use default value for settings other than the following.)



Station type : Intelligent device station
 Station No. : Station No. 2
 Expanded cyclic setting : Single
 Number of stations occupied : Exclusive station 1
 Transmission speed : 156kbps



<CC-Link module>*1 (Use default value for settings other than the following.)

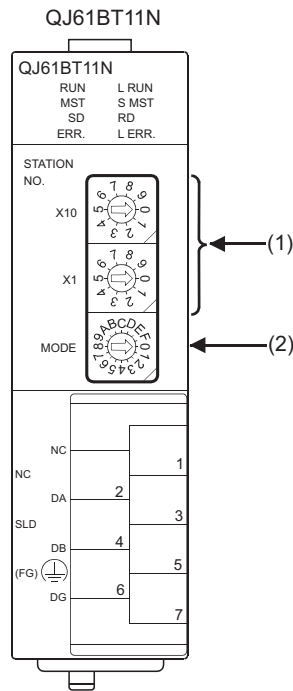
Type : Master station
 Station No. : Station No. 0
 Mode : Remote net (Ver.2 mode)
 All connect count : 2
 Transmission speed : 156kbps

- 2** Switch setting of CC-Link module (Q Series)
- 3** [Network parameter] of GX Developer

*1 The CC-Link module is mounted on the base unit slot 0.
 The Start I/O No. of the CC-Link module is set to "0"

2 Switch setting of CC-Link module (Q Series)

Set the station number setting switch, transmission speed / mode setting switch.



(1) Station number setting switch

Station number setting switch	Description	Setting	Setting necessity at GOT connection
	Station number setting (master station)	0 (fixed)	○

○ : Necessary △ : As necessary × : Not necessary

(2) Transmission rate/mode setting switch

Transmission rate/mode setting switch	Description	Setting	Setting necessity at GOT connection
	Transmission rate/mode setting (Online: 156kbps) ^{*1}	0	○

○ : Necessary △ : As necessary × : Not necessary

*1 Specify the same transmission speed as that of GOT.



When the switch setting has been changed

Turn the PLC CPU OFF then ON again, or reset the PLC CPU.

3 [Network parameter] of GX Developer

(1) Network parameter

Network parameters Setting the CC-Link list.


No. of boards in module Boards Blank: no setting.

Start I/O No.	1	0000
Operational setting	Operational settings	
Type	Master station	
Master station data link type	PLC parameter auto start	
Mode	Remote net(Ver.2 mode)	
All connect count	2	
Remote input(RX)	X400	
Remote output(RY)	Y400	
Remote register(RWr)	D300	
Remote register(RWw)	D200	
Ver.2 Remote input(RX)		
Ver.2 Remote output(RY)		
Ver.2 Remote register(RWr)		
Ver.2 Remote register(RWw)		
Special relay(SB)	SB0	
Special register(SW)	SW0	
Retry count	3	
Automatic reconnection station count	1	
Stand by master station No.		
PLC down select	Stop	
Scan mode setting	Asynchronous	
Delay information setting	0	
Station information setting	Station information	
Remote device station initial setting	Initial settings	
Interrupt setting	Interrupt settings	

Item	Setting	Setting necessity at GOT connection
No. of boards in module	1	○
Start I/O No.	0000H	○
Operational setting	(Use default value.)	△
Type	Master station (fixed)	○
Mode	Remote net (Ver.2 mode)	○
All connect count	2	○
Remote input (RX)	X400	△
Remote output (RY)	Y400	△
Remote register (RWr)	D300	△
Remote register (RWw)	D200	△
Special relay (SB)	SB0	△
Special register (SW)	SW0	△
Retry count	(Use default value.)	△
Automatic reconnection station count		△
Stand by master station No.		×
PLC down select		△
Scan mode setting		△
Delay information setting		△
Station information setting		Refer to (2).
Remote device station initial setting	(Use default value.)	×
Interrupt setting		×

○ : Necessary △ : As necessary × : Not necessary

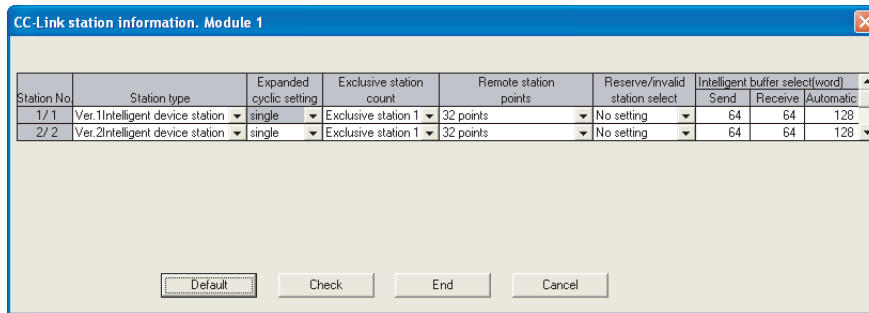(2) Station information setting



(a) Station information setting of station No.1 (GOT)

Item	Setting	Setting necessity at GOT connection
Station type	Ver.1 intelligent device station (fixed)	○
Exclusive station count	Exclusive station 1	○
Reserve/invalid station select	No setting	○
Intelligent buffer select (word)	(Use default value.)	×

○ : Necessary △ : As necessary × : Not necessary

(b) Station information setting of station No.2 (GOT)

Item ^{*1}	Setting	Setting necessity at GOT connection
Station type	Ver.2 intelligent device station (fixed)	○
Expanded cyclic setting	Single	○
Exclusive station count	Exclusive station 1	○
Reserve/invalid station select	No setting	○
Intelligent buffer select (word)	(Use default value.)	×

○ : Necessary △ : As necessary × : Not necessary

*1 When the [Mode] of the CC-Link module is set at [Remote net - (Ver. 2 mode)], [Remote station points] can be set.

[Remote station points] is a setting for the remote I/O station.
The default value (32 points) must be used on the GOT.

*2 Set the same setting as that of the GOT.



When changing the network parameter

After writing the network parameter to the PLC CPU, operate the PLC CPU ether turning OFF and then ON or resetting.

4 [Communication Settings] of GT Designer2

(1) Communication Settings of station No.1 (GOT)

(a) When MODEL GT15-J61BT13 CC-Link communication unit is used

Item	Setting
Station No.	1: Station No.1
Transmission Rate	0: Online 156kbps
Mode	Ver.1: Remote net (Ver.1 mode)
Expanded Cyclic	Single (Use default value.)
Occupied Station	1 Station
Input for Error Station	0: Clear
Retry	3 Times (Use default value.)
Timeout Time	3 Sec (Use default value.)
Delay Time	0ms (Use default value.)

(b) When MODEL GT15-75J61BT13-Z CC-Link communication unit is used

Item	Setting (Use default value.)
Retry	3 Times
Timeout Time	3 Sec

(2) Communication Settings of station No.2 (GOT)

Item	Setting (Use default value.)
Station No.	2: Station No.2
Transmission Rate	0: Online 156kbps
Mode	Ver.2: Remote net (Ver.2 mode)
Expanded Cyclic	Single
Occupied Station	1 Station
Input for Error Station	0: Clear
Retry	3 Times (Use default value.)
Timeout Time	3 Sec (Use default value.)
Delay Time	0ms (Use default value.)

5 Setting of the CC-Link communication unit (Only when MODEL GT15-75J61BT13-Z CC-Link communication unit is used)

Item	Setting	
Mode setting switch	0: Online (fixed)	
Station number setting switch	1: Station No.1	
Transmission baudrate setting switch	0: 156kbps	
Condition setting switches	SW1 (Input data status of the data link error station)	OFF: Cleared
	SW2 (Number of occupied stations)	OFF: 1 station



Setting of the CC-Link communication unit

For the setting method of the CC-Link communication unit, refer to the following.

Section 7.2.3 Setting communication interface (Communication settings)

7.3.4 Connecting to CC-Link module (QnA Series)

This section describes the settings of the GOT and CC-Link module (QnA Series) in the case of system configuration shown as **1**.

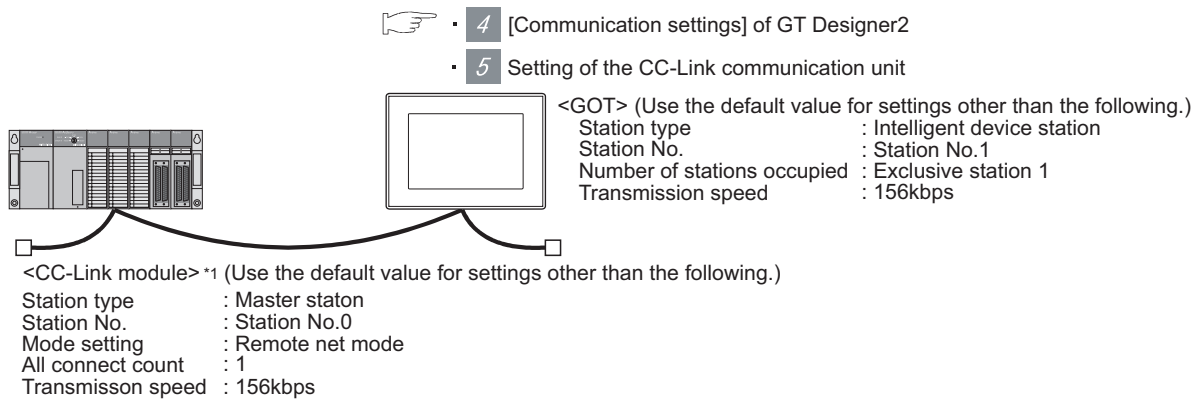


CC-Link module (QnA Series)

For details of the CC-Link module (QnA Series), refer to the following manual.

Control & Communication Link System Master/Local Module Type
AJ61QBT11/A1SJ61QBT11 User's Manual

1 System configuration




- 2** Switch settings of CC-Link module (QnA Series)
- 3** Parameter setting

*1 The CC-Link module is mounted on the base unit slot 0.
The Start I/O No. of the CC-Link module is set to "0"

2 Switch settings of CC-Link module (QnA Series)

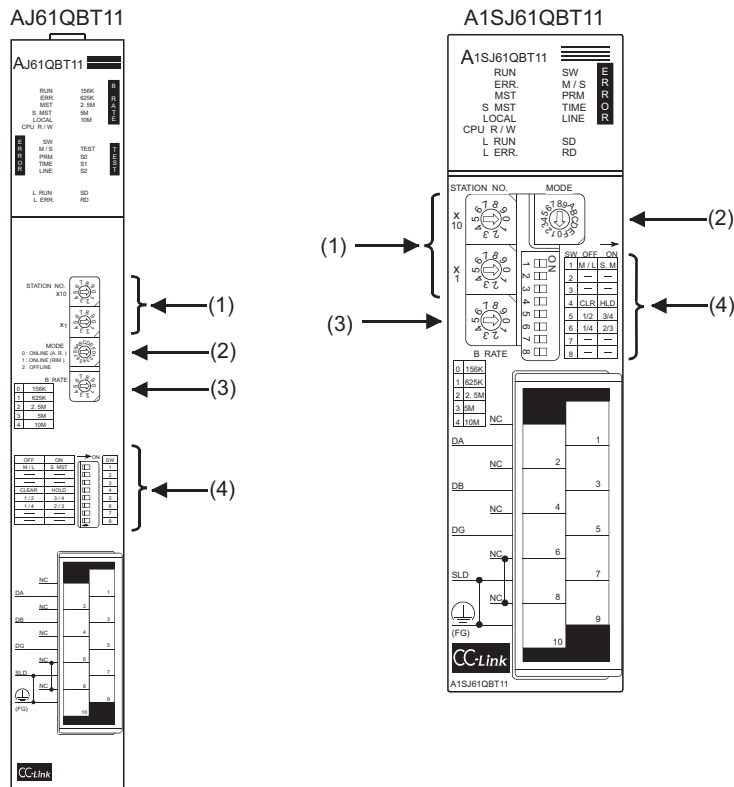Set for each setting switch.



(1) Station number setting switch

Station number setting switch	Description	Setting	Setting necessity at GOT connection
	Station number setting (master station)	0 (fixed)	○


○ : Necessary △ : As necessary × : Not necessary

(2) Mode setting switch

Mode setting switch	Description	Setting	Setting necessity at GOT connection
	Mode setting (Online: Remote net mode)	0 (fixed)	○

○ : Necessary △ : As necessary × : Not necessary

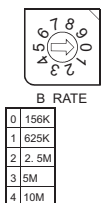
(3) Transmission speed setting

Transmission speed setting	Description	Setting	Setting necessity at GOT connection												
 <table border="1" style="margin-top: 5px;"> <tr><th colspan="2">B RATE</th></tr> <tr><td>0</td><td>156K</td></tr> <tr><td>1</td><td>625K</td></tr> <tr><td>2</td><td>2.5M</td></tr> <tr><td>3</td><td>5M</td></tr> <tr><td>4</td><td>10M</td></tr> </table>	B RATE		0	156K	1	625K	2	2.5M	3	5M	4	10M	Transmission speed setting (156kbps) ^{*1}	0	○
B RATE															
0	156K														
1	625K														
2	2.5M														
3	5M														
4	10M														

○ : Necessary △ : As necessary × : Not necessary

*1 Specify the same transmission speed as that of the GOT.

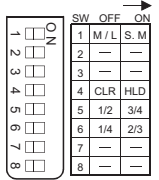(4) Condition setting switches

Condition setting switches	Setting switch	Description	Setting	Setting necessity at GOT connection																											
 <table border="1" style="margin-top: 5px;"> <tr><th colspan="3">SW OFF ON</th></tr> <tr><td>1</td><td>M/L</td><td>S.M</td></tr> <tr><td>2</td><td>—</td><td>—</td></tr> <tr><td>3</td><td>—</td><td>—</td></tr> <tr><td>4</td><td>CLR</td><td>HLD</td></tr> <tr><td>5</td><td>1/2</td><td>3/4</td></tr> <tr><td>6</td><td>1/4</td><td>2/3</td></tr> <tr><td>7</td><td>—</td><td>—</td></tr> <tr><td>8</td><td>—</td><td>—</td></tr> </table>	SW OFF ON			1	M/L	S.M	2	—	—	3	—	—	4	CLR	HLD	5	1/2	3/4	6	1/4	2/3	7	—	—	8	—	—	SW1	Station type (Master station / Local station)	OFF (fixed)	○
	SW OFF ON																														
	1	M/L	S.M																												
	2	—	—																												
	3	—	—																												
	4	CLR	HLD																												
	5	1/2	3/4																												
	6	1/4	2/3																												
7	—	—																													
8	—	—																													
SW2	Not used		OFF (fixed)	×																											
SW3																															
SW4		Input data status of the data link error station (clear)	OFF	△																											
SW5	SW6	Number of stations occupied ^{*2}	OFF (fixed)	×																											
SW7																															
SW8		Not used	OFF (fixed)	×																											

○ : Necessary △ : As necessary × : Not necessary

*2 Will be valid when the CC-Link module is the local station.
In the case of the master station, turn off it.



When the switch setting has been changed

Turn the PLC CPU OFF then ON again, or reset the PLC CPU.

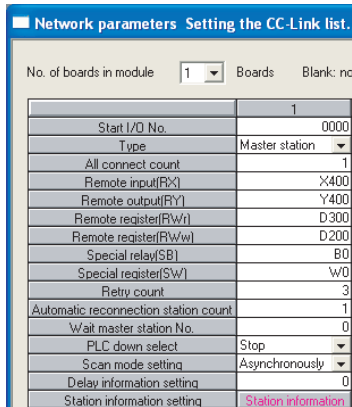
3 Parameter setting

There are two methods for the parameter setting: perform the setting from [Network parameter] of GX Developer and the sequence program.

Performing it from the [Network parameter] of the GX Developer can be set only when the PLC CPU and the CC-Link module use the function version B or later.

(1) Setting from [Network parameter] of GX Developer


(a) Network parameter



Item	Setting	Setting necessity at GOT connection
No. of boards in module	1	○
Start I/O No.	0000H	○
Type	Master station (fixed)	○
All connect count	1	○
Remote input (RX)	X400	△
Remote output (RY)	Y400	△
Remote register (RWr)	D300	△
Remote register (RWw)	D200	△
Special relay (SB)	B0	△
Special register (SW)	W0	△
Retry count	(Use default value.)	△
Automatic reconnection station count		△
Wait master station No.		×
PLC down select		△
Scan mode setting		△
Delay information setting		△
Station information setting		Refer to (2).

○ : Necessary △ : As necessary × : Not necessary

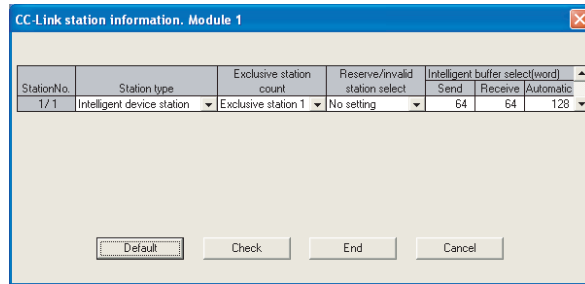(b) Station information setting



Item	Setting	Setting necessity at GOT connection
Station type	Intelligent device station (fixed)	○
Exclusive station count *1	Exclusive station 1	○
Reserve/invalid station select	No setting	○
Intelligent buffer select (word)	(Use default value.)	×

○ : Necessary △ : As necessary × : Not necessary

*1 Specify the same number of occupied stations as that of the GOT.




When changing the network parameter

After writing the network parameter to the PLC CPU, operate the PLC CPU ether turning OFF and then ON or resetting.

(2) Setting from sequence program

The parameter is written to the buffer memory, and the data link is automatically started when PLC CPU status changes from STOP to RUN.

(a) CC-Link module I/O signal

 Control & Communication Link System Master/Local Module Type AJ61QBT11/
A1SJ61QBT11 User's Manual

(b) Device used by user

Device	Application
M100, M101	Flag for parameter setting
M102, M103	Flag for data link startup
D0	Number of connected modules
D1	Number of retry
D2	No. of automatic return stations
D3	Operation specification in the case of CPU failure
D4	Reserved station specification (Station No. 1 to Station No. 16)
D5	Error invalid station specification (Station No. 1 to Station No. 16)
D6	Station data (first module)
D400	Error code in the case of data link startup failure

(c) Buffer memory settings used in the present example

Buffer memory address	Item	Setting
Decimal (Hexadecimal)		
1 (1H)	Number of connected modules	1 (1 module)
2 (2H)	Number of retry	3 (3 times)
3 (3H)	Number of automatic return stations	1 (1 station)
6 (6H)	Operation specification in the case of CPU failure	0 (stop)
16 (10H)	Reserved station specification (Station No. 1 to Station No. 16)	0 (No specification)
20 (14H)	Error invalid station specification (Station No. 1 to Station No. 16)	0 (No specification)
32 (20H)	Station data (first module) ^{*1}	2101H

*1 Details for the station data are shown below.

For 1) and 2), set the same station No. and number of station occupied as those of the GOT.

For 3), the setting is fixed.

b15 to b12	b11 to b8	b7 to b0
3)	2)	1)

1) Station No. (Set the same station No. as that of the GOT.)

01H to 40H : Station No. 1 to Station No. 64

2) Number of stations occupied (Set the number of station occupied as that of the GOT.)

1H: Exclusive station 1

2H: Exclusive station 2

3H: Exclusive station 3

4H: Exclusive station 4

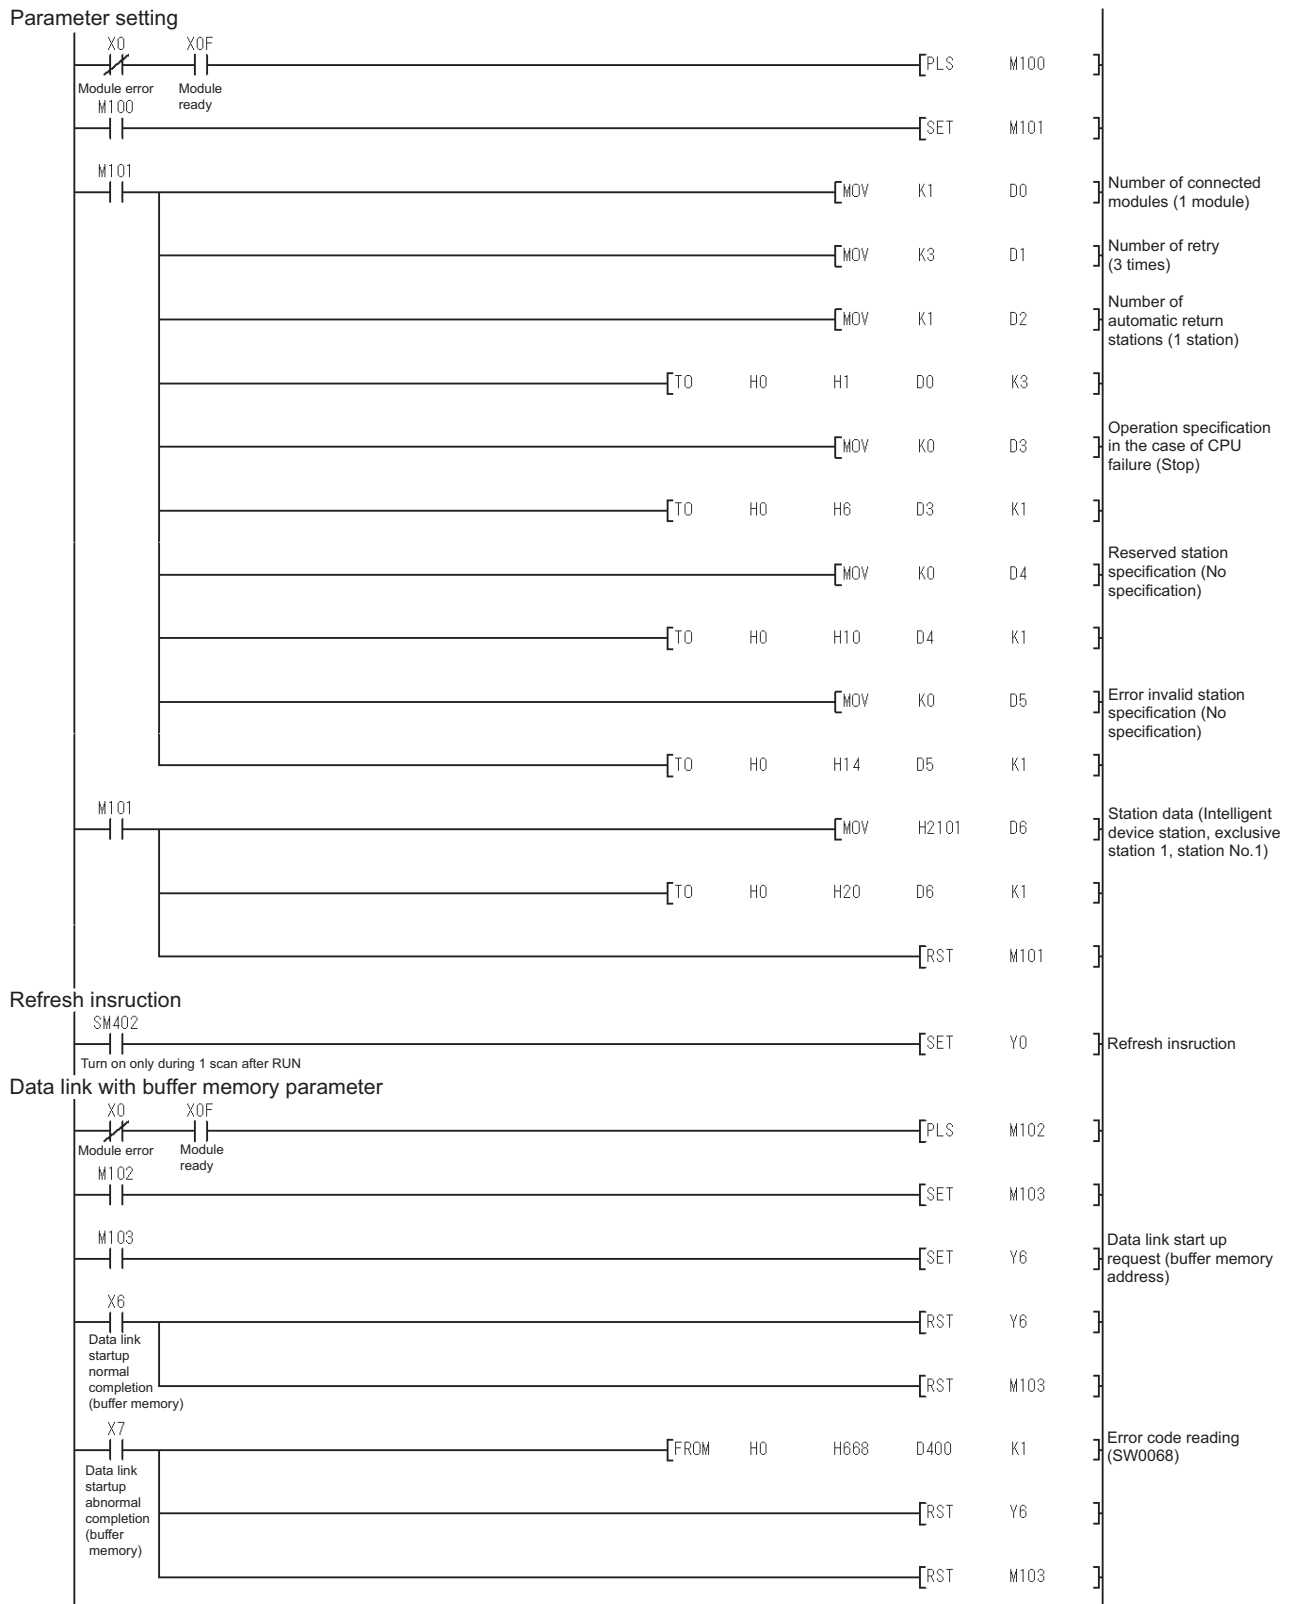
3) Station type (2H: Set it to intelligent device station.)

0H: Remote I/O station

1H: Remote device station

2H: Intelligent device station (Incl. local station)

(d) Example of sequence program



When changing the sequence program

After writing the sequence program to the PLC CPU, operate the PLC CPU ether turning OFF and then ON or resetting.

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

4 [Communication Settings] of GT Designer2

(1) When MODEL GT15-J61BT13 CC-Link communication unit is used

Item	Setting (Use default value.)
Station No.	1: Station No.1
Transmission Rate	0: Online 156kbps
Mode	Ver.1: Remote net (Ver.1 mode)
Expanded Cyclic	Single (Use default value.)
Occupied Station	1 Station
Input for Error Station	0: Clear
Retry	3 Times (Use default value.)
Timeout Time	3 Sec (Use default value.)
Delay Time	0ms (Use default value.)

(2) When MODEL GT15-75J61BT13-Z CC-Link communication unit is used

Item	Setting (Use default value.)
Retry	3 Times
Timeout Time	3 Sec



[Communication Settings] of GT Designer2

For the setting method of [Communication Settings] of GT Designer2, refer to the following.

Section 7.2.3 Setting communication interface (Communication settings)

5 Setting of the CC-Link communication unit (Only when MODEL GT15-75J61BT13-Z CC-Link communication unit is used)

Item	Setting	
Mode setting switch	0: Online (fixed)	
Station number setting switch	1: Station No.1	
Transmission baudrate setting switch	0: 156kbps	
Condition setting switches	SW1 (Input data status of the data link error station)	OFF: Cleared
	SW2 (Number of occupied stations)	OFF: 1 station



Setting of the CC-Link communication unit

For the setting method of the CC-Link communication unit, refer to the following.

Section 7.2.3 Setting communication interface (Communication settings)

7.3.5 Connecting to CC-Link module (A Series)

This section describes the settings of the GOT and CC-Link module (A Series) in the case of system configuration shown as **1**.

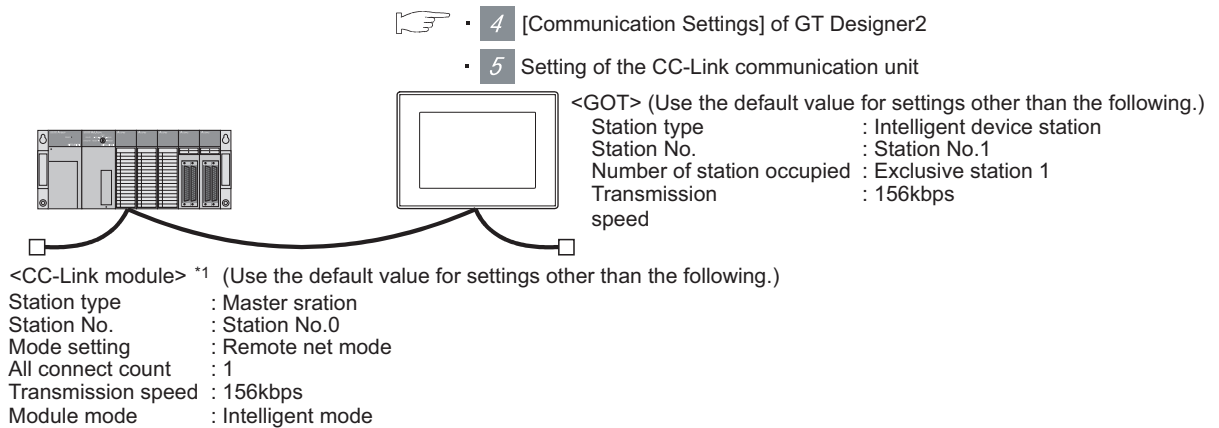


CC-Link module (A Series)

For details of the CC-Link module (A Series), refer to the following manual.

Control & Communication Link System Master/Local Module Type
AJ61BT11/A1SJ61BT11 User's Manual

1 System configuration




- 2** Switch settings of CC-Link module (A Series)
- 3** Sequence program

*1 The CC-Link module is mounted on the base unit slot 0.
The Start I/O No. of the CC-Link module is set to "0"

2 Settings of CC-Link module (A Series)

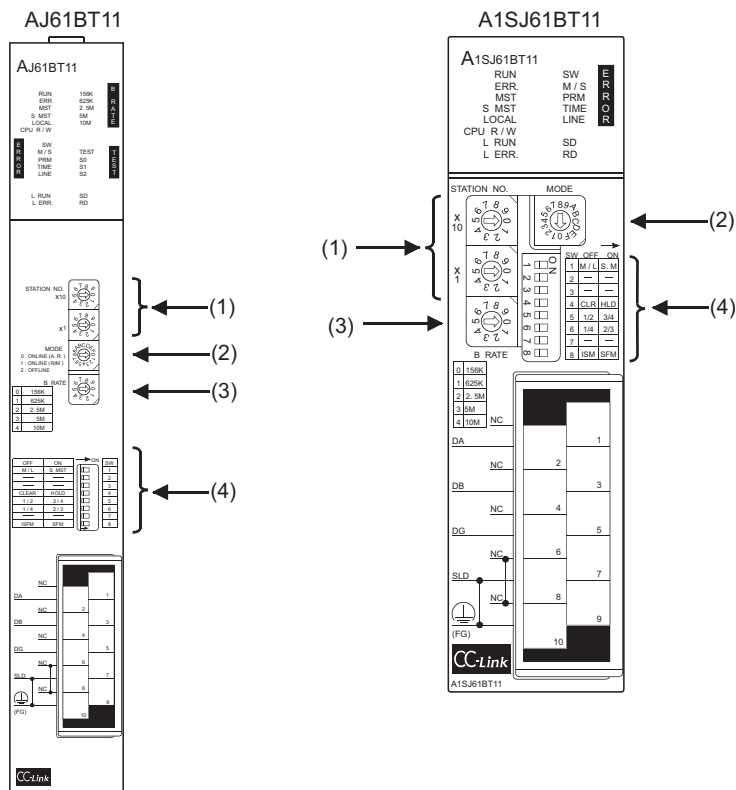Set for each setting switch.



(1) Station number setting switch

Station number setting switch	Description	Setting	Setting necessity at GOT connection
	Station number setting (master station)	0 (fixed)	○


○ : Necessary △ : As necessary × : Not necessary

(2) Mode setting switch

Mode setting switch	Description	Setting	Setting necessity at GOT connection
	Mode setting (Online: Remote net mode)	0 (fixed)	○

○ : Necessary △ : As necessary × : Not necessary

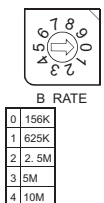
(3) Transmission speed setting switch

Transmission speed setting switch	Description	Setting	Setting necessity at GOT connection												
 <table border="1" style="margin-left: auto; margin-right: auto;"> <tr><th colspan="2">B RATE</th></tr> <tr><td>0</td><td>156K</td></tr> <tr><td>1</td><td>625K</td></tr> <tr><td>2</td><td>2.5M</td></tr> <tr><td>3</td><td>5M</td></tr> <tr><td>4</td><td>10M</td></tr> </table>	B RATE		0	156K	1	625K	2	2.5M	3	5M	4	10M	Transmission speed setting (156kbps) ^{*1}	0	○
B RATE															
0	156K														
1	625K														
2	2.5M														
3	5M														
4	10M														

○ : Necessary △ : As necessary × : Not necessary

*1 Specify the same transmission speed as that of the GOT.

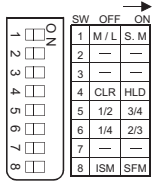(4) Condition setting switches

Condition setting switches	Setting switch	Description	Setting	Setting necessity at GOT connection																											
 <table border="1" style="margin-left: auto; margin-right: auto;"> <tr><th colspan="3">SW OFF ON</th></tr> <tr><td>1</td><td>M/L</td><td>S.M</td></tr> <tr><td>2</td><td>—</td><td>—</td></tr> <tr><td>3</td><td>—</td><td>—</td></tr> <tr><td>4</td><td>CLR</td><td>HLD</td></tr> <tr><td>5</td><td>1/2</td><td>3/4</td></tr> <tr><td>6</td><td>1/4</td><td>2/3</td></tr> <tr><td>7</td><td>—</td><td>—</td></tr> <tr><td>8</td><td>ISM</td><td>SFM</td></tr> </table>	SW OFF ON			1	M/L	S.M	2	—	—	3	—	—	4	CLR	HLD	5	1/2	3/4	6	1/4	2/3	7	—	—	8	ISM	SFM	SW1	Station type (Master station / Local station)	OFF (fixed)	○
	SW OFF ON																														
	1	M/L	S.M																												
	2	—	—																												
	3	—	—																												
	4	CLR	HLD																												
	5	1/2	3/4																												
	6	1/4	2/3																												
7	—	—																													
8	ISM	SFM																													
SW2	Not used		OFF (fixed)	×																											
SW3																															
SW4		Input data status of the data link error station (clear)	OFF	△																											
SW5	SW6	Number of station setting ^{*2}	OFF (fixed)	×																											
SW7																															
SW8		Module mode (Intelligent mode)	OFF (fixed)	○																											

○ : Necessary △ : As necessary × : Not necessary

*2 Will be valid when the CC-Link module is a local station.
In the case of the master station, turn off it.



When the switch setting has been changed

Turn the PLC CPU OFF then ON again, or reset the PLC CPU.


3 Sequence program

The parameter setting and the sequence program of the data link startup request is required.

(1) Programming condition (with CC-Link dedicated instructions)

The program sets the network parameter and automatic refresh parameter when PLC CPU status changes from STOP to RUN, and automatically starts the data link with CC-Link dedicated instructions.

(a) I/O signal of CC-Link module


 Control & Communication Link System Master/Local Module Type AJ61BT11/
A1SJ61BT11 User's Manual

(b) Devices used by user


Device	Application
M0	RLPA instruction normal completion flag
M1	RLPA instruction error completion flag
M100	Network parameter setting flag
M101	Automatic refresh parameter setting flag
D0	Synchronous mode valid/invalid
D1	Number of connected modules
D2	Station data
D3	Send buffer size
D4	Receive buffer size
D5	Automatic update buffer size
D400	Error code in the case of error completion of RLPA instruction
D100 to D103	Automatic refresh setting (RX)
D104 to D107	Automatic refresh setting (RY)
D108 to D111	Automatic refresh setting (RW)
D112 to D115	Automatic refresh setting (SB)
D116 to D119	Automatic refresh setting (SW)

(c) Example of sequence program (CC-Link dedicated instruction)

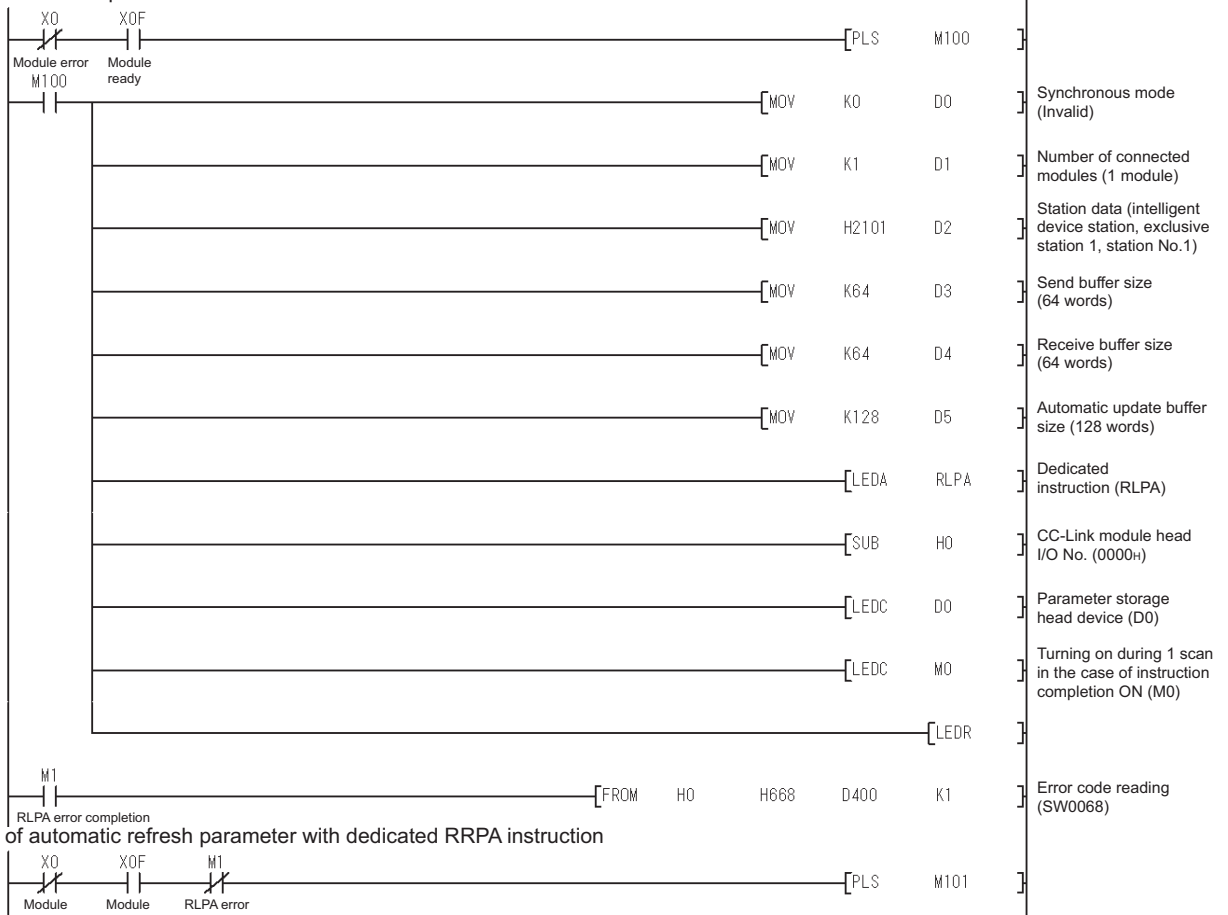* Setting of network parameter with dedicated RLPA instruction




* Setting of automatic refresh parameter with dedicated RRPA instruction



(Continued to next page)

1	OVERVIEW
2	BUS CONNECTION
3	DIRECT CONNECTION TO CPU
4	COMPUTER LINK CONNECTION
5	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
6	MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)
7	CC-Link CONNECTION (INTELLIGENT DEVICE STATION)
8	CC-Link CONNECTION (Via G4)

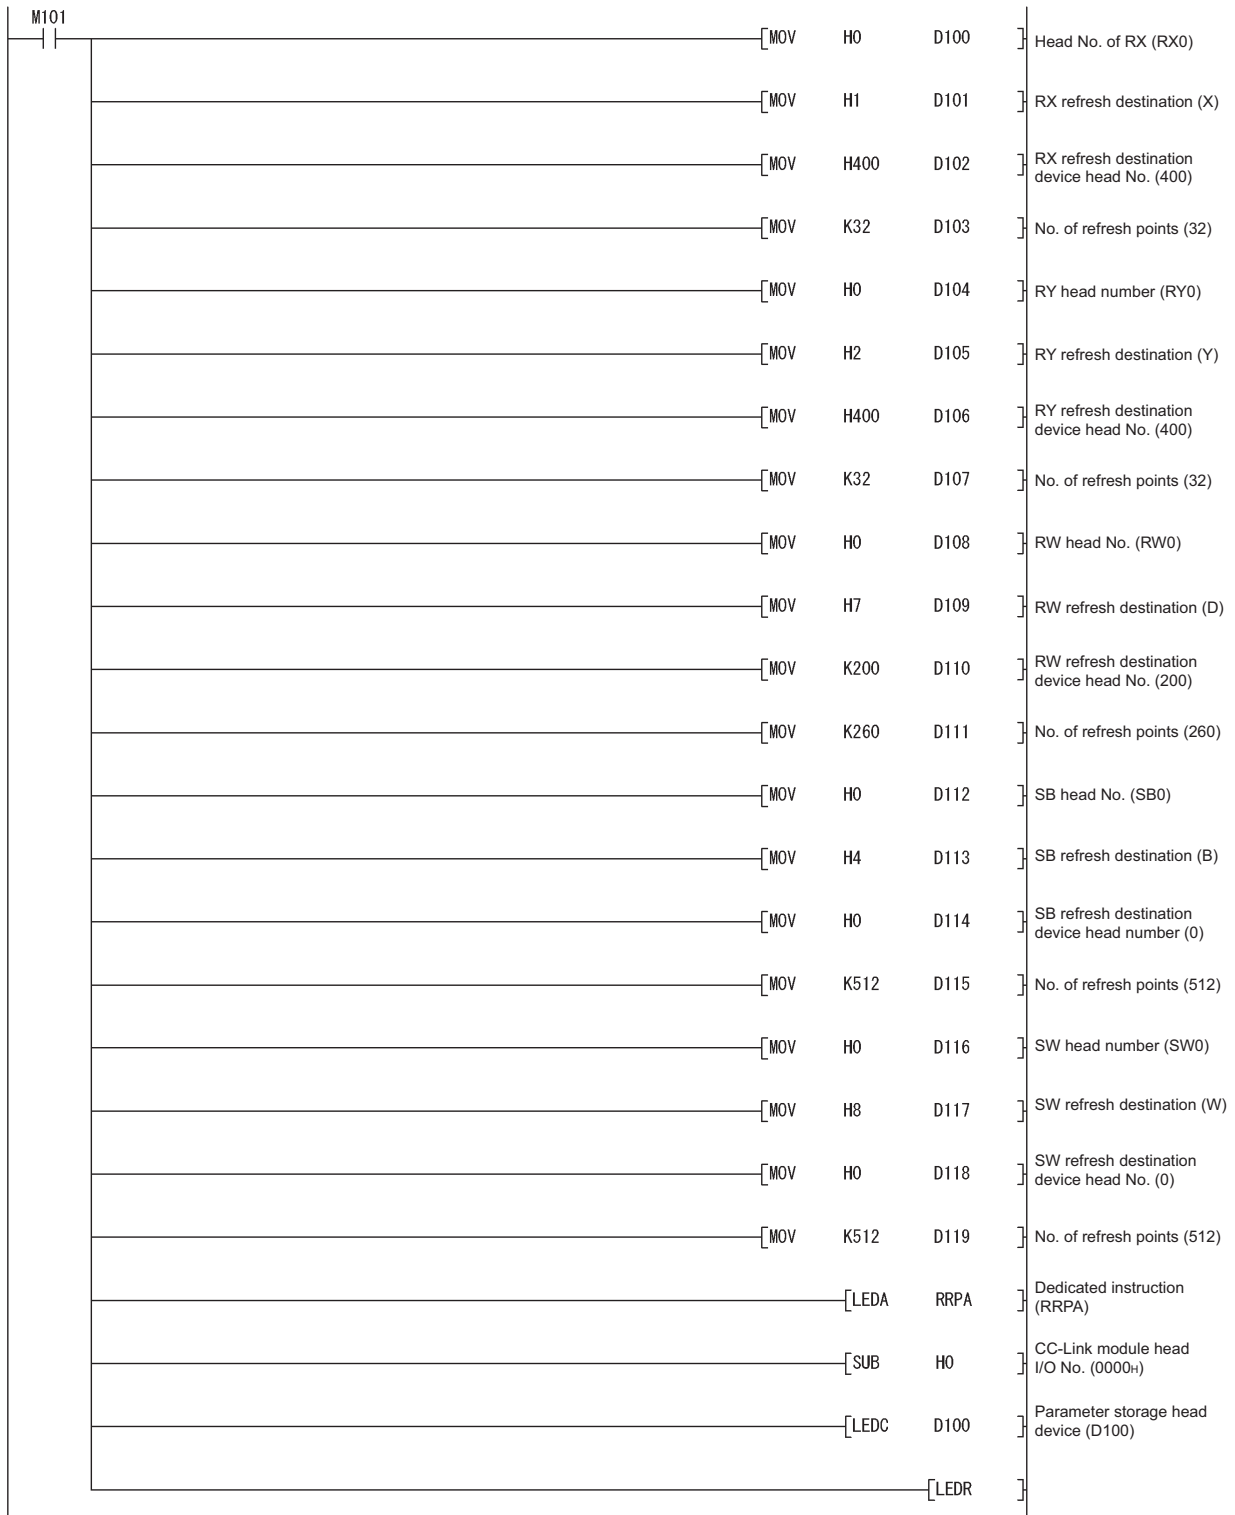


When changing the sequence program

After writing the sequence program to the PLC CPU, operate the PLC CPU either turning OFF and then ON or resetting.

(2) Program condition (for FROM/TO instruction)

This program writes parameters to the buffer memory when PLC CPU status changes from STOP to RUN and automatically starts the data link with FROM/TO instruction.

(a) I/O signal of CC-Link module

 Control & Communication Link System Master/Local Module Type AJ61BT11/
A1SJ61BT11 User's Manual

(b) Devices used by user

Device	Application
M100, M101	Flag for parameter setting
M102, M103	Flag for data link startup
D0	Number of connected modules
D1	Number of retry
D2	No. of automatic return stations
D3	Operation specification in the case of CPU failure
D4	Reserved station specification (Station No. 1 to Station No. 16)
D5	Error invalid station specification (Station No. 1 to Station No. 16)
D6	Station data (first module)
D400	Error code in the case of data link startup failure


(c) Buffer memory settings used in the present example

Buffer memory address	Item	Setting
Decimal (Hexadecimal)		
1 (1H)	Number of connected modules	1 (1 module)
2 (2H)	Number of retry	3 (3 times)
3 (3H)	Number of automatic return stations	1 (1 station)
6 (6H)	Operation specification in the case of CPU failure	0 (stop)
16 (10H)	Reserved station specification (Station No. 1 to Station No. 16)	0 (No specification)
20 (14H)	Error invalid station specification (Station No. 1 to Station No. 16)	0 (No specification)
32 (20H)	Station data (first module) ^{*1}	2101H

*1 Details for the station data are shown below.

For 1) and 2), set the same station No. and number of station occupied settings as those of the GOT.

For 3), the setting is fixed.



1) Station No. (Set the same station No. setting as that of the GOT.)

01H to 40H: Station No. 1 to Station No. 64

2) Number of stations occupied (Set the same setting of the number of station occupied as that of the GOT.)

1H : Exclusive station 1

2H : Exclusive station 2

3H : Exclusive station 3

4H : Exclusive station 4

3) Station type (2H : Set it to intelligent device station.)

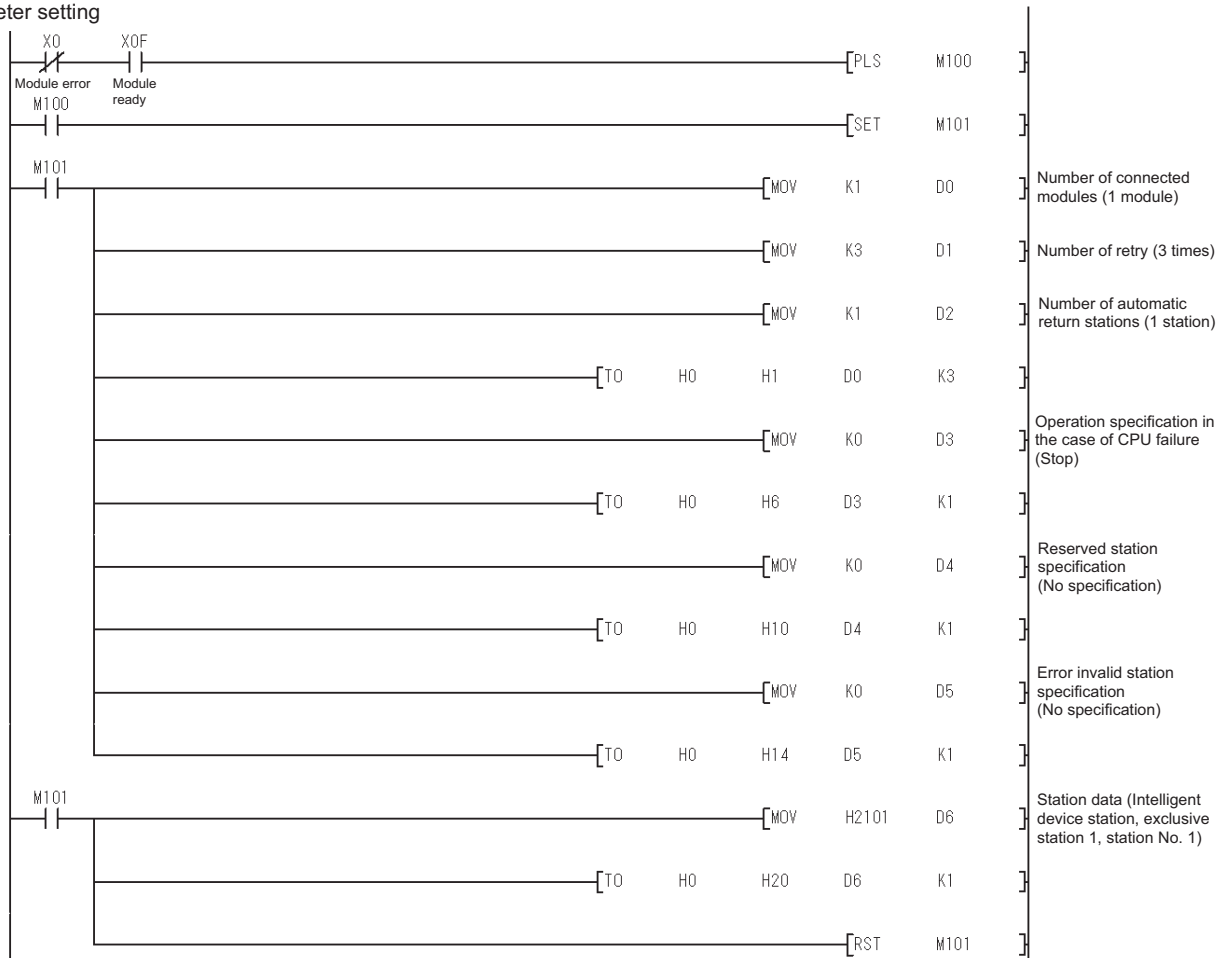
0H : Remote I/O station

1H : Remote device station

2H : Intelligent device station (Incl. local station)

(d) Example of sequence program (FROM/TO instruction)


* Parameter setting



* Refresh instruction



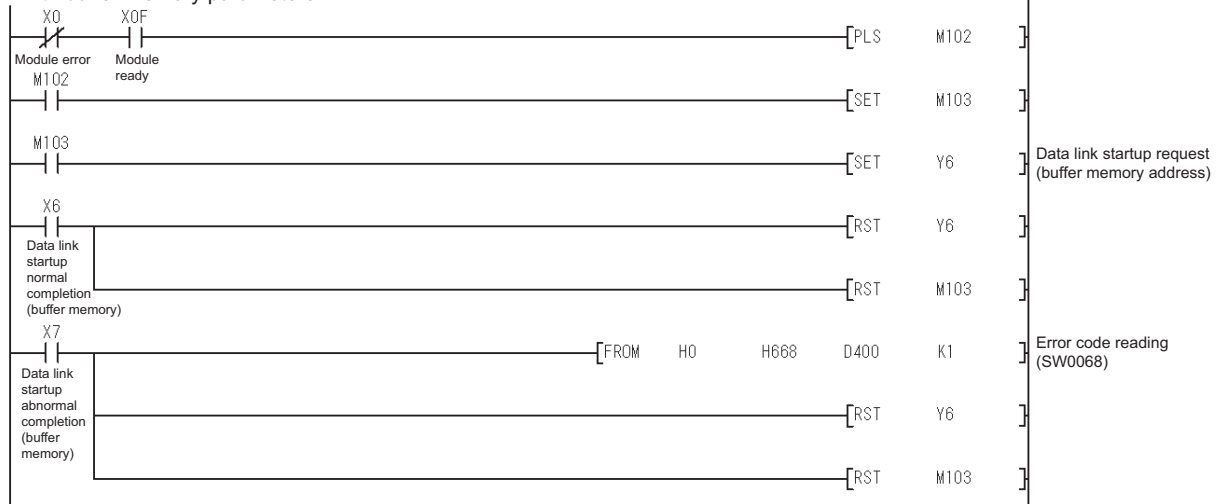* Data link with buffer memory parameters



When changing the sequence program

After writing the sequence program to the PLC CPU, operate the PLC CPU either turning OFF and then ON or resetting.

4 [Communication Settings] of GT Designer2

(1) When MODEL GT15-J61BT13 CC-Link communication unit is used

Item	Setting
Station No.	1: Station No.1
Transmission Rate	0: Online 156kbps
Mode	Ver.1: Remote net (Ver.1 mode)
Expanded Cyclic	Single (Use default value.)
Occupied Station	1 Station
Input for Error Station	0: Clear
Retry	3 Times (Use default value.)
Timeout Time	3 Sec (Use default value.)
Delay Time	0ms (Use default value.)

(2) When MODEL GT15-75J61BT13-Z CC-Link communication unit is used

Item	Setting (Use default value.)
Retry	3 Times
Timeout Time	3 Sec



[Communication Settings] of GT Designer2

For the setting method of [Communication Settings] of GT Designer2, refer to the following.

Section 7.2.3 Setting communication interface (Communication settings)

5 Setting of the CC-Link communication unit (Only when MODEL GT15-75J61BT13-Z CC-Link communication unit is used)

Item	Setting	
Mode setting switch	0: Online (fixed)	
Station number setting switch	1: Station No.1	
Transmission baudrate setting switch	0: 156kbps	
Condition setting switches	SW1 (Input data status of the data link error station)	OFF: Cleared
	SW2 (Number of occupied stations)	OFF: 1 station



Setting of the CC-Link communication unit

For the setting method of the CC-Link communication unit, refer to the following.

Section 7.2.3 Setting communication interface (Communication settings)

7.4 Precautions


1 Using cyclic transmission

(1) I/O signal for master station

Do not turn on the reserved output signals in the output signals (remote output: RY) to the GOT from the master station.

When the reserved output signal is turned on, the PLC system may be malfunctioned.

For the assignment of I/O signals in the GOT, refer to the following manual.

-  • MODEL GT15-J61BT13 CC-Link communication unit User's Manual
- GT15 CC-Link communication unit User's Manual

(2) Access range that can be monitored

The monitoring range of remote I/O (RX and RY) and that of the remote registers (RWr and RWw) vary according to the mode in the master station of the CC-Link system.

Mode of master station	Applicable of monitoring	
	Data for each station compatible with CC-Link ver.1	Data for each station compatible with CC-Link ver.2
Remote net mode	○	-
Remote net ver.1 mode	○	-
Remote net ver.2 mode	○	○ ^{*1}
Remote net additional mode	○	○ ^{*1}

○ : Applicable × : N/A(All "0") - : N/A of system configuration

*1 Monitoring is applicable only when MODEL GT15-J61BT13 CC-Link communication unit is used.

(3) When an error occurs on the GOT, the cyclic output status holds the status before the occurrence.

2 For transient transmission

(1) CC-Link module of target station

Mount the CC-Link module of function version B or later and software version J or later to the PLC CPU when performing the following CC-Link modules and transient transmission.

Only cyclic transmission can be communicated with the CC-Link module of function version A or before and software version I or before.

- AJ61BT11 • A1SJ61BT11
- AJ61QBT11 • A1SJ61QBT11

(2) Access range that can be monitored

The GOT can access to the PLC CPU mounting the master and local station of the CC-Link System. It cannot access another network via the CC-Link module.

3 GOT startup in the CC-Link connection (intelligent device station)

For CC-Link connection (intelligent device station), the data link is started approximately 10 seconds after the GOT startup.

4 When an error for the network occurs in the system alarm

In the CC-Link connection (intelligent device station), when a network error occurs in the system alarm, the system alarm display cannot be canceled even though the causes are removed.

To cancel the system alarm display, restart the GOT

7.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
CC-Link connection (Intelligent device station)	Supporting the CC-Link connection (intelligent device station).	2.09K	Communication driver CC-Link(ID) [01.02.**]
	Supporting CC-Link Ver.2	2.32J	Communication driver CC-Link Ver.2(ID) [03.00.**]

CC-Link CONNECTION (Via G4)



8.1 System Configuration page 8-2

This section describes the equipment and cables needed for CC-Link connection (via G4).

Select a system suitable for your application.

8.2 Preparatory Procedures for Monitoring page 8-5

This section describes the procedures to be followed before monitoring in CC-Link connection (via G4).

The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

8.3 PLC Side Settings page 8-18

The PLC side settings for GOT connection are explained. When checking the PLC side settings, refer to this section.

8.4 List of Functions Added by Version Upgrade page 8-23

This section describes the functions added by version upgrade of GT Designer2 or OS.


8.1 System Configuration

Select a system configuration suitable for your application.



- (1) PLC CPU QCPU (Q mode) that can be monitored in CC-Link (via G4) can be monitored.
QnACPU, ACPUCPU or QCPU (A mode) cannot be monitored.
- (2) Conventions used in this section
Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.
Use these numbers as references when confirming models and applications.

8.1.1 Connecting to QCPU (Q mode)



1 System configuration and connection conditions







Connection conditions		System configuration
Number of GOTs	Distance	
1	*1	

*1 Max. overall extension cable length and the cable length between stations vary depending on the cable type to be used and the transmission speed.
For details, refer to the following manual.

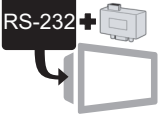CC-Link System Master/Local Module User's Manual QJ61BT11N



2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT15□.

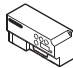(2) PLC


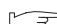
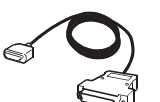
Image	No.	Name	Model name
	2	Peripheral connection module*2	AJ65BT-G4-S3
	3	CC-Link module*3	QJ61BT11, QJ61BT11N

*2 AJ65BT-G4 cannot be connected to the GOT.

*3 For the system configuration of the CC-Link module, refer to the following manual.

 CC-Link System Master/Local Module User's Manual QJ61BT11N

(3) Cable

Image	No.	Name	Model name
	4	CC-Link dedicated cable	For the specifications and inquiries of the CC-Link dedicated cable, refer to the following.  CC-Link Partner Association's home page: http://www.cc-link.org/
	5	RS-422 cable	GT01-C30R4-25P(3m), GT01-C100R4-25P(10m) GT01-C200R4-25P(20m), GT01-C300R4-25P(30m)

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)


7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

8.1.2 Connecting to motion controller CPU (Q Series)




A motion controller CPU (Q Series) mounted to the multiple CPU system of the QCPU (Q mode) can be monitored.

The system configuration, connection conditions and system equipment when connecting the GOT to a motion controller CPU (Q Series) are the same as the case of the QCPU (Q mode).

(☞ Section 8.1.1 Connecting to QCPU (Q mode))

8.2 Preparatory Procedures for Monitoring

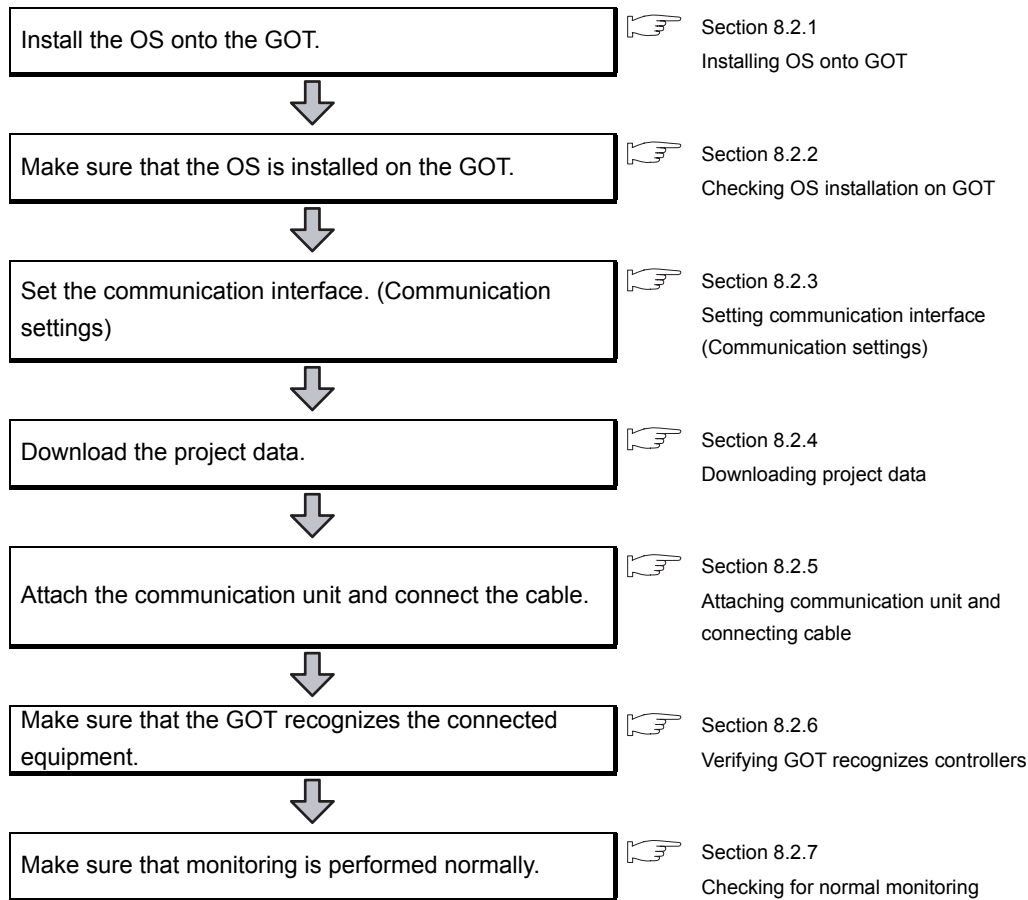The following shows the procedures to be taken before monitoring and corresponding reference sections.



Confirming the PLC side setting


This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

Section 8.3 PLC Side Settings

8.2.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

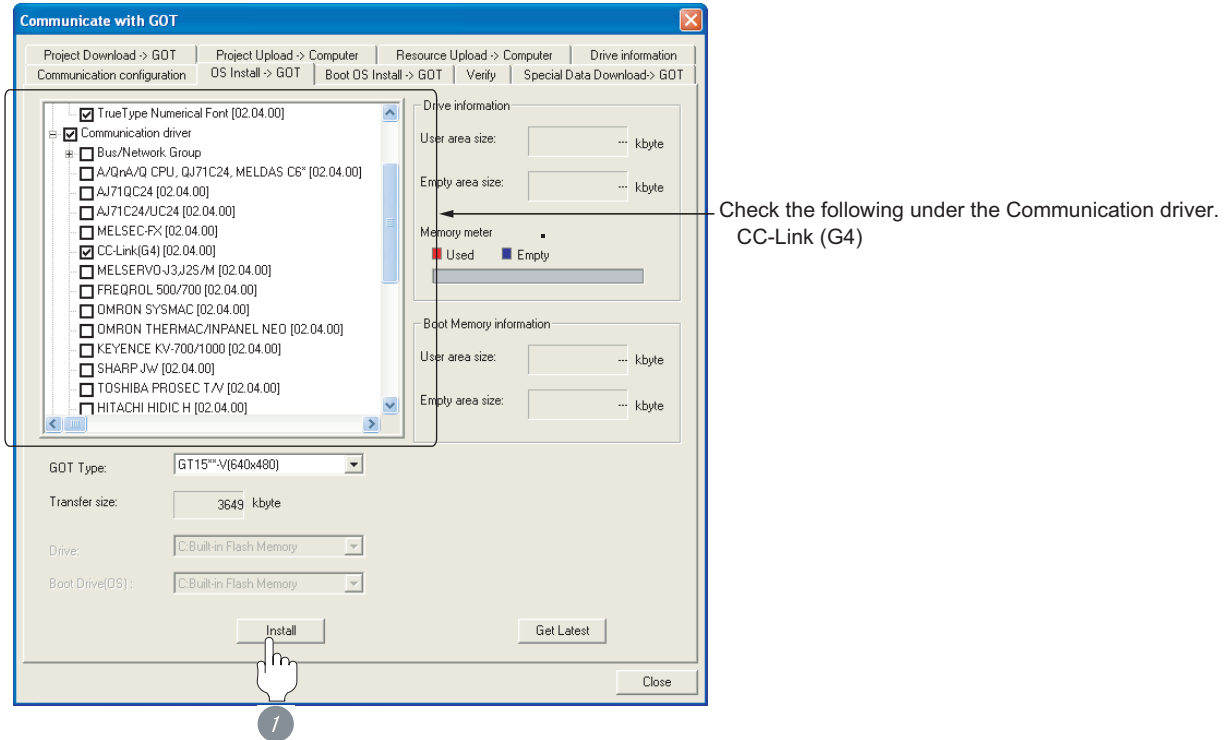
 GT Designer2 Version Basic Operation/Data Transfer Manual




- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

8.2.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

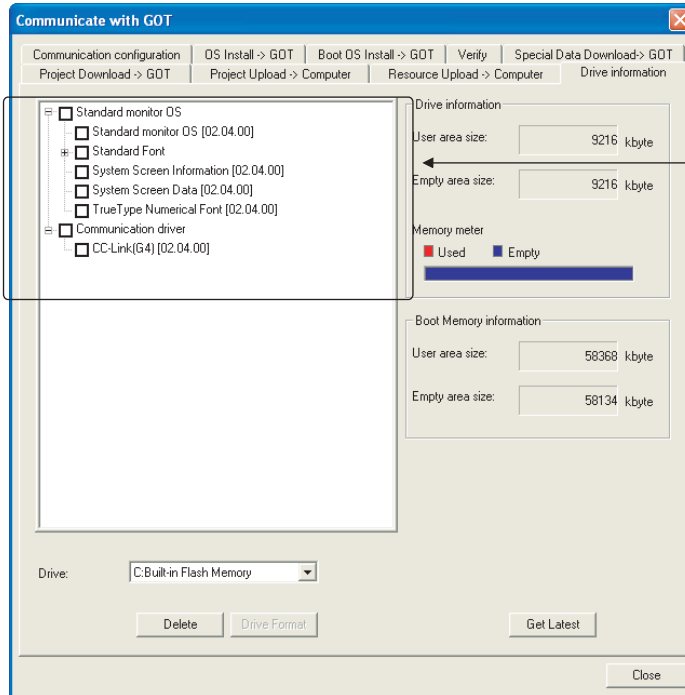 GT Designer2 Version □ Basic Operation/Data Transfer Manual



The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver: CC-Link (G4)

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7


CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

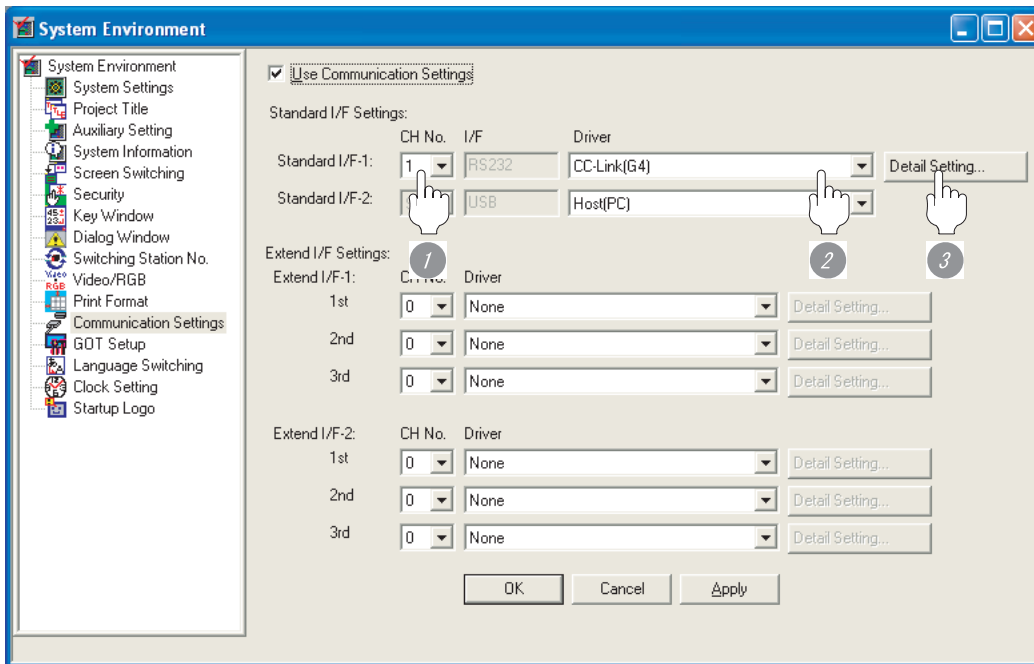
CC-Link CONNECTION (Via G4)

8.2.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version Screen Design Manual

1 Communication settings



(When using GT15)

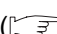- 1 Set "1" to the channel No. used.
- 2 Set the driver to "CC-Link (G4)".
- 3 Perform the detailed settings for the driver. ( **2** Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	9600bps, 19200bps, 38400bps



(1) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

GT User's Manual


(2) Precedence in communication settings

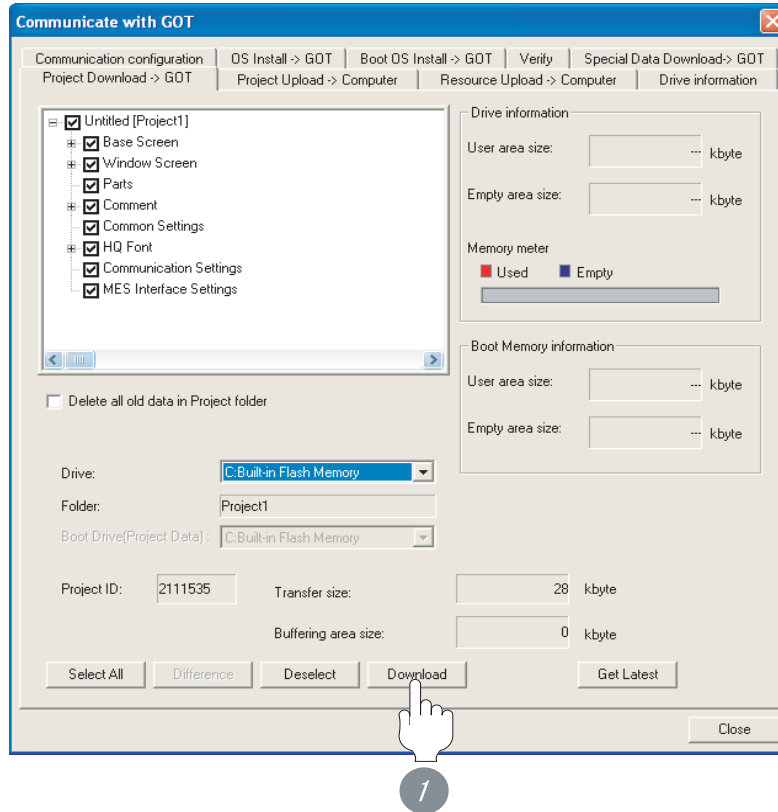
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

8.2.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


8.2.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

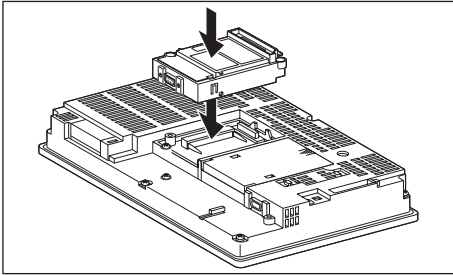1 Attaching the communication unit



- 1 Attach the serial communication unit to the extension unit connector on the GOT.

Point

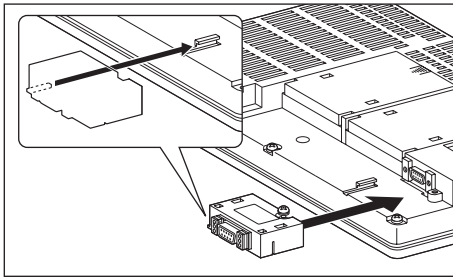
Serial communication unit

For details on the serial communication unit, refer to the following manual:


☞ GT15 Serial Communication Unit User's Manual
GT15-RS2, GT15-RS4,GT15-RS4-TE

2 How to connect the cable

- (1) How to connect the RS-422 cable
 - (a) For the GT15
 - connection to the RS-232 interface



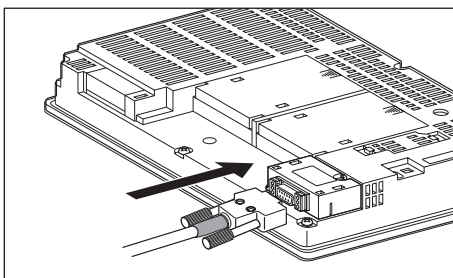- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION
TO CPU

4

COMPUTER LINK
CONNECTION

5

MELSECNET/H
CONNECTION (PLC TO
PLC NETWORK)

6

MELSECNET/10
CONNECTION (PLC TO
PLC NETWORK)

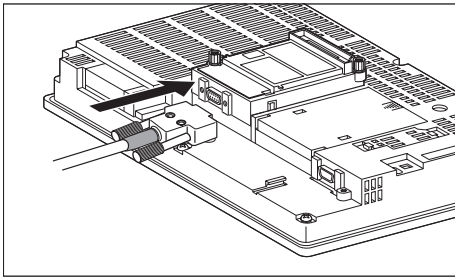
7

CC-Link CONNECTION
(INTELLIGENT DEVICE
STATION)

8

CC-Link CONNECTION
(Via G4)

- connection to the RS-422/485 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

Point 

RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

 GT15 RS-422 Conversion Unit User's Manual

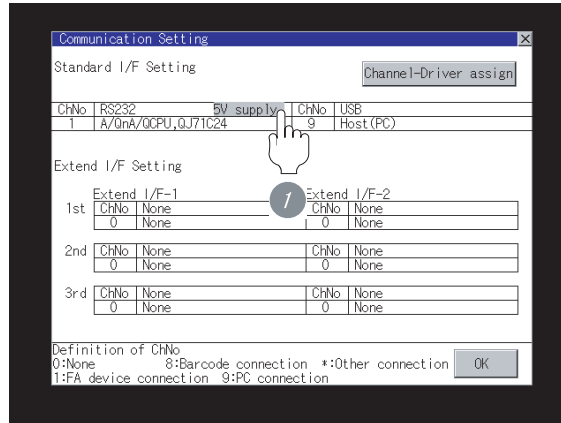


When using the RS-422 conversion unit


On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the utility, refer to the following manual:

GT □ User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to "YES".

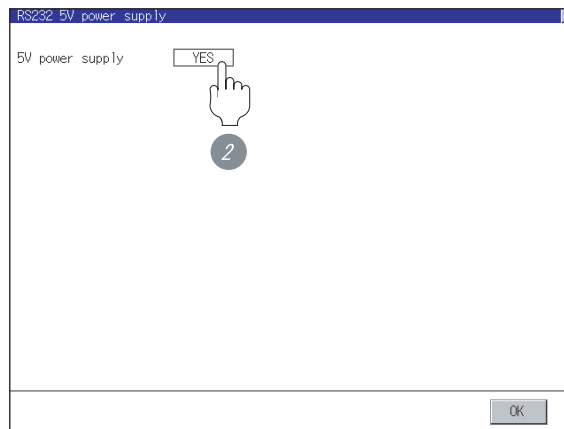

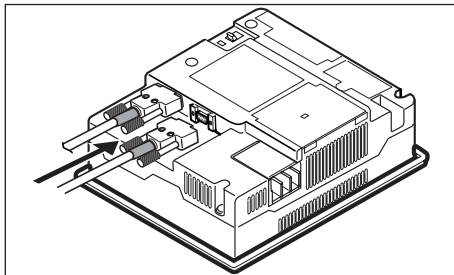(b) In the case of the GT11



1 Connect the RS-422 cable to the RS-422 interface on the GOT.

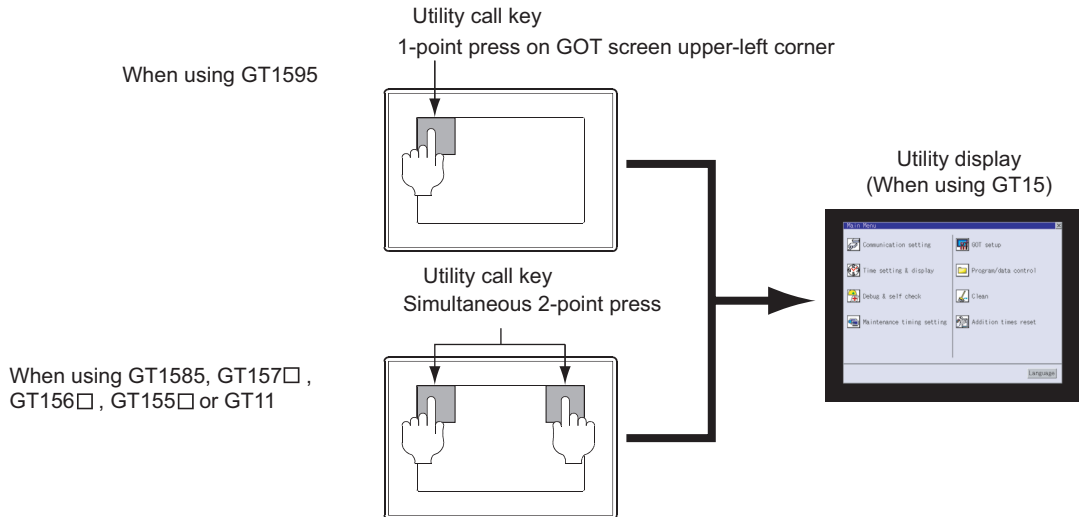
8.2.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point

When setting the utility call key to 1-point


When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

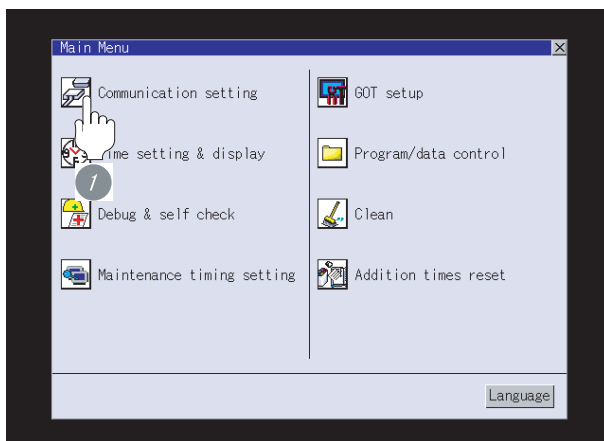☞ GT□ User's Manual



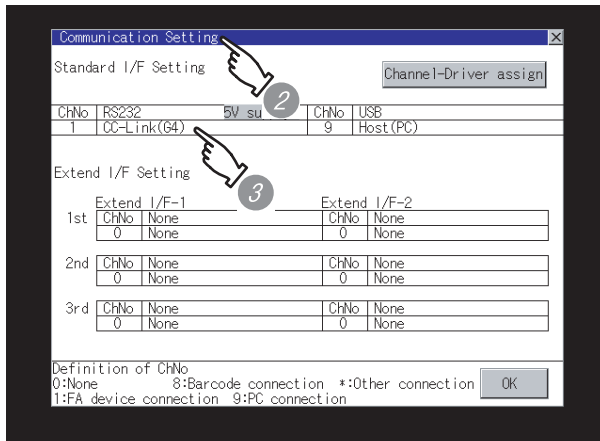- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.





- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver: CC-Link(G4)
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.
 - Section 8.2 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

GT User's Manual

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

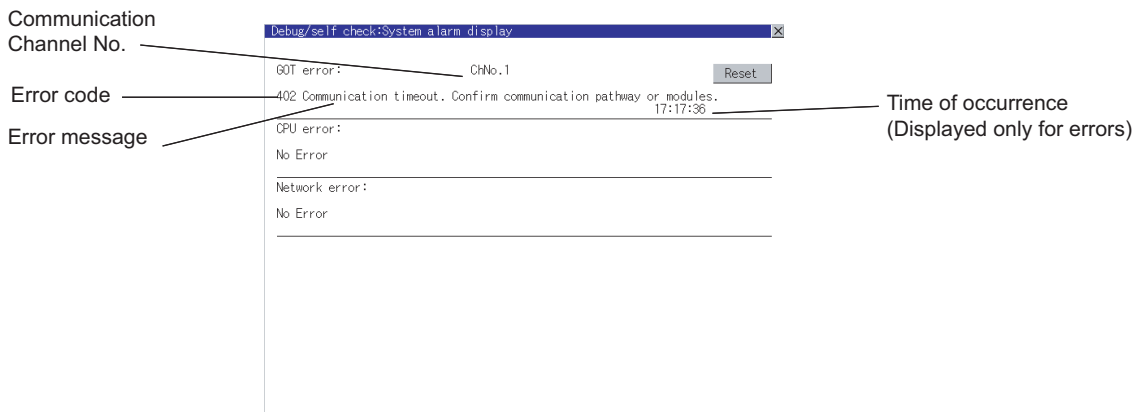
8.2.7 Checking for normal monitoring

1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)



Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

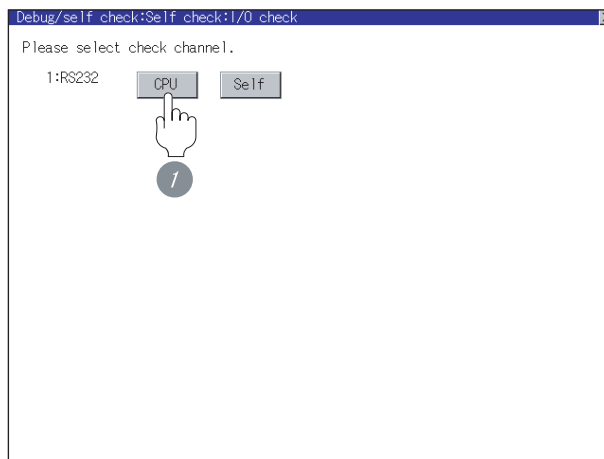


2 Perform an I/O check


Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].
For details on the I/O check, refer to the following manual:

 GT □ User's Manual



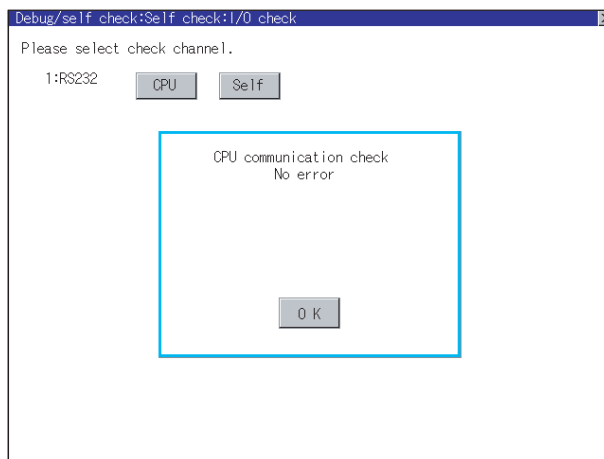- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side. Confirm if the PLC side setting is correct.

 Section 8.3 PLC Side Settings

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

8.3 PLC Side Settings

This section describes the settings of the GOT and peripheral connection module in the case of the system configuration shown as **1**.



(1) Peripheral connection module

For details of the peripheral connection module, refer to the following manual.

☞ Peripheral Connection Module Type AJ65BT-G4-S3 User's Manual (detail volume)

(2) CC-Link module (Q Series)

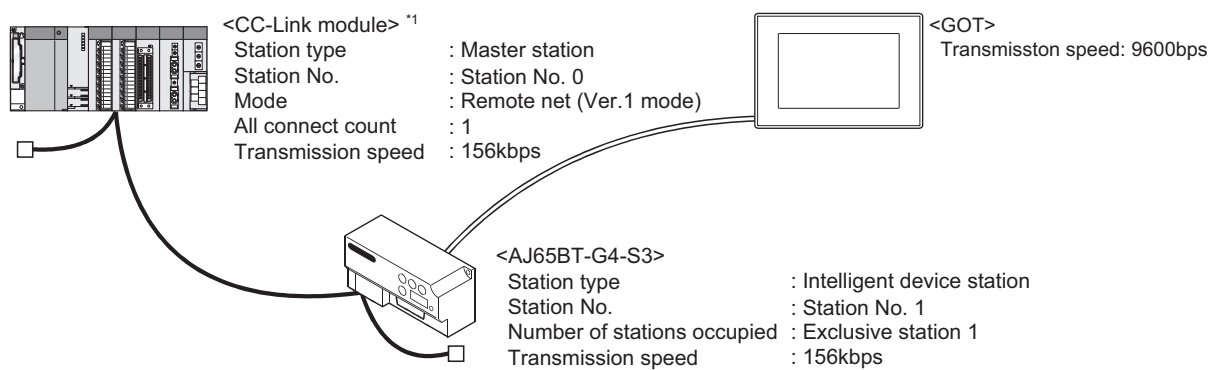
For details of the CC-Link module (Q Series), refer to the following manual.

☞ CC-Link System Master/Local Module User's Manual QJ61BT11N

1 System configuration

- ☞ **3** Switch settings of CC-Link module (Q Series)
- ☞ **4** [Network parameter] of GX Developer

☞ **5** [Communication settings] of GT Designer 2




☞ **2** Switch setting of peripheral connection module

*1 The CC-Link module is mounted on the base unit slot 0.
The Start I/O No. of the CC-Link module is set to "0"

2 Switch setting of peripheral connection module

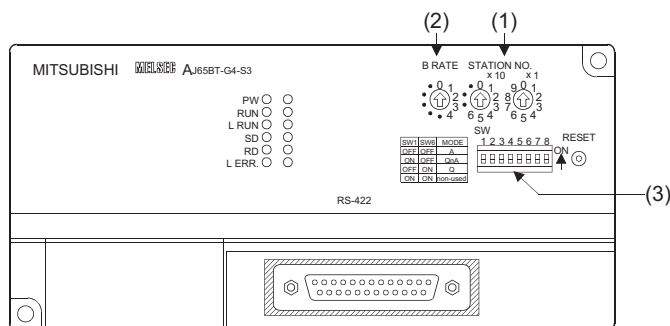Set the station number setting switch, data link transmission speed setting switch, and operation setting DIP switch.



(1) Station number setting switch

Station number setting switch	Description	Setting	Setting necessity at GOT connection
	AJ65BT-G4-S3 station number setting (Station No.)	1	○

○ : Necessary △ : As necessary × : Not necessary

(2) Data link transmission speed setting switch

Data link transmission speed setting switch	Description	Setting	Setting necessity at GOT connection
	Data link transmission speed setting (156kbps)	0	○

○ : Necessary △ : As necessary × : Not necessary

(3) Operation setting DIP switch

Operation setting DIP switch	Setting switch	Description	Setting	Setting necessity at GOT connection
	SW1, SW6	Operation mode (Q mode)	SW1 = OFF SW6 = ON (fixed)	○
	SW2	Peripheral transmission speed*1	OFF (fixed)	×
	SW3			
	SW4	Not used	OFF (fixed)	×
	SW7			
	SW8	Test mode (Online mode)	OFF (fixed)	○

○ : Necessary △ : As necessary × : Not necessary

*1 The peripheral connection module operates with the baud rate set in the GOT.

5 [Communication settings] of GT Designer2



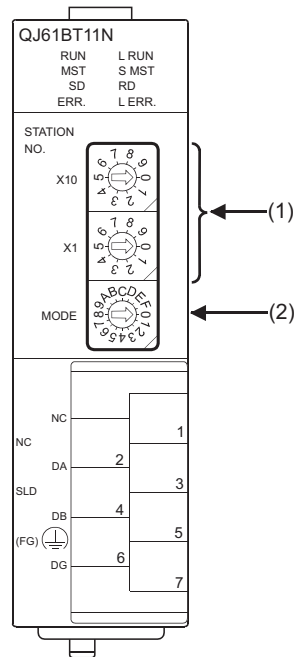
Operation mode of peripheral connection module

Be sure to set the "Q mode" as an operation mode of the peripheral connection module.

3 Switch setting of CC-Link module (Q series)

Set the station number setting switch, transmission speed / mode setting switch.

QJ61BT11, QJ61BT11N



(1) Station number setting switch

Station number setting switch	Description	Setting	Setting necessity at GOT connection
	Station number setting (master station)	0 (fixed)	○

○ : Necessary △ : As necessary × : Not necessary

(2) Transmission rate/mode setting switch

Transmission rate/mode setting switch	Description	Setting	Setting necessity at GOT connection
	Transmission rate/mode setting (Online: 156kbps)	0	○

○ : Necessary △ : As necessary × : Not necessary



When the switch setting has been changed

Turn the PLC CPU OFF then ON again, or reset the PLC CPU.

4 [Network parameter] of GX Developer

(1) Network parameter

Network parameters Setting the CC-Link list.

No. of boards in module: Boards Blank: no setting.

Start I/O No	1	0000
Operational setting	Operational settings	
Type	Master station	
Master station data link type	PLC parameter auto start	
Mode	Remote net(Ver.1 mode)	
All connect count		1
Remote input(RX)		X400
Remote output(RY)		Y400
Remote register(RWr)		D300
Remote register(RWw)		D200
Ver.2 Remote input(RX)		
Ver.2 Remote output(RY)		
Ver.2 Remote register(RWr)		
Ver.2 Remote register(RWw)		
Special relay(SB)		SB0
Special register(SW)		SW0
Retry count		3
Automatic reconnection station count		1
Stand by master station No.		
PLC down select	Stop	
Scan mode setting	Asynchronous	
Delay information setting		0
Station information setting	Station information	
Remote device station initial setting	Initial settings	
Interrupt setting	Interrupt settings	

Item	Setting	Setting necessity at GOT connection
No. of boards in module	1	○
Start I/O No.	0000H	○
Operational setting	(Use default value.)	△
Type	Master station (fixed)	○
Mode	Remote net (Ver.1 mode)	○
All connect count	1	○
Remote input (RX)	X400	△
Remote output (RY)	Y400	△
Remote register (RWr)	D300	△
Remote register (RWw)	D200	△
Special relay (SB)	SB0	△
Special register (SW)	SW0	△
Retry count	(Use default value.)	△
Automatic reconnection station count		△
Stand by master station No.		×
PLC down select		△
Scan mode setting		△
Delay information setting		△
Station information setting		Refer to (2).
Remote device station initial setting	(Use default value.)	×
Interrupt setting		×

○ : Necessary △ : As necessary × : Not necessary

1

OVERVIEW

2

BUS CONNECTION

3

DIRECT CONNECTION TO CPU

4

COMPUTER LINK CONNECTION

5

MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

6

MELSECNET/10 CONNECTION (PLC TO PLC NETWORK)

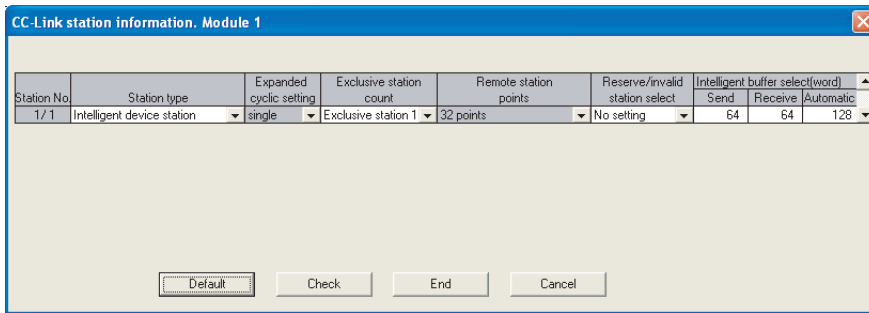
7

CC-Link CONNECTION (INTELLIGENT DEVICE STATION)

8

CC-Link CONNECTION (Via G4)

(2) Station information setting



Item*1	Setting	Setting necessity at GOT connection
Station type*2	Intelligent device station (fixed)	○
Exclusive station count	Exclusive station 1 (fixed)	○
Reserve/invalid station select	No setting	○
Intelligent buffer select (word)	(Use default value.)	×

○ : Necessary △ : As necessary × : Not necessary

*1 When the [Mode] of the CC-Link module is set at [Remote net - (Ver. 2 mode)], [Remote station points] is available to set.

[Remote station points] is a setting for the remote I/O station.
The default value (32 points) must be used on the GOT.

*2 When the [Mode] of the CC-Link module is set at [Remote net - (Ver. 2 mode)] or [Remote net - Additional mode], set to [Ver. 1 Intelligent device station].

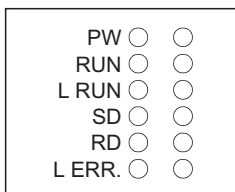
Point

When changing the network parameter

After writing the network parameter to the PLC CPU, operate the PLC CPU ether turning OFF and then ON or resetting.

(3) Completion confirmation

After initial communications of CC-Link are completed, the L RUN LED of AJ65BT-G4-S3 turns on. The GOT starts to monitor after the L-RUN LED of AJ65BT-G4-S3 turns on. It does not monitor while the L RUN LED turns off.



5 [Communication settings] of GT Designer2

Item	Setting (Use default value.)
Transmission Speed	9600bps

Point

[Communication Settings] of GT Designer2

For the setting method of [Communication Settings] of GT Designer2, refer to the following.

➡ Section 8.2.3 Setting communication interface (Communication settings)

8.4 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
CC-Link connection (via G4)	Supporting the CC-Link connection (via G4)	2.09K	Communication driver CC-Link (G4) [01.02.**]

ETHERNET CONNECTION



9.1 System Configuration page 9-2

This section describes the equipment and cables needed when connecting to Ethernet.

Select a system suitable for your application.

9.2 Preparatory Procedures for Monitoring page 9-4

This section describes the procedures to be followed before monitoring in Ethernet connection.

The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

9.3 PLC Side Setting page 9-20

The PLC side settings for GOT connection are explained.

When checking the PLC side settings, refer to this section.

9.4 Precautions page 9-38

This section describes the precautions on Ethernet connection.

Be sure to read this when establishing a Ethernet connection.

9.5 List of Functions Added by Version Upgrade page 9-39

This section describes the functions added by version upgrade of GT Designer2 or OS.

9.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of ① System configuration and connection conditions correspond to the numbers (e.g. ①) of ② System equipment.
Use these numbers as references when confirming models and applications.




① System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	distance	
128 (recommended to 16 units or less)	100m or less*2	


- *1 The destination connected with the twisted pair cable varies with the configuration of the applicable Ethernet network system.
Connect to the Ethernet module, hub, transceiver or other system equipment corresponding to the applicable Ethernet network system.
Use cables, connectors, and hubs that meet the IEEE802.3 10BASE-T/100BASE-TX standard.
- *2 A length between a hub and a node.

2 System equipment


(1) GOT

Image	No.	Name	Model name
	1	Ethernet communication unit • For Ethernet communication	GT15-J71E71-100

(2) PLC

Image	No.	Name	Model name
	2	Ethernet module (Q Series) *1 *2	QJ71E71-100, QJ71E71 QJ71E71-B5, QJ71E71-B2,
		Ethernet module (QnA Series) *1 *2	AJ71QE71N3-T, AJ71QE71N-T, AJ71QE71, A1SJ71QE71N3-T, A1SJ71QE71N-T, A1SJ71QE71-B5, AJ71QE71N-B5, AJ71QE71N-B2, A1SJ71QE71N-B5, A1SJ71QE71N-B5T, A1SJ71QE71N-B2,
		Ethernet module (A Series) *1 *2	AJ71E71N3-T, AJ71E71N-T, A1SJ71E71N3-T, A1SJ71E71N-T, A1SJ71E71-B5-S3, AJ71E71N-B5, AJ71E71N-B5T, A1SJ71E71N-B5, A1SJ71E71N-B5T, A1SJ71E71-B2-S3, AJ71E71N-B2, AJ71E71-S3, A1SJ71E71N-B2,

*1 For the system configuration of the Ethernet module, refer to the following manuals.

-  • Q Corresponding Ethernet Interface Module User's Manual (Basic)
 - For QnA Ethernet Interface Module User's Manual
 - For A Ethernet Interface Module User's Manual


*2 Select one of the following [Type] in [Ethernet setting] of GT Designer2.

- Ethernet module (Q Series) : QJ71E71
- Ethernet module (QnA Series) : AJ71QE71
- Ethernet module (QnA Series) : AJ71E71

For [Ethernet setting] of GT Designer2, refer to the following.


-  Section 9.2.3 Setting communication interface (Communication settings)

(3) Cable

Image	No.	Name	Model name
	3	Twisted pair cable	Shielded twisted pair cable (STP) or unshielded twisted pair cable in category (UTP): 3, 4 and 5

9.2 Preparatory Procedures for Monitoring

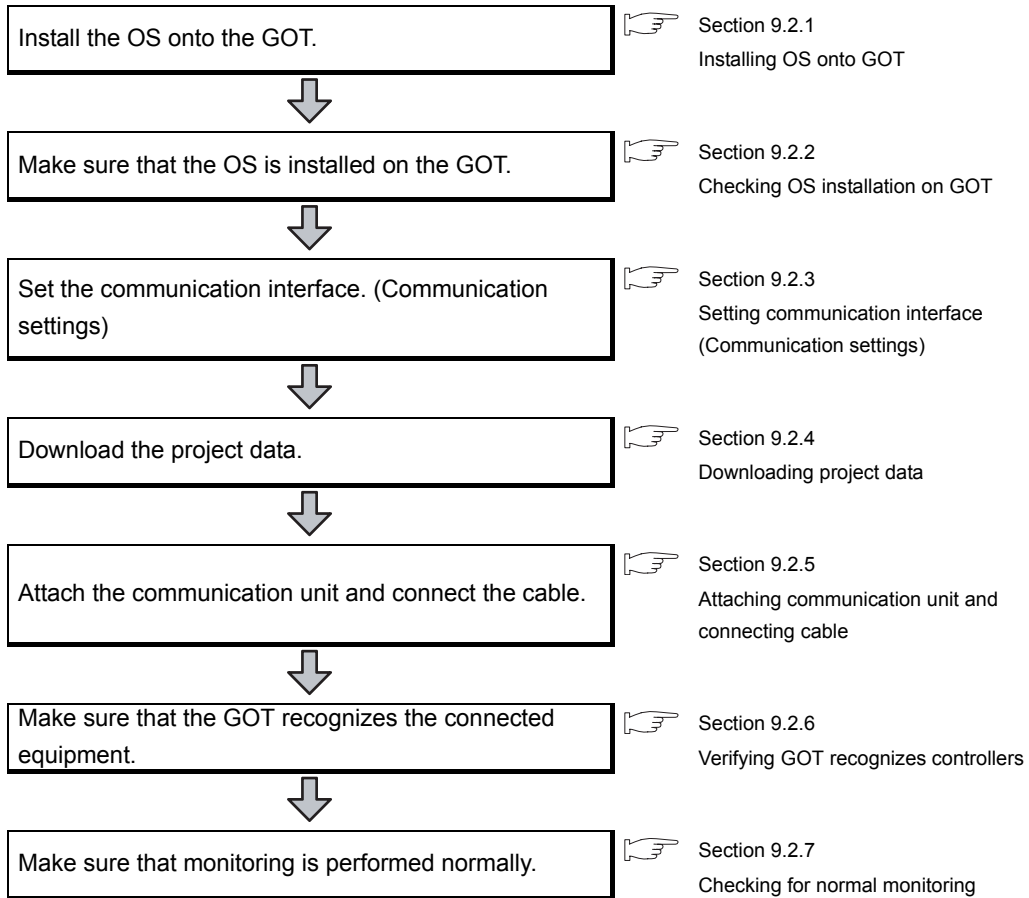The following shows the procedures to be taken before monitoring and corresponding reference sections.



Point


Confirming the PLC side setting

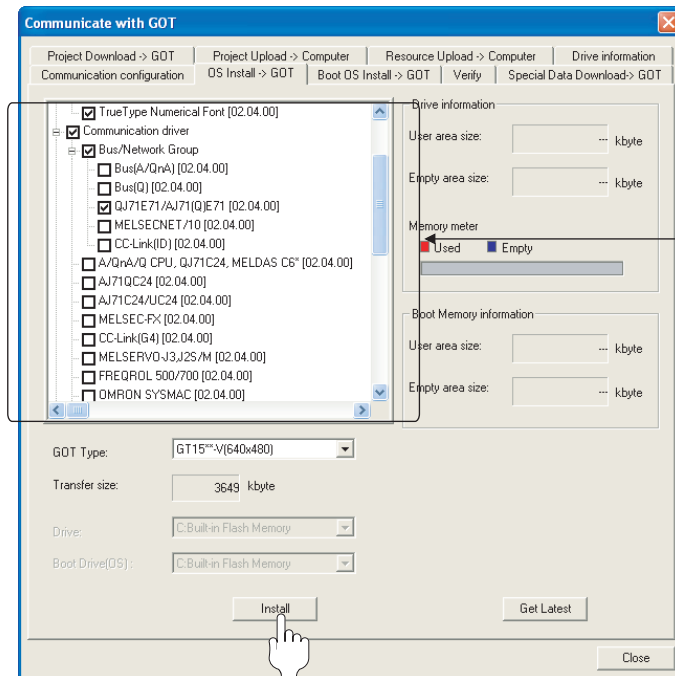
This section explains the GOT side setting.
When confirming the PLC side settings, refer to the following.

☞ Section 9.3 PLC Side Setting

9.2.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




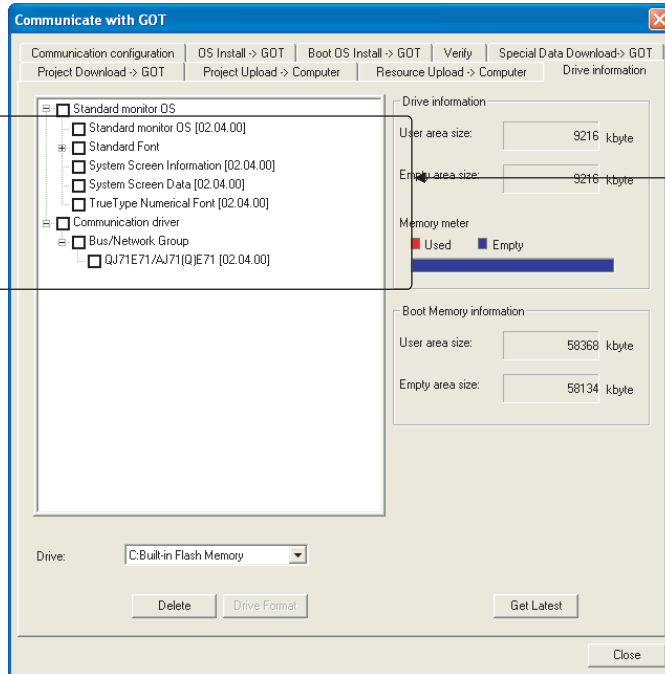
Check the following under the Communication driver.
• QJ71E71/AJ71(Q)E71

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

9.2.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver: QJ71E71/AJ71(Q)E71

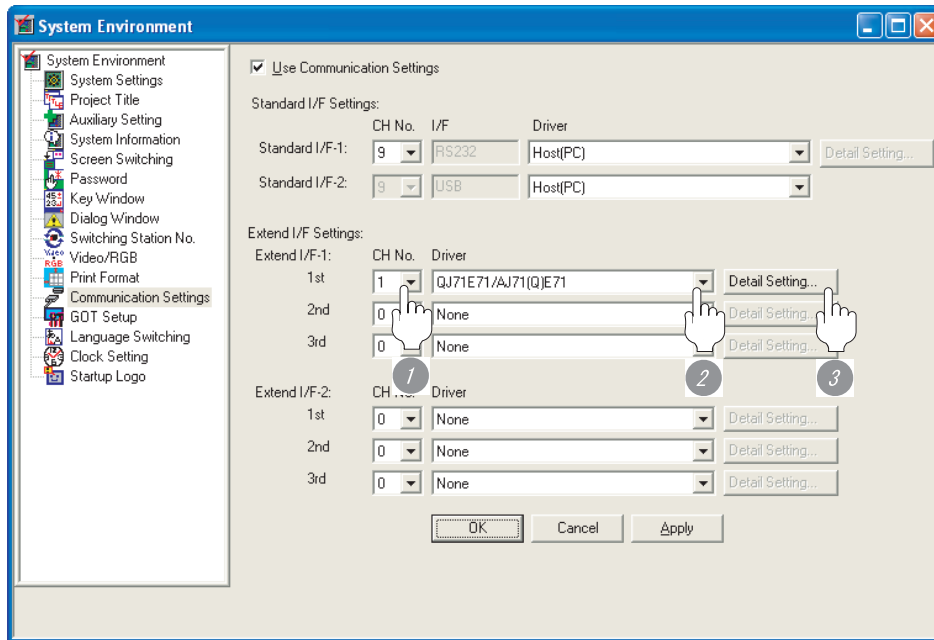
9.2.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication setting] and [Ethernet] of GT Designer2.

Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication setting] and [Ethernet] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set [1] to the channel No. used.
- 2 Set the driver to "QJ71E71/AJ71(Q)E71".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
GOT NET No.	Set the network No. of the GOT. <Default: 1>	1 to 239
GOT PC No.	Set the station No. of the GOT. <Default: 1>	1 to 64
GOT IP Address	Set the IP address of the GOT. <Default: 192.168.0.18>	0.0.0.0 to 255.255.255.255
GOT Port No. (Communication)	Set the GOT port No. for the connection with the Ethernet module. <Default: 5001>	1024 to 5010, 5014 to 65534 (Except for 5011, 5012 and 5013)
GOT Port No. (Ethernet Download)	Set the GOT port No. for Ethernet download. <Default: 5014>	1024 to 5010, 5014 to 65534 (Except for 5011, 5012 and 5013)
Default Gateway	Set the router address of the default gateway where the GOT is connected. (Only for communication via router) <Default: 0.0.0.0>	0.0.0.0 to 255.255.255.255
Subnet Mask	Set the subnet mask for the sub network. (Only for connection via router) If the sub network is not used, the default value is set. <Default: 255.255.255.0>	0.0.0.0 to 255.255.255.255
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. <Default: 3 Sec>	3 to 255 Sec
Timeout Time ^{*1}	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 90 Sec

(Continued to next page)

Item	Description	Range
Delay Time	Set the delay time for reducing the load of the network/destination PLC. <Default: 0ms>	0 to 10000 (× 10 ms)

*1 To connect the GOT with the Ethernet module (Q Series) in the one-on-one relationship using a cross cable, set [Timeout Time] to 6 sec. or longer.




Example of communication detail settings

For examples of communication detail settings, refer to the following.

Section 9.3 PLC Side Setting

3 Ethernet setting

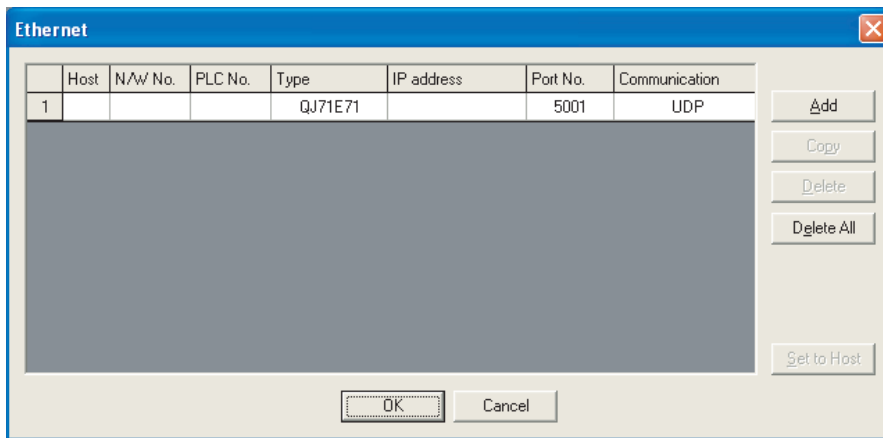(1) Ethernet setting



Item	Description	Range
Host	The host is displayed. (The host is indicated with an asterisk (*).)	-
N/W No.	Set the network No. of the connected Ethernet module. <Default: blank>	1 to 239
PLC No.	Set the station No. of the connected Ethernet module. <Default: blank>	1 to 64
Type*1	Set the type of the connected Ethernet module. <Default: QJ71E71>	QJ71E71, AJ71QE71, AJ71E71
IP address	Set the IP address of the connected Ethernet module. <Default: blank>	0.0.0.0 to 255.255.255.255
Port No.*2	Set the port No. of the connected Ethernet module. <Default: 5001>	1024 to 65534
Communication	UDP (fixed)	UDP (fixed)

*1 Select one of the following [type].

- Ethernet module (Q Series) : QJ71E71
- Ethernet module (QnA Series) : AJ71QE71
- Ethernet module (A Series) : AJ71E71

For the applicable Ethernet module, refer to the following.

Section 9.1 System Configuration

*2 Set when selecting "AJ71E71".

The port No. is "5001" (fixed) when selecting "QJ71E71/AJ71QE71".



Example of Ethernet setting

For examples of Ethernet setting, refer to the following.

Section 9.3 PLC Side Setting

Point

- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's [Communication Settings] after downloading [Communication Settings] of project data.
For details on the Utility, refer to the following manual.

 GT □ User's Manual

- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

4 Routing parameter setting


Up to 64 [Transfer Network No.]s can be set.
However, the same transfer network number cannot be set twice or more (multiple times).
Therefore, the one that can access to other station from the request source host GOT is 64 kinds of [Transfer Network No.]s.

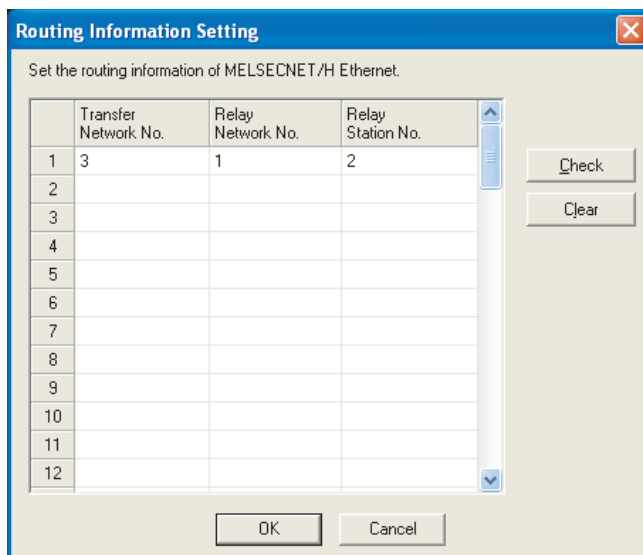
Point

Routing parameter setting

When communicating within the host network, routing parameter setting is unnecessary.

For details of routing parameters, refer to the following manual.

 Q corresponding MELSECNET/H Network System Reference Manual (PLC to PLC network)




	Transfer Network No.	Relay Network No.	Relay Station No.
1	3	1	2
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			

Item	Range
Transfer Network No.	1 to 239
Relay Network No.	1 to 239
Relay Station No.	1 to 64

Point

Routing parameter setting of relay station


Routing parameter setting is also necessary for the relay station.
For the setting, refer to the following.


 Section 9.3 PLC Side Setting

9.2.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

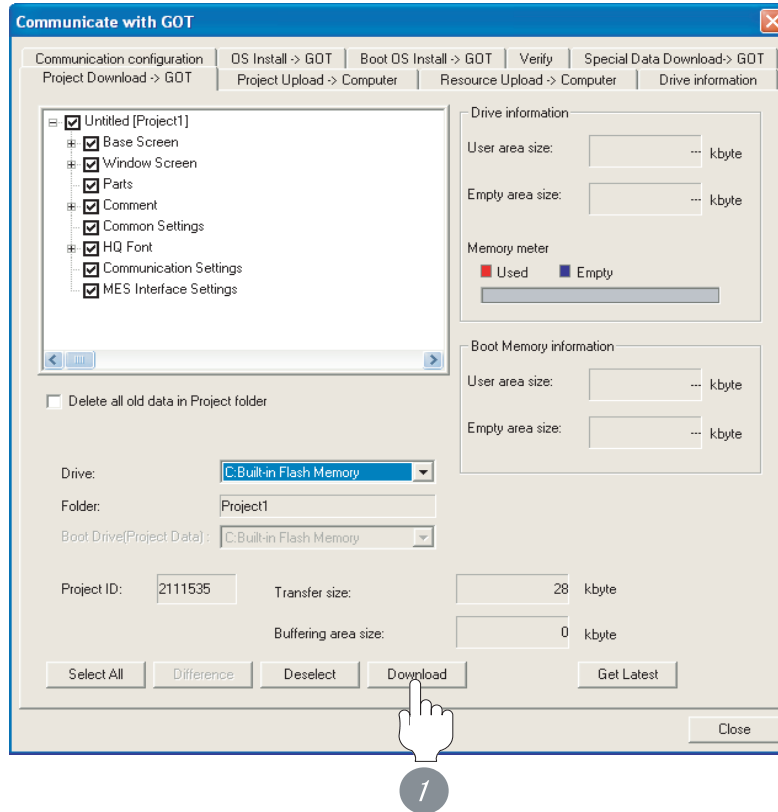 GT Designer2 Version □ Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


9.2.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

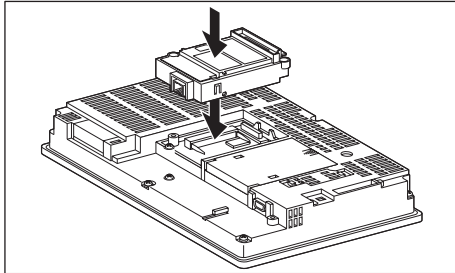1 Attaching the communication unit




- 1 Attach the Ethernet communication unit to the extension unit connector on the GOT.

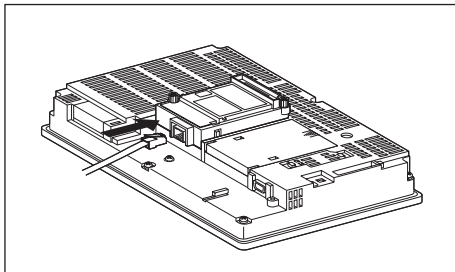
Point

Ethernet communication unit

For details on the Ethernet communication unit, refer to the following manual:

 GT15 Ethernet Communication Unit User's Manual

2 Connecting the cable



- 1 Connect the twisted pair cable to the Ethernet communication unit.

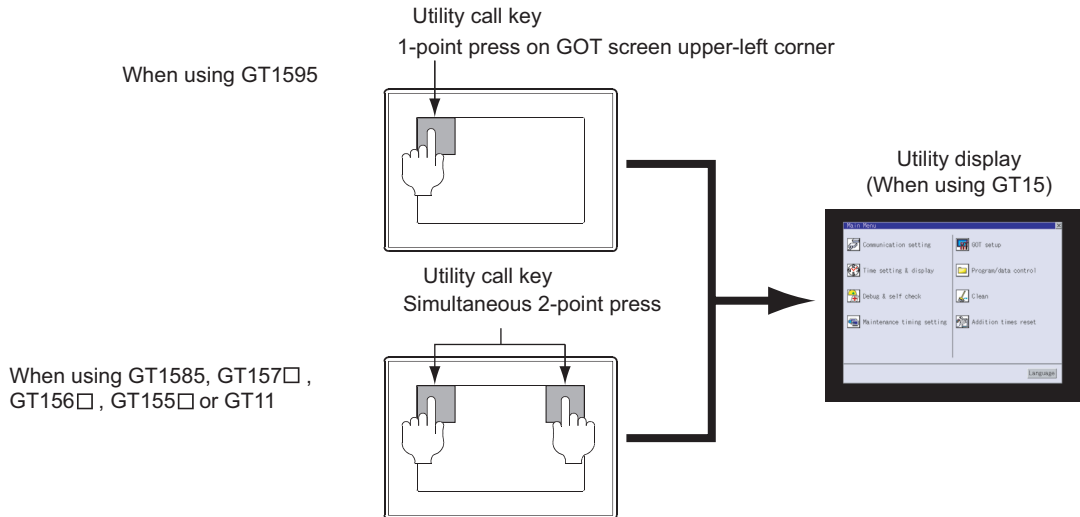
9.2.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point

When setting the utility call key to 1-point


When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

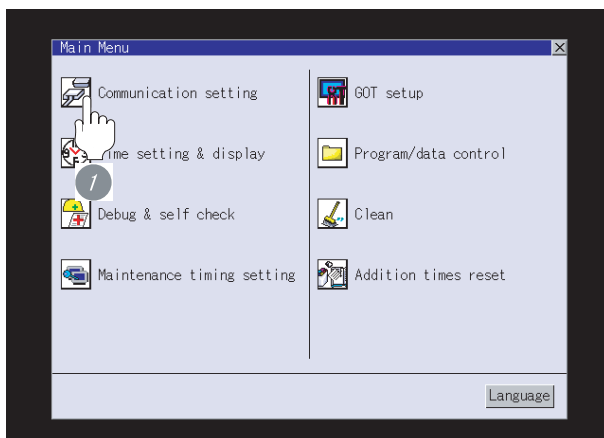☞ GT□ User's Manual



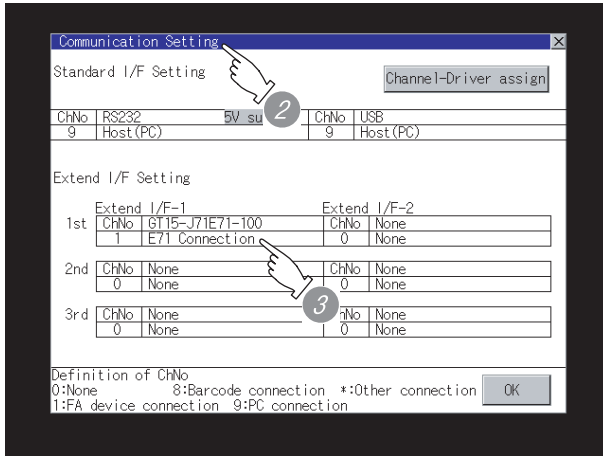- 1 After powering up the GOT, touch [Main Menu] → [Communication Settings] from the Utility.





2 The [Communication Settings] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver : E71 Connection

4 When the communication driver name is not displayed normally, carry out the following procedure again.

➡ Section 9.2 Preparatory Procedures for Monitoring



When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

➡ GT □ User's Manual

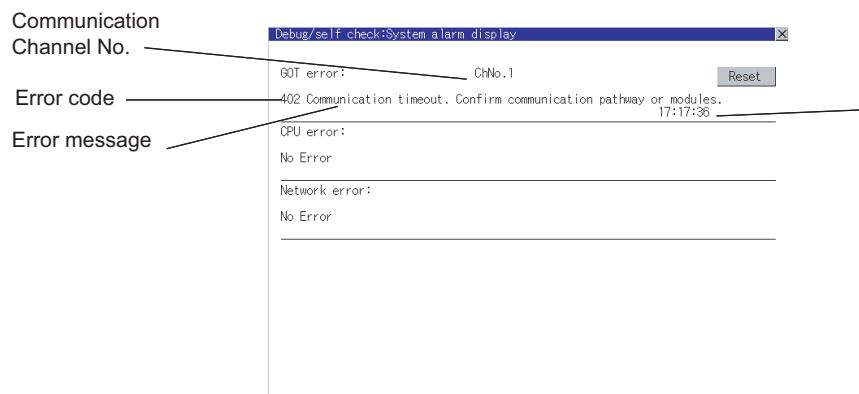
9.2.7 Checking for normal monitoring

1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)




Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

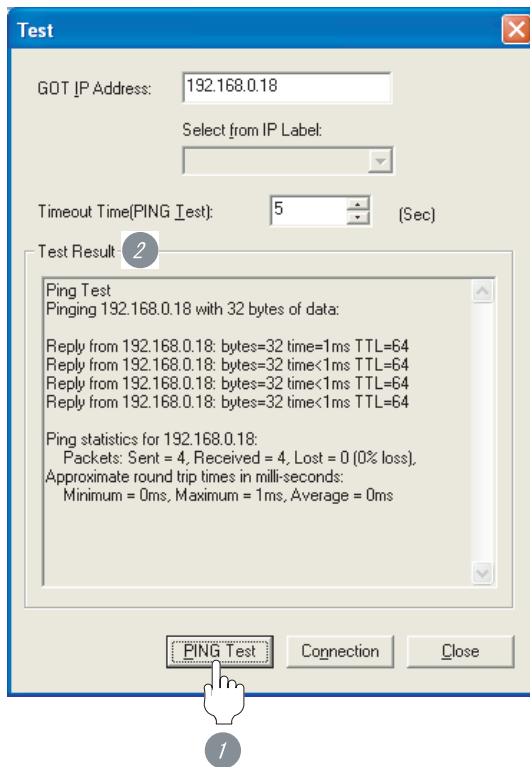
Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

2 Confirming the communication state of GOT

- (1) When using the Command Prompt of Windows®
Execute a Ping command at the Command Prompt of Windows®.
 - (a) When normal communication
C:\>Ping 192.168.0.18
Reply from 192.168.0.18: bytes=32 time<1ms TTL=64
 - (b) When abnormal communication
C:\>Ping 192.168.0.18
Request timed out.
- (2) When using the "PING Test" of GX Developer
Select [Communication] → [Communication configuration] → "Ethernet" and **Test** to display "PING Test".



- 1 Specify the "GOT IP address" of the "PING Test" and click on the **PING Test** button.
- 2 The "Test Result" is displayed after the "PING Test" is finished.

- (3) When abnormal communication
At abnormal communication, check the followings and execute the Ping command again.
 - Mounting condition of Ethernet communication unit
 - Cable connecting condition
 - Confirmation of "Communication settings"
 - IP address of GOT specified by Ping command



Ethernet diagnostics of GX Developer


Ethernet diagnostics of GX Developer is available to a Ping test from the PLC.
For details of Ethernet diagnostics of GX Developer, refer to the following manual.



User's Manual of the Ethernet module

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.
Confirm if the PLC side setting is correct.

 Section 9.3 PLC Side Setting

4 Confirming the communication state to each station (station monitoring function)

The station monitoring function detects the faults (communication timeout) of the stations monitored by the GOT.


When detecting the abnormal state, it is confirming the response by executing a Ping command to the faulty station.

The station monitoring state can be confirmed by using GOT internal device.

(1) Station monitoring state

(a) No. of faulty station (GS230)

Total No. of the faulty CPU are stored.

The station No. of faulty stations are stored to GS231 through GS238. ( (b) Faulty station information (GS231 to GS238))

Device	b15 to b8	b7 to b0
GS230	(00H fixed)	No. of faulty stations

Point

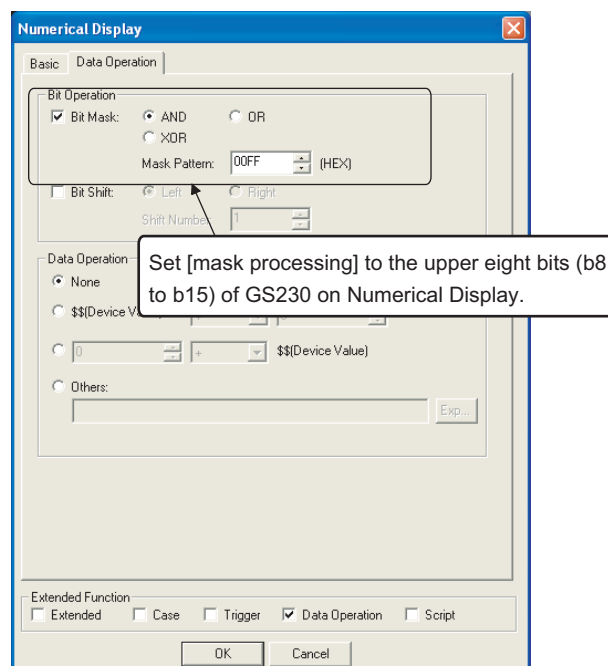
When monitoring GS230 on Numerical Display

When monitoring GS230 on Numerical Display, check [mask processing] with data operation tab as the following.

For the data operation, refer to the following manual.

 GT Designer2 Version□ Screen Design Manual

<Numerical Display (Data Operation tab) >



(b) Faulty station information (GS231 to GS238)

- The bit of the Ethernet setting No. corresponding to the faulty station is set.
0: Normal
1: Abnormal
- The bit is reset after the fault is recovered.

GS231 bit 0
GS231 bit 1
GS231 bit 2
GS231 bit 3


	Host	N/W No.	PLC No.	Type	IP address	Port No.	Communication
1	*	1	2	QJ71E71	192.168.0.19	5001	UDP
2		1	3	QJ71E71	192.168.0.20	5001	UDP
3		1	4	AJ71QE71	192.168.0.21	5001	UDP
4		1	5	AJ71E71	192.168.0.22	5001	UDP

Device	Ethernet setting No.															
	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
GS231	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
GS232	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
GS233	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33
GS234	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49
GS235	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65
GS236	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81
GS237	112	111	110	109	108	107	106	105	104	103	102	101	100	99	98	97
GS238	128	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113

(2) Precautions of station monitoring function

This function is not applicable to the multiple CPU system in which the CPU No. is assigned at the device setting of GT Designer2.

For details of GT Designer2, refer to the following manual.

 GT Designer2 Version□ Screen Design Manual

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

9.3 PLC Side Setting

	Model	Reference
Ethernet module (Q Series)	QJ71E71-100, QJ71E71-B5, QJ71E71-B2, QJ71E71	Section 9.3.1
Ethernet module (QnA Series)	AJ71QE71N3-T, AJ71QE71N-B5, AJ71QE71N-B2, AJ71QE71N-T, AJ71QE71N-B5T, AJ71QE71, AJ71QE71-B5, A1SJ71QE71N3-T, A1SJ71QE71N-B5, A1SJ71QE71N-B2, A1SJ71QE71N-T, A1SJ71QE71N-B5T, A1SJ71QE71-B5, A1SJ71QE71-B2	Section 9.3.2
Ethernet module (A Series)	AJ71E71N3-T, AJ71E71N-B5, AJ71E71N-B2, AJ71E71N-T, AJ71E71N-B5T, AJ71E71-S3, A1SJ71E71N3-T, A1SJ71E71N-B5, A1SJ71E71N-B2, A1SJ71E71N-T, A1SJ71E71N-B5T, A1SJ71E71-B5-S3, A1SJ71E71-B2-S3	Section 9.3.3

9.3.1 Connecting to Ethernet module (Q Series)

This section describes the settings of the GOT and Ethernet module (Q Series) given for the system configuration shown at [1](#).

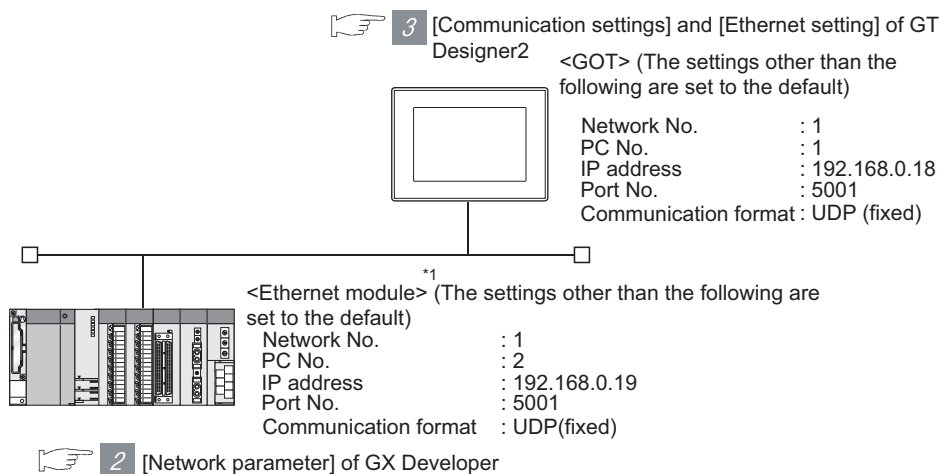


Ethernet module (Q Series)

For details of the Ethernet module (Q Series), refer to the following manual.

Q Corresponding Ethernet Interface Module User's Manual (Basic)


1 System configuration



*1 The Ethernet module is mounted on the base unit slot 0.
The Start I/O No. of the Ethernet module is set to "0".

2 [Network parameter] of GX Developer

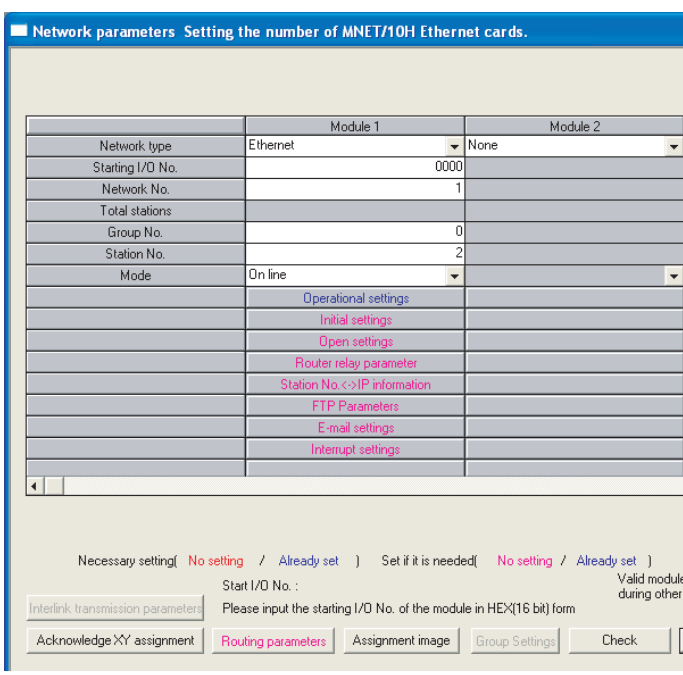(1) Network parameter



Item	Setting	Setting necessity at GOT connection
Network type	Ethernet (fixed)	○
Starting I/O No.	0000H	○
Network No.*1	1	○
Group No.	0 (fixed)	○
Station No.*2	2	○
Mode	Online (fixed)	○
Operational settings	Refer to (2)	○
Initial settings	(Use default value.)	△
Open settings		×
Router relay parameter		×
Station No. <-> IP information		×
FTP Parameters		×
E-mail settings		×
Interrupt settings		×
Redundant settings*3		△
Routing parameters	Refer to (3)	△

○ : Necessary △ : As necessary × : Not necessary

- *1 Set the same network No. as that of the GOT.
- *2 Do not set the same station No. as that of the GOT.
- *3 Set when using Ethernet module in a redundant QnPRHCPU system.

ETHERNET CONNECTION

10

CONNECTION TO OMRON PLC

11

CONNECTION TO KEYENCE PLC

12

CONNECTION TO SHARP PLC

13

CONNECTION TO TOSHIBA PLC

14

CONNECTION TO JTEKT PLC

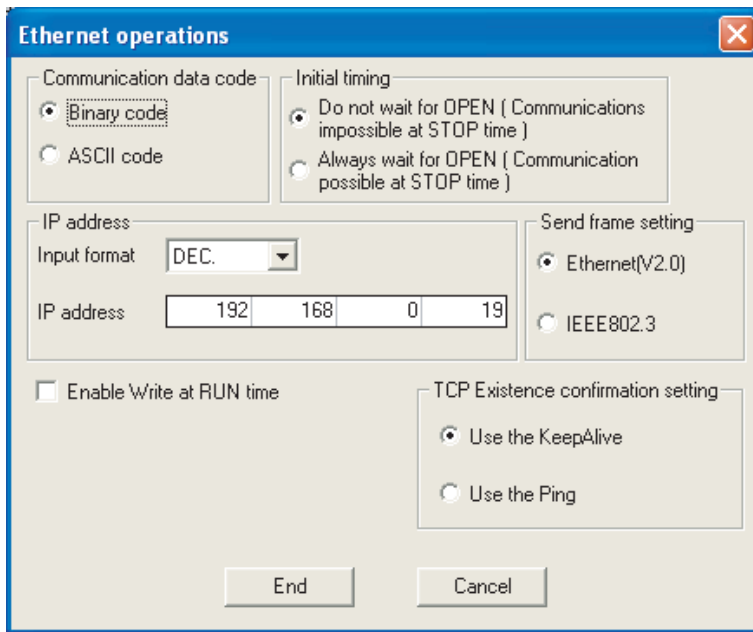
15

CONNECTION TO HITACHI PLC

16

CONNECTION TO MATSUSHITA PLC

(2) Operational settings



Item	Setting	Setting necessity at GOT connection
Communication date code ^{*1}	(Use default value.)	×
IP address	192.168.0.19	○
Initial timing ^{*1}	(Use default value.)	×
Send frame setting		×
Enable Write at RUN time ^{*1}		×
TCP Existence confirmation setting		×

○ : Necessary △ : As necessary × : Not necessary

*1 Because port No. 5001 is fixed, these items operate at the following setting without relations to the setting given here.

- Communication date code : "Binary code"
- Initial timing : "Always wait for OPEN" (Communication is applicable while stopping the PLC CPU.)
- Enable Write at RUN time : "Enable Write at RUN time" (Writing Data is applicable while running the PLC CPU.)



When changing the network parameter

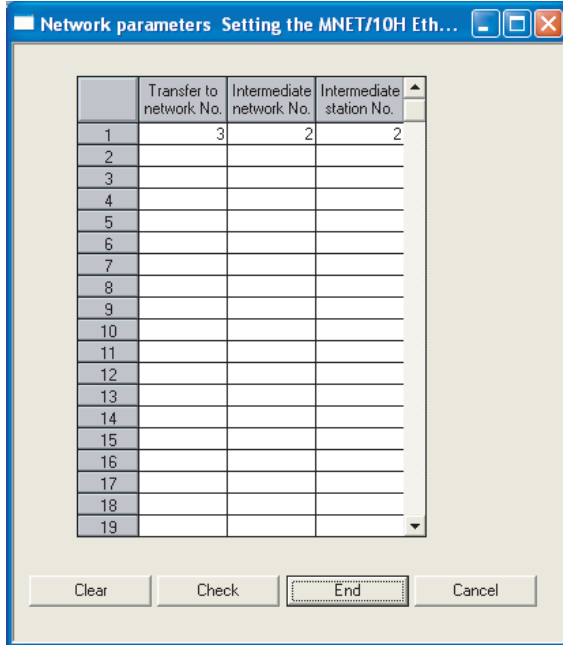
After writing the network parameter to the PLC CPU, operate the PLC CPU ether turning OFF and then ON or resetting.

(3) Routing parameter setting

Up to 64 [Transfer Network No.]s can be set.

However, the same transfer network number cannot be set twice or more (multiple times).

Therefore, the one that can access to other station from the request source host GOT is 64 kinds of [Transfer Network No.]s.



Item	Range
Transfer to network No.	1 to 239
Intermediate network No.	1 to 239
Intermediate station No.	1 to 64



Routing parameter setting of request source

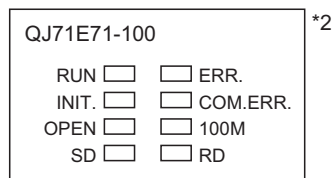
Routing parameter setting is also necessary for the request source GOT.
For the setting, refer to the following.

➡ Section 9.2.3 4 Routing parameter setting

(4) Communication confirmation

The INIT. LED on the Ethernet module turns on when the module is ready to communicate.
For confirming the communication state, refer to the following.

➡ 4 Confirming the communication state of Ethernet module



*2 The LEDs layout of QJ71E71-100.

3 [Communication settings] and [Ethernet setting] of GT Designer2

(1) Communication settings

Item	Setting(Use default value.)
GOT NET No.	1
GOT PC No.	1
GOT IP Address	192.168.0.18
GOT Port No. (QJ71E71/AJ71(Q)E71)	5001
GOT Port No. (Ethernet Download)	5014
Default Gateway	0.0.0.0
Subnet Mask	255.255.255.0
Retry	3 Times
Startup Time	3 sec
Timeout Time	3 sec
Delay Time	0 ms

(2) Ethernet setting

Item	Setting	
Ethernet setting No.1	Host	*
	N/W No.	1
	PLC No.	2
	Type	QJ71E71
	IP address	192.168.0.19
	Port No.	5001 (fixed)
	Communication	UDP (fixed)



[Communication Settings], [Ethernet] of GT Designer2

For [Communication Settings], [Ethernet] of GT Designer2, refer to the following.

Section 9.2.3 Setting communication interface (Communication settings)


4 Confirming the communication state of Ethernet module

- (1) When using the Command Prompt of Windows®
Execute a Ping command at the Command Prompt of Windows®.
 - (a) When normal communication
C:\>Ping 192.168.0.19
Reply from 192.168.0.19: bytes=32 time<1ms TTL=64
 - (b) When abnormal communication
C:\>Ping 192.168.0.19
Request timed out.
- (2) When abnormal communication
At abnormal communication, check the followings and execute the Ping command again.
 - Mounting condition of Ethernet communication unit
 - Cable connecting condition
 - Confirmation of switch and network parameter setting
 - Operation state of PLC CPU (faulty or not)
 - IP address of GOT specified by Ping command



Ethernet diagnostics of GX Developer

Ethernet diagnostics of GX Developer is available to a Ping test from the PLC.
For details of Ethernet diagnostics of GX Developer, refer to the following manual.

 User's manual of the Ethernet module

9.3.2 Connecting to Ethernet module (QnA Series)

This section describes the settings of the GOT and Ethernet module (Q Series) given for the system configuration shown at [1](#).

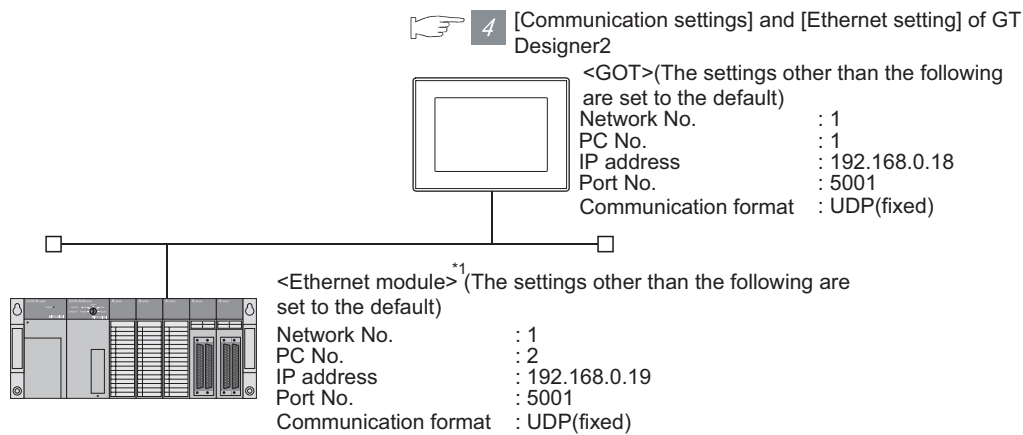


Ethernet module (QnA Series)

For details of the Ethernet module (QnA Series), refer to the following manual.

For QnA Ethernet Interface Module User's Manual

1 System configuration



- 2** Switch setting of Ethernet module
- 3** [Network parameter] of GX Developer

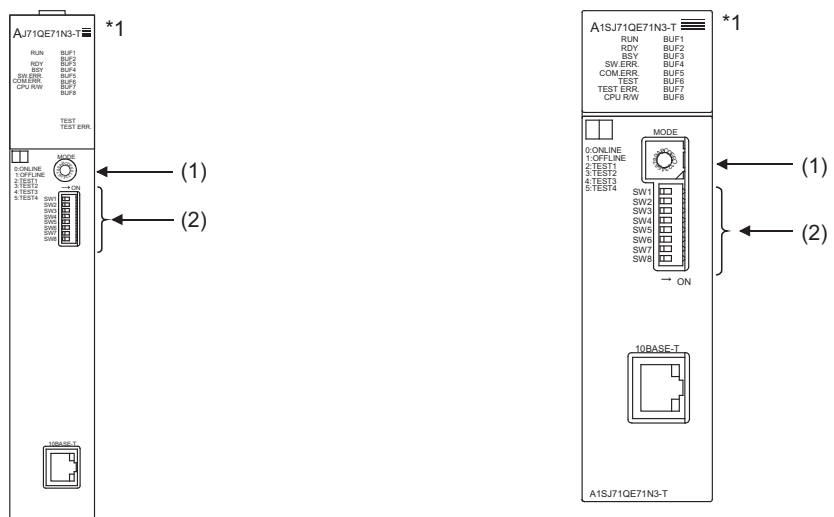
*1 The Ethernet module is mounted on the base unit slot 0.
The Start I/O No. of the Ethernet module is set to "0".

2 Switch settings of Ethernet module

Set the operation mode setting switch and exchange condition setting switch.

AJ71QE71N3-T, AJ71QE71N-B5, AJ71QE71N-B2,
AJ71QE71N-T, AJ71QE71N-B5T,
AJ71QE71, AJ71QE71-B5

A1SJ71QE71N3-T, A1SJ71QE71N-B5, A1SJ71QE71N-B2,
A1SJ71QE71N-T, A1SJ71QE71N-B5T,
A1SJ71QE71-B5, A1SJ71QE71-B2



*1 The figure of AJ71QE71N3-T and A1SJ71QE71N3-T.

(1) Operation mode setting switch

Operation mode setting switch	Description	Setting	Setting necessity at GOT connection
	Online	0(fixes)	○

○ : Necessary △ : As necessary × : Not necessary

(2) Exchange condition setting switch

Exchange condition setting switch	Setting switch	Description	Setting	Setting necessity at GOT connection
	SW1	Selection of line processing at TCP timeout error	OFF	△
	SW2	Data code setting *2	OFF(fixed)	×
	SW3	Self start mode setting *3	ON	○
	SW4	(Must not to be used)	OFF(fixed)	×
	SW6			
	SW7	CPU exchange timing setting *2	OFF(fixed)	×
	SW8	Initial timing setting	OFF	△

○ : Necessary △ : As necessary × : Not necessary

*2 Because port No. 5001 is fixed, these items operate at the following setting without relations to the setting given here.

- Data code setting : [Binary code]
- Enable Write at RUN time : [Enable Write at RUN time] (Writing Data is applicable while running the PLC CPU.)

*3 In addition, communication is applicable while stopping the PLC CPU. For the initial processing by using the initial request signal (Y19), refer to the following manual.

For QnA Ethernet Interface Module User's Manual

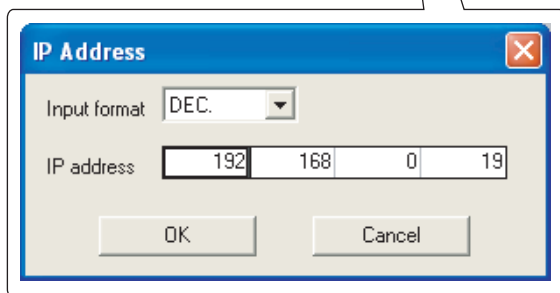
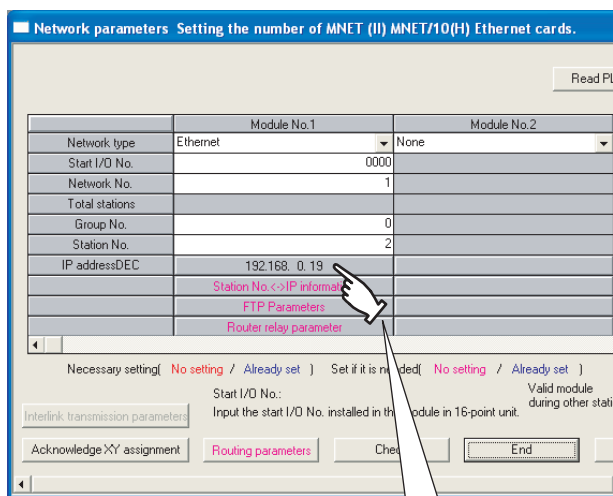


When the switch setting has been changed

Turn the PLC CPU OFF then ON again, or reset the PLC CPU.

3 [Network parameter] of GX Developer

(1) Network parameter



Item	Setting	Setting necessity at GOT connection
Network type	Ethernet (fixed)	○
Start I/O No.	0000H	○
Network No.*1	1	○
Group No.	0 (fixed)	○
Station No.*2	2	○
IP address	192.168.0.19	○
Station No. <->IP information	(Use default value.)	×
FTP Parameters		×
Router relay parameter		×
Routing parameters	Refer to (2)	△

○ : Necessary △ : As necessary × : Not necessary

*1 Set the same network No. as that of the GOT.

*2 Do not set the same station No. as that of the GOT.



When changing the network parameter

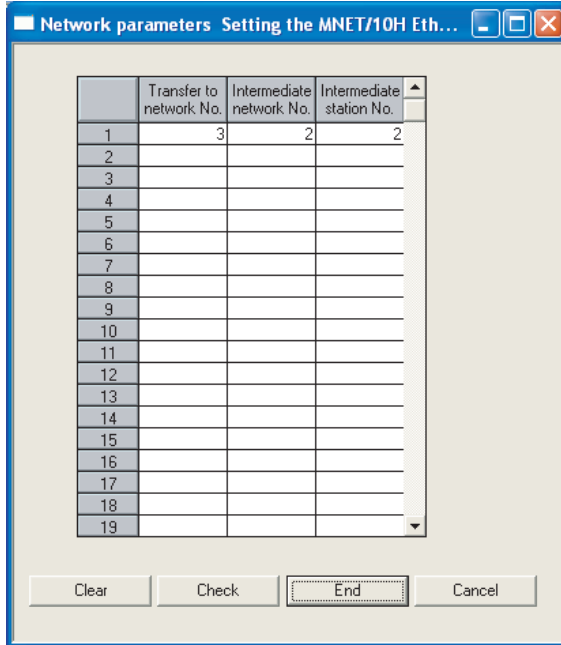
After writing the network parameter to the PLC CPU, operate the PLC CPU ether turning OFF and then ON or resetting.

(2) Routing parameter setting

Up to 64 [Transfer Network No.]s can be set.

However, the same transfer network number cannot be set twice or more (multiple times).

Therefore, the one that can access to other station from the request source host GOT is 64 kinds of [Transfer Network No.]s.



Item	Range
Transfer to network No.	1 to 239
Intermediate network No.	1 to 239
Intermediate station No.	1 to 64

Point


Routing parameter setting of request source

Routing parameter setting is also necessary for the request source GOT.
For the setting, refer to the following.

➡ Section 9.2.3 4 Routing parameter setting

(3) Communication confirmation

The RDY LED on the Ethernet module turn on when the module is ready to communicate.
For confirming the communication state, refer to the following.

 Section 9.3.1 **4** Confirming the communication state of Ethernet module

AJ71QE71N3-T, AJ71QE71N-B5,
AJ71QE71N-B2, AJ71QE71N-T,
AJ71QE71N-B5T, AJ71QE71, AJ71QE71-B5

RUN	BUF1
	BUF2
RDY	BUF3
BSY	BUF4
SW.ERR.	BUF5
COM.ERR.	BUF6
CPU R/W	BUF7
	BUF8
TEST	
TEST ERR.	

A1SJ71QE71N3-T, A1SJ71QE71N-B5, A1SJ71QE71N-B2,
A1SJ71QE71N-T, A1SJ71QE71N-B5T,
A1SJ71QE71-B5, A1SJ71QE71-B2

RUN	BUF1
RDY	BUF2
BSY	BUF3
SW.ERR.	BUF4
COM.ERR.	BUF5
TEST	BUF6
TEST ERR.	BUF7
CPU R/W	BUF8

4 [Communication settings] and [Ethernet setting] of GT Designer2

(1) Communication settings

Item	Setting(Use default value.)
GOT NET No.	1
GOT PC No.	1
GOT IP Address	192.168.0.18
GOT Port No. (QJ71E71/AJ71(Q)E71)	5001
GOT Port No. (Ethernet Download)	5014
Default Gateway	0.0.0.0
Subnet Mask	255.255.255.0
Retry	3 Times
Startup Time	3 sec
Timeout Time	3 sec
Delay Time	0 ms


(2) Ethernet setting

Item	Setting	
Ethernet setting No.1	Host	*
	N/W No.	1
	PLC No.	2
	Type	AJ71QE71
	IP address	192.168.0.19
	Port No.	5001(fixed)
	Communication	UDP(fixed)



[Communication Settings], [Ethernet] of GT Designer2

For [Communication Settings], [Ethernet] of GT Designer2, refer to the following.

 Section 9.2.3 Setting communication interface (Communication settings)

9.3.3 Connecting to Ethernet module (A Series)

This section describes the settings of the GOT and Ethernet module (A Series) given for the system configuration shown at **7**.

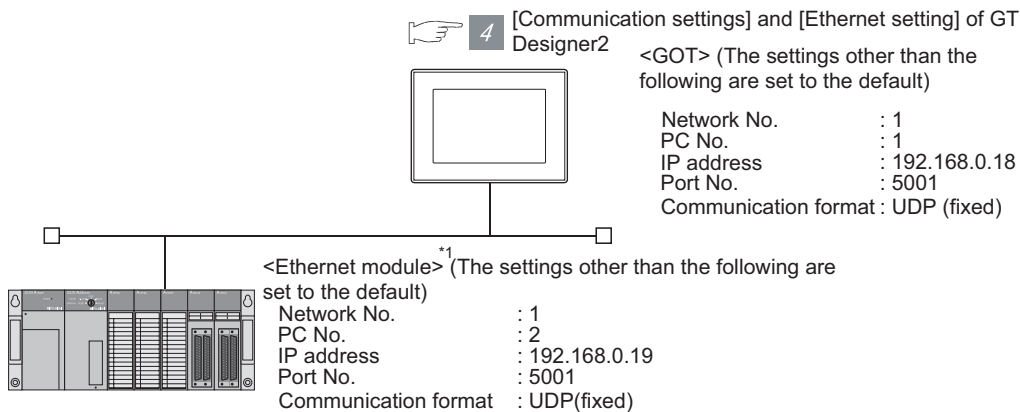


Ethernet module (A Series)

For details of the Ethernet module (A Series), refer to the following manual.

☞ For A Ethernet Interface Module User's Manual

1 System configuration



- ☞ **2** Switch setting of Ethernet module
- **3** Sequence program

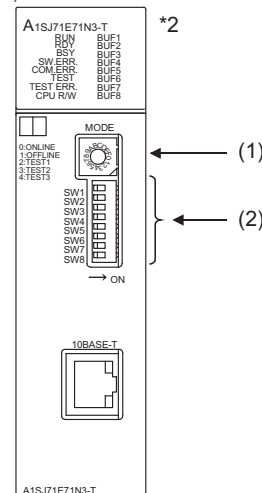
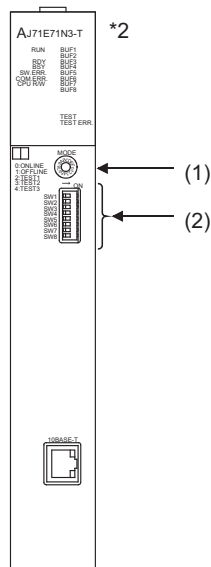
*1 The Ethernet module is mounted on the base unit slot 0.
The Start I/O No. of the Ethernet module is set to "0".

2 Switch settings of Ethernet module

Set the operation mode setting switch and exchange condition setting switch.


AJ71E71N3-T, AJ71E71N-B5, AJ71E71N-B2,
AJ71E71N-T, AJ71E71N-B5T,
AJ71E71-S3

A1SJ71E71N3-T, A1SJ71E71N-B5, A1SJ71E71N-B2,
A1SJ71E71N-T, A1SJ71E71N-B5T,
A1SJ71E71-B5-S3, A1SJ71E71-B2-S3




*2 The figure of AJ71E71N3-T and A1SJ71E71N3-T.

(1) Operation mode setting switch

Operation mode setting switch	Description	Setting	Setting necessity at GOT connection
	Online	0(fixed)	○


○ : Necessary △ : As necessary × : Not necessary

(2) Exchange condition setting switch *1

Exchange condition setting switch	Setting switch	Description	Setting	Setting necessity at GOT connection
	SW1	Selection of line processing at TCP timeout error	OFF	△
	SW2	Data code setting (binary code)	OFF(fixed)	○
	SW3	Must not to be used	OFF(fixed)	×
	SW4			
	SW5			
	SW6			
	SW7	CPU exchange timing setting (Enable write at RUN time)	ON(fixed)	○
	SW8	Initial timing setting	OFF	△

○ : Necessary △ : As necessary × : Not necessary

*1 The exchange condition setting switches of A1SJ71E71-B5-S3 and A1SJ71E71-B2-S3 are specified as the below.

Exchange condition setting switch	Setting switch	Description	Setting	Setting necessity at GOT connection
	SW1	Selection of line processing at TCP timeout error	OFF	△
	SW2	Data code setting (binary code)	OFF(fixed)	○
	SW3	CPU exchange timing setting (Enable write at RUN time)	ON(fixed)	○
	SW4	Initial timing setting	OFF	△

○ : Necessary △ : As necessary × : Not necessary



When the switch setting has been changed

Turn the PLC CPU OFF then ON again, or reset the PLC CPU.

3 Sequence program

The sequence program for initial processing and communication line opening processing are required.

(1) Programming condition

This program performs the initial processing of the Ethernet module and the opening processing of connection No. 1 when the stopping PLC CPU starts running.

(a) I/O signal of Ethernet module

 For A Ethernet Interface Module User's Manual

(b) Device used by user

Device	Application
M102	COM.ERR turned off command
D100	IP address of Ethernet module
D110	Application setting
D111	Port No. of Ethernet module
D112 to D113	IP address of GOT
D114	Port No. of GOT
D200	Initial fault code

(c) Settings of buffer memory used in the following example

Buffer memory address	Item	Setting
Dec (Hex)		
0 to 1 (0 to 1H)	IP address of Ethernet module	C0A80013H(192.168.0.19)
16 (10H)	Application setting ^{*1}	100H
24 (18H)	Port No. of Ethernet module	5001
25 to 26 (19 to 1AH)	IP address of GOT	FFFFFFFFH
27 (1BH)	Port No. of GOT	FFFFH (fixed)
80 (50H)	Initial fault code	-

*1 The details of the application setting are shown below.

Settings 1), 2) and 3) can be changed by the user.

4), 5) and 6) are fixed.

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0
6)						5) 4) 3)			2) 1)						

1) Fixed buffer application

0: For sending; no exchange

1: For receiving

2) Existence check

0: No

1: Yes

3) Pairing open

0: No

1: Yes

4) Communication format (Set to "1" (UDP/IP).)

0: TCP/IP

1: UDP/IP

5) Fixed buffer exchange (Set to "0" (With procedure).)

0: With procedure

1: Without procedure

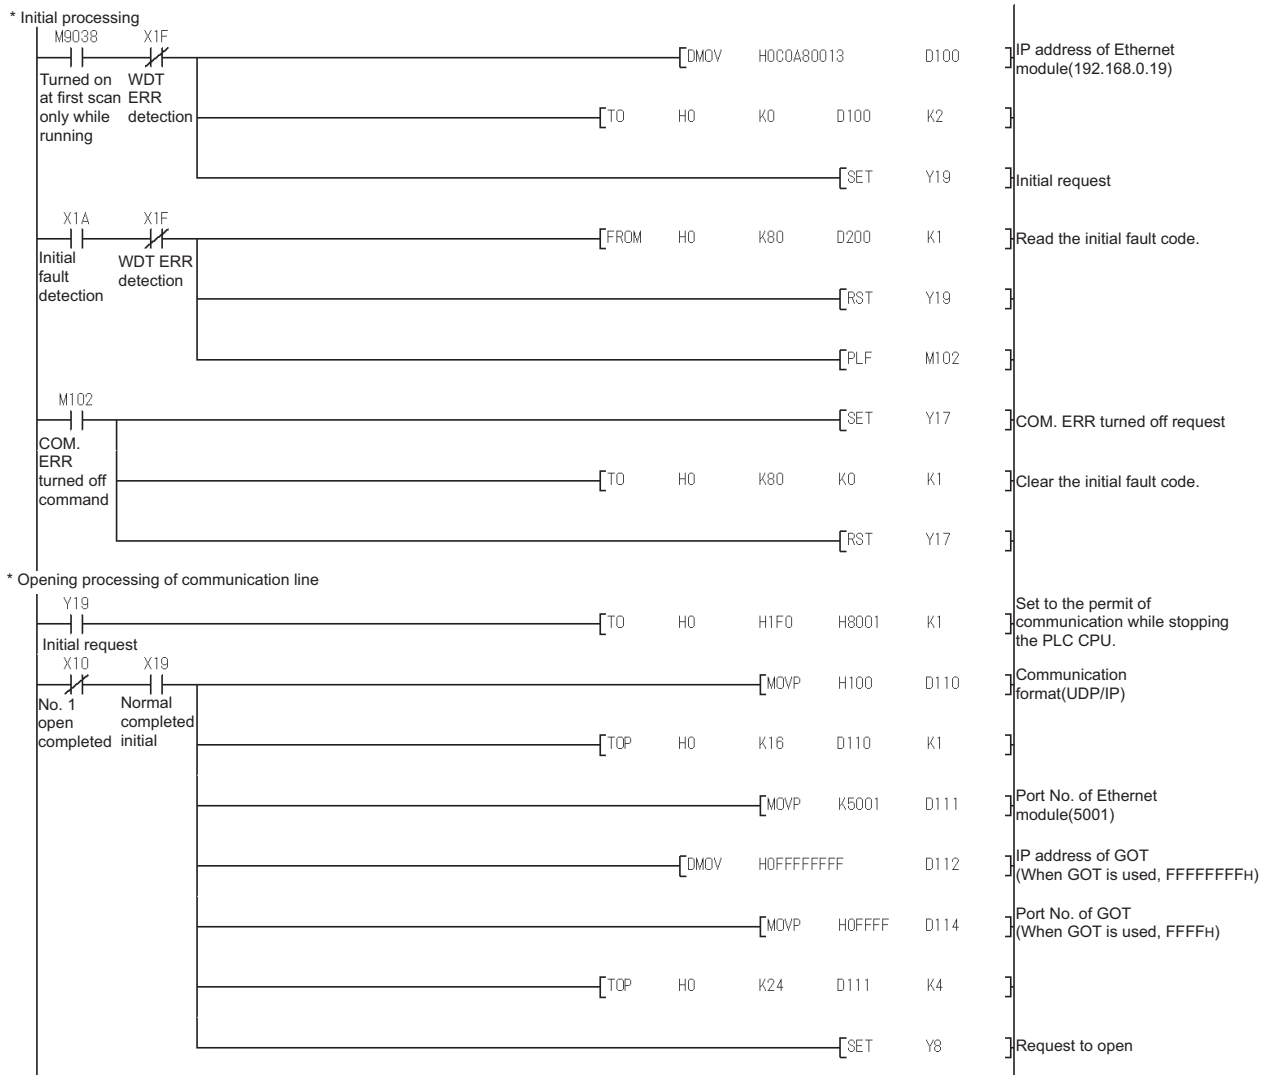
6) Open method (Set to "00" (Active, UDP/IP).)

00: Active, UDP/IP

10: Unpassive

11: Fullpassive

(2) Example of sequence program




When changing the sequence program

After writing the sequence program to the PLC CPU, operate the PLC CPU either turning OFF and then ON or resetting.

(3) Communication confirmation

The RDY LED on the Ethernet module turn on when the module is ready to communicate. For confirming the communication state, refer to the following.

 Section 9.3.1 **4** Confirming the communication state of Ethernet module

The BUF1 LED turns on when the opening processing of the connection No. 1 is completed in normal at executing of the sequence program example described at (2).

AJ71E71N3-T, AJ71E71N-B5, AJ71E71N-B2,
AJ71E71N-T, AJ71E71N-B5T,
AJ71E71-S3

A1SJ71E71N3-T, A1SJ71E71N-B5, A1SJ71E71N-B2,
A1SJ71E71N-T, A1SJ71E71N-B5T,
A1SJ71E71-B5-S3, A1SJ71E71-B2-S3

RUN	BUF1
	BUF2
RDY	BUF3
BSY	BUF4
SW.ERR.	BUF5
COM.ERR.	BUF6
CPU R/W	BUF7
	BUF8
TEST	
TEST ERR.	

RUN	BUF1
RDY	BUF2
BSY	BUF3
SW.ERR.	BUF4
COM.ERR.	BUF5
TEST	BUF6
TEST ERR.	BUF7
CPU R/W	BUF8

4 [Communication settings] and [Ethernet setting] of GT Designer2

(1) Communication settings

Item	Setting(Use default value.)
GOT NET No.	1
GOT PC No.	1
GOT IP Address	192.168.0.18
GOT Port No. (QJ71E71/AJ71(Q)E71)	5001
GOT Port No. (Ethernet Download)	5014
Default Gateway	0.0.0.0
Subnet Mask	255.255.255.0
Retry	3 Times
Startup Time	3 sec
Timeout Time	3 sec
Delay Time	0 ms

(2) Ethernet setting

Item	Setting	
Ethernet setting No.1	Host	*
	N/W No.	1
	PLC No.	2
	Type	AJ71E71
	IP address	192.168.0.19
	Port No.	5001
	Communication	UDP(fixed)



[Communication Settings], [Ethernet] of GT Designer2

For [Communication Settings], [Ethernet] of GT Designer2, refer to the following.

 Section 9.2.3 Setting communication interface (Communication settings)

9.4 Precautions

1 When connecting to QnA (S) CPU type

Use B or a later function version of Ethernet module (QnA Series) and PLC CPU (QnA/QnASCPU type).

2 When connecting to multiple GOTs

When connecting two or more GOTs in the Ethernet network, set each "PC No." to the GOT.

 Section 9.2.3 Setting communication interface (Communication settings)

3 When setting IP address

Do not use "0" and "255" at the end of an IP address.

(Numbers of *.**.0 and *.**.255 are used by the system.)

The GOT may not monitor the controller correctly with the above numbers.

Consult with the administrator of the network before setting an IP address to the GOT and controller.

4 When connecting to the multiple network equipments (including GOT) in a segment

By increasing the network load, the transmission speed between the GOT and PLC may be reduced.

The following actions may improve the communication performance.

- Using a switching hub
- More high speed by 100BASE-TX (100Mbps)
- Reduction of the monitoring points on GOT

9.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Ethernet connection	Supporting the Ethernet connection	2.09K	Communication driver QJ71E71/AJ71(Q)E71 [01.02.**]
	Supporting the routing parameter setting by GT Designer2	2.43V	Communication driver MELSECNET/H [03.01.**]

INDEX

[A]	Accessing the inverter by the FR Configurator .. 40-32
	Accessing the PLC by the GX Developer..... 40-25
	Allen-Bradley PLC
	Control/Compact/FlexLogix..... 21-6
	MicroLogix1000/1200/1500 Series 21-4
	SLC500 Series..... 21-2
	AnCPU type
	Bus connection 2-5
	CC-Link connection (intelligent device station) .. 7-2
	Computer link connection 4-15
	Direct connection to a CPU..... 3-5
	Ethernet connection..... 9-2,33-68
	MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
	AnSCPU type
	Bus connection 2-8
	CC-Link connection (intelligent device station) .. 7-2
	Computer link connection 4-17
	Direct connection to a CPU..... 3-5
	Ethernet connection..... 9-2,33-68
	MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
[B]	Bar code reader connection 36-1
	Bus connection 2-1
[C]	CC-Link connection (intelligent device station)..... 7-1
	CC-Link connection (via G4) 8-1
	CHINO CONTROLLER
	GT120 26-7
	LT230,LT830..... 26-5
	LT300,LT400,DZ1000,DZ2000 26-2
	CNC CONNECTION
	CC-Link Connection(Intelligent Device Station)
 33-44
	Direct Connection To CPU..... 33-2
	Ethernet Connection 33-68
	MELSECNET/10 Connection (PLC To PLC
	Network)..... 33-21
	CNC connection
	Ethernet connection 19-37,20-39,21-32
	Communication check sheet 2-51
	Computer link connection 4-1
[D]	Direct connection to a CPU 3-1
[E]	Ethernet connection..... 9-1
	EXTERNAL I/O DEVICE 35-1
[F]	FA transparent function 40-1
	FUJI FA PLC
	MICREX-F120S/140S/150S..... 17-7
	MICREX-F55 17-2
	MICREX-F70 17-4
	FUJI SYS TEMPERATURE CONTROLLER
	PXG4, PXG5, PXG9, PXH9 25-4,27-4
	PXR3, PXR4, PXR5, PXR9
 25-2,25-5,27-2,29-2,29-6,29-8
	FXCPU(Direct connection to a CPU)
 3-9,3-12,3-17,3-20
[G]	Gateway function 42-1
[H]	HITACHI IES PLC
	H-200 to 252 series, H series board type, EH-150
	series..... 15-5
	Large-sized H series 15-2
	HITACHI PLC
	S10mini Series 16-5
	S10V Series 16-2
[I]	INVERTER CONNECTION
	FREQROL A500/F500 31-2
	FREQROL A700/F700 31-7
	FREQROL E500/S500 31-5
[J]	JTEKT PLC
	PC2J 13-9,17-7
	PC2JC, PC2J16P, PC2J16PR 13-12
	PC3J, PC3JL..... 13-5,16-5,17-4
	PC3JG, PC3JG-P 13-2,16-2,17-2
[K]	KEYENCE PLC
	KV-1000 11-3
	KV-700 11-6
[M]	MATSUSHITA PLC
	FP SIGMA 18-17
	FP0-C16CT, FP0-C32CT 18-2
	FP10 (S)..... 18-12
	FP10SH..... 18-14
	FP1-C24C, FP1-C40C 18-4
	FP2, FP2SH 18-6
	FP3..... 18-8
	FP5..... 18-10

FP-M (C20TC), FP-M (C32TC).....	18-16
FP-X.....	18-19
MELSECNET/10 connection (PLC to PLC network)	6-1
MELSECNET/H connection (PLC to PLC network)	5-1
MES INTERFACE FUNCTION.....	43-1
Microcomputer connection.....	23-1
Motion controller CPU (A Series)	
Bus connection.....	2-16,2-20
CC-Link connection (intelligent device station) ..	7-2
Computer link connection.....	4-19
Direct connection to a CPU.....	3-25,3-27
Ethernet connection.....	9-2,33-68
MELSECNET/10 connection (PLC to PLC network)	6-3,6-5
Motion controller CPU (Q Series)	
Bus connection.....	2-15
CC-Link connection (intelligent device station) ..	7-2
CC-Link connection (via G4).....	8-2
Computer link connection.....	4-19
Direct connection to a CPU.....	3-25,3-27
Ethernet connection.....	9-2,33-68
MELSECNET/10 connection (PLC to PLC network)	6-3,6-5
MELSECNET/H connection (PLC to PLC network)	5-3,5-5
MULTI-CHANNEL FUNCTION.....	39-1
Multiple-GT11 connection function.....	41-1
[O]	
OMRON PLC	
C1000H/C2000H, CV500/CV1000/CV2000, CVM1	10-18
C200HS, C200H, C200H, CS1.....	10-12
CPM1, CPM1A, CPM2A, CPM2C.....	10-2
CQM1, CQM1H, CJ1.....	10-6
OMRON TEMPERATURE CONTROLLER	
E5AN, E5EN.....	24-2
E5CN, E5GN.....	24-4
E5ZN.....	24-6
[P]	
PLC Side Settings	
CC-Link connection (intelligent device station)	7-25
CC-Link connection (via G4).....	8-18
Computer link connection.....	4-46
Ethernet connection.....	9-20
FUJI FA PLC.....	17-30
HITACHI PLC.....	16-26
JTEKT PLC.....	13-36
KEYENCE PLC.....	11-33
MATSUSHITA PLC.....	18-39
MELSECNET/10 connection (PLC to PLC network)	6-27
MELSECNET/H connection (PLC to PLC network)	5-25
SHARP PLC.....	12-35
TOSHIBA PLC.....	14-26

Precautions	
Bar code reader connection.....	36-14,38-12
Bus connection.....	2-44
CC-Link connection (intelligent device station) ..	7-58
CHINO CONTROLLER.....	26-40
CNC CONNECTION.....	33-20,33-43,33-67,33-89
Ethernet connection.....	9-38,19-59
EXTERNAL I/O DEVICE.....	35-21
FA transparent function.....	40-34
FUJI FA PLC.....	17-40
FUJI SYS TEMPERATURE CONTROLLER..	27-37
INVERTER CONNECTION.....	31-30
JTEKT PLC.....	13-42
MELSECNET/10 connection (PLC to PLC network)	6-49
MELSECNET/H connection (PLC to PLC network)	5-31
Multiple-GT11 connection function.....	41-23
OMRON TEMPERATURE CONTROLLER... ..	24-32
PRINTER CONNECTION.....	38-12
RKC TEMPERATURE CONTROLLER.....	28-43
SERVO AMPLIFIER CONNECTION.....	32-33
SHINKO TECHNOS INDICATING CONTROLLER	25-26
SIEMENS PLC.....	22-25
SOUND OUTPUT UNIT.....	34-12
Video/RGB connection.....	37-22
YAMATAKE TEMPERATURE CONTROLLER	30-49
YOKOGAWA PLC.....	20-38
YOKOGAWA TEMPERATURE CONTROLLER	29-46
Preparatory procedures for accessing	
FA transparent function.....	40-18
Preparatory procedures for monitoring	
Allen-Bradley PLC.....	21-11,21-34
Bar code reader connection.....	36-4,38-4
Bus connection.....	2-26
CC-Link connection (intelligent device station) ..	7-7
CC-Link connection (via G4).....	8-5
CHINO CONTROLLER.....	26-19
CNC CONNECTION.....	33-6,33-23,33-46,33-70
Computer link connection.....	4-27
Direct connection to a CPU.....	3-32
Ethernet connection.....	9-4
EXTERNAL I/O DEVICE.....	35-12
FUJI FA PLC.....	17-15
FUJI SYS TEMPERATURE CONTROLLER..	27-14
Gateway function.....	42-6
HITACHI IES PLC.....	15-11
HITACHI PLC.....	16-11
INVERTER CONNECTION.....	31-15
JTEKT PLC.....	13-21
KEYENCE PLC.....	11-17
MATSUSHITA PLC.....	18-27
MELSECNET/10 connection (PLC to PLC network)	6-7,33-23
MELSECNET/H connection (PLC to PLC network)	5-7

- MES INTERFACE FUNCTION 43-5
 Microcomputer connection 23-78
 MULTI-CHANNEL FUNCTION 39-4
 Multiple-GT11 connection function 41-7
 OMRON PLC 10-31
 OMRON TEMPERATURE CONTROLLER ... 24-14
 PRINTER CONNECTION 38-4
 RKC TEMPERATURE CONTROLLER 30-23
 SERVO AMPLIFIER CONNECTION 32-14
 SHARP PLC 12-21
 SHINKO TECHNOS INDICATING CONTROLLER
 25-10
 SIEMENS PLC 22-7
 SOUND OUTPUT UNIT 34-4
 TOSHIBA PLC 14-12
 Video/RGB CONNECTION 37-12
 YAMATAKE TEMPERATURE CONTROLLER
 28-24
 YASKAWA PLC 19-22,19-40
 YOKOGAWA PLC 20-14,20-41
 YOKOGAWA TEMPERATURE CONTROLLER
 29-23
 PRINTER CONNECTION 38-1
- [Q]
 QCPU (A mode)
 CC-Link connection (intelligent device station) .. 7-2
 Computer link connection 4-6
 Direct connection to a CPU 3-2
 Ethernet connection 9-2,33-68
 MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
 QCPU (Q mode)
 Bus connection 2-3
 CC-Link connection (intelligent device station) .. 7-2
 CC-Link connection (via G4) 8-2
 Computer link connection 4-2
 Direct connection to a CPU 3-2
 Ethernet connection 9-2,33-68
 MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
 MELSECNET/H connection (PLC to PLC network)
 5-3,5-5
 QnACPU type
 Bus connection 2-5
 CC-Link connection (intelligent device station) .. 7-2
 Computer link connection 4-8
 Direct connection to a CPU 3-5
 Ethernet connection 9-2,33-68
 MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
 QnASCPU type
 Bus connection 2-8
 CC-Link connection (intelligent device station) .. 7-2
 Computer link connection 4-12
 Direct connection to a CPU 3-5
 Ethernet connection 9-2,33-68
 MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
- [R]
 Remote I/O station in the MELSECNET/H network
 system
 Computer link connection 4-19
 Direct connection to a CPU 3-25
 RKC TEMPERATURE CONTROLLER
 H-PCP-A, H-PCP-B 30-6
 H-PCP-J 30-2
 SRZ 30-9
- [S]
 SERVO AMPLIFIER
 MELSERVO-J2M Series 32-4
 MELSERVO-J2-Super Series 32-2
 MELSERVO-J3 Series 32-31
 Servo amplifier connection 32-1
 Setting on servo amplifier side 32-28
 SHARP PLC
 JW-21CU, JW-22CU 12-2
 JW-31CUH, JW-32CUH, JW-33CUH 12-5
 JW-50CUH 12-8
 JW-70CUH, JW-100CUH, JW-100CU 12-10
 Z-512J 12-13
 SHINKO TECHNOS INDICATING CONTROLLER
 ACS-13A, JC, JCM-33A, JIR-301-M Series 25-2
 DCL-33A Series 25-5
 FCD-100, FCR-100, FCR-23A, FIR, PC-900 Series
 25-4
 SIEMENS PLC
 SIMATIC S7-200 Series 22-4
 SIMATIC S7-300/400 Series 22-3
 SOUND OUTPUT UNIT 34-1
 Station NO. settings
 CHINO CONTROLLER 26-39
 FUJI FA PLC 17-39
 FUJI SYS TEMPERATURE CONTROLLER .. 27-36
 INVERTER CONNECTION 31-28
 JTEKT PLC 13-41
 OMRON TEMPERATURE CONTROLLER 24-31
 RKC TEMPERATURE CONTROLLER 30-48
 SERVO AMPLIFIER CONNECTION 32-32
 SHINKO TECHNOS INDICATING CONTROLLER
 25-25
 YAMATAKE TEMPERATURE CONTROLLER
 28-42
 YOKOGAWA TEMPERATURE CONTROLLER
 29-45
- [T]
 TEMPERATURE CONTROLLER
 OMRON TEMPERATURE CONTROLLER 24-1
 RKC TEMPERATURE CONTROLLER 30-1
 YAMATAKE TEMPERATURE CONTROLLER 28-1
 TOSHIBA PLC
 model 3000 (S2/S3) 14-5
 T2 (PU224), T2E, T2N, T3, T3H 14-2

[V]
Video/RGB CONNECTION 37-1

[Y]
YAMATAKE TEMPERATURE CONTROLLER
DMC10 28-2
SDC15, SDC25/26, SDC35/36 28-4
SDC20/21 28-6
SDC30/31 28-9
SDC40A/40B/40G 28-11
YASKAWA PLC
MP-920 19-37
MP2200, MP2300 19-39
CP-9200SH 19-11
GL120, GL130 19-2
GL60S, GL60H, GL70H 19-4
MP-920/930, CP-9300MS/9200(H), PROGIC-8
..... 19-6
MP-940 19-9
YOKOGAWA PLC
FA500 20-5
FA-M3 20-2,20-39,21-32
STARDOM 20-7
YOKOGAWA TEMPERATURE CONTROLLER
GREEN Series 29-2
UT100 Series 29-6
UT2000 Series 29-8

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company. However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 2. Failure caused by unapproved modifications, etc., to the product by the user.
 3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation of damages caused by any cause found not to be the responsibility of Mitsubishi, loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products, special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products, replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

6. Product application

- (1) In using the Mitsubishi graphic operation terminal, the usage conditions shall be that the application will not lead to a major accident even if any problem or fault should occur in the graphic operation terminal device, and that backup and fail-safe functions are systematically provided outside of the device for any problem or fault.
- (2) The Mitsubishi graphic operation terminal has been designed and manufactured for applications in general industries, etc. Thus, applications in which the public could be affected such as in nuclear power plants and other power plants operated by respective power companies, and applications in which a special quality assurance system is required, such as for Railway companies or Public service purposes shall be excluded from the graphic operation terminal applications. In addition, applications in which human life or property that could be greatly affected, such as in aircraft, medical applications, incineration and fuel devices, manned transportation, equipment for recreation and amusement, and safety devices, shall also be excluded from the graphic operation terminal range of applications. However, in certain cases, some applications may be possible, providing the user consults their local Mitsubishi representative outlining the special requirements of the project, and providing that all parties concerned agree to the special circumstances, solely at the users discretion.

Microsoft Windows, Microsoft Windows NT are registered trademarks of Microsoft Corporation in the United States and other countries.

Other company and product names herein are either trademarks or registered trademarks of their respective owners.

GRAPHIC OPERATION TERMINAL

GOT1000

GOT1000 Series Connection Manual 1/3

MODEL	GT1000-U(CON)-E
MODEL CODE	1D7M26
SH(NA)-080532ENG-H 1/3(0705)MEE	

 **mitsubishi electric corporation**

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.

MITSUBISHI



GRAPHIC OPERATION TERMINAL

GOT1000

GOT1000 Series Connection Manual 2/3



● SAFETY PRECAUTIONS ●

(Always read these precautions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product.


In this manual, the safety precautions are ranked as "DANGER" and "CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the  caution level may lead to a serious accident according to the circumstances. Always follow the instructions of both levels because they are important to personal safety.

Please save this manual to make it accessible when required and always forward it to the end user.

[DESIGN PRECAUTIONS]

DANGER

- Some failures of the GOT, communication unit or cable may keep the outputs on or off.
An external monitoring circuit should be provided to check for output signals which may lead to a serious accident.
Not doing so can cause an accident due to false output or malfunction.
- If a communication fault (including cable disconnection) occurs during monitoring on the GOT, communication between the GOT and PLC CPU is suspended and the GOT becomes inoperative.
For bus connection : The CPU becomes faulty and the GOT becomes inoperative.
For other than bus connection : The GOT becomes inoperative.
A system where the GOT is used should be configured to perform any significant operation to the system by using the switches of a device other than the GOT on the assumption that a GOT communication fault will occur.
Not doing so can cause an accident due to false output or malfunction.
- Do not use the GOT as the warning device that may cause a serious accident.
An independent and redundant hardware or mechanical interlock is required to configure the device that displays and outputs serious warning.
Failure to observe this instruction may result in an accident due to incorrect output or malfunction.

[DESIGN PRECAUTIONS]

DANGER

- Incorrect operation of the touch switch(s) may lead to a serious accident if the GOT backlight is gone out.

When the GOT backlight goes out, the POWER LED flickers (green/orange) and the display section turns black and causes the monitor screen to appear blank, while the input of the touch switch(s) remains active.

This may confuse an operator in thinking that the GOT is in "screensaver" mode, who then tries to release the GOT from this mode by touching the display section, which may cause a touch switch to operate.

Note that the following occurs on the GOT when the backlight goes out.

The POWER LED flickers (green/orange) and the monitor screen appears blank.

CAUTION

- Do not bundle the control and communication cables with main-circuit, power or other wiring. Run the above cables separately from such wiring and keep them a minimum of 100mm apart. Not doing so noise can cause a malfunction.

[MOUNTING PRECAUTIONS]

DANGER

- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the GOT to/from the panel.
Not doing so can cause the GOT to fail or malfunction.
- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the communication unit, option function board or multi-color display board onto/from the GOT.
Not doing so can cause the unit to fail or malfunction.
- Before mounting an optional function board or Multi-color display board, wear a static discharge wrist strap to prevent the board from being damaged by static electricity.

CAUTION

- Use the GOT in the environment that satisfies the general specifications described in this manual.
Not doing so can cause an electric shock, fire, malfunction or product damage or deterioration.
- When mounting the GOT to the control panel, tighten the mounting screws in the specified torque range.
Undertightening can cause the GOT to drop, short circuit or malfunction.
Overtightening can cause a drop, short circuit or malfunction due to the damage of the screws or the GOT.

[MOUNTING PRECAUTIONS]

CAUTION

- When loading the communication unit to the GOT, fit it to the connection interface of the GOT and tighten the mounting screws in the specified torque range.
Overtightening can cause a drop, failure or malfunction due to the damage of the screws or unit.
- When mounting the multi-color display board onto the GOT, tighten the mounting screws within the specified torque range.
Loose tightening may cause the unit and/or GOT to malfunction due to poor contact.
Overtightening may damage the screws, unit and/or GOT; they might malfunction.
- When mounting an optional function board onto the GT15□□, fully connect it to the connector until you hear a click.
- When mounting an optional function board onto the GT15□□, fully connect it to the connector.
- Push the multi-color display board onto the corresponding connector so that it will be secured firmly.
- When inserting a CF card into the GOT, push it into the insertion slot until the CF card eject button will pop out.
Failure to do so may cause a malfunction due to poor contact.
- When inserting/removing a CF card into/from the GOT, turn the CF card access switch off in advance.
Failure to do so may corrupt data within the CF card.
- When removing a CF card from the GOT, make sure to support the CF card by hand, as it may pop out.
Failure to do so may cause the CF card to drop from the GOT and break.

[WIRING PRECAUTIONS]

DANGER

- Be sure to shut off all phases of the external power supply used by the system before wiring.
Failure to do so may result in an electric shock, product damage or malfunctions.

[WIRING PRECAUTIONS]

CAUTION

- Please make sure to ground FG terminal and LG terminal of the GOT power supply section by applying Class D Grounding (Class 3 Grounding Method) or higher which is used exclusively for the GOT.
Not doing so may cause an electric shock or malfunction.
- Be sure to tighten any unused terminal screws with a torque of 0.5 to 0.8N•m.
Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Use applicable solderless terminals and tighten them with the specified torque.
If any solderless spade terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Correctly wire the GOT power supply section after confirming the rated voltage and terminal arrangement of the product.
Not doing so can cause a fire or failure.
- Tighten the terminal screws of the GOT power supply section in the specified torque range.
Undertightening can cause a short circuit or malfunction.
Overtightening can cause a short circuit or malfunction due to the damage of the screws or the GOT.
- Exercise care to avoid foreign matter such as chips and wire offcuts entering the GOT. Not doing so can cause a fire, failure or malfunction.
- Plug the bus connection cable by inserting it into the connector of the connected unit until it "clicks".
After plugging, check that it has been inserted snugly.
Not doing so can cause a malfunction due to a contact fault.
- Plug the communication cable into the connector of the connected unit and tighten the mounting and terminal screws in the specified torque range.
Undertightening can cause a short circuit or malfunction.
Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

[TEST OPERATION PRECAUTIONS]

DANGER

- Before performing the test operations of the user creation monitor screen (such as turning ON or OFF bit device, changing the word device current value, changing the settings or current values of the timer or counter, and changing the buffer memory current value), read through the manual carefully and make yourself familiar with the operation method.
During test operation, never change the data of the devices which are used to perform significant operation for the system.
False output or malfunction can cause an accident.

[STARTUP/MAINTENANCE PRECAUTIONS]

DANGER

- When power is on, do not touch the terminals.
Doing so can cause an electric shock or malfunction.
- Connect the battery correctly.
Do not discharge, disassemble, heat, short, solder or throw the battery into the fire.
Incorrect handling may cause the battery to generate heat, burst or take fire, resulting in injuries or fires
- Before starting cleaning or terminal screw retightening, always switch off the power externally in all phases.
Not switching the power off in all phases can cause a unit failure or malfunction.
Undertightening can cause a short circuit or malfunction.
Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

[STARTUP/MAINTENANCE PRECAUTIONS]

CAUTION

- Do not disassemble or modify the unit.
Doing so can cause a failure, malfunction, injury or fire.
- Do not touch the conductive and electronic parts of the unit directly.
Doing so can cause a unit malfunction or failure.
- The cables connected to the unit must be run in ducts or clamped.
Not doing so can cause the unit or cable to be damaged due to the dangling, motion or accidental pulling of the cables or can cause a malfunction due to a cable connection fault.
- When unplugging the cable connected to the unit, do not hold and pull the cable portion.
Doing so can cause the unit or cable to be damaged or can cause a malfunction due to a cable connection fault.
- Do not drop or apply strong impact to the unit.
Doing so may damage the unit.
- Do not drop or give an impact to the battery mounted to the unit.
Doing so may damage the battery, causing the battery fluid to leak inside the battery.
If the battery is dropped or given an impact, dispose of it without using.
- Before touching the unit, always touch grounded metal, etc. to discharge static electricity from human body, etc.
Not doing so can cause the unit to fail or malfunction.

[BACKLIGHT REPLACEMENT PRECAUTIONS]

DANGER

- Be sure to shut off all phases of the external power supply of the GOT (and the PLC CPU in the case of a bus topology) and remove the GOT from the control panel before replacing the backlight (when using the GOT with the backlight replaceable by the user).
Not doing so can cause an electric shock.
Replacing a backlight without removing the GOT from the control panel can cause the backlight or control panel to drop, resulting in an injury.

CAUTION

- Wear gloves for the backlight replacement when using the GOT with the backlight replaceable by the user.
Not doing so can cause an injury.
- Before replacing a backlight, allow 5 minutes or more after turning off the GOT when using the GOT with the backlight replaceable by the user.
Not doing so can cause a burn from heat of the backlight.

[DISPOSAL PRECAUTIONS]

CAUTION

- When disposing of the product, handle it as industrial waste.

[TRANSPORTATION PRECAUTIONS]

CAUTION

- When transporting lithium batteries, make sure to treat them based on the transport regulations.
(For details on models subject to restrictions, refer to the User's Manual for the GOT you are using.)
- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of the User's Manual, as they are precision devices.
Failure to do so may cause the unit to fail.
Check if the unit operates correctly after transportation.

REVISIONS

* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Oct., 2004	SH(NA)-080532ENG-A	First edition
Mar., 2005	SH(NA)-080532ENG-B	<p>Compatible with GT Designer2 Version2.09K</p> <p>Addition</p> <p>Chapter 5, Chapter 6, Chapter 7, Chapter 8, Chapter 10, Chapter 11, Chapter 12, Chapter 13, Chapter 19, Chapter 20, Chapter 21, Chapter 22, Chapter 23, Section 3.1.8, Section 3.1.9</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>SAFETY PRECAUTIONS, ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1, Section 1.1, 1.2, 2.1.3, 2.1.5, 2.1.7, 2.3, 3.1.4, 3.1.5, 3.1.6, 3.1.7, 4.1.7, 4.4.1, 14.1.3, 14.2, 15.3.3, 21.3, 21.4.4, 21.5</p>
Oct., 2005	SH(NA)-080532ENG-C	<p>Compatible with GT Designer2 Version2.18U</p> <p>Addition</p> <p>Chapter 10, Chapter 20, Chapter 21, Chapter 22, Chapter 23, Chapter 26, Chapter 27, Section 14.1.9, Section 18.1.2, Section 24.4.3</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>SAFETY PRECAUTIONS, ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1 to 9, Chapter 11 to 19, Chapter 24, Chapter 25 Chapter 28 to 30</p> <p>Volume separated</p> <p>Separated the manual as the following. SH(NA)-080532ENG-C 1/2:Chapter 1 to 18 SH(NA)-080532ENG-C 2/2:Chapter 19 to 30</p>

(Continued to next page)

Print Date	* Manual Number	Revision
Jan., 2006	SH(NA)-080532ENG-D	<p>Compatible with GT Designer2 Version2.27D</p> <p>Addition</p> <p>Chapter 26, Section 29.2.2, Section 29.4.5, Section 29.5.1, Section 29.5.3</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1, Section 2.2, 3.3, 4.3, 5.2, 6.2, 7.2, 8.2, 9.1.2, 9.2, 9.3, 10.3, 11.3, 12.3, 13.3, 14.3, 15.3, 16.3, 17.3, 18.3, 19.6, 20.3, 21.3, 22.3, 23.3, 24.3, 25.1, 25.2, 25.4, 27.1, 27.2, 27.3, 27.4, 28.3, 29.3, 30.3, 31.2</p>
Apr., 2006	SH(NA)-080532ENG-E	<p>Compatible with GT Designer2 Version2.32J</p> <p>Addition</p> <p>Chapter 5, Section 7.1.2, Section 7.1.3, Section 7.3.2, Section 7.3.3, Section 18.1.3, Chapter 14, Chapter 23, Chapter 29, Chapter 36</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1, Section 2.2, 3.3, 4.3, 6.2, 7.2, 8.2, 9.2, 10.3, 11.3, 12.3, 13.3, 15.3, 16.3, 17.3, 18.3, 19.3, 20.3, 21.6, 22.3, 24.3, 25.3, 26.3, 27.3, 28.2, 30.2, 31.1.3, 31.2.2, 31.3.2, 31.4.2, 32.3, 34.3, 35.2</p>
Nov., 2006	SH(NA)-080532ENG-F	<p>Compatible with GT Designer2 Version2.43V</p> <p>Addition</p> <p>Chapter 16, Chapter 17, Chapter 25, Chapter 28, Section 19.2, Section 20.2 Chapter 40</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1 to 6, 9, 10, 13, 23, 30, 35, 37, 40</p> <p>Volume separated</p> <p>Separated the manual as the following.</p> <p>SH(NA)-080532ENG-F 1/3:Chapter 1 to 9</p> <p>SH(NA)-080532ENG-F 2/3:Chapter 10 to 22</p> <p>SH(NA)-080532ENG-F 3/3:Chapter 23 to 40</p>

(Continued to next page)

Print Date	* Manual Number	Revision
Feb., 2007	SH(NA)-080532ENG-G	Compatible with GT Designer2 Version2.47Z <div style="border: 1px solid black; padding: 2px;">Partial correction</div> HOW TO READ THIS MANUAL, Chapter 1, 10, 19, 20, 23, 39, 40
May., 2007	SH(NA)-080532ENG-H	Compatible with GT Designer2 Version2.58L <div style="border: 1px solid black; padding: 2px;">Addition</div> Section 18.1.10, 21.1.3, 21.2, 30.1.3 Chapter 26, 33, 34 <div style="border: 1px solid black; padding: 2px;">Section numbers revised</div> Revised throughout the manual due to addition of the new connection types and functions. <div style="border: 1px solid black; padding: 2px;">Partial correction</div> HOW TO READ THIS MANUAL, Chapter 3, 4, 10, 23, 40, 41

Japanese Manual Version SH-080511-M

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2004 MITSUBISHI ELECTRIC CORPORATION

INTRODUCTION

Thank you for choosing Mitsubishi Graphic Operation Terminal (Mitsubishi GOT).

Read this manual and make sure you understand the functions and performance of the GOT thoroughly in advance to ensure correct use.

CONTENTS

SAFETY PRECAUTIONS	A - 1
REVISIONS.....	A - 8
INTRODUCTION.....	A - 11
CONTENTS	A - 11
ABOUT MANUALS	A - 34
ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL.....	A - 35

Connection Manual 1/3

1. OVERVIEW 1 - 1 to 1 - 22

1.1 Connections and Functions Supported by GOT	1 - 4
1.2 Overall System Configurations	1 - 7

MITSUBISHI PLC CONNECTIONS

2. BUS CONNECTION 2 - 1 to 2 - 54

2.1 System Configuration	2 - 2
2.1.1 Connecting to QCPU (Q mode).....	2 - 3
2.1.2 Connecting to QnACPU or AnCPU type.....	2 - 5
2.1.3 Connecting to QnASCPU or AnSCPU type.....	2 - 8
2.1.4 Connecting to A0J2HCPU	2 - 14
2.1.5 Connecting to motion controller CPU (Q Series).....	2 - 15
2.1.6 Connecting to motion controller CPU (A273UCPU, A273UHCPU(-S3), A373UCPU(-S3)).....	2 - 16
2.1.7 Connecting to motion controller CPU (A171SHCPUN, A172SHCPUN, A173UHCPU(-S1)).....	2 - 20
2.2 Preparatory Procedures for Monitoring	2 - 26
2.2.1 Installing OS onto GOT	2 - 27
2.2.2 Checking OS installation on GOT.....	2 - 28
2.2.3 Setting communication interface (Communication settings).....	2 - 29
2.2.4 Downloading project data	2 - 36
2.2.5 Attaching communication unit and connecting cable.....	2 - 37
2.2.6 Verifying GOT recognizes controllers	2 - 39
2.2.7 Checking for normal monitoring.....	2 - 42

2.3	Precautions	2 - 44
2.4	Communication Check Sheet	2 - 51
2.5	List of Functions Added by Version Upgrade	2 - 53

3. DIRECT CONNECTION TO CPU 3 - 1 to 3 - 54

3.1	System Configuration	3 - 2
3.1.1	Connecting to QCPU	3 - 2
3.1.2	Connecting to QnACPU	3 - 5
3.1.3	Connecting to ACPU	3 - 7
3.1.4	Connecting to FXCPU (FX0, FX0S, FX0N, FX1, FX2, FX2C Series)	3 - 9
3.1.5	Connecting to FXCPU (FX1S, FX1N, FX2N Series)	3 - 12
3.1.6	Connecting to FXCPU (FX1NC, FX2NC Series)	3 - 17
3.1.7	Connecting to FXCPU (FX3U, FX3UC Series)	3 - 20
3.1.8	Connecting to motion controller CPU (Q Series)	3 - 25
3.1.9	Connecting to motion controller CPU (A Series)	3 - 25
3.1.10	Connecting to remote I/O station in MELSECNET/H network system	3 - 25
3.2	Connection Cable	3 - 26
3.2.1	RS-232 cable	3 - 27
3.2.2	RS-422 cable	3 - 30
3.3	Preparatory Procedure for Monitoring	3 - 32
3.3.1	Installing OS onto GOT	3 - 33
3.3.2	Checking OS installation on GOT	3 - 34
3.3.3	Setting communication interface (Communication settings)	3 - 35
3.3.4	Downloading project data	3 - 40
3.3.5	Attaching communication unit and connecting cable	3 - 41
3.3.6	Verifying GOT recognizes controllers	3 - 46
3.3.7	Checking for normal monitoring	3 - 49
3.4	Precautions	3 - 52
3.5	List of Functions Added by Version Upgrade	3 - 53

4. COMPUTER LINK CONNECTION 4 - 1 to 4 - 60

4.1	System Configuration	4 - 2
4.1.1	Connecting to QCPU (Q mode)	4 - 2
4.1.2	Connecting to QCPU (A mode)	4 - 6
4.1.3	Connecting to QnACPU type	4 - 8
4.1.4	Connecting to QnASCPU type	4 - 12
4.1.5	Connecting to AnCPU type	4 - 15
4.1.6	Connecting to AnSCPU type	4 - 17
4.1.7	Connecting to motion controller CPU (Q Series)	4 - 19
4.1.8	Connecting to motion controller CPU (A Series)	4 - 19
4.1.9	Connecting to remote I/O station in MELSECNET/H network system	4 - 19
4.2	Connection Cable	4 - 20
4.2.1	RS-232 cable	4 - 21
4.2.2	RS-422 cable	4 - 25
4.3	Preparatory Procedures for Monitoring	4 - 27

4.3.1	Installing OS onto GOT	4 - 28
4.3.2	Checking OS installation on GOT	4 - 29
4.3.3	Setting communication interface (Communication settings).....	4 - 30
4.3.4	Downloading project data	4 - 35
4.3.5	Attaching communication unit and connecting cable.....	4 - 36
4.3.6	Verifying GOT recognizes controllers	4 - 41
4.3.7	Checking for normal monitoring.....	4 - 43
4.4	PLC Side Setting	4 - 46
4.4.1	Connecting serial communication module (Q Series)	4 - 47
4.4.2	Connecting serial communication module (QnA Series)	4 - 50
4.4.3	Connecting computer link module	4 - 53
4.5	Precautions	4 - 59
4.6	List of Functions Added by Version Upgrade	4 - 60

5. MELSECNET/H CONNECTION (PLC TO PLC NETWORK) 5 - 1 to 5 - 32

5.1	System Configuration	5 - 2
5.1.1	Connecting to optical loop system.....	5 - 3
5.1.2	Connecting to the coaxial bus system	5 - 5
5.2	Preparatory Procedures for Monitoring	5 - 7
5.2.1	Installing OS onto GOT	5 - 8
5.2.2	Checking OS installation on GOT.....	5 - 9
5.2.3	Setting communication interface (Communication settings).....	5 - 10
5.2.4	Downloading project data	5 - 14
5.2.5	Attaching communication unit and connecting cable.....	5 - 15
5.2.6	Verifying GOT recognizes controllers	5 - 19
5.2.7	Checking for normal monitoring.....	5 - 21
5.3	PLC Side Setting	5 - 25
5.4	Precautions	5 - 31
5.5	List of Functions Added by Version Upgrade	5 - 32

6. MELSECNET/10 CONNECTION (PLC TO PLC NETWORK) 6 - 1 to 6 - 50

6.1	System Configuration	6 - 2
6.1.1	Connecting to optical loop system.....	6 - 3
6.1.2	Connecting to the coaxial bus system	6 - 5
6.2	Preparatory Procedures for Monitoring	6 - 7
6.2.1	Installing OS onto GOT	6 - 8
6.2.2	Checking OS installation on GOT.....	6 - 9
6.2.3	Setting communication interface (Communication settings).....	6 - 10
6.2.4	Downloading project data	6 - 16
6.2.5	Attaching communication unit and connecting cable.....	6 - 17
6.2.6	Verifying GOT recognizes controllers	6 - 21
6.2.7	Checking for normal monitoring.....	6 - 23
6.3	PLC Side Setting	6 - 27
6.3.1	Connecting to MELSECNET/H network module	6 - 27
6.3.2	Connecting to MELSECNET/10 network module (QnA Series)	6 - 33

6.3.3	Connecting to MELSECNET/10 network module (A Series)	6 - 41
6.4	Precautions	6 - 49
6.5	List of Functions Added by Version Upgrade	6 - 50

7. CC-Link CONNECTION (INTELLIGENT DEVICE STATION) 7 - 1 to 7 - 60

7.1	System Configuration	7 - 2
7.1.1	Connecting with CC-Link Ver.1 compatible	7 - 2
7.1.2	Connecting with CC-Link Ver.2 compatible	7 - 4
7.1.3	Connecting with CC-Link Ver.1/Ver.2 compatibles mixed	7 - 5
7.2	Preparatory Procedures for Monitoring	7 - 7
7.2.1	Installing OS onto GOT	7 - 8
7.2.2	Checking OS installation on GOT	7 - 9
7.2.3	Setting communication interface (Communication settings)	7 - 10
7.2.4	Downloading project data	7 - 16
7.2.5	Attaching communication unit and connecting cable	7 - 17
7.2.6	Verifying GOT recognizes controllers	7 - 20
7.2.7	Checking for normal monitoring	7 - 22
7.3	PLC Side Setting	7 - 25
7.3.1	Connecting to CC-Link module (Q Series) with Ver.1 compatible	7 - 26
7.3.2	Connecting to CC-Link module (Q Series) with Ver.2 compatible	7 - 31
7.3.3	Connecting to CC-Link module (Q Series) with Ver.1/Ver.1 compatibles mixed	7 - 36
7.3.4	Connecting to CC-Link module (QnA Series)	7 - 41
7.3.5	Connecting to CC-Link module (A Series)	7 - 49
7.4	Precautions	7 - 58
7.5	List of Functions Added by Version Upgrade	7 - 59

8. CC-Link CONNECTION (Via G4) 8 - 1 to 8 - 24

8.1	System Configuration	8 - 2
8.1.1	Connecting to QCPU (Q mode)	8 - 2
8.1.2	Connecting to motion controller CPU (Q Series)	8 - 4
8.2	Preparatory Procedures for Monitoring	8 - 5
8.2.1	Installing OS onto GOT	8 - 6
8.2.2	Checking OS installation on GOT	8 - 7
8.2.3	Setting communication interface (Communication settings)	8 - 8
8.2.4	Downloading project data	8 - 10
8.2.5	Attaching communication unit and connecting cable	8 - 11
8.2.6	Verifying GOT recognizes controllers	8 - 14
8.2.7	Checking for normal monitoring	8 - 16
8.3	PLC Side Settings	8 - 18
8.4	List of Functions Added by Version Upgrade	8 - 23

9. ETHERNET CONNECTION 9 - 1 to 9 - 40

9.1	System Configuration	9 - 2
-----	----------------------------	-------

9.2	Preparatory Procedures for Monitoring	9 - 4
9.2.1	Installing OS onto GOT	9 - 5
9.2.2	Checking OS installation on GOT	9 - 6
9.2.3	Setting communication interface (Communication settings).....	9 - 7
9.2.4	Downloading project data	9 - 12
9.2.5	Attaching communication unit and connecting cable.....	9 - 13
9.2.6	Verifying GOT recognizes controllers	9 - 14
9.2.7	Checking for normal monitoring.....	9 - 16
9.3	PLC Side Setting	9 - 20
9.3.1	Connecting to Ethernet module (Q Series).....	9 - 20
9.3.2	Connecting to Ethernet module (QnA Series)	9 - 26
9.3.3	Connecting to Ethernet module (A Series).....	9 - 32
9.4	Precautions	9 - 38
9.5	List of Functions Added by Version Upgrade	9 - 39

Connection Manual 2/3

THIRD PARTY PLC CONNECTIONS

10. CONNECTION TO OMRON PLC 10 - 1 to 10 - 66

10.1	System Configuration	10 - 2
10.1.1	When connecting to CPM1, CPM1A, CPM2A or CPM2C	10 - 2
10.1.2	Connecting to CQM1, CQM1H, CJ1 or CP1	10 - 6
10.1.3	Connecting to C200HS, C200H, C200H or CS1	10 - 12
10.1.4	Connecting to C1000H/C2000H, CV500/CV1000/CV2000, CVM1	10 - 18
10.2	Connection Cable	10 - 22
10.2.1	RS-232 cable	10 - 23
10.2.2	RS-422 cable	10 - 26
10.3	Preparatory Procedures for Monitoring	10 - 31
10.3.1	Installing OS onto GOT	10 - 32
10.3.2	Checking OS installation on GOT	10 - 33
10.3.3	Setting communication interface (Communication settings).....	10 - 34
10.3.4	Downloading project data	10 - 37
10.3.5	Attaching communication unit and connecting cable.....	10 - 38
10.3.6	Verifying GOT recognizes controllers	10 - 43
10.3.7	Checking for normal monitoring.....	10 - 45
10.4	PLC Side Setting	10 - 48
10.4.1	Connecting CPM2A, CQM1, CQM1H, C200H or RS-232C adapter	10 - 49
10.4.2	Connecting CJ1, CS1 or CP1	10 - 50
10.4.3	Connecting CV500/CV1000/CV2000 or CVM1	10 - 53
10.4.4	Connecting connection cable	10 - 55
10.4.5	Connecting rack type host link unit.....	10 - 56
10.4.6	Connecting serial communication unit.....	10 - 61
10.4.7	Connecting communication board, serial communication board (CQM1-SCB41).....	10 - 62
10.4.8	Connecting serial communication board (CS1W-SCB21, CS1W-SCB41)	10 - 63
10.4.9	Connecting RS-422A/485 Option board	10 - 65
10.5	List of Functions Added by Version Upgrade	10 - 66

11. CONNECTON TO KEYENCE PLC

11 - 1 to 11 - 36

11.1	System configuration	11 - 2
11.1.1	Connecting to KV-1000.....	11 - 3
11.1.2	Connecting to KV-700.....	11 - 6
11.2	Connection cable	11 - 9
11.2.1	RS-232 cable.....	11 - 10
11.2.2	RS-422 cable.....	11 - 13
11.2.3	RS-485 cable.....	11 - 15
11.3	Preparatory Procedures for Monitoring	11 - 17
11.3.1	Installing OS onto GOT.....	11 - 18
11.3.2	Checking OS installation on GOT.....	11 - 18
11.3.3	Setting communication interface (Communication settings).....	11 - 20
11.3.4	Downloading project data.....	11 - 23
11.3.5	Attaching communication unit and connecting cable.....	11 - 24
11.3.6	Verifying GOT recognizes controllers.....	11 - 29
11.3.7	Checking for normal monitoring.....	11 - 31
11.4	PLC Side Setting	11 - 33
11.4.1	Connecting KV-1000.....	11 - 33
11.4.2	Connecting KV-700.....	11 - 33
11.4.3	Connecting multi-communication unit (KV-L20R, KV-L20).....	11 - 34
11.5	List of Functions Added by Version Upgrade	11 - 36

12. CONNECTION TO SHARP PLC

12 - 1 to 12 - 42

12.1	System Configuration	12 - 2
12.1.1	Connecting to JW-21CU or JW-22CU.....	12 - 2
12.1.2	Connecting to JW-31CUH, JW-32CUH or JW-33CUH.....	12 - 5
12.1.3	Connecting to JW-50CUH.....	12 - 8
12.1.4	Connecting to JW-70CUH, JW-100CUH or JW-100CU.....	12 - 10
12.1.5	Connecting to Z-512J.....	12 - 13
12.2	Connection Cable	12 - 15
12.2.1	RS-232 cable.....	12 - 16
12.2.2	RS-422 cable.....	12 - 18
12.3	Preparatory Procedures for Monitoring	12 - 21
12.3.1	Installing OS onto GOT.....	12 - 22
12.3.2	Checking OS installation on GOT.....	12 - 23
12.3.3	Setting communication interface (Communication settings).....	12 - 24
12.3.4	Downloading project data.....	12 - 26
12.3.5	Attaching communication unit and connecting cable.....	12 - 27
12.3.6	Verifying GOT recognizes controllers.....	12 - 31
12.3.7	Checking for normal monitoring.....	12 - 33
12.4	PLC Side Setting	12 - 35
12.4.1	Connecting to JW-22CU, JW-70CUH, JW-100CUH or JW-100CU.....	12 - 36
12.4.2	Connecting to JW-32CUH, JW-33CUH or Z-512J.....	12 - 37
12.4.3	Connecting to the link unit (JW-31CM).....	12 - 38
12.4.4	Connecting to the link unit (JW-10CM or ZW-10CM).....	12 - 40

13. CONNECTION TO JTEKT PLC**13 - 1 to 13 - 44**

13.1	System Configuration	13 - 2
13.1.1	Connecting to PC3JG or PC3JG-P	13 - 2
13.1.2	Connecting to PC3J or PC3JL.....	13 - 5
13.1.3	Connecting to PC2J.....	13 - 9
13.1.4	Connecting to PC2JC, PC2J16P or PC2J16PR.....	13 - 12
13.2	Connection Cable	13 - 15
13.2.1	RS-232 cable.....	13 - 15
13.2.2	RS-422 cable.....	13 - 17
13.3	Preparatory Procedures for Monitoring	13 - 21
13.3.1	Installing OS onto GOT	13 - 22
13.3.2	Checking OS installation on GOT.....	13 - 23
13.3.3	Setting communication interface (Communication settings).....	13 - 24
13.3.4	Downloading project data	13 - 27
13.3.5	Attaching communication unit and connecting cable.....	13 - 28
13.3.6	Verifying GOT recognizes controllers.....	13 - 32
13.3.7	Checking for normal monitoring.....	13 - 34
13.4	PLC Side Setting	13 - 36
13.4.1	Connecting to PC3JG, PC3JG-P, PC3J, PC3JL or PC2J	13 - 36
13.4.2	Connecting to PC2JC.....	13 - 37
13.4.3	Connecting to PC2J16P or PC2J16PR	13 - 38
13.4.4	RS-232/RS-422 interface converter setting.....	13 - 39
13.4.5	Link unit setting.....	13 - 40
13.4.6	Station NO. settings.....	13 - 41
13.5	Precautions	13 - 42
13.5.1	Station No. settings of the PLC side.....	13 - 42
13.5.2	GOT clock function	13 - 42
13.5.3	System configuration	13 - 42
13.5.4	System alarm.....	13 - 42
13.5.5	Version of PC3J.....	13 - 42
13.5.6	Device range	13 - 42
13.6	List of Functions Added by Version Upgrade	13 - 43

14. CONNECTION TO TOSHIBA PLC**14 - 1 to 14 - 28**

14.1	System Configuration	14 - 2
14.1.1	Connecting to T2 (PU224), T2E, T2N, T3 or T3H	14 - 2
14.1.2	Connecting to model 2000(S2), model 3000 (S3)	14 - 5
14.2	Connection Cable	14 - 7
14.2.1	RS-232 cable.....	14 - 8
14.2.2	RS-422 cable.....	14 - 10
14.3	Preparatory Procedures for Monitoring	14 - 12
14.3.1	Installing OS onto GOT	14 - 13
14.3.2	Checking OS installation on GOT.....	14 - 14
14.3.3	Setting communication interface (Communication settings).....	14 - 15

14.3.4	Downloading project data	14 - 17
14.3.5	Attaching communication unit and connecting cable	14 - 18
14.3.6	Verifying GOT recognizes controllers	14 - 22
14.3.7	Checking for normal monitoring	14 - 24
14.4	PLC Side Setting	14 - 26
14.4.1	Connecting to T2 (PU224), T2E or T2N	14 - 26
14.4.2	Connecting to T3 or T3H	14 - 27
14.4.3	Connecting to model 3000 (S2/S3).....	14 - 27
14.5	List of Functions Added by Version Upgrade	14 - 28

15. CONNECTION TO HITACHI IES PLC

15 - 1 to 15 - 28

15.1	System Configuration	15 - 2
15.1.1	Connecting to large-sized H series	15 - 2
15.1.2	Connecting to H-200 to 252 series, H series board type or EH-150 series	15 - 5
15.2	Connection Cable	15 - 6
15.2.1	RS-232 cable	15 - 7
15.2.2	RS-422 cable	15 - 9
15.3	Preparatory Procedures for Monitoring	15 - 11
15.3.1	Installing OS onto GOT	15 - 12
15.3.2	Checking OS installation on GOT	15 - 13
15.3.3	Setting communication interface (Communication settings).....	15 - 14
15.3.4	Downloading project data	15 - 17
15.3.5	Attaching communication unit and connecting cable	15 - 18
15.3.6	Verifying GOT recognizes controllers	15 - 22
15.3.7	Checking for normal monitoring	15 - 24
15.4	PLC Side Setting	15 - 26
15.5	List of Functions Added by Version Upgrade	15 - 28

16. CONNECTION TO HITACHI PLC

16 - 1 to 16 - 28

16.1	System Configuration	16 - 2
16.1.1	Connecting to S10V Series.....	16 - 2
16.1.2	Connecting to S10mini Series	16 - 5
16.2	Connection Cable	16 - 7
16.2.1	RS-232 cable	16 - 8
16.2.2	RS-422 cable	16 - 10
16.3	Preparatory Procedures for Monitoring	16 - 11
16.3.1	Installing OS onto GOT	16 - 12
16.3.2	Checking OS installation on GOT	16 - 13
16.3.3	Setting communication interface (Communication settings).....	16 - 14
16.3.4	Downloading project data	16 - 17
16.3.5	Attaching communication unit and connecting cable	16 - 18
16.3.6	Verifying GOT recognizes controllers	16 - 22
16.3.7	Checking for normal monitoring	16 - 24
16.4	PLC Side Setting	16 - 26
16.4.1	Connecting to communication module.....	16 - 27

17. CONNECTION TO FUJI FA PLC **17 - 1 to 17 - 42**

17.1	System Configuration	17 - 2
17.1.1	Connecting to MICREX-F55	17 - 2
17.1.2	Connecting to MICREX-F70	17 - 4
17.1.3	Connecting to MICREX-F120S/140S/150S	17 - 7
17.2	Connection Cable	17 - 10
17.2.1	RS-232 cable	17 - 11
17.2.2	RS-485 cable	17 - 13
17.3	Preparatory Procedures for Monitoring	17 - 15
17.3.1	Installing OS onto GOT	17 - 16
17.3.2	Checking OS installation on GOT	17 - 17
17.3.3	Setting communication interface (Communication settings)	17 - 18
17.3.4	Downloading project data	17 - 21
17.3.5	Attaching communication unit and connecting cable	17 - 22
17.3.6	Verifying GOT recognizes controllers	17 - 26
17.3.7	Checking for normal monitoring	17 - 28
17.4	PLC Side Setting	17 - 30
17.4.1	Connecting to NV1L-RS2, NC1L-RS2	17 - 31
17.4.2	Connecting to NC1L-RS4	17 - 33
17.4.3	Connecting to FFU120B	17 - 35
17.4.4	RS-232/RS-422 interface converter setting	17 - 37
17.4.5	Station NO. settings	17 - 39
17.5	Precautions	17 - 40
17.5.1	Station No. settings of the PLC side	17 - 40
17.5.2	GOT clock function	17 - 40
17.6	List of Functions Added by Version Upgrade	17 - 41

18. CONNECTION TO MATSUSHITA PLC **18 - 1 to 18 - 42**

18.1	System Configuration	18 - 2
18.1.1	Connecting to FP0-C16CT or FP0-C32CT	18 - 2
18.1.2	Connecting to FP1-C24C or FP1-C40C	18 - 4
18.1.3	Connecting to FP2 or FP2SH	18 - 6
18.1.4	Connecting to FP3	18 - 8
18.1.5	Connecting to FP5	18 - 10
18.1.6	Connecting to FP10 (S)	18 - 12
18.1.7	Connecting to FP10SH	18 - 14
18.1.8	Connecting to FP-M (C20TC) or FP-M (C32TC)	18 - 16
18.1.9	Connecting to FP SIGMA	18 - 17
18.1.10	Connecting to FP-X	18 - 19
18.2	Connection Cable	18 - 22
18.2.1	RS-232 Cable	18 - 22
18.2.2	RS-422 Cable	18 - 25
18.3	Preparatory Procedures for Monitoring	18 - 27
18.3.1	Installing OS onto GOT	18 - 28

18.3.2	Checking OS installation on GOT	18 - 29
18.3.3	Setting communication interface (Communication settings).....	18 - 30
18.3.4	Downloading project data	18 - 32
18.3.5	Attaching communication unit and connecting cable.....	18 - 33
18.3.6	Verifying GOT recognizes controllers	18 - 35
18.3.7	Checking for normal monitoring.....	18 - 37
18.4	PLC Side Setting	18 - 39
18.5	List of Functions Added by Version Upgrade	18 - 41

19. CONNECTION TO YASKAWA PLC 19 - 1 to 19 - 60

19.1	Serial Connection	19 - 2
19.1.1	System configuration(GL120 or GL130).....	19 - 2
19.1.2	System configuration(GL60S, GL60H or GL70H).....	19 - 4
19.1.3	System configuration(MP-920/930, CP-9300MS/9200(H) or PROGIC-8).....	19 - 6
19.1.4	System configuration(MP-940)	19 - 9
19.1.5	System configuration(CP-9200SH).....	19 - 11
19.1.6	System configuration(MP2200 or MP2300).....	19 - 13
19.1.7	Connection Cable	19 - 15
19.1.8	Preparatory Procedure for Monitoring	19 - 22
19.1.9	Installing OS onto GOT.....	19 - 23
19.1.10	Checking OS installation on GOT.....	19 - 24
19.1.11	Setting communication interface (Communication settings).....	19 - 25
19.1.12	Downloading project data	19 - 28
19.1.13	Attaching communication unit and connecting cable.....	19 - 29
19.1.14	Verifying GOT recognizes controllers	19 - 33
19.1.15	Checking for normal monitoring.....	19 - 35
19.1.16	PLC Side Setting	19 - 36
19.2	Ethernet Connection	19 - 37
19.2.1	System configuration(MP-920)	19 - 37
19.2.2	System configuration(MP2200 or MP2300).....	19 - 39
19.2.3	Preparatory procedures for monitoring	19 - 40
19.2.4	Installing OS onto GOT.....	19 - 41
19.2.5	Checking OS installation on GOT.....	19 - 42
19.2.6	Setting communication interface (Communication settings).....	19 - 43
19.2.7	Downloading project data	19 - 48
19.2.8	Attaching communication unit and connecting cable.....	19 - 49
19.2.9	Verifying GOT recognizes controller.....	19 - 50
19.2.10	Checking for normal monitoring.....	19 - 52
19.2.11	PLC side setting.....	19 - 56
19.2.12	Precautions.....	19 - 59
19.3	List of Functions Added by Version Upgrade	19 - 60

20. CONNECTION TO YOKOGAWA PLC 20 - 1 to 20 - 62

20.1	Serial Connection	20 - 2
20.1.1	System configuration(FA-M3).....	20 - 2
20.1.2	System configuration(FA500)	20 - 5
20.1.3	System configuration(STARDOM).....	20 - 7

20.1.4	Connection Cable	20 - 8
20.1.5	Preparatory Procedure for Monitoring	20 - 14
20.1.6	Installing OS onto GOT	20 - 15
20.1.7	Checking OS installation on GOT	20 - 16
20.1.8	Setting communication interface (Communication settings).....	20 - 17
20.1.9	Downloading project data	20 - 20
20.1.10	Attaching communication unit and connecting cable.....	20 - 21
20.1.11	Verifying GOT recognizes controllers	20 - 25
20.1.12	Checking for normal monitoring.....	20 - 27
20.1.13	PLC side setting	20 - 28
20.1.14	Connecting CPU port/D-sub 9-pin conversion cable	20 - 29
20.1.15	Connecting PC link module (F3LC01-1N, F3LC11-1N, F3LC11-2N).....	20 - 30
20.1.16	Connecting PC link module (F3LC11-1F, F3LC12-1F)	20 - 32
20.1.17	Connecting PC link module (LC01-0N, LC02-0N).....	20 - 34
20.1.18	Connecting to STARDOM	20 - 36
20.1.19	Precautions.....	20 - 38
20.2	Ethernet Connection	20 - 39
20.2.1	System configuration(FA-M3).....	20 - 39
20.2.2	Preparatory procedures for monitoring	20 - 41
20.2.3	Installing OS onto GOT	20 - 42
20.2.4	Checking OS installation on GOT.....	20 - 43
20.2.5	Setting communication interface (Communication settings).....	20 - 44
20.2.6	Downloading project data	20 - 49
20.2.7	Attaching communication unit and connecting cable.....	20 - 50
20.2.8	Verifying GOT recognizes controllers	20 - 51
20.2.9	Checking for normal monitoring.....	20 - 53
20.2.10	PLC side setting	20 - 57
20.2.11	Connecting to Ethernet Interface Module (F3LE01-5T, F3LE11-0T).....	20 - 58
20.2.12	Connecting to Ethernet Interface Module (F3LE12-0T).....	20 - 59
20.2.13	Precautions.....	20 - 60
20.3	List of Functions Added by Version Upgrade	20 - 61

21. CONNECTION TO ALLEN-BRADLEY PLC

21 - 1 to 21 - 50

21.1	Serial Connection	21 - 2
21.1.1	System Configuration (SLC500 Series).....	21 - 2
21.1.2	System Configuration (MicroLogix1000/1200/1500 Series)	21 - 4
21.1.3	System Configuration (Control/Compact/FlexLogix Series)	21 - 6
21.1.4	Connection Cable	21 - 7
21.1.5	Preparatory Procedures for Monitoring	21 - 11
21.1.6	Installing OS onto the GOT	21 - 12
21.1.7	Checking OS installation on GOT.....	21 - 13
21.1.8	Setting communication interface (Communication settings).....	21 - 14
21.1.9	Downloading project data	21 - 20
21.1.10	Attaching communication unit and connecting cable.....	21 - 21
21.1.11	Verifying GOT recognizes controllers	21 - 24
21.1.12	Checking for normal monitoring.....	21 - 27
21.1.13	PLC Side Setting	21 - 30
21.2	Ethernet Connection	21 - 32
21.2.1	System configuration when connecting to ControlLogix, CompactLogix, FlexLogix.....	21 - 32

21.2.2	Preparatory Procedures for Monitoring.....	21 - 34
21.2.3	Installing OS onto GOT.....	21 - 35
21.2.4	Checking OS installation on GOT.....	21 - 36
21.2.5	Setting communication interface (Communication settings).....	21 - 37
21.2.6	Downloading project data.....	21 - 40
21.2.7	Attaching communication unit and connecting cable.....	21 - 41
21.2.8	Verifying GOT recognizes connected equipment.....	21 - 42
21.2.9	Checking for normal monitoring.....	21 - 44
21.2.10	PLC side setting.....	21 - 48
21.2.11	Precautions.....	21 - 48
21.3	List of Functions Added by Version Upgrade.....	21 - 49

22. CONNECTION TO SIEMENS PLC

22 - 1 to 22 - 26

22.1	System Configuration.....	22 - 2
22.1.1	Connecting to a SIMATIC S7-300/400 Series.....	22 - 3
22.1.2	Connecting to a SIMATIC S7-200 Series.....	22 - 4
22.2	Connection Cable.....	22 - 5
22.3	Preparatory Procedures for Monitoring.....	22 - 7
22.3.1	Installing OS onto GOT.....	22 - 8
22.3.2	Checking OS installation on GOT.....	22 - 9
22.3.3	Setting communication interface (Communication settings).....	22 - 10
22.3.4	Downloading project data.....	22 - 14
22.3.5	Attaching communication unit and connecting cable.....	22 - 15
22.3.6	Verifying GOT recognizes controllers.....	22 - 18
22.3.7	Checking for normal monitoring.....	22 - 21
22.4	PLC Side Setting.....	22 - 23
22.4.1	Connecting to HMI Adapter.....	22 - 23
22.4.2	Connecting to SIMATIC S7-200.....	22 - 24
22.5	Precautions.....	22 - 25
22.6	List of Functions Added by Version Upgrade.....	22 - 26

Connection Manual 3/3

MICROCOMPUTER CONNECTION

23. MICROCOMPUTER CONNECTION

23 - 1 to 23 - 100

23.1	Microcomputer Connection.....	23 - 2
23.2	System Configuration.....	23 - 4
23.3	Connection Cable.....	23 - 6
23.3.1	RS-232 cable.....	23 - 6
23.3.2	RS-422 cable.....	23 - 9
23.4	Device Data Area.....	23 - 11
23.4.1	D devices.....	23 - 13
23.4.2	R devices.....	23 - 17
23.4.3	L devices.....	23 - 17

23.4.4	M devices	23 - 19
23.4.5	SD devices	23 - 20
23.4.6	SM devices	23 - 23
23.5	Message Formats	23 - 26
23.5.1	Data format type and application	23 - 26
23.5.2	List of commands	23 - 28
23.5.3	Formats 1, 2 (GOT-A900 series microcomputer connection)	23 - 31
23.5.4	Formats 3 to 6 (A compatible 1C frame)	23 - 44
23.5.5	Formats 7 to 10 (QnA compatible 3C/4C frame)	23 - 49
23.5.6	Formats 11 to 13 (Digital Electronics Corporation's memory link method)	23 - 57
23.5.7	Formats 14, 15 (GOT-F900 series microcomputer connection)	23 - 63
23.6	Preparatory Procedures for Monitoring	23 - 78
23.6.1	Installing OS onto GOT	23 - 79
23.6.2	Checking OS installation on GOT	23 - 80
23.6.3	Setting communication interface (Communication settings)	23 - 81
23.6.4	Downloading project data	23 - 84
23.6.5	Attaching communication unit and connecting cable	23 - 85
23.6.6	Verifying GOT recognizes controllers	23 - 90
23.6.7	Checking for normal monitoring	23 - 92
23.7	System Configuration Examples	23 - 94
23.8	Precautions	23 - 98
23.9	List of Functions Added by Version Upgrade	23 - 99

24. CONNECTION TO OMRON TEMPERATURE CONTROLLER

24 - 1 to 24 - 34

24.1	System configuration	24 - 2
24.1.1	Connecting E5AN, E5EN	24 - 2
24.1.2	Connecting to E5CN, E5GN	24 - 4
24.1.3	Connecting to E5ZN	24 - 6
24.2	Connection Cable	24 - 8
24.2.1	RS-232 cable	24 - 9
24.2.2	RS-485 cable	24 - 11
24.3	Preparatory Procedures for Monitoring	24 - 14
24.3.1	Installing OS onto GOT	24 - 15
24.3.2	Checking OS installation on GOT	24 - 16
24.3.3	Setting communication interface (Communication settings)	24 - 17
24.3.4	Downloading project data	24 - 20
24.3.5	Attaching communication unit and connecting cable	24 - 21
24.3.6	Verifying GOT recognizes controllers	24 - 24
24.3.7	Checking for normal monitoring	24 - 26
24.4	Temperature Controller Side Setting	24 - 28
24.4.1	Connecting E5AN, E5EN, E5CN, E5GN	24 - 28
24.4.2	Connecting E5ZN	24 - 28
24.4.3	Connecting to interface converter (K3SC-10)	24 - 29

24.4.4	Station NO. settings.....	24 - 31
24.5	Precautions	24 - 32
24.6	List of Functions Added by Version Upgrade	24 - 33

25. CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER

25 - 1 to 25 - 28

25.1	System Configuration	25 - 2
25.1.1	Connecting to ACS-13A, JC, JCM-33A, JIR-301-M Series	25 - 2
25.1.2	Connecting to FCD-100, FCR-100, FCR-23A, FIR, PC-900 Series	25 - 4
25.1.3	Connecting to DCL-33A Series.....	25 - 5
25.2	Connection Cable	25 - 6
25.2.1	RS-232 cable	25 - 7
25.2.2	RS-485 cable	25 - 9
25.3	Preparatory Procedures for Monitoring	25 - 10
25.3.1	Installing OS onto GOT.....	25 - 11
25.3.2	Checking OS installation on GOT.....	25 - 12
25.3.3	Setting communication interface (Communication settings).....	25 - 13
25.3.4	Downloading project data	25 - 16
25.3.5	Attaching communication unit and connecting cable.....	25 - 17
25.3.6	Verifying GOT recognizes controllers	25 - 19
25.3.7	Checking for normal monitoring.....	25 - 21
25.4	Indicating controller Side Setting	25 - 23
25.4.1	Connecting to ACS-13A, DCL-33A, JC, JCM-33A, JIR-301-M Series	25 - 24
25.4.2	Connecting to FCD-100, FCR-100, FCR-23A, FIR, PC-900 Series	25 - 24
25.4.3	Connecting to communication converter (IF-400).....	25 - 24
25.4.4	Station NO. settings.....	25 - 25
25.5	Precautions	25 - 26
25.6	List of Functions Added by Version Upgrade	25 - 27

26. CONNECTION TO CHINO CONTROLLER

26 - 1 to 26 - 42

26.1	System Configuration	26 - 2
26.1.1	Connecting to LT300, LT400, DZ1000 or DZ2000 series.....	26 - 2
26.1.2	Connecting to LT230, LT830	26 - 5
26.1.3	Connecting to GT120.....	26 - 7
26.2	Connection Cable	26 - 9
26.2.1	RS-232 cable	26 - 10
26.2.2	RS-422 cable	26 - 12
26.2.3	RS-485 cable	26 - 15
26.3	Preparatory Procedures for Monitoring	26 - 19
26.3.1	Installing OS onto GOT.....	26 - 20
26.3.2	Checking OS installation on GOT.....	26 - 21
26.3.3	Setting communication interface (Communication settings).....	26 - 22
26.3.4	Downloading project data	26 - 25
26.3.5	Attaching communication unit and connecting cable.....	26 - 26
26.3.6	Verifying GOT recognizes controllers	26 - 31

26.3.7	Checking for normal monitoring.....	26 - 33
26.4	Controller Side Setting	26 - 35
26.4.1	Connecting to LT230, LT300 Series.....	26 - 35
26.4.2	Connecting to LT400, LT830 Series.....	26 - 36
26.4.3	Connecting to DZ1000, DZ2000 Series.....	26 - 36
26.4.4	Connecting to GT120 Series.....	26 - 37
26.4.5	Connecting SC8-10.....	26 - 38
26.4.6	Station NO. settings.....	26 - 39
26.5	Precautions	26 - 40
26.5.1	Station number settings of temperature controller.....	26 - 40
26.5.2	GOT clock function.....	26 - 40
26.5.3	Cutting the portion of multipul connection of the controller.....	26 - 40
26.6	List of Functions Added by Version Upgrade	26 - 41

27. CONNECTION TO FUJI SYS TEMPERATURE CONTROLLER

27 - 1 to 27 - 38

27.1	System Configuration	27 - 2
27.1.1	Connecting to PXR3, PXR4, PXR5 or PXR9.....	27 - 2
27.1.2	Connecting to PXG4, PXG5, PXG9 or PXH9.....	27 - 4
27.2	Connection Cable	27 - 6
27.2.1	RS-232 cable.....	27 - 7
27.2.2	RS-485 cable.....	27 - 10
27.3	Preparatory Procedures for Monitoring	27 - 14
27.3.1	Installing OS onto GOT.....	27 - 15
27.3.2	Checking OS installation on GOT.....	27 - 16
27.3.3	Setting communication interface (Communication settings).....	27 - 17
27.3.4	Downloading project data.....	27 - 19
27.3.5	Attaching communication unit and connecting cable.....	27 - 20
27.3.6	Verifying GOT recognizes controllers.....	27 - 23
27.3.7	Checking for normal monitoring.....	27 - 25
27.4	Temperature Controller Side Setting	27 - 27
27.4.1	Connecting to PXR3/4/5/9.....	27 - 27
27.4.2	Connecting to PXG4, PXG5 or PXG9.....	27 - 28
27.4.3	Connecting to PXH9.....	27 - 29
27.4.4	Connecting to interface converter (RC-77).....	27 - 30
27.4.5	Connecting to interface converter (SI-30A).....	27 - 32
27.4.6	Connecting to interface converter (KS-485).....	27 - 33
27.4.7	Connecting to interface converter (K3SC-10).....	27 - 34
27.4.8	Station NO. settings.....	27 - 36
27.5	Precautions	27 - 37
27.6	List of Functions Added by Version Upgrade	27 - 38

28. CONNECTION TO YAMATAKE TEMPERATURE CONTROLLER

28 - 1 to 28 - 44

28.1	System Configuration	28 - 2
------	----------------------	--------

28.1.1	Connecting to DMC10	28 - 2
28.1.2	Connecting to SDC15, SDC25/26 or SDC35/36.....	28 - 4
28.1.3	Connecting to SDC20/21	28 - 6
28.1.4	Connecting to SDC30/31	28 - 9
28.1.5	Connecting to SDC40A/40B/40G	28 - 11
28.2	Connection Cable	28 - 14
28.2.1	RS-232 cable	28 - 15
28.2.2	RS-485 cable	28 - 18
28.3	Preparatory Procedures for Monitoring	28 - 24
28.3.1	Installing OS onto GOT	28 - 25
28.3.2	Checking OS installation on GOT	28 - 26
28.3.3	Setting communication interface (Communication settings).....	28 - 27
28.3.4	Downloading project data	28 - 30
28.3.5	Attaching communication unit and connecting cable	28 - 31
28.3.6	Verifying GOT recognizes controllers	28 - 34
28.3.7	Checking for normal monitoring	28 - 36
28.4	Temperature Controller Side Setting	28 - 38
28.4.1	Connecting to DMC10	28 - 38
28.4.2	Connecting SDC40A/40B/40G	28 - 39
28.4.3	Connecting SDC15, SDC25/26, SDC35/36.....	28 - 39
28.4.4	Connecting SDC20/21, SDC30/31	28 - 40
28.4.5	Connecting CMC10L	28 - 40
28.4.6	Station NO. settings.....	28 - 42
28.5	Precautions	28 - 43
28.6	List of Functions Added by Version Upgrade	28 - 44

29. CONNECTION TO YOKOGAWA TEMPERATURE CONTROLLER

29 - 1 to 29 - 48

29.1	System Configuration	29 - 2
29.1.1	Connecting to GREEN Series.....	29 - 2
29.1.2	Connecting to UT100 Series.....	29 - 6
29.1.3	Connecting to UT2000 Series.....	29 - 8
29.2	Connection Cable	29 - 11
29.2.1	RS-232 cable	29 - 11
29.2.2	RS-485 cable	29 - 13
29.3	Preparatory Procedures for Monitoring	29 - 23
29.3.1	Installing OS onto GOT	29 - 24
29.3.2	Checking OS installation on GOT	29 - 25
29.3.3	Setting communication interface (Communication settings).....	29 - 26
29.3.4	Downloading project data	29 - 29
29.3.5	Attaching communication unit and connecting cable	29 - 30
29.3.6	Verifying GOT recognizes controllers	29 - 35
29.3.7	Checking for normal monitoring	29 - 37
29.4	Temperature Controller Side Setting	29 - 39
29.4.1	Connecting to GREEN Series.....	29 - 40
29.4.2	Connecting to UT100 Series.....	29 - 41
29.4.3	Connecting to UT2000 Series.....	29 - 42

29.4.4	Connecting to RS232C/RS485 converter.....	29 - 44
29.4.5	Station NO. settings.....	29 - 45
29.5	Precautions	29 - 46
29.6	List of Functions Added by Version Upgrade	29 - 47

30. CONNECTION TO RKC TEMPERATURE CONTROLLER

30 - 1 to 30 - 50

30.1	System Configuration	30 - 2
30.1.1	Connecting to H-PCP-J	30 - 2
30.1.2	Connecting to H-PCP-A or H-PCP-B.....	30 - 6
	Connecting to SRZ 9	
30.2	Connection Cable	30 - 13
30.2.1	RS-232 cable.....	30 - 14
30.2.2	RS-422 cable.....	30 - 16
30.2.3	RS-485 cable.....	30 - 19
30.3	Preparatory Procedures for Monitoring	30 - 23
30.3.1	Installing OS onto GOT	30 - 24
30.3.2	Checking OS installation on GOT.....	30 - 25
30.3.3	Setting communication interface (Communication settings).....	30 - 26
30.3.4	Downloading project data	30 - 29
30.3.5	Attaching communication unit and connecting cable.....	30 - 30
30.3.6	Verifying GOT recognizes controllers.....	30 - 35
30.3.7	Checking for normal monitoring.....	30 - 37
30.4	Temperature Controller Side Setting	30 - 39
30.4.1	Connecting to H-PCP-J	30 - 39
30.4.2	Connecting to H-PCP-A, H-PCP-B.....	30 - 42
30.4.3	Connecting to Z-TIO, Z-DIO	30 - 44
30.4.4	Connecting to Z-COM.....	30 - 46
30.4.5	Station No. settings	30 - 48
30.5	Precautions	30 - 49
30.6	List of Functions Added by Version Upgrade	30 - 50

31. INVERTER CONNECTION

31 - 1 to 31 - 32

31.1	System Configuration	31 - 2
31.1.1	Connecting to FREQROL A500/F500	31 - 2
31.1.2	Connecting to FREQROL E500/S500	31 - 5
31.1.3	Connecting to FREQROL A700/F700	31 - 7
31.2	Connection Cable	31 - 9
31.3	Preparatory Procedures for Monitoring	31 - 15
31.3.1	Installing OS onto GOT	31 - 16
31.3.2	Checking OS installation on GOT.....	31 - 17
31.3.3	Setting communication interface (Communication settings).....	31 - 18
31.3.4	Downloading project data	31 - 21
31.3.5	Attaching communication unit and connecting cable.....	31 - 22

31.3.6	Verifying GOT recognizes controllers	31 - 25
31.3.7	Checking for normal monitoring	31 - 27
31.4	FREQROL Series Inverter Side Settings	31 - 28
31.5	Precautions	31 - 30
31.6	List of Functions Added by Version Upgrade	31 - 31

32. SERVO AMPLIFIER CONNECTION 32 - 1 to 32 - 34

32.1	System Configuration	32 - 2
32.1.1	Connecting to the MELSERVO-J2-Super series	32 - 2
32.1.2	Connecting to the MELSERVO-J2M series	32 - 4
32.1.3	Connecting to the MELSERVO-J3 Series	32 - 6
32.2	Connection Cable	32 - 9
32.2.1	RS-232 cable	32 - 9
32.2.2	RS-422 cable	32 - 11
32.3	Preparatory Procedures for Monitoring	32 - 14
32.3.1	Installing OS onto GOT	32 - 15
32.3.2	Checking OS installation on GOT	32 - 16
32.3.3	Setting communication interface (Communication settings)	32 - 17
32.3.4	Downloading project data	32 - 19
32.3.5	Attaching communication unit and connecting cable	32 - 20
32.3.6	Verifying GOT recognizes controllers	32 - 24
32.3.7	Checking for normal monitoring	32 - 26
32.4	Setting on Servo Amplifier Side	32 - 28
32.4.1	Connecting to the MELSERVO-J2-Super series	32 - 28
32.4.2	Connecting to the MELSERVO-J2M series	32 - 30
32.4.3	Connecting to the MELSERVO-J3 series	32 - 31
32.4.4	Station NO. settings	32 - 32
32.5	Precautions	32 - 33
32.6	List of Functions Added by Version Upgrade	32 - 34

33. CNC CONNECTION 33 - 1 to 33 - 90

33.1	Direct Connection To CPU	33 - 2
33.1.1	System Configuration	33 - 2
33.1.2	Connection Cable	33 - 4
33.1.3	Preparatory Procedures for Monitoring	33 - 6
33.1.4	Installing OS onto GOT	33 - 7
33.1.5	Checking OS installation on GOT	33 - 8
33.1.6	Setting communication interface (Communication settings)	33 - 9
33.1.7	Downloading project data	33 - 11
33.1.8	Attaching communication unit and connecting cable	33 - 12
33.1.9	Verifying GOT recognizes controllers	33 - 16
33.1.10	Checking for normal monitoring	33 - 18
33.1.11	Precautions	33 - 20
33.2	MELSECNET/10 Connection (PLC To PLC Network)	33 - 21
33.2.1	System Configuration	33 - 21

33.2.2	Preparatory Procedures for Monitoring	33 - 23
33.2.3	Installing OS onto GOT	33 - 24
33.2.4	Checking OS installation on GOT.....	33 - 25
33.2.5	Setting communication interface (Communication settings).....	33 - 26
33.2.6	Downloading project data	33 - 31
33.2.7	Attaching communication unit and connecting cable.....	33 - 32
33.2.8	Verifying GOT recognizes controllers	33 - 36
33.2.9	Checking for normal monitoring.....	33 - 38
33.2.10	CNC Side Settings.....	33 - 40
33.2.11	Precautions.....	33 - 43
33.3	CC-Link Connection (Intelligent Device Station)	33 - 44
33.3.1	System Configuration	33 - 44
33.3.2	Preparatory Procedures for Monitoring	33 - 46
33.3.3	Installing OS onto GOT	33 - 47
33.3.4	Checking OS installation on GOT.....	33 - 48
33.3.5	Setting communication interface (Communication settings).....	33 - 49
33.3.6	Downloading project data	33 - 55
33.3.7	Attaching communication unit and connecting cable.....	33 - 56
33.3.8	Verifying GOT recognizes controllers	33 - 59
33.3.9	Checking for normal monitoring.....	33 - 61
33.3.10	CNC Side Settings.....	33 - 64
33.3.11	Precautions.....	33 - 67
33.4	Ethernet Connection	33 - 68
33.4.1	System Configuration	33 - 68
33.4.2	Preparatory Procedures for Monitoring	33 - 70
33.4.3	Installing OS onto GOT	33 - 71
33.4.4	Checking OS installation on GOT.....	33 - 72
33.4.5	Setting communication interface (Communication settings).....	33 - 73
33.4.6	Downloading project data	33 - 78
33.4.7	Attaching communication unit and connecting cable.....	33 - 79
33.4.8	Verifying GOT recognizes controllers	33 - 80
33.4.9	Checking for normal monitoring.....	33 - 82
33.4.10	CNC Side Settings.....	33 - 86
33.4.11	Precautions.....	33 - 89
33.5	List of Functions Added by Version Upgrade	33 - 90

34. CONNECTION TO SOUND OUTPUT UNIT **34 - 1 to 34 - 14**

34.1	System Configuration	34 - 2
34.2	Preparatory Procedures for Monitoring	34 - 4
34.2.1	Installing OS onto GOT	34 - 5
34.2.2	Checking OS installation on GOT.....	34 - 6
34.2.3	Setting communication interface (Communication settings).....	34 - 7
34.2.4	Downloading project data	34 - 8
34.2.5	Attaching communication unit and connecting cable.....	34 - 9
34.2.6	Verifying GOT recognizes controllers	34 - 10
34.3	Precautions	34 - 12
34.4	List of Functions Added by Version Upgrade	34 - 13

35. CONNECTION TO EXTERNAL I/O DEVICE

35 - 1 to 35 - 22

35.1	System Configuration	35 - 2
35.2	Connection Cable	35 - 5
35.2.1	Connection cable between external I/O unit and operation panel	35 - 5
35.2.2	Connection cable between external I/O unit and connector/terminal block converter module	35 - 7
35.3	Connection Diagram	35 - 9
35.3.1	Connection diagram between external I/O unit and connector/terminal block converter module	35 - 9
35.3.2	Connection cable between connector/terminal block converter module and user-created original operation panel	35 - 11
35.4	Preparatory Procedures for Monitoring	35 - 12
35.4.1	Installing OS onto GOT	35 - 13
35.4.2	Checking OS installation on GOT	35 - 14
35.4.3	Setting communication interface (Communication settings)	35 - 15
35.4.4	Downloading project data	35 - 16
35.4.5	Attaching communication unit and connecting cable	35 - 17
35.4.6	Verifying GOT recognizes controllers	35 - 18
35.4.7	Checking for normal monitoring	35 - 20
35.5	Precautions	35 - 21
35.6	List of Functions Added by Version Upgrade	35 - 22

36. BAR CODE READER CONNECTION

36 - 1 to 36 - 20

36.1	System Configuration	36 - 2
36.2	Preparatory Procedures for Monitoring	36 - 4
36.2.1	Installing OS onto GOT	36 - 5
36.2.2	Checking OS installation on GOT	36 - 6
36.2.3	Setting communication interface (Communication settings)	36 - 7
36.2.4	Downloading project data	36 - 9
36.2.5	Attaching communication unit and connecting cable	36 - 10
36.2.6	Verifying GOT recognizes controllers	36 - 11
36.2.7	Checking for normal monitoring	36 - 13
36.3	Precautions	36 - 14
36.4	System Configuration Examples	36 - 15
36.5	List of Functions Added by Version Upgrade	36 - 19

37. VIDEO/RGB CONNECTION

37 - 1 to 37 - 24

37.1	System Configuration	37 - 2
37.1.1	Displaying video image on GOT	37 - 3
37.1.2	Displaying GOT screen on external monitor	37 - 6
37.2	Connection Cable	37 - 7
37.2.1	Coaxial cable	37 - 7
37.2.2	Analog RGB cable	37 - 10

37.3	Preparatory Procedures for Monitoring	37 - 12
37.3.1	Installing OS onto GOT	37 - 13
37.3.2	Checking OS installation on GOT.....	37 - 14
37.3.3	Setting communication interface (Communication settings).....	37 - 15
37.3.4	Downloading project data	37 - 17
37.3.5	Attaching option unit and connecting cable	37 - 18
37.3.6	Verifying GOT recognizes controllers	37 - 20
37.4	Precautions	37 - 22
37.4.1	Connecting to PC	37 - 22
37.4.2	Connecting to NEC PC-9800 (PC-9801, PC-9821, etc.) series	37 - 22
37.5	List of Functions Added by Version Upgrade	37 - 23

38. PRINTER CONNECTION 38 - 1 to 38 - 14

38.1	System Configuration	38 - 2
38.2	Preparatory Procedures for Monitoring	38 - 4
38.2.1	Installing OS onto GOT	38 - 5
38.2.2	Checking OS installation on GOT.....	38 - 6
38.2.3	Setting communication interface (Communication settings).....	38 - 7
38.2.4	Downloading project data	38 - 8
38.2.5	Attaching communication unit and connecting cable.....	38 - 9
38.2.6	Verifying GOT recognizes controllers	38 - 10
38.3	Precautions	38 - 12
38.4	List of Functions Added by Version Upgrade	38 - 13

39. MULTI-CHANNEL FUNCTION 39 - 1 to 39 - 16

39.1	What is Multi-channel Function?	39 - 2
39.2	System Configuration Examples	39 - 3
39.3	Preparatory Procedures for Monitoring	39 - 4
39.3.1	Installing OS onto GOT	39 - 5
39.3.2	Checking OS installation on GOT.....	39 - 6
39.3.3	Setting communication interface (Communication settings).....	39 - 7
39.3.4	Downloading project data	39 - 8
39.3.5	Attaching option function board/communication unit and connecting cable	39 - 9
39.3.6	Verifying GOT recognizes controllers	39 - 10
39.3.7	Checking for normal monitoring.....	39 - 12
39.4	Connected Equipment Side Settings	39 - 14
39.5	List of Functions Added by Version Upgrade	39 - 15

40. FA TRANSPARENT FUNCTION 40 - 1 to 40 - 42

40.1	FA Transparent Function	40 - 2
40.2	System Configuration	40 - 2
40.2.1	GX Developer	40 - 3

40.2.2	PX Developer, GX Configurator.....	40 - 6
40.2.3	MT Developer	40 - 8
40.2.4	MR Configurator	40 - 10
40.2.5	FR Configurator	40 - 13
40.3	Compatible Software	40 - 15
40.4	Preparatory Procedure for Accessing	40 - 18
40.4.1	Setting communication interface (Communication settings).....	40 - 19
40.4.2	Attaching the communication unit and connecting the cable.....	40 - 21
40.4.3	Verifying GOT recognizes controllers	40 - 23
40.4.4	Accessing the PLC by the GX Developer, PX Developer, GX Configurator.....	40 - 25
40.4.5	Accessing by the MT Developer	40 - 28
40.4.6	Accessing the servo amplifier by the MR Configurator.....	40 - 31
40.4.7	Accessing the inverter by the FR Configurator	40 - 32
40.5	Precautions	40 - 34
40.5.1	Precautions common to each software.....	40 - 34
40.5.2	When using GX Developer	40 - 37
40.5.3	When using MT Developer	40 - 39
40.5.4	When using MR Configurator	40 - 39
40.5.5	When using FR Configurator	40 - 40
40.6	List of Functions Added by Version Upgrade	40 - 41

41. MULTIPLE-GT11, GT10 CONNECTION FUNCTION 41 - 1 to 41 -26

41.1	System Configuration	41 - 2
41.2	Connection Cable	41 - 5
41.3	Preparatory Procedures for Monitoring	41 - 7
41.3.1	Installing OS onto GOT.....	41 - 8
41.3.2	Checking OS installation on GOT.....	41 - 9
41.3.3	Setting communication interface (Communication settings).....	41 - 10
41.3.4	Downloading project data	41 - 15
41.3.5	Attaching communication unit and connecting cable.....	41 - 16
41.3.6	Verifying GOT recognizes controllers	41 - 17
41.3.7	Checking for normal monitoring.....	41 - 20
41.4	Precautions	41 - 23
41.5	List of Functions Added by Version Upgrade	41 - 25

42. GATEWAY FUNCTION 42 - 1 to 42 - 22

42.1	System Configuration	42 - 2
42.2	Preparatory Procedures for Monitoring	42 - 6
42.2.1	Installing OS onto GOT.....	42 - 7
42.2.2	Checking OS installation on GOT.....	42 - 8
42.2.3	Setting communication interface (Communication settings).....	42 - 9
42.2.4	Downloading project data	42 - 15
42.2.5	Attaching communication unit and connecting cable.....	42 - 16
42.2.6	Verifying GOT recognizes controllers	42 - 17
42.2.7	Checking for normal monitoring.....	42 - 19

43. MES INTERFACE FUNCTION**43 - 1 to 43 - 18**

43.1	System Configuration	43 - 2
43.2	Preparatory Procedures for Monitoring	43 - 5
43.2.1	Installing OS onto GOT	43 - 6
43.2.2	Checking OS installation on GOT	43 - 7
43.2.3	Setting communication interface (Communication settings).....	43 - 8
43.2.4	Downloading project data	43 - 12
43.2.5	Attaching communication unit and connecting cable.....	43 - 13
43.2.6	Verifying GOT recognizes controllers	43 - 14
43.2.7	Checking for normal monitoring.....	43 - 16
43.3	List of Functions Added by Version Upgrade	43 - 18

INDEX**Index - 1 to Index - 4**

ABOUT MANUALS

The following manuals are also related to this product.
In necessary, order them by quoting the details in the tables below.

Related Manuals

Manual Name	Manual Number (Model Code)
GT15 User's Manual - Describes the GT15 hardware-relevant contents, including the specifications, part names, mounting, power supply wiring, external dimensions, and option devices. - Describes the GT15 functions, including the utility. (Sold separately)	SH-080528ENG (1D7M23)
GT11 User's Manual - Describes the GT11 hardware-relevant contents, including the specifications, part names, mounting, power supply wiring, external dimensions, and option devices. - Describes the GT11 functions, including the utility. (Sold separately)	JY997D17501 (09R815)
GT10 User's Manual - Describes the GT10 hardware-relevant contents, including the specifications, part names, mounting, power supply wiring, external dimensions, and option devices. - Describes the GT10 functions, including the utility. (Sold separately)	JY997D24701 (09R819)
Handy GOT User's Manual - Describes the Handy GOT hardware-relevant contents, including the system configurations, specifications, part names, mounting, power supply wiring, external dimensions, and option devices. - Describes the Handy GOT functions, including the utility, and how to make cables. (Sold separately)	JY997D20101 (09R817)
GT SoftGOT1000 Version2 Operating Manual Describes the screen configuration, functions and using method of GT SoftGOT1000. (Sold separately)	SH-080602ENG (1D7M48)
GT Designer2 Version2 Basic Operation/Data Transfer Manual (For GOT1000 Series) Describes methods of the GT Designer2 installation operation, basic operation for drawing and transmitting data to GOT1000 series (Sold separately) *1	SH-080529ENG (1D7M24)
GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 1/3 GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 2/3 GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 3/3 Describes specifications and settings of each object function applicable to GOT1000 series. (Sold separately)*1	SH-080530ENG (1D7M25)
GOT1000 Series Gateway Functions Manual Describes specifications, system configurations and setting method of the gateway function. (Sold separately) *1	SH-080545ENG (1D7M33)
GOT1000 Series MES Interface Function Manual Describes the specifications, system configurations, and setting method of GT MES interface function. (Sold separately) *1	SH-080654ENG (1D7M63)

*1 The manual in PDF-format is included in the GT Works2 and GT Designer2 products.

ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL

Abbreviations and generic terms used in this manual are described as follows.

■ GOT

Abbreviations and generic terms		Description
GT SoftGOT1000		Abbreviation of GT SoftGOT1000
GT1595	GT1595-X	Abbreviation of GT1595-XTBA, GT1595-XTBD
GT1585	GT1585V-S	Abbreviation of GT1585V-STBA
	GT1585-S	Abbreviation of GT1585-STBA, GT1585-STBD
GT157□	GT1575V-S	Abbreviation of GT1575V-STBA
	GT1575-S	Abbreviation of GT1575-STBA, GT1575-STBD
	GT1575-V	Abbreviation of GT1575-VTBA, GT1575-VTBD
	GT1575-VN	Abbreviation of GT1575-VNBA, GT1575-VNBD
GT156□	GT1572-VN	Abbreviation of GT1572-VNBA, GT1572-VNBD
	GT1565-V	Abbreviation of GT1565-VTBA, GT1565-VTBD
GT156□	GT1562-VN	Abbreviation of GT1562-VNBA, GT1562-VNBD
	GT155□	GT1555-V
GT1555-Q		Abbreviation of GT1555-QTBD, GT1555-QSBD
GT1550-Q		Abbreviation of GT1550-QLBD
GT15□□, GT15		Abbreviation of GT1595, GT1585, GT157□, GT156□, GT155□
GT115□	GT1155-Q	Abbreviation of GT1155-QTBDQ, GT1155-QSBDQ, GT1155-QTBDA, GT1155-QSBDA, GT1155-QSBD
	GT1150-Q	Abbreviation of GT1150-QLBDQ, GT1150-QLBDA, GT1150-QLBD
Handy GOT	GT1155HS-Q	Abbreviation of GT1155HS-QSBD
	GT1150HS-Q	Abbreviation of GT1150HS-QLBD
GT11□□, GT11		Abbreviation of GT1155-Q, GT1150-Q, GT11 Handy GOT
GT1030		Abbreviation of GT1030-LBD, GT1030-LBD2, GT1030-LBDW, GT1030-LBDW2
GT1020		Abbreviation of GT1020-LBD, GT1020-LBD2, GT1020-LBL, GT1020-LBDW, GT1020-LBDW2, GT1020-LBLW
GT10□□, GT10		Abbreviation of GT1030, GT1020
GOT900 Series		Abbreviation of GOT-A900 series, GOT-F900 series
GOT800 Series		Abbreviation of GOT-800 series

■ Communication unit

Abbreviations and generic terms	Description			
Bus connection unit	GT15-QBUS, GT15-75QBUSL,	GT15-QBUS2, GT15-75QBUS2L,	GT15-ABUS, GT15-75ABUSL,	GT15-ABUS2, GT15-75ABUS2L
Serial communication unit	GT15-RS2-9P,	GT15-RS4-9S,	GT15-RS4-TE	
RS-422 conversion unit	GT15-RS2T4-9P,	GT15-RS2T4-25P		
Ethernet communication unit	GT15-J71E71-100			
MELSECNET/H communication unit	GT15-J71LP23-25,	GT15-J71BR13		
MELSECNET/10 communication unit	GT15-75J71LP23-Z ^{*1} ,	GT15-75J71BR13-Z ^{*2}		
CC-Link communication unit	GT15-J61BT13,	GT15-75J61BT13-Z ^{*3}		
Interface converter unit	GT15-75IF900			

*1 A9GT-QJ71LP23 + GT15-75IF900 set

*2 A9GT-QJ71BR13 + GT15-75IF900 set

*3 A8GT-J61BT13 + GT15-75IF900 set

Option unit

Abbreviations and generic terms		Description
Printer unit		GT15-PRN
Video/RGB unit	Video input unit	GT15V-75V4
	RGB input unit	GT15V-75R1
	Video/RGB input unit	GT15V-75V4R1
	RGB output unit	GT15V-75ROUT
CF card unit		GT15-CFCD
CF card extension unit*1		GT15-CFEX-C08SET
External I/O unit		GT15-DIO
Sound output unit		GT15-SOUT

*1 GT15-CFEX + GT15-CFEXIF + GT15-C08CF set.

Option

Abbreviations and generic terms		Description			
Memory card	CF card	GT05-MEM-16MC, GT05-MEM-128MC,	GT05-MEM-32MC, GT05-MEM-256MC	GT05-MEM-64MC,	
Memory card adaptor		GT05-MEM-ADPC			
Option function board		GT15-FNB, GT15-QFNB48M,	GT15-QFNB, GT11-50FNB	GT15-QFNB16M,	GT15-QFNB32M,
Battery		GT15-BAT,	GT11-50BAT		
Protective Sheet		GT15-90PSCB, GT15-80PSCB, GT15-70PSCB, GT15-60PSCB, GT15-50PSCB, GT11-50PSCB, GT11H-50PSC, GT10-30PSCB, GT10-20PSCB,	GT15-90PSGB, GT15-80PSGB, GT15-70PSGB, GT15-60PSGB, GT15-50PSGB, GT11-50PSGB, GT10-30PSGB, GT10-20PSGB,	GT15-90PSCW, GT15-80PSCW, GT15-70PSCW, GT15-60PSCW, GT15-50PSCW, GT11-50PSCW, GT10-30PSCW, GT10-20PSCW,	GT15-90PSGW, GT15-80PSGW, GT15-70PSGW, GT15-60PSGW, GT15-50PSGW, GT11-50PSGW, GT10-30PSGW, GT10-20PSGW
USB environmental protection cover		GT15-UCOV,	GT11-50UCOV		
Stand		GT15-90STAND, GT05-50STAND	GT15-80STAND,	GT15-70STAND,	A9GT-50STAND,
Attachment		GT15-60ATT-97,	GT15-60ATT-96		
Backlight		GT15-90XLTT, GT15-70VLTN,	GT15-80SLTT, GT15-60VLTT,	GT15-70SLTT, GT15-60VLTN	GT15-70VLTT,
Multi-color display board		GT15-XHNB,	GT15-VHNB		
Connector conversion box		GT11H-CNB-37S			
Emergency stop sw guard cover		GT11H-50ESCOV			

Software

Abbreviations and generic terms	Description
GT Works2 Version□	SW□D5C-GTWK2-E, SW□D5C-GTWK2-EV
GT Designer2 Version□	SW□D5C-GTD2-E, SW□D5C-GTD2-EV
GT Designer2	Abbreviation of screen drawing software GT Designer2 for GOT1000/GOT900 series
GT Converter2	Abbreviation of data conversion software GT Converter2 for GOT1000/GOT900 series
GT Simulator2	Abbreviation of screen simulator GT Simulator 2 for GOT1000 / GOT900 series
GT SoftGOT1000	Abbreviation of monitoring software GT SoftGOT1000
GT SoftGOT2	Abbreviation of monitoring software GT SoftGOT2
GX Developer	Abbreviation of SW□D5C-GPPW-E(-EV)/SW□D5F-GPPW-E type software package
GX Simulator	Abbreviation of SW□D5C-LLT-E(-EV) type ladder logic test tool function software packages (SW5D5C-LLT (-EV) or later versions)
Document Converter	Abbreviation of document data conversion software Document Converter for GOT1000 series
PX Developer	Abbreviation of SW□D5C-FBDQ-E type FBD software package for process control

■ License key (for GT SoftGOT1000)

Abbreviations and generic terms	Description
License	GT15-SGTKEY-U, GT15-SGTKEY-P

■ License key (for GT SoftGOT2)

Abbreviations and generic terms	Description
License key	A9GTSOFT-LKEY-P (For DOS/ PC)
License key FD	SW5D5F-SGLKEY-J (For PC CPU module)

■ Others

Abbreviations and generic terms	Description	
Omron PLC	Abbreviation of PLC manufactured by OMRON Corporation	
KEYENCE PLC	Abbreviation of PLC manufactured by KEYENCE	
Sharp PLC	Abbreviation of PLC manufactured by SHARP Corporation	
JTEKT PLC	Abbreviation of PLC manufactured by JTEKT Corporation	
Toshiba PLC	Abbreviation of PLC manufactured by TOSHIBA CORPORATION	
HITACHI IES PLC	Abbreviation of PLC manufactured by Hitachi Industrial Equipment Systems Co., Ltd.	
HITACHI PLC	Abbreviation of PLC manufactured by Hitachi, Ltd.	
FUJI FA PLC	Abbreviation of PLC manufactured by Fuji Electric FA Components & Systems Co., Ltd.	
Matsushita PLC	Abbreviation of PLC manufactured by Matsushita Electric Works, Ltd	
Yaskawa PLC	Abbreviation of PLC manufactured by YASKAWA Electric Corporation	
Yokogawa PLC	Abbreviation of PLC manufactured by Yokogawa Electric Corporation	
Allen-Bradley PLC	Abbreviation of PLC manufactured by Allen-Bradley	
SIEMENS PLC	Abbreviation of PLC manufactured by SIEMENS	
Temperature controller	OMRON temperature controller	Abbreviation of temperature controller manufactured by OMRON
	SHINKO indicating controller	Abbreviation of temperature controller manufactured by Shinko Technos Co., Ltd.
	CHINO controller	Abbreviation of temperature controller manufactured by CHINO CORPORATION
	FUJI SYS temperature controller	Abbreviation of temperature controller manufactured by Fuji Electric Systems Co., Ltd.
	YAMATAKE temperature controller	Abbreviation of temperature controller manufactured by YAMATAKE
	YOKOGAWA temperature controller	Abbreviation of temperature controller manufactured by Yokogawa Electric Corporation
	RKC temperature controller	Abbreviation of temperature controller manufactured by RKC
PC CPU module	Abbreviation of PC CPU Unit manufactured by CONTEC CO., LTD	
GOT (server)	Abbreviation of GOTs that use the server function	
GOT (client)	Abbreviation of GOTs that use the client function	
Windows® font	Abbreviation of TrueType font and OpenType font available for Windows® (Differs from the True Type fonts settable with GT Designer2)	
Intelligent function module	Indicates the modules other than the PLC CPU, power supply module and I/O module that are mounted to the base unit.	

HOW TO READ THIS MANUAL

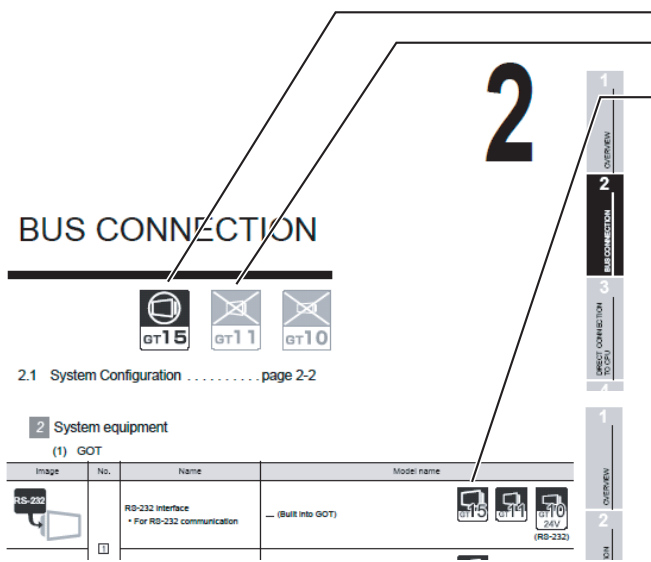
1 About each of functions

This manual includes information of GT Designer2 Version2.58L.

For additional functions of upgraded version, refer to the List of functions added by version upgrade.

2 Symbols

Following symbols are used in this manual.



Connectable model name
Not connectable model name

Applicable model name



Shows GT15.



Shows GT11.



Shows GT11 (BUS).



Shows GT11 (SERIAL).



Shows GT10.



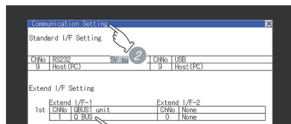
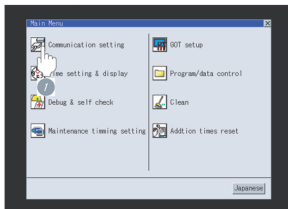
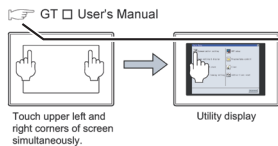
Shows GT10(input power supply : 24V).



Shows GT10(input power supply : 5V).

2.2.6 Verifying GOT recognizes connected equipment

Remark How to display Utility
To display the Utility (at default), touch the upper right and upper left positions on the screen at the same time (pressing 2 points).
For how to start and operate the Utility, refer to the following manual.



1 After powering up the GOT, touch [Main Menu] - [Communication setting] from the Utility.

2 The [Communication setting] screen appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.



Refers to the information required.



Refers to information useful for operation.



Refers to the supplementary explanations for reference.

Indicates the items in which the detailed explanation is described (manual, chapter, section, item of the manual).

1 → 2 → 3 ...

Indicates the operation steps.

Menu and items are differentiated with parentheses.

[] : refers to menu in menu bar, refers, dialog box item or GOT utility menu.

□ : refers to dialog box buttons or PC keyboard.

*Since the above page was created for explanation purpose, it differs from the actual page



THIRD PARTY PLC CONNECTIONS

Chapter10 CONNECTION TO OMRON PLC

Chapter11 CONNECTON TO KEYENCE PLC

Chapter12 CONNECTION TO SHARP PLC

Chapter13 CONNECTION TO JTEKT PLC

Chapter14 CONNECTION TO TOSHIBA PLC

(Continued to next page)

**Chapter15 CONNECTION TO HITACHI IES
PLC**

Chapter16 CONNECTION TO HITACHI PLC

Chapter17 CONNECTION TO FUJI FA PLC

**Chapter18 CONNECTION TO MATSUSHITA
PLC**

Chapter19 CONNECTION TO YASKAWA PLC

(Continued to next page)

**Chapter20 CONNECTION TO YOKOGAWA
PLC**

**Chapter21 CONNECTION TO ALLEN-BRADLEY
PLC**

Chapter22 CONNECTION TO SIEMENS PLC

CONNECTION TO OMRON PLC



10.1 System Configuration page 10-2

This section describes the equipment and cables needed when connecting a GOT to an OMRON PLC. Select a system suitable for your application.

10.2 Connection Cable page 10-22

This section describes the specifications of the cables needed when connecting to an OMRON PLC. Check the specifications of the connection cables.

10.3 Preparatory Procedures for Monitoring page 10-31

This section provides the procedures to be followed before performing monitoring in connection to an OMRON PLC. This procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

10.4 PLC Side Setting page 10-48

The PLC side settings for GOT connection are explained. When checking the PLC side settings, refer to this section. Check the specifications of the connection cables.

10.5 List of Functions Added by Version Upgrade page 10-66

This section describes the functions added by version upgrade of GT Designer2 or OS.

10.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.

10.1.1 When connecting to CPM1, CPM1A, CPM2A or CPM2C



1 System configuration and connection conditions

When connecting to CPM1

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	<div style="display: flex; justify-content: flex-end; align-items: center; gap: 10px;"> </div>
1	15m or less	<div style="display: flex; justify-content: flex-end; align-items: center; gap: 10px;"> </div>

When connecting to CPM1A

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	<p>2 RS-232C adapter 6 RS-232 cable 1) MAX15m 1</p> <p>GT15 GT11 Serial</p>
		<p>4 Connection cable 7 RS-232 cable 2) MAX15m 1</p> <p>GT15 GT11 Serial</p>
1	15m or less	<p>2 RS-232C adapter 8 RS-232 cable 4) MAX15m 1</p> <p>GT10 24V (RS-232)</p>
		<p>4 Connection cable 9 RS-232 cable 5) MAX15m 1</p> <p>GT10 24V (RS-232)</p>

When connecting to CPM2A







Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	<p>6 RS-232 cable 1) MAX15m 1</p> <p>GT15 GT11 Serial</p>
		<p>2 RS-232C adapter 6 RS-232 cable 1) MAX15m 1</p> <p>GT15 GT11 Serial</p>
1	15m or less	<p>8 RS-232 cable 4) MAX15m 1</p> <p>GT10 24V (RS-232)</p>
		<p>2 RS-232C adapter 8 RS-232 cable 4) MAX15m 1</p> <p>GT10 24V (RS-232)</p>

When connecting to CPM2C


Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	<p>2 RS-232C adapter</p> <p>6 RS-232 cable 1)</p> <p>MAX15m</p> <p>GT15 GT11 Serial</p>
		<p>3 RS-232C adapter</p> <p>6 RS-232 cable 1)</p> <p>MAX15m</p> <p>GT15 GT11 Serial</p>
		<p>5 Connection cable</p> <p>6 RS-232 cable 1)</p> <p>MAX15m</p> <p>GT15 GT11 Serial</p>
1	15m or less	<p>2 RS-232C adapter</p> <p>8 RS-232 cable 4)</p> <p>MAX15m</p> <p>GT10 24V (RS-232)</p>
		<p>3 RS-232C adapter</p> <p>8 RS-232 cable 4)</p> <p>MAX15m</p> <p>GT10 24V (RS-232)</p>
		<p>5 Connection cable</p> <p>8 RS-232 cable 4)</p> <p>MAX15m</p> <p>GT10 24V (RS-232)</p>

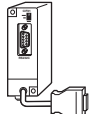2 System equipment

(1) GOT

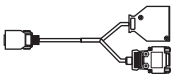
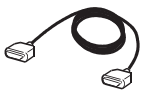


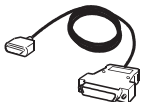






Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)   
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 


(2) PLC

Image	No.	Name	Model name
	2	RS-232C adapter	CPM1-CIF01
	3		CPM2C-CIF01-V1

2 and 3 are products manufactured by OMRON. For details of these products, contact OMRON.

(3) Cable

Image	No.	Name	Model name
	4	connection cable • Between CPU and RS-232 cable	CQM1-CIF01
	5		CPM2C-CN111
	6	RS-232 cable 1) *1 • Between CPU, RS-232C adapter and connection cable	GT09-C30R20101-9P(3m)  
	7	RS-232 cable 2) *1 • Between connection cable and GOT	GT09-C30R20102-25S(3m)  
	8	RS-232 cable 4) • Between CPU, RS-232C adapter and connection cable	(To be prepared by the user.  Section 10.2 Connection Cable) 
	9	RS-232 cable 5) • Between connection cable and GOT	

*1 The RS-232 cable can be prepared by the user. ( Section 10.2 Connection Cable)

4 and 5 are products manufactured by OMRON. For details of these products, contact OMRON.

10.1.2 Connecting to CQM1, CQM1H, CJ1 or CP1



1 System configuration and connection conditions

When connecting to CQM1



Compact PLCs that cannot be connected







No GOT can be connected to the CQM1-CPU11 since the CQM1-CPU11 has no RS-232C interface.

Connection conditions		System configuration	
No. of GOTs	Distance		
1	15m or less		

When connecting to CQM1H

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	<p>10 RS-232 cable 1)</p> <p>MAX15m</p> <p>GT15 GT11 Serial</p>
		<p>9 Connection cable</p> <p>10 RS-232 cable 1)</p> <p>MAX15m</p> <p>GT15 GT11 Serial</p>
		<p>3 Serial communication board</p> <p>10 RS-232 cable 1)</p> <p>MAX15m</p> <p>GT15 GT11 Serial</p>
	200m or less	<p>3 Serial communication board</p> <p>11 RS-422 cable 3)</p> <p>MAX200m</p> <p>GT15 GT11 Serial</p>
	15m or less	<p>13 RS-232 cable 4)</p> <p>MAX15m</p> <p>GT10 24V (RS-232)</p>
		<p>9 Connection cable</p> <p>13 RS-232 cable 4)</p> <p>MAX15m</p> <p>GT10 24V (RS-232)</p>
<p>3 Serial communication board</p> <p>13 RS-232 cable 4)</p> <p>MAX15m</p> <p>GT10 24V (RS-232)</p>		
200m or less		<p>3 Serial communication board</p> <p>14 RS-422 cable 7)</p> <p>MAX200m</p> <p>GT10 24V (RS-422)</p>

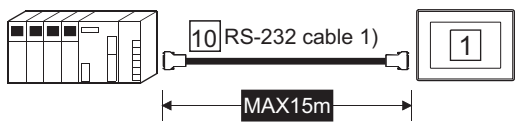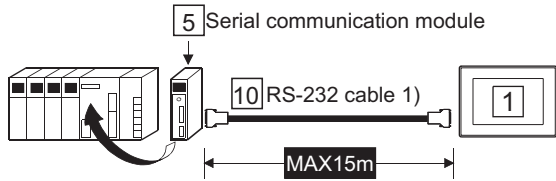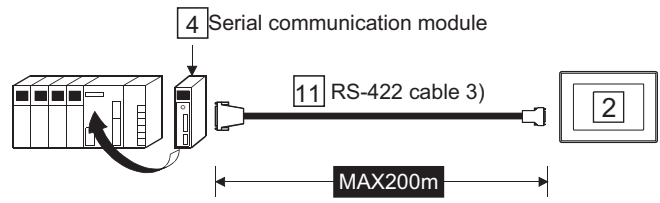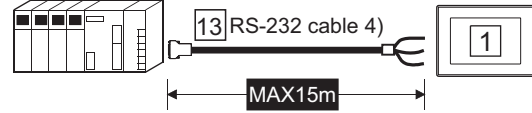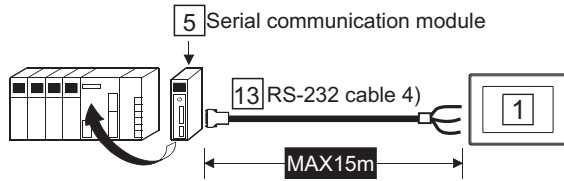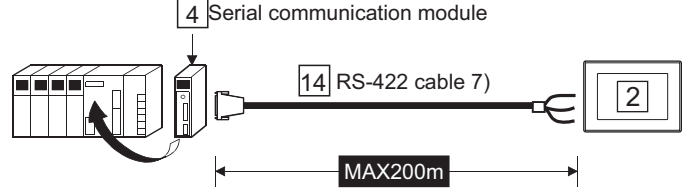When connecting to CJ1

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	 <p>10 RS-232 cable 1)</p> <p>MAX15m</p> <p>GT15</p> <p>GT11 Serial</p>
		 <p>5 Serial communication module</p> <p>10 RS-232 cable 1)</p> <p>MAX15m</p> <p>GT15</p> <p>GT11 Serial</p>
	200m or less	 <p>4 Serial communication module</p> <p>11 RS-422 cable 3)</p> <p>MAX200m</p> <p>GT15</p> <p>GT11 Serial</p>
1	15m or less	 <p>13 RS-232 cable 4)</p> <p>MAX15m</p> <p>GT10 24V (RS-232)</p>
		 <p>5 Serial communication module</p> <p>13 RS-232 cable 4)</p> <p>MAX15m</p> <p>GT10 24V (RS-232)</p>
	200m or less	 <p>4 Serial communication module</p> <p>14 RS-422 cable 7)</p> <p>MAX200m</p> <p>GT10 24V (RS-422)</p>














When connecting to CP1

Connection conditions		System configuration		
No. of GOTs	Distance			
1	15m or less	<p>6 RS-232C Option board 10 RS-232 cable 1)</p> <p>MAX15m</p>	 	
		<p>8 CJ Unit Adapter 5 Serial communication module 10 RS-232 cable 1)</p> <p>MAX15m</p>	 	
	200m or less	<p>7 RS-422A/485 Option board 12 RS-422 cable 4)</p> <p>MAX15m</p>	 	
		<p>8 CJ Unit Adapter 5 Serial communication module 11 RS-422 cable 3)</p> <p>MAX15m</p>	 	
	1	15m or less	<p>6 RS-232C Option board 13 RS-232 cable 4)</p> <p>MAX15m</p>	
			<p>8 CJ Unit Adapter 5 Serial communication module 13 RS-232 cable 4)</p> <p>MAX15m</p>	
200m or less		<p>7 RS-422A/485 Option board 15 RS-422 cable 8)</p> <p>MAX15m</p>		
		<p>8 CJ Unit Adapter 5 Serial communication module 14 RS-422 cable 7)</p> <p>MAX15m</p>		

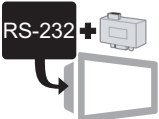9	ETHERNET CONNECTION
10	CONNECTION TO OMRON PLC
11	CONNECTION TO KEYENCE PLC
12	CONNECTION TO SHARP PLC
13	CONNECTION TO JTEKT PLC
14	CONNECTION TO TOSHIBA PLC
15	CONNECTION TO HITACHI IES PLC
16	CONNECTION TO HITACHI PLC






2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)    (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT)   (RS-422)





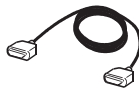


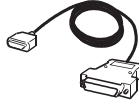















*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.


(2) PLC

Image	No.	Name	Model name
	3	Serial communication board	CQM1-SCB41
	4	Serial communication module	CJ1W-SCU41
	5		CJ1W-SCU21-V1
	6	RS-232C Option board	CP1W-CIF01
	7	RS-422A/485 Option board	CP1W-CIF11
	8	CJ Unit Adapter	CP1W-EXT01

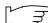3, 4, 5, 6, 7 and 8 are products manufactured by OMRON. For details of these products, contact OMRON.

(3) Cable

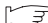Image	No.	Name	Model name
	9	Connection cable	CQM1-CIF02
			   (RS-232)
	10	RS-232 cable 1) *1 • Between CPU, connection cable, serial communication board, and serial communication module	GT09-C30R20101-9P(3m)
			 
	11	RS-422 cable 3) *1 • Between serial communication board, serial communication module and GOT	(To be prepared by the user.  Section 10.2 Connection Cable)
			 
	12	RS-422 cable 4) • Between serial communication module and GOT	(To be prepared by the user.  Section 10.2 Connection Cable)
			 
	13	RS-232 cable 4) • Between CPU, connection cable, serial communication board, and serial communication module	(To be prepared by the user.  Section 10.2 Connection Cable)
			 (RS-232)
	14	RS-422 cable 7) • Between serial communication board, serial communication module and GOT	(To be prepared by the user.  Section 10.2 Connection Cable)
			 (RS-422)
	15	RS-422 cable 8) • Between serial communication module and GOT	(To be prepared by the user.  Section 10.2 Connection Cable)
			 (RS-422)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( Section 10.2 Connection Cable)

9 is a product manufactured by OMRON. For details of this product, contact OMRON.

10.1.3 Connecting to C200HS, C200H, C200H α or CS1



1 System configuration and connection conditions

When connecting to C200HS, C200H

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	<p>3 Rack type host link unit 11 RS-232 cable 3) MAX15m 1</p>
	200m or less	<p>4 Rack type host link unit 13 RS-422 cable 2) MAX200m 2</p>
1	15m or less	<p>3 Rack type host link unit 15 RS-232 cable 6) MAX15m 1</p>
	200m or less	<p>4 Rack type host link unit 17 RS-422 cable 6) MAX200m 2</p>

When connecting to C200H α



Connection to C200HE

Connect a GOT to the C200HE via a rack type host link unit or a communication board.

Connection conditions		System configuration	
No. of GOTs	Distance		
1	15m or less		
	200m or less		

9
ETHERNET CONNECTION

10
CONNECTION TO OMRON PLC

11
CONNECTION TO KEYENCE PLC

12
CONNECTION TO SHARP PLC

13
CONNECTION TO JTEKT PLC

14
CONNECTION TO TOSHIBA PLC

15
CONNECTION TO HITACHI IES PLC

16
CONNECTION TO HITACHI PLC

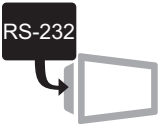





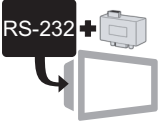






Connection conditions		System configuration	
No. of GOTs	Distance		
1	15m or less	<p>16 RS-232 cable 4)</p> <p>MAX15m</p>	<p>GT10 24V (RS-232)</p>
		<p>3 Rack type host link unit</p> <p>15 RS-232 cable 6)</p> <p>MAX15m</p>	<p>GT10 24V (RS-232)</p>
		<p>6 8 Communication board</p> <p>16 RS-232 cable 4)</p> <p>MAX15m</p>	<p>GT10 24V (RS-232)</p>
	200m or less	<p>4 Rack type host link unit</p> <p>17 RS-422 cable 6)</p> <p>MAX200m</p>	<p>GT10 24V (RS-422)</p>
		<p>7 8 Communication board</p> <p>18 RS-422 cable 7)</p> <p>MAX200m</p>	<p>GT10 24V (RS-422)</p>

When connecting to CS1

Connection conditions		System configuration	
No. of GOTs	Distance		
1	15m or less	<p>12 RS-232 cable 1)</p> <p>MAX15m</p> <p>GT 15 Serial</p>	
		<p>5 Serial communication module</p> <p>12 RS-232 cable 1)</p> <p>MAX15m</p> <p>GT 15 Serial</p>	
		<p>9 10 Serial communication board</p> <p>12 RS-232 cable 1)</p> <p>MAX15m</p> <p>GT 15 Serial</p>	
	200m or less	<p>10 Serial communication board</p> <p>14 RS-422 cable 3)</p> <p>MAX200m</p> <p>GT 15 Serial</p>	
	1	15m or less	<p>16 RS-232 cable 4)</p> <p>MAX15m</p> <p>GT 10 24V (RS-232)</p>
			<p>5 Serial communication module</p> <p>16 RS-232 cable 4)</p> <p>MAX15m</p> <p>GT 10 24V (RS-232)</p>
<p>9 10 Serial communication board</p> <p>16 RS-232 cable 4)</p> <p>MAX15m</p> <p>GT 10 24V (RS-232)</p>			
200m or less		<p>10 Serial communication board</p> <p>18 RS-422 cable 7)</p> <p>MAX200m</p> <p>GT 10 24V (RS-422)</p>	



2 System equipment

(1) GOT

Image	No.	Name	Model name
	①	RS-232 interface • For RS-232 communication	— (Built into GOT)    (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	②	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT)   (RS-422)

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	③	Rack type host link unit	C200H-LK201-V1
	④		C200H-LK202-V1
	⑤	Serial communication module	CS1W-SCU21
	⑥	Communication board *2	C200HW-COM02, C200HW-COM05
	⑦		C200HW-COM03
	⑧		C200HW-COM06
	⑨	Serial communication board	CS1W-SCB21
	⑩		CS1W-SCB41

*2 The communication board cannot be mounted to the C200HE-CPU11.
Use a host Link unit.

③ to ⑩ are products manufactured by OMRON. For details of these products, contact OMRON.

(3) Cable

Image	No.	Name	Model name
	11	RS-232 cable 3)* ¹ • Between rack type host link unit and GOT	GT09-C30R201103-25P(3m)
	12	RS-232 cable 1)* ¹ • Between CPU, communication board, serial communication unit, serial communication board and GOT	GT09-C30R20101-9P(3m)
	13	RS-422 cable 2)* ¹ • Between rack type host link unit and GOT	GT09-C30R40102-9P(3m) GT09-C100R40102-9P(10m) GT09-C200R40102-9P(20m) GT09-C300R40102-9P(30m)
	14	RS-422 cable 3)* ¹ • Between communication board, serial communication board and GOT	(To be prepared by the user. Section 10.2 Connection Cable)
	15	RS-232 cable 6) • Between rack type host link unit and GOT	(To be prepared by the user. Section 10.2 Connection Cable) (RS-232)
	16	RS-232 cable 4) • Between CPU, communication board, serial communication unit, serial communication board and GOT	
	17	RS-422 cable 6) • Between rack type host link unit and GOT	(To be prepared by the user. Section 10.2 Connection Cable) (RS-422)
	18	RS-422 cable 7) • Between communication board, serial communication board and GOT	

*1 The RS-232 and RS-422 cable can be prepared by the user. (Section 10.2 Connection Cable)

10.1.4 Connecting to C1000H/C2000H, CV500/CV1000/CV2000, CVM1



1 System configuration and connection conditions

When connecting to C1000H, C2000H

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	<p>3 Rack type host link unit 4 RS-232 cable 3) MAX15m 1</p>
	200m or less	<p>3 Rack type host link unit 6 RS-422 cable 2) MAX200m 2</p>
1	15m or less	<p>3 Rack type host link unit 8 RS-232 cable 6) MAX15m 1</p>
	200m or less	<p>3 Rack type host link unit 10 RS-422 cable 6) MAX200m 2</p>

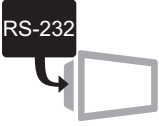





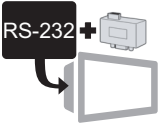



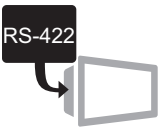


When connecting to CV500, CV1000, CV2000, CVM1

Connection conditions		System configuration	
No. of GOTs	Distance		
1	15m or less	<p>5 RS-232 cable 1)</p> <p>MAX15m</p> <p>1</p>	
	200m or less	<p>7 RS-422 cable 1)</p> <p>MAX200m</p> <p>2</p>	
1	15m or less	<p>9 RS-232 cable 4)</p> <p>MAX15m</p> <p>1</p>	 (RS-232)
	200m or less	<p>11 RS-422 cable 5)</p> <p>MAX200m</p> <p>2</p>	 (RS-422)

9	ETHERNET CONNECTION
10	CONNECTION TO OMRON PLC
11	CONNECTION TO KEYENCE PLC
12	CONNECTION TO SHARP PLC
13	CONNECTION TO JTEKT PLC
14	CONNECTION TO TOSHIBA PLC
15	CONNECTION TO HITACHI IES PLC
16	CONNECTION TO HITACHI PLC


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)    (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT)   (RS-422)

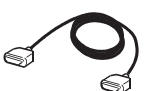














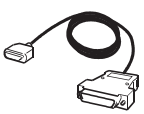
*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.


(2) PLC

Image	No.	Name	Model name
	3	Rack type host link unit	C500H-LK201-V1

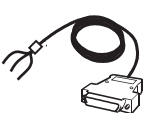3 is a product manufactured by OMRON. For details of this product, contact OMRON.

(3) Cable

Image	No.	Name	Model name
	4	RS-232 cable 3)* ¹ • Between rack type host link unit and GOT	GT09-C30R20103-25P(3m)  
	5	RS-232 cable 1)* ¹ • Between CPU and GOT	GT09-C30R20101-9P(3m)  
	6	RS-422 cable 2)* ¹ • Between rack type host link unit and GOT	GT09-C30R40102-9P(3m) GT09-C100R40102-9P(10m) GT09-C200R40102-9P(20m) GT09-C300R40102-9P(30m)  
	7	RS-422 cable 1)* ¹ • Between CPU and GOT	GT09-C30R40101-9P(3m) GT09-C100R40101-9P(10m) GT09-C200R40101-9P(20m) GT09-C300R40101-9P(30m)  
	8	RS-232 cable 6) • Between rack type host link unit and GOT	(To be prepared by the user.  Section 10.2 Connection Cable)  (RS-232)
	9	RS-232 cable 4) • Between CPU and GOT	
	10	RS-422 cable 6) • Between rack type host link unit and GOT	(To be prepared by the user.  Section 10.2 Connection Cable)  (RS-422)
	11	RS-422 cable 5) • Between CPU and GOT	

*1 The RS-232 and RS-422 cable can be prepared by the user. ( Section 10.2 Connection Cable)

10.2 Connection Cable

The RS-232 cable or RS-422 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model		Connection cable			
		GT15, GT11		GT10	
		RS-232 cable (See Section 10.2.1)	RS-422 cable (See Section 10.2.2)	RS-232 cable (See Section 10.2.1)	RS-422 cable (See Section 10.2.2)
PLC CPU	CPM2A	RS-232 cable 1)	—	RS-232 cable 4)	—
	CQM1, CCQM1H		—		—
	CJ1		—		—
	C200H α		—		—
	CS1		—		—
	CV500, CV1000, CV2000, CVM1		RS-422 cable 1)		RS-422 cable 5)
RS-232C adapter	CPM1-CIF01, CPM2C-CIF01- V1	RS-232 cable 1)	—	RS-232 cable 4)	—
connection cable	CQM1-CIF01	RS-232 cable 2)	—	RS-232 cable 5)	—
	CQM1-CIF02	RS-232 cable 1)	—	RS-232 cable 4)	—
	CPM2C-CN111	—	—	—	—
Rack type host link unit	C200H-LK201-V1	RS-232 cable 3)	—	RS-232 cable 6)	—
	C200H-LK202-V1	—	RS-422 cable 2)	—	RS-422 cable 6)
	C500H-LK201-V1	RS-232 cable 3)		RS-232 cable 6)	
Serial communication unit	CJ1W-SCU41	RS-232 cable 1)	RS-422 cable 3)	RS-232 cable 4)	RS-422 cable 7)
	CS1W-SCU21		—		—
	CJ1W-SCU21-V1		—		—
Communication board	C200HW-COM02	RS-232 cable 1)	—	RS-232 cable 4)	—
	C200HW-COM03	—	RS-422 cable 3)	—	RS-422 cable 7)
	C200HW-COM05	RS-232 cable 1)	—	RS-232 cable 4)	—
	C200HW-COM06		RS-422 cable 3)		RS-422 cable 7)
Serial communication board	CQM1-SCB41	RS-232 cable 1)	RS-422 cable 3)	RS-232 cable 4)	RS-422 cable 7)
	CS1W-SCB21		—		—
	CS1W-SCB41		RS-422 cable 3)		RS-422 cable 7)
RS-232C Option board	CP1W-CIF01	RS-232 cable 1)	—	RS-232 cable 4)	—
RS-422A/485 Option board	CP1W-CIF11	—	RS-422 cable 4)	—	RS-422 cable 8)

10.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.

1 Connection diagram

(1) RS-232 cable 1) (For GT15, GT11)

GOT side		Cable connection and signal direction	OMRON product side	
Signal name	Pin No.		Pin No.	Signal name
CD/NC ^{*1}	1		1	FG
RD(RXD)	2		2	SD
SD(TXD)	3		3	RD
ER(DTR)	4		4	RS
SG	5		5	CS
DR(DSR)	6		6	—
RS(RTS)	7		7	FR
CS(CTS)	8		8	ER
—	9		9	SG

*1 GT15: CD, GT11: NC

(2) RS-232 cable 2) (For GT15, GT11)

GOT side		Cable connection and signal direction	OMRON product side	
Signal name	Pin No.		Pin No.	Signal name
CD/NC ^{*2}	1		2	SD
RD(RXD)	2		3	RD
SD(TXD)	3		4	RS
ER(DTR)	4		5	CS
SG	5		6	DR
DR(DSR)	6		7	SG
RS(RTS)	7		8	—
CS(CTS)	8		20	ER
—	9		22	—

*2 GT15: CD, GT11: NC

(3) RS-232 cable 3) (For GT15, GT11)

GOT side		Cable connection and signal direction	OMRON product side	
Signal name	Pin No.		Pin No.	Signal name
CD/NC ^{*1}	1		1	FG
RD(RXD)	2		2	SD
SD(TXD)	3		3	RD
ER(DTR)	4		4	RS
SG	5		5	CS
DR(DSR)	6		6	—
RS(RTS)	7		7	SG
CS(CTS)	8		8	—
—	9		20	ER

*1 GT15: CD, GT11: NC

(4) RS-232 cable 4) (For GT10)

GOT side (terminal block)	Cable connection and signal direction	PLC side	
		Pin No.	Signal name
SD		1	FG
RD		2	SD
ER		3	RD
DR		4	RS
SG		5	CS
RS		6	—
CS		7	FR
NC		8	ER
NC		9	SG

(5) RS-232 cable 5) (For GT10)

GOT side (terminal block)	Cable connection and signal direction	PLC side	
		Pin No.	Signal name
SD		1	—
RD		2	SD
ER		3	RD
DR		4	RS
SG		5	CS
RS		6	DR
CS		7	SG
NC		20	ER
NC			

(6) RS-232 cable 6) (For GT10)

GOT side (terminal block)	Cable connection and signal direction	PLC side	
		Pin No.	Signal name
SD		1	FG
RD		2	SD
ER		3	RD
DR		4	RS
SG		5	CS
RS		6	—
CS		7	SG
NC		8	—
NC		20	ER

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

GOT	Hardware version*1	Connector type	Model	Manufacturer	
GT1595-X	-	9-pin D-sub (male) inch screw fixed type	17LE-23090-27(D4CK)	DDK Ltd	
GT1585V-S	-		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd	
GT1585-STBA	B		17LE-23090-27(D4CK)	DDK Ltd	
	C		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.	
GT1585-STBD	-		17LE-23090-27(D4CK)	DDK Ltd	
GT1575V-S	-		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.	
GT1575-STBA	B		17LE-23090-27(D4CK)	DDK Ltd	
	C		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.	
GT1575-STBD	-		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.	
GT1575-VTBA	D		17LE-23090-27(D4CK)	DDK Ltd	
GT1575-VTBD	E				
	-				
GT1575-VN	-				
GT1572-VN	-				
GT1565-V	-				
GT1562-VN	-				
GT155□	-		17LE-23090-27(D3CC)		
GT1155-Q, GT1150-Q	-		9-pin terminal block*2	MC1.5/9-G-3.5THT	PHOENIX CONTACT Inc.
GT15-RS2-9P	-		9-pin D-sub (male) inch screw fixed typ	17LE-23090-27(D4CK)	DDK Ltd


*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

*2 The terminal block (MC1.5/9-ST-3.5BK or corresponding product)of the cable side is packed together with the GT10.

(2) OMRON PLC side connector

Use the connector compatible with the OMRON PLC side module. For details, refer to the following manual.

 User's Manual for the OMRON PLC.

3 Precautions when preparing a cable

The length of the RS-232 cable must be 15m or less.

10.2.2 RS-422 cable

The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a PLC.



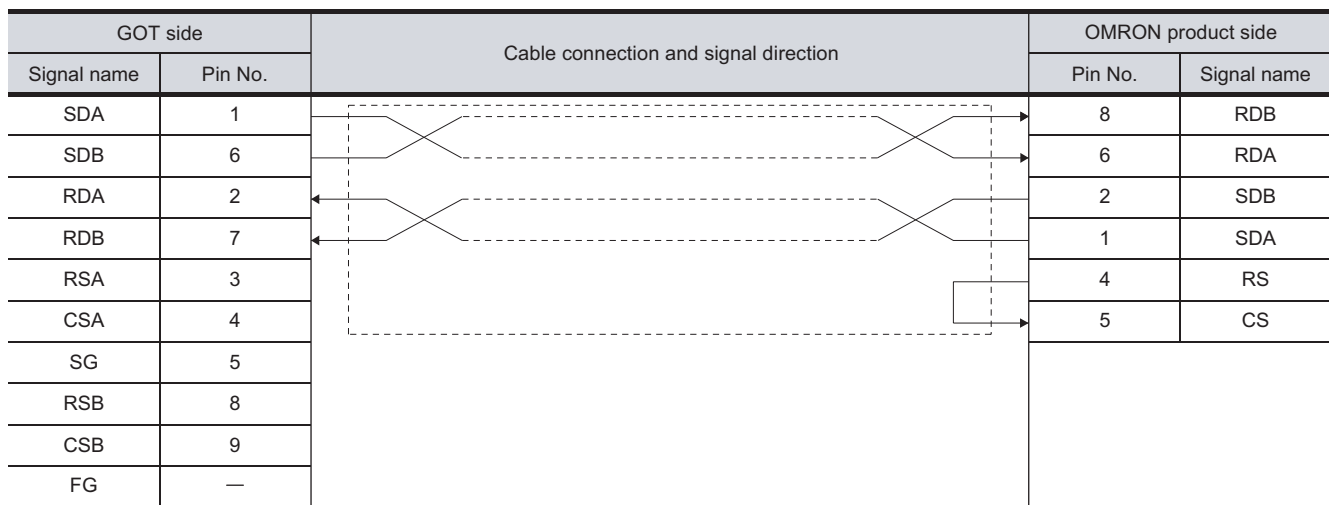
Differences in polarity between GOT and OMRON products

The polarity of poles A and B in signal names is reversed between GOT and OMRON products.


Connect a cable according to the following connection diagrams.

1 Connection diagram

(1) RS-422 cable 1) (For GT15, GT11)



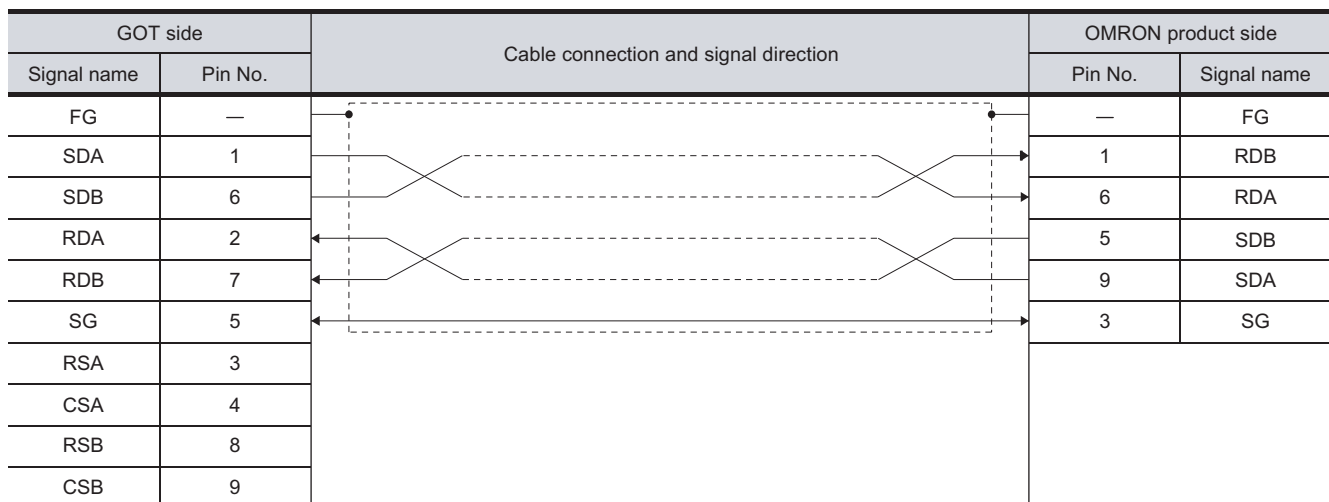(2) RS-422 cable 2) (For GT15, GT11)



(3) RS-422 cable 3) (For GT15, GT11)

GOT side		Cable connection and signal direction	OMRON product side	
Signal name	Pin No.		Pin No.	Signal name
SDA	1		8	RDB
SDB	6		6	RDA
RDA	2		2	SDB
RDB	7		1	SDA
RSA	3		4	RS
CSA	4		5	CS
SG	5			
RSB	8			
CSB	9			
FG	—			

(4) RS-422 cable 4) (For GT15, GT11)

GOT side		Cable connection and signal direction	OMRON product side	
Signal name	Pin No.		Pin No.	Signal name
SDB	6		1	RDA
SDA	1		2	RDB
RDB	7		3	SDA
RDA	2		4	SDB
RSA	3		5	FG
CSA	4			
SG	5			
RSB	8			
CSB	9			
FG	—			

9

ETHERNET CONNECTION

10

CONNECTION TO OMRON PLC

11

CONNECTION TO KEYENCE PLC

12

CONNECTION TO SHARP PLC

13

CONNECTION TO JTEKT PLC

14

CONNECTION TO TOSHIBA PLC

15

CONNECTION TO HITACHI IES PLC

16

CONNECTION TO HITACHI PLC

(5) RS-422 cable 5) (For GT10)

GOT side (terminal block)	Cable connection and signal direction	OMRON product side	
		Pin No.	Signal name
SDA		8	RDB
SDB		6	RDA
RDA		2	SDB
RDB		1	SDA
SG		4	RS
RSA		5	CS
RSB			
CSA			
CSB			

(6) RS-422 cable 6) (For GT10)

GOT side (terminal block)	Cable connection and signal direction	OMRON product side	
		Pin No.	Signal name
SDA		1	RDB
SDB		6	RDA
RDA		5	SDB
RDB		9	SDA
SG		3	SG
RSA		—	FG
RSB			
CSA			
CSB			

(7) RS-422 cable 7) (For GT10)

GOT side (terminal block)	Cable connection and signal direction	OMRON product side	
		Pin No.	Signal name
SDA		8	RDB
SDB		6	RDA
RDA		2	SDB
RDB		1	SDA
SG		4	RS
RSA		5	CS
RSB			
CSA			
CSB			

(8) RS-422 cable 8) (For GT10)

GOT side (terminal block)	Cable connection and signal direction	OMRON product side	
		Pin No.	Signal name
SDA		2	RDB
SDB		1	RDA
RDA		4	SDB
RDB		3	SDA
SG		5	FG
RSA			
RSB			
CSA			
CSB			

9

ETHERNET CONNECTION

10

CONNECTION TO OMRON PLC

11

CONNECTION TO KEYENCE PLC

12

CONNECTION TO SHARP PLC

13

CONNECTION TO JTEKT PLC

14

CONNECTION TO TOSHIBA PLC

15

CONNECTION TO HITACHI IES PLC

16

CONNECTION TO HITACHI PLC

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.


For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

(2) OMRON PLC side connector

Use the connector compatible with the OMRON PLC side module.

For details, refer to the following manual.


 User's Manual for the OMRON PLC

3 Precautions when preparing a cable

The length of the RS-422 cable must be 200m or less.


4 Connecting the terminator

When connecting an OMRON PLC to a GOT, a terminating resistor must be set to the OMRON PLC. No terminating resistor needs to be connected on the GOT side as one is already built into the GOT.

 Section 10.4 PLC Side Setting

10.3 Preparatory Procedures for Monitoring

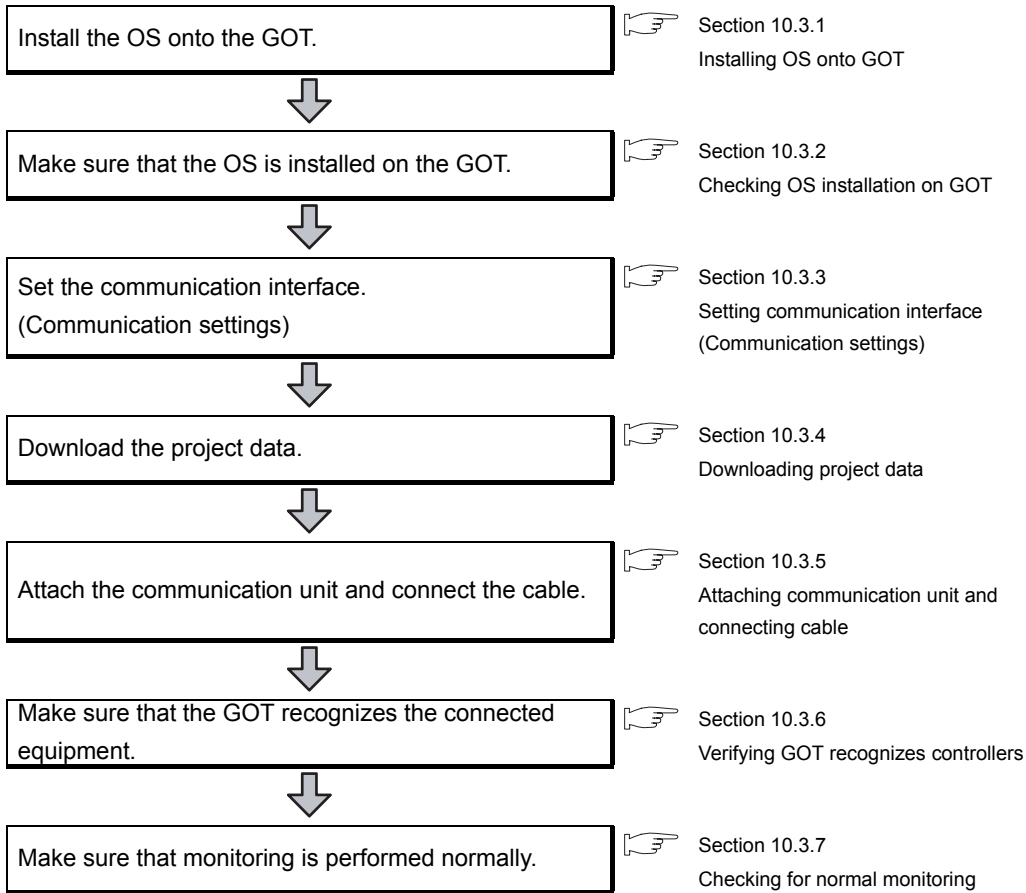The following the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the PLC side setting

This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

Section 10.4 PLC Side Setting

10.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

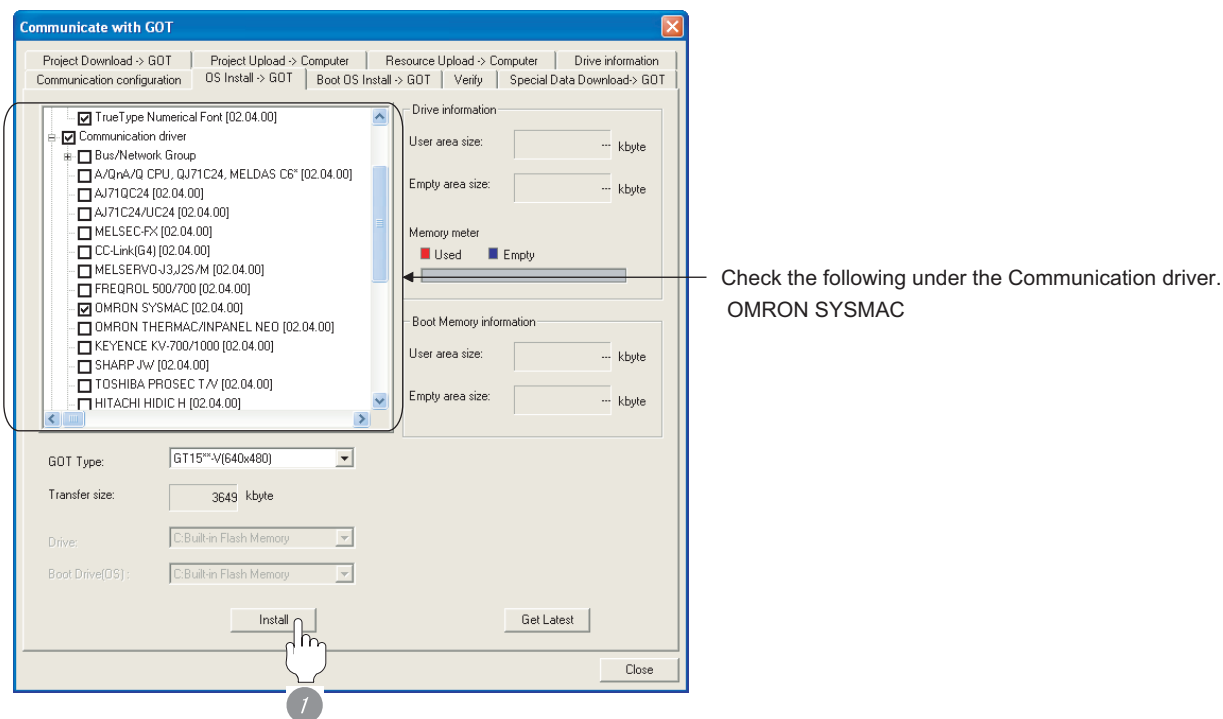☞ GT Designer2 Version □ Basic Operation/Data Transfer Manual



- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

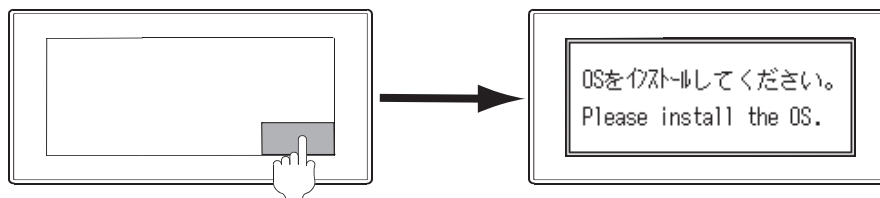


Installing communication driver onto GT10

When installing communication driver onto the GOT, turn on the GOT in the OS transfer mode.

☞ GT10 User's Manual


(Operating of transmission mode)




Turn on the GOT while the bottom right corner is touched.

10.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

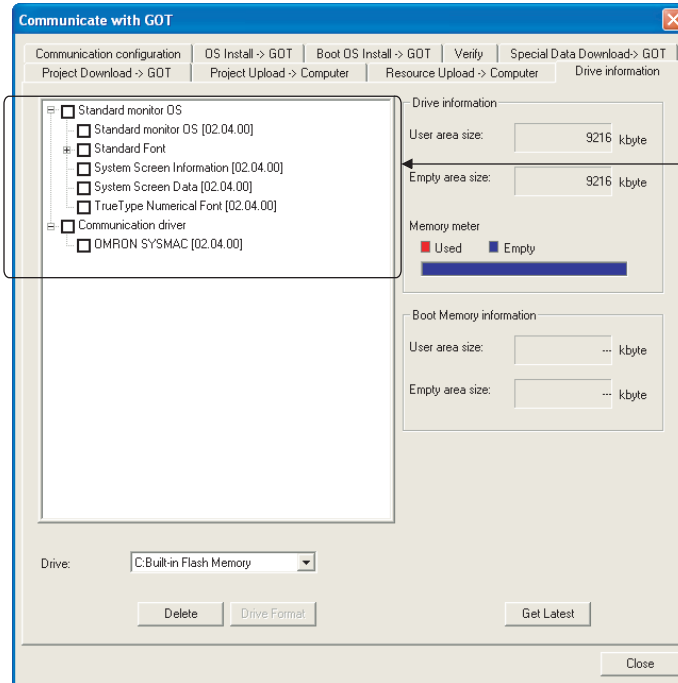 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

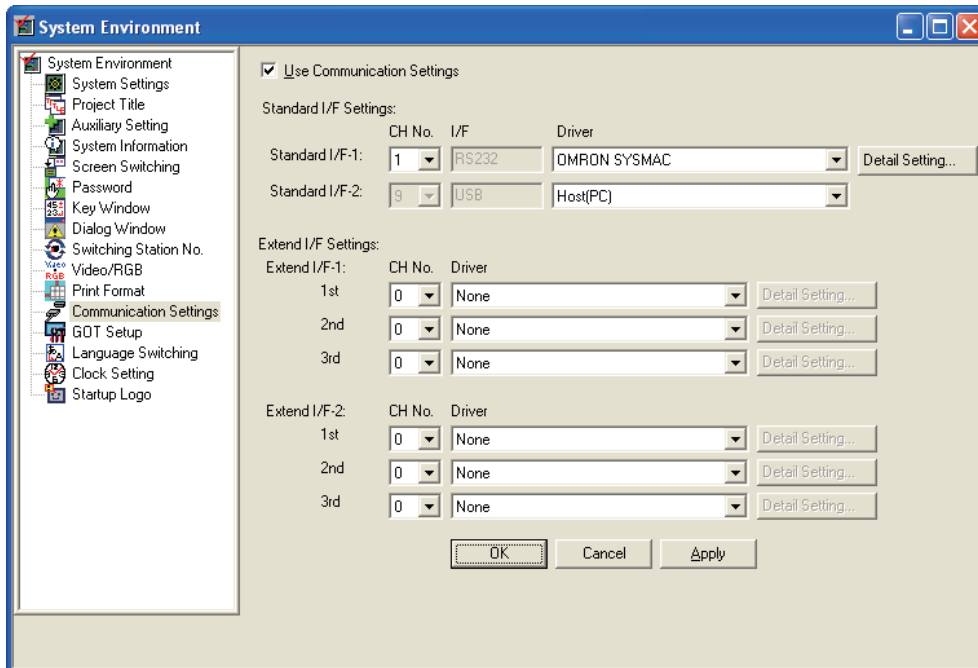
- 1) Standard monitor OS
- 2) Communication driver: OMRON SYSMAC


10.3.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2.
Select the same communication driver as the one installed on the GOT for each communication interface.
For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set "1" to the channel No. used.
- 2 Set the driver to "OMRON SYSMAC".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec
Host Address	Specify the host address (station No. of the PLC to which the GOT is connected) in the network of the GOT. <Default: 0>	0 to 31
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 0>	0 to 300 ms




(1) For GT15, GT11

(a) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT15 User's Manual, GT11 User's Manual

(b) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

(2) For GT10

(a) Communication interface setting by the Utility

Although the communication interface setting can be checked, it cannot be changed.

For details on the Utility, refer to the following manual.

 GT10 User's Manual

(b) Communication settings

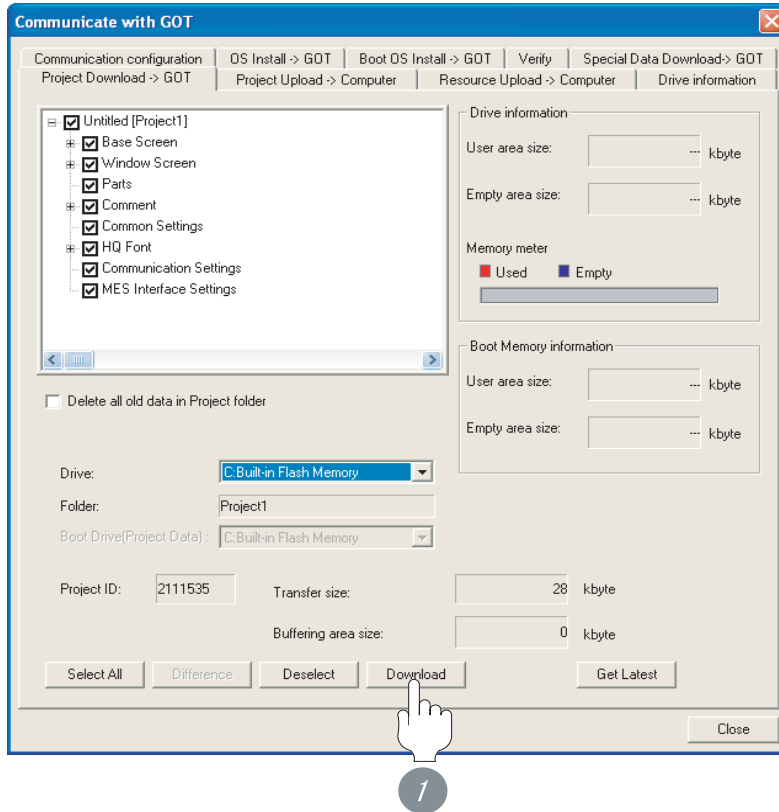
Communication settings can be changed on only GT Designer2.

10.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


10.3.5 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

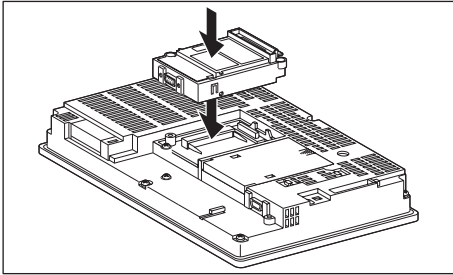1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.



Serial communication unit

For details on the serial communication unit, refer to the following manual:

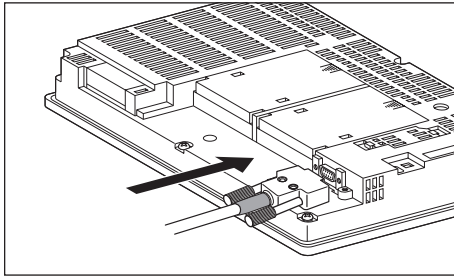
 [GT15 Serial Communication Unit User's Manual](#)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

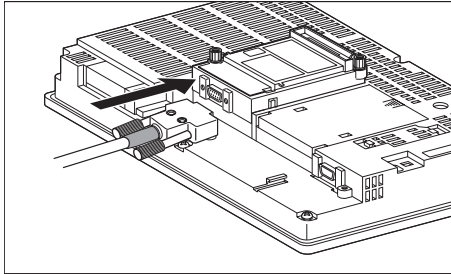- connection to the RS-232 communication unit




- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

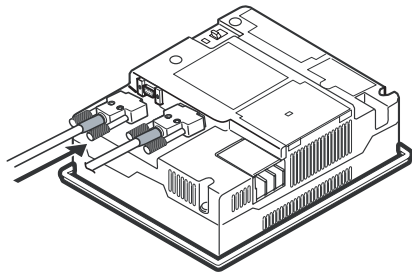(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

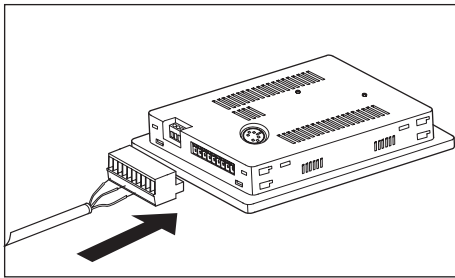(c) For the GT10 (built-in RS-232 interface)



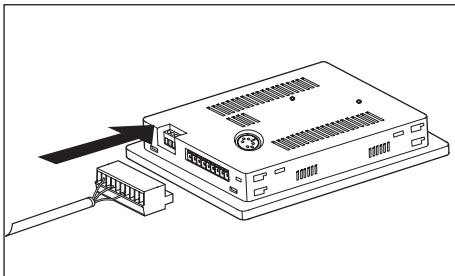1 Connect the RS-232 cable to the terminal block packed together with the GOT.




2 Connect the terminal block to the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

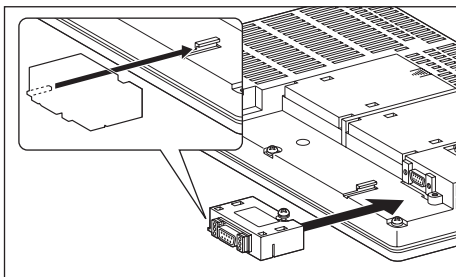• connection to the RS-232 interface




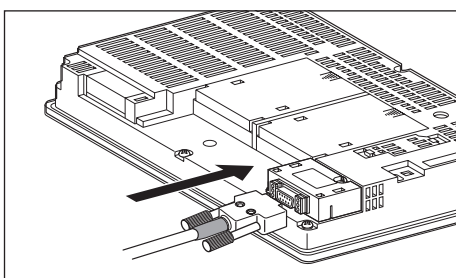1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



2 Connect the RS-422 cable to the RS-422 conversion unit.

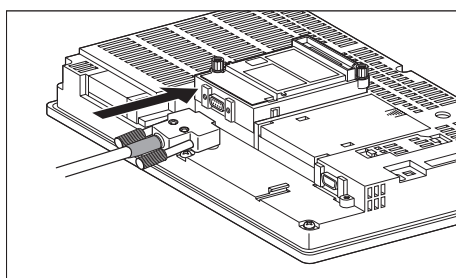• connection to the RS-422/485 communication unit



1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



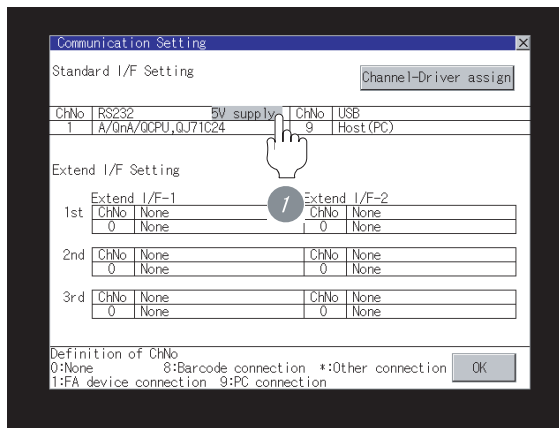
When using the RS-422 conversion unit

On "Communication settings" on the GOT utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the RS-422 conversion unit and the GOT utility, refer to the following manual:


➡ GT15 Serial Communication Unit User's Manual

➡ GT □ User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to "YES".

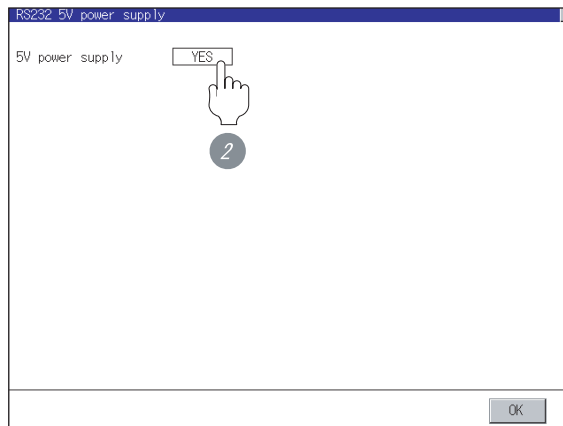


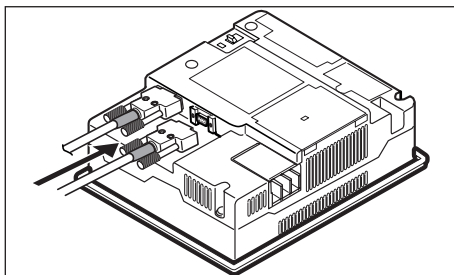(b) In the case of the GT11




1 Connect the RS-422 cable to the RS-422 interface on the GOT.

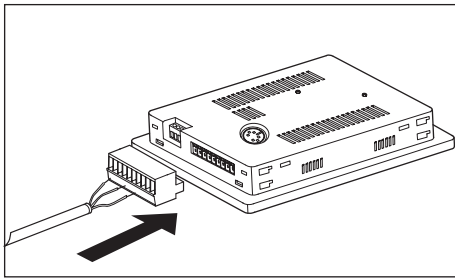(c) For the GT10 (built-in RS-422 interface)



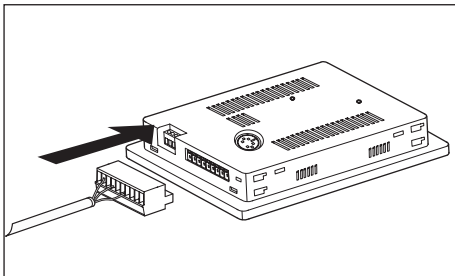- 1 Connect the RS-422 cable to the terminal block packed together with the GOT.



- 2 Connect the terminal block to the GOT.

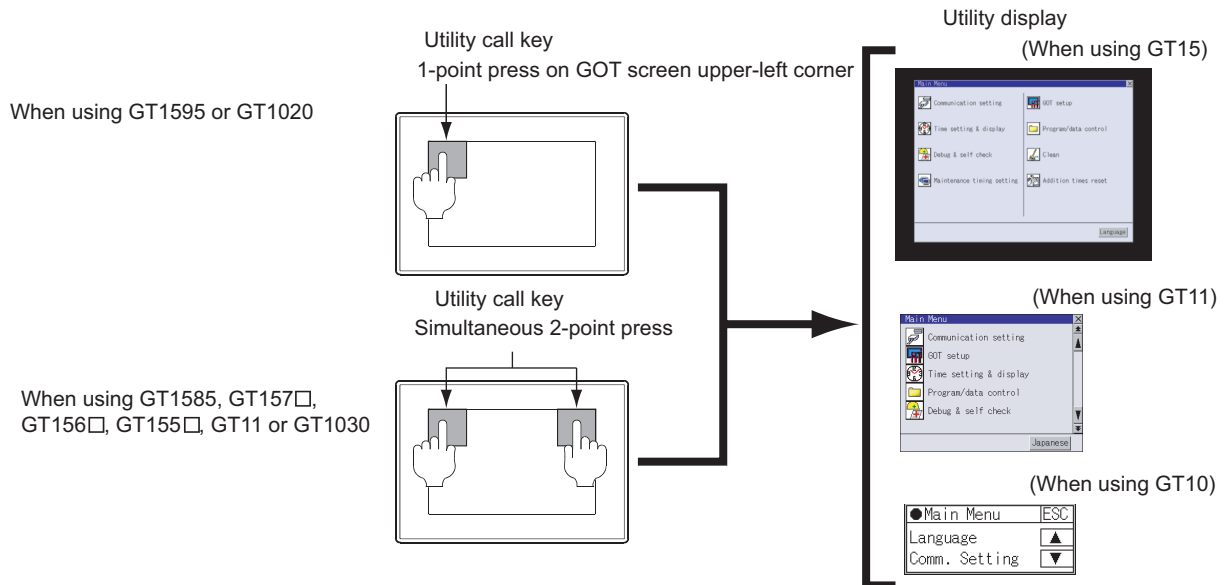
10.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point


When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

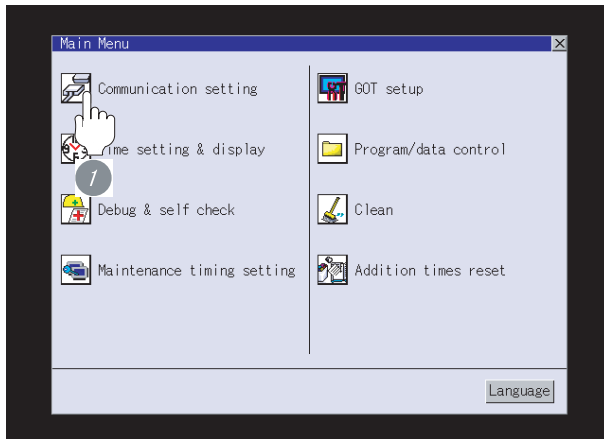☞ GT□ User's Manual



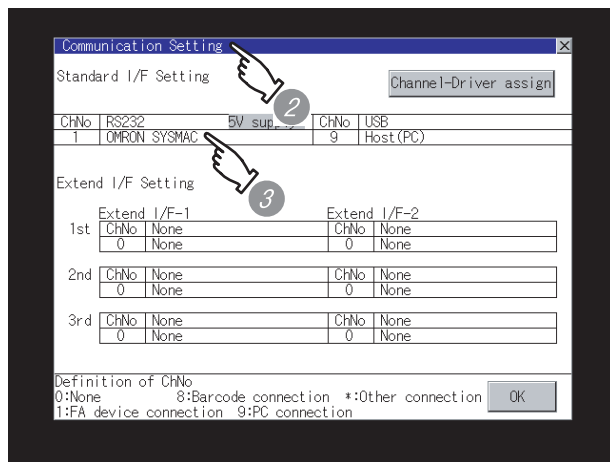- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver:
OMRON SYSMAC
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.
 - Section 10.3 Preparatory Procedures for Monitoring

Point

- (1) For GT15, GT11
 - (a) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

GT15 User's Manual, GT11 User's Manual
 - (b) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.
- (2) For GT10
 - (a) Communication interface setting by the Utility

Although the communication interface setting can be checked, it cannot be changed.

For details on the Utility, refer to the following manual.

GT10 User's Manual
 - (b) Communication settings

Communication settings can be changed on only GT Designer2.

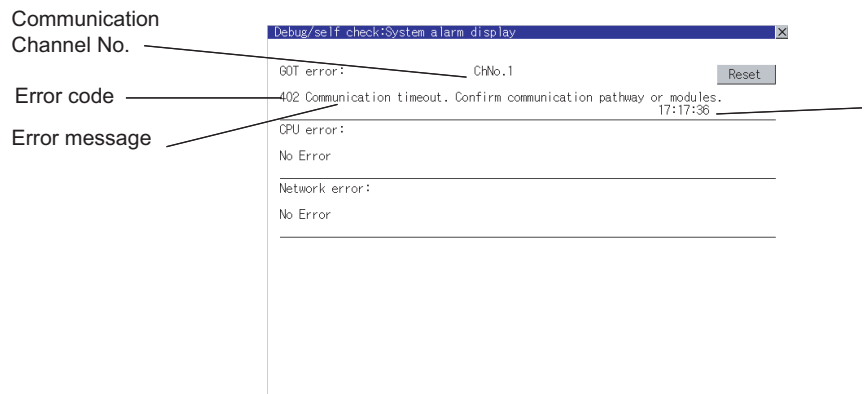
10.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT (for GT15, GT11)

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)



Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

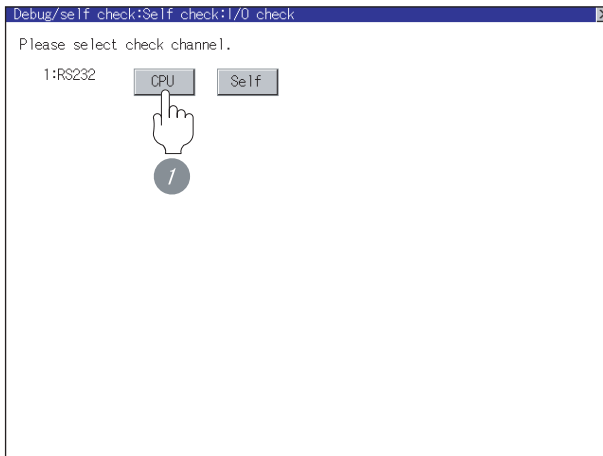


2 Perform an I/O check (for GT15, GT11)


Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check]. For details on the I/O check, refer to the following manual:

 GT □ User's Manual



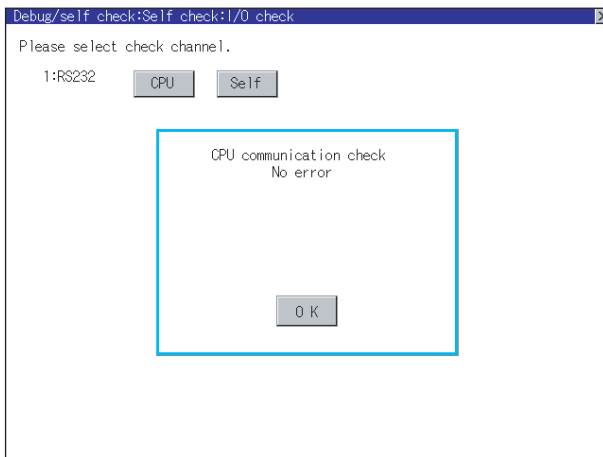- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Communication monitoring function (for GT10)

The communication monitoring is a function that checks whether the PLC can communicate with the GOT.

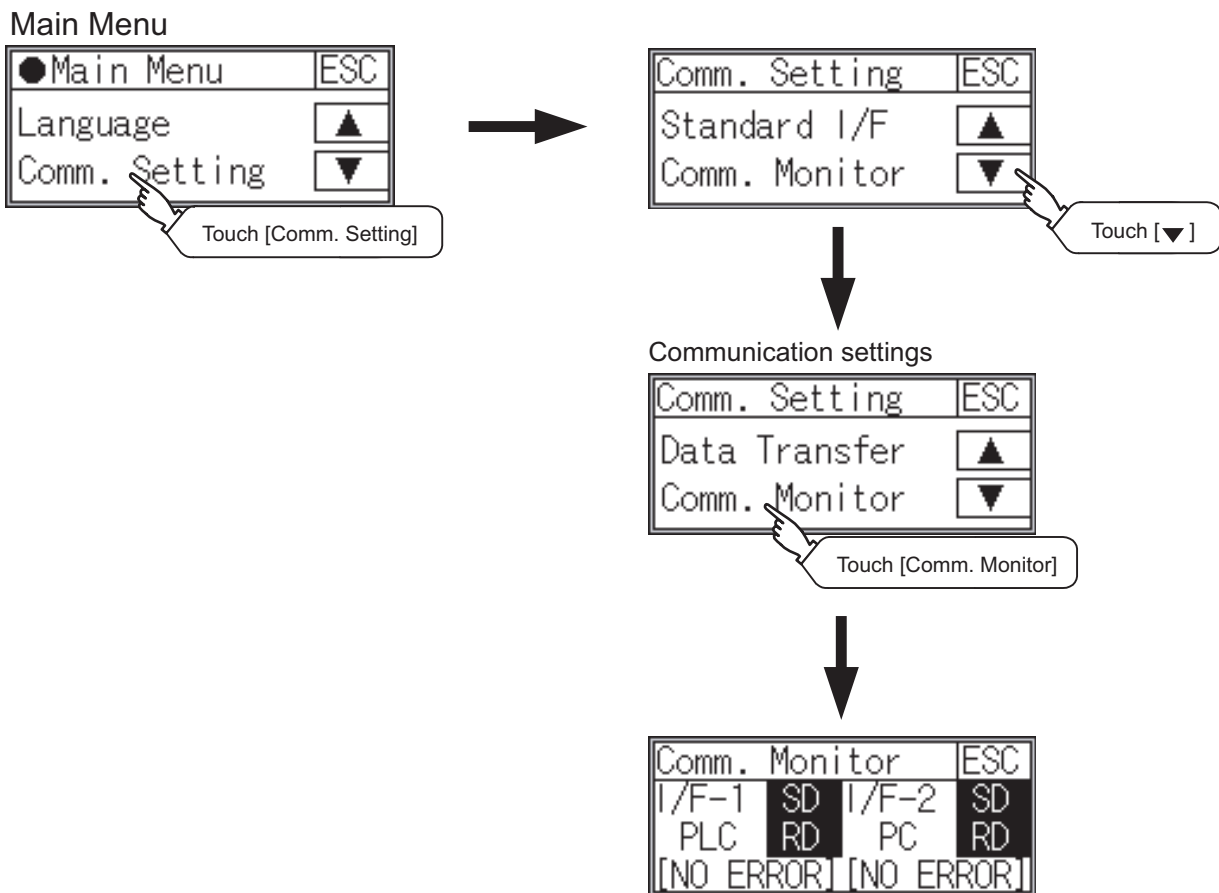
If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the communication monitoring function screen by [Main Menu] → [Comm. Setting] → [Comm. Monitor].

For details on the communication monitoring function, refer to the following manual:

 GT10 User's Manual


(Operation of communication monitoring function screen)



4 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.

Confirm if the PLC side setting is correct.

 Section 10.4 PLC Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

10.4 PLC Side Setting



OMRON PLC

For details of OMRON PLCs, refer to the following manuals.

Manuals for OMRON PLCs

	Model	Reference
PLC CPU	CPM2A	Section 10.4.1
	CQM1, CQM1H	
	CJ1	Section 10.4.2
	CP1	Section 10.4.2
	C200H α	Section 10.4.1
	CS1	Section 10.4.2
	CV500, CV1000, CV2000, CVM1	Section 10.4.3
RS-232C adapter	CPM1-CIF01, CPM2C-CIF01-V1	Section 10.4.1
Connection cable	CQM1-CIF01	Section 10.4.4
	CQM1-CIF02	
	CPM2C-CN111	
Rack type host link unit	C200H-LK201-V1	Section 10.4.5
	C200H-LK202-V1	Section 10.4.5
	C500H-LK201-V1	Section 10.4.5
Serial communication unit	CJ1W-SCU41	Section 10.4.6
	CS1W-SCU21	
	CS1W-SCU21-V1	
Communication board	C200HW-COM02	Section 10.4.7
	C200HW-COM03	
	C200HW-COM05	
	C200HW-COM06	
Serial communication board	CQM1-SCB41	Section 10.4.7
	CS1W-SCB21	Section 10.4.8
	CS1W-SCB41	
RS-422A/485 Option board	CP1W-CIF11	Section 10.4.9

10.4.1 Connecting CPM2A, CQM1, CQM1H, C200H α or RS-232C adapter

1 Device settings

Write the following set values to devices of each PLC CPU and initialize each port using a peripheral tool or DM monitor.

Device name	Settings				
DM6645	0001 _H (fixed)				
DM6646	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: center;">b15 to b8</td> <td style="text-align: center;">b7 to b0</td> </tr> <tr> <td style="text-align: center;">2)</td> <td style="text-align: center;">1)</td> </tr> </table> <p>1) RS-232C port transmission speed setting ^{*1*2} 02_H: 4800bps 03_H: 9600bps 04_H: 19200bps</p> <p>2) RS-232C port communication frame format 03_H (fixed): The settings are: Start bit : 1 bit Data length: 7 bits Stop bit : 2 bits Parity : Even bits</p>	b15 to b8	b7 to b0	2)	1)
b15 to b8	b7 to b0				
2)	1)				
DM6647	0000 (fixed)				
DM6648 ^{*3}	0000 to 0031				
DM6649	0000 (fixed)				

*1 Only transmission speeds available on the GOT side are shown.

*2 Set the same transmission speed of the RS-232C port as that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

*3 Set the RS-232C port host link station No. according to the Host Address on the GOT side.

For the Host Address setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

Remark



Precautions for changing device values

Before changing the device values, make sure that the switch settings have been changed as follows:

CPM2A: The communication condition switch to "individual"



Other PLC CPU: Front panel DIP switch SW5 to "OFF"

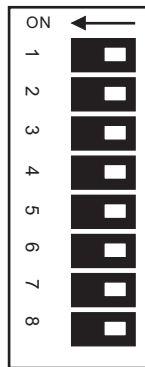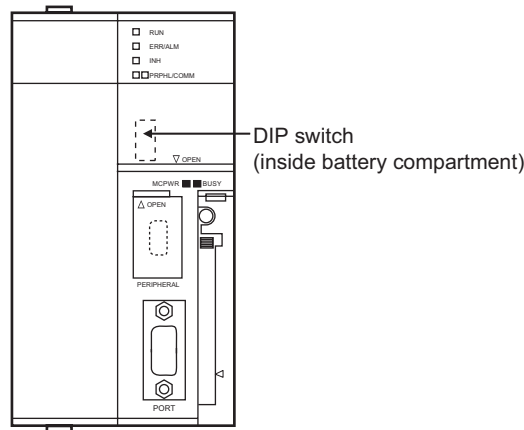(2) Setting on the CS1



Switch	Description	Setting
SW1	Enable/disable write to user memory (UM)	OFF
SW2	Enable/disable automatic transfer of user program at power ON	OFF
SW3	Programming console message display language (Japanese/English)	OFF
SW4	Peripheral port communication condition	OFF
SW5	RS-232C communication condition	OFF
SW6	User customized DIP switch	OFF
SW7	Type specification for simplified backup	OFF
SW8	—	OFF

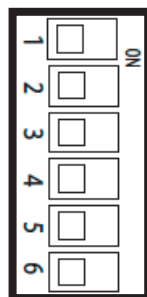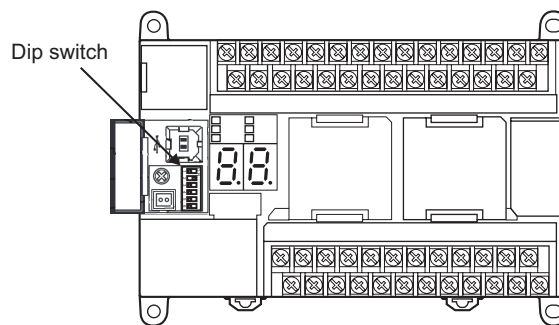(3) Setting on the CP1



Switch	Description	Setting
SW4	Option Board Slot1	OFF
SW5	Option Board Slot2	OFF
According to PLC Setup.		

2 Setting PLC system settings

(1) CJ1 and CS1

Make the PLC system settings.

Channel	Bit	Item	Setting
160	15	Arbitrary settings ON/OFF	1H: Arbitrary settings (fixed)
	8 to 11	Serial communication mode	0H: Upper link (fixed)
	3	Data length	0H: 7 bits (fixed)
	2	Stop bit	0H: 2 bits (fixed)
	0 to 1	Parity	0H: Even (fixed)
161	0 to 7	Port transmission speed ^{*1*2}	00H: 9600bps 08H : 38400bps 05H: 4800bps 09H : 57600bps 06H: 9600bps 0AH : 115200bps 07H: 19200bps
163	0 to 7	Host link station No. ^{*3}	0H to 1FH: No.00 to 31

*1 Only transmission speeds available on the GOT side are shown.

*2 Set the same port transmission speed as that of the GOT side.
For the transmission speed setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

*3 Set the host link station No. according to the Host Address on the GOT side.
For the Host Address setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

Remark

Precautions for changing the PLC system settings

Before changing the PLC system settings, make sure that the switch settings have been changed as follows:

CJ1, CS1: Front panel DIP switch SW5 to "OFF"

(2) CP1

Set the PLC system settings of the option slot connected to the GOT.

Item	Setting
Mode	Host link
Parameter	7, 2, E
Baud rate ^{*1*2}	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Unit number ^{*3}	00 to 31

*1 Only Baud rate available on the GOT side are shown.

*2 Set the same port transmission speed as that of the GOT side.
For the transmission speed setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

*3 Set the host link station No. according to the Host Address on the GOT side.
For the Host Address setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

Remark

Precautions for changing the PLC system settings

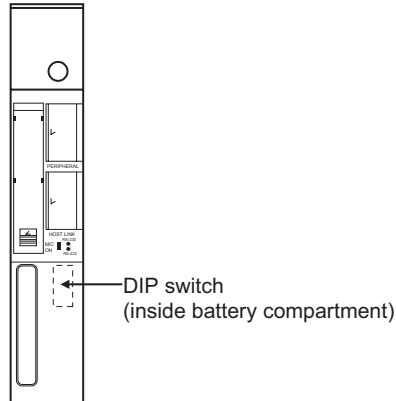
Before changing the PLC system settings, check the setting of the front DIP switch corresponding to the option slot used at the time of communication with GOT.

 (3)Setting on the CP1

10.4.3 Connecting CV500/CV1000/CV2000 or CVM1

1 Setting DIP switches

Set the DIP switches.



(1) Host link RS-422/232 switch



Setting	
RS-232 communication	RS-422 communication
RS-232 (up)	RS-422 (down)

(2) DIP switches



Switch No.	Setting	
	RS-232 communication	RS-422 communication
6	OFF (no terminating resistor)	ON (terminating resistor attached)
5	OFF	
4	OFF	
3	OFF	
2	OFF	
1	OFF	

2 PLC system settings

Make the PLC system settings.

Item	Setting
Transmission speed *1*2	4800bps/9600bps/19200bps
Stop bit	2 stop bits (fixed)
Parity	Even (fixed)
Data length	7 bits (fixed)
Station No. *3	00 to 31

*1 Only transmission speeds available on the GOT side are shown.

*2 Set the same transmission speed as that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

*3 Set the station No. according to the Host Address on the GOT side.

For the Host Address setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

10.4.4 Connecting connection cable

1 Device settings

Write the following set values to devices of each PLC CPU and initialize each port using a peripheral tool or DM monitor.

Device name	Settings				
DM6650	0001H (fixed)				
DM6651	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: center;">b15 to b8</td> <td style="text-align: center;">b7 to b0</td> </tr> <tr> <td style="text-align: center;">2)</td> <td style="text-align: center;">1)</td> </tr> </table> <p>1) RS-232C port transmission speed setting^{*1*2} 02H: 4800bps 03H: 9600bps 04H: 19200bps</p> <p>2) RS-232C port communication frame format 03H (fixed): The settings are: Start bit : 1 bit Data length: 7 bits Stop bit : 2 bits Parity : Even bits</p>	b15 to b8	b7 to b0	2)	1)
b15 to b8	b7 to b0				
2)	1)				
DM6652	0000 (fixed)				
DM6653 ^{*3}	0000 to 0031				

*1 Only transmission speeds available on the GOT side are shown.

*2 Set the same transmission speed of the peripheral port as that of the GOT side.
 For the transmission speed setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

*3 Set the peripheral port host link station No. according to the Host Address on the GOT side.
 For the Host Address setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

Remark

Precautions for changing device values

Before changing the device values, make sure that the switch settings have been changed as follows:


CPM2A: The communication condition switch to "individual"

CPM2C: The communication port function switch to "OFF"

10.4.5 Connecting rack type host link unit

1 Switch setting on C200H-LK201-V1

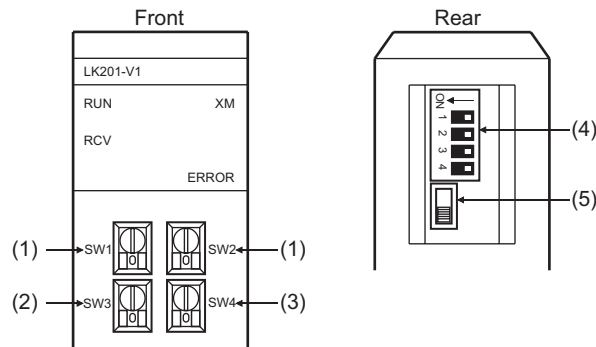Set the switches accordingly.



(1) Setting Machine No. (SW1, SW2)

Set the Machine No. within the range of 00 to 31 according to the Host Address setting on the GOT side.

For the Host Address setting on the GOT side, refer to the following.

➡ Section 10.3.3 Setting communication interface (Communication settings)



Rotary switch	Description	Setting
SW1	Machine No. upper digit ($\times 10^1$)	0 to 3
SW2	Machine No. lower digit ($\times 10^0$)	0 to 9

(2) Setting transmission speed (SW3)

Set the same transmission speed as that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

➡ Section 10.3.3 Setting communication interface (Communication settings)



Setting ^{*1}	Setting
4	4800bps
5	9600bps
6	19200bps

*1 Only transmission speeds available on the GOT side are shown.

(3) Setting command level/ parity/ transmission code (SW4)



Setting	Setting details		
	Command level	Parity	Transmission code
2 (fixed)	Levels 1, 2 and 3 enabled	Even	ASCII 7 bits 2 stop bits

(4) Setting DIP switches



Switch No.	Setting
1	OFF
2	OFF
3	ON (1:N procedure)
4	OFF (no 5V power supply)

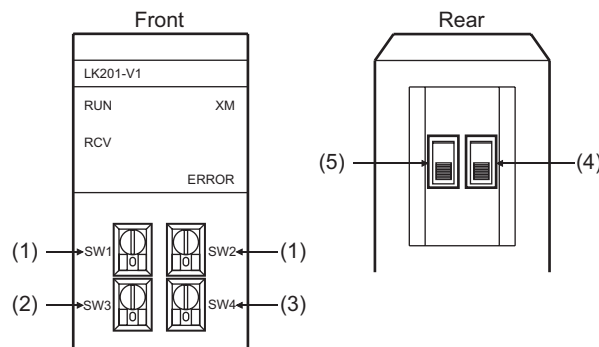
(5) Setting the CTS switch



Setting
0V

2 Switch setting on C200H-LK202-V1

Set the switches accordingly.



(1) Setting Machine No. (SW1, SW2)

Set the Machine No. within the range of 00 to 31.

Set the Machine No. according to the Host Address setting on the GOT side.

For the Host Address setting on the GOT side, refer to the following.

☞ Section 10.3.3 Setting communication interface (Communication settings)



Rotary switch	Description	Setting
SW1	Machine No. upper digit ($\times 10^1$)	0 to 3
SW2	Machine No. lower digit ($\times 10^0$)	0 to 9

(2) Setting transmission speed (SW3)

Set the same transmission speed as that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

☞ Section 10.3.3 Setting communication interface (Communication settings)



Setting ^{*1}	Setting
4	4800bps
5	9600bps
6	19200bps

*1 Only transmission speeds available on the GOT side are shown.

(3) Setting command level/ parity/ transmission code (SW4)



Setting	Setting details		
	Command level	Parity	Transmission code
2 (fixed)	Levels 1, 2 and 3 enabled	Even	ASCII 7 bits 2 stop bits

(4) Setting the 1:1 / 1:N procedure switch



Setting
OFF (1:N procedure)

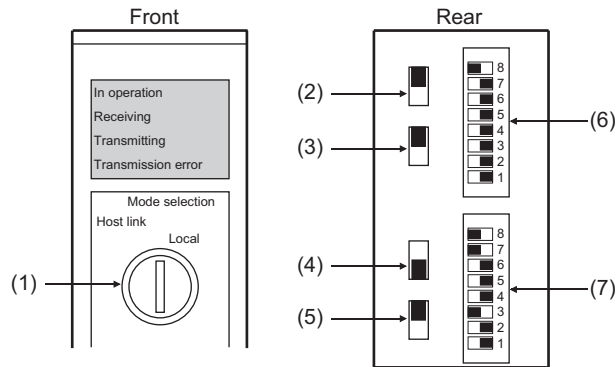
(5) Setting the terminating resistor connection switch



Setting
ON (terminating resistor attached)

3 Switch setting on C500HLK201-V1

Set the switches accordingly.



(1) Setting host link/local



Setting	
Host link	

(2) RS-232C/RS-422 switch



Setting	
RS-232 communication	RS-422 communication
RS-232 (down)	RS-422 (up)

(3) Internal/external clock switch



Setting	
Internal (up)	

(4) Terminating resistor connection switch



Setting	
Attached (down)	

(5) CTS switch



Setting	
0V (up)	

(6) Setting SW1 (Station No., Run/Stop)



Switch No.	Setting	Description
8	ON	Run
7	OFF	—
6	OFF	—
5	Set the station No. within the range of 00 to 31. Refer to the following manual for details. OMRON PLC manual	
4		
3		
2		
1		

(7) Setting SW2 (Transmission speed, Procedure, Level)



Switch No.	Setting	Description
8	ON	Levels 1, 2 and 3 enabled
7	ON	
6	OFF	1:N procedure
5	OFF	—
4	*1	Transmission speed
3		
2		
1		

*1 Only transmission speeds available on the GOT side are shown.

Transmission speed	Switch No.			
	SW1	SW2	SW3	SW4
4800bps	OFF	ON	ON	OFF
9600bps	ON	OFF	ON	OFF
19200bps	OFF	OFF	ON	OFF

10.4.6 Connecting serial communication unit

1 Device settings

Write the following set values to devices of each PLC CPU and initialize each port using a peripheral tool or DM monitor.

Device name		Settings				
Port 1	Port 2					
DM (m)	DM(m+10)	8000H (fixed): The settings are: Port setting : Arbitrary setting Serial communication mode : Host link Start bit : 1 bit Data length : 7 bits Stop bit : 2 bits Parity : Even				
DM(m+1)	DM(m+11)	<table border="1" style="margin-left: 40px;"> <tr> <td style="text-align: center;">b15 to b8</td> <td style="text-align: center;">b7 to b0</td> </tr> <tr> <td style="text-align: center;">0H</td> <td style="text-align: center;">1)</td> </tr> </table> 1) Transmission speed ^{*1*2} 00H: 9600bps 08H: 38400bps 05H: 4800bps 09H: 57600bps 06H: 9600bps 0AH: 115200bps 07H: 19200bps	b15 to b8	b7 to b0	0H	1)
b15 to b8	b7 to b0					
0H	1)					
DM(m+2)	DM(m+12)	8000H (fixed)				
DM(m+3) ^{*3}	DM(m+13) ^{*3}	8000H to 801FH				

m = 30000 + (100 x unit No.)

*1 Only transmission speeds available on the GOT side are shown.

*2 Set the same transmission speed as that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

*3 Set the host link station No. according to the Host Address setting on the GOT side.

For the Host Address setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

10.4.7 Connecting communication board, serial communication board (CQM1-SCB41)

1 Device settings

Write the following set values to devices of each PLC CPU and initialize each port using a peripheral tool or DM monitor.

Device name		Setting		
Port B	Port A			
DM6550	DM6555	0001 _H (fixed)		
DM6551	DM6556	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: center;">b15 to b8 2)</td> <td style="text-align: center;">b7 to b0 1)</td> </tr> </table> <p>1) Transmission speed^{*1*2} 02_H:4800bps 03_H:9600bps 04_H:19200bps</p> <p>2) Frame format setting 03_H (fixed): The settings are: Start bit :1 bit Data length:7 bits Stop bit :2 bits Parity :Even bits</p>	b15 to b8 2)	b7 to b0 1)
b15 to b8 2)	b7 to b0 1)			
DM6552	DM6557	0000 (fixed)		
DM6553 ^{*3}	DM6558 ^{*3}	0000 to 0031		

*1 Only transmission speeds available on the GOT side are shown.

*2 Set the same transmission speed as that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

Section 10.3.3 Setting communication interface (Communication settings)

*3 Set the host link station No. according to the Host Address setting on the GOT side.


For the Host Address setting on the GOT side, refer to the following.

Section 10.3.3 Setting communication interface (Communication settings)


2 Setting DIP switches (C200HW-COM3 and C200HW-COM6 only)

Set the DIP switches when performing the RS-422 communications on the C200HW-COM3 and C200HW-COM6.

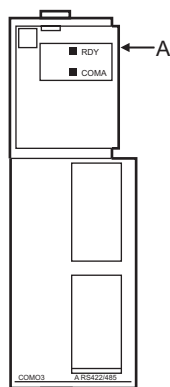
C200HW-COM3



C200HW-COM6

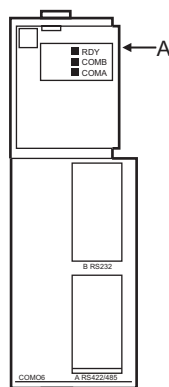

Side view indicated by A

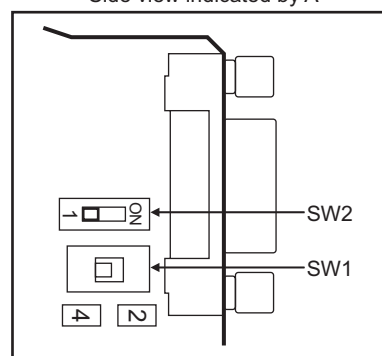

DIP switch		Settings
No.	Item	
SW1	RS-422/485 cable (2-wire/4-wire type) switching	4 (4-wire type)
SW2	Terminator ON/OFF	1 (no terminating resistor attached)

10.4.8 Connecting serial communication board (CS1W-SCB21, CS1W-SCB41)

1 Device settings

Write the following set values to devices of each PLC CPU and initialize each port using a peripheral tool or DM monitor.

Device name		Setting				
Port 1	Port 2					
D32000	D32010	8000H (fixed): The settings are: Port setting : Arbitrary setting Serial communication mode : Host link Start bit : 1 bit Data length : 7 bits Stop bit : 2 bits Parity : Even				
D32001	D32011	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>b15~b8</td> <td>b7~b0</td> </tr> <tr> <td>0H</td> <td>1)</td> </tr> </table> 1) Transmission speed ^{*1*2} 00H: 9600bps 08H: 38400bps 05H: 4800bps 09H: 57600bps 06H: 9600bps 0AH: 115200bps 07H: 19200bps	b15~b8	b7~b0	0H	1)
b15~b8	b7~b0					
0H	1)					
D32002	D32012	8000H (fixed)				
D32003 ^{*3}	D32013 ^{*3}	0000H to 0001FH				

*1 Only transmission speeds available on the GOT side are shown.

*2 Set the same transmission speed as that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)


*3 Set the host link station No. according to the Host Address setting on the GOT side.

For the Host Address setting on the GOT side, refer to the following.

 Section 10.3.3 Setting communication interface (Communication settings)

2 Setting the DIP switches (CS1W-SCB41 only)

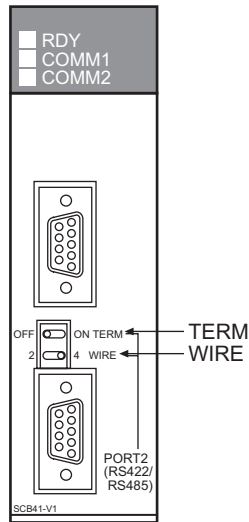Set the DIP switches when performing the RS-422 communications on the CS1W-SCB41.



DIP switch		Settings
Name	Description	
WIRE	2-wire/4-wire type switch	4 (4-wire type)
TERM	Terminator ON/OFF switch	1 (no terminating resistor attached)

Remark

Precautions for changing the DM area


Before changing the DM area, make sure that the switch setting has been changed as follows

CS1: Front panel DIP switch SW5 to "OFF"

10.4.9 Connecting RS-422A/485 Option board

1 Setting the DIP switches

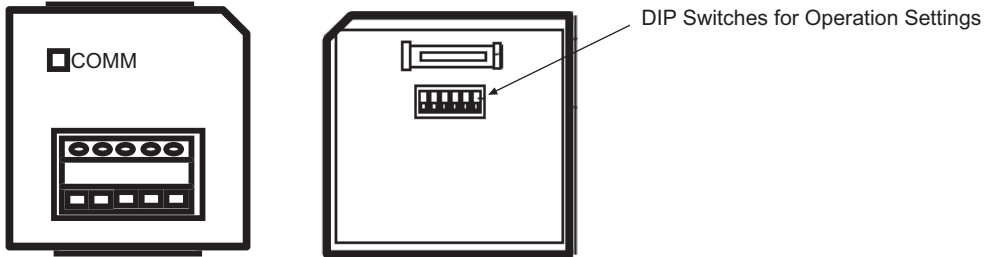Set the DIP switches



Switch No.	Settings	Description	
1	ON	ON	Terminating resistance selection
2	OFF	4-wire	2-wire or 4-wire selection
3	OFF	4-wire	2-wire or 4-wire selection
5	ON	RS control enabled	RS control selection for RD

9

ETHERNET
CONNECTION

10

CONNECTION TO
OMRON PLC

11

CONNECTION TO
KEYENCE PLC

12

CONNECTION TO
SHARP PLC

13

CONNECTION TO
JTEKT PLC

14

CONNECTION TO
TOSHIBA PLC

15







CONNECTION TO
HITACHI/IES PLC

16

CONNECTION TO
HITACHI PLC

10.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
 For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
  OMRON PLC connection	Supporting the delay time setting	2.27D	Communication driver OMRON SYSMAC [02.04.**]
  OMRON PLC connection	Supporting the retry and the timeout time	2.43V	Communication driver OMRON SYSMAC [03.01.**]
 OMRON PLC connection	Supporting the connections to GT10	2.47Z	Communication driver OMRON SYSMAC [01.00.**]
 OMRON PLC connection	Supporting the connections to GT1030	2.58L	Standard monitor OS [01.03.**] Communication driver OMRON SYSMAC [01.00.**]

CONNECTON TO KEYENCE PLC



11.1 System configuration. page 11-2

This section describes the equipment and cables needed when connecting a GOT to a KEYENCE PLC.

Select a system suitable for your application.

11.2 Connection cable. page 11-9

This section describes the specifications of the cables needed when connecting a GOT to a KEYENCE PLC.

Check the specifications of the connection cables.

11.3 Preparatory Procedures for Monitoring page 11-17

This section provides the procedures to be followed before performing monitoring in connection to a KEYENCE PLC.

The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

11.4 PLC Side Setting page 11-33

The PLC side settings for GOT connection are explained.

When checking the PLC side settings, refer to this section.

11.5 List of Functions Added by Version Upgrade page 11-36

This section describes the functions added by version upgrade of GT Designer2 or OS.

11.1 System configuration

Select a system configuration suitable for your application.




Conventions used in this section

Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.

11.1.1 Connecting to KV-1000



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	15m or less	<p>4 Conversion connector</p> <p>6 RS-232 cable 1)</p> <p>MAX15m</p>
1	15m or less	<p>7 RS-232 cable 2)</p> <p>MAX15m</p>
1	15m or less	<p>5 Multi-communication unit, port1</p> <p>8 RS-232 cable 3)</p> <p>MAX15m</p>
1	15m or less	<p>5 Multi-communication unit, port2</p> <p>9 RS-232 cable 4)</p> <p>MAX15m</p>
1	500m or less	<p>5 Multi-communication unit, port2</p> <p>10 RS-422 cable 1)</p> <p>MAX500m</p>
1	500m or less	<p>5 Multi-communication unit, port2</p> <p>11 RS-485 cable 1)</p> <p>MAX500m</p>

9

ETHERNET CONNECTION

10

CONNECTION TO OMRON PLC

11

CONNECTION TO KEYENCE PLC

12

CONNECTION TO SHARP PLC

13

CONNECTION TO JTEKT PLC

14

CONNECTION TO TOSHIBA PLC

15

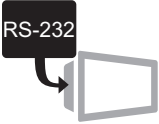
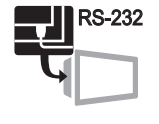
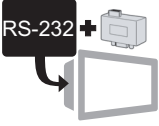
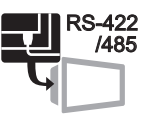

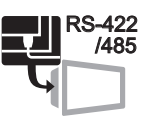

CONNECTION TO HITACHI IES PLC

16

CONNECTION TO HITACHI PLC



2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P
	2	RS-422 conversion unit* ¹ • For RS-422 communication	GT15-RS2T4-9P
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S
		RS-422 interface • For RS-422 communication	— (Built into GOT)
	3	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-9S
		RS-422 interface • For RS-485 communication	— (Built into GOT)

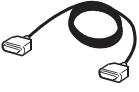
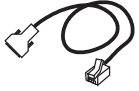

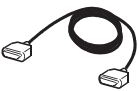


*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.


(2) PLC

Image	No.	Name	Model name
	4	Conversion connector	OP-26486
	5	Multi-communication unit	KV-L20R

[4], [5] are products manufactured by KEYENCE. For details of these products, contact KEYENCE.


(3) Cable

Image	No.	Name	Model name
	6	RS-232 cable 1) • Between conversion connector and GOT	OP-26487(2.5m)
	7	RS-232 cable 2) • Between PLC and GOT	(To be prepared by the user.  Section 11.2 Connection cable
	8	RS-232 cable 3) Between multi-communication unit and GOT	GT09-C30R21102-9S(3m)
	9	RS-232 cable 4) • Between multi-communication unit and GOT	GT09-C30R21103-3T(3m)
	10	RS-422 cable 1) • Between multi-communication unit and GOT	GT09-C30DR41101-5T(3m) GT09-C100D0R41101-5T(10m) GT09-C200D0R41101-5T(20m) GT09-C300D0R41101-5T(30m)
	11	RS-485 cable 1) • Between multi-communication unit and GOT	(To be prepared by the user.  Section 11.2 Connection cable)

*1 The RS-232 cable can be prepared by the user. ( Section 11.2 Connection cable)

6 is a product manufactured by KEYENCE. For details of this product, contact KEYENCE.

11.1.2 Connecting to KV-700





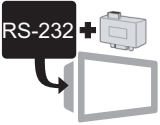

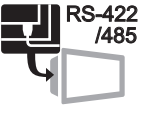

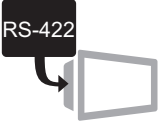

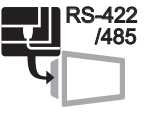

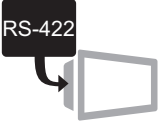



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	15m or less	<p>4 Conversion connector</p> <p>7 RS-232 cable 1)</p> <p>MAX15m</p> <p>1</p>
1	15m or less	<p>8 RS-232 cable 2)</p> <p>MAX15m</p> <p>1</p>
1	15m or less	<p>5 6 Multi-communication unit, port 1</p> <p>9 RS-232 cable 3)</p> <p>MAX15m</p> <p>1</p>
1	15m or less	<p>5 6 Multi-communication unit, port2</p> <p>10 RS-232 cable 4)</p> <p>MAX15m</p> <p>1</p>
1	500m or less	<p>5 6 Multi-communication unit, port2</p> <p>11 RS-422 cable 1)</p> <p>MAX500m</p> <p>2</p>
1	500m or less	<p>5 Multi-communication unit, port2</p> <p>12 RS-485 cable 1)</p> <p>MAX500m</p> <p>3</p>




2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit*1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
	3	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-9S 
		RS-422 interface • For RS-485 communication	— (Built into GOT) 

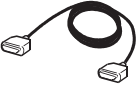
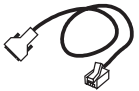

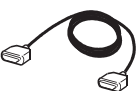


*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.


(2) PLC

Image	No.	Name	Model name
	4	Conversion connector	OP-26486
	5	Multi-communication unit	KV-L20R
	6	Multi-communication unit	KV-L20

4, 5, 6 are products manufactured by KEYENCE. For details of these products, contact KEYENCE.

(3) Cable

Image	No.	Name	Model name
	7	RS-232 cable 1) • Between conversion connector and GOT	OP-26487(2.5m)
	8	RS-232 cable 2)* ¹ • Between PLC and GOT	(To be prepared by the user.  Section 11.2 Connection cable)
	9	RS-232 cable 3)* ¹ • Between multi-communication unit and GOT	GT09-C30R21102-9S(3m)
	10	RS-232 cable 4)* ¹ • Between multi-communication unit and GOT	GT09-C30R21103-3T(3m)
	11	RS-422 cable 1) • Between multi-communication unit and GOT	GT09-C30DR41101-5T(3m) GT09-C100D0R41101-5T(10m) GT09-C200D0R41101-5T(20m) GT09-C300D0R41101-5T(30m)
	12	RS-485 cable 1) • Between multi-communication unit and GOT	(To be prepared by the user.  Section 11.2 Connection cable)

*1 RS-232 cable can be prepared by the user. ( Section 11.2 Connection cable)

7 is a product manufactured by KEYENCE. For details of this product, contact KEYENCE.

11.2 Connection cable

The RS-232 cable or RS-422 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable		
		RS-232 cable (Refer to Section 11.2.1)	RS-422 cable (Refer to Section 11.2.2)	RS-485 cable (Refer to Section 11.2.3)
PLC CPU	KV-1000	RS-232 cable 2)	—	—
	KV-700		—	—
Multi-communication unit	KV-L20R	RS-232 cable 3)	RS-422 cable 1)	RS-485 cable 1)
	KV-L20	RS-232 cable 4)	RS-422 cable 1)	—

9

ETHERNET
CONNECTION

10

CONNECTION TO
OMRON PLC

11

CONNECTION TO
KEYENCE PLC

12

CONNECTION TO
SHARP PLC

13

CONNECTION TO
JTEKT PLC

14

CONNECTION TO
TOSHIBA PLC

15

CONNECTION TO
HITACHI IES PLC

16

CONNECTION TO
HITACHI PLC

11.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.

1 Connection diagram

(1) RS-232 cable 2)

GOT side		Cable connection and signal direction	KEYENCE product side (Modular 6-pin)	
Signal name	Pin No.		Pin No.	Signal name
—	1		1	+5V
RD(RXD)	2		2	+5V
SD(TXD)	3		3	RD
ER(DTR)	4		4	SG
SG	5		5	SD
DR(DSR)	6		6	SG
RS(RTS)	7			
CS(CTS)	8			
—	9			

(2) RS-232 cable 3)

GOT side		Cable connection and signal direction	KEYENCE product side (D sub 9-pin)	
Signal name	Pin No.		Pin No.	Signal name
—	1		1	CD
RD(RXD)	2		2	RD
SD(TXD)	3		3	SD
ER(DTR)	4		4	ER
SG	5		5	SG
DR(DSR)	6		6	DR
RS(RTS)	7		7	RS
CS(CTS)	8		8	CS
—	9		9	—

(3) RS-232 cable 4)

GOT side		Cable connection and signal direction	KEYENCE product side (Terminal block)	
Signal name	Pin No.		Pin No.	Signal name
—	1		1	SG
RD(RXD)	2		2	—
SD(TXD)	3		3	SD
ER(DTR)	4		4	—
SG	5		5	RD
DR(DSR)	6			
RS(RTS)	7			
CS(CTS)	8			
—	9			

9

ETHERNET
CONNECTION

10

CONNECTION TO
OMRON PLC

11

CONNECTION TO
KEYENCE PLC

12

CONNECTION TO
SHARP PLC

13

CONNECTION TO
JTEKT PLC

14

CONNECTION TO
TOSHIBA PLC

15

CONNECTION TO
HITACHI IES PLC

16

CONNECTION TO
HITACHI PLC

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	DDK Ltd
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) KEYENCE PLC side connector

Use the connector compatible with the KEYENCE PLC side module. For details, refer to the following manual.

 User's Manual for the KEYENCE PLC

3 Precautions when preparing a cable


The length of the RS-232 cable must be 15m or less.

11.2.2 RS-422 cable

The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a PLC.

1 Connection diagram

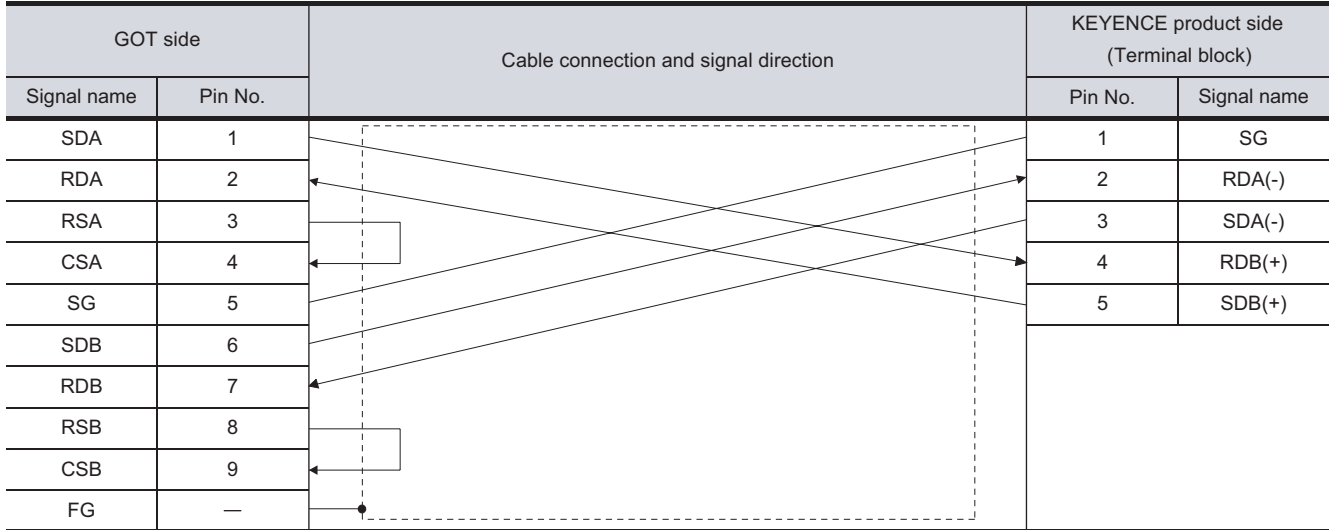(1) RS-422 cable 1)



2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.


For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

(2) KEYENCE PLC side connector

Use the connector compatible with the KEYENCE PLC side module.

For details, refer to the following manual.

 User's Manual for the KEYENCE PLC

3 Precautions when preparing a cable.

The length of the RS-422 cable must be 500m or less.

11.2.3 RS-485 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.

1 Connection diagram

(1) RS-485 cable 1)

GOT side*1		Cable connection and signal direction	KEYENCE product side*1 (Terminal block)	
Signal name	Pin No.		Pin No.	Signal name
SDA	1		1	SG
RDA	2		2	RDA(-)
RSA	3		3	SDA(-)
CSA	4		4	RDB(+)
SG	5		5	SDB(+)
SDB	6			
RDB	7			
RSB	8			
CSB	9			
FG				

*1 Set the terminating resistor to "Enable". (☞ [4](#) Terminating resistor settings)

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422/485 communication unit connector on the GOT.


For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Connector model	Connector type	Manufacturer
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

(2) KEYENCE PLC side connector

Use the connector compatible with the KEYENCE PLC side module.

For details, refer to the following manual.

 User's Manual for the KEYENCE PLC


3 Precautions when preparing a cable.

The length of the RS-485 cable must be 500m or less.

4 Terminating resistor settings

(1) KEYENCE PLC


Connect the terminating resistor on the KEYENCE PLC side when connecting a GOT to a KEYENCE PLC.

 Section 11.4 PLC Side Setting

(2) GOT


Set the terminating resistor of RS-422/485 communication unit using the terminating resistor setting switch.

Terminating resistor*1	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF

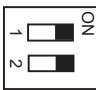

*1 The default setting is "Enable".

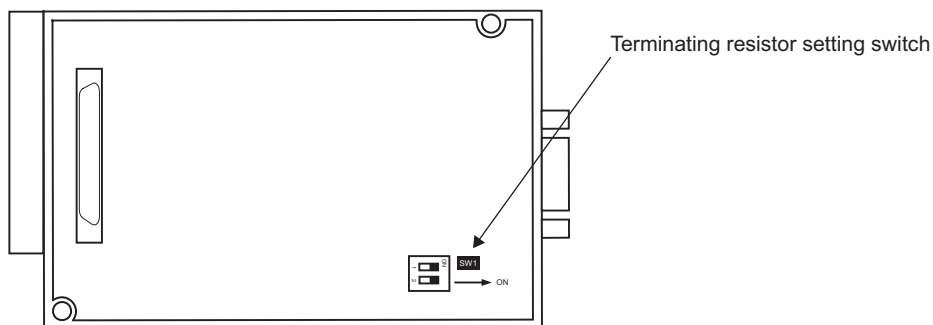
(When using GT15-RS4-9S)



Rear view of RS-422/485 communication unit.

11.3 Preparatory Procedures for Monitoring

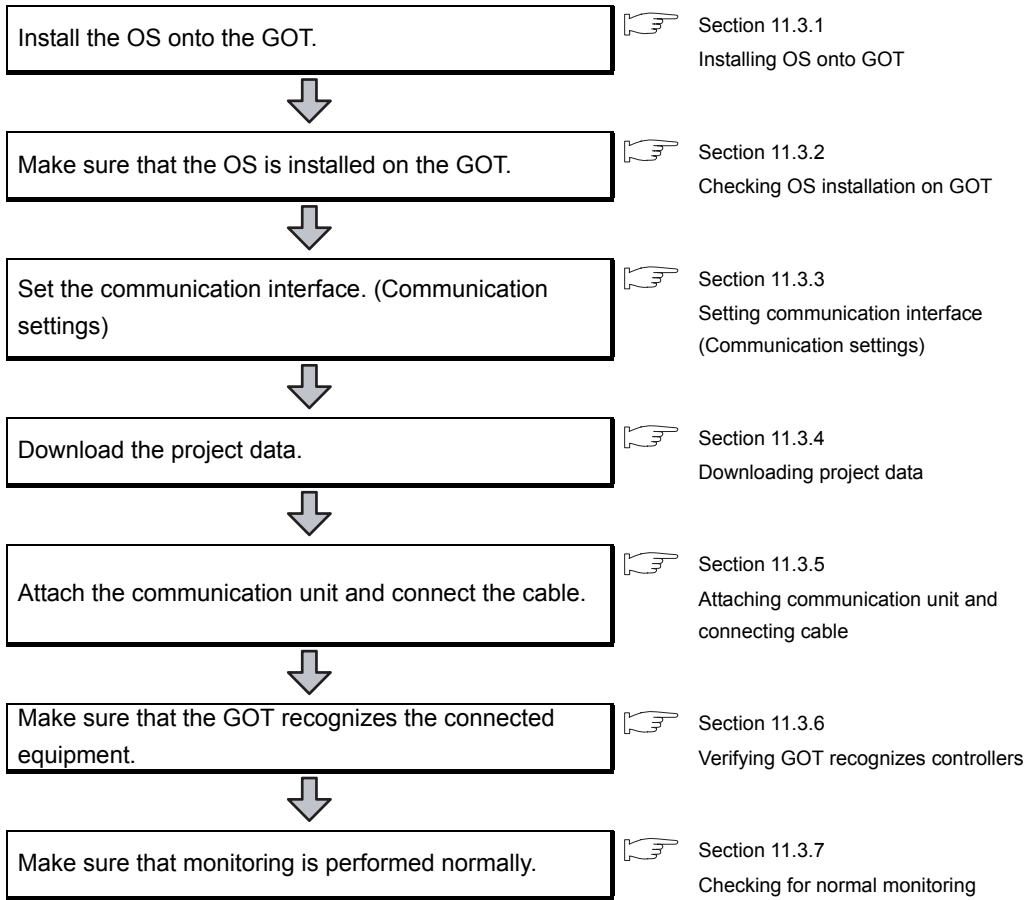The following shows the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the PLC side setting


This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

 Section 11.4 PLC Side Setting

11.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

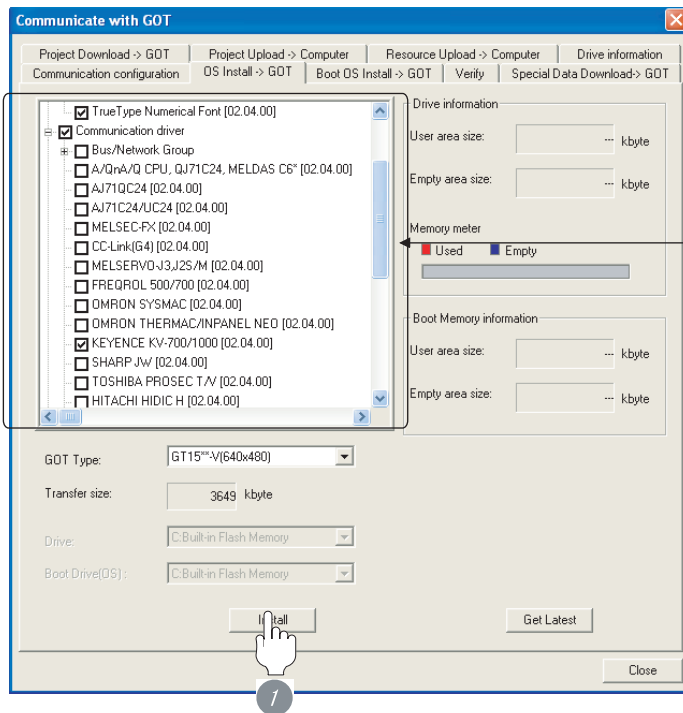 GT Designer2 Version □ Basic Operation/Data Transfer Manual




Check the following under the Communication c
• KEYENCE KV-700/1000

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

11.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

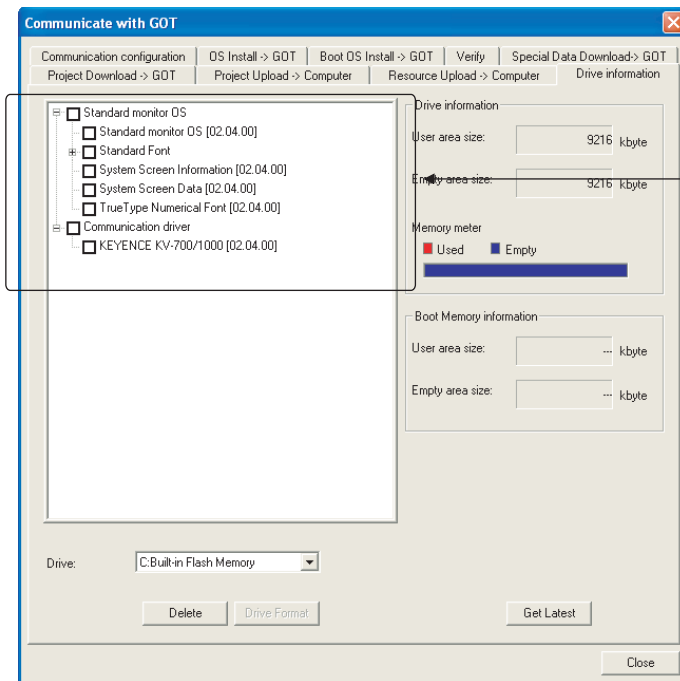 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

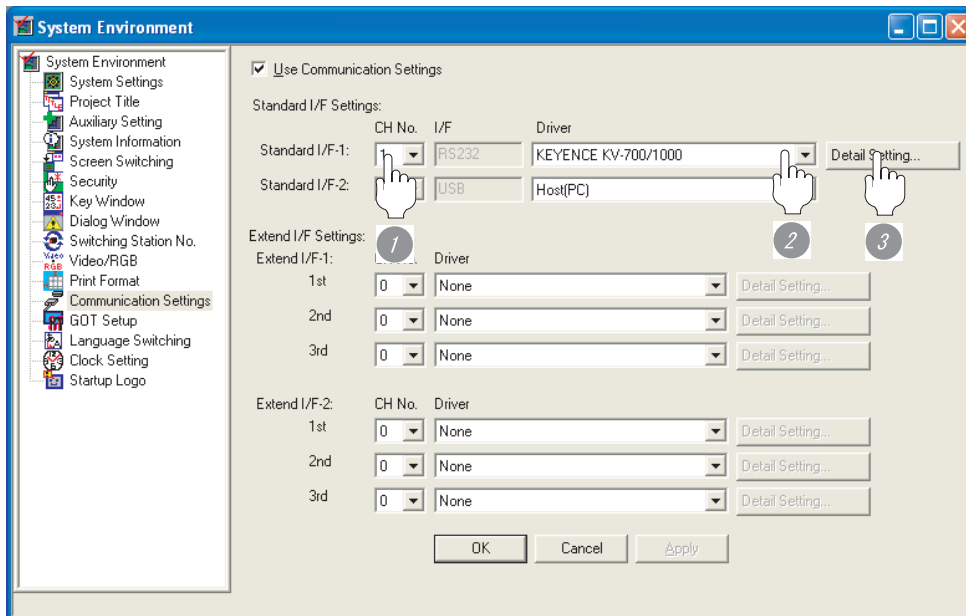
- 1) Standard monitor OS
- 2) Communication driver: KEYENCE KV-700/1000

11.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "KEYENCE KV-700/1000".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Even>	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec
Host Address	Specify the host address (station No. of the PLC to which the GOT is connected) in the network of the GOT. <Default: 0>	0 to 9
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 0>	0 to 300 ms
Station No. Selection	Specify whether to use the station No. during communication. If [Yes] is selected, the station No. is fixed to "0." <Default: No>	Yes or No



- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.


 GT □ User's Manual

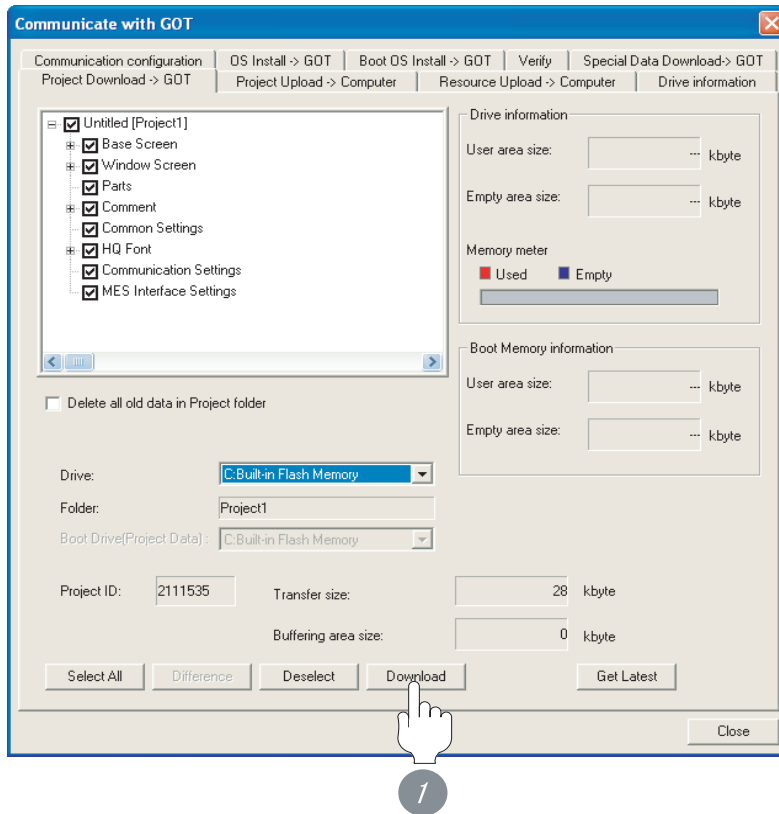
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

11.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


11.3.5 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

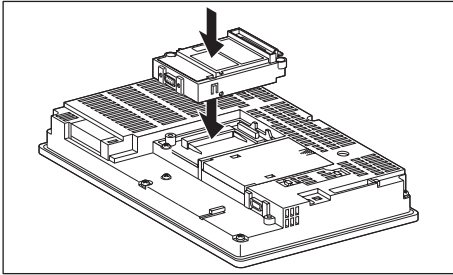1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.



Serial communication unit

For details on the serial communication unit, refer to the following manual:

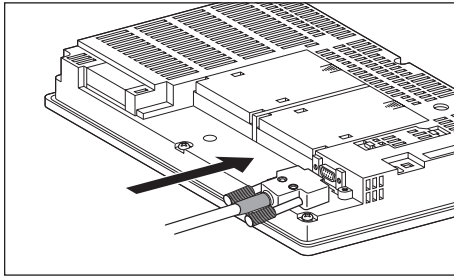
 [GT15 Serial Communication Unit User's Manual](#)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

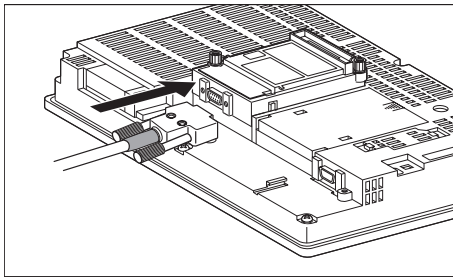- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

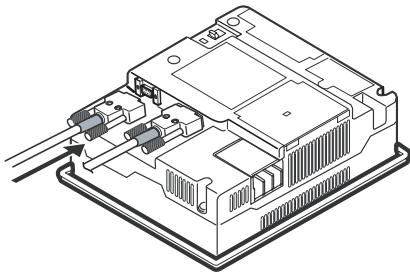(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

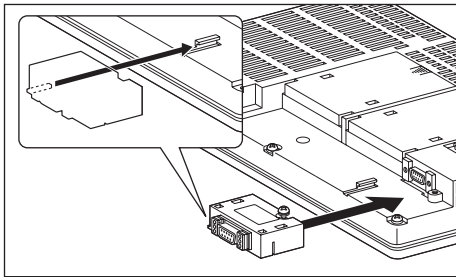- connection to the RS-232 interface




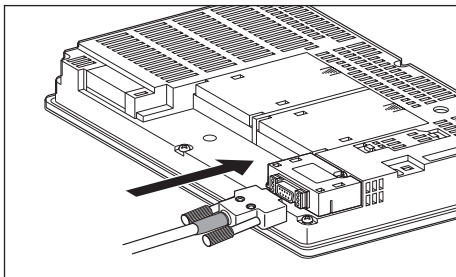- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

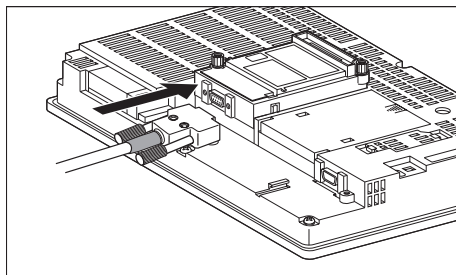- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

☞ GT15 RS-422 Conversion Unit User's Manual

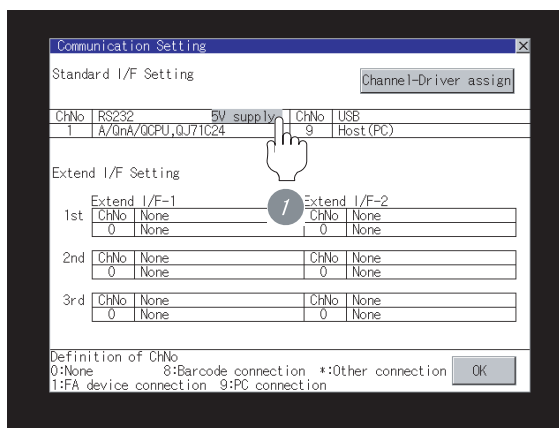
Point

When using the RS-422 conversion unit


On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the utility, refer to the following manual:

 GT □ User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to "YES".

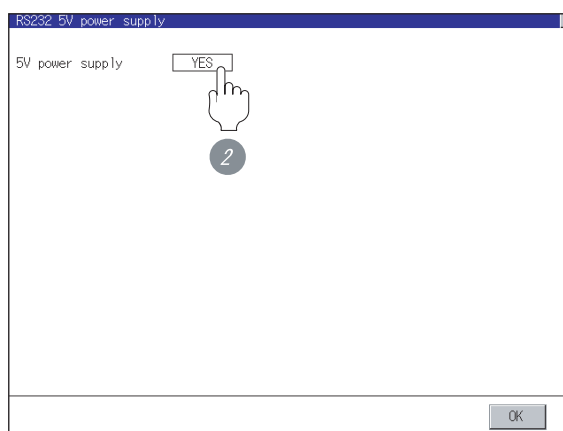

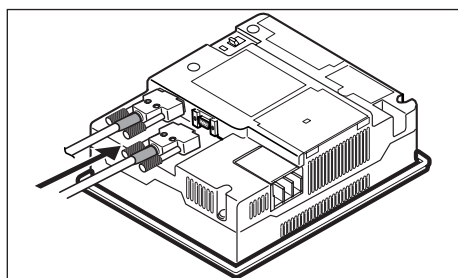
(b) In the case of the GT11



1 Connect the RS-422 cable to the RS-422 interface on the GOT.


(1) How to connect the RS-485 cable

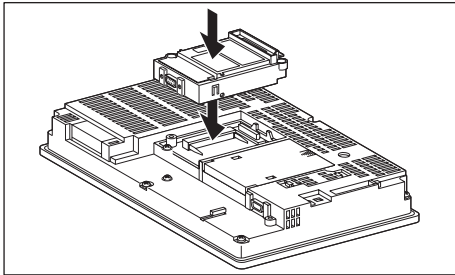(a) For the GT15



- 2 Connect the RS-485 cable to the RS-422/485 communication unit on the GOT.

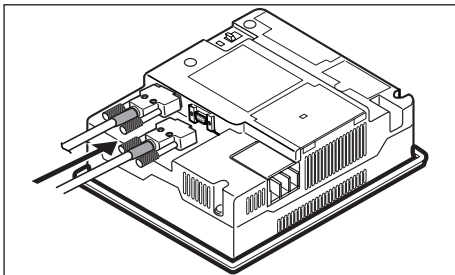(b) For the GT11



- 3 Connect the RS-485 cable to the RS-422 interface on the GOT.

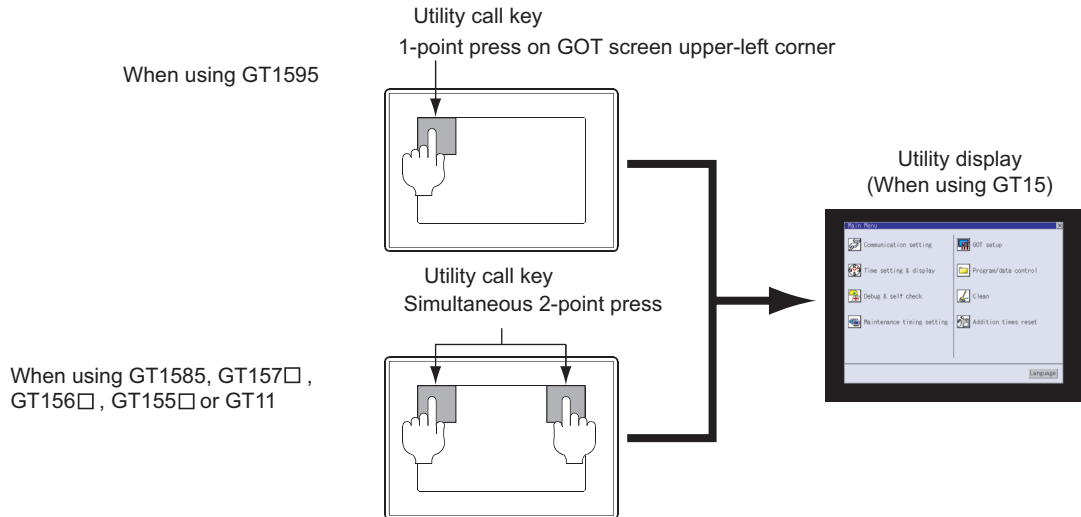
11.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point

When setting the utility call key to 1-point


When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.

For the setting of the utility call key, refer to the following.

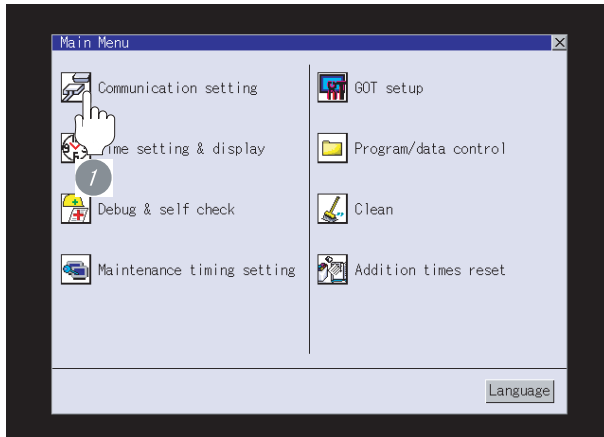☞ GT□ User's Manual



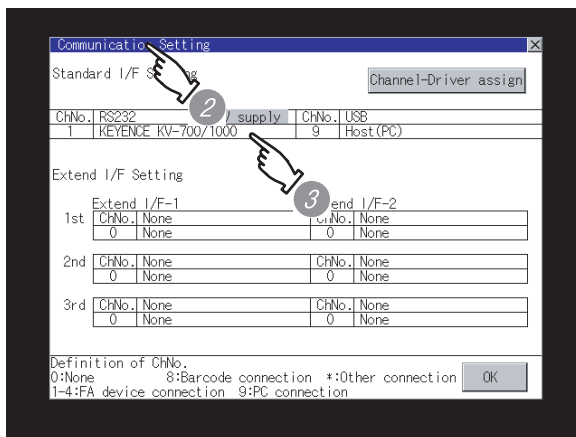- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver: KEYENCE KV-700/1000
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.
 - Section 11.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

GT User's Manual

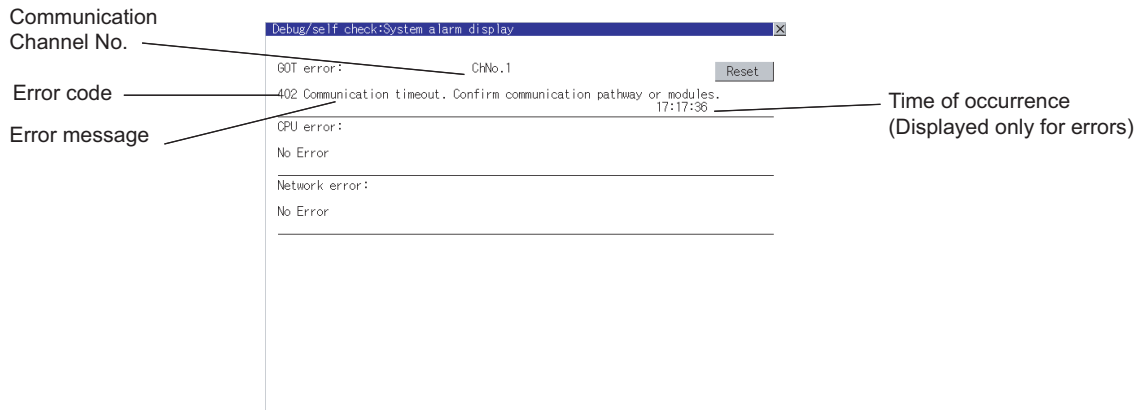
11.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT □ User's Manual (When using GT15)




Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

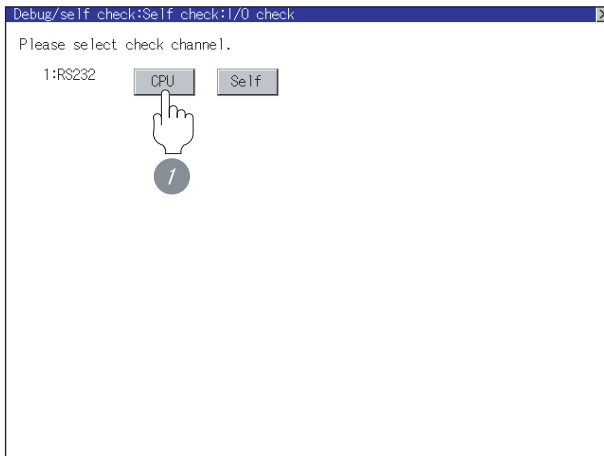
 GT Designer2 Version □ Screen Design Manual

2 Perform an I/O check


Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check]. For details on the I/O check, refer to the following manual:

 GT □ User's Manual



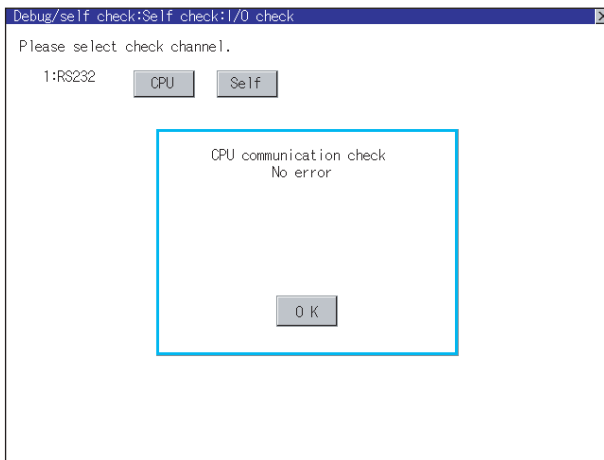
- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side. Confirm if the PLC side setting is correct.

 Section 12.4 PLC Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

11.4 PLC Side Setting



KEYENCE PLC

For details of KEYENCE PLC, refer to the following manual.

User's Manual for the KEYENCE PLC

	Model name	Reference
PLC CPU	KV-1000	Section 11.4.1
	KV-700	Section 11.4.2
Multi-communication unit	KV-L20R	Section 11.4.3
	KV-L20	

11.4.1 Connecting KV-1000

Setting items	Set value
Transmission speed	9600bps to 115200bps ^{*1}
Data length	8 bits
Parity bit	Even
Stop bit	1 bit

*1 There is no transmission speed setting on the PLC side. The transmission speed of the PLC side is automatically adjusted to that of the GOT side.

11.4.2 Connecting KV-700

Setting items	Set value
Transmission speed	9600bps
Data length	8 bits
Parity bit	Even
Stop bit	1 bit

9

ETHERNET
CONNECTION

10

CONNECTION TO
OMRON PLC

11

CONNECTION TO
KEYENCE PLC

12

CONNECTION TO
SHARP PLC

13

CONNECTION TO
JTEKT PLC

14

CONNECTION TO
TOSHIBA PLC

15

CONNECTION TO
HITACHI IES PLC

16

CONNECTION TO
HITACHI PLC

11.4.3 Connecting multi-communication unit (KV-L20R, KV-L20)

1 Communication settings

Setting items	Set value
Communication mode	KV mode (upper link)
Transmission speed ^{*1*2}	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data length	8 bits
Parity bit	Even
Stop bit	1 bit
Station No. ^{*3}	0 to 9

*1 Only the transmission speed that can be set on the GOT side is indicated.

*2 Set the transmission speed according to that of the GOT side
For the setting method of the transmission speed on the GOT side, refer to the following.

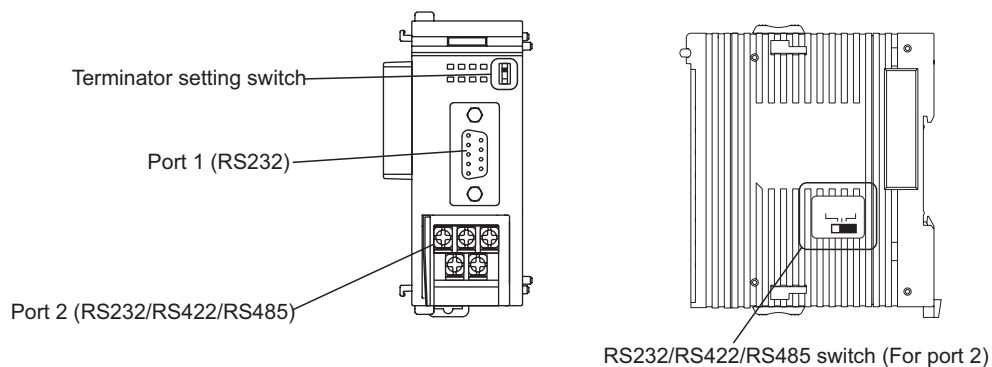
☞ Section 11.3.3 Setting communication interface (Communication settings)

*3 Set the station No. according to the host address on the GOT side.


For the setting method of the host address on the GOT side, refer to the following.

☞ Section 11.3.3 Setting communication interface (Communication settings)

2 Communication format and terminator settings



(1) RS232/RS422/RS485 switch (For port 2)
(When using KV-L20R)




(When using KV-L20)



Settings	
When carrying out RS-232 communication	When carrying out RS-422 communication
RS-232C	RS-422A 485(4)

Settings	
When carrying out RS-232 communication	When carrying out RS-422 communication
RS-232C	RS-422A

- (2) Terminator setting switch
Set when carrying out RS-422 communication.



Settings	
When multi-communication unit is a terminal	When multi-communication unit is not a terminal
ON	OFF

11.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
KEYENCE PLC connection	Supporting the KEYENCE PLC connection	2.18U	Communication driver KEYENCE KV-700/1000 [02.01.**]

CONNECTION TO SHARP PLC



12.1 System Configuration page 12-2

This section describes the equipment and cables needed when connecting a GOT to a SHARP PLC.

Select a system suitable for your application.

12.2 Connection Cable page 12-15

This section describes the specifications of the cables needed when connecting a GOT to a SHARP PLC.

Check the specifications of the connection cables.

12.3 Preparatory Procedures for Monitoring page 12-21

This section provides the procedures to be followed before performing monitoring in connection to a SHARP PLC.

The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

12.4 PLC Side Setting page 12-35

The PLC side settings for GOT connection are explained.

When checking the PLC side settings, refer to this section.

12.5 List of Functions Added by Version Upgrade page 12-42

This section describes the functions added by version upgrade of GT Designer2 or OS.

12.1 System Configuration


Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of ① System configuration and connection conditions correspond to the numbers (e.g. ①) of ② System equipment.
Use these numbers as references when confirming models and applications.

12.1.1 Connecting to JW-21CU or JW-22CU



① System configuration and connection conditions

When connecting to JW-21CU

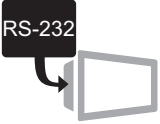



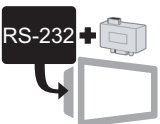

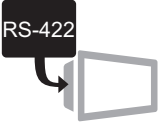



Connection conditions		System configuration
Number of GOTs	Distance	
1	Differs according to PLC side specifications.	

When connecting to JW-22CU

Connection conditions		System configuration
Number of GOTs	Distance	
1	Differs according to PLC side specifications.	


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 




*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	3	Link unit	JW-21CM


3 is a product manufactured by SHARP Corporation. For details of this product, contact SHARP Corporation.

(3) Cable

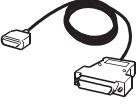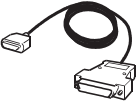Image	No.	Name	Model name
	4	RS-232 cable 1) • Between CPU and GOT	GT09-C30R20601-15P(3m)
	5	RS-422 cable 1) • Between CPU and GOT	GT09-C30R40601-15P(3m) GT09-C100R40601-15P(10m) GT09-C200R40601-15P(20m) GT09-C300R40601-15P(30m)
	6	RS-422 cable 3) • Between link unit and GOT	GT09-C30R40603-6T(3m) GT09-C100R40603-6T(10m) GT09-C200R40603-6T(20m) GT09-C300R40603-6T(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. (☞ Section 12.2 Connection Cable)

12.1.2 Connecting to JW-31CUH, JW-32CUH or JW-33CUH



1 System configuration and connection conditions

When connecting to JW-31CUH

Connection conditions		System configuration
Number of GOTs	Distance	
1	Differs according to PLC side specifications.	

When connecting to JW-32CUH or JW-33CUH

Connection conditions		System configuration
Number of GOTs	Distance	
1	Differs according to PLC side specifications.	

9

ETHERNET
CONNECTION

10

CONNECTION TO
OMRON PLC

11

CONNECTION TO
KEYENCE PLC

12

CONNECTION TO
SHARP PLC

13

CONNECTION TO
JTEKT PLC

14

CONNECTION TO
TOSHIBA PLC

15





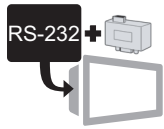





CONNECTION TO
HITACHI IES PLC

16

CONNECTION TO
HITACHI PLC


2 System equipment

(1) GOT

Image	No.	Name	Model name
	①	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	②	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

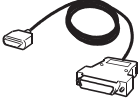
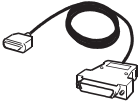

(2) PLC

Image	No.	Name	Model name
	③	Link unit	JW-21CM *2

*2 Use the link unit compatible with JW-31CUH, JW-32CUH or JW-33CUH.

③ is a product manufactured by SHARP Corporation. For details of this product, contact SHARP Corporation.

(3) Cable

Image	No.	Name	Model name
	4	RS-232 cable 2) • Between CPU and GOT	GT09-C30R20602-15P(3m)
	5	RS-422 cable 2) • Between CPU and GOT	GT09-C30R40602-15P(3m) GT09-C100R40602-15P(10m) GT09-C200R40602-15P(20m) GT09-C300R40602-15P(30m)
	6	RS-422 cable 3) • Between link unit and GOT	GT09-C30R40603-6T(3m) GT09-C100R40603-6T(10m) GT09-C200R40603-6T(20m) GT09-C300R40603-6T(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. (☞ Section 12.2 Connection Cable)

9

ETHERNET
CONNECTION

10

CONNECTION TO
OMRON PLC

11

CONNECTION TO
KEYENCE PLC

12

CONNECTION TO
SHARP PLC

13

CONNECTION TO
JTEKT PLC

14

CONNECTION TO
TOSHIBA PLC


15

CONNECTION TO
HITACHI IES PLC

16

CONNECTION TO
HITACHI PLC

12.1.3 Connecting to JW-50CUH



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	Differs according to PLC side specifications.	

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S
		RS-422 interface • For RS-422 communication	— (Built into GOT)


*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.


(2) PLC

Image	No.	Name	Model name
	2	Link unit	JW-10CM, ZW-10CM

2 is a product manufactured by SHARP Corporation. For details of this product, contact SHARP Corporation.

(3) Cable

Image	No.	Name	Model name
	3	RS-422 cable 3) • Between link unit and GOT	GT09-C30R40603-6T(3m) GT09-C100R40603-6T(10m) GT09-C200R40603-6T(20m) GT09-C300R40603-6T(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( Section 12.2 Connection Cable)

9

ETHERNET
CONNECTION

10

CONNECTION TO
OMRON PLC

11

CONNECTION TO
KEYENCE PLC

12

CONNECTION TO
SHARP PLC

13

CONNECTION TO
JTEKT PLC

14

CONNECTION TO
TOSHIBA PLC


15

CONNECTION TO
HITACHI IES PLC

16

CONNECTION TO
HITACHI PLC

12.1.4 Connecting to JW-70CUH, JW-100CUH or JW-100CU



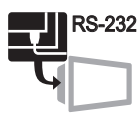

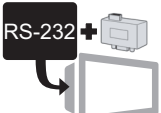







1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	Differs according to PLC side specifications.	<p>4 RS-232 cable 1)</p>
		<p>5 RS-422 cable 1)</p>
		<p>3 Link unit</p> <p>6 RS-422 cable 3)</p>


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT15□.

(2) PLC

Image	No.	Name	Model name
	3	Link unit	JW-21CM


3 is a product manufactured by SHARP Corporation. For details of this product, contact SHARP Corporation.

(3) Cable

Image	No.	Name	Model name
A cable with a DB9 connector on one end and a D-sub connector on the other.	4	RS-232 cable 1) • Between CPU and GOT	GT09-C30R20601-15P(3m)
A cable with a DB9 connector on one end and a D-sub connector on the other.	5	RS-422 cable 1) • Between CPU and GOT	GT09-C30R40601-15P(3m) GT09-C100R40601-15P(10m) GT09-C200R40601-15P(20m) GT09-C300R40601-15P(30m)
A cable with a DB9 connector on one end and three D-sub connectors on the other.	6	RS-422 cable 3) • Between link unit and GOT	GT09-C30R40603-6T(3m) GT09-C100R40603-6T(10m) GT09-C200R40603-6T(20m) GT09-C300R40603-6T(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. (☞ Section 12.2 Connection Cable)

12.1.5 Connecting to Z-512J



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	Differs according to PLC side specifications.	



2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P
		RS-422 interface • For RS-422 communication	— (Built into GOT)
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) Cable

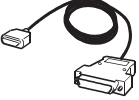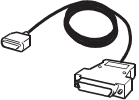Image	No.	Name	Model name
	3	RS-232 cable 2)* ¹ • Between CPU and GOT	GT09-C30R20602-15P(3m)
	4	RS-422 cable 2)* ¹ • Between CPU and GOT	GT09-C30R40602-15P(3m) GT09-C100R40602-15P(10m) GT09-C200R40602-15P(20m) GT09-C300R40602-15P(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. (☞ Section 12.2 Connection Cable)

12.2 Connection Cable

The RS-232 cable or RS-422 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.


Model name		Connection cable		
		RS-232 cable (Refer to Section 12.2.1.)	RS-422 cable (Refer to Section 12.2.2.)	
PLC CPU	JW-22CU	RS-232 cable 1)	RS-422 cable 1)	
	JW-32CUH, JW-33CUH	Connecting to PG/COMM1 port	—	
		Connecting to PG/COMM2 port	RS-232 cable 2)	RS-422 cable 2)
	JW-70CUH, JW-100CUH, JW-100CU		RS-232 cable 1)	RS-422 cable 1)
	Z-512J	Connecting to PG/COMM1 port	—	RS-422 cable 2)
		Connecting to PG/COMM2 port	RS-232 cable 2)	
Link unit	JW-21CM	—	RS-422 cable 3)	
	JW-10CM, ZW-10CM	—		

12.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.


1 Connection diagram

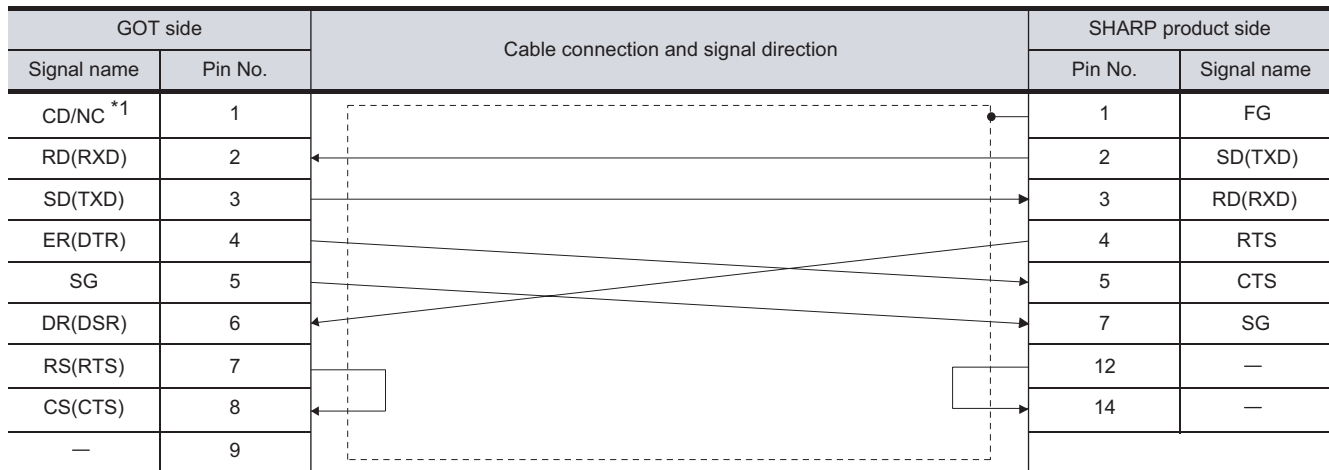(1) RS-232 cable 1)



*1 GT15: CD, GT11:NC

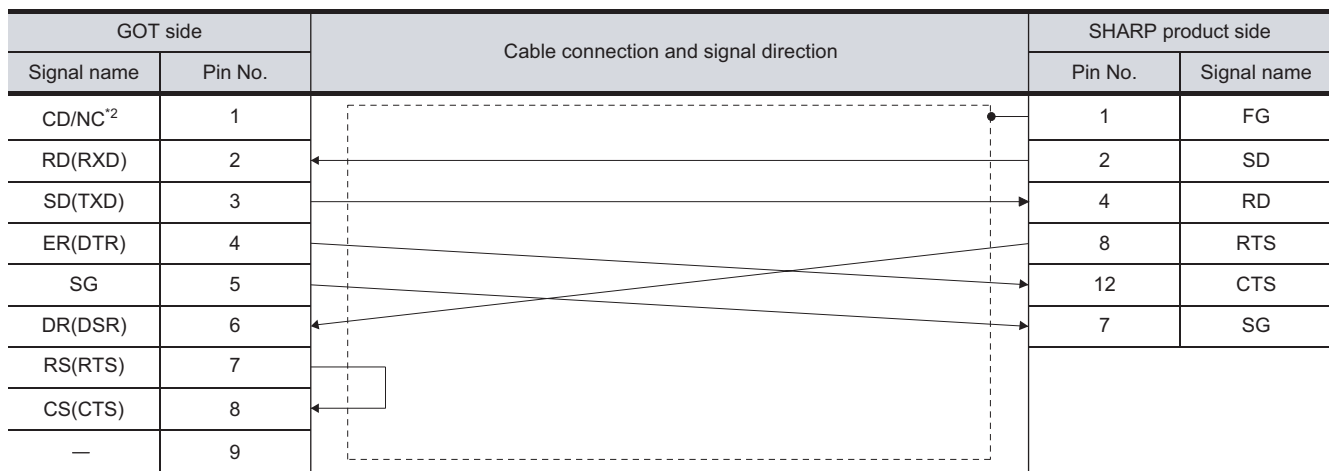(2) RS-232 cable 2)



*2 GT15: CD, GT11:NC

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-		
GT15-RS2-9P	-	17LE-23090-27(D4CK)	


*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) SHARP PLC side connector

Use the connector compatible with the SHARP PLC side module.

For details, refer to the following manual.

 User's Manual for the SHARP PLC

3 Precautions when preparing a cable

The maximum length of the RS-232 cable differs according to the specifications of the SHARP PLC. For details, refer to the following manual.

 User's Manual for the SHARP PLC

12.2.2 RS-422 cable

The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a PLC.

1 Wiring diagram

(1) RS-422 cable 1)

GOT side		Cable connection and signal direction	SHARP product side	
Signal name	Pin No.		Pin No.	Signal name
RDA	2		10	TXD(SD(+))
RDB	7		11	$\overline{\text{TXD}}(\text{SD}(-))$
SDA	1		12	RXD(RD(+))
SDB	6		13	$\overline{\text{RXD}}(\text{RD}(-))$
RSA	3		6	terminating resistor*1
RSB	8		—	—
CSA	4		—	—
CSB	9		—	—
SG	5		7	SG
FG	—			

*1 Connect the terminating resistor at pin 6 with pin 13 (RXD) only at the terminal station.
(Valid for JW-70CUH and JW-100CUH, The terminating resistor does not exist in JW-22CU and JW-100CU.)

(2) RS-422 cable 2)

GOT side		Cable connection and signal direction	SHARP product side	
Signal name	Pin No.		Pin No.	Signal name
RDA	2		3	SD(+)
RDB	7		11	SD(-)
SDA	1		9	RD(+)
SDB	6		10	RD(-)
RSA	3		—	—
RSB	8		—	—
CSA	4		—	—
CSB	9		—	—
SG	5		6	SG
FG	—		7	SG

(3) RS-422 cable 3)

GOT side		Cable connection and signal direction	SHARP product side	
Signal name	Pin No.		Terminal block name	Signal name
RDA	2		L1	SD(+)
RDB	7		L2	SD(-)
SDA	1		L3	RD(+)
SDB	6		L4	RD(-)
RSA	3		—	—
RSB	8		—	—
CSA	4		—	—
CSB	9		—	—
SG	5		SHIELD*1	—
FG	—		FG(GND)	—

*1 Two SHIELD terminals are provided for JW-10CM and ZW-10CM. Connect to either SHIELD terminal.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

(2) SHARP PLC side connector

Use the connector compatible with the SHARP PLC module.

For details, refer to the following manual.

User's Manual for the SHARP PLC

3 Precautions when preparing a cable

The maximum length of the RS-422 cable differs according to the specifications of the SHARP PLC. For details, refer to the following manual.

User's Manual for the SHARP PLC

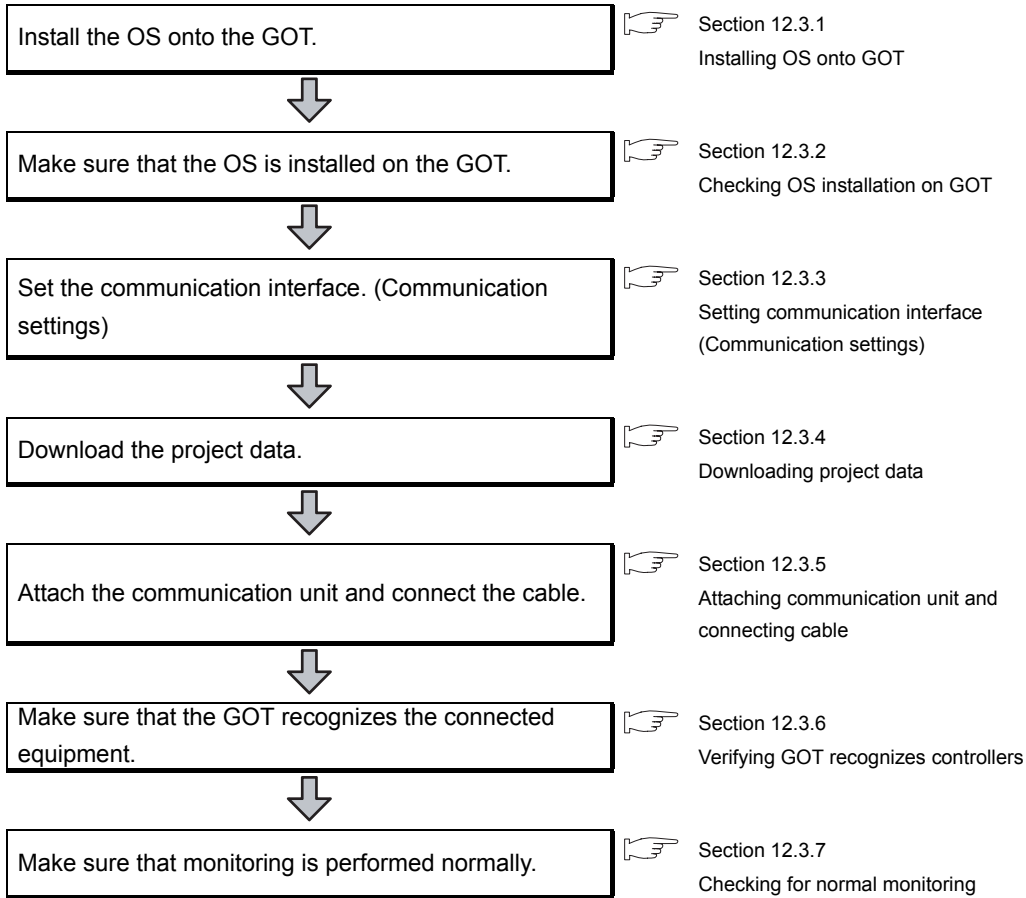
4 Connecting terminating resistors

Connect the terminating resistor on the SHARP PLC side when connecting a GOT to a SHARP PLC. No terminating resistor needs to be connected on the GOT side as one is already built into the GOT. The PLC CPUs and the modules on the PLC CPU side requiring a terminating resistor are shown below.

- (1) JW-22CU
Turn "ON" the terminating resistor setting switch (SW1) on the back of JW-22CU to validate the terminating resistor.
- (2) JW-70CUH and JW-100CUH
Connect the pin 6 (terminating resistor) of the communication port connection connector with the pin 13 ($\overline{\text{RXD}}$) only at the terminal station to validate the terminating resistor.
- (3) JW-21CM, JW-10CM and ZW-10CM
Turn "ON" the terminator switch (SW7) on the front panel only at the terminal station to validate the terminating resistor.

12.3 Preparatory Procedures for Monitoring

The following shows the procedures to be taken before monitoring and corresponding reference sections.




Confirming the PLC side setting


This section explains the GOT side setting.
When confirming the PLC side setting, refer to the following.

Section 12.4 PLC Side Setting

12.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

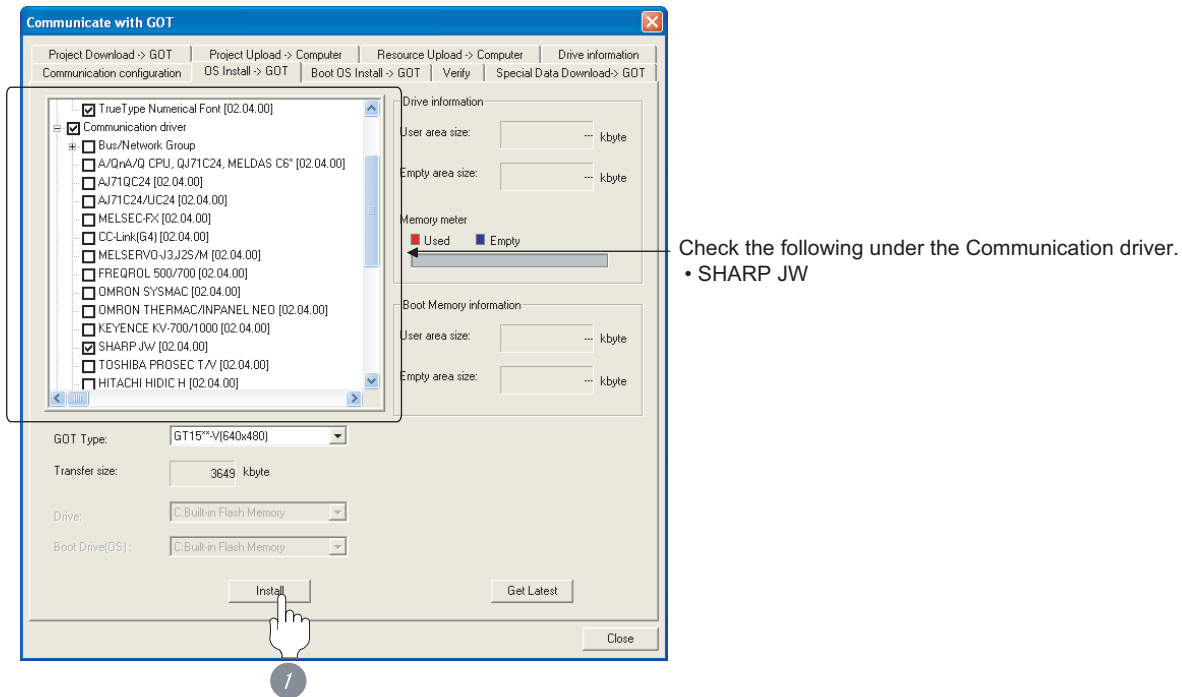
 GT Designer2 Version □ Basic Operation/Data Transfer Manual




- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

12.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

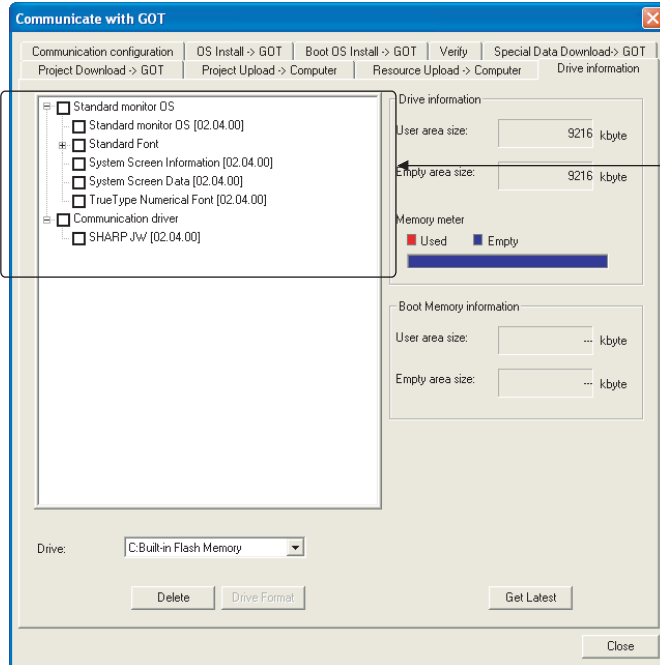 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

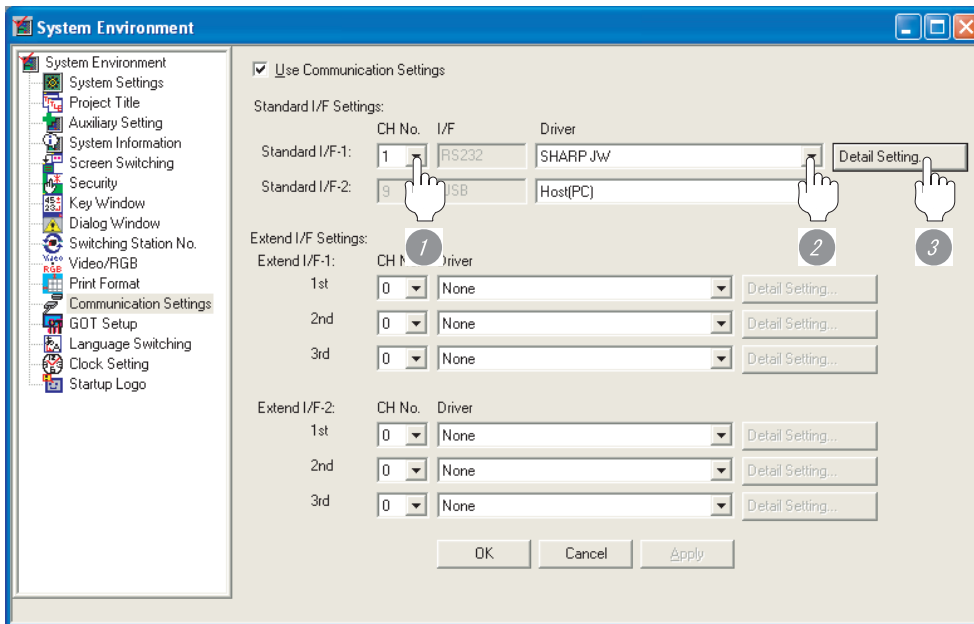
- 1) Standard monitor OS
- 2) Communication driver: SHARP JW

12.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2.
Select the same communication driver as the one installed on the GOT for each communication interface.
For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "SHARP JW".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	4800bps, 9600bps, 19200bps
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. <Default: 3Sec>	3 to 30Sec

(1) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT User's Manual


(2) Precedence in communication settings

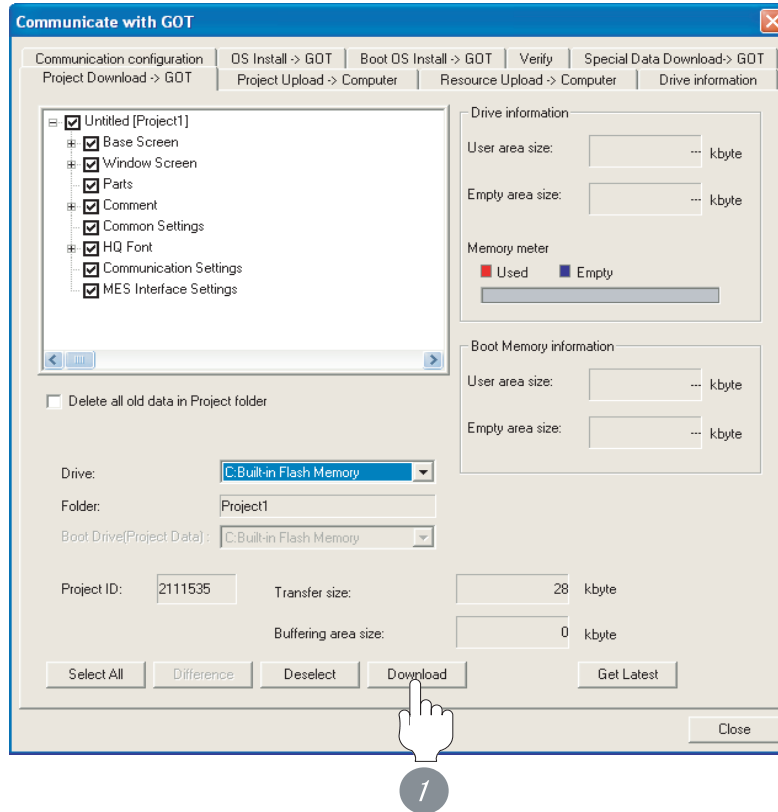
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

12.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


12.3.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

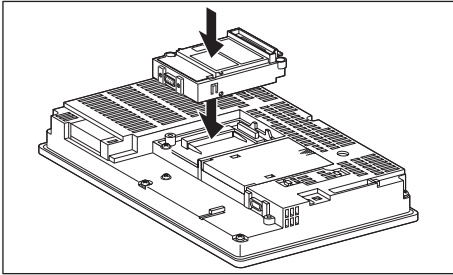1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

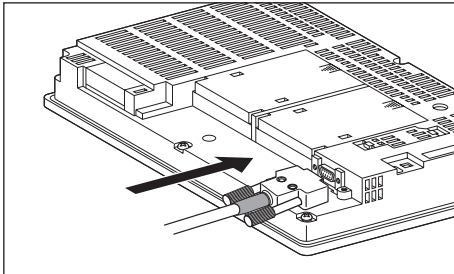
 [GT15 Serial Communication Unit User's Manual](#)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

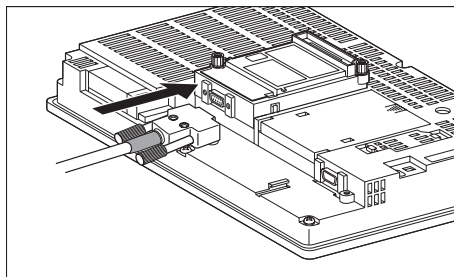- connection to the RS-232 communication unit




- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

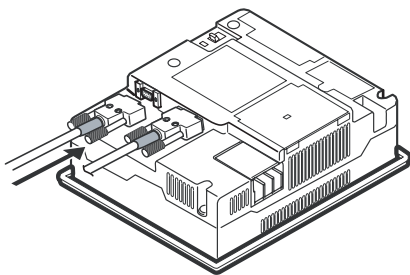(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

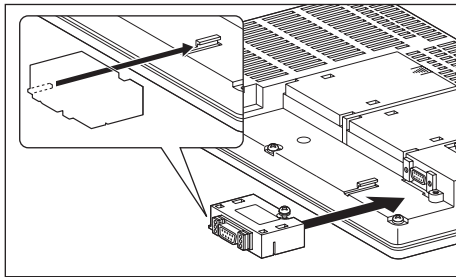- (2) How to connect the RS-422 cable
- (a) For the GT15
- connection to the RS-232 interface




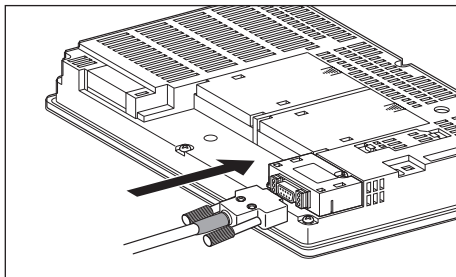- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

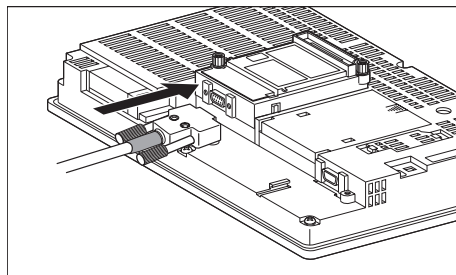- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

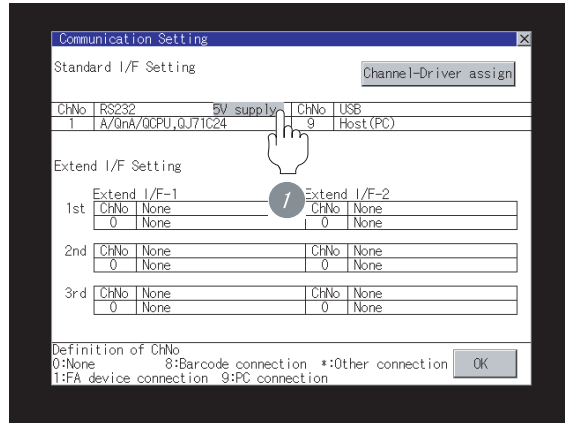
 [GT15 RS-422 Conversion Unit User's Manual](#)

When using the RS-422 conversion unit


On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT.
For details on the utility, refer to the following manual:

 GT □ User's Manual


- 1 Touch [5V supply].



- 2 Set [5V power supply] to "YES".

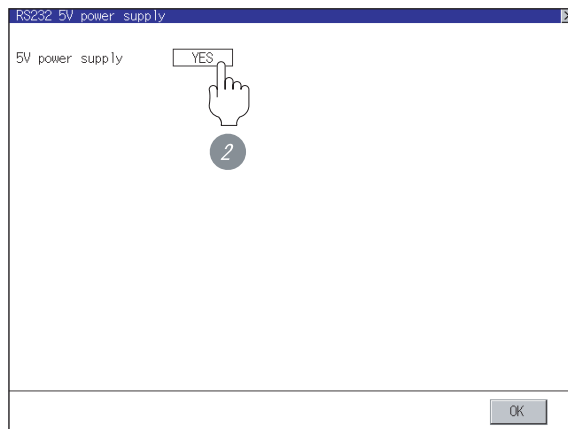

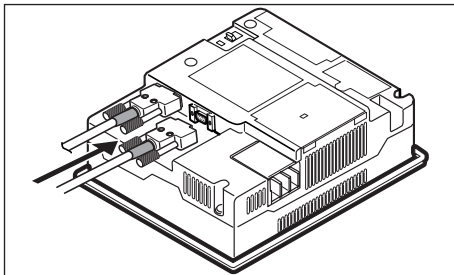(b) In the case of the GT11



- 1 Connect the RS-422 cable to the RS-422 interface on the GOT.

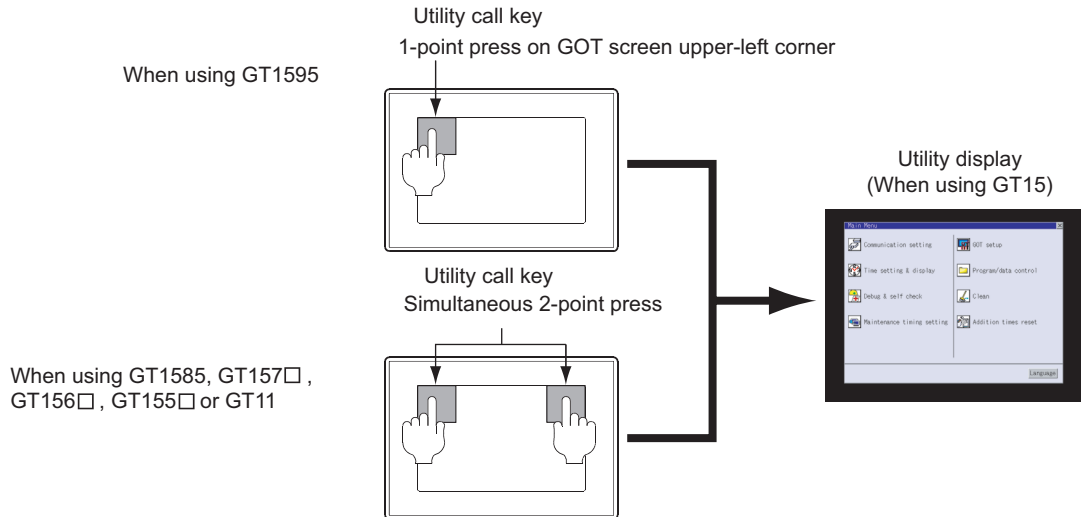
12.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point


When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

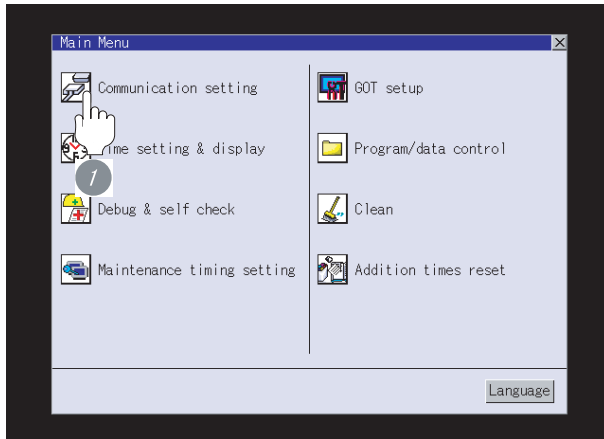☞ GT□ User's Manual



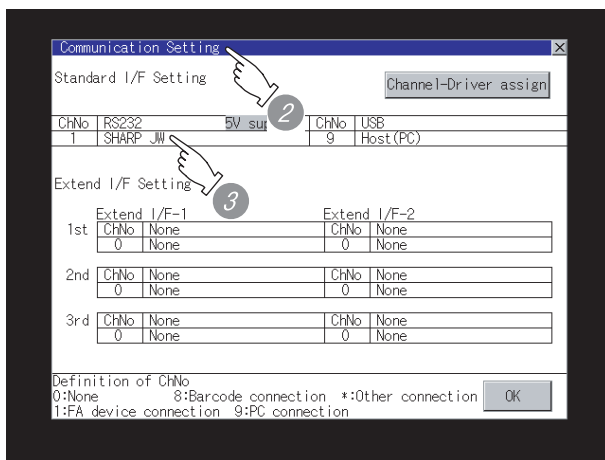- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver: SHARP JW
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.
 - Section 12.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

GT □ User's Manual

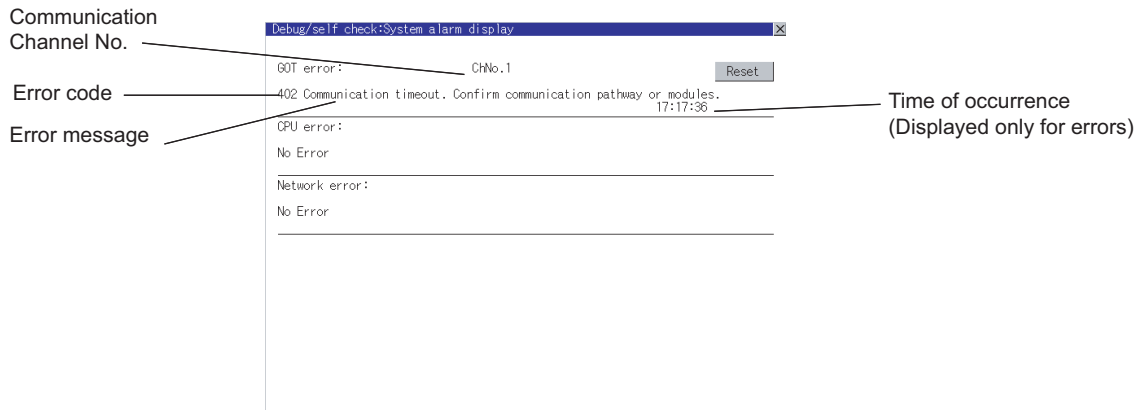
12.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT User's Manual (When using GT15)



Communication Channel No.	Error code	Error message	Time of occurrence (Displayed only for errors)
	GOT error:		
	402	Communication timeout. Confirm communication pathway or modules.	17:17:36
	CPU error:	No Error	
	Network error:	No Error	




Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

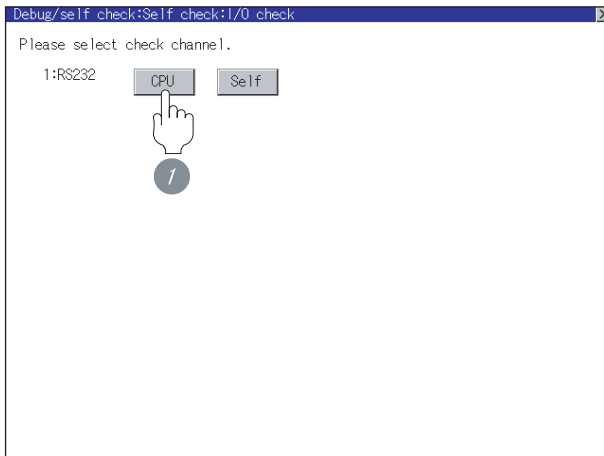
 GT Designer2 Version Screen Design Manual

2 Perform an I/O check


Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].
For details on the I/O check, refer to the following manual:

 GT □ User's Manual



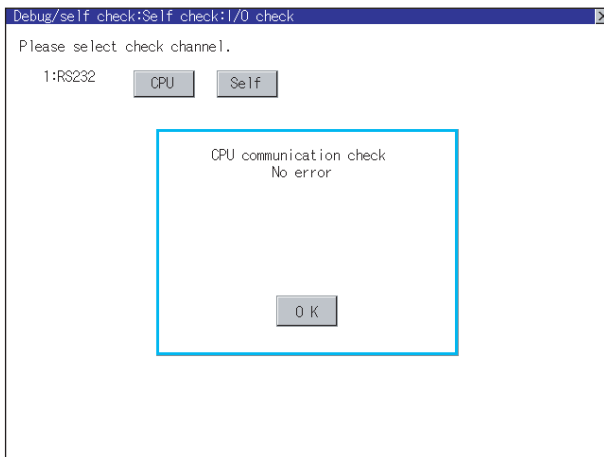
- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side. Confirm if the PLC side setting is correct.

 Section 12.4 PLC Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

12.4 PLC Side Setting



SHARP PLC

For details of the SHARP PLC, refer to the following manual.

User's Manual for the SHARP PLC

	Model name	Reference
PLC CPU	JW-22CU	Section 12.4.1
	JW-32CUH, JW-33CUH	Section 12.4.2
	JW-70CUH, JW-100CUH, JW-100CU	Section 12.4.1
	Z-512J	Section 12.4.2
Link unit	JW-21CM	Section 12.4.3
	JW-10CM, ZW-10CM	Section 12.4.4

12.4.1 Connecting to JW-22CU, JW-70CUH, JW-100CUH or JW-100CU

1 System memory setting

Make the system memory setting.

System memory No.	Item	Setting																
#236	Transmission speed, parity and stop bit	<table border="1"> <tr> <td>D7</td> <td>D6</td> <td>D5</td> <td>D4</td> <td>D3</td> <td>D2</td> <td>~</td> <td>D0</td> </tr> <tr> <td>0</td> <td>0</td> <td>(3)</td> <td>(2)</td> <td></td> <td></td> <td></td> <td>(1)</td> </tr> </table> <p>(1) Transmission speed *1 *2 000: 19200bps 001: 9600bps 010: 4800bps</p> <p>(2) Parity 10 (fixed): Even</p> <p>(3) Stop bit 1 (fixed): 2 bits</p>	D7	D6	D5	D4	D3	D2	~	D0	0	0	(3)	(2)				(1)
D7	D6	D5	D4	D3	D2	~	D0											
0	0	(3)	(2)				(1)											
#237	Station No.	1: Station No. 1 (fixed)																


*1 This indicates only the transmission speed that can be specified on the GOT side.

*2 Specify the transmission speed to match the transmission speed of the GOT.
 For how to set the transmission speed of the GOT, refer to the following.

 Section 12.3.3 Setting communication interface (Communication settings)

2 Terminating resistor setting switch (For JW-22CU only)

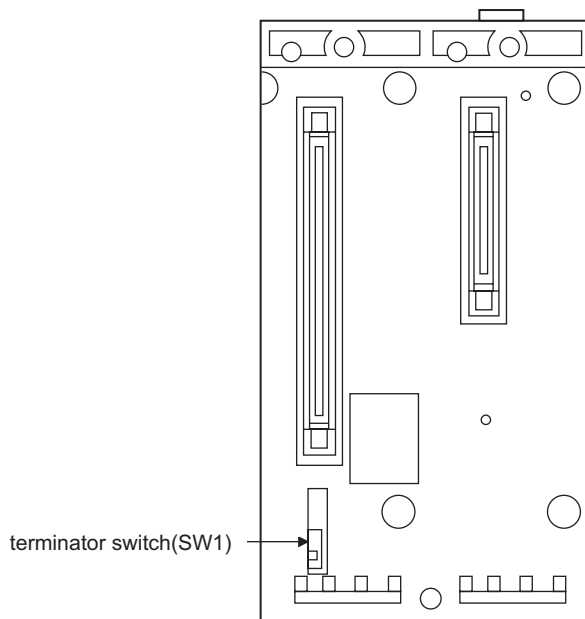Set the terminating resistor setting switch.



Setting	
RS-232 communication	RS-422 communication
OFF (terminating resistor validated)	ON (terminating resistor invalidated)

12.4.2 Connecting to JW-32CUH, JW-33CUH or Z-512J

1 Settings for connecting to communication port 1 (PG/COMM1 port)

Set the system memory.

System memory No.	Item	Setting																
#234	Transmission speed, parity and stop bit	<table border="1"> <tr> <td>D7</td> <td>D6</td> <td>D5</td> <td>D4</td> <td>D3</td> <td>D2</td> <td>~</td> <td>D0</td> </tr> <tr> <td>0</td> <td>0</td> <td>(3)</td> <td>(2)</td> <td>(1)</td> <td></td> <td></td> <td></td> </tr> </table> <p>(1) Transmission speed *1 *2 000: 19200bps 001: 9600bps 010: 4800bps</p> <p>(2) Parity 10 (fixed): Even</p> <p>(3) Stop bit 1 (fixed): 2 bits</p>	D7	D6	D5	D4	D3	D2	~	D0	0	0	(3)	(2)	(1)			
D7	D6	D5	D4	D3	D2	~	D0											
0	0	(3)	(2)	(1)														
#235	Station No.	1: Station No. 1 (fixed)																

*1 This indicates only the transmission speeds that can be specified on the GOT side.

*2 Specify the transmission speed to match the transmission speed of the GOT.
 For how to set the transmission speed of the GOT, refer to the following.

 Section 12.3.3 Setting communication interface (Communication settings)

2 Settings for connecting to communication port 2 (PG/COMM2 port)

Set the system memory.

System memory No.	Item	Setting																
#236	Transmission speed, parity and stop bit	<table border="1"> <tr> <td>D7</td> <td>D6</td> <td>D5</td> <td>D4</td> <td>D3</td> <td>D2</td> <td>~</td> <td>D0</td> </tr> <tr> <td>0</td> <td>0</td> <td>(3)</td> <td>(2)</td> <td>(1)</td> <td></td> <td></td> <td></td> </tr> </table> <p>(1) Transmission speed *3 *4 000: 19200bps 001: 9600bps 010: 4800bps</p> <p>(2) Parity 10 (fixed): Even</p> <p>(3) Stop bit 1 (fixed): 2 bits</p>	D7	D6	D5	D4	D3	D2	~	D0	0	0	(3)	(2)	(1)			
D7	D6	D5	D4	D3	D2	~	D0											
0	0	(3)	(2)	(1)														
#237	Station No.	1: Station No. 1 (fixed)																

*3 This indicates only the transmission speeds that can be specified on the GOT side.


*4 Specify the transmission speed to match the transmission speed of the GOT.
 For how to set the transmission speed of the GOT, refer to the following.

 Section 12.3.3 Setting communication interface (Communication settings)

12.4.3 Connecting to the link unit (JW-31CM)

1 Switch setting of the link unit (JW-21CM)

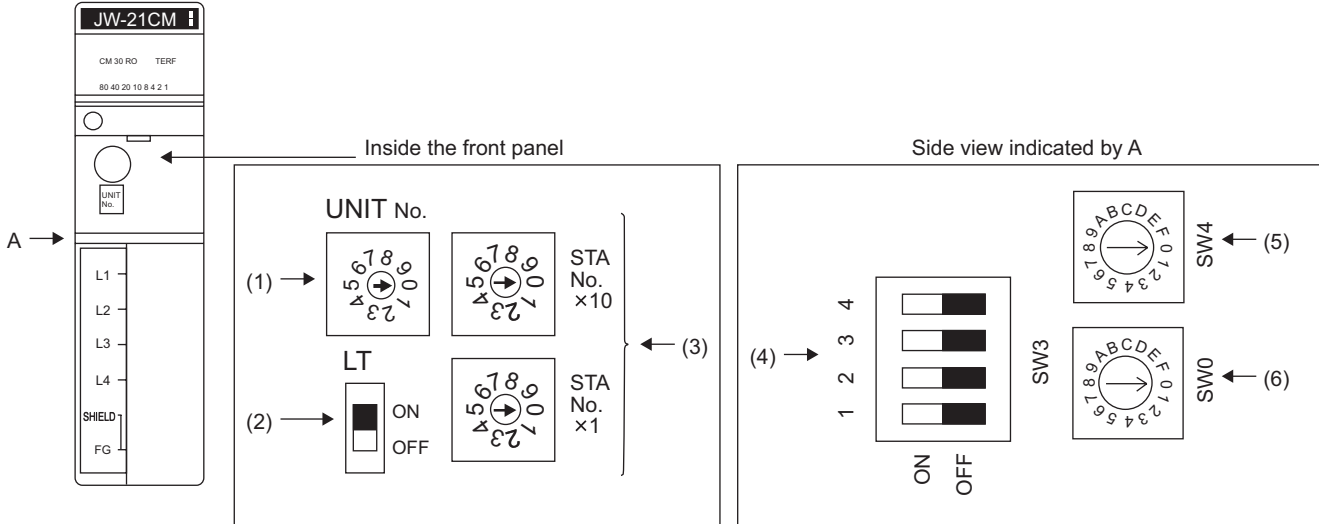
Make setting for each switch.



(1) Module No. switch (SW8)

The module No. switch is not used for communication with the GOT.


(2) Terminator switch(SW7)



Setting	Description
ON*1	Terminating resistor validated


*1 Turn on only for the terminal station.

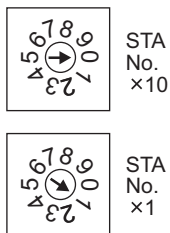(3) Station number setting switch(SW1,CSW2)



Switch No.	Setting	Description
SW1	Station No. lower digit (10 ⁰ digit)	1 (fixed)
SW2	Station No. upper digit (10 ¹ digit)	0 (fixed)

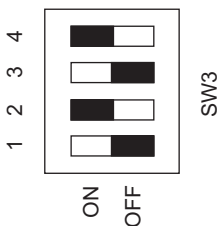
(4) Operation mode setting switch(SW3)



Switch No.	Setting	Description
SW3-1	OFF (fixed)	Invalid
SW3-2	ON (fixed)	4-wire type
SW3-3	OFF (fixed)	Invalid
SW3-4	ON (fixed)	Even

- (5) Transmission speed setting switch (SW4)
Specify the transmission speed to match the transmission speed of the GOT.
For how to set the transmission speed of the GOT, refer to the following.


 Section 12.3.3 Setting communication interface (Communication settings)



Setting*1	Description
0	19200bps
1	9600bps
2	4800bps

*1 Indicates only the transmission speed that can be specified on the GOT side.


- (6) Function setting switch(SW0)




Setting	Description
4 (fixed)	Computer link

12.4.4 Connecting to the link unit (JW-10CM or ZW-10CM)

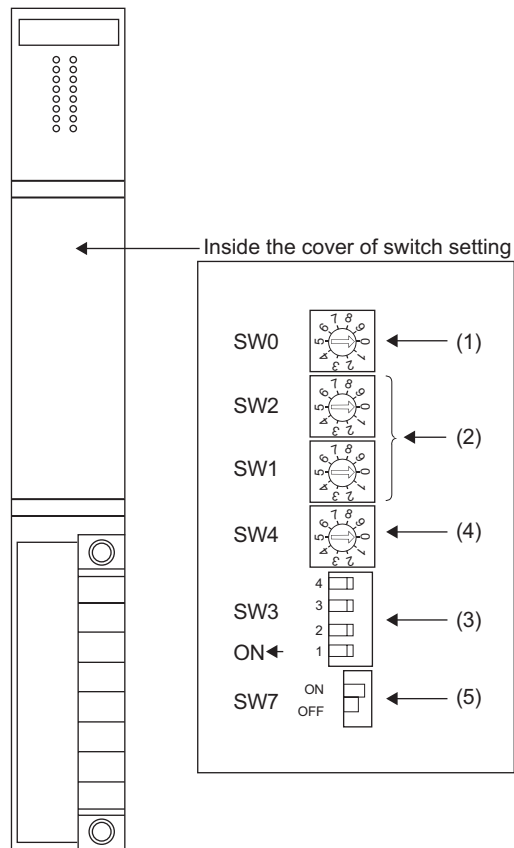1 Switch setting of link unit (JW-10CM and ZW-10CM)




(1) Function setting switch(SW0)



Setting	Description
4 (fixed)	Computer link(command mode)

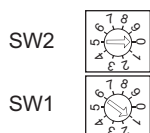(2) Station number switch(SW1,CSW2)



Switch No.	Setting	Description
SW1	Station No. lower digit (10^0 digit)	1 (fixed)
SW2	Station No. upper digit (10^1 digit)	0 (fixed)

(3) Operation mode setting switch(SW3)



Switch No.	Setting	Description
SW3-1	OFF (fixed)	Invalid
SW3-2	ON (fixed)	4-wire type
SW3-3	OFF (fixed)	Invalid
SW3-4	ON (fixed)	Even

- (4) Transmission speed setting switch (SW4)
Specify the transmission speed to match the transmission speed of the GOT.
For how to set the transmission speed of the GOT, refer to the following.

 Section 12.3.3 Setting communication interface (Communication settings)



Setting*1	Description
0	19200bps
1	9600bps
2	4800bps

*1 This indicates only the transmission speed that can be specified on the GOT side.

- (5) Terminator switch(SW7)



Setting	Description
ON*2	Terminating resistor

*2 Set to ON only for the terminal station.

12.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
SHARP PLC connection	Supporting the SHARP PLC connection	2.09K	Communication driver SHARP JW [01.02.**]

CONNECTION TO JTEKT PLC



13.1 System Configuration page 13-2

This section describes the equipment and cables needed when connecting a GOT to an JTEKT PLC. Select a system suitable for your application.

13.2 Connection Cable page 13-15

This section describes the specifications of the cables needed when connecting to an JTEKT PLC. Check the specifications of the connection cables.

13.3 Preparatory Procedures for Monitoring page 13-21

This section provides the procedures to be followed before performing monitoring in connection to an JTEKT PLC. This procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

13.4 PLC Side Setting page 13-36

The PLC side settings for GOT connection are explained. When checking the PLC side settings, refer to this section.

13.5 Precautions page 13-42

This section describes the precautions about PLC connection. Refer to this section without fail before starting PLC connection.

13.6 List of Functions Added by Version Upgrade page 13-43

This section describes the functions added by version upgrade of GT Designer2 or OS.

13.1 System Configuration


Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.

13.1.1 Connecting to PC3JG or PC3JG-P



1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of PLCs	Distance	
1	Max. 32 units	Between GOT and interface converter 15m or less	
		Between interface converter and PLC 500m or less	
1	Max. 32 units	Between GOT and interface converter 15m or less	
		Between interface converter and PLC 500m or less	
1	Max. 32 units	Between GOT and interface converter 15m or less	
		Between interface converter and PLC 500m or less	

Connection conditions			System configuration
Number of GOTs	Number of PLCs	Distance	
1	Max. 32 units	Between GOT and PLC 500m or less	<p>Max. 32 units</p> <p>5 Link unit 2)</p> <p>2</p> <p>10 RS-422 cable 4)</p> <p>11 RS-422 cable 7) (Dedicated cable)</p> <p>MAX500m</p>



2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P
		RS-422 interface • For RS-422 communication	— (Built into GOT)
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S





*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.


(2) PLC

Image	No.	Name	Model name
	3	RS-232/RS-422 interface converter	TXU-2051
	4	Link unit 1)	THU-2755
			THU-2927
	5	Link unit 2)	THU-5139

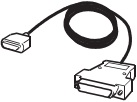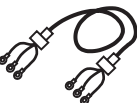3, 4, 5 is manufactured by JTEKT CORPORATION. For details of the product, contact JTEKT CORPORATION.

(3) Cable

Image	No.	Name	Model name
	6	RS-232 cable 1)* ¹ • Between RS-232/RS-422 interface converter and GOT	GT09-C30R21201-25P(3m)
	7	RS-422 cable 1) • Between RS-232/RS-422 interface converter and PLC	(To be prepared by the user.  Section 13.2 Connection Cable)
	8	RS-422 cable 2) • Between RS-232/RS-422 interface converter and Link unit	
	9	RS-422 cable 3) • Between RS-232/RS-422 interface converter and Link unit	
	10	RS-422 cable 4) • Between Link unit and Link unit	
	11	RS-422 cable 7)* ¹ • Between Link unit and GOT	GT09-C30R41201-6C(3m) GT09-C100R41201-6C(10m) GT09-C200R41201-6C(20m) GT09-C300R41201-6C(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( Section 13.2 Connection Cable)

13.1.2 Connecting to PC3J or PC3JL

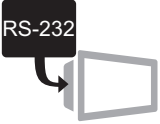



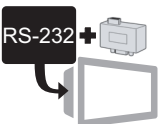

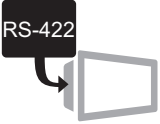



1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of PLCs	Distance	
1	Max. 32 units	Between GOT and interface converter 15m or less	
		Between interface converter and PLC 500m or less	
1	Max. 32 units	Between GOT and interface converter 15m or less	
		Between interface converter and PLC 500m or less	
1	Max. 32 units	Between GOT and interface converter 15m or less	
		Between interface converter and PLC 500m or less	
1	Max. 32 units	Between GOT and interface converter 15m or less	
		Between interface converter and PLC 500m or less	

Connection conditions			System configuration
Number of GOTs	Number of PLCs	Distance	
1	Max. 32 units	Between GOT and PLC 500m or less	
1	Max. 32 units	Between GOT and PLC 500m or less	



2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 

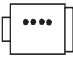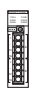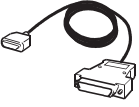
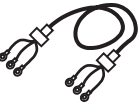

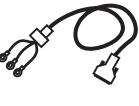
*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.


(2) PLC

Image	No.	Name	Model name
	3	RS-232/RS-422 interface converter	TXU-2051
	4	Link unit 1)	THU-2755
			THU-2927
	5	Link unit 2)	THU-5139

3, 4, 5 is manufactured by JTEKT CORPORATION. For details of the product, contact JTEKT CORPORATION.

(3) Cable

Image	No.	Name	Model name
	6	RS-232 cable 1)* ¹ • Between RS-232/RS-422 interface converter and GOT	GT09-C30R21201-25P(3m)
	7	RS-422 cable 1) • Between RS-232/RS-422 interface converter and PLC	(To be prepared by the user.  Section 13.2 Connection Cable)
	8	RS-422 cable 5) • Between RS-232/RS-422 interface converter and PLC	
	9	RS-422 cable 2) • Between RS-232/RS-422 interface converter and link unit	
	10	RS-422 cable 3) • Between link unit and GOT	
	11	RS-422 cable 4) • Between link unit and link unit	
	12	RS-422 cable 6) • Between PLC and PLC	
	13	RS-422 cable 7)* ¹ • Between PLC and GOT	GT09-C30R41201-6C(3m) GT09-C100R41201-6C(10m) GT09-C200R41201-6C(20m) GT09-C300R41201-6C(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( Section 13.2 Connection Cable)

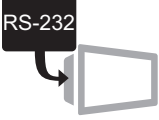



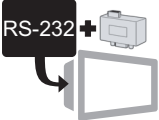

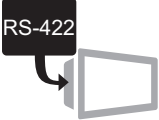



13.1.3 Connecting to PC2J

1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of PLCs	Distance	
1	Max. 32 units	Between GOT and interface converter 15m or less	<p>Max. 32 units</p> <p>4 Link unit 1)</p> <p>3 RS-232/RS-422 interface converter</p> <p>7 RS-422 cable 2)</p> <p>6 RS-232 cable 1)</p> <p>MAX500m</p> <p>MAX15m</p> <p>1</p>
		Between interface converter and PLC 500m or less	
1	Max. 32 units	Between GOT and interface converter 15m or less	<p>Max. 32 units</p> <p>5 Link unit 2)</p> <p>3 RS-232/RS-422 interface converter</p> <p>8 RS-422 cable 3)</p> <p>6 RS-232 cable 1)</p> <p>MAX500m</p> <p>MAX15m</p> <p>1</p>
		Between interface converter and PLC 500m or less	
1	Max. 32 units	Between GOT and PLC 500m or less	<p>Max. 32 units</p> <p>5 Link unit 2)</p> <p>9 RS-422 cable 4)</p> <p>10 RS-422 cable 7) (Dedicated cable)</p> <p>MAX500m</p> <p>2</p>



2 System equipment

(1) GOT

Image	No.	Name	Model name
	①	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
		RS-422 conversion unit ^{*1} • For RS-422 communication	GT15-RS2T4-9P 
	②	RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 





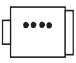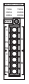*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.


(2) PLC

Image	No.	Name	Model name
	③	RS-232/RS-422 interface converter	TXU-2051
	④	Link unit 1)	THU-2755
			THU-2927
	⑤	Link unit 2)	THU-5139

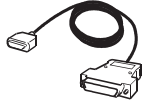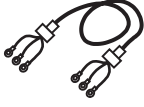③, ④, ⑤ is manufactured by JTEKT CORPORATION. For details of the product, contact JTEKT CORPORATION.

(3) Cable

Image	No.	Name	Model name
	6	RS-232 cable 1)*1 • Between RS-232/RS-422 interface converter and GOT	GT09-C30R21201-25P(3m)
	7	RS-422 cable 2) • Between RS-232/RS-422 interface converter and link unit	(To be prepared by the user.  Section 13.2 Connection Cable)
	8	RS-422 cable 3) • Between RS-232/RS-422 interface converter and link unit	
	9	RS-422 cable 4) • Between link unit and link unit	
	10	RS-422 cable 7)*1 • Between link unit and GOT	GT09-C30R41201-6C(3m) GT09-C100R41201-6C(10m) GT09-C200R41201-6C(20m) GT09-C300R41201-6C(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( Section 13.2 Connection Cable)

9

ETHERNET CONNECTION

10

CONNECTION TO OMRON PLC

11

CONNECTION TO KEYENCE PLC

12

CONNECTION TO SHARP PLC

13

CONNECTION TO JTEKT PLC

14

CONNECTION TO TOSHIBA PLC

15

CONNECTION TO HITACHI IES PLC

16

CONNECTION TO HITACHI PLC

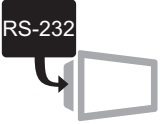



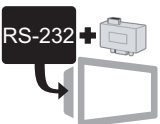

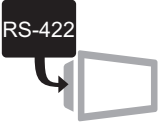



13.1.4 Connecting to PC2JC, PC2J16P or PC2J16PR

1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of PLCs	Distance	
1	Max. 32 units	Between GOT and interface converter 15m or less	
		Between interface converter and PLC 500m or less	
1	Max. 32 units	Between GOT and interface converter 15m or less	
		Between interface converter and PLC 500m or less	
1	Max. 32 units	Between GOT and interface converter 15m or less	
		Between interface converter and PLC 500m or less	
1	Max. 32 units	Between GOT and PLC 500m or less	



2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 




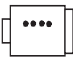

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT15□.


(2) PLC

Image	No.	Name	Model name
	3	RS-232/RS-422 interface converter	TXU-2051
	4	Link unit 1)	THU-2755 THU-2927
	5	Link unit 2)	THU-5139

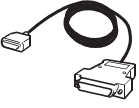3, 4, 5 is manufactured by JTEKT CORPORATION. For details of the product, contact JTEKT CORPORATION.

(3) Cable

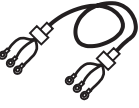Image	No.	Name	Model name
	6	RS-232 cable 1)* ¹ • Between RS-232/RS-422 interface converter and GOT	GT09-C30R21201-25P(3m)
	7	RS-422 cable 1) • Between RS-232/RS-422 interface converter and PLC	(To be prepared by the user.  Section 13.2 Connection Cable)
	8	RS-422 cable 2) • Between RS-232/RS-422 interface converter and link unit	
	9	RS-422 cable 3) • Between RS-232/RS-422 interface converter and link unit	
	10	RS-422 cable 4) • Between link unit and link unit	
	11	RS-422 cable 7)* ¹ • Between link unit and GOT	GT09-C30R41201-6C(3m) GT09-C100R41201-6C(10m) GT09-C200R41201-6C(20m) GT09-C300R41201-6C(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( Section 13.2 Connection Cable

13.2 Connection Cable

The RS-232 cable or RS-422 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable	
		RS-232 cable (Refer to Section 13.2.1)	RS-422 cable (Refer to Section 13.2.2)
PLC	PC3JG, PC3JG-P	-	RS-422 cable 1)
	PC3J, PC3JL		RS-422 cable 1), RS-422 cable 5) RS-422 cable 6), RS-422 cable 7)
	PC2JC, PC2J16P, PC2J16PR		RS-422 cable 1)
RS-232/RS-422 interface converter	TXU-2051	RS-232 cable 1)	RS-422 cable 1), RS-422 cable 2) RS-422 cable 3), RS-422 cable 5)
Link unit	THU-2755	-	RS-422 cable 2)
	THU-2927		RS-422 cable 3), RS-422 cable 4) RS-422 cable 7)
	THU-5139		

13.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.

1 Connection diagram

(1) RS-232 cable 1)

GOT side		Cable connection and signal direction	JTEKT product side (RS-232/RS-422) Interface converter	
Signal name	Pin No.		Pin No.	Signal name
-	1		1	FG
RD(RXD)	2		3	RD
SD(TXD)	3		2	TD
ER(DTR)	4		4	RS
SG	5		7	OV
DR(DSR)	6			
RS(RTS)	7			
CS(CTS)	8			
NC	9			
FG	-			

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model


GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) JTEKT PLC side connector

Use the connector compatible with the JTEKT PLC side module. For details, refer to the following manual.

 User's Manual for the JTEKT PLC.

3 Precautions when preparing a cable


The length of the RS-232 cable must be 15m or less.

13.2.2 RS-422 cable

The following provides the connection diagrams and the connectors of the RS-422 cable connecting the GOT to the PLC.

1 Connection diagram

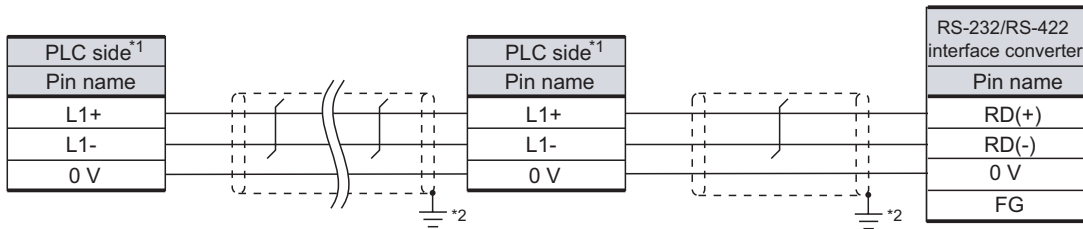
- (1) RS-422 cable 1)
(For PC3JG-P/PC3JG)



*1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.

*2 Connect FG grounding to the appropriate part of a cable shield line.

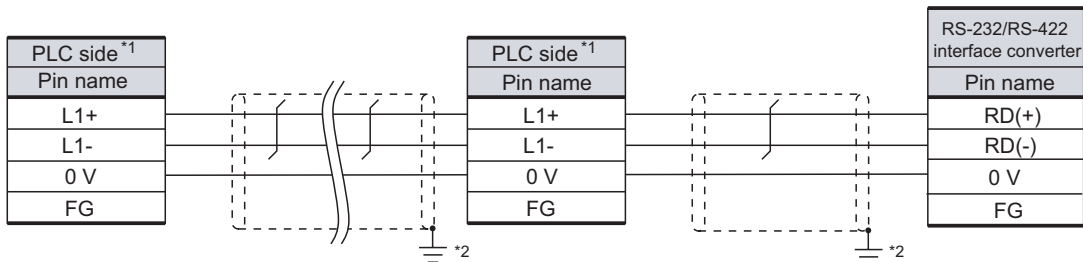
(For PC3J/PC3JL)



*1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.

*2 Connect FG grounding to the appropriate part of a cable shield line.

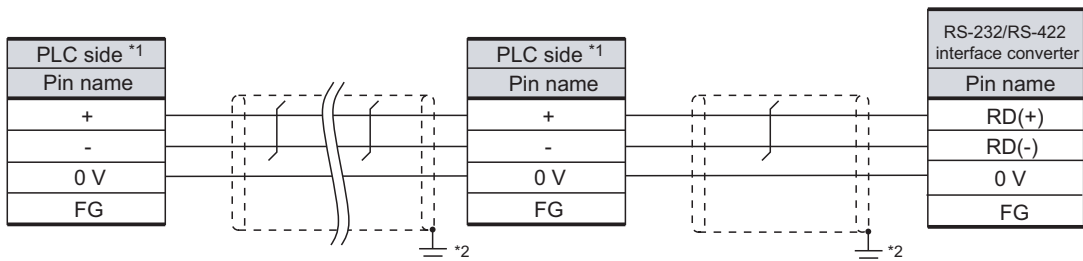
(For PC2JC, PC2J16P, PC2J16PR)



*1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.


*2 Connect FG grounding to the appropriate part of a cable shield line.

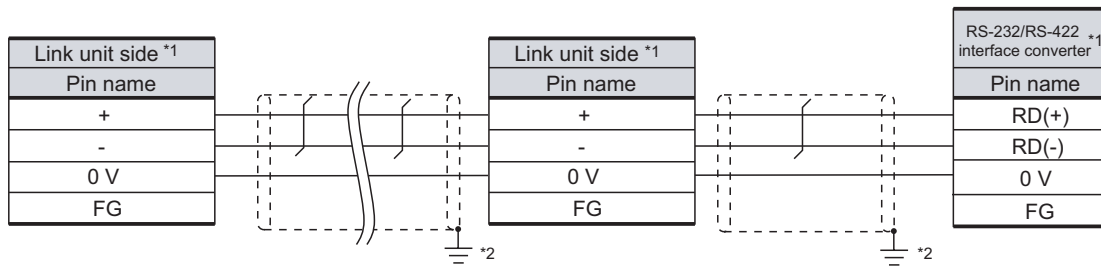(2) RS-422 cable 2)




- *1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.
- *2 Connect FG grounding to the appropriate part of a cable shield line.

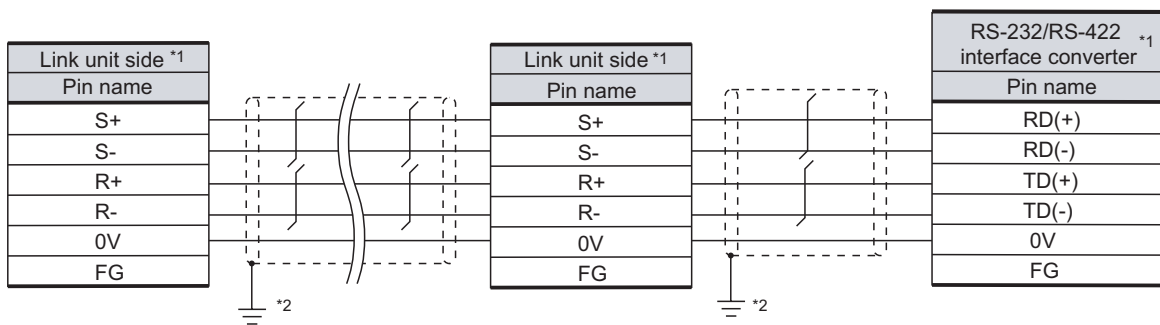(3) RS-422 cable 3)




- *1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.
- *2 Connect FG grounding to the appropriate part of a cable shield line.

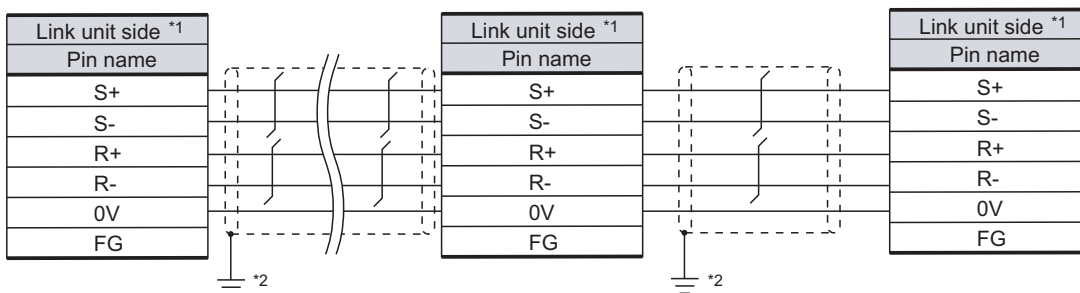(4) RS-422 cable 4)



- *1 Terminating resistor should be provided for a PLC which will be a terminal.
- *2 Connect FG grounding to the appropriate part of a cable shield line.

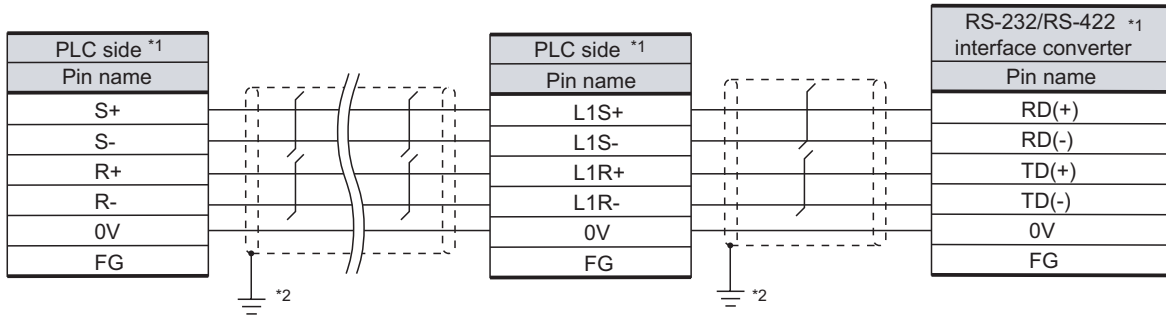
(5) RS-422 cable 5)



*1 Terminating resistors should not be provided for a PLC and an RS-232/RS-422 interface converter which will be terminals.

*2 Connect FG grounding to the appropriate part of a cable shield line.

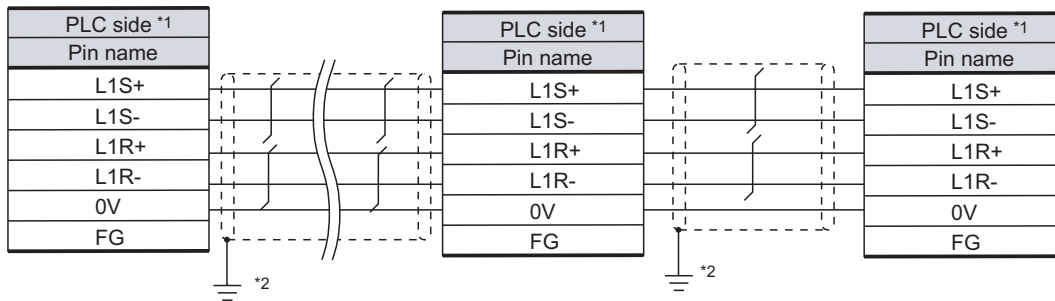
(6) RS-422 cable 6)



*1 Terminating resistor should be provided for a PLC which will be a terminal.

*2 Connect FG grounding to the appropriate part of a cable shield line.

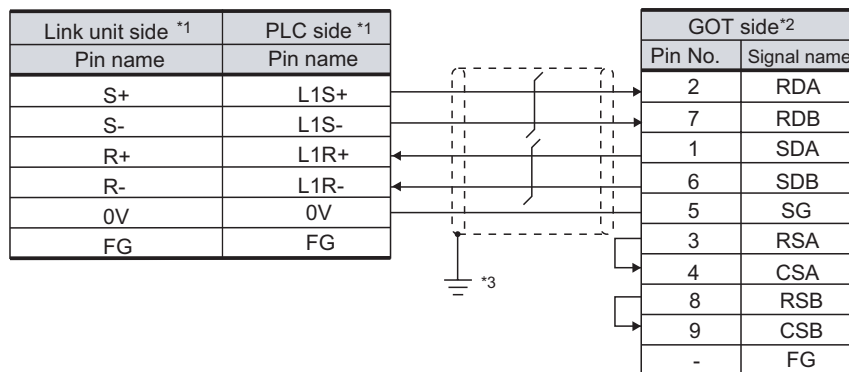(7) RS-422 cable 7)



*1 Terminating resistor should be provided for a PLC or Link unit which will be a terminal.

*2 Set the terminating resistor of GOT side to "Disable".

4 Connecting terminating resistors

*3 Connect FG grounding to the appropriate part of a cable shield line.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

3 Precautions when preparing a cable

The length of the RS-422 cable must be 500m or less.

4 Connecting terminating resistors


(1) GOT

Set the terminating resistor of RS-422/485 communication unit using the terminating resistor setting switch.

Terminating resistor*1	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF




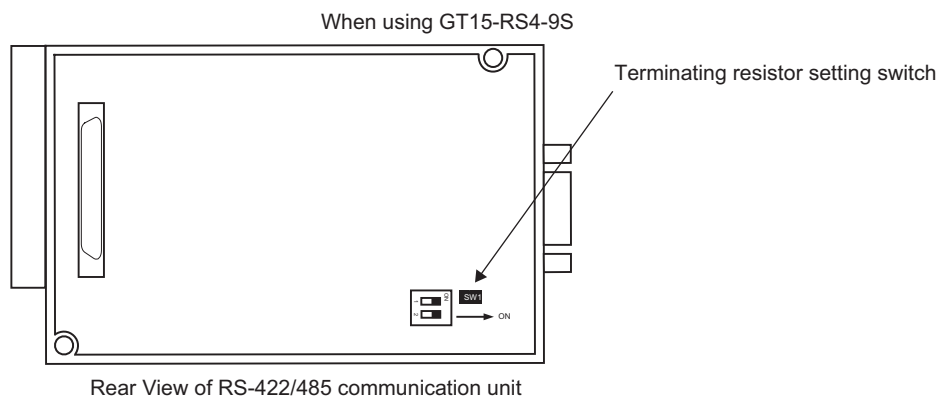*1 The default setting is "Enable".



13.3 Preparatory Procedures for Monitoring

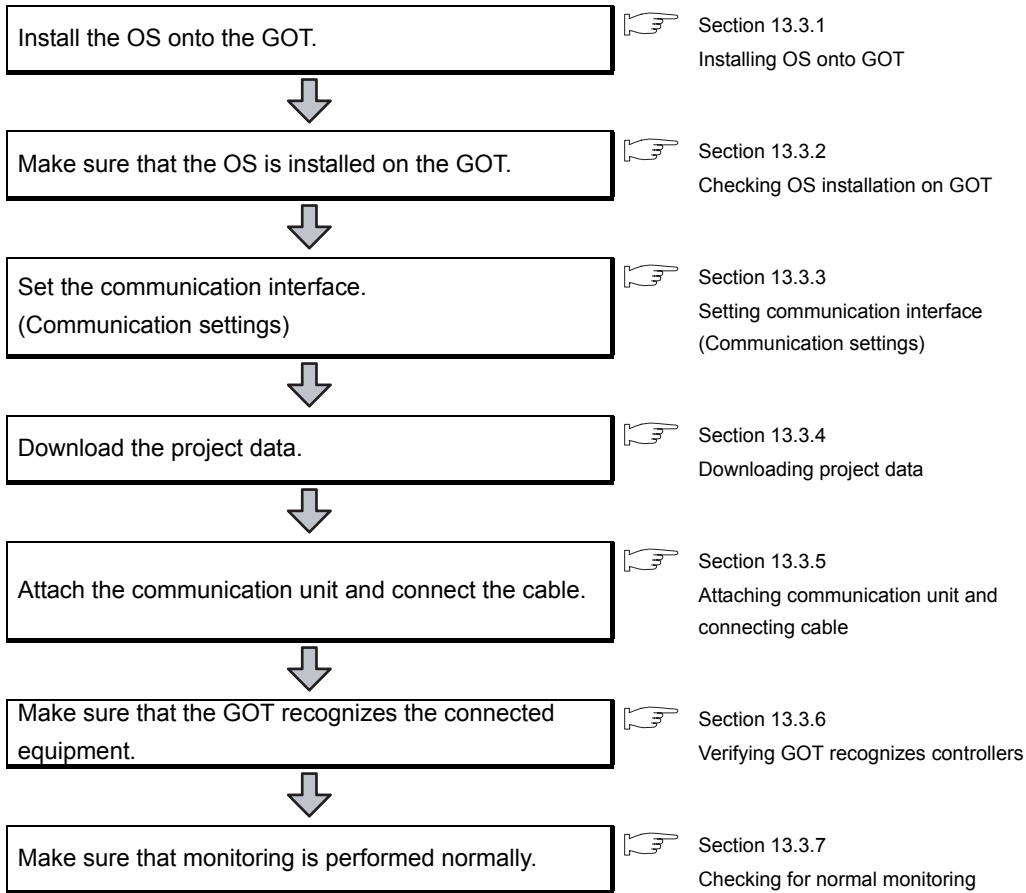The following the procedures to be taken before monitoring and corresponding reference sections.



Confirming the PLC side setting


This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

Section 13.4 PLC Side Setting

13.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

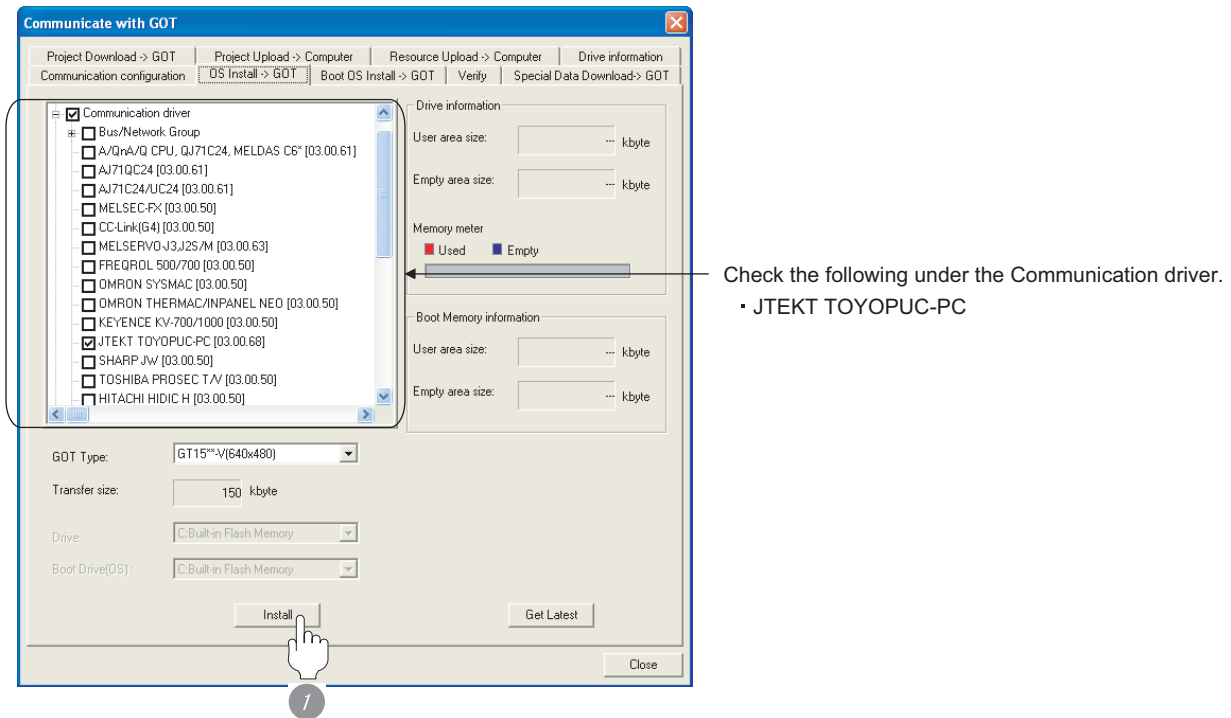
 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the Install button.


13.3.2 Checking OS installation on GOT

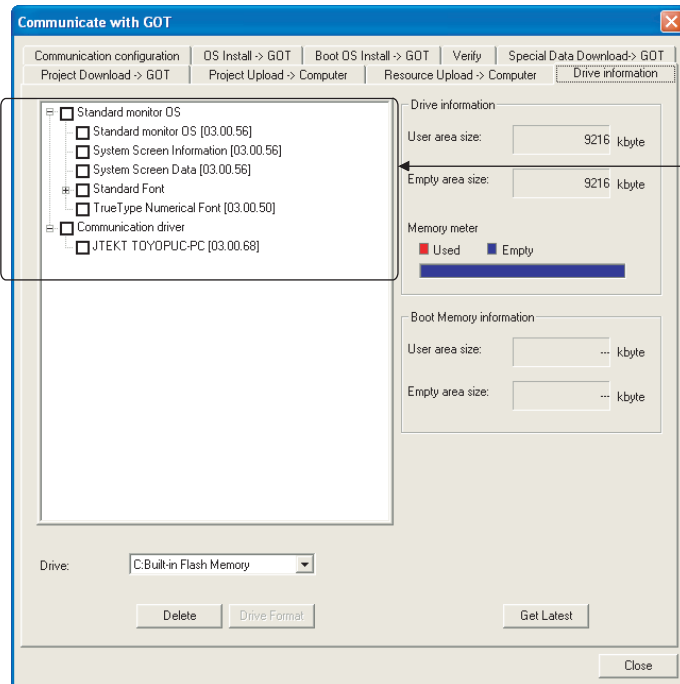Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.




The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver: JTEKT TOYOPUC-PC

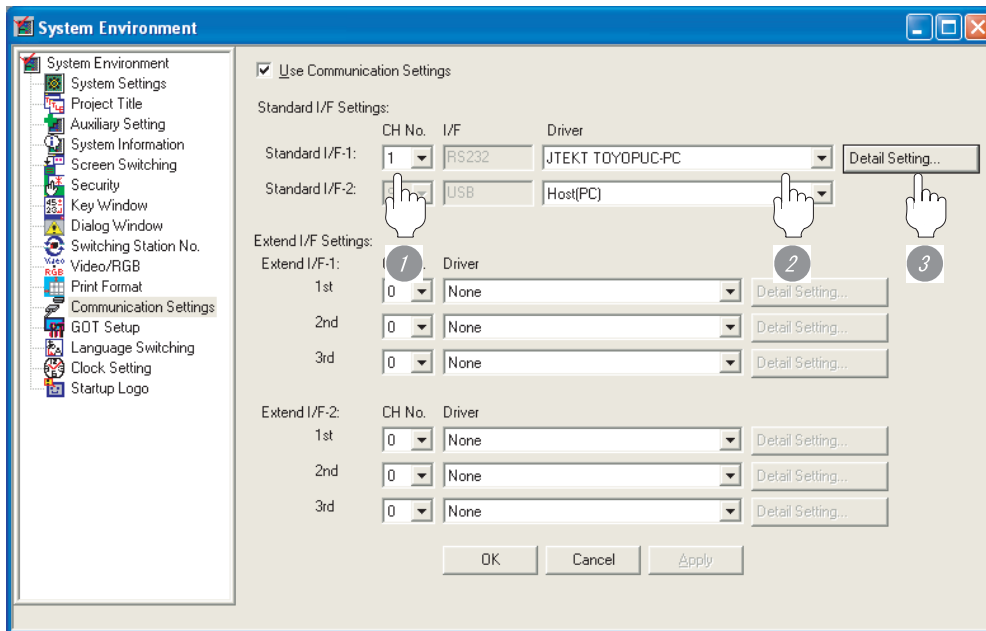
 GT Designer2 Version □ Basic Operation/Data Transfer Manual

13.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "JTEKT TOYOPUC-PC".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings


Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	9600bps,19200bps,38400bps,57600bps,115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Even>	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 0>	0 to 300 ms
Host Address	Specify the host address (station No. of the GOT to which the PLC is connected) in the connected network. <Default: 0>	0 to 37
Format	Select the communication format. <Default: 1> format 1: PC3J extended function incompliant format 2: PC3J extended function compliant	1 / 2

(1) Format setting

The compatible format of PLC differs depending on model.

Model name	Compatible format
PC2J, PC2JC, PC2J16P, PC2J16PR	Format 1 only
PC3JG, PC3JG-P, PC3J, PC3JL	Format 1 or Format 2

For details of PC3J extended function, refer to the following manual.

 User's Manual for the JTEKT PLC

(2) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT User's Manual

(3) Precedence in communication settings

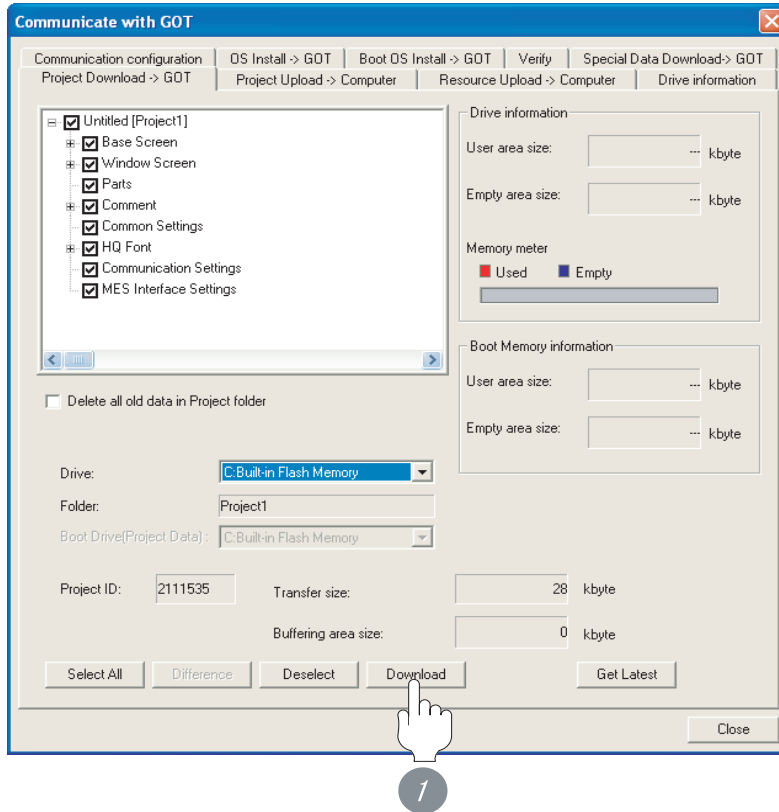
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

13.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


13.3.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

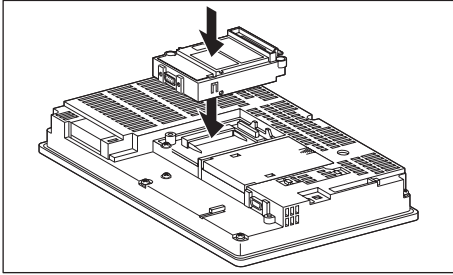1 Attaching the communication unit




- 1** Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

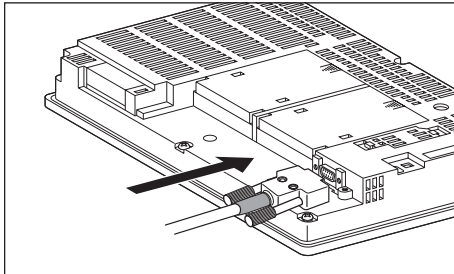
 GT15 Serial Communication Unit User's Manual

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

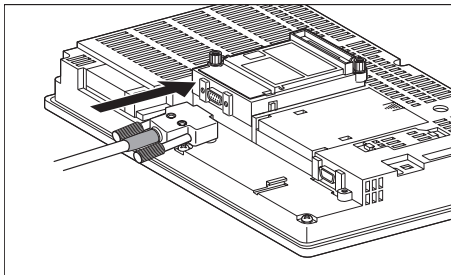- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

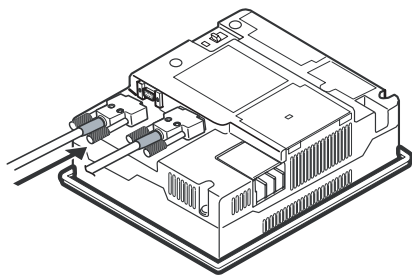(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

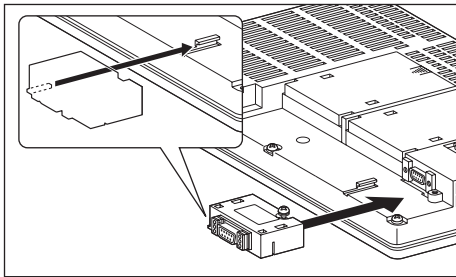- connection to the RS-232 interface




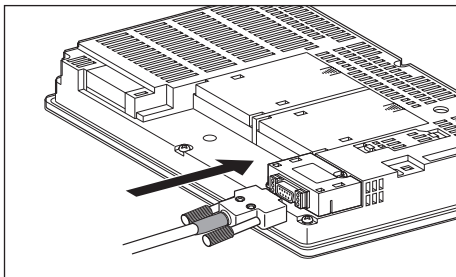- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

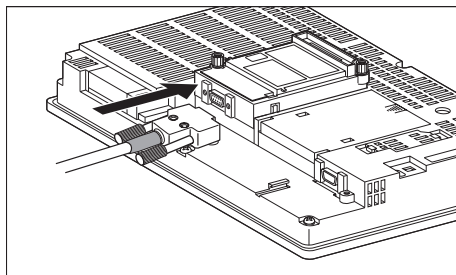- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

☞ GT15 RS-422 Conversion Unit User's Manual

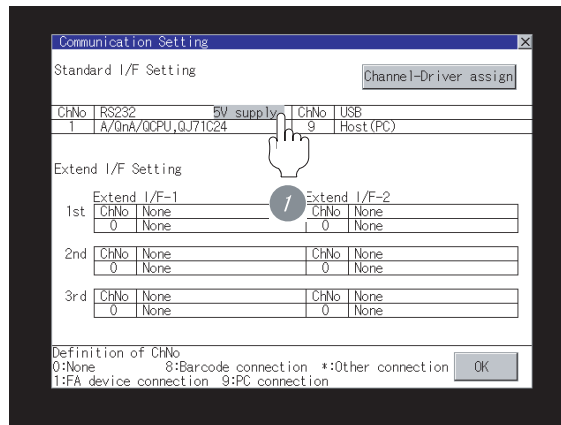
Point

When using the RS-422 conversion unit


On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT.
For details on the utility, refer to the following manual:

 GT User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to "YES".

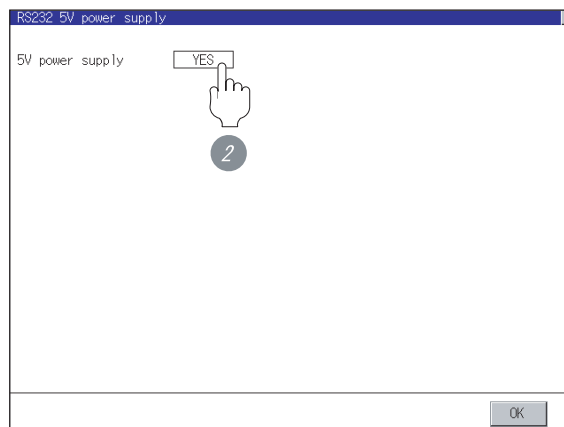

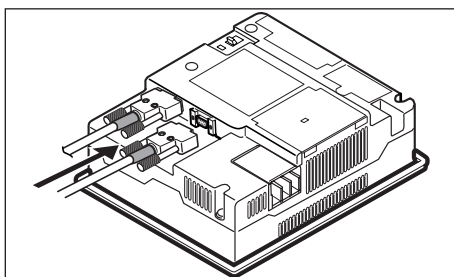(b) In the case of the GT11




1 Connect the RS-422 cable to the RS-422 interface on the GOT.

13.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

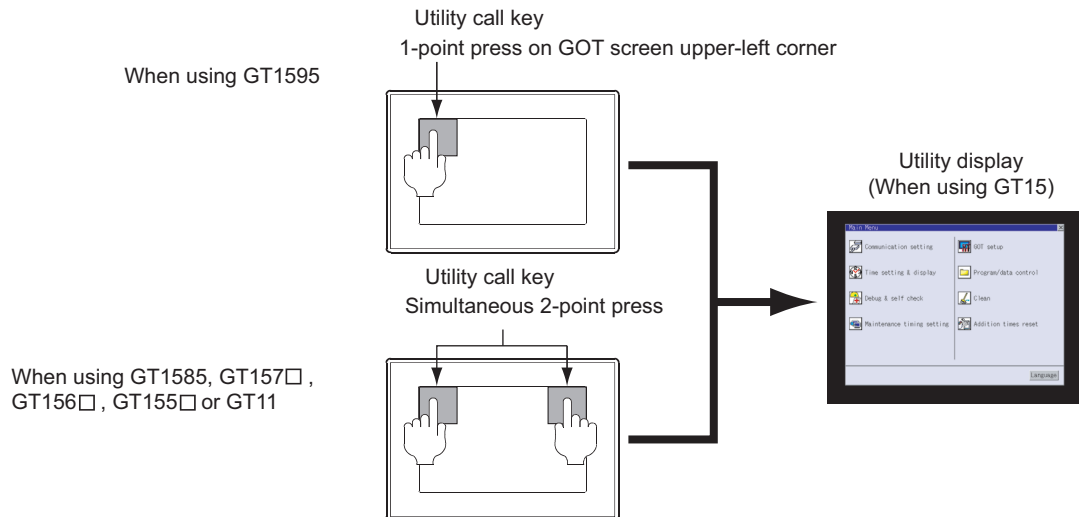Remark How to display Utility(at default)




Point


When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

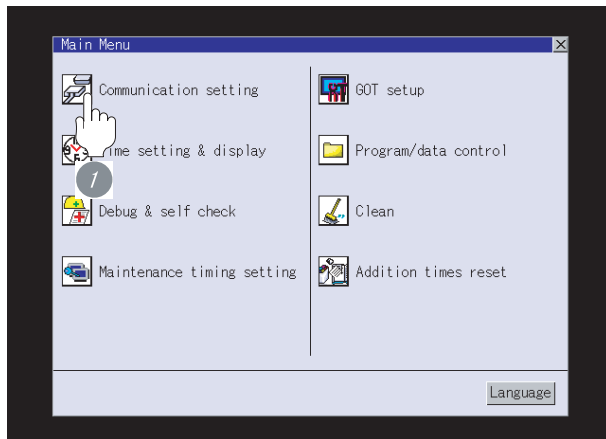☞ GT□ User's Manual



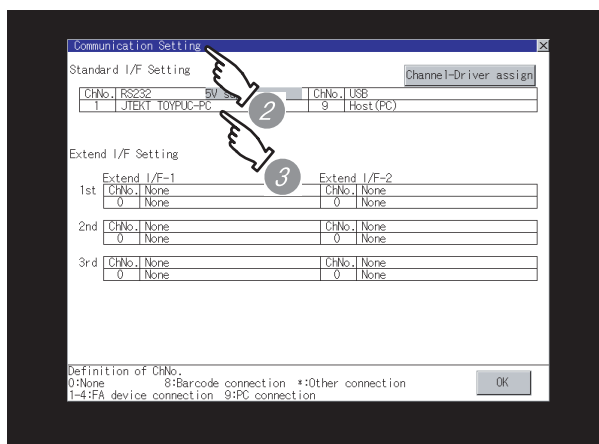- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver
JTEKT TOYOPUC-PC
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

➡ Section 13.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

➡ GT □ User's Manual

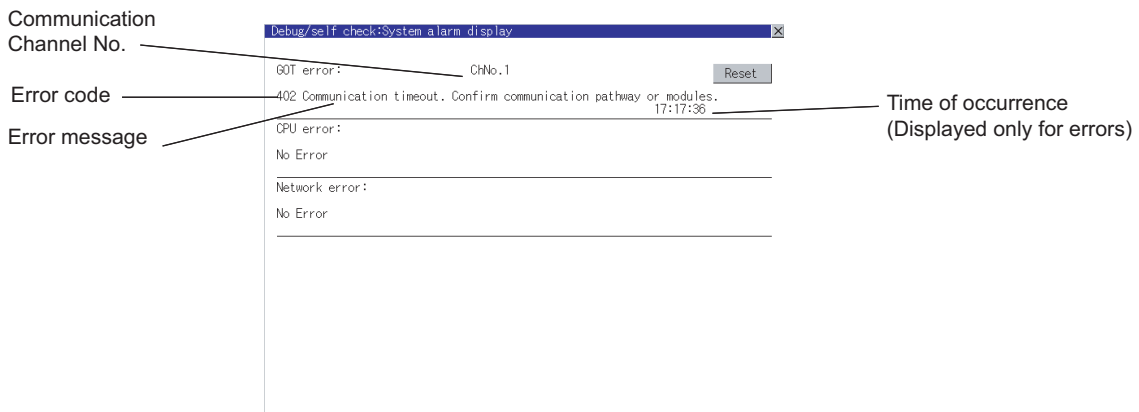
13.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT User's Manual (When using GT15)



Communication Channel No. —

Error code —

Error message —

Time of occurrence (Displayed only for errors)



Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version Screen Design Manual

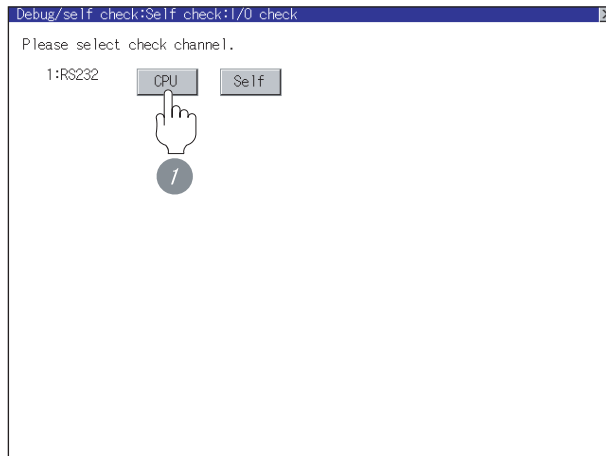


2 Perform an I/O check.


Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].
For details on the I/O check, refer to the following manual:

 GT □ User's Manual



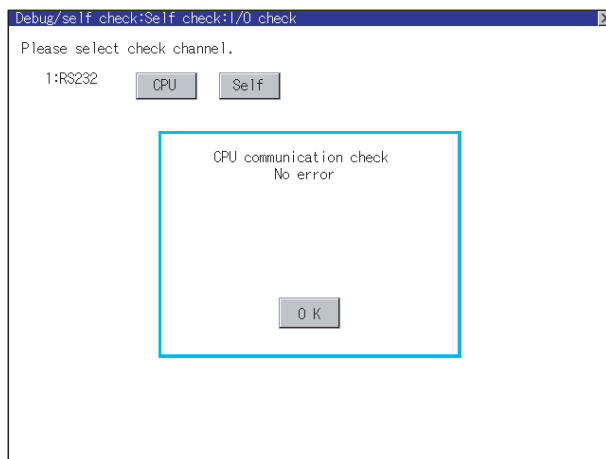
- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.
Confirm if the PLC side setting is correct.

 Section 13.4 PLC Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

13.4 PLC Side Setting



JTEKT PLC

For details of JTEKT PLCs, refer to the following manuals.

Manuals for JTEKT PLCs

	Model name	Reference
PLC CPU	PC3JG, PC3JG-P, PC3J, PC3JL, PC2J	Section 13.4.1
	PC2JC	Section 13.4.2
	PC2J16P, PC2J16RR	Section 13.4.3
RS-232/RS-422 interface converter	TXU-2051	Section 13.4.4
Link unit	THU-2755	Section 13.4.5
	THU-2927	
	THU-5139	

13.4.1 Connecting to PC3JG, PC3JG-P, PC3J, PC3JL or PC2J

1 Communication settings

Make the communication settings using the PLC peripheral device (PCwin).

Item	Set value
Transmission speed*1	9600bps, 19200bps, 38400bps
Data length*1	8 bits or 7 bits
Parity bit	Even (fixed)
Stop bit*1	1 bit or 2 bits
Station No.*2	0 to 37 (Octal)
2-wire/4-wire type*3	2-wire type or 4-wire type

*1 Adjust the settings with GOT settings.

*2 Avoid duplication of the station No. with any of the other units.


*3 Make the settings referring to the following connection diagram.

Section 13.2.2 RS-422 cable

13.4.2 Connecting to PC2JC

1 Communication settings

Make the communication settings using each setting switch.
For the detail settings , refer to the following manual.


 User's Manual for the JTEKT PLC

Item	Set value
Transmission speed*1	9600bps, 19200bps
Data length*1	8 bits or 7 bits
Stop bit*1	1 bit or 2 bits
Station No.*1	0 to 37 (Octal)

*1 Adjust the settings with GOT settings.

2 Settings by switch

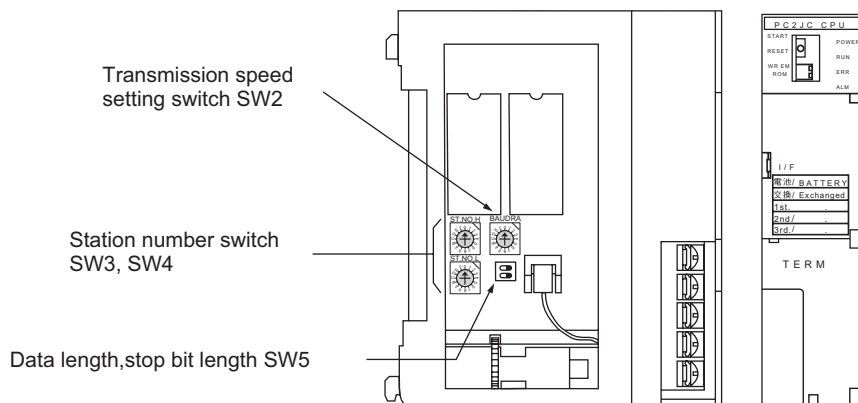Make the communication settings using each setting switch.



- (1) Station No. settings
Set the station No. between 00 and 37 (Octal).

Switch name	Station No. setting
SW3	Upper digit
SW4	Lower digit

- (2) Transmission speed settings

Switch name	Switch position	Transmission speed (bps)
SW2	1	19200
	2	9600


- (3) Settings of data length and stop bit length

Switch name	Setting item	Set value	Switch No.	
			2	1
SW5	Data length	8 bits	OFF	
		7 bits	ON	
	Stop bit length	2 bits		OFF
		1 bit		ON

13.4.3 Connecting to PC2J16P or PC2J16PR

1 Communication settings

Make the communication settings using each setting switch.
For the detail settings, refer to the following manual.


 User's Manual for the JTEKT PLC

Item	Set value
Transmission speed*1	9600bps, 19200bps
Data length*1	8 bits or 7 bits
Stop bit*1	1 bit or 2 bits
Station No.*1	0 to 37 (Octal)
Selection of module type	Computer link

*1 Adjust the settings with GOT settings.

2 Settings by switch

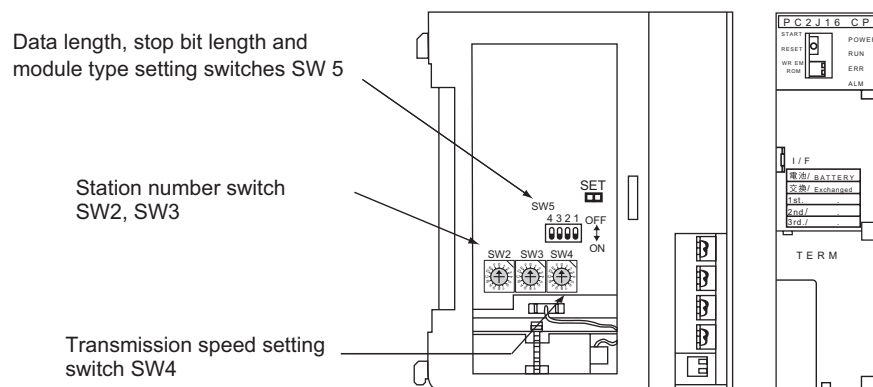Make the communication settings using each setting switch.



- (1) Station No. settings
Set the station No. between 00 and 37 (Octal).

Switch name	Station No. setting
SW2	Upper digit
SW3	Lower digit

- (2) Transmission speed settings

Switch name	Switch position	Transmission speed (bps)
SW4	1	19200
	2	9600

- (3) Settings of data length, stop bit length and module type

Switch name	Setting item	Set value	Switch No.		
			4	3	2
SW5	Data length	8 bits	OFF		
		7 bits	ON		
	Stop bit length	2 bits		OFF	
		1 bit		ON	
Module type	Computer link			OFF	

13.4.4 RS-232/RS-422 interface converter setting


1 Communication settings

Make the communication settings by the setting switch of the RS-232/RS-422 interface converter.

Item	Set value
Transmission speed*1	9600bps, 19200bps
2-wire/4-wire type*2	2-wire type or 4-wire type
Echoback	OFF


*1 Adjust with GOT settings.

*2 Set referring to the RS-422 connection diagram. For details, refer to the following.

 Section 13.2.2 RS-422 cable

2 Settings by switch

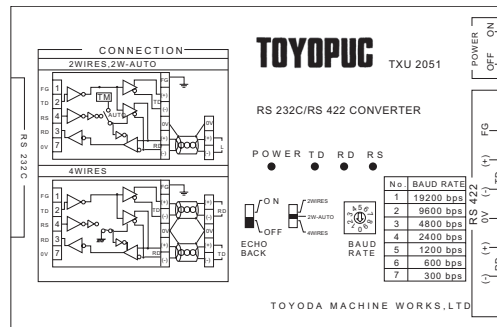Make the communication settings by each setting switch of the RS-232/RS-422 interface converter.



(1) Transmission speed settings


Transmission speed (bps)	Switch position
9600	2
19200	1



BAUD RATE

(2) Mode setting switch

Mode	Switch position
2-wire type	2W-AUTO
4-wire type	4 WIRES

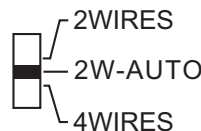

(3) Echoback setting switch

Setting	Switch position
OFF	OFF



ECHO BACK

13.4.5 Link unit setting

1 Communication settings

Make the communication settings using each setting switch of the link unit.
For the detail settings, refer to the following manual.

User's Manual for the JTEKT link unit




Item	Set value
Transmission speed*1	9600bps, 19200bps
Data length*1	8 bits or 7 bits
Stop bit*1	1 bit or 2 bits
Station No.*1	0 to 37 (Octal)
Selection of module type	Computer link
Selection of 2-wire type or 4-wire type	2-wire type or 4-wire type

*1 Adjust with GOT settings.

*3 Set referring to the RS-422 connection diagram. For details, refer to the following.

Section 13.2.2 RS-422 cable

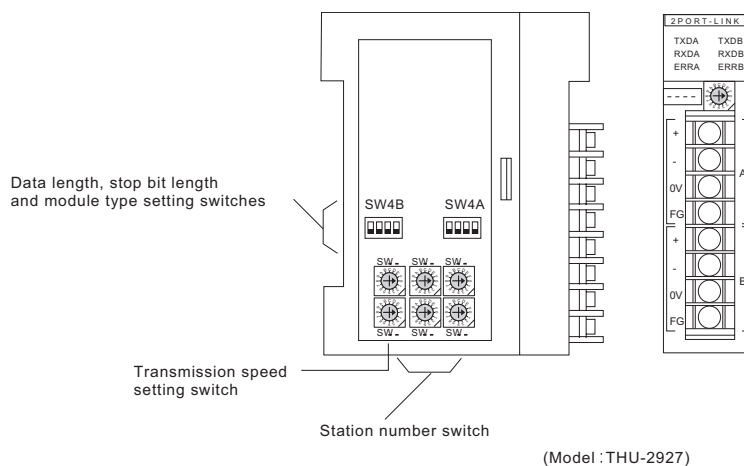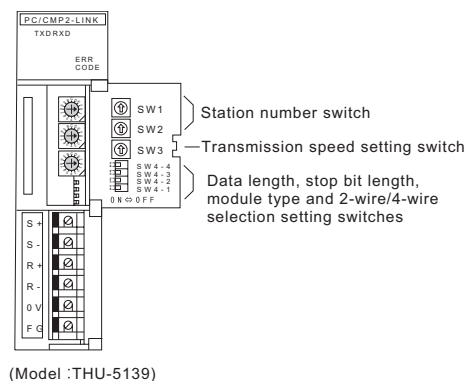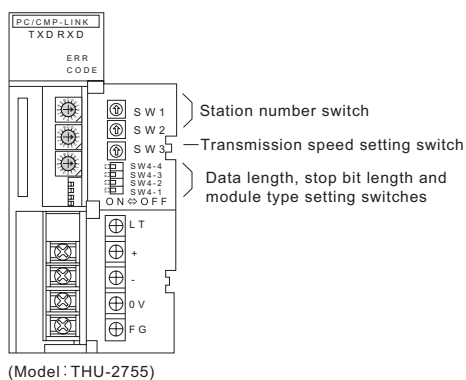2 Settings by switch



- (1) Station No. settings
Set the station No. between 00 and 37 (Octal).

Switch name	Station No. setting
SW1	Upper digit
SW2	Lower digit

- (2) Transmission speed settings

Switch name	Switch position	Transmission speed (bps)
SW3	2	9600
	1	19200

- (3) Data length, stop bit length, module type and 2-wire/4-wire type communication selection setting


Switch name	Setting item	Set value	Switch No.			
			4	3	2	1
SW4	Data length	8 bits	OFF			
		7 bits	ON			
	Stop bit length	2 bits		OFF		
		1 bit		ON		
	Module type	PLC link unit			OFF	
		Computer link			ON	
2-wire type/4-wire type communication selection*1	2-wire type communication				OFF	
	4-wire type communication				ON	

*1 The setting is available only for the link unit (Model: THU-5139).

13.4.6 Station NO. settings

Set each station number so that no station number overlaps.

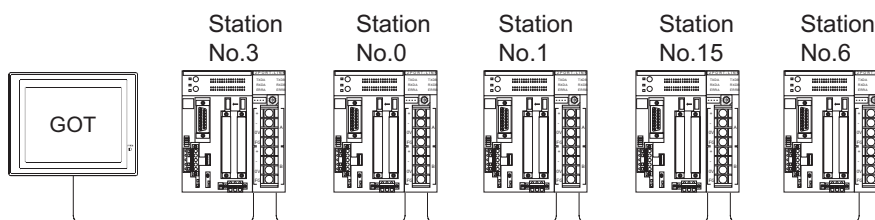The station number can be set without regard to the cable connection order. There is no problem even if station numbers are not consecutive.



Examples of station number setting


- (1) Direct specification
Specify the station No. of the PLC to be changed when setting device.

Specification range
0 to 37 (Octal)

13.5 Precautions

13.5.1 Station No. settings of the PLC side

In the system configuration, the PLC with the station number set with the host address must be included. For details of host address setting, refer to the following.

 Section 13.3.3 Setting communication interface (Communication settings)

13.5.2 GOT clock function

The GOT clock function is available only for the PLC with the station number set with the host address. For details of host address setting, refer to the following.

 Section 13.3.3 Setting communication interface (Communication settings)

13.5.3 System configuration

If the system is configured by mixing the PC3J extended function compliant PLC with the PC3J extended function incompliant PLC, normal communication may not be performed. Unify the PLCs into PC3J extended function compliant or PC3J extended function incompliant to configure the system.

13.5.4 System alarm

The system alarm can be displayed only for the PLC set with a host address. When connected to the PC3J extended function compliant PLC, only the system alarm of program No. 1 can be displayed.

13.5.5 Version of PC3J

For PC3J, use version 2.1 or later.

13.5.6 Device range

The device range differs depending on the PLC type and the operation mode. For details, refer to the following manual.

 GT Designer2 Version2 Screen Design Manual (For GOT 1000 Series)

13.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
 For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Connection to JTEKT PLC	Supporting the JTEKT PLC connection	2.32J	Communication driver JTEKT TOYOPUC-PC [03.00.**]

CONNECTION TO TOSHIBA PLC



14.1 System Configuration page 14-2

This section describes the equipment and cables needed when connecting a GOT to a TOSHIBA PLC. Select a system suitable for your application.

14.2 Connection Cable page 14-7

This section describes the specifications of the cables needed when connecting a GOT to a TOSHIBA PLC. Check the specifications of the connection cables.

14.3 Preparatory Procedures for Monitoring page 14-12

This section provides the procedures to be followed before performing monitoring in connection to a TOSHIBA PLC. The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

14.4 PLC Side Setting page 14-26

The PLC side settings for GOT connection are explained. When checking the PLC side settings, refer to this section.

14.5 List of Functions Added by Version Upgrade page 14-28

This section describes the functions added by version upgrade of GT Designer2 or OS.

9	ETHERNET CONNECTION
10	CONNECTION TO OMRON PLC
11	CONNECTION TO KEYENCE PLC
12	CONNECTION TO SHARP PLC
13	CONNECTION TO JTEKT PLC
14	CONNECTION TO TOSHIBA PLC
15	CONNECTION TO HITACHIIES PLC
16	CONNECTION TO HITACHI PLC

14.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.

14.1.1 Connecting to T2 (PU224), T2E, T2N, T3 or T3H



1 System configuration and connection conditions

When connecting to T2 (PU224), T3 or T3H

Connection conditions		System configuration
Number of GOTs	Distance	
1	1km	

When connecting to T2E

Connection conditions		System configuration
Number of GOTs	Distance	
1	15m	
	1km	

When connecting to T2N

Connection conditions		System configuration
Number of GOTs	Distance	
1	15m	
	1km	

9

ETHERNET CONNECTION

10

CONNECTION TO OMRON PLC

11

CONNECTION TO KEYENCE PLC

12

CONNECTION TO SHARP PLC

13

CONNECTION TO JTEKT PLC

14

CONNECTION TO TOSHIBA PLC

15



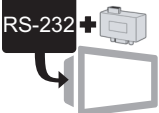


CONNECTION TO HITACHI IES PLC

16

CONNECTION TO HITACHI PLC

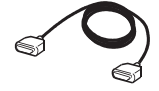
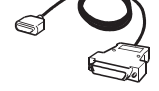

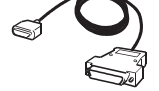

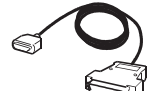

2 System equipment


(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P
		RS-422 interface • For RS-422 communication	— (Built into GOT)
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) Cable

Image	No.	Name	Model name
	3	RS-232 cable 1)*1 • Between CPU and GOT	GT09-C30R20501-9P (3m)
	4	RS-232 cable 2)*1 • Between CPU and GOT	(To be prepared by the user.  Section 14.2 Connection Cable)
	5	RS-422 cable 1)*1 • Between CPU and GOT	GT09-C30R40501-15P (3m) GT09-C100R40501-15P (10m) GT09-C200R40501-15P (20m) GT09-C300R40501-15P (30m)
	6	RS-422 cable 2)*1 • Between CPU and GOT	GT09-C30R40502-6C (3m) GT09-C100R40502-6C (10m) GT09-C200R40502-6C (20m) GT09-C300R40502-6C (30m)
	7	RS-422 cable 3)*1 • Between CPU and GOT	(To be prepared by the user.  Section 14.2 Connection Cable)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( Section 14.2 Connection Cable)

14.1.2 Connecting to model 2000(S2), model 3000 (S3)



1 System configuration and connection conditions

When connecting to model 2000 (S2)

Connection conditions		System configuration
Number of GOTs	Distance	
1	1km	

When connecting to model 3000 (S3)

Connection conditions		System configuration
Number of GOTs	Distance	
1	1km	

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S
		RS-422 interface • For RS-422 communication	— (Built into GOT)

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

9

ETHERNET CONNECTION

10

CONNECTION TO OMRON PLC

11

CONNECTION TO KEYENCE PLC

12

CONNECTION TO SHARP PLC

13

CONNECTION TO JTEKT PLC

14

CONNECTION TO TOSHIBA PLC


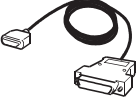
15

CONNECTION TO HITACHI PLC

16

CONNECTION TO HITACHI PLC

(2) Cable

Image	No.	Name	Model name
	2	RS-422 cable 2) • Between CPU and GOT	GT09-C30R40502-6C(3m) GT09-C100R40502-6C(10m) GT09-C200R40502-6C(20m) GT09-C300R40502-6C(30m)
	3	RS-422 cable 1) • Between CPU and GOT	GT09-C30R40501-15P(3m) GT09-C100R40501-15P(10m) GT09-C200R40501-15P(20m) GT09-C300R40501-15P(30m)

*1 The RS-232 cable can be prepared by the user. (☞ Section 14.2 Connection Cable)

14.2 Connection Cable

The RS-232 cable or RS-422 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection Cable	
		RS-232 cable (Refer to Section 14.2.1.)	RS-422 cable (Refer to Section 14.2.2.)
PLC CPU	T2 (PU224)	—	RS-422 cable 1)
	T2E	RS-232 cable 1)	RS-422 cable 2)
	T2N	RS-232 cable 2)	RS-422 cable 3)
	T3, T3H	—	RS-422 cable 1)
	model 2000 (S2)	—	RS-422 cable 2)
	model 3000 (S3)	—	RS-422 cable 1)

14.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.

1 Connection diagram

(1) RS-232 cable 1)

GOT side		Cable connection and signal direction	TOSHIBA product side	
Signal name	Pin No.		Pin No.	Signal name
CD/NC *1	1		1	SG
RD(RXD)	2		2	RXD
SD(TXD)	3		3	TXD
ER(DTR)	4		4	—
SG	5		5	SG
DR(DSR)	6		6	5V
RS(RTS)	7		7	RTS
CS(CTS)	8		8	—
—	9		9	5V

*1 GT15: CD, GT11:NC

(2) RS-232 cable 2)

GOT side		Cable connection and signal direction	TOSHIBA product side	
Signal name	Pin No.		Pin No.	Signal name
CD/NC *2	1		1	—
RD(RXD)	2		12	RXD
SD(TXD)	3		5	TXD
ER(DTR)	4		7	SG
SG	5		8	SG
DR(DSR)	6		15	SG
RS(RTS)	7		6	RTS
CS(CTS)	8		14	CTS
—	9		13	—

*2 GT15: CD,GT11:NC

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model


GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-		
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) TOSHIBA PLC side connector

Use the connector compatible with the TOSHIBA PLC side module. For details, refer to the following manual.

 User's Manual for the TOSHIBA PLC

3 Precautions when preparing a cable

The length of the RS-232 cable must be 15m or less.

14.2.2 RS-422 cable

The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a PLC.

1 Connection diagram

(1) RS-422 cable 1)

GOT side		Cable connection and signal direction	TOSHIBA product side	
Signal name	Pin No.		Pin No.	Signal name
RDA	2		3	TXA
RDB	7		11	TXB
SDA	1		2	RXA
SDB	6		10	RXB
RSA	3		7	SG
RSB	8		1	FG
CSA	4		5	RTSA
CSB	9		4	CTSA
SG	5		13	RTSB
FG	—		12	CTSB

(2) RS-422 cable 2)

GOT side		Cable connection and signal direction	TOSHIBA product side	
Signal name	Pin No.		Name of terminal block	
RDA	2		TXA	
RDB	7		TXB	
SDA	1		RXA	
SDB	6		RXB	
RSA	3		SG	
RSB	8		TERM	
CSA	4			
CSB	9			
SG	5			
FG	—			

(3) RS-422 cable 3)

GOT side		Cable connection and signal direction	TOSHIBA product side	
Signal name	Pin No.		Pin No.	Signal name
RDA	2		3	TXA
RDB	7		11	TXB
SDA	1		2	RXA
SDB	6		10	RXB
RSA	3		8	SG
RSB	8			
CSA	4			
CSB	9			
SG	5			
FG	—			

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.


For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

(2) TOSHIBA PLC side connector

Use the connector compatible with the TOSHIBA PLC side module.

For details, refer to the following manual.

 User's Manual for the TOSHIBA PLC

3 Precautions when preparing a cable


The length of the RS-422 cable must be 1km or less.

4 Connecting terminating resistors

When connecting an TOSHIBA PLC to a GOT, a terminating resistor must be set to the TOSHIBA PLC.

No terminating resistor needs to be connected on the GOT side as one is already built into the GOT.

For the setting of the terminating resistor, refer to the following manual.

 User's Manual for the TOSHIBA PLC

(1) T2 (PU224), T2N, T3, T3H, model 3000 (S3)

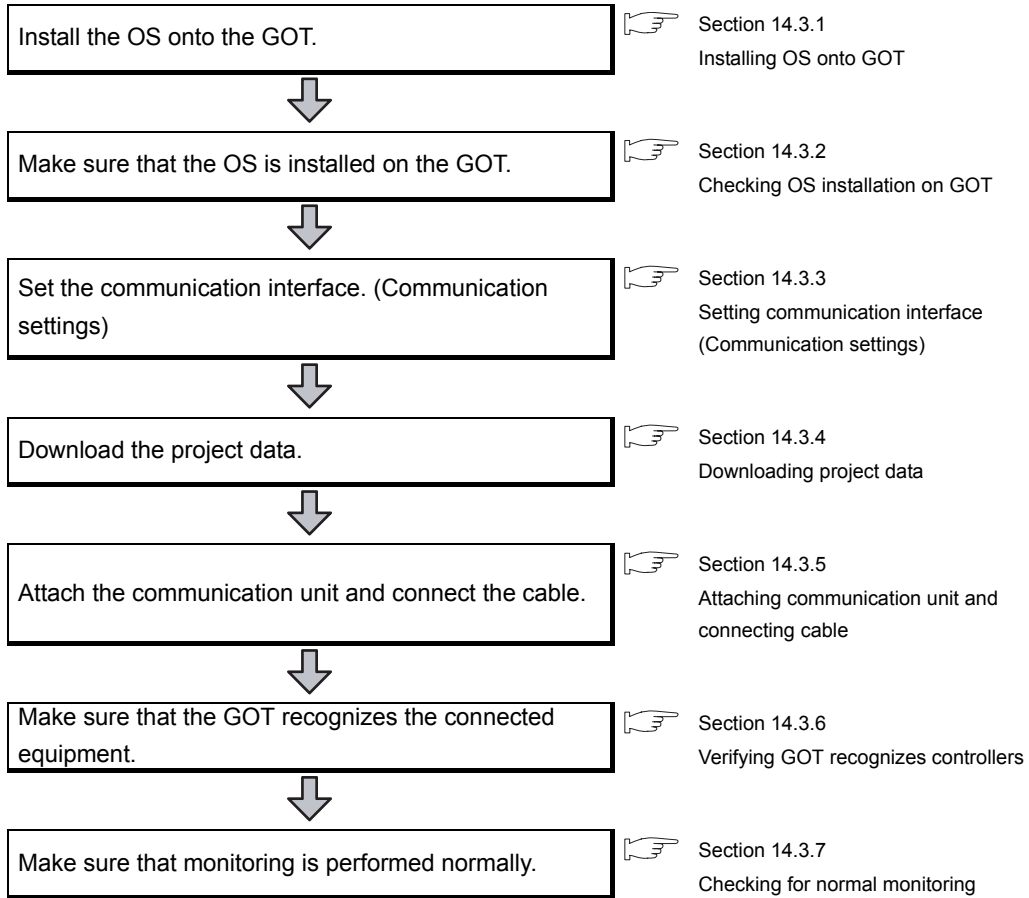
Connect the terminating resistor ($1/2W-120\ \Omega$) across RXA and RXB.

(2) T2E, model 2000 (S2)

Short across the RXA and TERM terminals.

14.3 Preparatory Procedures for Monitoring

The following shows the procedures to be taken before monitoring and corresponding reference sections.




Confirming the PLC side setting

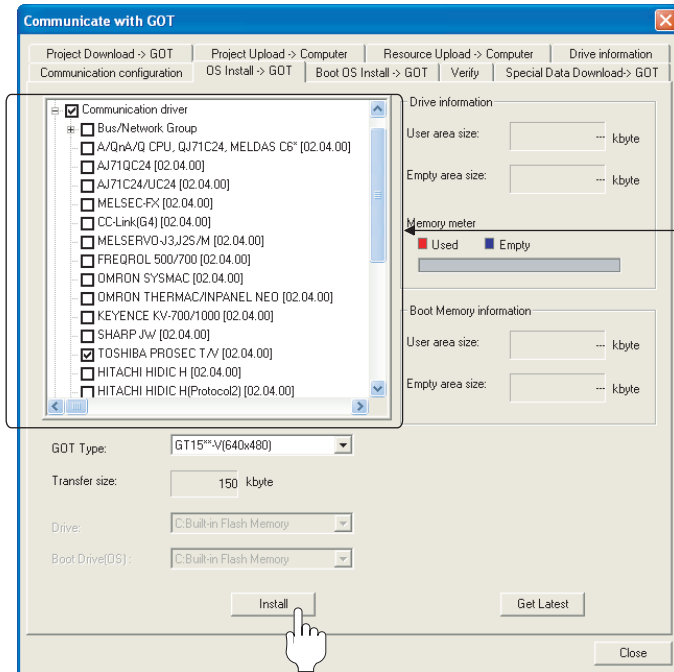
This section explains the GOT side setting.
When confirming the PLC side setting, refer to the following.

☞ Section 12.4 PLC Side Setting

14.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




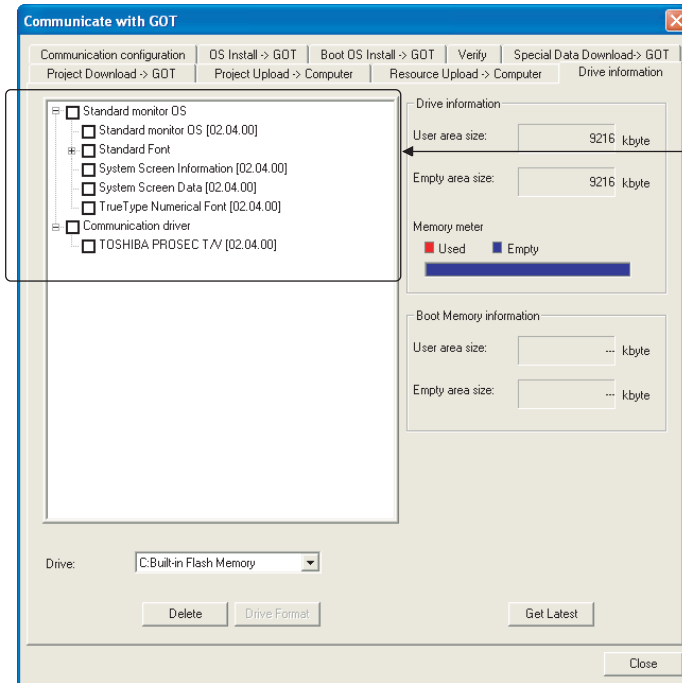
Check the following under the Communication driver.
• TOSHIBA PROSEC T/V

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

14.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

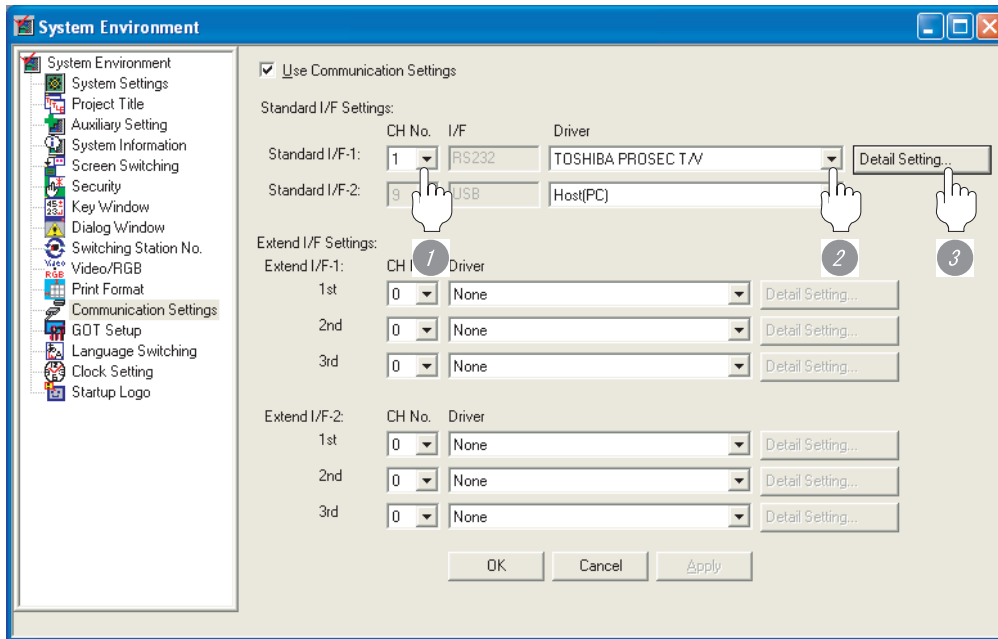
- 1) Standard monitor OS
- 2) Communication driver: TOSHIBA PROSEC T/V

14.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings




(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "TOSHIBA PROSEC T/V".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	4800bps, 9600bps, 19200bps


Point

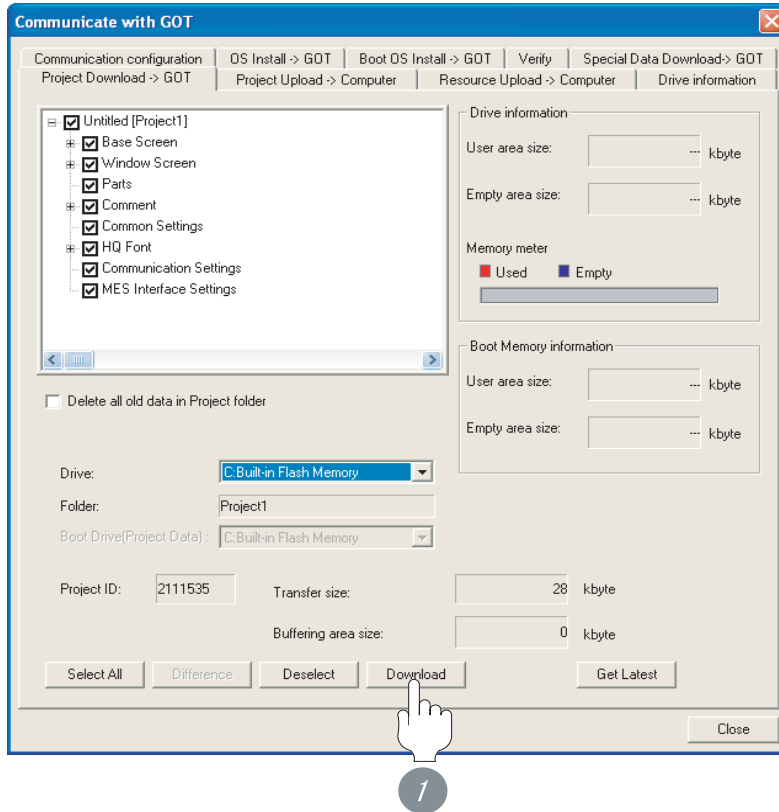
- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
For details on the Utility, refer to the following manual.
 GT User's Manual
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

14.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


14.3.5 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

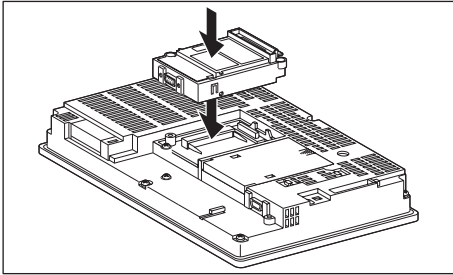1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.



Serial communication unit

For details on the serial communication unit, refer to the following manual:

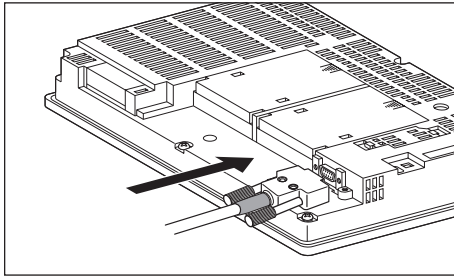
 [GT15 Serial Communication Unit User's Manual](#)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

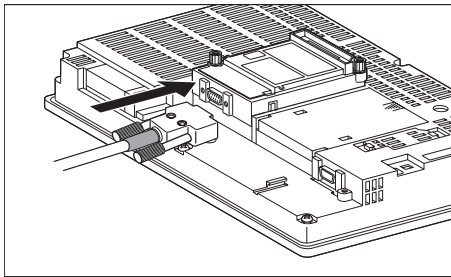- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

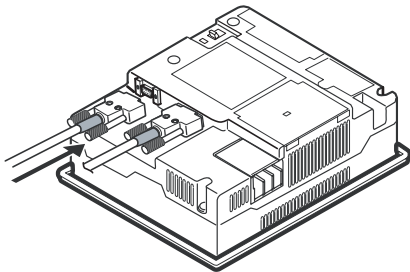(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

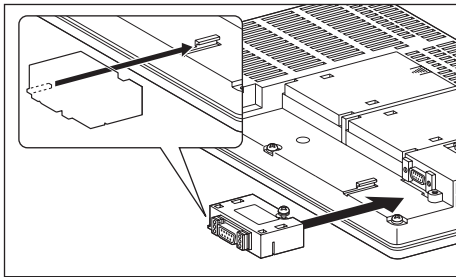- connection to the RS-232 interface




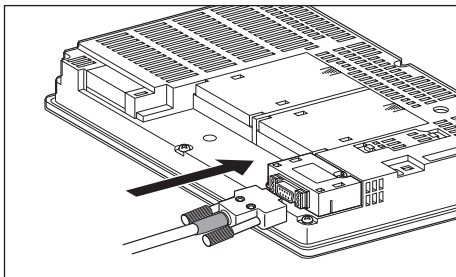- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

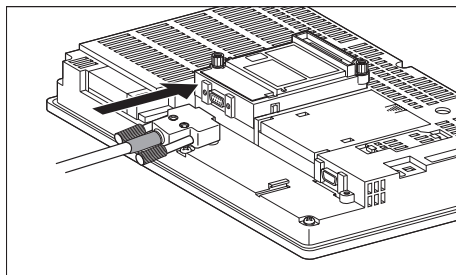- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

☞ GT15 RS-422 Conversion Unit User's Manual

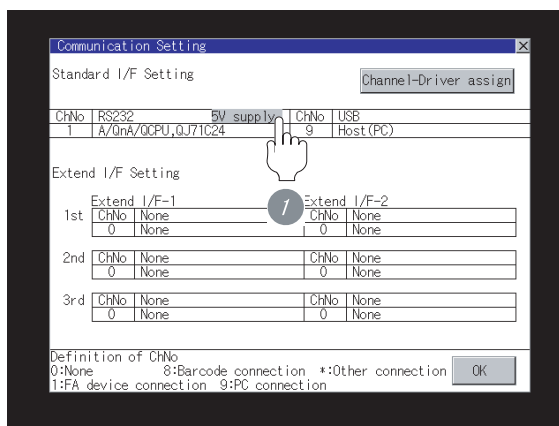
Point

When using the RS-422 conversion unit


On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the utility, refer to the following manual:

 GT □ User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to "YES".

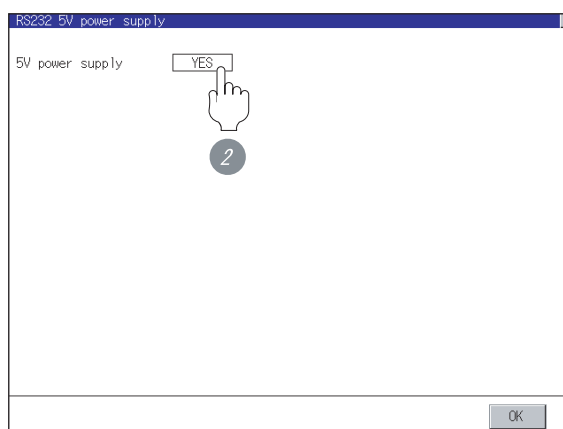

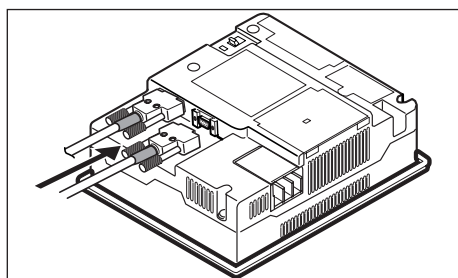(b) In the case of the GT11



1 Connect the RS-422 cable to the RS-422 interface on the GOT.

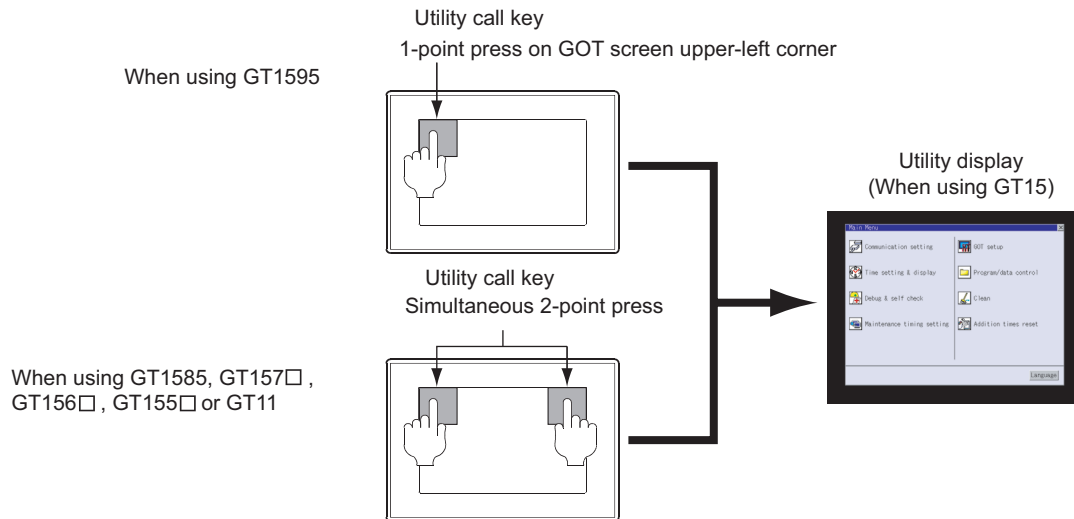
14.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point


When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

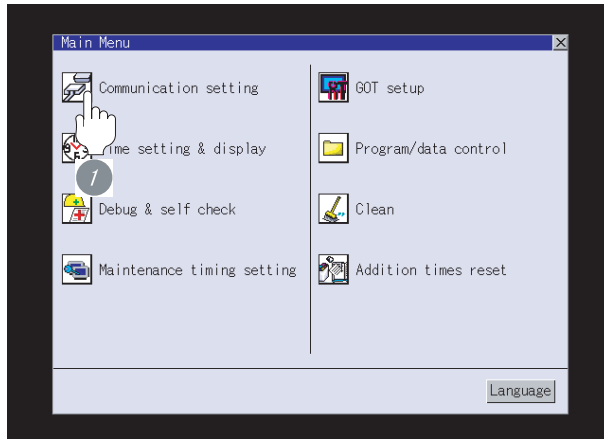 GT□ User's Manual



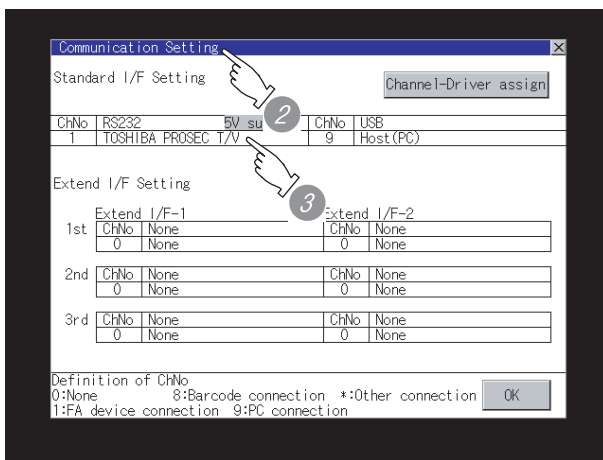- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver: TOSHIBA PROSEC T/V
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 14.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

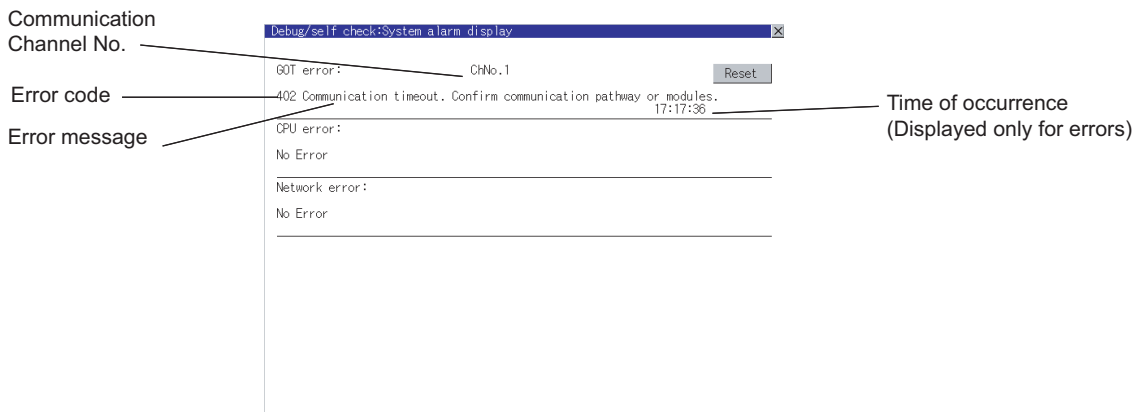
14.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)



Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

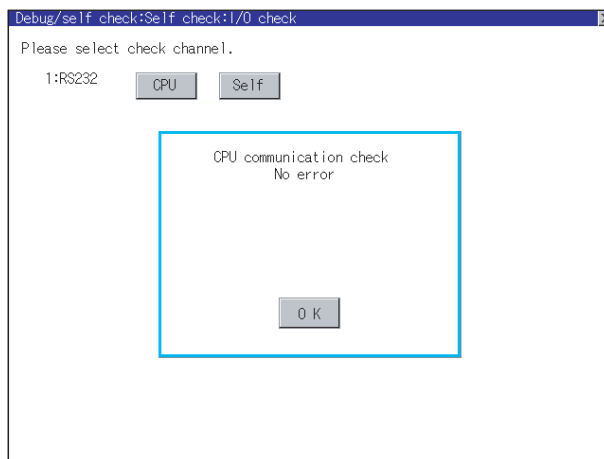
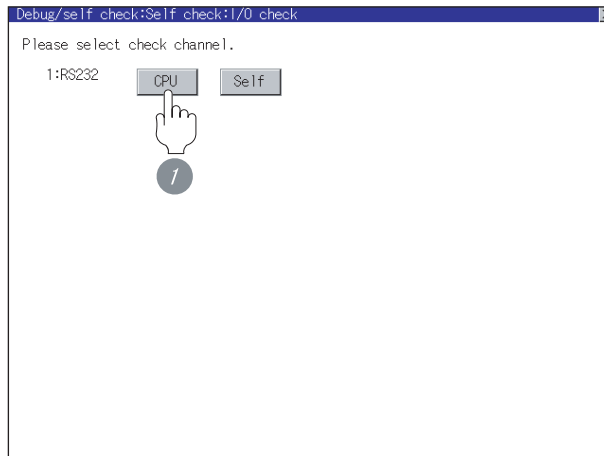


2 Perform an I/O check

Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.


Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].
For details on the I/O check, refer to the following manual:

 GT □ User's Manual



3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side. Confirm if the PLC side setting is correct.

 Section 14.4 PLC Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.

2 When the communication screen ends successfully, the screen on the left is displayed.

14.4 PLC Side Setting



TOSHIBA PLC

For details of the TOSHIBA PLC, refer to the following manual.

User's Manual for the TOSHIBA PLC


	Model name	Refer to
PLC CPU	T2 (PU224), T2E, T2N	Section 14.4.1
	T3, T3H	Section 14.4.2
	model 2000 (S2), model 3000 (S3)	Section 14.4.3

14.4.1 Connecting to T2 (PU224), T2E or T2N

1 Switch setting

Configure the switches.

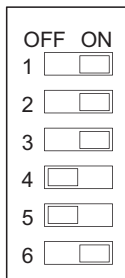(1) Operation mode setting switch



Switch No.	Setting	Set data
4	OFF (fixed)	Computer link
5	OFF (fixed)	

(2) DIP switch on module PCB (T2N only)

Switch No.	Setting	
	For RS-232 communication	For RS-422 communication
DIP switch: No. 1	ON (RS-232C)	OFF (RS-485*1)

*1 Can be used as RS-422.

2 Transmission parameter setting

Enter the transmission parameters.

Item	Setting
Transmission speed*2*3*4	4800bps, 9600bps, 19200bps
Data length	7bit
Stop bit	2bit
Parity bit	Even
Station No.	1

*2 Indicates only the transmission speeds that can be specified on the GOT side.

*3 Fixed to 9600bps for T2E only

*4 Specify the transmission speed to match the baud rate of the GOT.

For how to set the baud rate of the GOT, refer to the following.

Section 14.3.3 Setting communication interface (Communication settings)

14.4.2 Connecting to T3 or T3H

Enter the transmission parameters.

Item	Setting
Transmission speed ^{*1*2}	4800bps, 9600bps, 19200bps
Data length	7bit
Stop bit	2bit
Parity bit	Even
Station No.	1

*1 Indicates only the transmission speeds that can be specified on the GOT side.

*2 Specify the transmission speed to match the baud rate of the GOT.

For how to set the baud rate of the GOT, refer to the following.

 Section 14.3.3 Setting communication interface (Communication settings)

14.4.3 Connecting to model 3000 (S2/S3)

Enter the transmission parameters.

Item	Setting
Transmission method	RS485 ^{*3}
RS485	COM1
Timeout time	5 Sec
Transmission speed ^{*4*5}	4800bps, 9600bps, 19200bps
Data length	7bit
Stop bit	2bit
Parity bit	Even
Station No.	1

*3 Can be used as RS-422.

*4 Indicates only the transmission speeds that can be specified on the GOT side.

*5 Specify the transmission speed to match the baud rate of the GOT.

For how to set the baud rate of the GOT, refer to the following.

 Section 14.3.3 Setting communication interface (Communication settings)

14.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
TOSHIBA PLC connection	Supporting the TOSHIBA PLC connection	2.09K	Communication driver TOSHIBA PROSEC T/V [01.02.**]

CONNECTION TO HITACHI IES PLC



15.1 System Configuration page 15-2

This section describes equipment and cables needed when connecting a GOT to a HITACHI IES PLC.
Select a system suitable for your application.

15.2 Connection Cable page 15-6

This section describes the specifications of the cables needed when connecting a GOT to a HITACHI IES PLC.
Check the specifications of the connection cables.

15.3 Preparatory Procedures for Monitoring page 15-11

This section provides the procedures to be followed before performing monitoring in connection to a HITACHI IES PLC.

The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

15.4 PLC Side Setting page 15-26

The PLC side settings for GOT connection are explained.
When checking the PLC side settings, refer to this section.

15.5 List of Functions Added by Version Upgrade page 15-28

This section describes the functions added by version upgrade of GT Designer2 or OS.

15.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.

15.1.1 Connecting to large-sized H series



1 System configuration and connection conditions

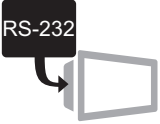



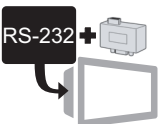

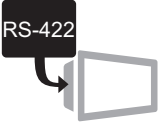



Connection conditions		System configuration *1
Number of GOTs	Distance	
1	15m or less	<p>④ RS-232 cable 1), 2)</p> <p>MAX15m</p>
		<p>③ Intelligent serial port module</p> <p>⑤ RS-232 cable 1)</p> <p>MAX15m</p>
	200m or less	<p>③ Intelligent serial port module</p> <p>⑥ RS-422 cable</p> <p>MAX200m</p>

*1 To use "transmission control procedure 2" as a protocol, select "HITACHI HIDIC H (Protocol2)" as a communication driver.

*2 To connect to the large-sized H series, connect to the peripheral port of the CPU module.


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 



*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	3	Intelligent serial port module	COMM-H, COMM-2H

3 is a product manufactured HITACHI Industrial Equipment Systems Co., Ltd. For details of this product, contact HITACHI Industrial Equipment Systems Co., Ltd.

(3) Cable

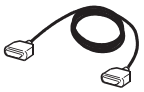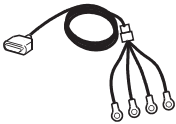Image	No.	Name	Model name
	4	RS-232 cable 1) ^{*1*2} • Between CPU and GOT	GT09-C30R20401-15P(3m)
		RS-232 cable 2) ^{*1*2} • Between CPU and GOT	GT09-C30R20402-15P(3m)
	5	RS-232 cable 1) • Between intelligent serial port module and GOT	GT09-C30R20401-15P(3m)
	6	RS-422 cable ^{*1} • Between intelligent serial port module and GOT	GT09-C30R40401-7T(3m) GT09-C100R40401-7T(10m) GT09-C200R40401-7T(20m) GT09-C300R40401-7T(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. (☞ Section 15.2 Connection Cable)

*2 The connection diagram of the cable to be used varies according to the specified transmission speed.

(☞ Section 15.2 Connection Cable)

15.1.2 Connecting to H-200 to 252 series, H series board type or EH-150 series



1 System configuration and connection conditions

Connection conditions		System configuration ^{*1}
Number of GOTs	Distance	
1	15m or less	

- *1 To use "transmission control procedure 2" as a protocol, select "HITACHI HIDIC H (Protocol2)" as a communication driver.
- *2 To connect to H-200 to 252 series, connect to the peripheral port of the CPU module.
- *3 To connect to the EH-150 series, connect to the serial port of the CPU module. The module jack (8 pins)/D-sub connector (15 pins) conversion cable (EH-RS05 made by HITACHI Industrial Equipment Systems Co., Ltd.) is necessary.
- *4 To connect to serial port 2 of H-252C (CPU22-02HC, CPE22-02HC), the round connector (8 pins)/D-sub connector (15 pins) conversion cable (CNCOM-05 made by HITACHI Industrial Equipment Systems Co., Ltd.) is necessary.

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P

(2) Cable

Image	No.	Name	Model name
	2	RS-232 cable 1) ^{*1*2} • Between CPU and GOT	GT09-C30R20401-15P(3m)
		RS-232 cable 2) ^{*1*2} • Between CPU and GOT	GT09-C30R20402-15P(3m)

- *1 The RS-232 cable can be prepared by the user. (☞ Section 15.2 Connection Cable)
- *2 The connection diagram of the cable to be used varies according to the specified transmission speed. (☞ Section 15.2 Connection Cable)

15.2 Connection Cable

The RS-232 cable or RS-422 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.



RS-232 cable connection diagram

The connection diagram of the cable to be used varies according to the specified transmission speed.

1 Large-sized H series

Model		Specified transmission speed	Connection cable	
			RS-232 cable (See section 15.2.1)	RS-422 cable (See section 15.2.2)
PLC CPU	H-302/702/1002/2002	—	RS-232 cable 1)	—
	H-4010	4800bps	RS-232 cable 1)	—
		19200bps	RS-232 cable 2)	—
		38400bps*1	RS-232 cable 2)	—
		Other than above	RS-232 cable 1), 2)	—
H-300/700/2000	—	RS-232 cable 1)	—	
Intelligent serial port module	COMM-H, COMM-2H	—	RS-232 cable 1)	RS-422 cable

*1 Can be specified with the CPU software of revision "J" or later.

2 H-200 to 252 series, H series board type, EH-150 series


Model		Specified transmission speed	Connection cable	
			RS-232 cable (See section 15.2.1)	RS-422 cable (See section 15.2.2)
PLC CPU	H-200/250/252/252B	—	RS-232 cable 1)	—
	H-252C	4800bps	RS-232 cable 1)	—
		19200bps	RS-232 cable 2)	—
		Other than above	RS-232 cable 1), 2)	—
	H series board type	—	RS-232 cable 1)	—
	EH-150 series	4800bps	RS-232 cable 1)	—
		19200bps	RS-232 cable 2)	—
		38400bps	RS-232 cable 2)	—
Other than above		RS-232 cable 1), 2)	—	

15.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.


1 Connection diagram

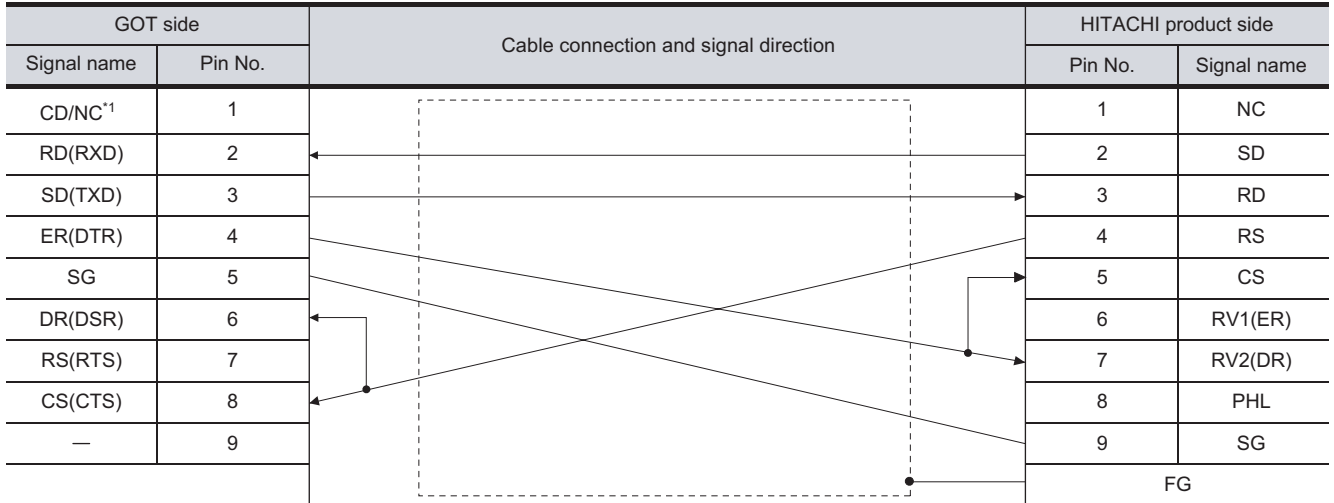(1) RS-232 cable 1)



*1 GT15 : CD, GT11: NC

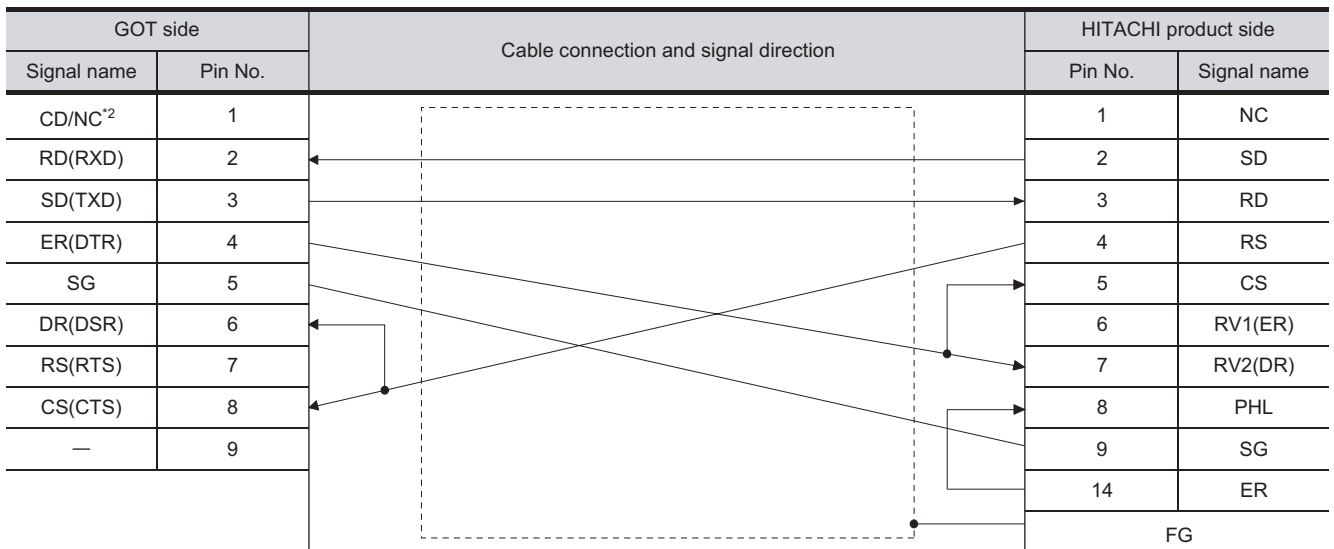(2) RS-232 cable 2)



*2 GT15: CD,GT11: NC

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	DDK Ltd
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) HITACHI IES PLC side connector

Use the connector compatible with the HITACHI IES PLC side module.

For details, refer to the following manual.

 User's Manual for the HITACHI IES PLC


3 Precautions when preparing a cable

The length of the RS-232 cable must be 15m or less.

15.2.2 RS-422 cable

The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a PLC.

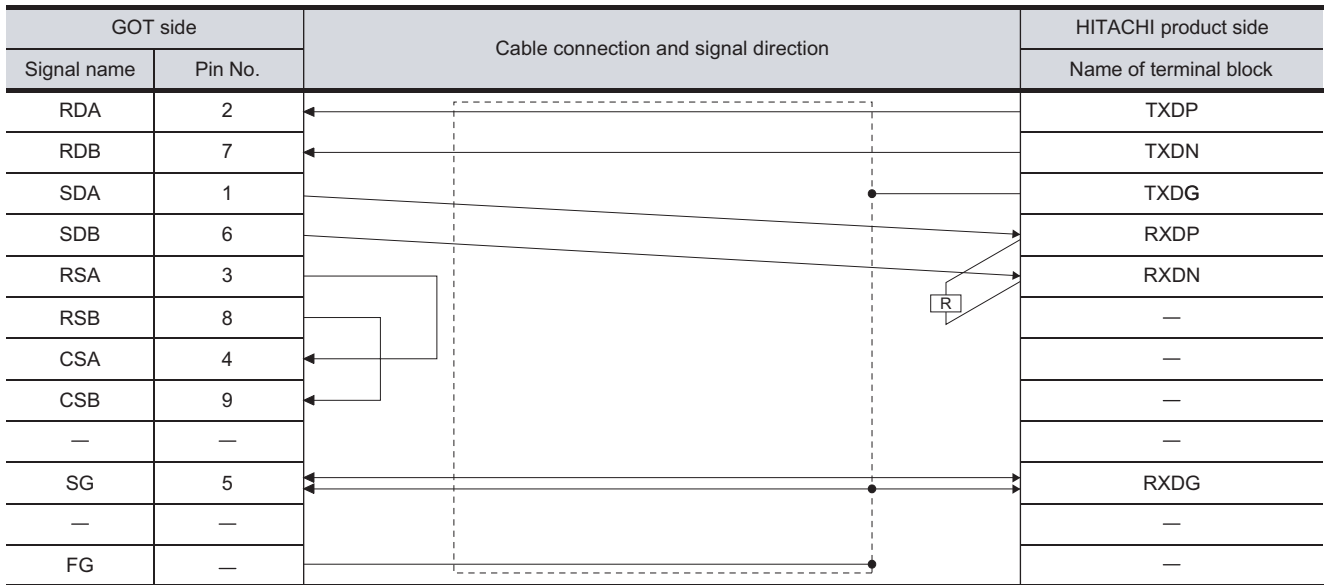1 Connection diagram



2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

(2) HITACHI IES PLC side connector

Use the connector compatible with the HITACHI IES PLC side module.

For details, refer to the following manual.

User's Manual for the HITACHI IES PLC


3 Precautions when preparing a cable

The length of the RS-422 cable must be 200m or less.

4 Connecting terminating resistors

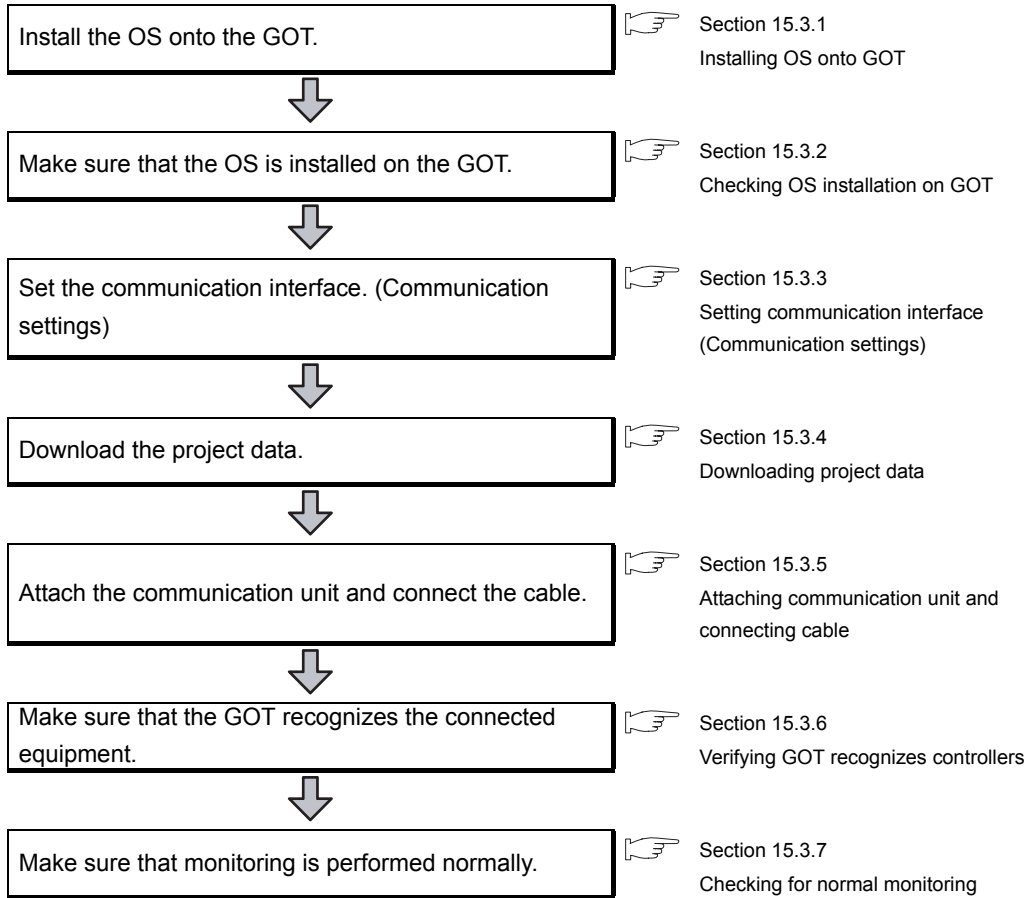
When connecting an intelligent serial port module to a GOT, a terminating resistor has to be connected to the intelligent serial port module.

The terminating resistor is unnecessary on the GOT side because one is built in the GOT.

 User's Manual for the HITACHI IES PLC

15.3 Preparatory Procedures for Monitoring

The following shows the procedures to be taken before monitoring and corresponding reference sections.



Confirming the PLC side setting


This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

Section 15.4 PLC Side Setting

15.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

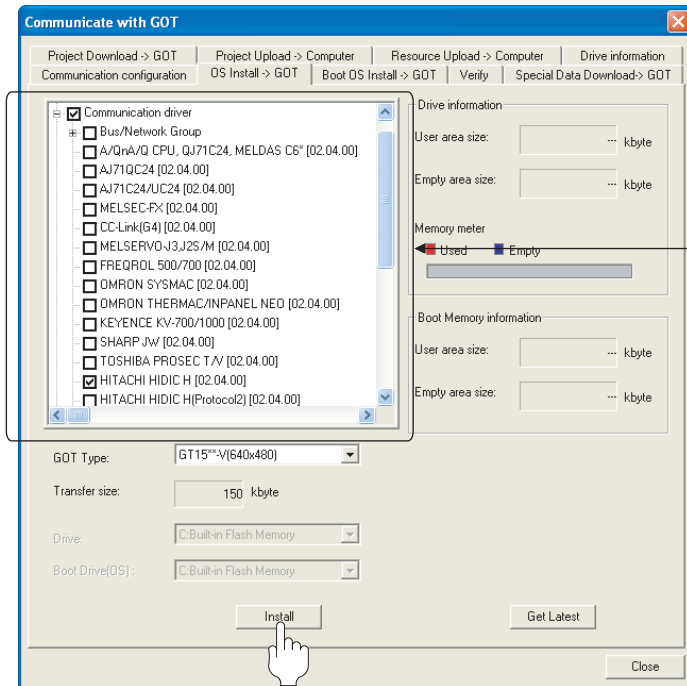 GT Designer2 Version □ Basic Operation/Data Transfer Manual




Check either of the following under the Communication driver.

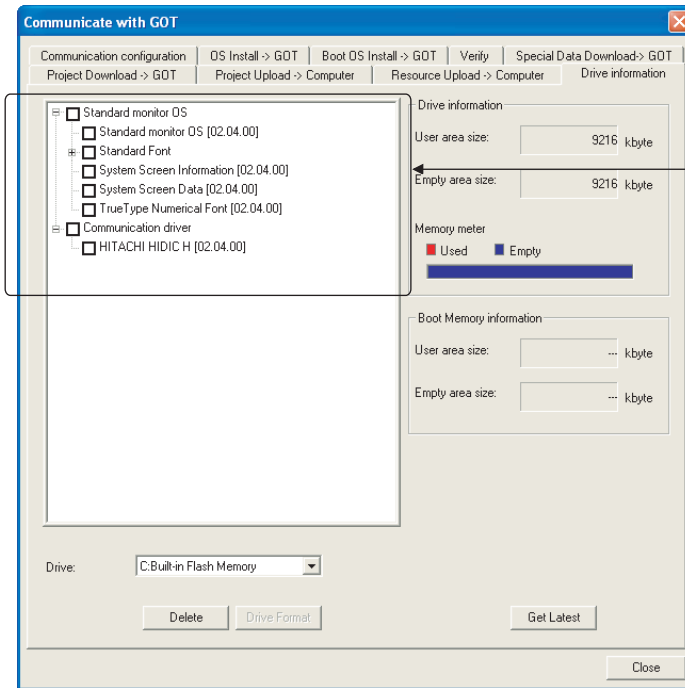
- HITACHI HIDIC H
- HITACHI HIDIC H (Protocol2)

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

15.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS had been installed successfully on the GOT if the following can be confirmed:

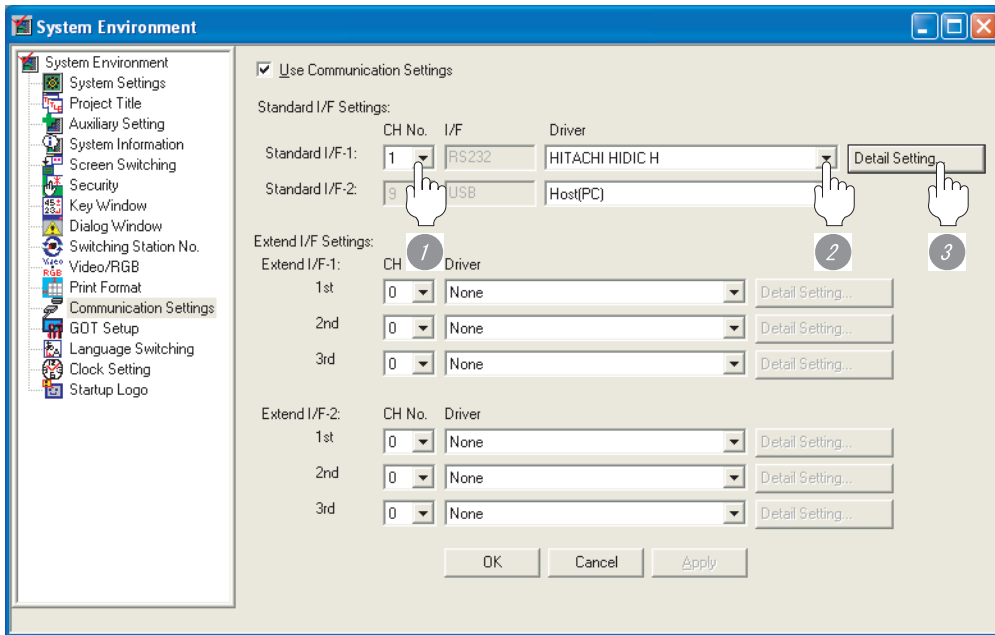
- 1) Standard monitor OS
- 2) Communication driver (either of the following):
 - HITACHI HIDIC H
 - HITACHI HIDIC H (Protocol2)

15.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2.
Select the same communication driver as the one installed on the GOT for each communication interface.
For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the following to the driver.
 - HITACHI HIDIC H
 - HITACHI HIDIC H (Protocol2)
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings


(1) HITACHI HIDIC H

The screenshot shows a 'Communication Detail Settings' dialog box with the following fields and values:

- Driver: HITACHI HIDIC H
- Transmission Speed: 19200 (BPS)
- Data Bit: 7 bit
- Stop Bit: 1 bit
- Parity: Even
- Sum Check: (empty)
- Sum Check Type: (empty)
- Retry: 0 (Times)
- Startup Time: 3 (Sec)
- Timeout Time: 3 (Sec)
- Adapter Address: 0
- Host Address: 0
- Delay Time: 0 (x 10 ms)
- Format: 1
- Interrupt Data Byte: 1 (Byte)
- Station No. Selection: Yes
- Special Interrupt Code: (empty)
- Control Method: (empty)

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	4800bps, 9600bps, 19200bps, 38400bps
Station No. Selection	Specify whether to use the station No. during communication. If [Yes] is selected, the station No. is fixed to "0." <Default: Yes>	Yes or No

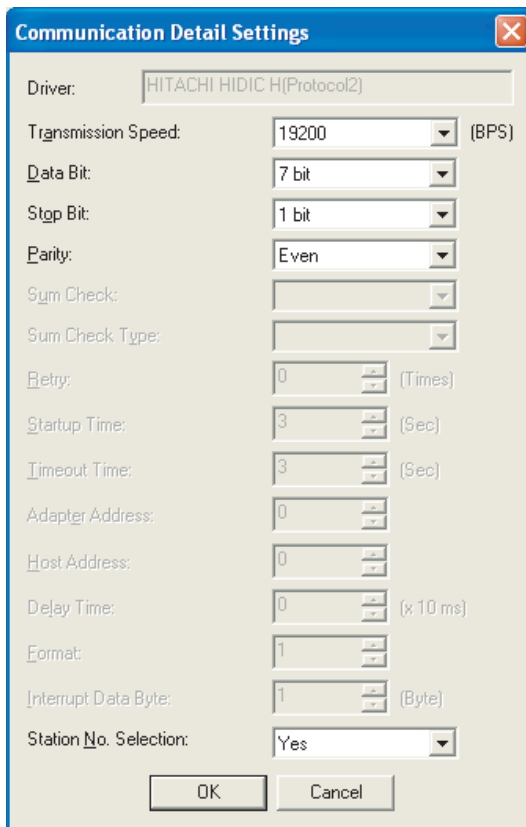(2) HITACHI HIDIC H (Protocol2)



Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	4800bps, 9600bps, 19200bps, 38400bps
Station No. Selection	Specify whether to use the station No. during communication. If [Yes] is selected, the station No. is fixed to "0." <Default: Yes>	Yes or No



(1) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

GT User's Manual


(2) Precedence in communication settings

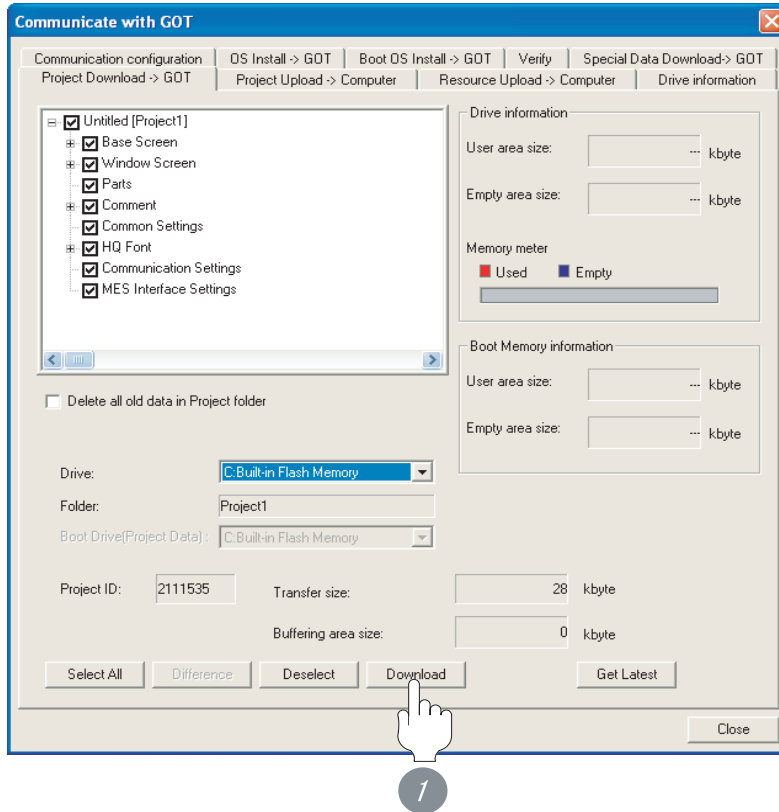
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

15.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


15.3.5 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

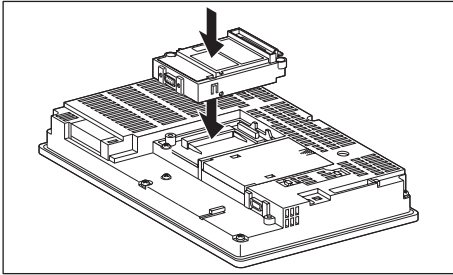1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.



Serial communication unit

For details on the serial communication unit, refer to the following manual:

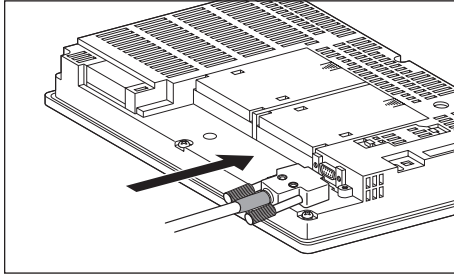
 [GT15 Serial Communication Unit User's Manual](#)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

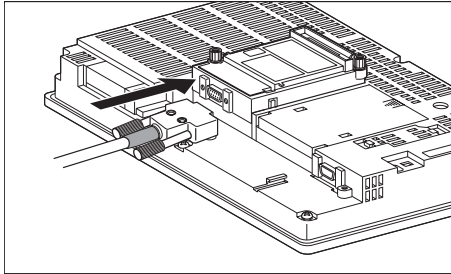- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

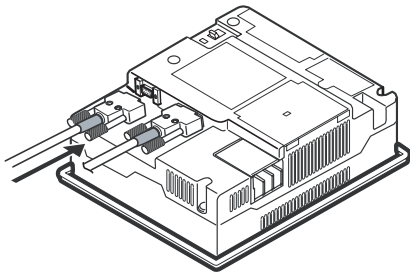(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

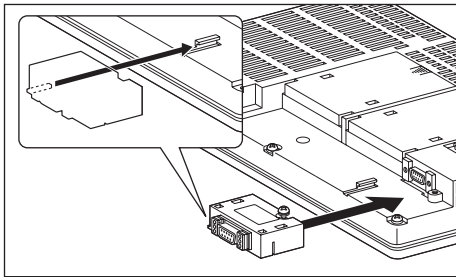- connection to the RS-232 interface




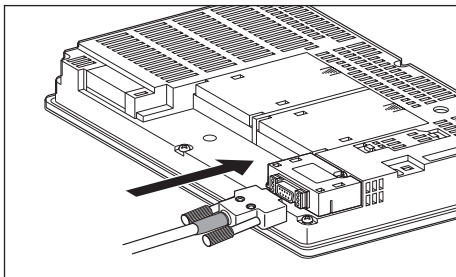- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

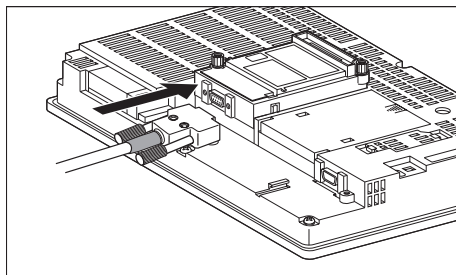- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

☞ GT15 RS-422 Conversion Unit User's Manual

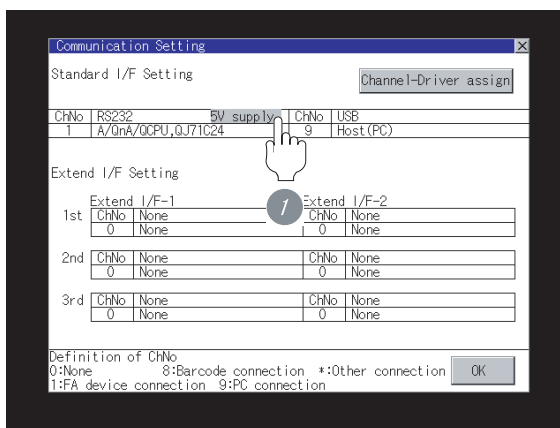


When using the RS-422 conversion unit


On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the utility, refer to the following manual:

GT User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to "YES".

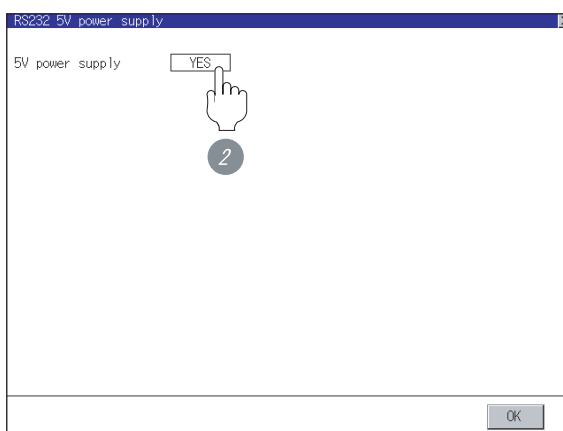

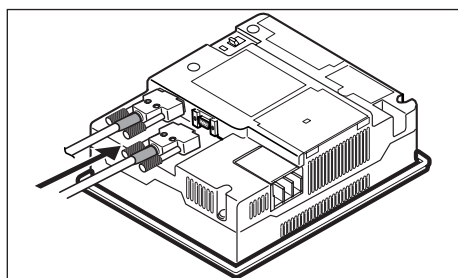(b) In the case of the GT11



1 Connect the RS-422 cable to the RS-422 interface on the GOT.

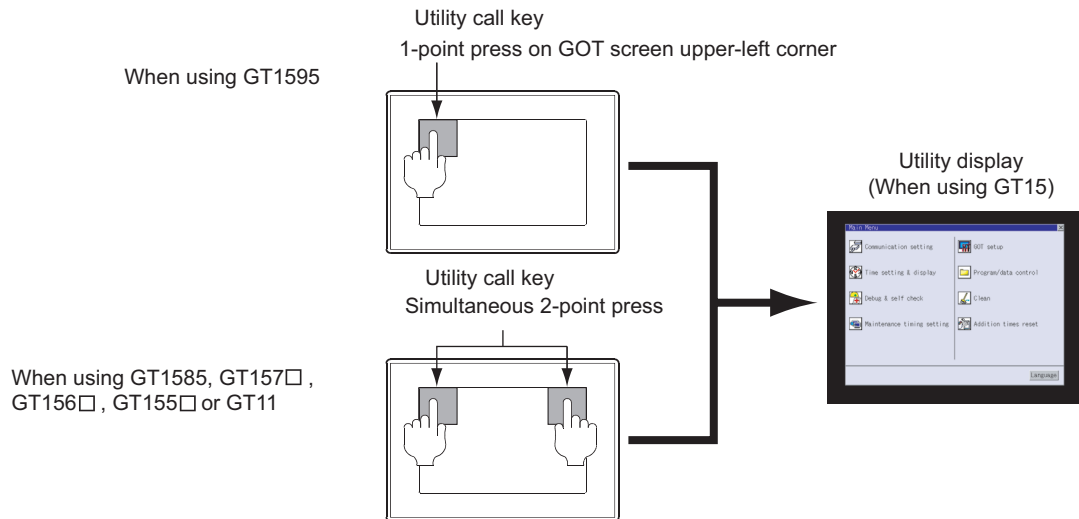
15.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point


When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

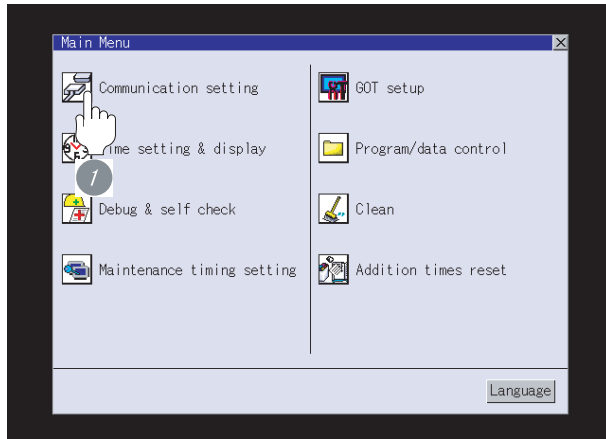 GT□ User's Manual



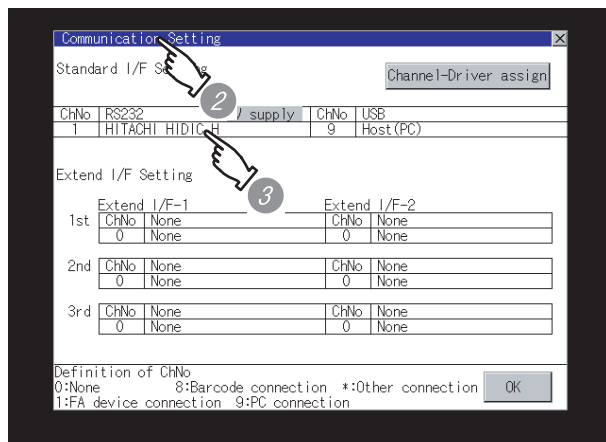- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver (either of the following)
 - HITACHI HIDIC H
 - HITACHI HIDIC H (Protocol2)

- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 15.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

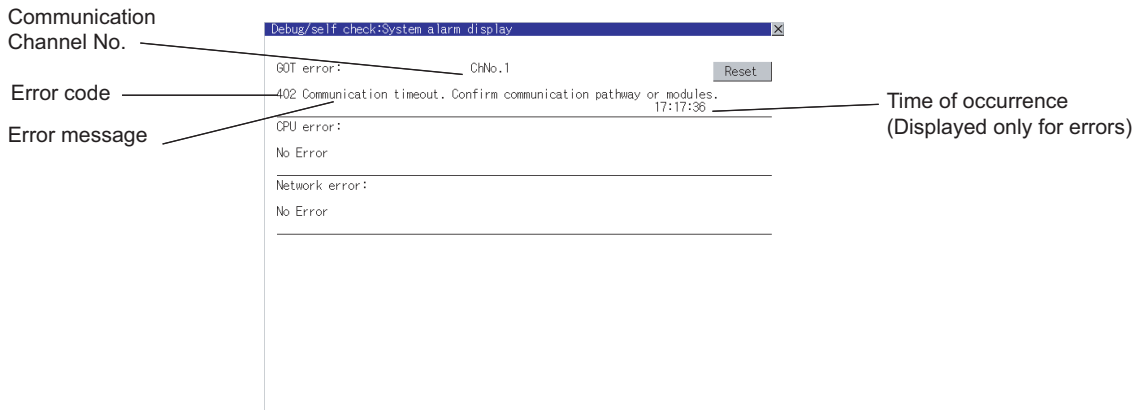
15.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)




Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

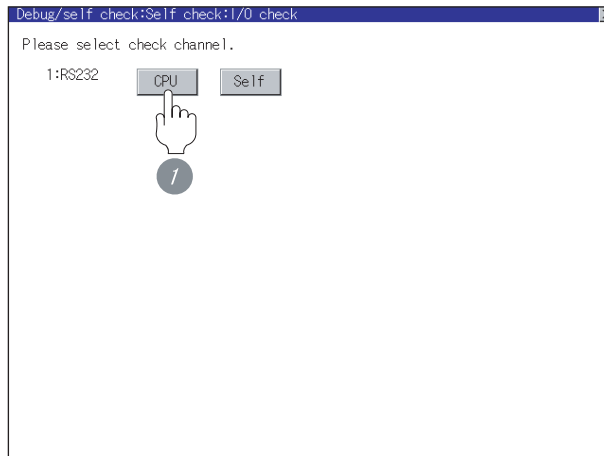


2 Perform an I/O check


Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].
For details on the I/O check, refer to the following manual:

 GT □ User's Manual



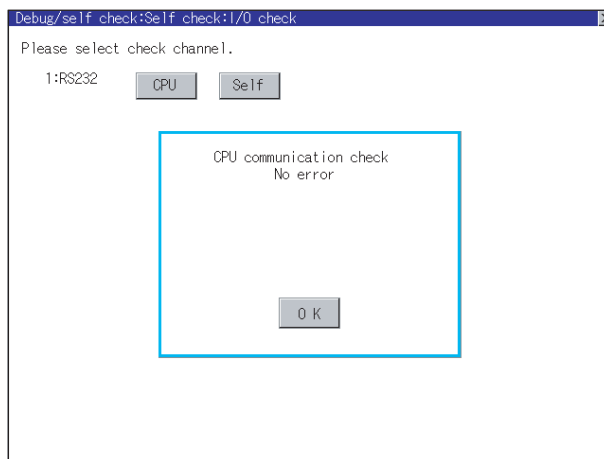
- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side. Confirm if the PLC side setting is correct.

 Section 15.4 PLC Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

15.4 PLC Side Setting



HITACHI IES PLC

For details of the HITACHI IES PLC, refer to the following manual.

User's Manual for the HITACHI IES PLC

1 Directly connecting to the CPU

Item	Setting
Transmission speed ^{*1*2*3}	4800bps, 9600bps, 19200bps, 38400bps
Station No.	0
Data length	7bit
Stop bit	1bit
Pairty bit	Even
Control procedure	DTR control
Communication format	RS-232
Sum check	Performed
Protocol	transmission control procedure 1

*1 Indicates only the transmission speeds that can be specified on the GOT side.

*2 Specify the transmission speed to match the transmission speed of the GOT.
For the transmission speed setting method of the GOT, refer to the following.

Section 15.3.3 Setting communication interface (Communication settings)

*3 The setting range varies according to the PLC to be connected.

2 Connecting to the intelligent serial port module

(1) For transmission control procedure1

Item	Setting
Transmission speed	19200bps
Station No.	0
Data length	7bit
Stop bit	1bit
Pairty bit	Even
Control procedure	None
Communication format	For RS-232 communication: RS-232 MODE switch 2 For RS-422 communication: RS-422 MODE switch 2
Sum check	Performed

(2) For transmission control procedure2

Item	Setting
Transmission speed	19200bps
Station No.	0
Data length	7bit
Stop bit	1bit
Pairty bit	Even
Control procedure	None
Communication format	For RS-232 communication: RS-232 MODE switch 9 For RS-422 communication: RS-422 MODE switch 9
Sum check	Performed

9

ETHERNET
CONNECTION

10

CONNECTION TO
OMRON PLC

11

CONNECTION TO
KEYENCE PLC

12

CONNECTION TO
SHARP PLC

13

CONNECTION TO
JTEKT PLC

14

CONNECTION TO
TOSHIBA PLC

15

CONNECTION TO
HITACHI IES PLC

16

CONNECTION TO
HITACHI PLC

15.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
HITACHI IES PLC connection	Supporting the HITACHI IES PLC connection	2.09K	Communication driver • HITACHI HIDIC H [01.02.**] • HITACHI HIDIC H (Protocol2) [01.02.**]

CONNECTION TO HITACHI PLC



16.1 System Configuration page 16-2

This section describes the equipment and cables needed when connecting a GOT to an HITACHI PLC. Select a system suitable for your application.

16.2 Connection Cable page 16-7

This section describes the specifications of the cables needed when connecting to an HITACHI PLC. Check the specifications of the connection cables.

16.3 Preparatory Procedures for Monitoring page 16-11

This section provides the procedures to be followed before performing monitoring in connection to an HITACHI PLC. This procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

16.4 PLC Side Setting page 16-26

The PLC side settings for GOT connection are explained. When checking the PLC side settings, refer to this section.

16.5 List of Functions Added by Version Upgrade page 16-28

This section describes the functions added by version upgrade of GT Designer2 or OS.

16.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of ① System configuration and connection conditions correspond to the numbers (e.g. ①) of ② System equipment.
Use these numbers as references when confirming models and applications.

16.1.1 Connecting to S10V Series



① System configuration and connection conditions

When connecting to LQP510

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	<p>③ Communication module 1) ⑤ RS-232 cable 1) MAX15m ①</p>
1	500m or less	<p>⑥ RS-422 cable 1) MAX500m ②</p>
1	500m or less	<p>④ Communication module 2) ⑥ RS-422 cable 1) MAX500m ②</p>

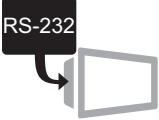



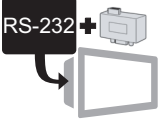





When connecting to LQP520

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	<p>3 Communication module 1)</p> <p>5 RS-232 cable 1)</p> <p>MAX15m</p> <p>1</p>
1	500m or less	<p>4 Communication module 2)</p> <p>6 RS-422 cable 1)</p> <p>MAX500m</p> <p>2</p>

9	ETHERNET CONNECTION
10	CONNECTION TO OMRON PLC
11	CONNECTION TO KEYENCE PLC
12	CONNECTION TO SHARP PLC
13	CONNECTION TO JTEKT PLC
14	CONNECTION TO TOSHIBA PLC
15	CONNECTION TO HITACHI IES PLC
16	CONNECTION TO HITACHI PLC


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 



*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	3	Communication module 1)	LQE560
	4	Communication module 2)	LQE565

3, 4 is manufactured by HITACHI CORPORATION. For details of the product, contact HITACHI CORPORATION.

(3) Cable

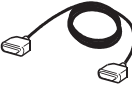Image	No.	Name	Model name
	5	RS-232 cable 1) • Between PLC and GOT	(To be prepared by the user.  Section 16.2 Connection Cable)
	6	RS-422 cable 1) • Between PLC and GOT	

16.1.2 Connecting to S10mini Series

1 System configuration and connection conditions

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	<p>3 Communication module 1)</p> <p>5 RS-232 cable 1)</p> <p>MAX15m</p> <p>1</p>
1	500m or less	<p>4 Communication module 2)</p> <p>6 RS-422 cable 1)</p> <p>MAX500m</p> <p>2</p>

9

ETHERNET
CONNECTION

10

CONNECTION TO
OMRON PLC

11

CONNECTION TO
KEYENCE PLC

12

CONNECTION TO
SHARP PLC

13

CONNECTION TO
JTEKT PLC

14

CONNECTION TO
TOSHIBA PLC

15

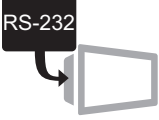



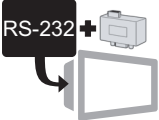

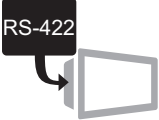



CONNECTION TO
HITACHI IES PLC

16

CONNECTION TO
HITACHI PLC


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 



*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT15□.

(2) PLC

Image	No.	Name	Model name
	3	Communication module 1)	LQE560, LQE060, LQE160
	4	Communication module 2)	LQE565, LQE165

3, 4 is manufactured by HITACHI CORPORATION. For details of the product, contact HITACHI CORPORATION.

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 1) • Between PLC and GOT	(To be prepared by the user.  Section 16.2 Connection Cable)
	6	RS-422 cable 1) • Between PLC and GOT	

16.2 Connection Cable

The RS-232 cable or RS-422 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable	
		RS-232 cable (Refer to Section 16.2.1)	RS-422 cable (Refer to Section 16.2.2)
PLC	LQP510	-	RS-422 cable 1)
Communication module	LQE560	RS-232 cable 1)	-
	LQE060		
	LQE160		
	LQE565	-	RS-422 cable 1)
	LQE165		


16.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.

1 Connection diagram


(1) RS-232 cable 1)

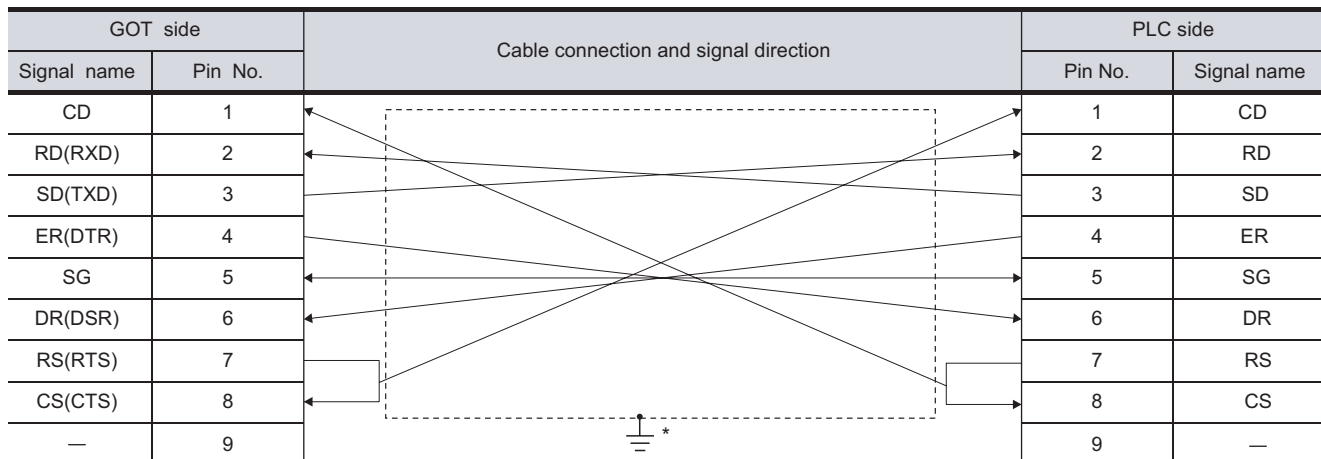(a) For the GT15



* Connect FG grounding to the appropriate part of a cable shield line.

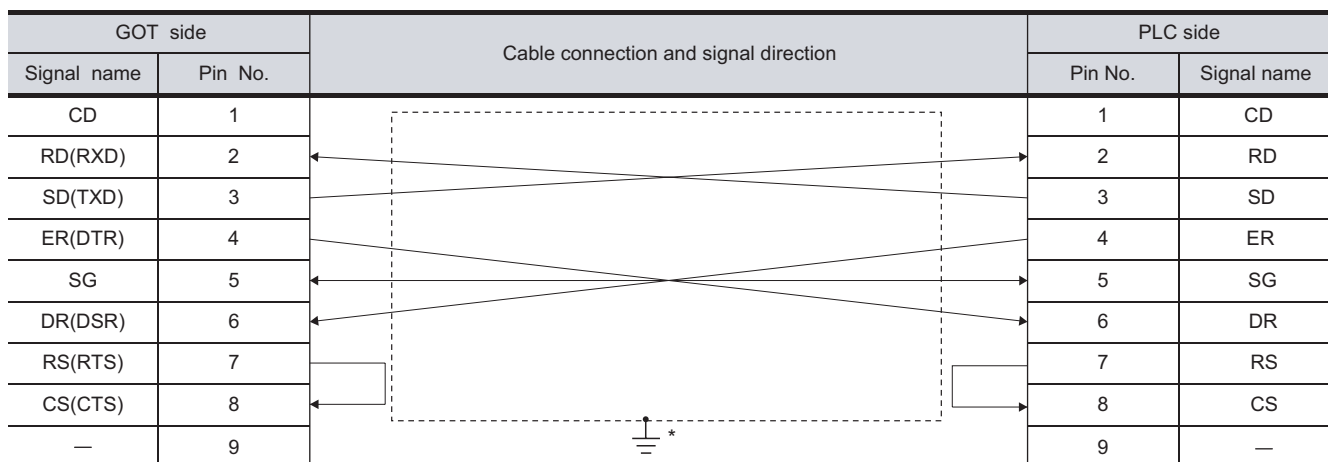(b) For the GT11



* Connect FG grounding to the appropriate part of a cable shield line.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model


GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C		
GT1585-STBD	-	17LE-23090-27(D4CK)	DDK Ltd
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E		
GT1575-VTBD	-	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-		
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) HITACHI PLC side connector

Use the connector compatible with the HITACHI PLC side module. For details, refer to the following manual.

 User's Manual for the HITACHI PLC.

3 Precautions when preparing a cable

The length of the RS-232 cable must be 15m or less.

16.2.2 RS-422 cable

The following provides the connection diagrams and the connectors of the RS-422 cable connecting the GOT to the PLC.

1 Connection diagram

(1) RS-422 cable 1)

GOT side		Cable connection and signal direction	PLC side	
Signal name	Pin No.		Pin No.	Signal name
SDA	1		1	RD-L
RDA	2		2	RD-H
RSA	3		3	SD-H
CSA	4		4	SD-L
SG	5		5	SG
SDB	6		6	—
RDB	7		7	ATT-H
RSB	8		8	—
CSB	9		9	ATT-L

* Connect FG grounding to the appropriate part of a cable shield line.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.


GOT	Model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

3 Precautions when preparing a cable

The length of the RS-422 cable must be 500m or less.

16.3 Preparatory Procedures for Monitoring

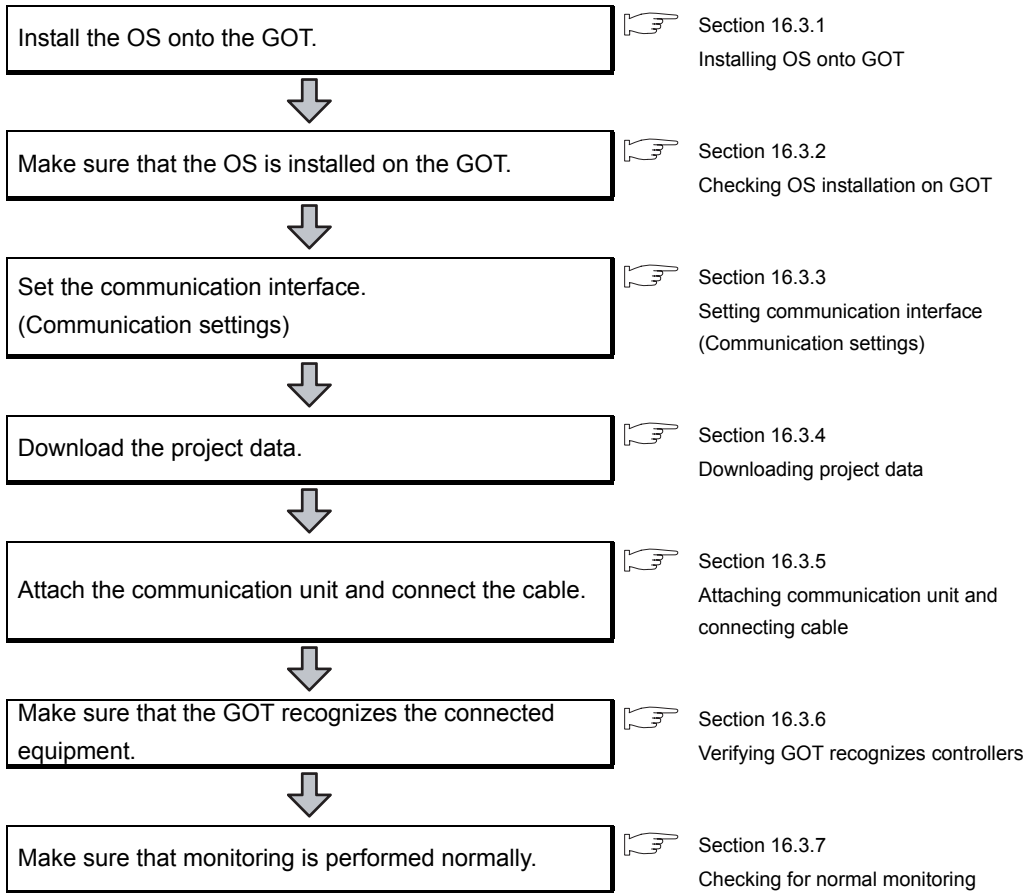The following the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the PLC side setting


This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

Section 16.4 PLC Side Setting

16.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

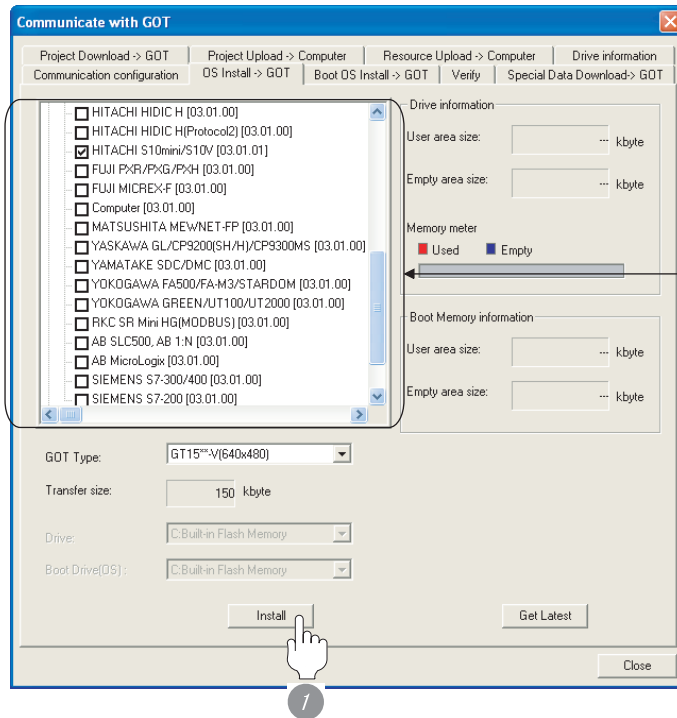 GT Designer2 Version Basic Operation/Data Transfer Manual




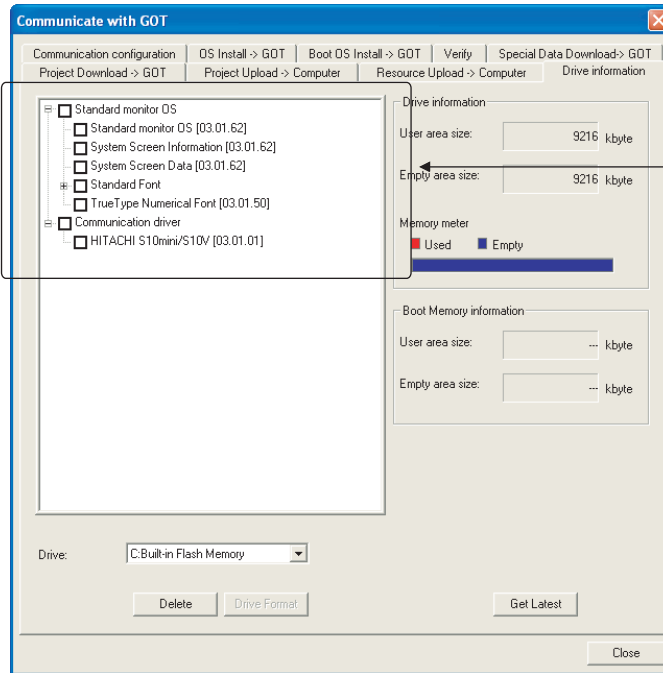
Check the following under the Communication driver.
• HITACHI S10mini/S10V

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

16.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

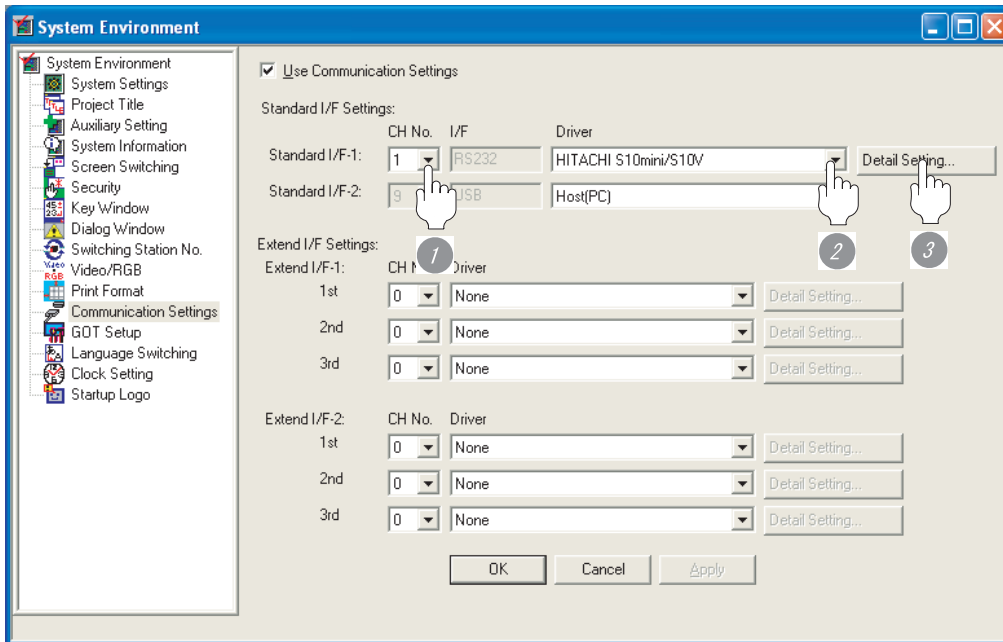
- 1) Standard monitor OS
- 2) Communication driver: HITACHI S10mini/S10V

16.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "HITACHI S10mini/S10V".
- 3 Perform the detailed settings for the driver. ( **2** Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	9600bps,19200bps,38400bps,57600bps,115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Odd>	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 0>	0 to 300 ms



- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.


 GT □ User's Manual

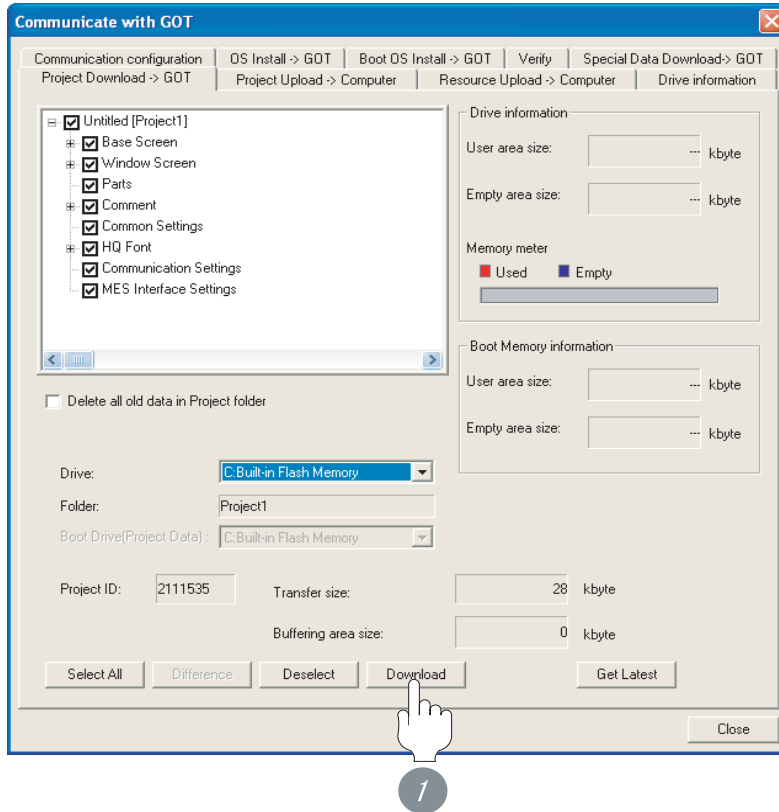
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

16.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


16.3.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

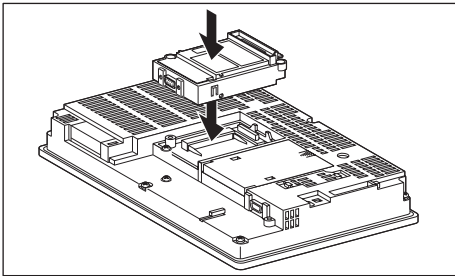1 Attaching the communication unit




- 1** Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

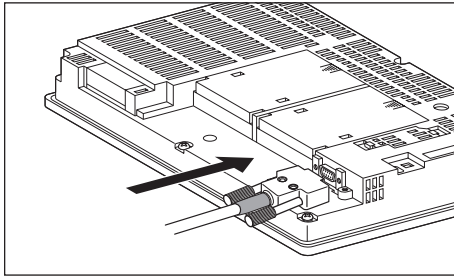
 GT15 Serial Communication Unit User's Manual

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

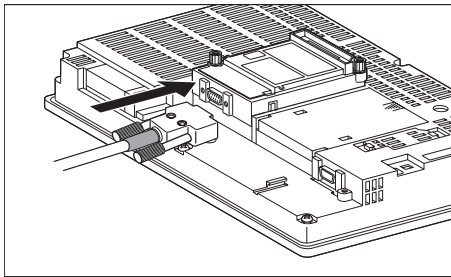- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

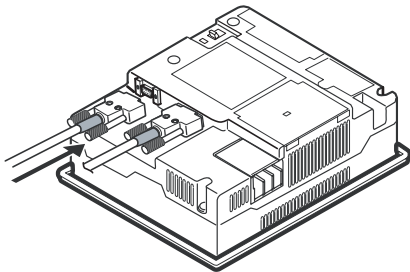(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

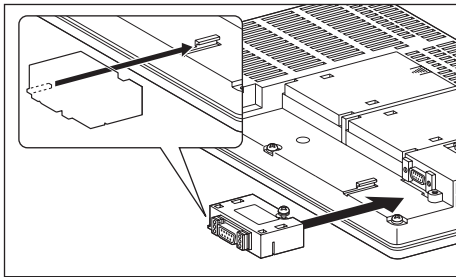- connection to the RS-232 interface




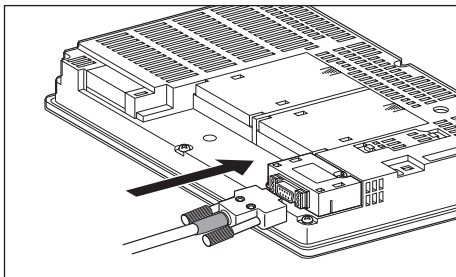- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

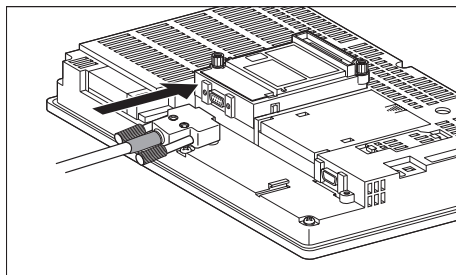- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

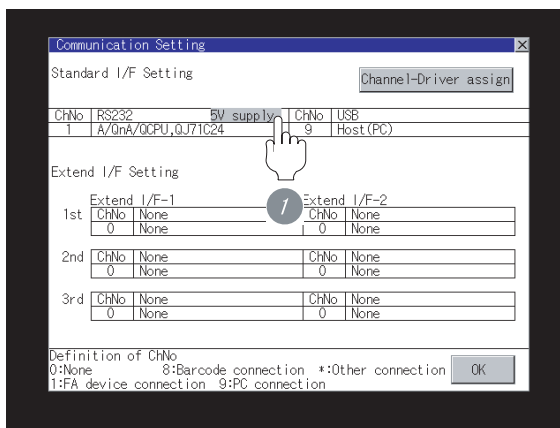
☞ GT15 RS-422 Conversion Unit User's Manual

When using the RS-422 conversion unit


On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT.
For details on the utility, refer to the following manual:

 GT User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to "YES".

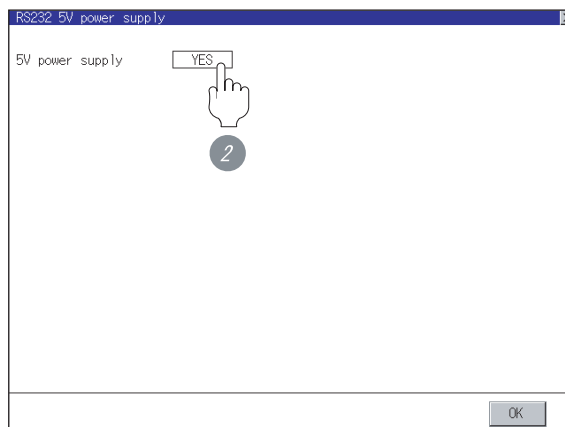

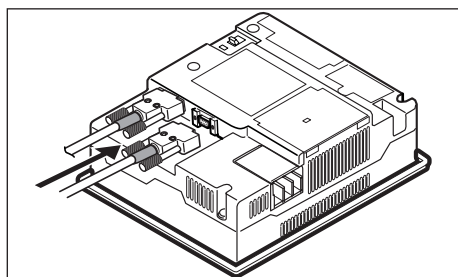(b) In the case of the GT11



1 Connect the RS-422 cable to the RS-422 interface on the GOT.

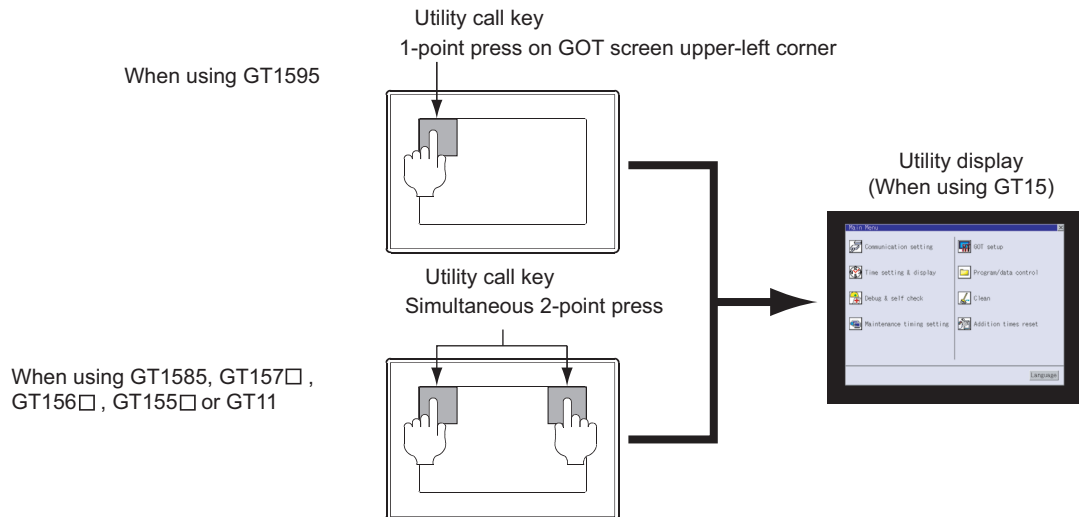
16.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point


When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

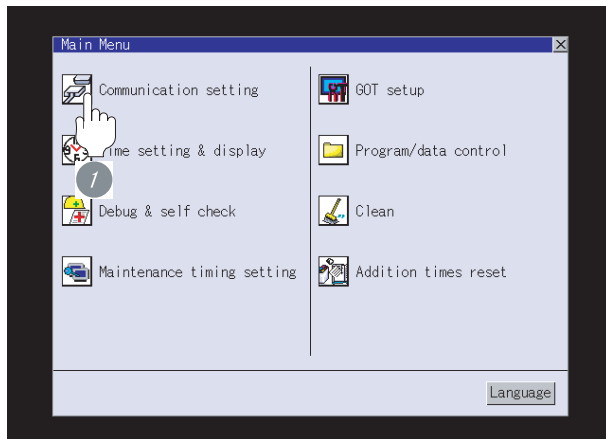☞ GT□ User's Manual



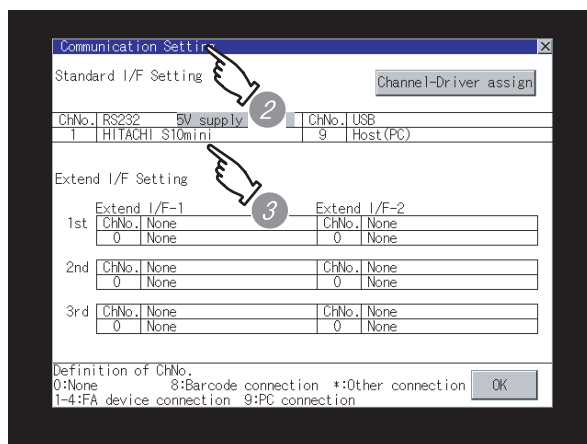- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver
HITACHI S10mini/S10V
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.
 - ➔ Section 16.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

➔ GT □ User's Manual

16.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

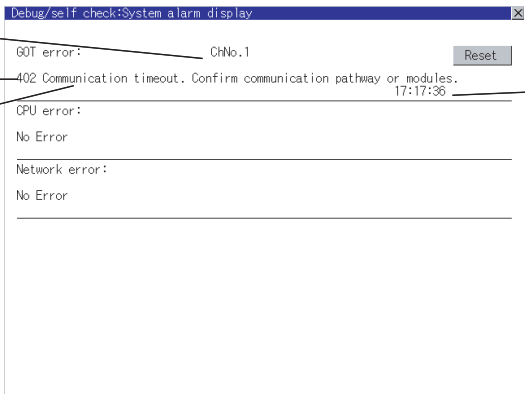
 GT User's Manual (When using GT15)

Communication Channel No. ———

Error code ———

Error message ———

Time of occurrence (Displayed only for errors)




Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

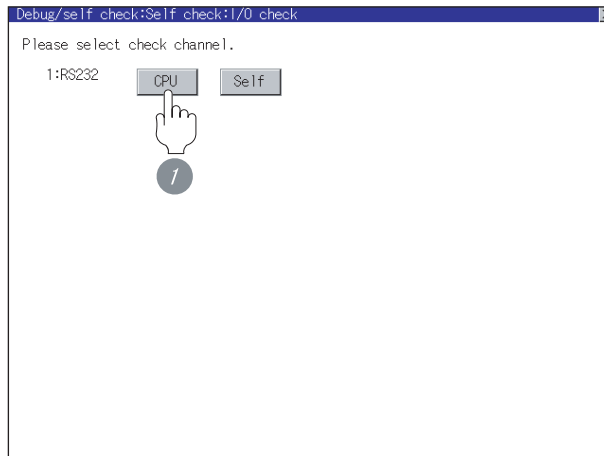
 GT Designer2 Version Screen Design Manual

2 Perform an I/O check.


Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].
For details on the I/O check, refer to the following manual:

 GT □ User's Manual



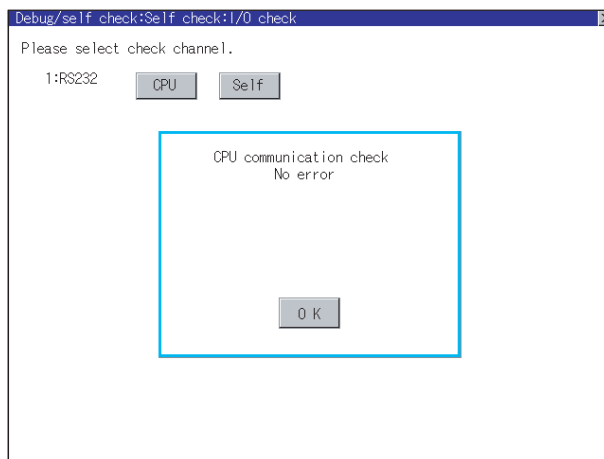
- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.
Confirm if the PLC side setting is correct.

 Section 13.4 PLC Side Setting


All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

16.4 PLC Side Setting



HITACHI PLC

For details of HITACHI PLCs, refer to the following manuals.

 Manuals for HITACHI PLCs

Model name		Reference
Communication module	LQE560	Section 16.4.1
	LQE060	
	LQE160	
	LQE565	
	LQE165	

16.4.1 Connecting to communication module

1 Communication settings

Make the communication settings of the Communication module.


Item	Set value
Channel No. setting ^{*1*2}	#0 to #3
Protocol setting	H-7338 protocol
Transmission speed	19200bps (fixed)
Data length	8 bits (fixed)
Parity bit	Odd (fixed)
Start bit	1 bit (fixed)
Stop bit	1 bit (fixed)

*1 The ranges of available channel No. differ depending on the model of communication module.

*2 Avoid duplication of the channel No.

2 Settings by switch

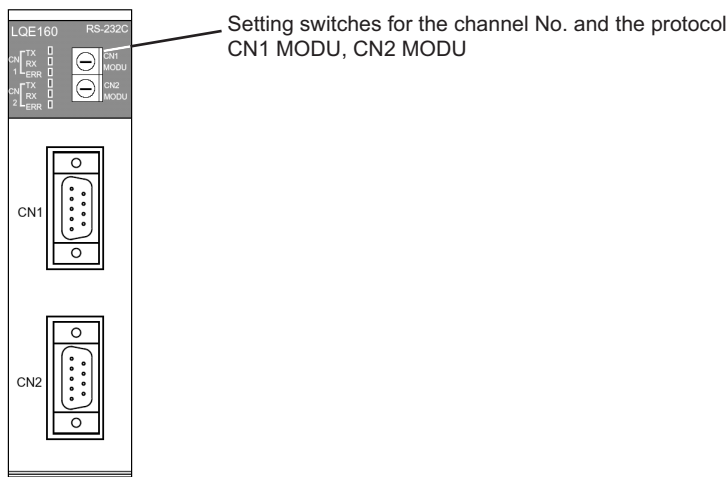Make the communication settings using each setting switch.



(1) Settings of the channel No. and the protocol

Switch positions	Protocol	Channel No.
8	H-7338	#0
9		#1
A		#2
B		#3



CN1
MODU



CN2
MODU

16.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Connection to HITACHI PLC	Supporting the HITACHI PLC connection	2.43V	Communication driver HITACHI S10mini/S10V [03.01.**]

CONNECTION TO FUJI FA PLC



17.1 System Configuration page 17-2

This section describes the equipment and cables needed when connecting a GOT to a FUJI FA PLC. Select a system suitable for your application.

17.2 Connection Cable page 17-10

This section describes the specifications of the cables needed when connecting to a FUJI FA PLC. Check the specifications of the connection cables.

17.3 Preparatory Procedures for Monitoring page 17-15

This section provides the procedures to be followed before performing monitoring in connection to a FUJI FA PLC. This procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

17.4 PLC Side Setting page 17-30

The PLC side settings for GOT connection are explained. When checking the PLC side settings, refer to this section.

17.5 Precautions page 17-40

This section describes the precautions about PLC connection. Refer to this section without fail before starting PLC connection.

17.6 List of Functions Added by Version Upgrade page 17-41

This section describes the functions added by version upgrade of GT Designer2 or OS.

17.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.

17.1.1 Connecting to MICREX-F55





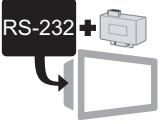

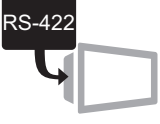





1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of PLCs	Distance	
1	1	Between GOT and RS-232C interface card 15m or less	
1	1	Between GOT and RS-232C/485 interface capsule 15m or less	
1	<div style="display: flex; flex-direction: column; align-items: center;"> <div style="display: flex; align-items: center; gap: 5px;"> Max. 32 units </div> <div style="display: flex; align-items: center; gap: 5px;"> Max. 10 units </div> </div>	Between GOT and RS-232C/485 interface capsule 500m or less	


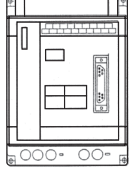
2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 




*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT15□.

(2) PLC

Image	No.	Name	Model name
	3	RS-232C interface card	NV1L-RS2
	4	RS-232C/485 interface capsule	FFK120A-C10

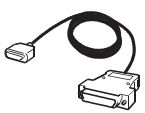3, 4 is manufactured by FUJIFACORP.,LTD.For details of the product, contact FUJIFACORP.,LTD.

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 1) • Between RS-232C interface card and GOT • Between RS-232C/485 interface capsule and GOT	(To be prepared by the user.  Section 17.2 Connection Cable)
	6	RS-485 cable 1) • Between RS-232C/485 interface capsule and GOT	

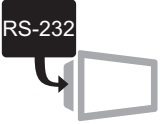



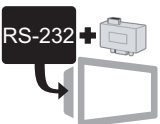

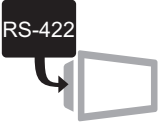



17.1.2 Connecting to MICREX-F70

1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of PLCs	Distance	
1	1	Between GOT and General-purpose interface card 15m or less	<p>3 General-purpose interface module 1)</p> <p>6 RS-232 cable 1)</p> <p>MAX15m</p>
1	1	Between GOT and RS-232C/485 interface capsule 15m or less	<p>4 RS-232C/485 interface capsule</p> <p>6 RS-232 cable 1)</p> <p>MAX15m</p> <p>T-link</p>
1	<div style="display: flex; align-items: center;"> <div style="text-align: left;"> <p>Max. 32 units</p> </div> </div> <div style="display: flex; align-items: center; margin-top: 10px;"> <div style="text-align: left;"> <p>Max. 10 units</p> </div> </div>	Between GOT and RS-232C/485 interface capsule 500m or less	<p>MAX500m</p> <p>7 RS-485 cable 1)</p> <p>2</p> <p>4 RS-232C/485 interface capsule</p> <p>T-link</p>
1	<div style="display: flex; align-items: center;"> <div style="text-align: left;"> <p>Max. 32 units</p> </div> </div> <div style="display: flex; align-items: center; margin-top: 10px;"> <div style="text-align: left;"> <p>Max. 10 units</p> </div> </div>	Between GOT and General-purpose interface module 500m or less	<p>MAX500m</p> <p>6 RS-485 cable 1)</p> <p>2</p> <p>5 General-purpose interface module 2)</p>


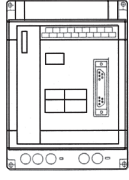

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 




*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	3	General-purpose interface module 1)	NC1L-RS2
	4	RS-232C/485 interface capsule	FFK120A-C10
	5	General-purpose interface module 2)	NC1L-RS4

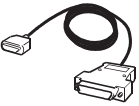[3], [4], [5] is manufactured by FUJI FA CO.,LTD. For details of the product, contact FUJI FA CO.,LTD.

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 1) • Between General-purpose interface card and GOT • Between RS-232C/485 interface capsule and GOT	(To be prepared by the user.  Section 17.2 Connection Cable)
	6	RS-485 cable 1) • Between RS-232C/485 interface capsule and GOT	

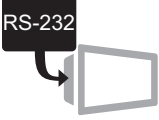



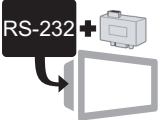





17.1.3 Connecting to MICREX-F120S/140S/150S

1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of PLCs	Distance	
1	1	Between GOT and General-purpose interface module 15m or less	<p>3 General-purpose interface module</p> <p>5 RS-232 cable 1)</p> <p>MAX15m</p>
1	1	Between GOT and RS-232C/485 interface capsule 15m or less	<p>4 RS-232C/485 interface capsule</p> <p>5 RS-232 cable 1)</p> <p>MAX15m</p> <p>T-link</p>
1	<div style="display: flex; align-items: center;"> <div style="margin-left: 5px;">Max. 32 units</div> </div> <div style="display: flex; align-items: center; margin-top: 10px;"> <div style="margin-left: 5px;">Max. 10 units</div> </div>	Between GOT and RS-232C/485 interface capsule 500m or less	<p>MAX500m</p> <p>6 RS-485 cable 1)</p> <p>4 RS-232C/485 interface capsule</p> <p>T-link</p>
1	<div style="display: flex; align-items: center;"> <div style="margin-left: 5px;">Max. 32 units</div> </div> <div style="display: flex; align-items: center; margin-top: 10px;"> <div style="margin-left: 5px;">Max. 10 units</div> </div>	Between GOT and General-purpose interface module 500m or less	<p>MAX500m</p> <p>8 RS-485 cable 1)</p> <p>3 General-purpose interface module</p>


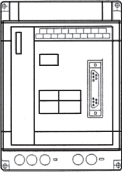
2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit ^{*1} • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 




*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	3	General-purpose interface module	FFU120B
	4	RS-232C/485 interface capsule	FFK120A-C10

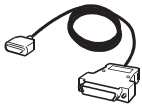[3], [4] is manufactured by FUJI FA CO.,LTD. For details of the product, contact FUJI FA CO.,LTD.

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 1) <ul style="list-style-type: none"> • Between General-purpose interface card and GOT • Between RS-232C/485 interface capsule and GOT 	(To be prepared by the user.  Section 17.2 Connection Cable)
	6	RS-485 cable 1) <ul style="list-style-type: none"> • Between RS-232C/485 interface capsule and GOT • Between general-purpose interface module and GOT 	

17.2 Connection Cable

The RS-232C cable or RS-485 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable	
		RS-232 cable (Refer to Section 17.2.1)	RS-485 cable (Refer to Section 17.2.2)
RS-232C interface card	NV1L-RS2	RS-232 cable 1)	-
RS-232C/485 interface capsule	FFK120A-C10	RS-232 cable 1)	RS-485 cable 1)
General-purpose interface module	NC1L-RS2	RS-232 cable 1)	-
	NC1L-RS4	-	RS-485 cable 1)
	FFU120B	RS-232 cable 1)	RS-485 cable 1)

17.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.

1 Connection diagram

(a) For the GT15

GOT side		Cable connection and signal direction	PLC side	
Signal name	Pin No.		Pin No.	Signal name
CD	1		1	FG
RD(RXD)	2		2	SD
SD(TXD)	3		3	RD
ER(DTR)	4		4	RS
SG	5		5	CS
DR(DSR)	6		6	DR
RS(RTS)	7		7	SG
CS(CTS)	8		8	CD
—	9		20	ER

(b) For the GT11

GOT side		Cable connection and signal direction	PLC side	
Signal name	Pin No.		Pin No.	Signal name
CD	1		1	FG
RD(RXD)	2		2	SD
SD(TXD)	3		3	RD
ER(DTR)	4		4	RS
SG	5		5	CS
DR(DSR)	6		6	DR
RS(RTS)	7		7	SG
CS(CTS)	8		8	CD
—	9		20	ER

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model


GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) FUJI FA PLC side connector

Use the connector compatible with the FUJI FA PLC side module. For details, refer to the following manual.

 User's Manual for the FUJI FA PLC.

3 Precautions when preparing a cable


The length of the RS-232 cable must be 15m or less.

17.2.2 RS-485 cable

The following provides the connection diagrams and the connectors of the RS-485 cable connecting the GOT to the PLC.

1 Connection diagram

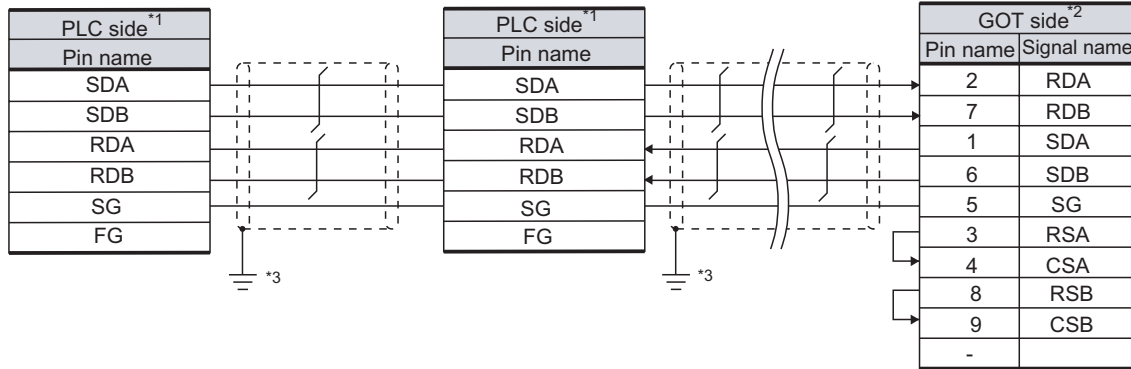(1) RS-485 cable 1)



*1 Turn ON the terminating switch of a interface converter which will be a terminal.

*2 Set the terminating resistor of GOT side to "Disable".

4 Connecting terminating resistors

*3 Connect FG grounding to the appropriate part of a cable shield line.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

3 Precautions when preparing a cable

The length of the RS-485 cable must be 500m or less.

4 Connecting terminating resistors


(1) GOT

Set the terminating resistor of RS-422/485 communication unit using the terminating resistor setting switch.

Terminating resistor*1	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF




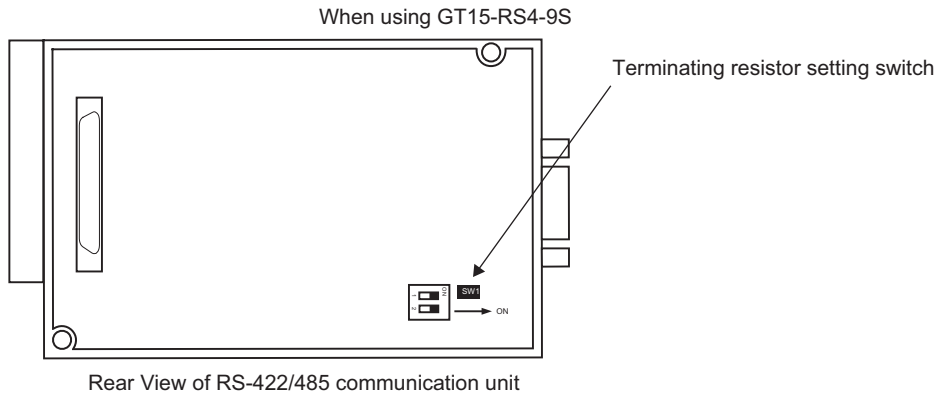*1 The default setting is "Enable".



17.3 Preparatory Procedures for Monitoring

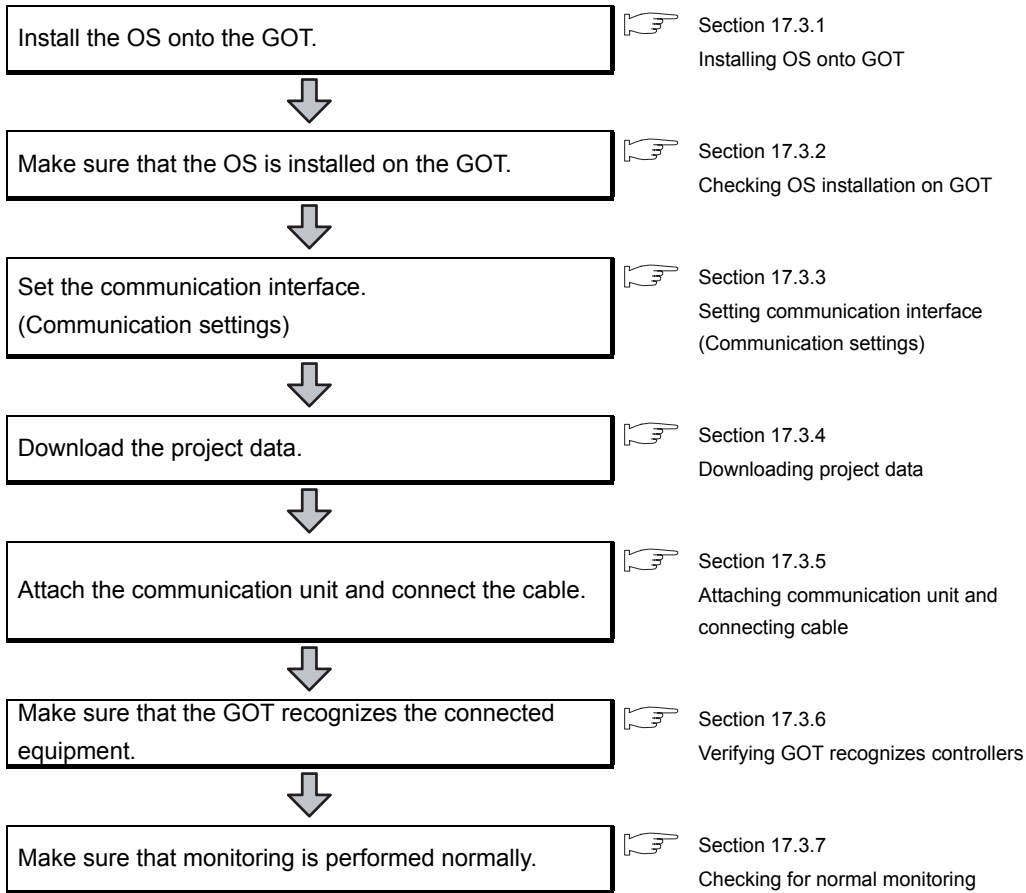The following the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the PLC side setting


This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

Section 17.4 PLC Side Setting

17.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

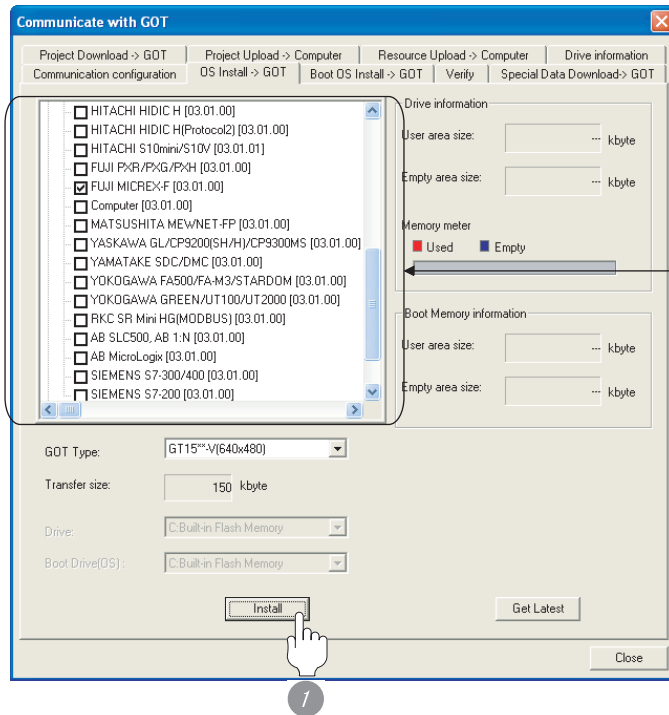 GT Designer2 Version □ Basic Operation/Data Transfer Manual




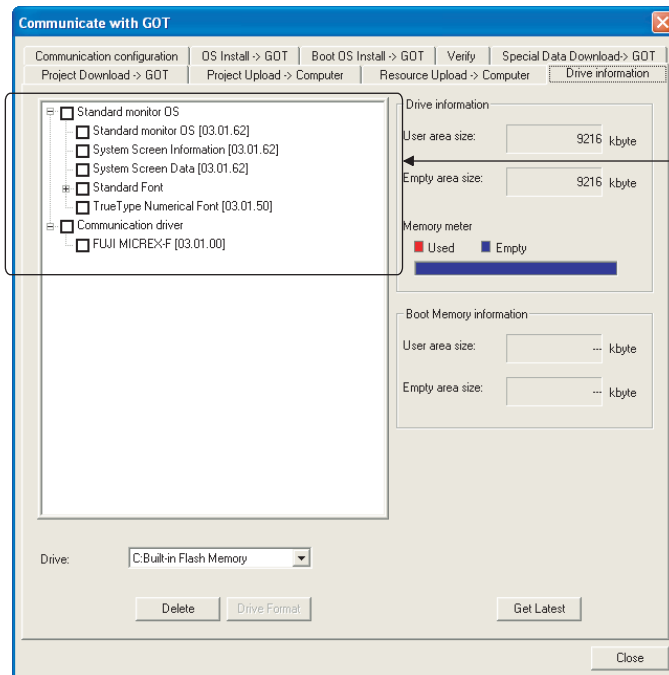
Check the following under the Communication driver.
• FUJII MICREX-F

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

17.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

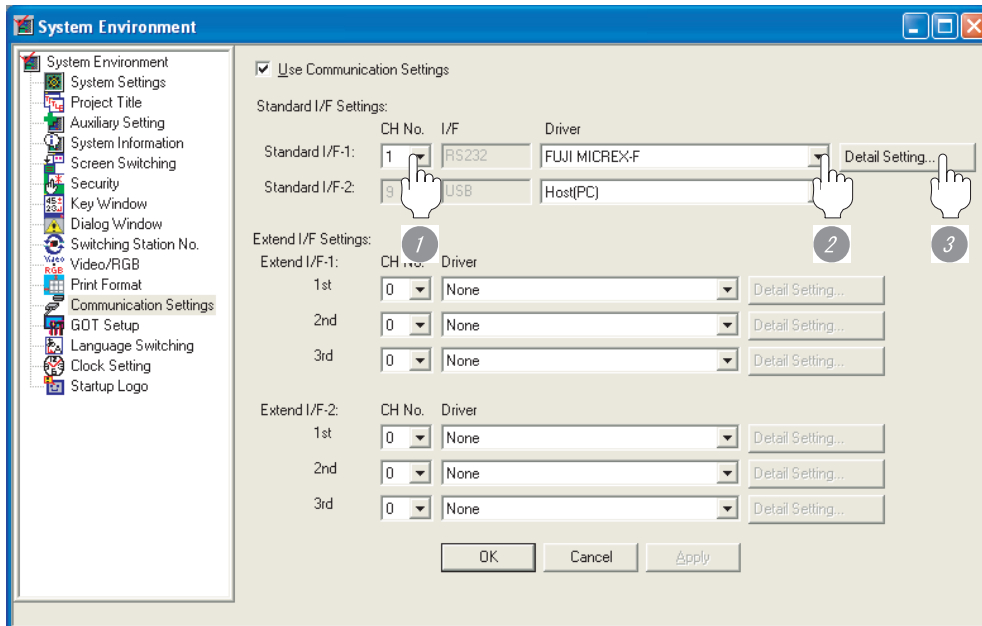
- 1) Standard monitor OS
- 2) Communication driver: FUJI MICREX-F

17.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "FUJI MICREX-F".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	9600bps,19200bps,38400bps,57600bps,115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Even>	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 5ms>	0 to 300 ms
Host Address	Specify the host address (station No. of the GOT to which the PLC is connected) in the connected network. <Default: 0>	0 to 99

(1) Host Address

When connecting to PLC by RS-232 communication, set the Host Address to "0".

(2) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT □ User's Manual


(3) Precedence in communication settings

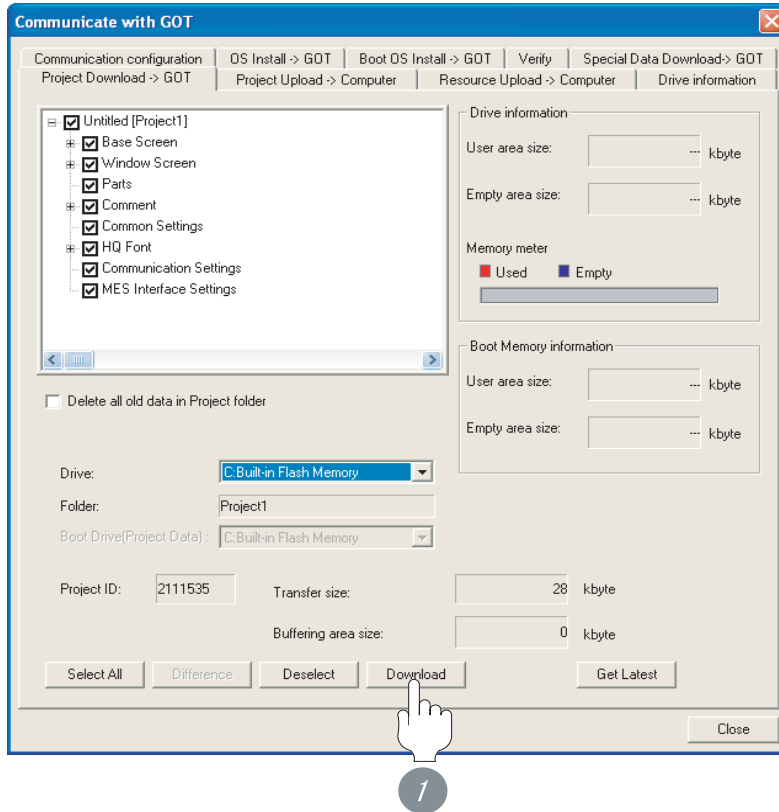
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

17.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


17.3.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

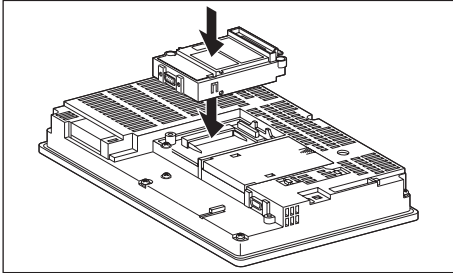1 Attaching the communication unit




- 1** Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

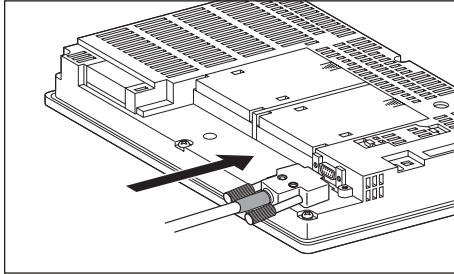
 GT15 Serial Communication Unit User's Manual

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

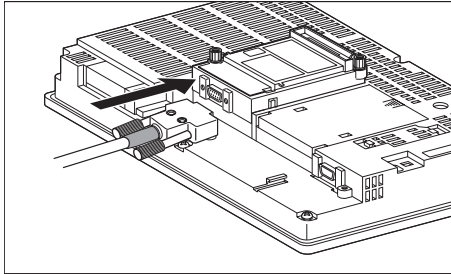- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

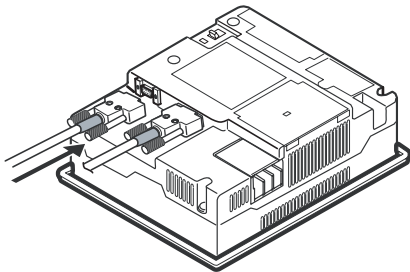(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

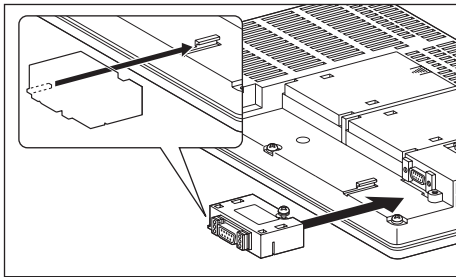- connection to the RS-232 interface




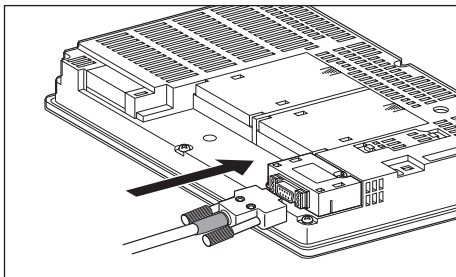- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

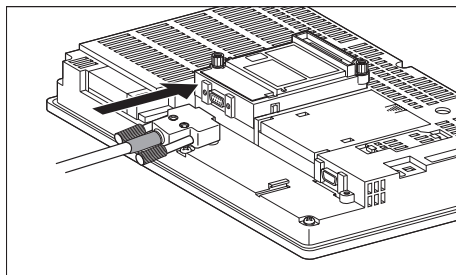- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

☞ GT15 RS-422 Conversion Unit User's Manual

Point

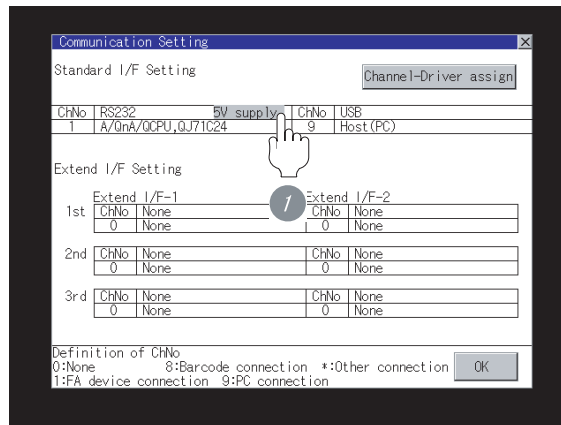
When using the RS-422 conversion unit

On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT.


For details on the utility, refer to the following manual:

 GT □ User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to "YES".

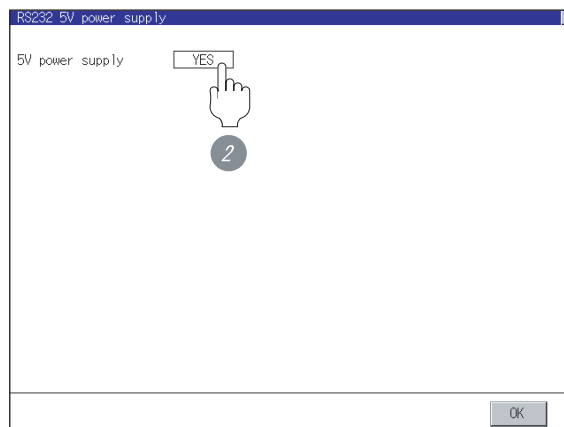

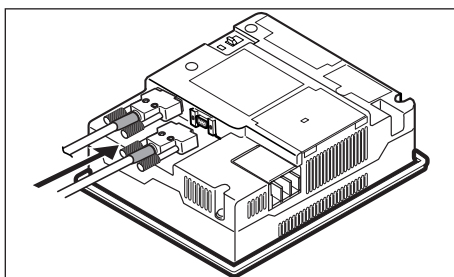(b) In the case of the GT11



1 Connect the RS-422 cable to the RS-422 interface on the GOT.

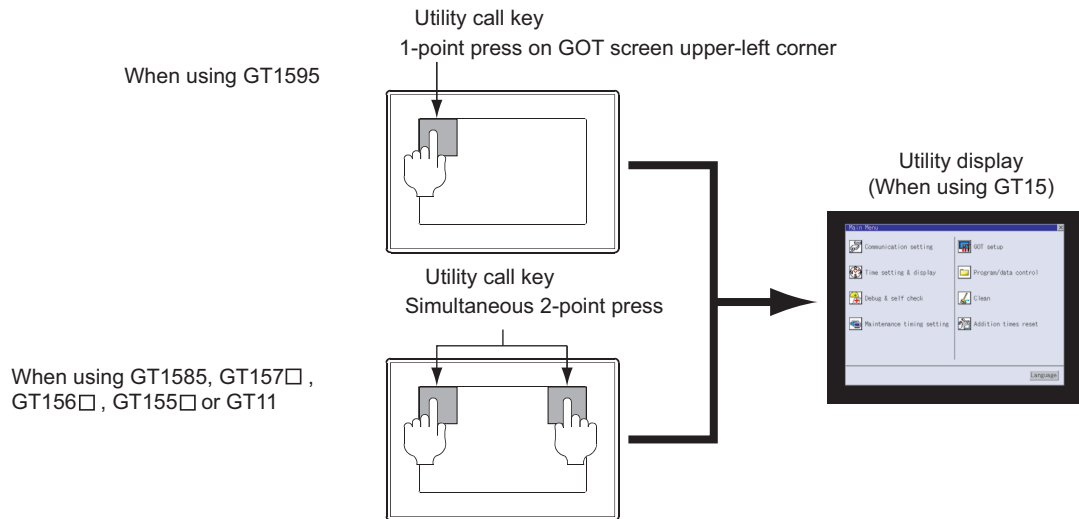
17.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

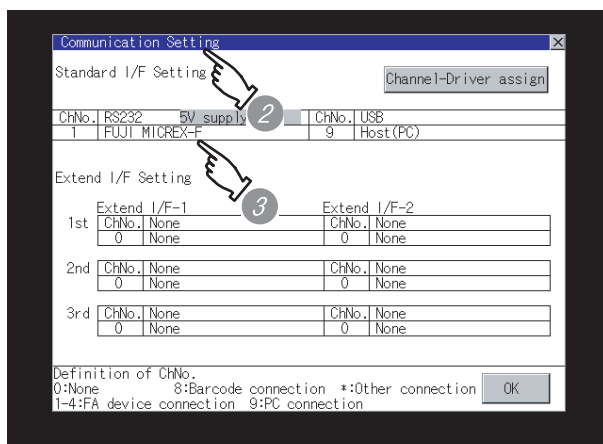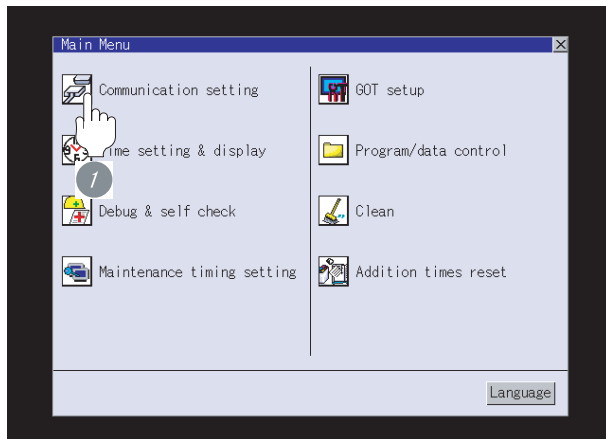☞ GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver
FUJI MICREX-F

4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 17.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

17.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

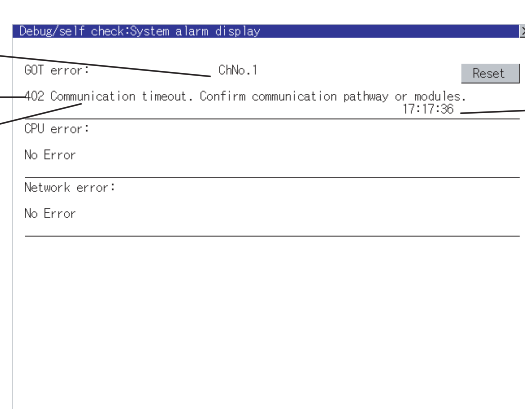
 GT User's Manual (When using GT15)

Communication Channel No. ————

Error code ————

Error message ————

Time of occurrence (Displayed only for errors)



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

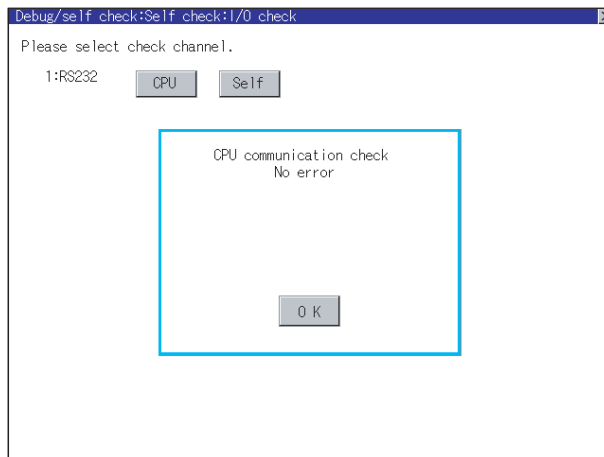
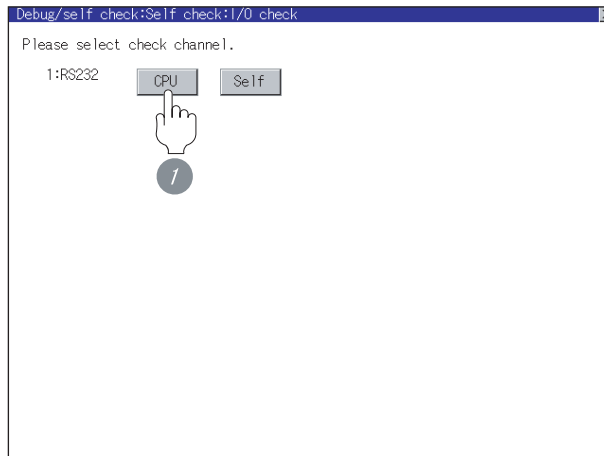
 GT Designer2 Version Screen Design Manual

2 Perform an I/O check.

Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].
For details on the I/O check, refer to the following manual:

 GT User's Manual



- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.

- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.
Confirm if the PLC side setting is correct.

 Section 13.4 PLC Side Setting


All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

17.4 PLC Side Setting



FUJI FA PLC

For details of FUJI FA PLCs, refer to the following manuals.

 Manuals for FUJI FA PLCs

Model name		Reference
General-purpose interface card	NV1L-RS2	Section 17.4.1
	NC1L-RS2	
General-purpose interface module	NC1L-RS4	Section 17.4.2
	FFU120B	Section 17.4.3
RS-232C/485 interface capsule	FFK120A-C10	Section 17.4.4

17.4.1 Connecting to NV1L-RS2, NC1L-RS2

1 Communication settings


Make the communication settings using the setting switches.

Item	Set value
MODE	Command-setting-type start-stop synchronization, nonsequence format
Transmission speed*1	9600bps, 19200bps
Data length*1	8 bits or 7 bits
Parity bit*1	Even or Odd
	Done, None
Stop bit*1	1 bit or 2 bits
Initializing method	By switch

*1 Adjust the settings with GOT settings.

2 Settings by switch

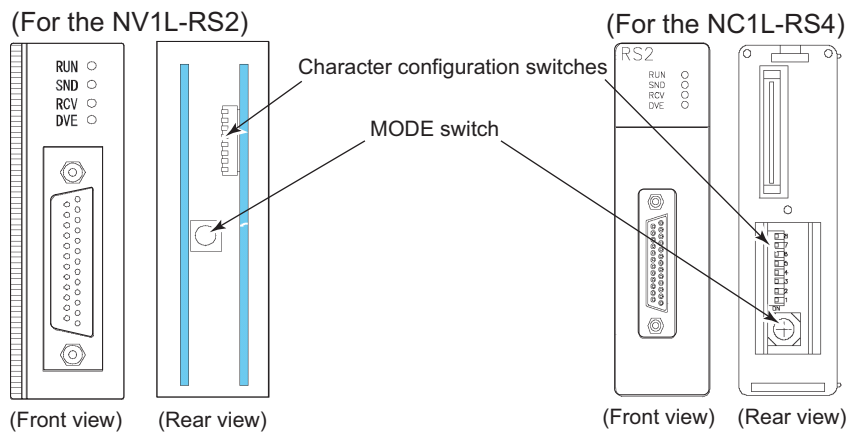
Make the communication settings using each setting switch.



(1) Setting of MODE


Make the MODE settings using the MODE switch.

MODE	Switch position	
	NV1L-RS2	NC1L-RS2
Command-setting-type start-stop synchronization, nonsequence format	1	1

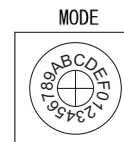

(2) Setting of Transmission speed, Stop bit, Data length, Parity bit, Initializing method

Setting item	Set value	Switch No.							
		1	2	3	4	5	6	7	8
Transmission speed	9600bps	ON	OFF	ON					
	19200bps	OFF	ON	ON					
Stop bit	1 bit				ON				
	2 bits				OFF				
Data length	7 bits					ON			
	8 bits					OFF			
Parity bit	Even						ON		
	Odd						OFF		
	Done							ON	
	Non							OFF	
Initializing method	By switch								ON

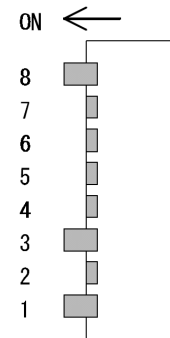

17.4.2 Connecting to NC1L-RS4

1 Communication settings

Make the communication settings using the setting switches.

Item	Set value
MODE	Command-setting-type start-stop synchronization, nonsequence format
Transmission speed*1	9600bps, 19200bps
Data length*1	8 bits or 7 bits
Parity bit*1	Even or Odd
	Done, None
Stop bit*1	1 bit or 2 bits
Initializing method	By switch
Station No.*2	0 to 99
Terminating resistor*3	ON or OFF

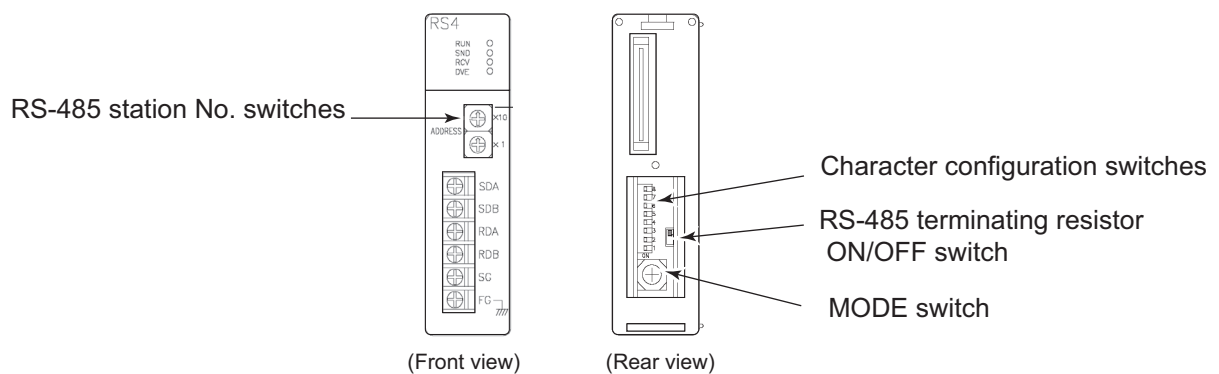
*1 Adjust the settings with GOT settings.

*2 Avoid duplication of the station No. with any of the other units.

*3 Turn ON the terminating switch of a general-purpose interface module which will be a terminal.

2 Settings by switch


Make the communication settings using each setting switch.




(1) Setting of the MODE

Make the MODE settings using the MODE switch.

MODE	Switch positions
Command-setting-type start-stop synchronization, nonsequence format	3

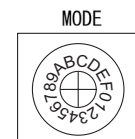

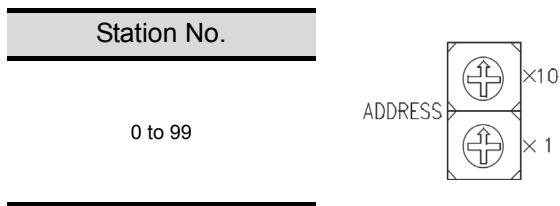- (2) Setting of the station No.
Make the station No. using RS-485 station No. switches.




- (3) Setting of the terminating resistor
Turn ON/OFF the terminating resistor using RS-485 terminating resistor ON/OFF switch.



- (4) Setting of Transmission speed, Stop bit, Data length, Parity bit, Initializing method
Make the settings using the character configuration switches.

Setting item	Set value	Switch No.							
		1	2	3	4	5	6	7	8
Transmission speed	9600bps	ON	OFF	ON					
	19200bps	OFF	ON	ON					
Stop bit	1 bit				ON				
	2 bits				OFF				
Data length	7 bits					ON			
	8 bits					OFF			
Parity bit	Even						ON		
	Odd						OFF		
	Done							ON	
	Non							OFF	
Initializing method	By switch								ON

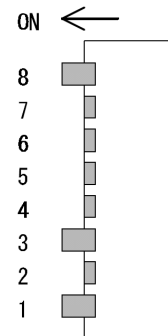

17.4.3 Connecting to FFU120B

1 Communication settings

Make the communication settings using the setting switches.

Item	Set value
MODE	Command-setting-type start-stop synchronization, nonsequence format
Transmission speed*1	9600bps, 19200bps
Data length*1	8 bits or 7 bits
Parity bit*1	Even or Odd
	Done, None
Stop bit*1	1 bit or 2 bits
Initializing method	By switch
Station No.*2	0 to 99
Terminating resistor*3	ON or OFF

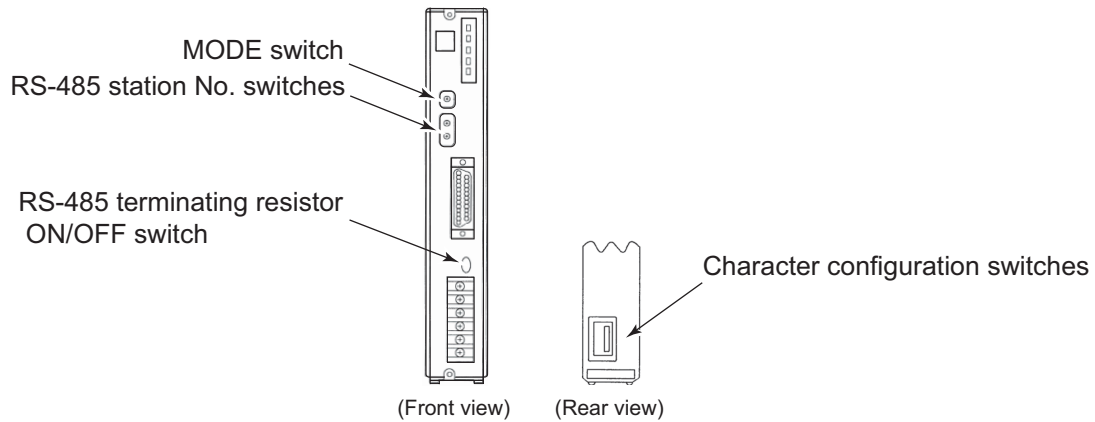
*1 Adjust the settings with GOT settings.

*2 Avoid duplication of the station No. with any of the other units.

*3 Turn ON the terminating switch of a general-purpose interface module which will be a terminal.

2 Settings by switch


Make the communication settings using each setting switch.




(1) Setting of the MODE

Make the MODE settings using the MODE switch.

MODE	Switch positions
Command-setting-type start-stop synchronization, nonsequence format RS-232C 1:1	1
Command-setting-type start-stop synchronization, nonsequence format RS-232C 1:1, and RS-485 1:N	2
Command-setting-type start-stop synchronization, nonsequence format RS-485 1:N	3

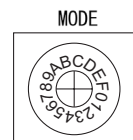

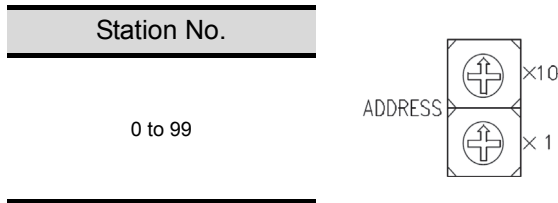- (2) Setting of the station No.
Make the station No. using RS-485 station No. switches.




- (3) Setting of the terminating resistor
Turn ON/OFF the terminating resistor using RS-485 terminating resistor ON/OFF switch.



- (4) Setting of Transmission speed, Stop bit, Data length, Parity bit, Initializing method
Make the settings using the character configuration switches.


Setting item	Set value	Switch No.							
		1	2	3	4	5	6	7	8
Transmission speed	9600bps	ON	OFF	ON					
	19200bps	OFF	ON	ON					
Stop bit	1 bit				ON				
	2 bits				OFF				
Data length	7 bits					ON			
	8 bits					OFF			
Parity bit	Even						ON		
	Odd						OFF		
	Done							ON	
	Non							OFF	
Initializing method	By switch								ON

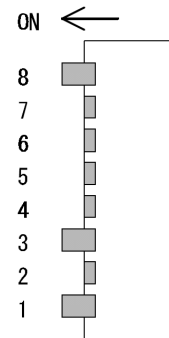

17.4.4 RS-232/RS-422 interface converter setting

1 Communication settings

Make the communication settings using the setting switches.

Item	Set value
MODE*4	Command-setting-type start-stop synchronization, nonsequence format RS-232C 1:1
	Command-setting-type start-stop synchronization, nonsequence format RS-232C 1:1, and RS-485 1:N
	Command-setting-type start-stop synchronization, nonsequence format RS-485 1:N
Transmission speed*1	9600bps, 19200bps
Data length*1	8 bits or 7 bits
Parity bit*1	Even or Odd
	Done, None
Stop bit*1	1 bit or 2 bits
Initializing method	By switch
Station No.*2	0 to 99
Terminating resistor*3	ON or OFF
T-link channel switch	 Manuals for FUJI FA PLCs
T-link terminating resistor	

*1 Adjust the settings with GOT settings.

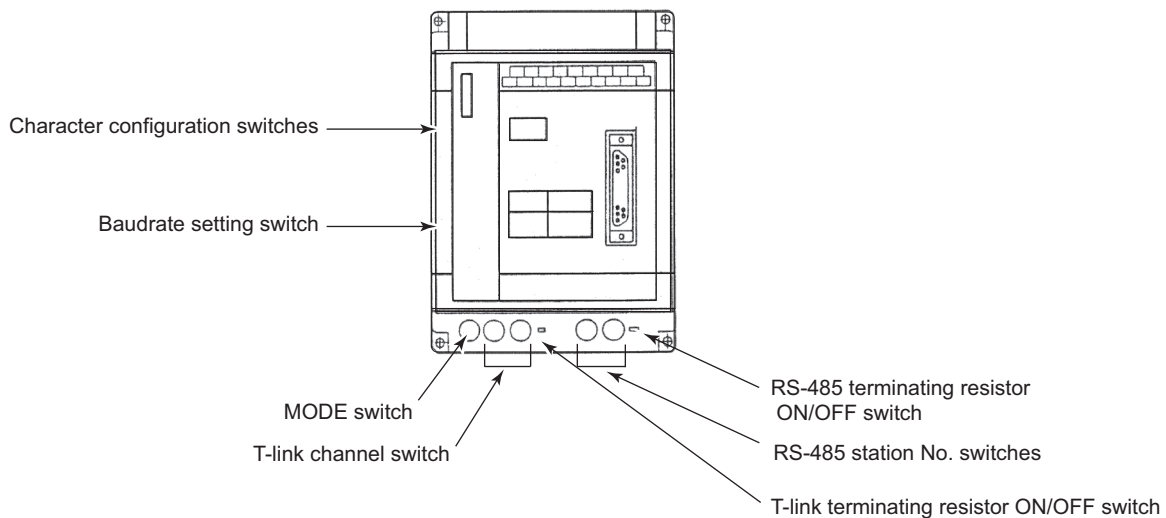
*2 Avoid duplication of the station No. with any of the other units.

*3 Turn ON the terminating switch of a general-purpose interface module which will be a terminal.

*4 Set as necessary.


2 Settings by switch

Make the communication settings using the setting switches.



- (1) Setting of MODE
Make the MODE settings using the MODE switch.

MODE	Switch positions
Command-setting-type start-stop synchronization, nonsequence format RS-232C 1:1	1
Command-setting-type start-stop synchronization, nonsequence format RS-232C 1:1, and RS-485 1:N	2
Command-setting-type start-stop synchronization, nonsequence format RS-485 1:N	3

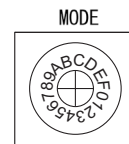

- (2) Setting of Station No.
Make the station No. using RS-485 station No. switches.

Station No.

0 to 99




- (3) Setting of Terminating resistor
Turn ON/OFF the terminating resistor using RS-485 terminating resistor ON/OFF switch.




- (4) Setting of Stop bit, Data length, Parity bit, Initializing method
Make the settings using the character configuration switches.

Setting item	Set value	Switch No.							
		1	2	3	4	5	6	7	8
	disable	OFF	OFF	OFF					
Stop bit	1 bit				ON				
	2 bits				OFF				
Data length	7 bits					ON			
	8 bits					OFF			
Parity bit	Even						ON		
	Odd						OFF		
	Done							ON	
	Non							OFF	
Initializing method	By switch								ON

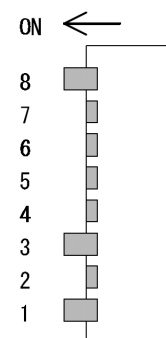

(5) Setting of Transmission speed


Setting item	Set value	Switch position							
		1	2	3	4	5	6	7	8
Transmission speed	9600bps	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
	19200bps	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF



17.4.5 Station NO. settings

Set each station number so that no station number overlaps.

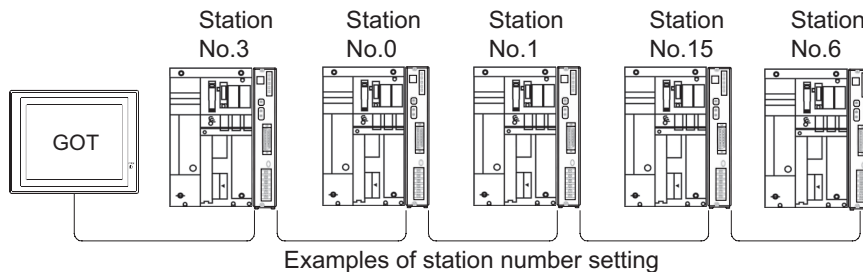The station number can be set without regard to the cable connection order. There is no problem even if station numbers are not consecutive.



(1) Direct specification

Specify the station No. of the PLC to be changed when setting device.

Specification range
0 to 99

17.5 Precautions

17.5.1 Station No. settings of the PLC side

In the system configuration, the PLC with the station number set with the host address must be included. For details of host address setting, refer to the following.

 Section 17.3.3 Setting communication interface (Communication settings)

17.5.2 GOT clock function

The GOT clock function is available only for the PLC with the station number set with the host address. For details of host address setting, refer to the following.

 Section 17.3.3 Setting communication interface (Communication settings)

17.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Connection to FUJI FA PLC	Supporting the FUJI FA PLC connection	2.43V	Communication driver FUJI MICREX-F [03.01.**]

CONNECTION TO MATSUSHITA PLC



18.1 System Configuration page 18-2

This section describes the equipment and cables needed when connecting a GOT to a MATSUSHITA PLC. Select a system suitable for your application.

18.2 Connection Cable page 18-22

This section describes the specifications of the cables needed when connecting to a GOT to a MATSUSHITA PLC. Check the specifications of the connection cables.

18.3 Preparatory Procedures for Monitoring page 18-27

This section provides the procedures to be followed before performing monitoring in connection to a MATSUSHITA PLC.

The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

18.4 PLC Side Setting page 18-39

The PLC side settings for GOT connection are explained. When checking the PLC side settings, refer to this section.

18.5 List of Functions Added by Version Upgrade page 18-41

This section describes the functions added by version upgrade of GT Designer2 or OS.

18.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.

18.1.1 Connecting to FP0-C16CT or FP0-C32CT



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	3m or less	Connect to the tool port.
	15m or less	Connect to the RS232C port.


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P

(2) Cable

Image	No.	Name	Model name
	2	RS-232 cable • Between tool port of PLC CPU and GOT	AFC8503(3m)

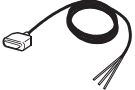Image	No.	Name	Model name
	<p>③</p>	<p>RS-232 cable 4)</p> <ul style="list-style-type: none"> • Between RS232C port of PLC CPU and GOT 	<p>GT09-C30R20904-3C(3m)</p>

*1 The RS-232 cable can be prepared by the user. (☞ Section 18.2 Connection Cable)

② is a product manufactured by Matsushita Electric works, Ltd. For details of this product, contact Matsushita Electric works, Ltd.

18.1.2 Connecting to FP1-C24C or FP1-C40C



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	15.5m or less	<p>Connect to the tool port.</p> <p>MAX15.5m</p>
	15m or less	<p>Connect to the RS232C port.</p> <p>MAX15m</p>

2 System equipment

(1) GOT


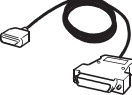


Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P

(2) PLC

Image	No.	Name	Model name
	2	RS422/232C conversion adapter	AFP8550

[2] is a product manufactured by Matsushita Electric works, Ltd. For details of this product, contact Matsushita Electric works, Ltd.

(3) Cable

Image	No.	Name	Model name
	3	FP peripheral device connection cable • Between tool port of PLC CPU and RS422/232C conversion adapter	AFP15205(0.5m)
	4	RS-232 cable 1) • Between RS422/232C conversion adapter and GOT	(To be prepared by the user.  Section 18.2 Connection Cable)
	5	RS-232 cable 3) • Between RS232C port of PLC CPU and GOT	

3 is a product manufactured by Matsushita Electric works, Ltd. For details of this product, contact Matsushita Electric works, Ltd.

18.1.3 Connecting to FP2 or FP2SH







1 System configuration and connection conditions


Connection conditions		System configuration
Number of GOTs	Distance	
1	3m or less	<p>Connect to the tool port.</p> <p>3 RS-232 cable</p> <p>MAX3m</p>
	15m or less	<p>Connect to the RS232C port.</p> <p>4 RS-232 cable 2)</p> <p>MAX15m</p>
		<p>2 Computer communication unit</p> <p>4 RS-232 cable 2)</p> <p>MAX15m</p>

2 System equipment

(1) GOT


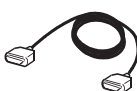
Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 

(2) PLC

Image	No.	Name	Model name
	2	Computer communication unit	AFP2462

2 is a product manufactured by Matsushita Electric works, Ltd. For details of this product, contact Matsushita Electric works, Ltd.

(3) Cable

Image	No.	Name	Model name
	3	RS-232 cable • Between tool port of PLC CPU and GOT	AFC8503(3m)
	4	RS-232 cable 2*1 • Between RS232C port of PLC CPU and GOT • Between computer communication unit and GOT	AFB85853(3m) GT09-C30R20902-9P(3m)

*1 The RS-232 cable can be prepared by the user. (☞ Section 18.2 Connection Cable)

3 and 4 are products manufactured by Matsushita Electric works, Ltd. For details of these products, contact Matsushita Electric works, Ltd.

18.1.4 Connecting to FP3





1 System configuration and connection conditions



Connection conditions		System configuration
Number of GOTs	Distance	
1	15.5m or less	<p>Connect to the tool port.</p> <p>4 FP peripheral device connection cable</p> <p>2 RS422/232C conversion adapter</p> <p>5 RS-232 cable 1)</p> <p>MAX15.5m</p>
	15m or less	<p>3 Computer communication unit</p> <p>6 RS-232 cable 2)</p> <p>MAX15m</p>

2 System equipment

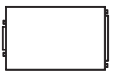(1) GOT

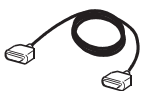
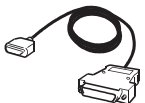

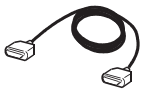
Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P


(2) PLC

Image	No.	Name	Model name
	2	RS422/232C conversion adapter	AFP8550
	3	computer communication unit	AFP3462

2 and 3 are products manufactured by Matsushita Electric works, Ltd. For details of these products, contact Matsushita Electric works, Ltd.

(3) Cable

Image	No.	Name	Model name
	4	FP peripheral device connection cable • Between tool port of PLC CPU and RS422/232C conversion adapter	AFP5520(0.5m)
	5	RS-232 cable 1) • Between RS422/232C conversion adapter and GOT	(To be prepared by the user.  Section 18.2 Connection Cable)
	6	RS-232 cable 2)*1 • Between computer communication unit and GOT	AFB85853(3m) GT09-C30R20902-9P(3m)

*1 The RS-232 cable can be prepared by the user. ( Section 18.2 Connection Cable)

4 and 6 are products manufactured by Matsushita Electric works, Ltd. For details of these products, contact Matsushita Electric works, Ltd.

18.1.5 Connecting to FP5







1 System configuration and connection conditions



Connection conditions		System configuration
Number of GOTs	Distance	
1	15.5m or less	<p>Connect to the tool port. 4 FP peripheral device connection cable 2 RS422/232C conversion adapter 5 RS-232 cable 1)</p> <p>MAX15.5m</p>
	15m or less	<p>3 Computer communication unit 6 RS-232 cable 2)</p> <p>MAX15m</p>

2 System equipment

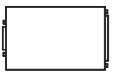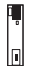(1) GOT

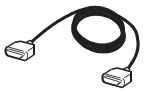
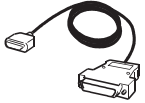

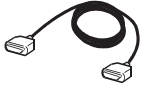
Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 


(2) PLC

Image	No.	Name	Model name
	2	RS422/232C conversion adapter	AFP8550
	3	computer communication unit	AFP5462

2 and 3 are products manufactured by Matsushita Electric works, Ltd. For details of these products, contact Matsushita Electric works, Ltd.

(3) Cable

Image	No.	Name	Model name
	4	FP peripheral device connection cable • Between tool port of PLC CPU and RS422/232C conversion adapter	AFP5520(0.5m)
	5	RS-232 cable 1) • Between RS422/232C conversion adapter and GOT	(To be prepared by the user.  Section 18.2 Connection Cable)
	6	RS-232 cable 2) ^{*1} • Between computer communication unit and GOT	AFB85853(3m) GT09-C30R20902-9P(3m)

*1 The RS-232 cable can be prepared by the user. ( Section 18.2 Connection Cable)

4 and 6 are products manufactured by Matsushita Electric works, Ltd. For details of these products, contact Matsushita Electric works, Ltd.

18.1.6 Connecting to FP10 (S)







1 System configuration and connection conditions



Connection conditions		System configuration
Number of GOTs	Distance	
1	15.5m or less	<p>Connect to the tool port.</p> <p>4 FP peripheral device connection cable</p> <p>2 RS422/232C conversion adapter</p> <p>5 RS-232 cable 1)</p> <p>MAX15.5m</p>
	15m or less	<p>Connect to the RS232C port.</p> <p>6 RS-232 cable 2)</p> <p>MAX15m</p>
	15m or less	<p>3 Computer communication unit</p> <p>6 RS-232 cable 2)</p> <p>MAX15m</p>

2 System equipment

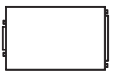(1) GOT

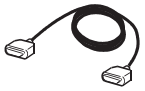
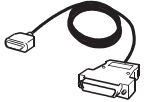

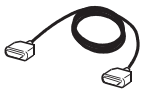
Image	No.	Name	Model name
	[1]	RS-232 interface • For RS-232 communication	— (Built into GOT) 
	[1]	RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 


(2) PLC

Image	No.	Name	Model name
	[2]	RS422/232C conversion adapter	AFP8550
	[3]	Computer communication unit	AFP3462

[2] and [3] are products manufactured by Matsushita Electric works, Ltd. For details of these products, contact Matsushita Electric works, Ltd.

(3) Cable

Image	No.	Name	Model name
	[4]	FP peripheral device connection cable • Between tool port of PLC CPU and RS422/232C conversion adapter	AFP5520(0.5m)
	[5]	RS-232 cable 1) • Between RS422/232C conversion adapter and GOT	(To be prepared by the user.  Section 18.2 Connection Cable)
	[6]	RS-232 cable 2) ^{*1} • Between RS232C port of PLC CPU and GOT • Between computer communication unit and GOT	AFB85853(3m) GT09-C30R20902-9P(3m)

*1 The RS-232 cable can be prepared by the user. ( Section 18.2 Connection Cable)

[4] and [6] are products manufactured by Matsushita Electric works, Ltd. For details of these products, contact Matsushita Electric works, Ltd.

18.1.7 Connecting to FP10SH



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	15m or less	Connect to the tool port or RS232C port.

2 System equipment

(1) GOT


Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P

(2) PLC

Image	No.	Name	Model name
	2	Computer communication unit	AFP3462

2 is a product manufactured by Matsushita Electric works, Ltd. For details of this product, contact Matsushita Electric works, Ltd.

(3) Cable

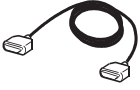Image	No.	Name	Model name
	③	RS-232 cable 2)*1 • Between tool port of PLC CPU and GOT • Between RS232C port of PLC CPU and GOT • Between computer communication unit and GOT	AFB85853(3m) GT09-C30R20902-9P(3m)

*1 The RS-232 cable can be prepared by the user. (☞ Section 18.2 Connection Cable)

③ is a product manufactured by Matsushita Electric works, Ltd. For details of this product, contact Matsushita Electric works, Ltd.

18.1.8 Connecting to FP-M (C20TC) or FP-M (C32TC)



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	3m or less	Connect to the tool port.
	15m or less	Connect to the RS232C port.

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P


(2) Cable

Image	No.	Name	Model name
	2	RS-232 cable • Between tool port of PLC CPU and GOT	AFC8503(3m)
	3	RS-232 cable 2)*1 • Between RS232C port of PLC CPU and GOT	AFB85853(3m) GT09-C30R20902-9P(3m)

*1 The RS-232 cable can be prepared by the user. (☞ Section 18.2 Connection Cable)

2 and 3 are products manufactured by Matsushita Electric works, Ltd. For details of these products, contact Matsushita Electric works, Ltd.

18.1.9 Connecting to FP SIGMA



1 System configuration and connection condition



Connection conditions		System configuration
Number of GOTs	Distance	
1	3m or less	<p>Connect to the Tool port</p>
1	15m or less	
1	15m or less	

2 System Equipment

(1) GOT






Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P

(2) PLC

Image	No.	Name	Model name
	[2]	COM port	AFIG801
	[3]	COM port	AFIG802


[2], [3] are products manufactured by Matsushita Electric works, Ltd. For details of these product, contact Matsushita Electric work, Ltd.

(3) Cable

Image	No.	Name	Model name
	[4]	RS-232 cable Between tool port of PLC CPU and GOT	AFC8503(3m)
	[5]	RS-232 cable 5) Between COM port of PLC CPU and GOT	(Prepared by the user.  Section 18.2 Connection Cable)
	[6]	RS-232 cable 6) Between COM port of PLC CPU and GOT	(Prepared by the user.  Section 18.2 Connection Cable)

[4] is a product manufactured by Matsushita Electric works, Ltd. For details of this product, contact Matsushita Electric works, Ltd.

18.1.10 Connecting to FP-X



1 System configuration and connection condition






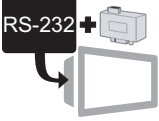





Connection conditions		System configuration
Number of GOTs	Distance	
1	3m or less	<p>Connect to the Tool port</p> <p>4 RS-232 cable MAX3m</p>
1	15m or less	<p>3 Communication cassette 1) (AFPX-COM2)</p> <p>5 RS-232 cable 5) MAX15m</p>
		<p>3 Communication cassette 2)* (AFPX-COM2)</p> <p>6 RS-232 cable 6) MAX15m</p>
		<p>3 Communication cassette 3)* (AFPX-COM4)</p> <p>7 RS-232 cable 7) MAX15m</p>
1	1200m or less	<p>3 Communication cassette 4)* (AFPX-COM3)</p> <p>8 RS-232 cable 1) MAX1200m</p>

* To connect C30 and C60, USB port may set at the COM2 port on the communication cassette 2) (AFPX-COM2), and 3) (AFPX-COM4). In this case, set the COM2 port to RS232C.

17 CONNECTION TO FUJIFXA PLC
18 CONNECTION TO MATSUSHITA PLC
19 CONNECTION TO YASKAWA PLC
20 CONNECTION TO YOKOGAWA PLC
21 CONNECTION TO ALLEN-BRADLEY PLC
22 CONNECTION TO SIEMENS PLC
23 MICROCOMPUTER CONNECTION
24 CONNECTION TO OMRON TEMPERATURE CONTROLLER


2 System Equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)  
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 




*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	3	Communication cassette 1)	AFPX-COM1 (RS232C one channel type)
		Communication cassette 2)	AFPX-COM2 (RS232C two channel type)
		Communication cassette 3)	AFPX-COM4 (RS485 one channel and RS232C one channel mixed type)
		Communication cassette 4)	AFPX-COM3 (RS485/RS422 one channel type)

, 3 are manufactured by Matsushita Electric works, Ltd. For details of these product, contact Matsushita Electric work, Ltd.

(3) Cable

Image	No.	Name	Model name
	4	RS-232 cable Between tool port of PLC CPU and GOT	AFC8503(3m)
	5	RS-232 cable 5) • Between Communication cassette and GOT	(Prepared by the user.  Section 18.2 Connection Cable)
	6	RS-232 cable 6) • Between Communication cassette and GOT	
	7	RS-232 cable 7) • Between Communication cassette and GOT	
	8	RS-232 cable 1) • Between Communication cassette and GOT	

4 are products manufactured by Matsushita Electric works, Ltd. For details of these product, contact Matsushita Electric work, Ltd.

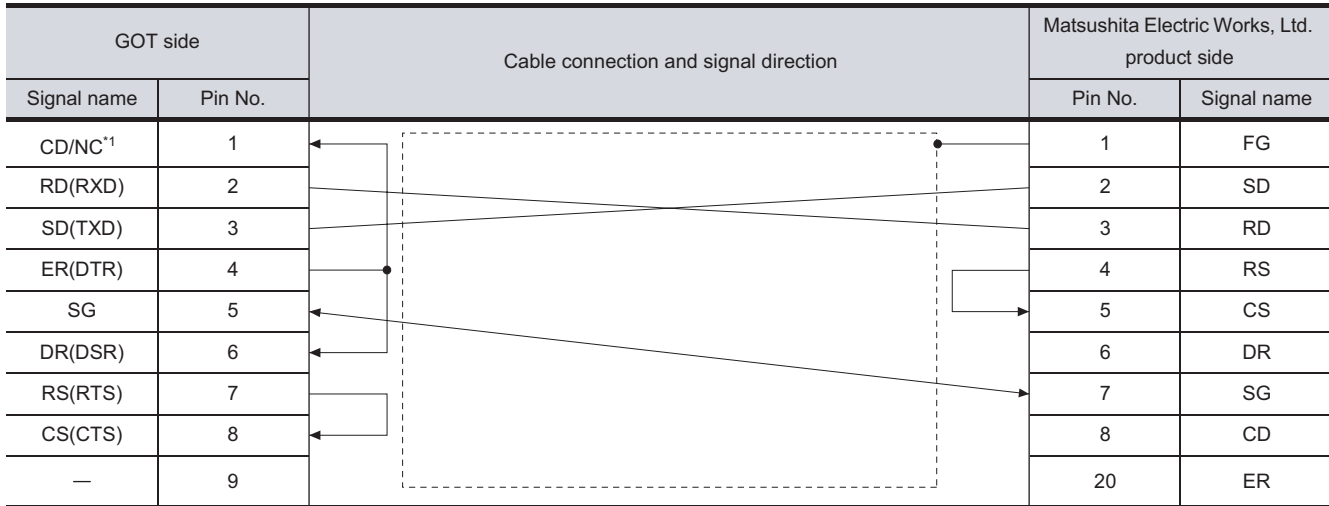
18.2 Connection Cable

18.2.1 RS-232 Cable

The RS-232 cable used for connection between the GOT and PLC needs to be prepared by the user. The following shows each cable connection diagram and relevant connectors.


1 Connection diagram

(1) RS-232 cable 1) (between RS422/232C conversion adapter and GOT)



*1 GT15 : CD, GT11: NC

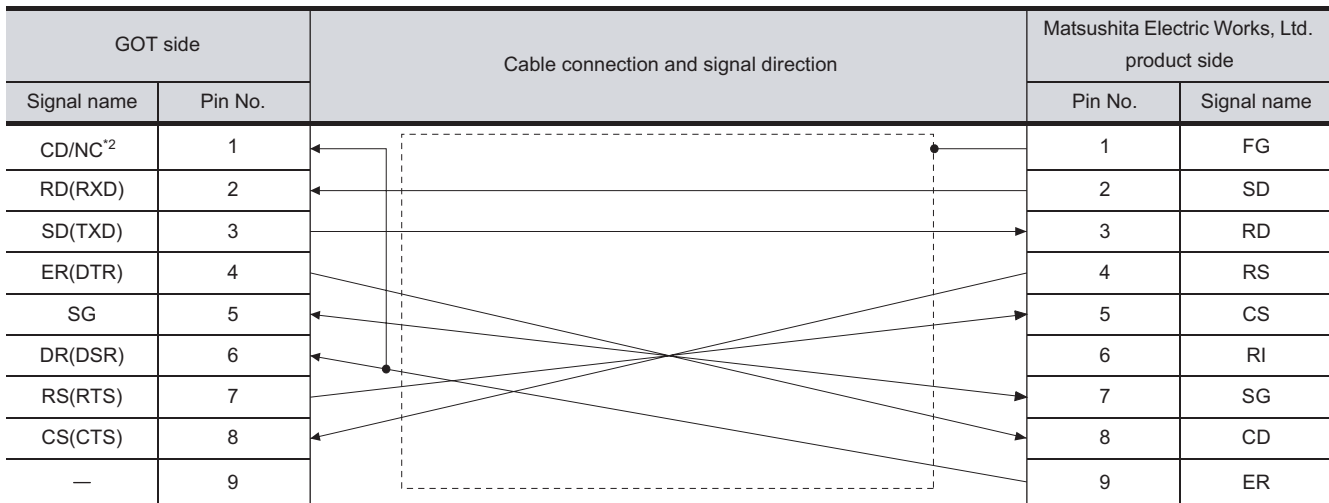(2) RS-232 cable 2) (between tool port and GOT (for FP10SH), between RS232C port and GOT and between computer communication unit and GOT)



*2 GT15 : CD, GT11: NC

(3) RS-232 cable 3 (between RS232C port and GOT (for FP1))

GOT side		Cable connection and signal direction	Matsushita Electric Works, Ltd. product side	
Signal name	Pin No.		Pin No.	Signal name
CD/NC ^{*1}	1		1	FG
RD(RXD)	2		2	SD
SD(TXD)	3		3	RD
ER(DTR)	4		4	RS
SG	5		5	CS
DR(DSR)	6		6	—
RS(RTS)	7		7	SG
CS(CTS)	8		8	—
—	9		9	—

*1 GT15 : CD, GT11: NC

(4) RS-232 cable 4 (between RS232C port and GOT (for FP0))

GOT side		Cable connection and signal direction	Matsushita Electric Works, Ltd. product side	
Signal name	Pin No.		Pin No.	Signal name
CD/NC ^{*2}	1		S	SD
RD(RXD)	2		R	RD
SD(TXD)	3		G	SG
ER(DTR)	4			
SG	5			
DR(DSR)	6			
RS(RTS)	7			
CS(CTS)	8			
—	9			

*2 GT15 : CD, GT11: NC

(5) RS-232 cable 5) (between COM port of PLC CPU and GOT)

GOT side		Cable connection and signal direction	Matsushita Electric Works, Ltd. product side
Signal name	Pin No.		Pin name
CD	1		SD
RD(RXD)	2		RD
SD(TXD)	3		RS
ER(DTR)	4		CS
SG	5		SG
DR(DSR)	6		
RS(RTS)	7		
CS(CTS)	8		
—	9		

(6) RS-232 cable 6) (between COM port of PLC CPU and GOT)

GOT side		Cable connection and signal direction	Matsushita Electric Works, Ltd. product side
Signal name	Pin No.		Pin name
CD	1		S1
RD(RXD)	2		R1
SD(TXD)	3		S2
ER(DTR)	4		R2
SG	5		SG
DR(DSR)	6		
RS(RTS)	7		
CS(CTS)	8		
—	9		

*1 PLC CPU has two serial ports.

S1 and R1, S2 and R2 constitute the serial port, respectively. Use one of the serial ports.

(7) RS-232 cable 7) (between Communication cassette and GOT)


GOT side		Cable connection and signal direction	Matsushita Electric Works, Ltd. product side
Signal name	Pin No.		Pin name
CD	1		+
RD(RXD)	2		-
SD(TXD)	3		SD
ER(DTR)	4		RD
SG	5		SG
DR(DSR)	6		
RS(RTS)	7		
CS(CTS)	8		
—	9		

18.2.2 RS-422 Cable

The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a PLC.

1 Connection diagram

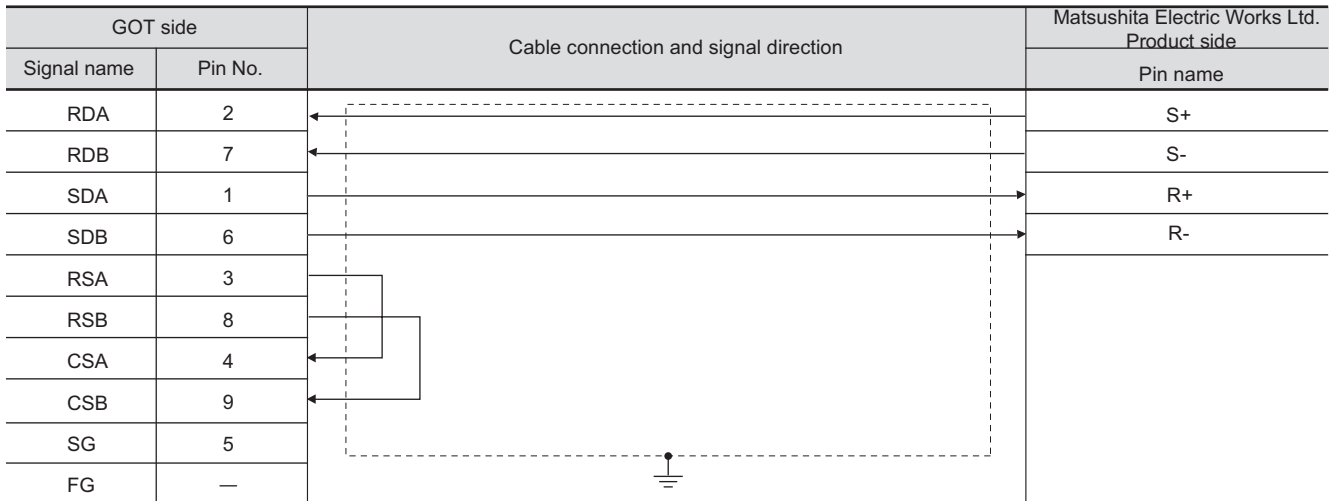(1) RS-422 cable 1) (between Communication cassette and GOT)



2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

3 Precautions when preparing a cable

The length of the RS-422 cable must be 1200m or less.

4 Connecting terminating resistors


(1) GOT

Set the terminating resistor of RS-422/485 communication unit using the terminating resistor setting switch.

Terminating resistor*1	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF




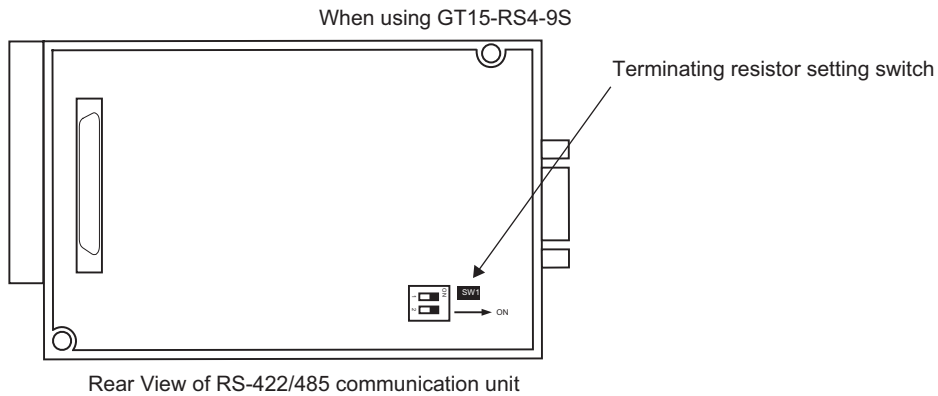*1 The default setting is "Enable".



18.3 Preparatory Procedures for Monitoring

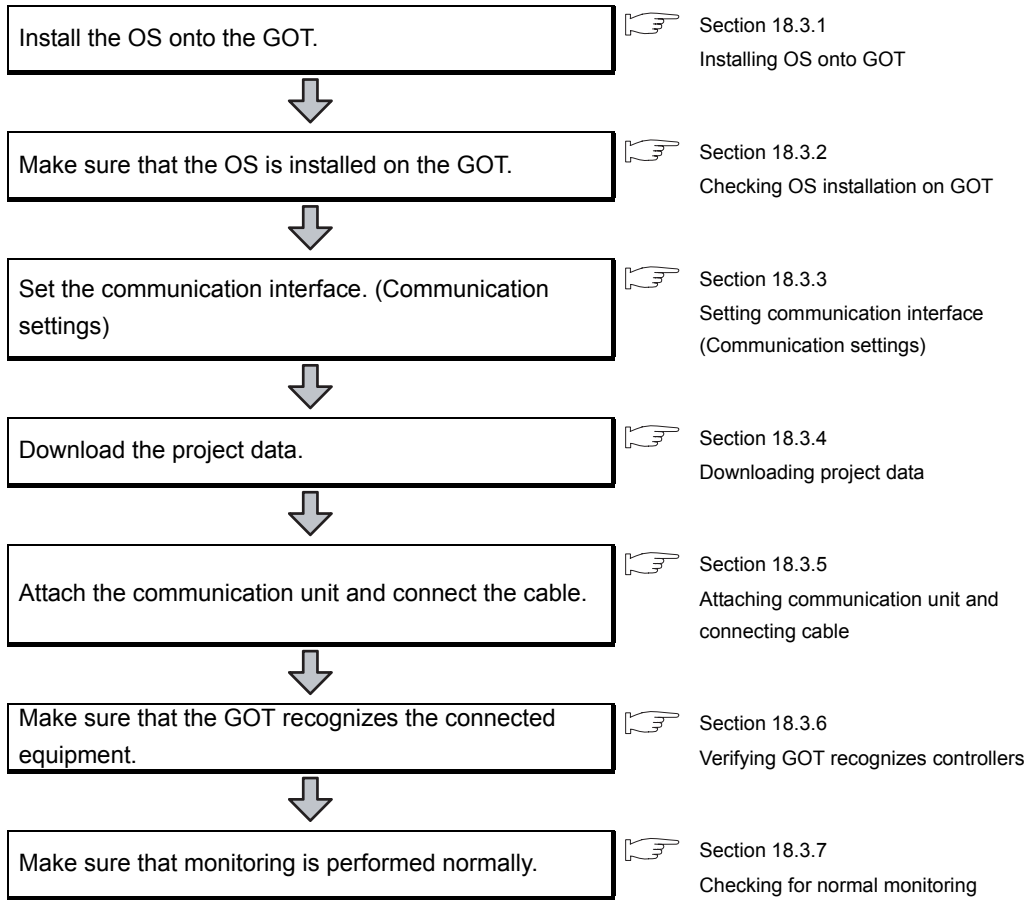The following shows the procedures to be taken before monitoring and corresponding reference sections.




Confirming the PLC side setting


This section explains the GOT side setting.
When confirming the PLC side setting, refer to the following.

Section 18.4 PLC Side Setting

18.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

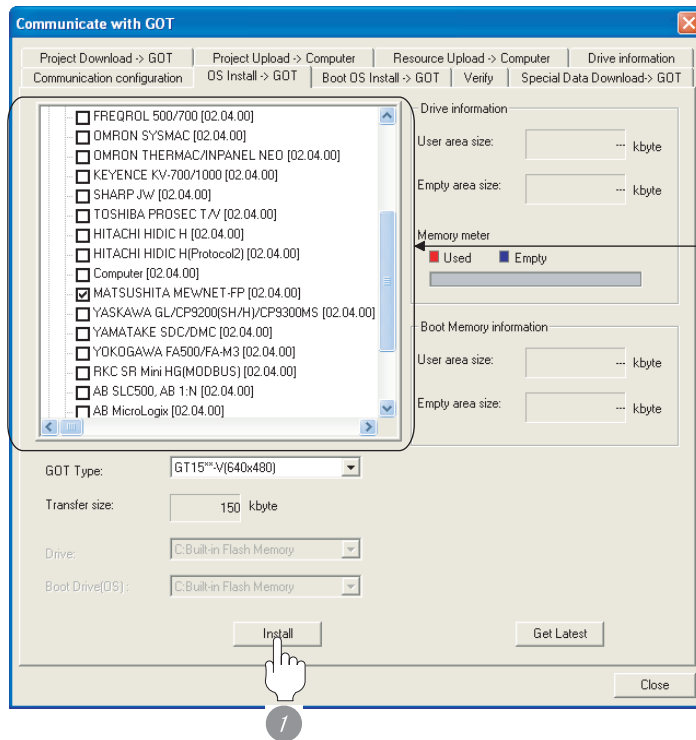 GT Designer2 Version □ Basic Operation/Data Transfer Manual




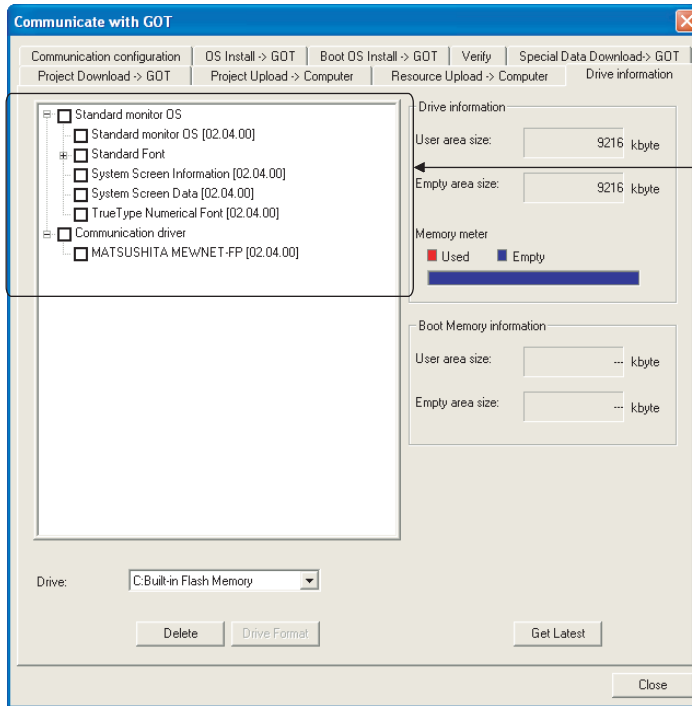
Check the following under the communication driver.
• MATSUSHITA MEWNET-FP

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

18.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

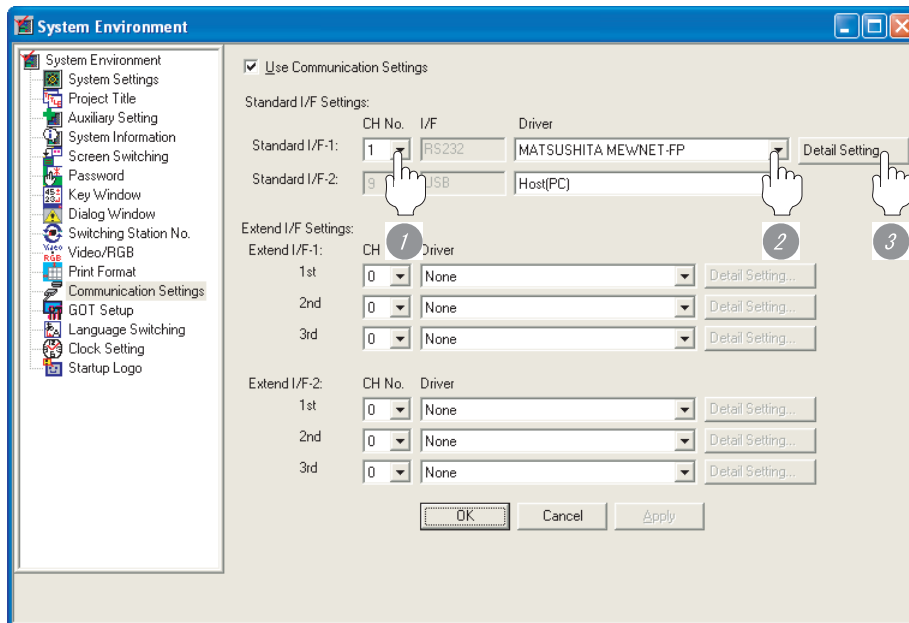
- 1) Standard monitor OS
- 2) Communication driver: MATSUSHITA MEWNET-FP


18.3.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2.
Select the same communication driver as the one installed on the GOT for each communication interface.
For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set "1" to the channel No. used.
- 2 Set the driver to "MATSUSHITA MEWNET-FP".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 time>	0 to 5 times
Host Address	Specify the host address (station No. of the PLC to which the GOT is connected) in the network of the GOT. <Default: 1>	1 to 31


Point

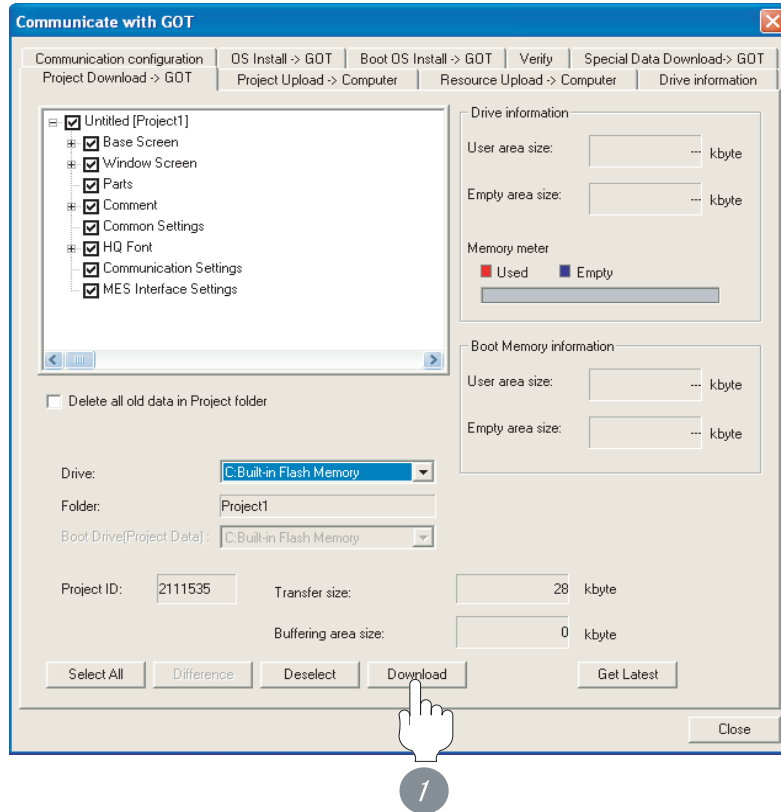
- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
For details on the Utility, refer to the following manual.
 GT □ User's Manual
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

18.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


18.3.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

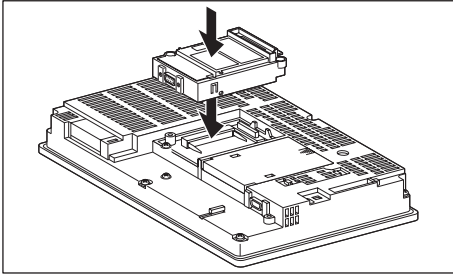1 Attaching the communication unit



- 1 Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

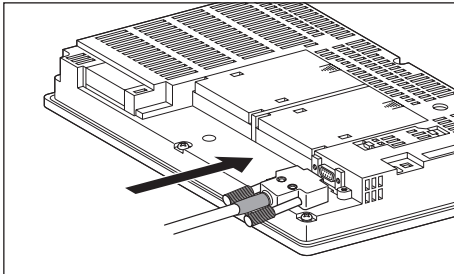
- ☞ GT15 Serial Communication Unit User's Manual
GT15-RS2, GT15-RS4, GT15-RS4-TE

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

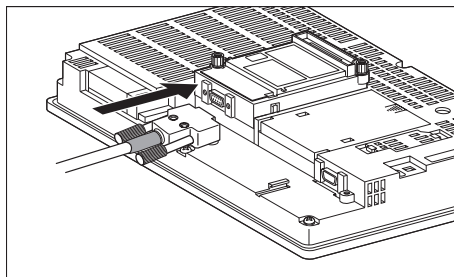- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

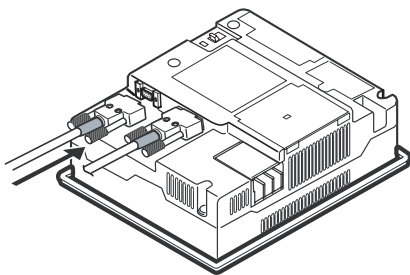(b) For the GT11



- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

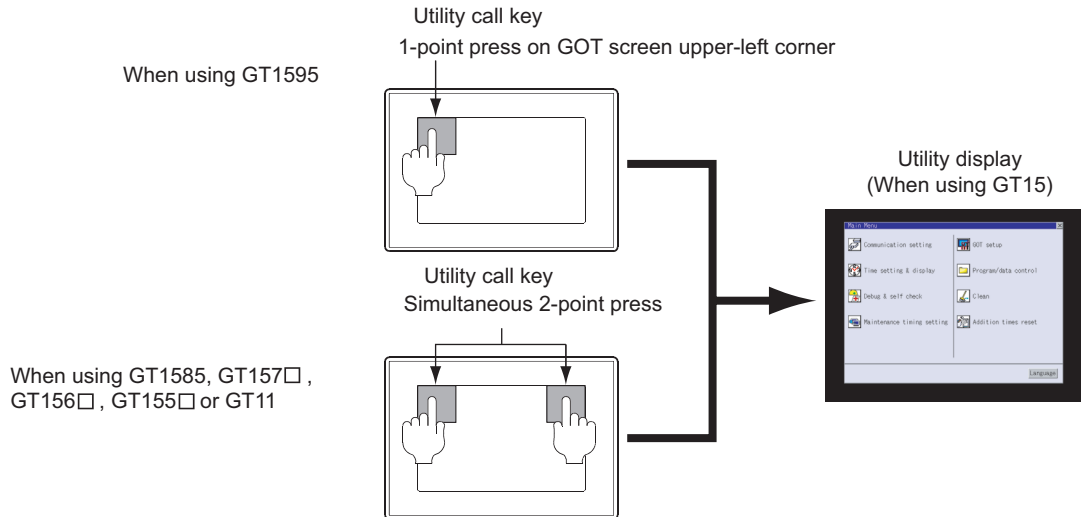
18.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point

When setting the utility call key to 1-point


When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.

For the setting of the utility call key, refer to the following.

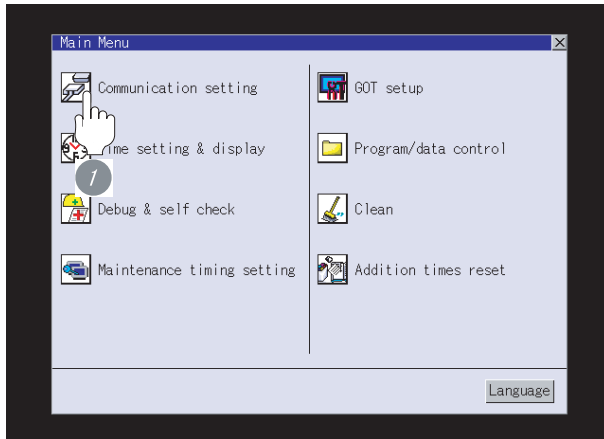☞ GT□ User's Manual



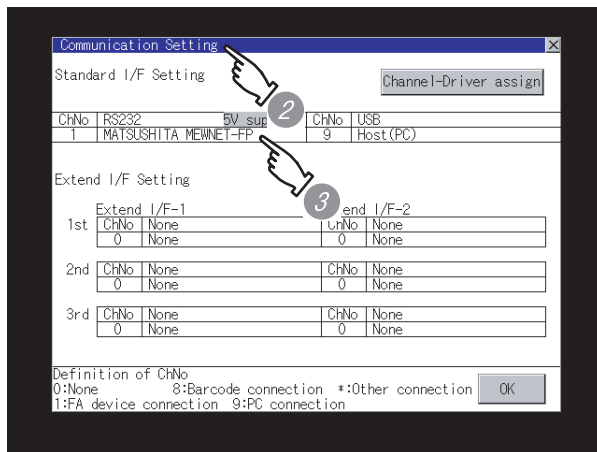- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver: MATSUSHITA MEWNET-FP
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 18.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

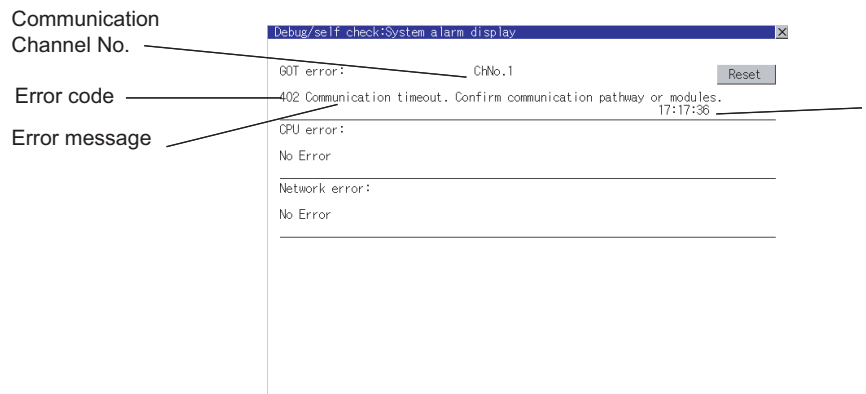
18.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)




Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

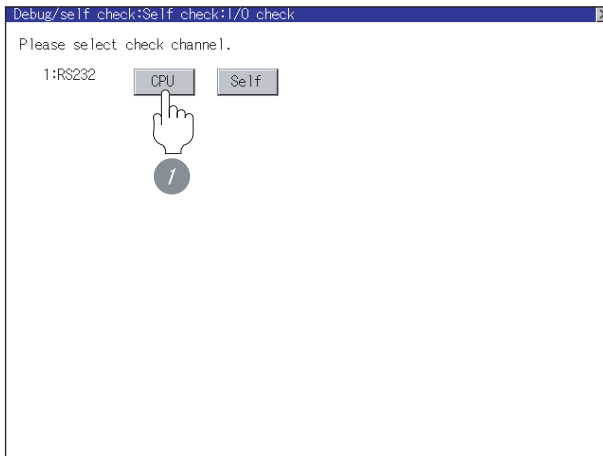


2 Perform an I/O check


Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check]. For details on the I/O check, refer to the following manual:

 GT □ User's Manual



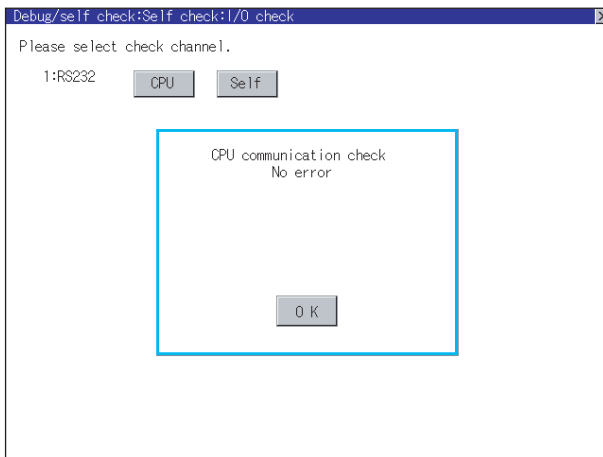
- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side. Confirm if the PLC side setting is correct.

 Section 18.4 PLC Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

18.4 PLC Side Setting



MATSUSHITA PLC

For details of the MATSUSHITA PLC, refer to the following manual.

User's Manual for the MATSUSHITA PLC.

1 Connecting to the tool port of the PLC CPU

Item	Setting
Transmission speed ^{*1*2*3}	4800bps, 9600bps, 19200bps, 38400bps, 115200bps
Data length	7bit, 8bit
Stop bit	1bit
Parity bit	Odd
Modem connection	No
Module No.	1

*1 Indicates only the transmission speeds that can be set on the GOT side.

*2 Set the same transmission speed of the GOT.

For the transmission speed setting of the GOT, refer to the following.

Section 18.3.3 Setting communication interface (Communication settings)

*3 The setting range varies with the connected PLC.

2 Connecting to the RS232C and COM port of the PLC CPU

Item	Setting
Transmission speed ^{*4*5*6}	4800bps, 9600bps, 19200bps, 38400bps, 115200bps
Data length	7bit, 8bit
Stop bit	1bit
Parity bit	Odd
Modem connection	No
Serial port action selection ^{*7}	1 (Computer link)
Module No.	1

*4 Indicates only the transmission speeds that can be set on the GOT side.

*5 Set the same transmission speed of the GOT.

For the transmission speed setting of the GOT, refer to the following.

Section 18.3.3 Setting communication interface (Communication settings)

*6 The setting range varies with the connected PLC.

*7 Set when connecting to FP0, FP1, FP2 or FP-M.

3 Connecting to the computer communication unit

Item	Setting
Transmission speed ^{*1*2*3}	4800bps, 9600bps, 19200bps
Data length	7bit, 8bit
Stop bit	1bit
Parity bit	Odd
Parity check	Yes
Control signal	Invalidate CS, CD

*1 Indicates only the transmission speeds that can be set on the GOT side.

*2 Set the same transmission speed of the GOT.
For the transmission speed setting of the GOT, refer to the following.

 Section 18.3.3 Setting communication interface (Communication settings)

*3 The setting range varies with the connected PLC.

4 Connecting to the communication cassette

(1) Communication setting

Set the communication settings for the COM 1 port and COM2 port to connect GOT.

Item	Setting
Communication mode	Computer link
Transmission speed ^{*4*5}	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Modem Enable	Disable
Data length	7bit, 8bit
Stop bit	1bit
Parity check	Odd
Unit No.	1
Port selection ^{*6}	Communication cassette

*4 Indicates only the transmission speeds that can be set on the GOT side.

*5 Set the same transmission speed of the GOT.
For the transmission speed setting of the GOT, refer to the following.

 Section 18.3.3 Setting communication interface (Communication settings)

*6 Set the COM2 port only.

(2) Switch setting on the Communication cassette(AFPX-COM3)

Set the switch on the back.

Switch No.	Setting	Description
1	OFF	RS422
2	OFF	
3	OFF	
4	OFF	Terminating resistor OFF



18.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
 For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
MATSUSHITA PLC connection	Supporting the MATSUSHITA PLC connection	2.09K	Communication driver MATSUSHITA MEWNT-FP [01.02.**]
MATSUSHITA PLC connection	Supporting the MATSUSHITA PLC FPSIGMA connection	2.18U	Communication driver MATSUSHITA MEWNT-FP [02.00.**]
MATSUSHITA PLC connection	Supporting the MATSUSHITA PLC FP-X connection	2.58L	Communication driver MATSUSHITA MEWNT-FP [03.03.**]

CONNECTION TO YASKAWA PLC



19.1 Serial Connection page 19-2

This section describes the equipment and cables needed when connecting a GOT to a YASKAWA PLC.

Select a system suitable for your application.



19.2 Ethernet Connection page 19-37

This section describes the equipment and cables needed for Ethernet connection.



19.3 List of Functions Added by Version Upgrade page 19-60

19.1 Serial Connection



Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.

19.1.1 System configuration (GL120 or GL130)

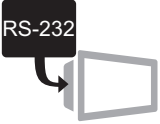



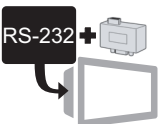







1 System configuration and connection conditions

Connection conditions		System configuration
No. of GOTs	Distance	
1	Differs according to PLC side specifications.	


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 


*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	3	MEMOBUS module	JAMSC-120NOM27100

3 is a product manufactured by YASKAWA Electric Corporation. For details of this product, contact YASKAWA Electric Corporation.

(3) Cable

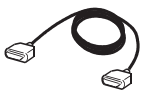Image	No.	Name	Model name
	4	RS-232 cable 1)*1 • Between CPU and GOT	GT09-C30R20201-9P(3m)
	5	RS-422 cable 1)*1 • Between MEMOBUS module and GOT	GT09-C30R40201-9P(3m) GT09-C100R40201-9P(10m) GT09-C200R40201-9P(20m) GT09-C300R40201-9P(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. (☞ Section 19.1.7 Connection Cable)

19.1.2 System configuration(GL60S, GL60H or GL70H)

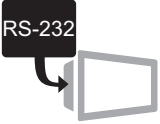



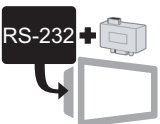

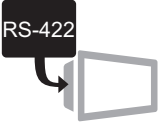





1 System configuration and connection conditions

Connection conditions		System configuration
No. of GOTs	Distance	
1	Differs according to PLC side specifications.	<p>3 MEMOBUS module</p> <p>5 RS-232 cable 1)</p> <p>1</p>
		<p>4 MEMOBUS module</p> <p>6 RS-422 cable 1)</p> <p>2</p>


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 


*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	3	MEMOBUS module	JAMSC-IF60, JAMSC-IF61
	4		JAMSC-IF612

3 and 4 are products manufactured by YASKAWA Electric Corporation. For details of these products, contact YASKAWA Electric Corporation.

(3) Cable

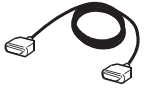Image	No.	Name	Model name
	5	RS-232 cable 1)*1 • Between MEMOBUS module and GOT	GT09-C30R20201-9P(3m)
	6	RS-422 cable 1)*1 • Between MEMOBUS module and GOT	GT09-C30R40201-9P(3m) GT09-C100R40201-9P(10m) GT09-C200R40201-9P(20m) GT09-C300R40201-9P(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. (☞ Section 19.1.7 Connection Cable)

17 CONNECTION TO FUJIF A PLC
18 CONNECTION TO MATSUSHITA PLC
19 CONNECTION TO YASKAWA PLC
20 CONNECTION TO YOKOGAWA PLC
21 CONNECTION TO ALLEN-BRADLEY PLC
22 CONNECTION TO SIEMENS PLC
23 MICROCOMPUTER CONNECTION
24 CONNECTION TO OMRON TEMPERATURE CONTROLLER

19.1.3 System configuration(MP-920/930, CP-9300MS/9200(H) or PROGIC-8)



1 System configuration and connection conditions

When connecting to MP-920, MP-930, CP9200(H), PROGIC-8 (port 1)

Connection conditions		System configuration
No. of GOTs	Distance	
1	Differs according to PLC side specifications.	

When connecting to PROGIC-8 (port 2)

Connection conditions		System configuration
No. of GOTs	Distance	
1	Differs according to PLC side specifications.	

When connecting to CP-9300MS (CP-9300MC compatible/non-compatible)

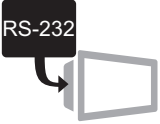



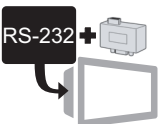

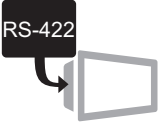



Connection conditions		System configuration
No. of GOTs	Distance	
1	Differs according to PLC side specifications.	

When connecting to MP-920 (217IF)

Connection conditions		System configuration
No. of GOTs	Distance	
1	Differs according to PLC side specifications.	


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 




*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.


(2) PLC


Image	No.	Name	Model name
	3	Communication module	2171F

3 is a product manufactured by YASKAWA Electric Corporation. For details of this product, contact YASKAWA Electric Corporation.

(3) Cable

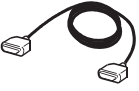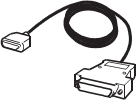Image	No.	Name	Model name
	4	RS-232 cable 1)* ¹ <ul style="list-style-type: none"> • Between CPU and GOT • Between Communication module and GOT 	GT09-C30R20201-9P(3m) ^{*2}
	5	RS-232 cable 2)* ¹ <ul style="list-style-type: none"> • Between CPU and GOT 	GT09-C30R20202-15P(3m)
	6	RS-232 cable 3)* ¹ <ul style="list-style-type: none"> • Between CPU and GOT 	GT09-C30R20203-9P(3m)
	7	RS-422 cable 2)* ¹ <ul style="list-style-type: none"> • Between Communication module and GOT 	(To be prepared by the user.  Section 19.1.7 Connection Cable)

*1 The RS-232 cable can be prepared by the user. ( Section 19.1.7 Connection Cable)

*2 When connecting the CP9200 (N), prepare the RS-232 cable. ( Section 19.1.7 Connection Cable)

19.1.4 System configuration(MP-940)



1 System configuration and connection conditions

Connection conditions		System configuration
No. of GOTs	Distance	
1	Differs according to PLC side specifications.	
	300m or less	

2 System equipment


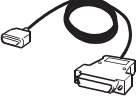
(1) GOT


Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P
		RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P
	2	RS-422 interface • For RS-422 communication	— (Built into GOT)
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2)

(3) Cable

Image	No.	Name	Model name
	3	RS-232 cable 4)* ¹ • Between CPU and GOT	GT09-C30R20204-14P(3m)
	4	RS-422 cable 3)* ¹ • Between CPU and GOT	GT09-C30R40202-14P(3m) GT09-C100R40202-14P(10m) GT09-C200R40202-14P(20m) GT09-C300R40202-14P(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( Section 19.1.7 Connection Cable)

19.1.5 System configuration(CP-9200SH)



1 System configuration and connection conditions

Connection conditions		System configuration
No. of GOTs	Distance	
1	Differs according to PLC side specifications.	<p>2 MEMOBUS module (CN1 connection) 3 RS-232 cable 3</p>
		<p>2 MEMOBUS module (CN2 connection) 4 RS-232 cable 5</p>

2 System equipment

(1) GOT


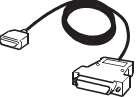
Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P


(2) PLC

Image	No.	Name	Model name
	2	MEMOBUS module	CP-217IF

2 is a product manufactured by YASKAWA Electric Corporation. For details of this product, contact YASKAWA Electric Corporation.

(3) Cable

Image	No.	Name	Model name
	3	RS-232 cable 3)* ¹ • Between MEMOBUS module (CN1 connection) and GOT	GT09-C30R20203-9P(3m)
	4	RS-232 cable 5)* ¹ • Between MEMOBUS module (CN2 connection) and GOT	GT09-C30R20205-25P(3m)

*1 The RS-232 cable can be prepared by the user. ( Section 19.1.7 Connection Cable)

19.1.6 System configuration(MP2200 or MP2300)



1 System configuration and connection conditions

When connecting to MP2200

Connection conditions		System configuration
No. of GOTs	Distance	
1	Differs according to PLC side specifications.	<p>4 Communication module 5 RS-232 cable 1) 1</p>

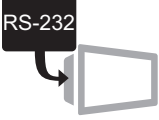



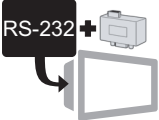

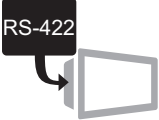



When connecting to MP2300

Connection conditions		System configuration
No. of GOTs	Distance	
1	Differs according to PLC side specifications.	<p>3 Communication module 5 RS-232 cable 1) 1</p>
		<p>3 Communication module 6 RS-422 cable 4) 2</p>

17 CONNECTION TO FUJIFXA PLC
18 CONNECTION TO MATSUSHITA PLC
19 CONNECTION TO YASKAWA PLC
20 CONNECTION TO YOKOGAWA PLC
21 CONNECTION TO ALLEN-BRADLEY PLC
22 CONNECTION TO SIEMENS PLC
23 MICROCOMPUTER CONNECTION
24 CONNECTION TO OMRON TEMPERATURE CONTROLLER


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit ^{*1} • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 




*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.


(2) PLC

Image	No.	Name	Model name
	3	Communication module	217IF-01
	4		218IF-01

3 and 4 are products manufactured by YASKAWA Electric Corporation. For details of these products, contact YASKAWA Electric Corporation.

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 1) ^{*1} • Between Communication module and GOT	GT09-C30R20201-9P(3m)
	6	RS-232 cable 4) ^{*1} • Between Communication module and GOT	(To be prepared by the user.  Section 19.1.7 Connection Cable)

*1 The RS-232 and RS-422 cable can be prepared by the user. ( Section 19.1.7 Connection Cable)

19.1.7 Connection Cable

The RS-232 cable or RS-422 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.


Model		Connection cable		
		RS-232 cable (See this section 7)	RS-422 cable (See this section 2)	
PLC CPU	GL120	RS-232 cable 1)	—	
	GL130		—	
	CP-9300MS (CP-9300MC compatible/non-compatible)	RS-232 cable 3)	—	
	CP-9200(H)	RS-232 cable 1)	—	
	PROGIC-8	Connecting to port 1	RS-232 cable 1)	—
		Connecting to port 2	RS-232 cable 2)	—
	MP-920	RS-232 cable 1)	—	
	MP-930		—	
MP-940	RS-232 cable 4)	RS-422 cable 3)		
MEMOBUS module	JAMSC-120NOM27100	—	RS-422 cable 1)	
	JAMSC-IF60	RS-232 cable 1)	—	
	JAMSC-IF61		—	
	JAMSC-IF612	—	RS-422 cable 1)	
	CP-217IF	CN1 connection	RS-232 cable 1)	—
CN2 connection		RS-232 cable 5)	—	
Communication module	217IF	RS-232 cable 1)	RS-422 cable 2)	
	217IF-01	RS-232 cable 1)	RS-422 cable 4)	
	218IF-01	RS-232 cable 1)	—	

1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.


(1) Connection diagram

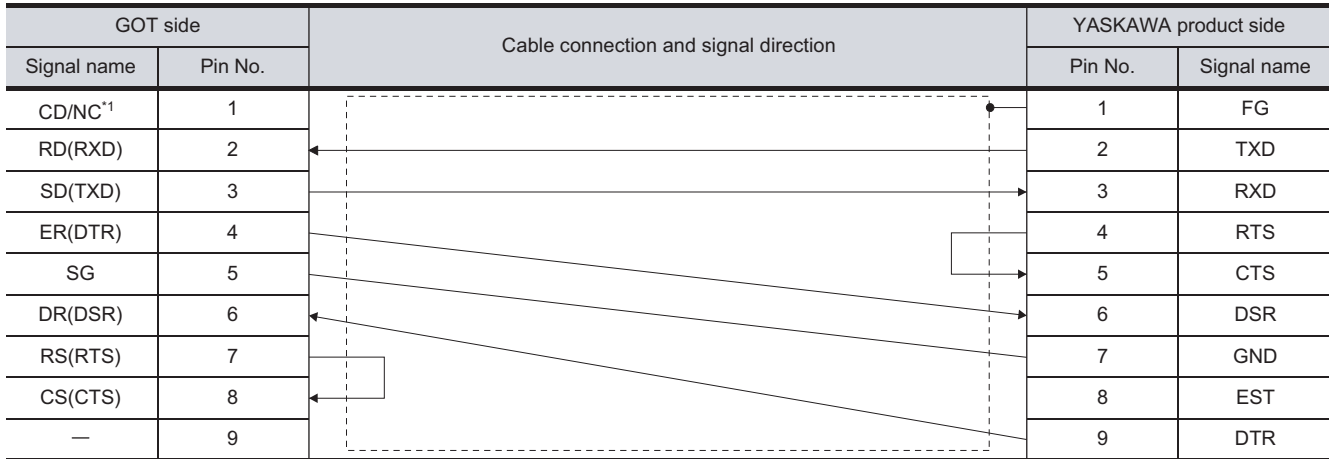(a) RS-232 cable 1)



*1 GT15 : CD, GT11: NC

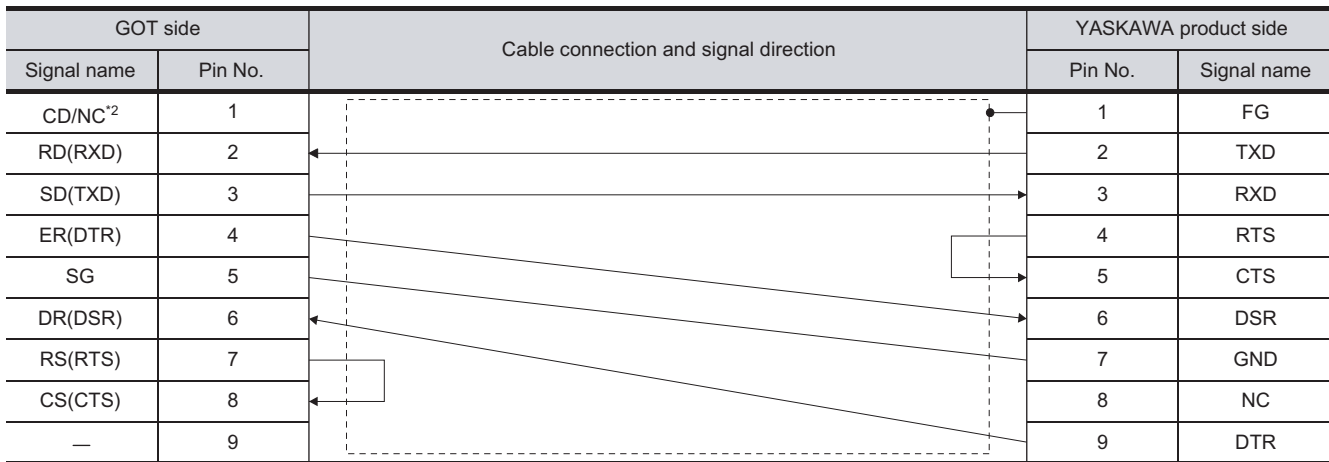(b) RS-232 cable 2)



*2 GT15 : CD, GT11: NC

(c) RS-232 cable 3)

GOT side		Cable connection and signal direction	YASKAWA product side	
Signal name	Pin No.		Pin No.	Signal name
CD/NC ¹	1		1	FG
RD(RXD)	2		2	TXD
SD(TXD)	3		3	RXD
ER(DTR)	4		4	RTS
SG	5		5	OP/CTS
DR(DSR)	6		6	DSR
RS(RTS)	7		7	GND
CS(CTS)	8		8	PWR
—	9		9	DTR

*1 GT15 : CD, GT11: NC

(d) RS-232 cable 4)

GOT side		Cable connection and signal direction	YASKAWA product side	
Signal name	Pin No.		Pin No.	Signal name
CD/NC ²	1		1	TXD
RD(RXD)	2		3	RXD
SD(TXD)	3		12	RTS
ER(DTR)	4		6	CTS
SG	5		2	—
DR(DSR)	6		14	GND
RS(RTS)	7			
CS(CTS)	8			
—	9			

*2 GT15 : CD, GT11: NC

(e) RS-232 cable 5)

GOT side		Cable connection and signal direction	YASKAWA product side	
Signal name	Pin No.		Pin No.	Signal name
CD/NC ³	1		1	FG
RD(RXD)	2		2	TXD
SD(TXD)	3		3	RXD
ER(DTR)	4		4	RS
SG	5		5	CS
DR(DSR)	6		6	DSR
RS(RTS)	7		7	SG
CS(CTS)	8		8	CD
—	9		20	DTR

*3 GT15 : CD, GT11: NC

(2) Connector specifications

(a) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT.

For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

- Connector type
9-pin D-sub (male) inch screw fixed type
- Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.


 GT15 User's Manual

(3)

(a) YASKAWA PLC side connector

Use the connector compatible with the YASKAWA PLC side module.


For details, refer to the following manual.

 User's Manual for the YASKAWA PLC

(4) Precautions when preparing a cable

The maximum length of the RS-232 cable differs according to the specifications of the YASKAWA PLC side.


For details, refer to the following manual:

 User's Manual for the YASKAWA PLC


2 RS-422 cable

The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a PLC.

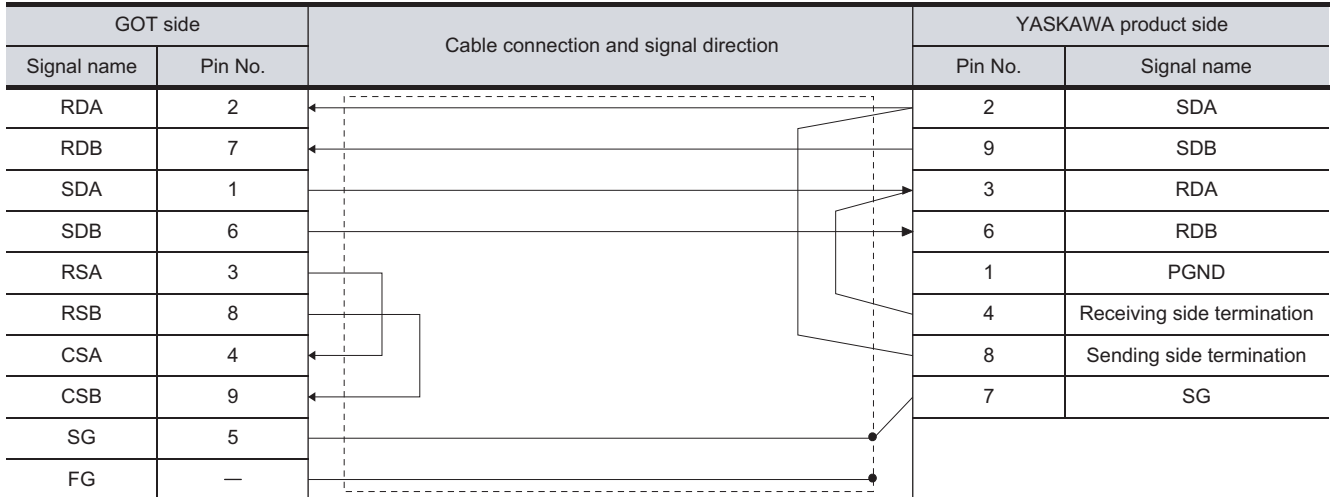(1) Connection diagram (a) RS-422 cable 1




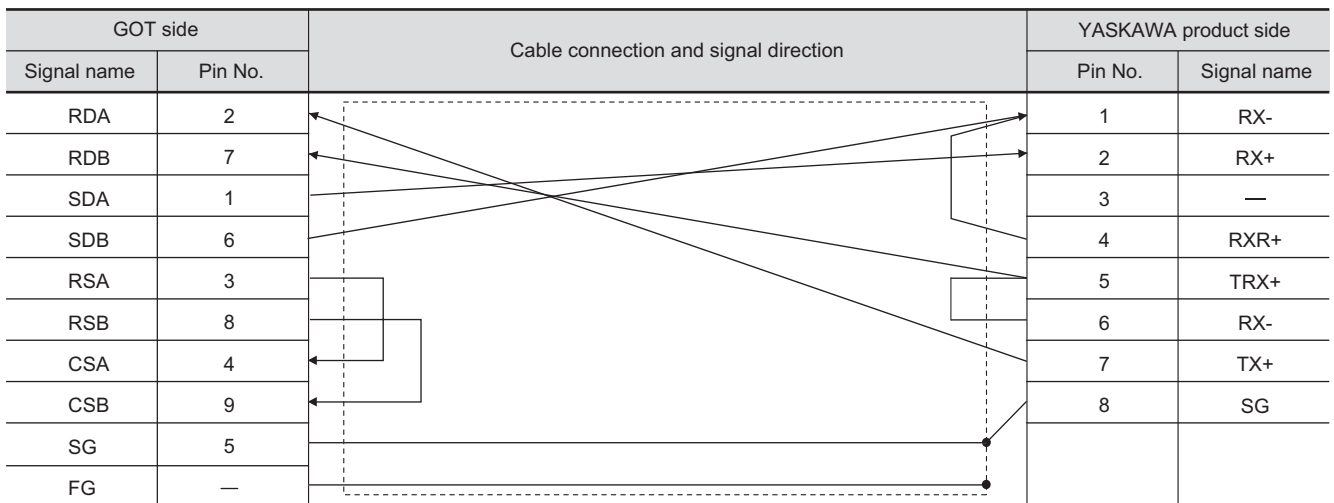(b) RS-422 cable 2




* The terminating resistor (120Ω) is valid by connecting pin 1 with pin 4 and pin 5 with pin 6 of the YASKAWA product side.

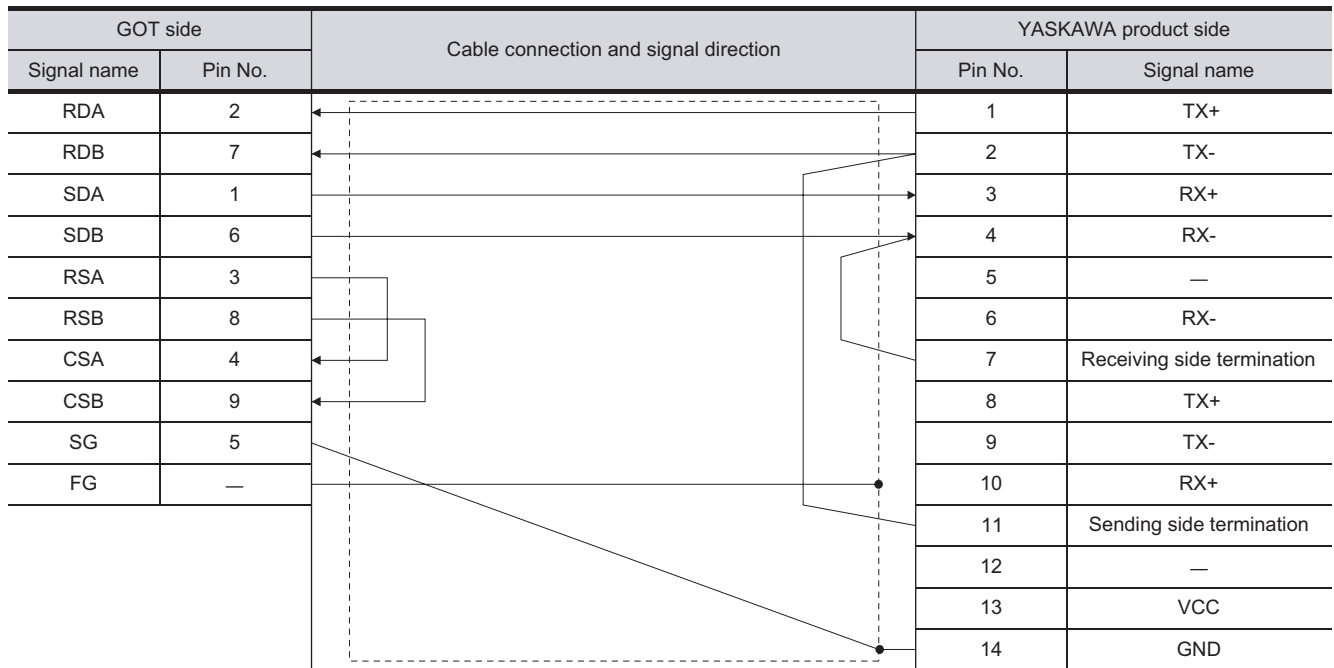(c) RS-422 cable 3)



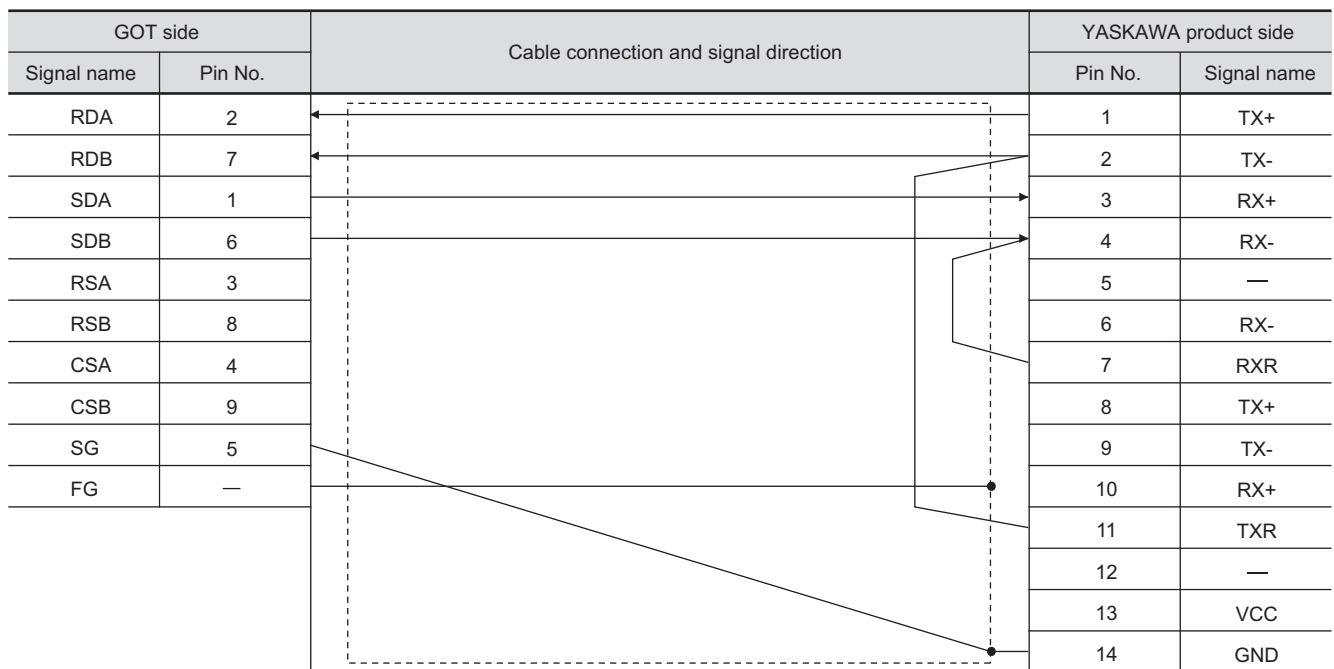(d) RS-422 cable 4)



* Connect RXR with RX(-) and TXR with TX(-) of 217IF01, and insert the terminating resistor.

(2) Connector specifications

(a) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.


GOT	Model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

(3)

(a) YASKAWA PLC side connector

Use the connector compatible with the YASKAWA PLC side module.

For details, refer to the following manual.


 User's Manual for the YASKAWA PLC

(4) Precautions when preparing a cable

The length of RS-422 cable 2) must be 300m or less.

The maximum length of RS-422 cable 1) differs according to the specifications of the YASKAWA PLC side.


For details, refer to the following manual:

 User's Manual for the YASKAWA PLC

(5) Connecting the terminating resistor

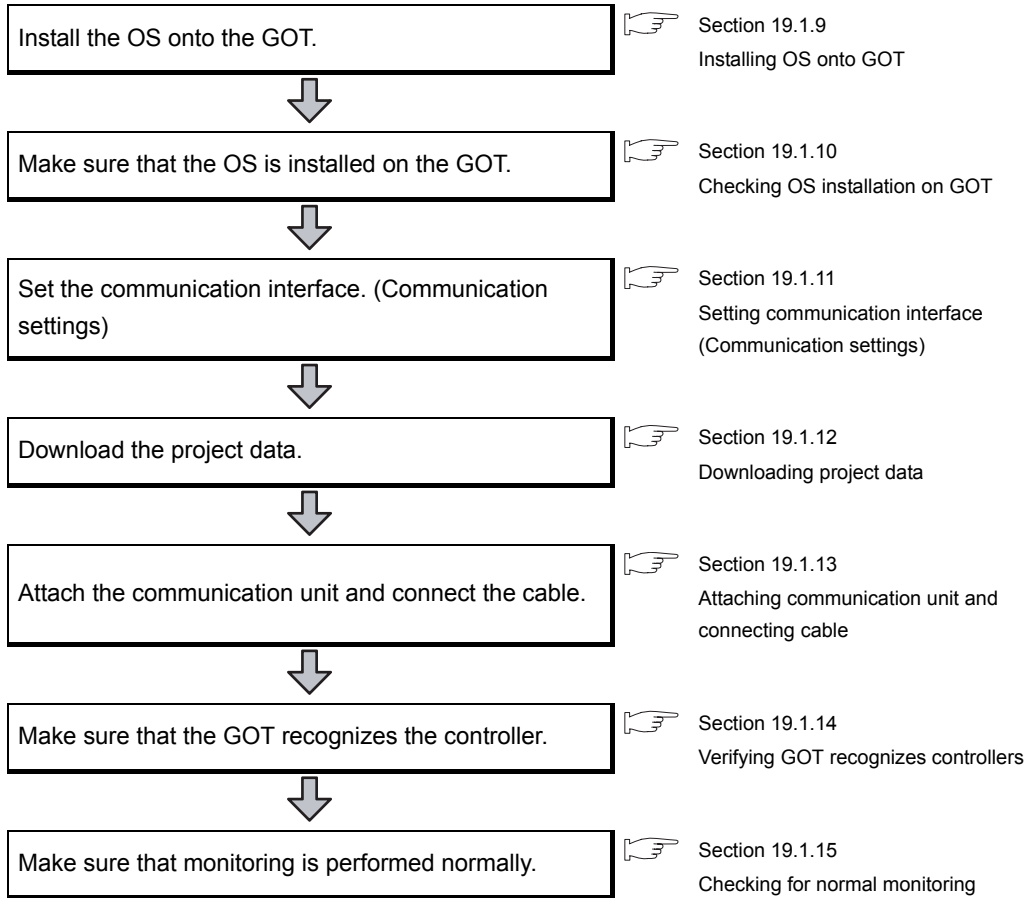
When connecting a YASKAWA PLC to a GOT, connect a terminating resistor to the YASKAWA PLC if required.

No terminating resistor needs to be connected on the GOT side as one is already built into the GOT.

 User's Manual for the YASKAWA PLC

19.1.8 Preparatory Procedure for Monitoring

The following shows the procedures to be taken before monitoring and corresponding reference sections.




Confirming the PLC side setting


This section explains the GOT side setting.
When confirming the PLC side settings, refer to the following.

Section 19.1.16 PLC Side Setting

19.1.9 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

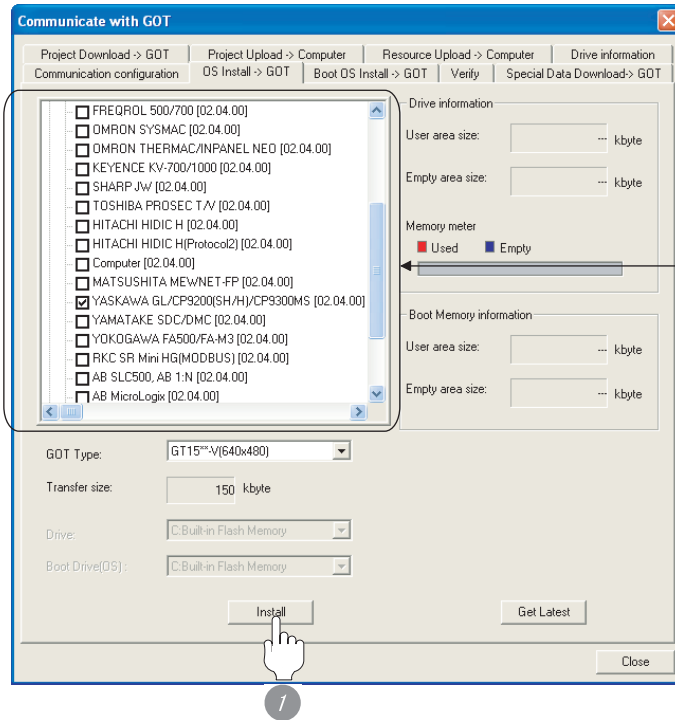 GT Designer2 Version □ Basic Operation/Data Transfer Manual




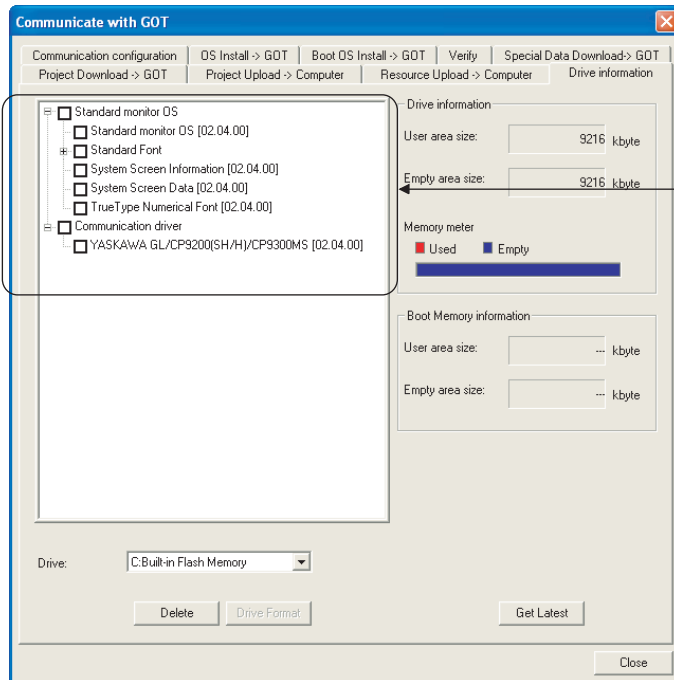
Check the following under the Communication driver.
• YASKAWA GL/CP9200(SH/H)/CP9300MS

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

19.1.10 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

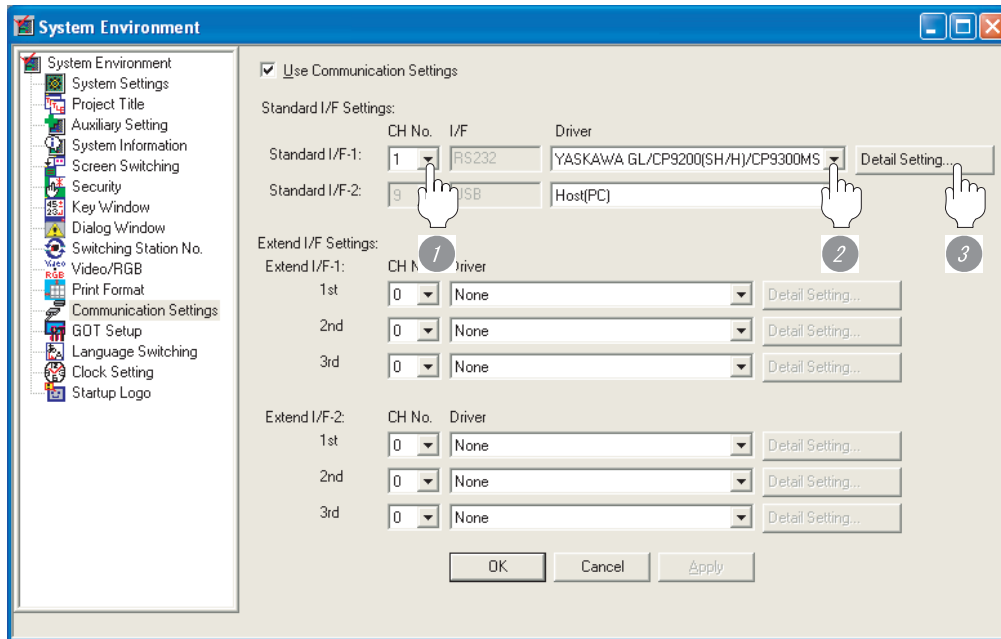
- 1) Standard monitor OS
- 2) Communication driver: YASKAWA GL/CP9200(SH/H)/CP9300MS

19.1.11 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set [1] to the channel No. used.
- 2 Set the driver to "YASKAWA GL/CP9200(SH/H)/CP9300MS".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Communication Detail Settings

Driver: YASKAWA GL/CP9200(SH/H)/CP9300MS

Transmission Speed: 19200 (BPS)

Data Bit: 8 bit

Stop Bit: 1 bit

Parity: Even

Sum Check: (empty)

Sum Check Type: (empty)

Retry: 0 (Times)

Startup Time: 3 (Sec)

Timeout Time: 3 (Sec)

Adapter Address: 0

Host Address: 1

Delay Time: 0 (x 10 ms)

Format: 1

Interrupt Data Byte: 1 (Byte)

Station No. Selection: (empty)

Special Interrupt Code: (empty)

Control Method: (empty)

OK Cancel

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the controller. <Default: 19200bps>	4800bps, 9600bps, 19200bps, 38400bps, 57600bps
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. <Default: 3 seconds>	3 to 30 seconds
Host Address	Specify the host address (station No. of the PLC to which the GOT is connected) in the network of the GOT. <Default: 1>	1 to 31
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 0 ms>	0 to 30 (x 10 ms)

Point

(1) Delay time

When connecting to PLC CP-9200(H) and CP-9300MS, set the following.

Model name		Delay time
CP-9200(H)		30ms or more
CP-9300MS	port:0	10ms or more
	port:1	30ms or more

(2) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's [Communication Settings] after downloading [Communication Settings] of project data.

For details on the Utility, refer to the following manual.

 GT User's Manual


(3) Precedence in communication settings

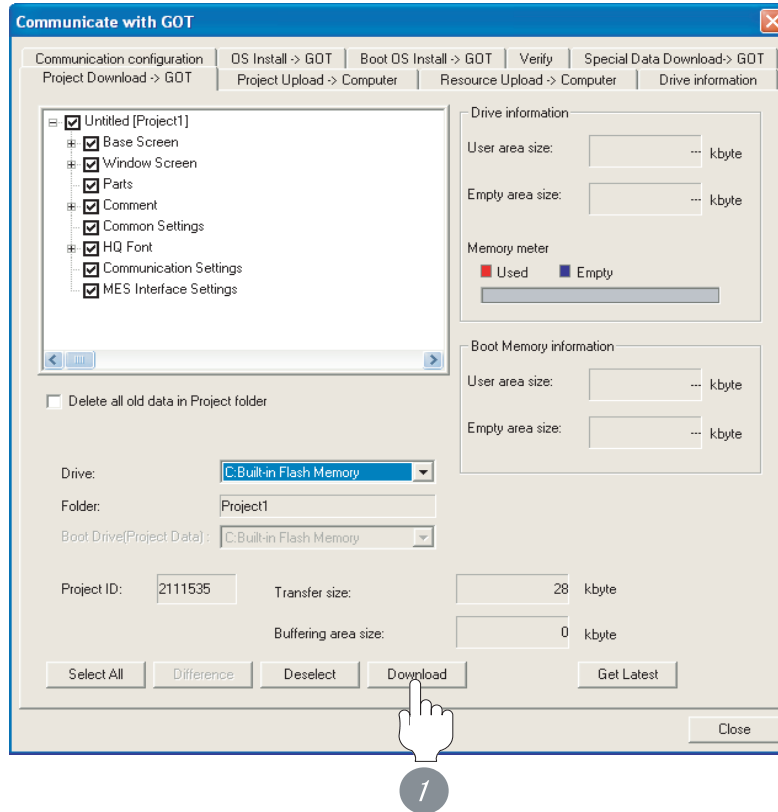
When settings are made by GT Designer or the Utility, the latest setting is effective.

19.1.12 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


19.1.13 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

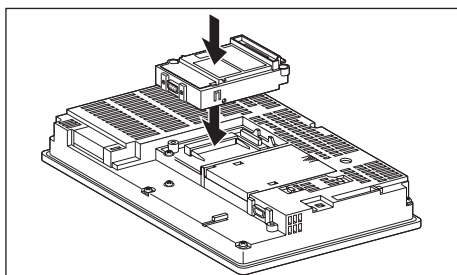1 Attaching the communication unit



- 1 Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

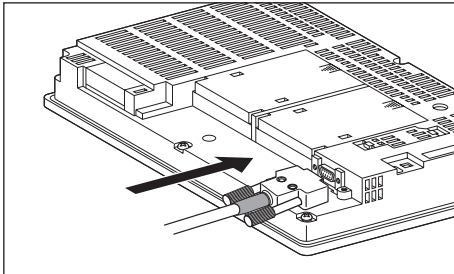
 GT15 Serial Communication Unit User's Manual

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

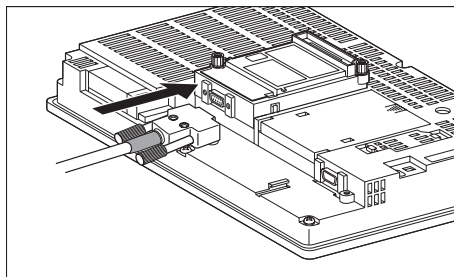- connection to the RS-232 communication unit



- 2 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

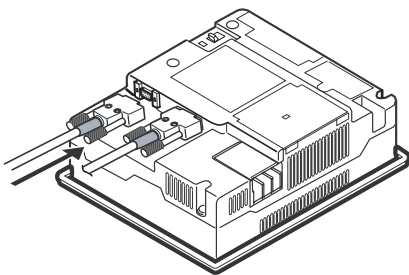(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

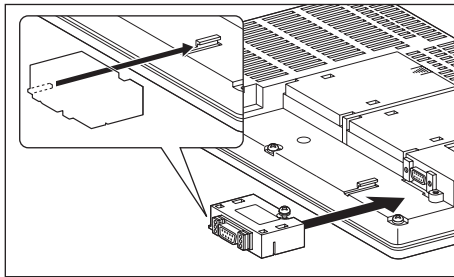- connection to the RS-422 interface




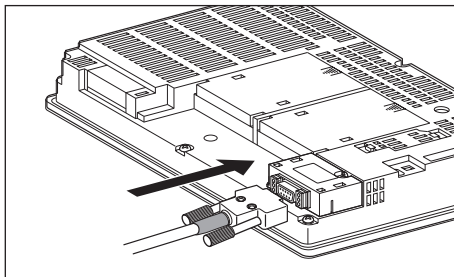- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

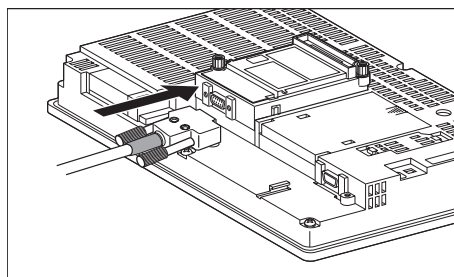- connection to the RS-422/485 communication unit



- 3 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

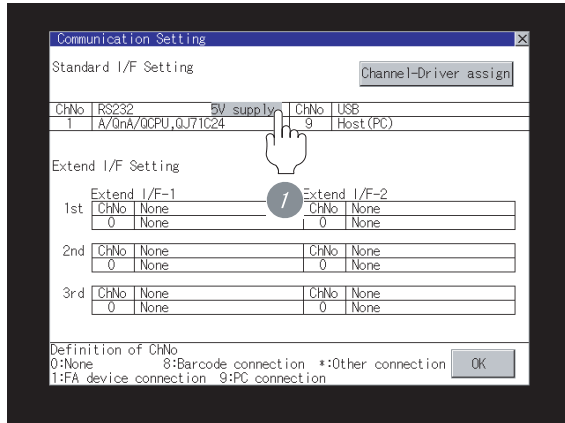
GT15 RS-422 Conversion Unit User's Manual

When using the RS-422 conversion unit


On [Communication Settings] on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the utility, refer to the following manual:

 GT User's Manual


- 1 Touch [5V supply].



- 2 Set [5V power supply] to [YES].

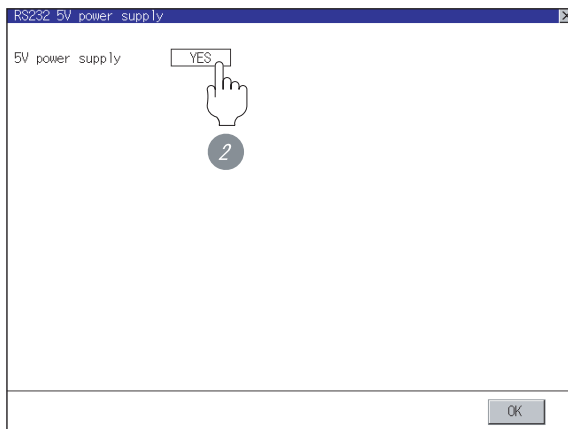

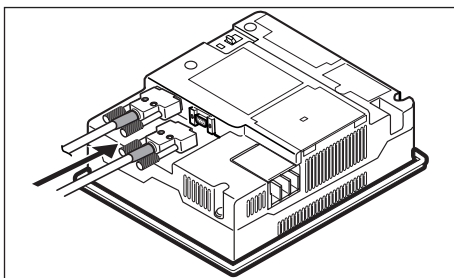(b) In the case of the GT11



- 1 Connect the RS-422 cable to the RS-422 interface on the GOT.

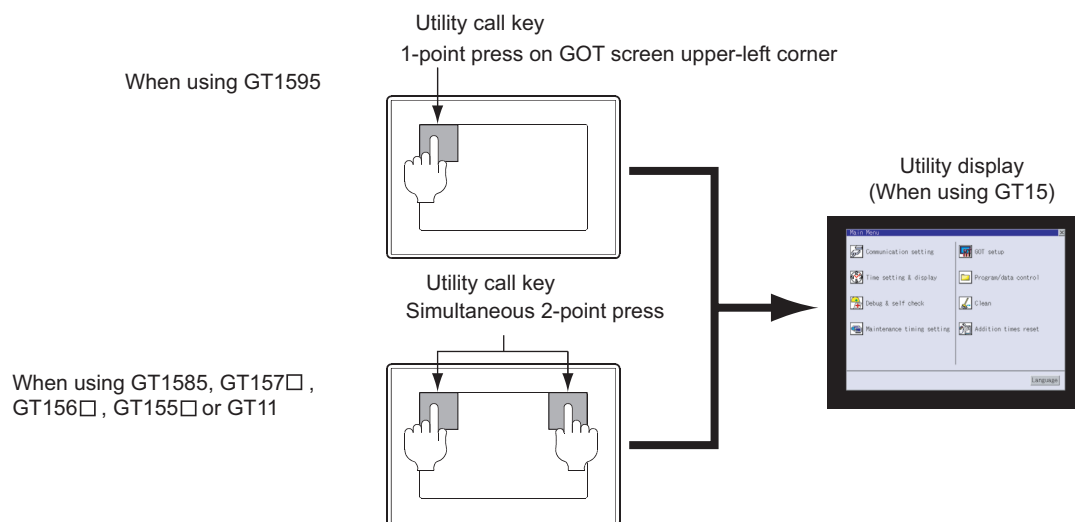
19.1.14 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)



Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

☞ GT□ User's Manual

17

CONNECTION TO
FUJIFA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

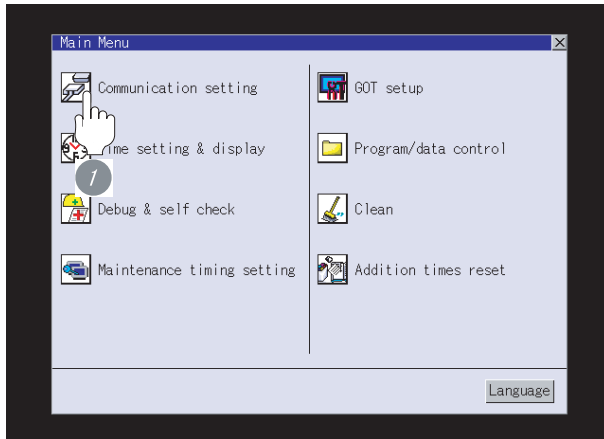
CONNECTION TO
SIEMENS PLC

23


MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER



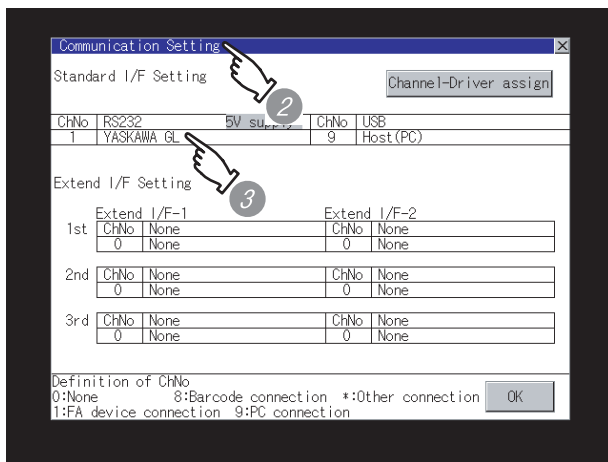- 1 After powering up the GOT, touch [Main Menu] → [Communication Settings] from the Utility.



- 2 The [Communication Settings] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver : YASKAWA GL
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 19.1.8 Preparatory Procedure for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

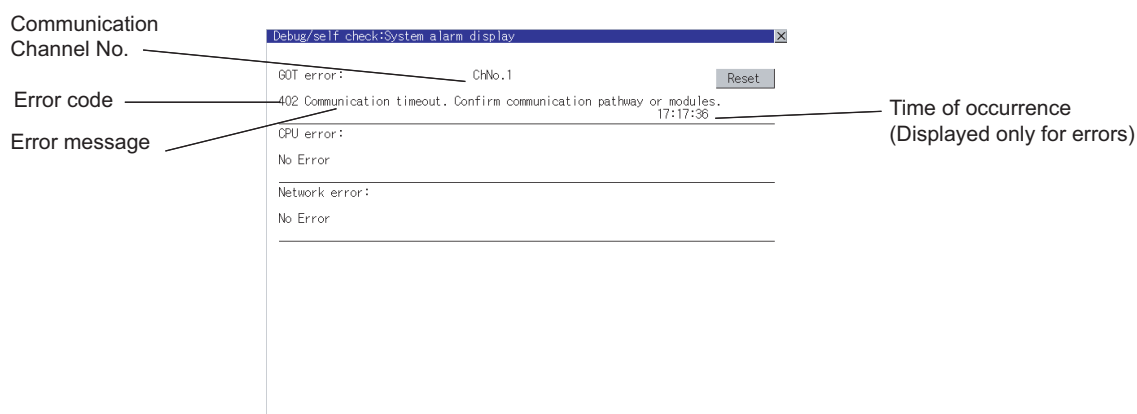
19.1.15 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT User's Manual (When using GT15)



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.


For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version Screen Design Manual

2 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.

Confirm if the PLC side setting is correct.

 Section 19.1.16 PLC Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

19.1.16 PLC Side Setting



YASKAWA PLC

For details of YASKAWA PLCs, refer to the following manuals.

Manuals for YASKAWA PLCs

1 Communication and port settings

Make the communication and port settings with a peripheral tool.

Device Name	Settings
Address*1	1 to 31
Protocol	MEMOBUS
Mode	RTU
Transmission speed*2*3	4800bps, 9600bps, 19200bps, 38400bps, 57600bps
Data length	8 bits
Stop bit	1 bit
Parity bit	Even
Error check	CRC16

*1 Set the address according to the Host Address setting on the GOT side.
For the Host Address setting on the GOT side, refer to the following.

Section 19.1.11 Setting communication interface (Communication settings)

*2 Only transmission speeds available on the GOT side are shown.
Also, the setting range differs depending on the YASKAWA PLC model.

*3 Set the same transmission speed as that of the GOT side.
For the transmission speed setting on the GOT side, refer to the following.

Section 19.1.11 Setting communication interface (Communication settings)

19.2 Ethernet Connection



Select a system configuration suitable for your application.




Conventions used in this section

Numbers (e.g. 1) of 7 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.

19.2.1 System configuration(MP-920)



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
TCP : 10 UDP : 128 (recommended to 16 units or less)	100m or less*2	<p>The diagram shows a GOT (1) connected to a communication module (2) via a twisted pair cable (3). A note *1 points to the cable connection.</p>

*1 The destination connected with the twisted pair cable varies with the configuration of the applicable Ethernet network system.
Connect to the Ethernet module, hub, transceiver or other system equipment corresponding to the applicable Ethernet network system.
Use cables, connectors, and hubs that meet the IEEE802.3 10BASE-T/100BASE-TX standard.

*2 A length between a hub and a node.


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	Ethernet communication unit • For Ethernet communication	GT15-J71E71-100


17 CONNECTION TO FUJIFA PLC
18 CONNECTION TO MATSUSHITA PLC
19 CONNECTION TO YASKAWA PLC
20 CONNECTION TO YOKOGAWA PLC
21 CONNECTION TO ALLEN-BRADLEY PLC
22 CONNECTION TO SIEMENS PLC
23 MICROCOMPUTER CONNECTION
24 CONNECTION TO OMRON TEMPERATURE CONTROLLER

(2) PLC


Image	No.	Name	Model name
	2	Communication module	2181F

2 is a product manufactured by YASKAWA Electric Corporation. For details of this product, contact YASKAWA Electric Corporation.

(3) Cable

Image	No.	Name	Model
	3	Twisted pair cable	Shielded twisted pair cable (STP) or unshielded twisted pair cable in category (UTP): 3, 4 and 5

19.2.2 System configuration(MP2200 or MP2300)



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
TCP: 10 UDP: 128 (recommended to 16 units or less)	100m or less*2	

- *1 The destination connected with the twisted pair cable varies with the configuration of the applicable Ethernet network system.
Connect to the Ethernet module, hub, transceiver or other system equipment corresponding to the applicable Ethernet network system.
Use cables, connectors, and hubs that meet the IEEE802.3 10BASE-T/100BASE-TX standard.
- *2 A length between a hub and a node.

2 System equipment

(1) GOT

Image	No.	Name	Model
	1	Ethernet communication unit • For Ethernet communication	GT15-J71E71-100

(2) PLC

Image	No.	Name	Model
	2	Communication module	218IF-01


2 is a product manufactured by YASKAWA Electric Corporation. For details of this product, contact YASKAWA Electric Corporation.

(3) Cable

Image	No.	Name	Model
	3	Twisted pair cable	Shielded twisted pair cable (STP) or unshielded twisted pair cable in category (UTP): 3, 4 and 5

19.2.3 Preparatory procedures for monitoring

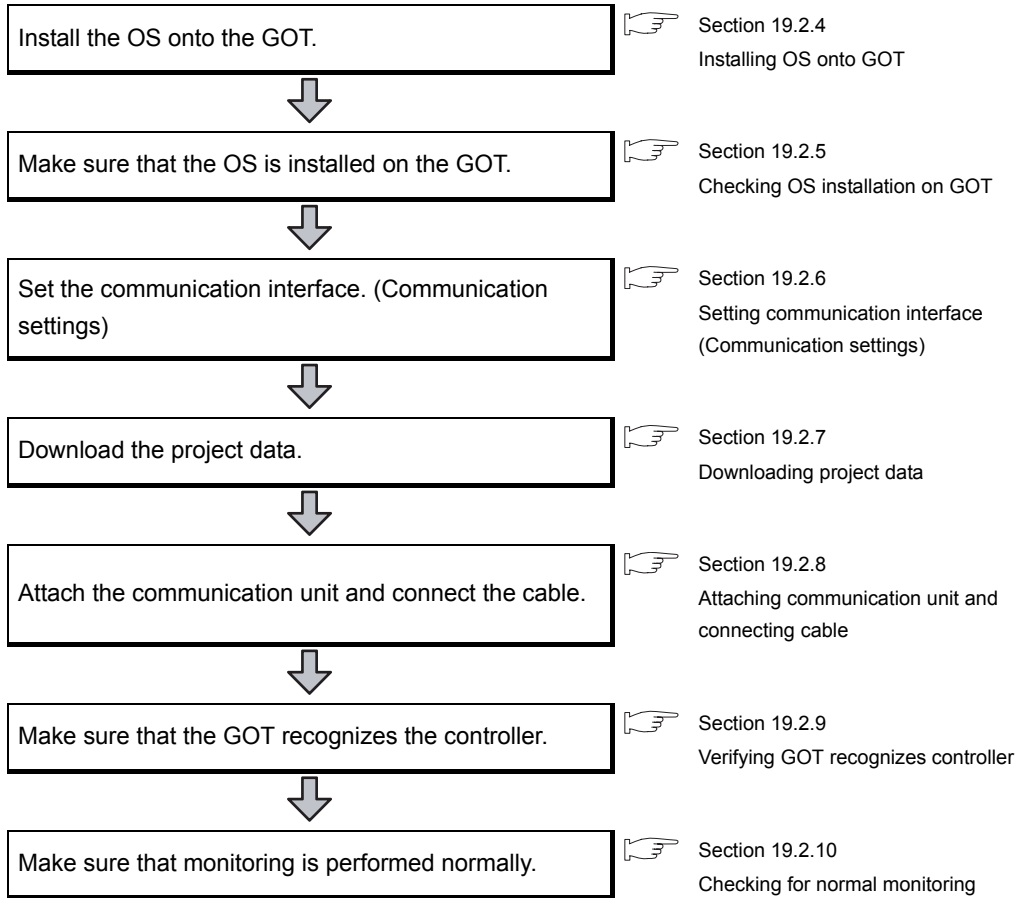The following shows the procedures to be taken before monitoring and corresponding reference sections.



Point


Confirming the PLC side setting

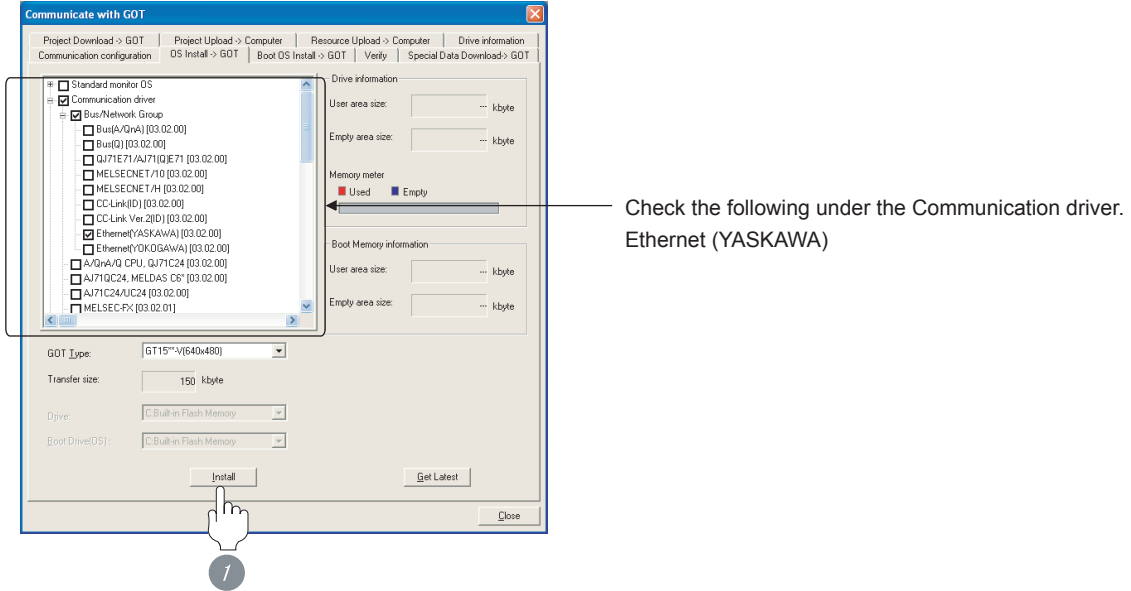
This section explains the GOT side setting.
When confirming the PLC side settings, refer to the following.

☞ Section 19.2.11 PLC side setting

19.2.4 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.


 GT Designer2 Version Basic Operation/Data Transfer Manual




- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

19.2.5 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

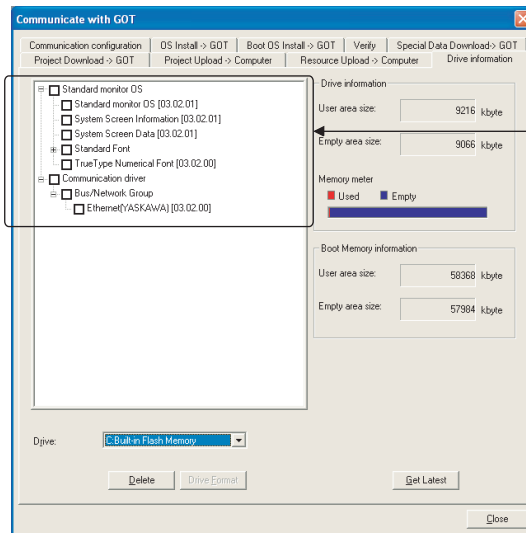 GT Designer2 Version Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver: Ethernet (YASKAWA)

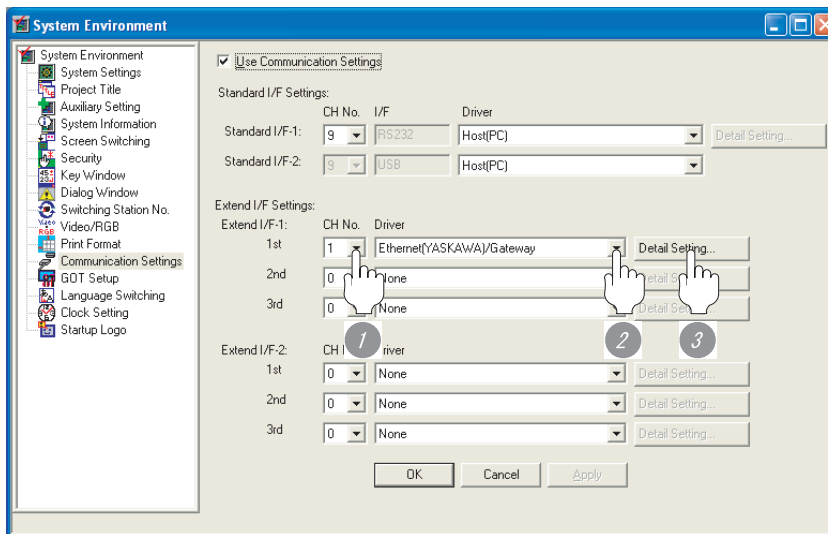
19.2.6 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] and [Ethernet] of GT Designer2.

Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] and [Ethernet] of GT Designer2, refer to the following manual.

 GT Designer2 Version□ Screen Design Manual

1 Communication settings



- 1 Set [1] to the channel No. used.
- 2 Set the driver to [Ethernet(YASKAWA)/Gateway].
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
GOT NET No.	Set the network No. of the GOT. <Default: 1>	1 to 239
GOT PC No.	Set the station No. of the GOT. <Default: 1>	1 to 64
GOT IP Address	Set the IP address of the GOT. <Default: 192.168.0.18>	0.0.0.0 to 255.255.255.255
GOT Port No. (Communication)	Set the GOT port No. for the connection with the controller. <Default: 5016>	1024 to 5010, 5014 to 65534 (Except for 5011, 5012 and 5013)
Default Gateway	Set the router address of the default gateway where the GOT is connected. (Only for connection via router) <Default: 0.0.0.0>	0.0.0.0 to 255.255.255.255
Subnet Mask	Set the subnet mask for the sub network. (Only for connection via router) If the sub network is not used, the default value is set. <Default: 255.255.255.0>	0.0.0.0 to 255.255.255.255
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. <Default: 3 Sec>	3 to 255 Sec
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 90 Sec
Delay Time	Set the delay time for reducing the load of the network/destination PLC. <Default: 0ms>	0 to 10000 (x 10ms)




Example of communication detail settings

For examples of communication detail settings, refer to the following.

Section 19.2.11 PLC side setting

3 Ethernet setting

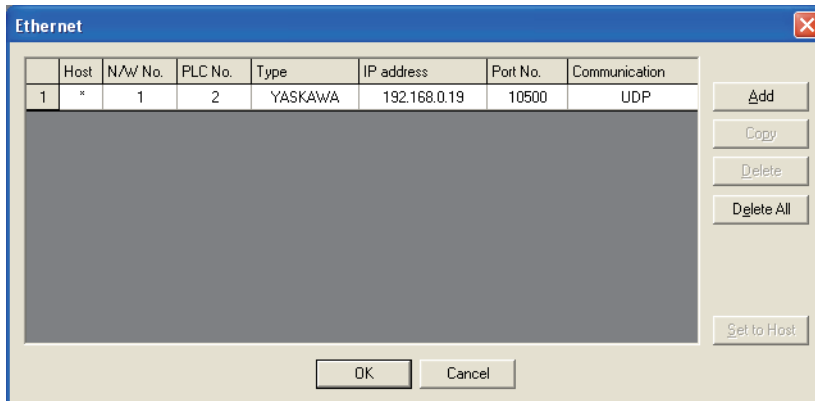(1) Ethernet setting



Item	Description	Setting
Host	The host is displayed. (The host is indicated with an asterisk (*).)	-
N/W No.	Set the network No. of the connected Ethernet module. <Default: blank>	1 to 239
PLC No.	Set the station No. of the connected Ethernet module. <Default: blank>	1 to 64
Type	YASKAWA (fixed)	YASKAWA (fixed)
IP address	Set the IP address of the connected Ethernet module. <Default: blank>	PLC side IP address
Port No.	Set the port No. of the connected Ethernet module. <Default: 10500>	256 to 65534
Communication	Select a communication protocol. <Default: UDP>	UDP, TCP



Example of Ethernet setting

For examples of Ethernet setting, refer to the following.

☞ Section 19.2.11 PLC side setting

Point 

- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's [Communication Settings] after downloading [Communication Settings] of project data.

For details on the Utility, refer to the following manual.


 GT User's Manual

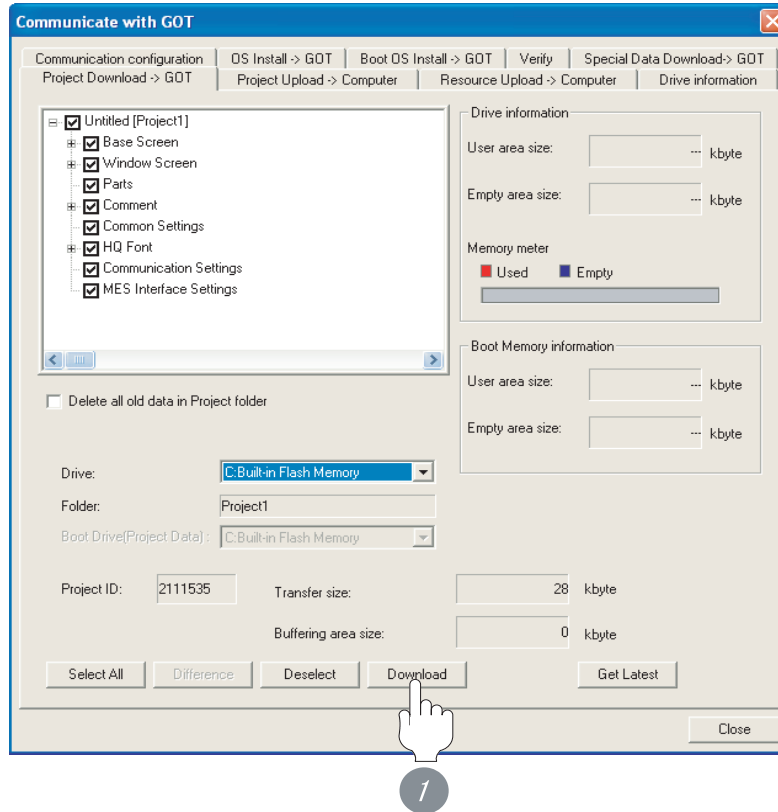
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

19.2.7 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


19.2.8 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

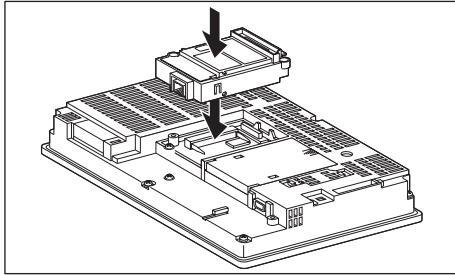1 Attaching the communication unit




- 1 Attach the Ethernet communication unit to the extension unit connector on the GOT.

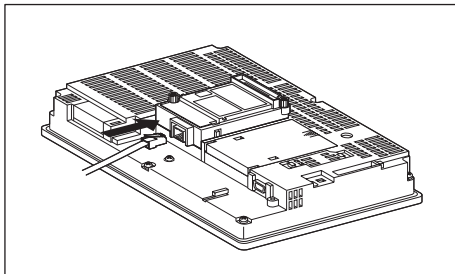
Point

Ethernet communication unit

For details on the Ethernet communication unit, refer to the following manual:

 GT15 Ethernet Communication Unit User's Manual

2 Connecting the cable



- 1 Connect the twisted pair cable to the Ethernet communication unit.

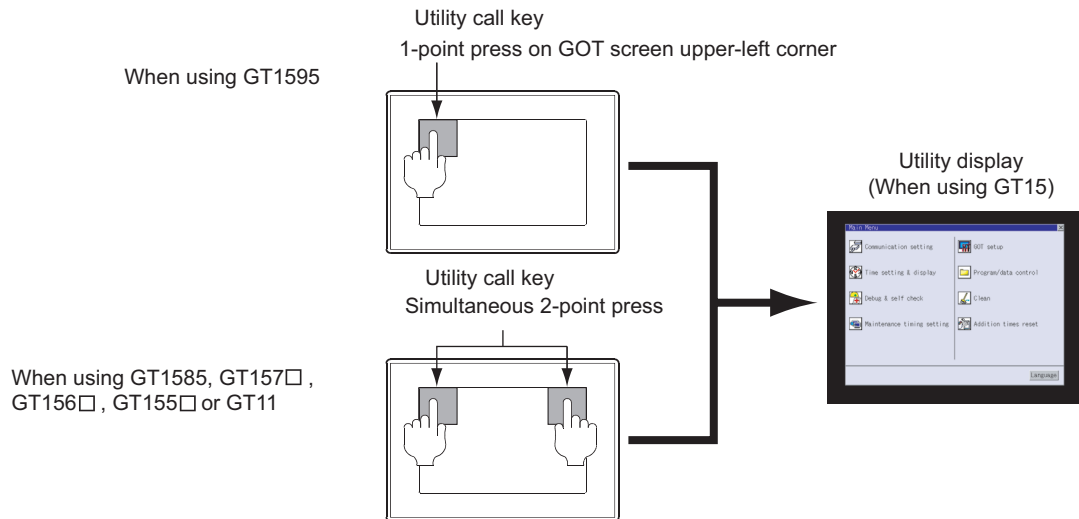
19.2.9 Verifying GOT recognizes controller

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.
For the setting of the utility call key, refer to the following.

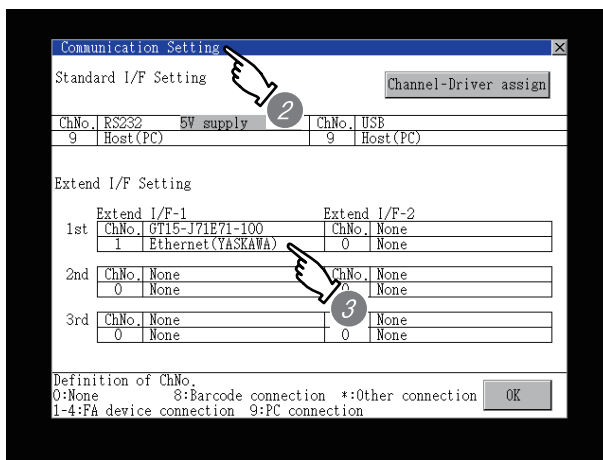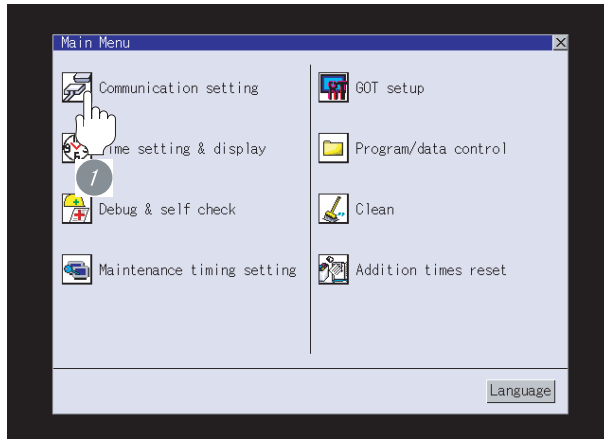 GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication Setting] from the Utility.

2 The [Communication Setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver: Ethernet (YASKAWA)

4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 19.2.3 Preparatory procedures for monitoring



When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.


☞ GT □ User's Manual

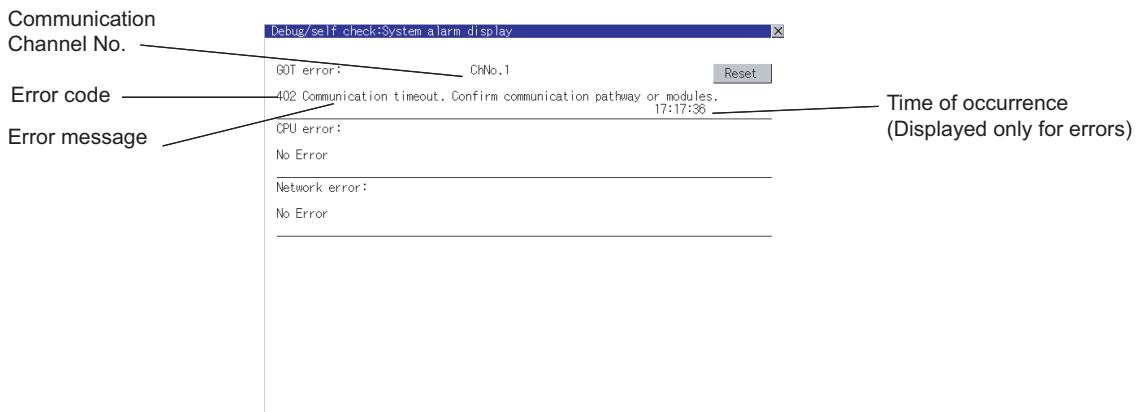
19.2.10 Checking for normal monitoring

1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)



Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

2 Confirming the communication state of GOT

(1) When using the Command Prompt of Windows®

WindowsExecute a Ping command at the Command Prompt of Windows®.

(a) When normal communication

```
C:\>Ping 192.168.0.18
```

```
Reply from 192.168.0.18: bytes=32 time<1ms TTL=64
```

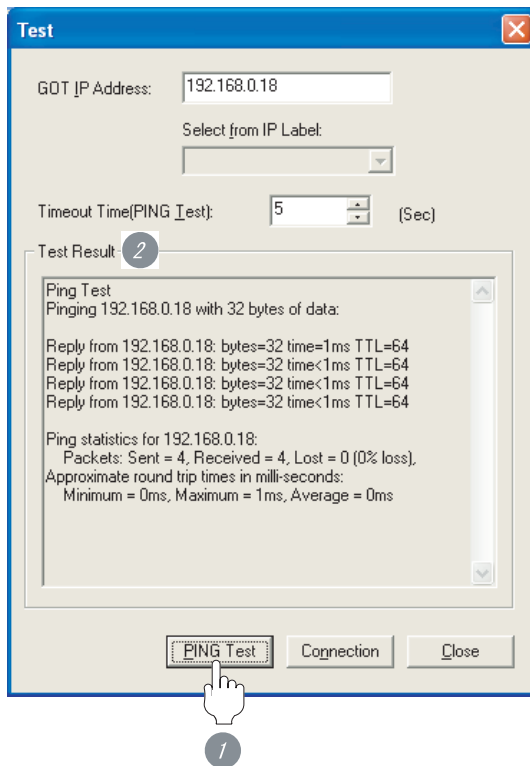
(b) When abnormal communication

```
C:\>Ping 192.168.0.18
```

```
Request timed out.
```


(2) When using the [PING Test] of GT Designer2

Select [Communication] → [Communication configuration] → [Ethernet] and **Test** to display "PING Test".



1 Specify the [GOT IP address] of the [PING Test] and click on the **PING Test** button.

2 The [Test Result] is displayed after the [PING Test] is finished.

(3) When abnormal communication


At abnormal communication, check the followings and execute the Ping command again.

- Mounting condition of Ethernet communication unit
- Cable connecting condition
- Confirmation of [Communication Settings]
- IP address of GOT specified by Ping command

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.

Confirm if the PLC side setting is correct.

 Section 19.2.11 PLC side setting

4 Confirming the communication state to each station (station monitoring function)

The station monitoring function detects the faults (communication timeout) of the stations monitored by the GOT. When detecting the abnormal state, it is confirming the response by executing a Ping command to the faulty station.

The station monitoring state can be confirmed by using GOT internal device.

(1) Station monitoring state

(a) No. of faulty station (GS230)

Total No. of the faulty CPU are stored.

The station No. of faulty stations are stored to GS231 through GS238. (b) Faulty station information (GS231 to GS238))

Device	b15 to b8	b7 to b0
GS230	(00H fixed)	No. of faulty stations



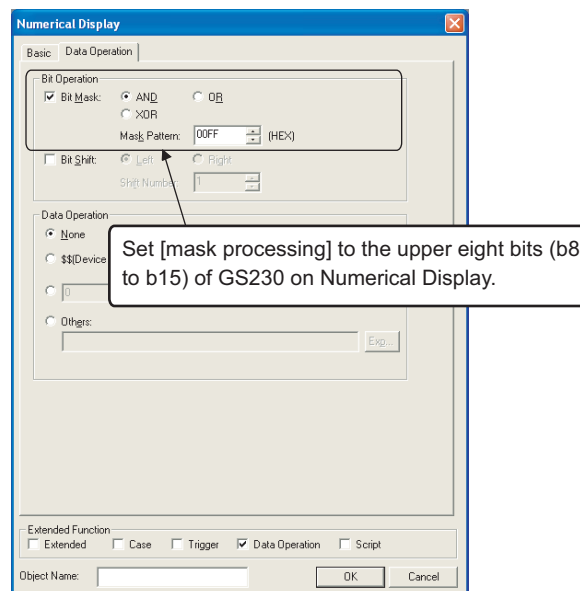
When monitoring GS230 on Numerical Display

When monitoring GS230 on Numerical Display, check [mask processing] with data operation tab as the following.

For the data operation, refer to the following manual.

GT Designer2 Version □ Screen Design Manual


<Numerical Display (Data Operation tab)>



(b) Faulty station information (GS231 to GS238)

- The bit of the Ethernet setting No. corresponding to the faulty station is set.
 - 0: Normal
 - 1: Abnormal
- The bit is reset after the fault is recovered.

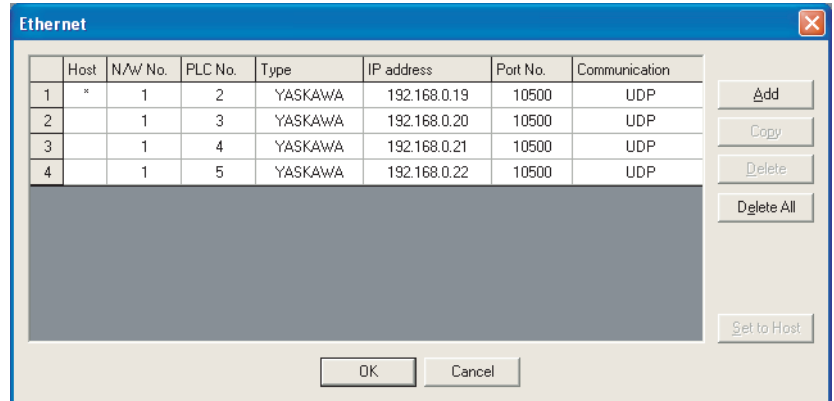GS231 bit 0 . . .
 GS231 bit 1 . . .
 GS231 bit 2 . . .
 GS231 bit 3 . . .



Device	Ethernet setting No.															
	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
GS231	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
GS232	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
GS233	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33
GS234	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49
GS235	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65
GS236	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81
GS237	112	111	110	109	108	107	106	105	104	103	102	101	100	99	98	97
GS238	128	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113

All settings related to communications are complete now.
 Create screens on GT Designer2 and download the project data again.

19.2.11 PLC side setting



YASKAWA PLC

For details of YASKAWA PLCs, refer to the following manuals.

Manuals for YASKAWA PLCs

1 Parameter setting

Make the parameter settings with a peripheral tool.

Settings for 218IF-01

	Item	Setting	Range
Transmission Parameters	Local IP Address	[].[].[.]	IP address of PLC
	Response Time	0	Not required for communication with GOT
	Count of Retry (Number of Retries)	0	Not required for communication with GOT
	CN	1	1 to 20
	Local Port (Local Station's Port Number)	10500	256 to 65534
	Node IP Address (Remote Station's IP Address)	[].[].[.]	IP address of GOT
	Node Port (Remote Station's Port Number)	[]	Port No. of GOT
	Connection Type	UDP (recommended)	UDP/TCP
	Protocol Type	Extended MEMOBUS	Extended MEMOBUS, MEMOBUS, MELSEC, None, MODBUS/TCP
	Code	BIN	RTU, BIN, ACII
	Node Name (Remote Station's Name)	GOT1000	Name of GOT
Local Port: TCP/IP Setting	Subnet Mask	[].[].[.]	PLC side settings
	Gateway IP Address	[].[].[.]	
	System Port No. (Diagnostic/Engineering Port No.)	10000	
	TCP (Transmission Control Protocol) Zero Window Timer Value	3 sec	
	TCP Retry Time	500ms	
	TCP Close Time	60 sec	
	IP Assemble Time	30 sec	
MAX. Packet Length	1500 bytes		
Ethernet Address Setting ^{*1}	Node IP Address (Remote Station's IP Address)	[0].[0].[0].[0]	IP address of GOT
	Node Port (Remote Station's Port Number)	0	Port No. of GOT

*1 Be sure to set the values above for the address so that the GOT communicates with the programmable controller correctly.


For the Host Address setting on the GOT side, refer to the following.

Section 19.2.6 Setting communication interface (Communication settings)


2 Sequence program

To communicate the MP2000/MP920 series with the GOT1000 series, the ladder program to receive messages is required. When connecting the MP2000/MP920 series with multiple GOTs, ladder programs to receive messages for each GOT are required.

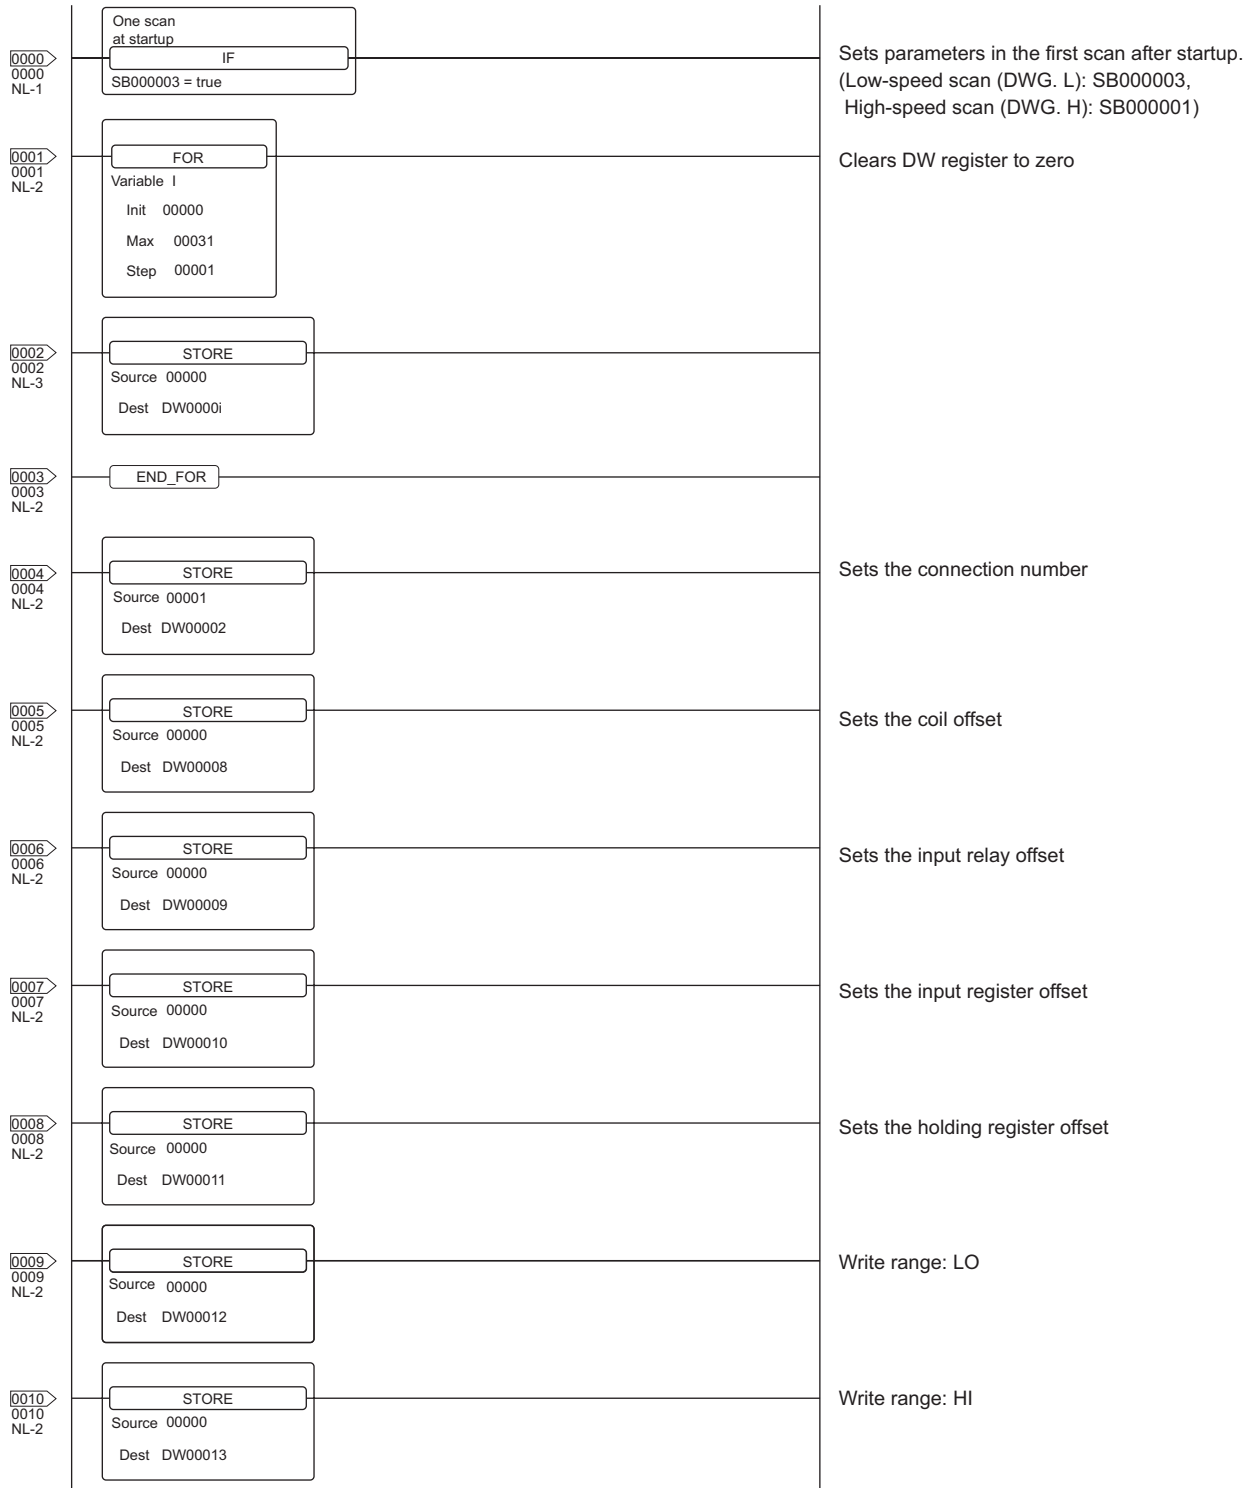ladder program to receive messages



(Continued to next page)

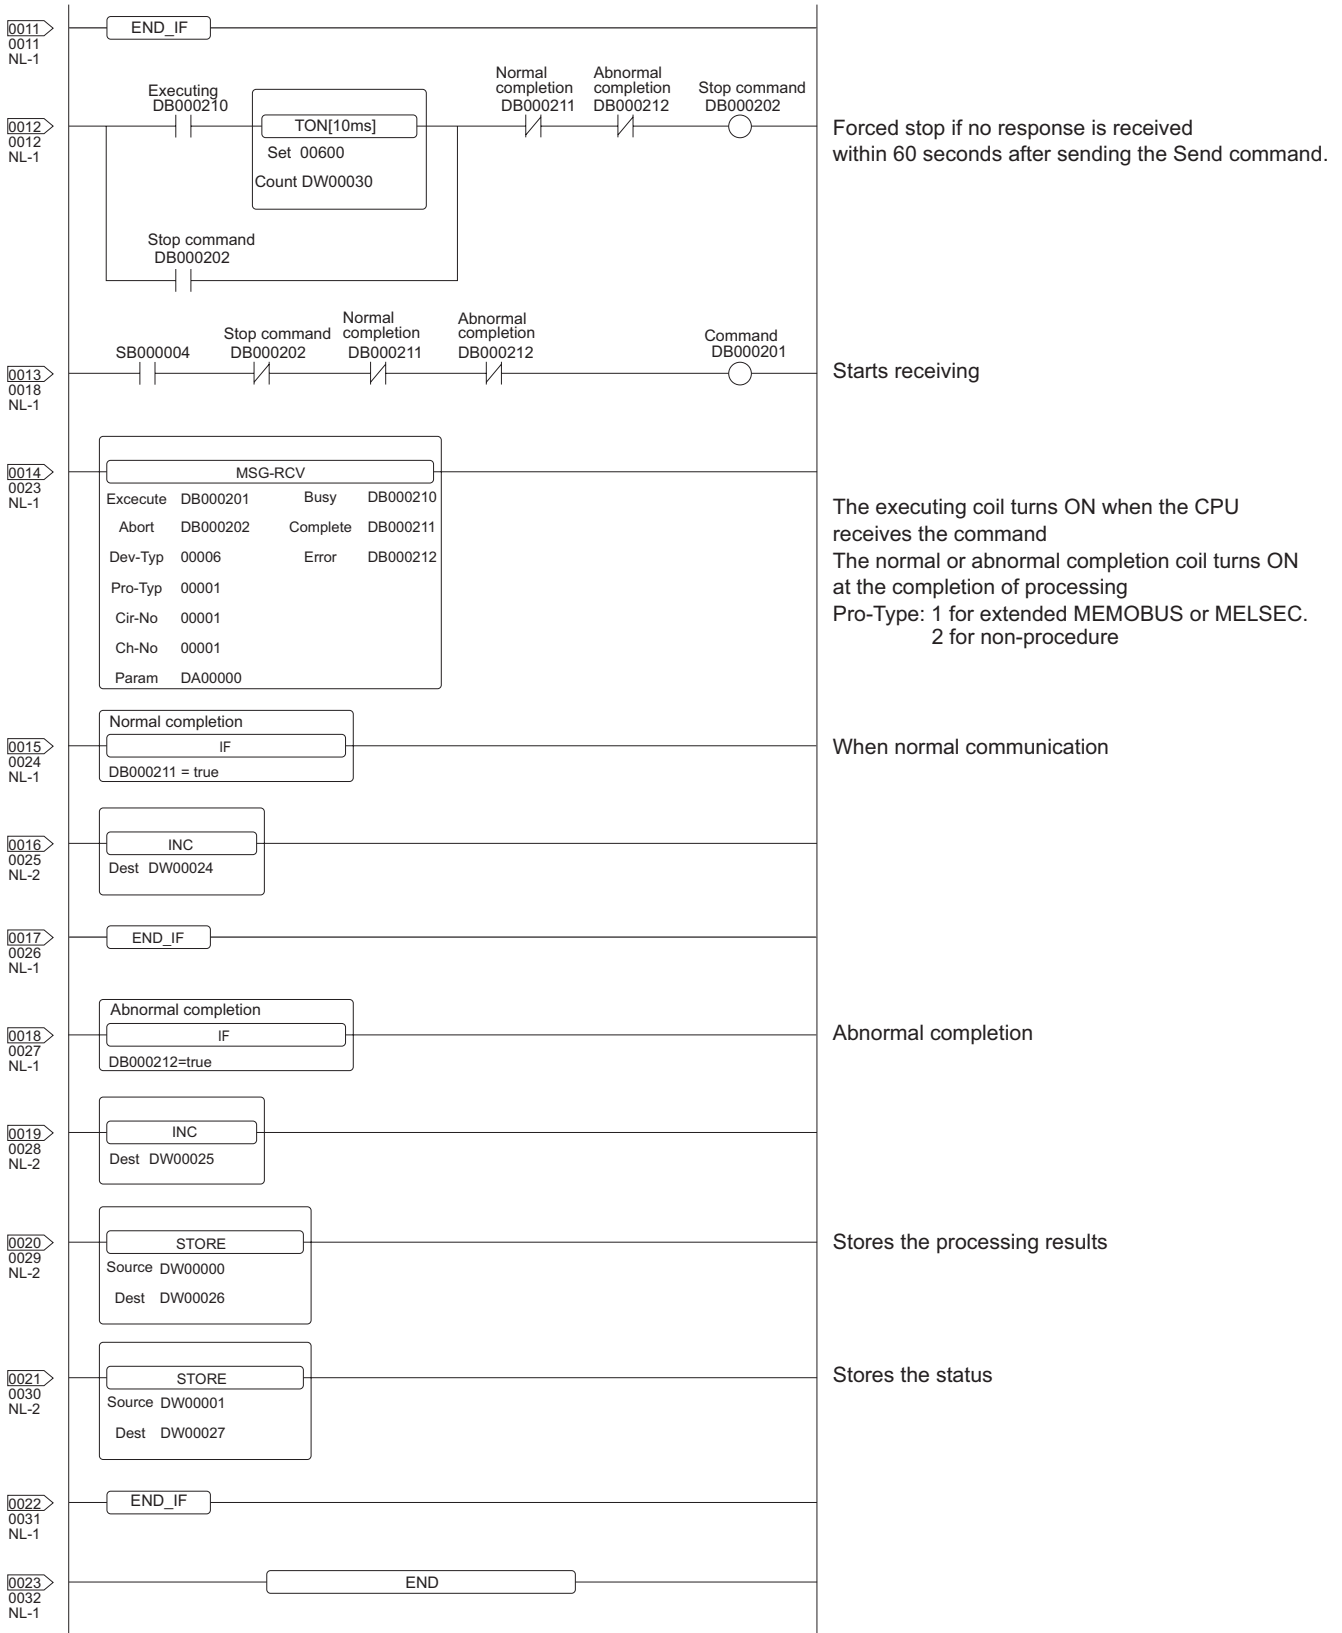

1 When connecting to multiple GOTs

(1) Setting PLC No.

When connecting two or more GOTs in the Ethernet network, set each [PC No.] to the GOT.

 Section 19.2.6 Setting communication interface (Communication settings)

(2) Setting IP address

Do not use the IP address "192.168.0.18" when using multiple GOTs.

A communication error may occur on the GOT with the IP address.

2 When setting IP address

Do not use "0" and "255" at the end of an IP address.

(Numbers of *.**.0 and *.**.255 are used by the system.)

The GOT may not monitor the controller correctly with the above numbers.

Consult with the administrator of the network before setting an IP address to the GOT and controller.

3 When connecting to the multiple network equipments (including GOT) in a segment

By increasing the network load, the transmission speed between the GOT and PLC may be reduced.

The following actions may improve the communication performance.

- Using a switching hub
- More high speed by 100BASE-TX (100Mbps)
- Reduction of the monitoring points on GOT

19.3 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
YASKAWA PLC connection	Supporting the MP2200/MP2300 connection	2.47Z	Communication driver YASKAWA GL/CP9200 (SH/H)/ CP9300MS [03.02.**] Ethernet (YASKAWA) [03.02.**]
	Supporting the Ethernet connection	2.47Z	Communication driver Ethernet (YASKAWA) [03.02.**]

CONNECTION TO YOKOGAWA PLC

20.1 Serial Connection page 20-2

This section describes the equipment and cables needed for RS-232/RS-422 connection.



Select a system suitable for your application.

20.2 Ethernet Connection page 20-39

This section describes the equipment and cables needed when connecting to Ethernet.



20.3 List of Functions Added by Version Upgrade page 20-61

This section describes the functions added by version upgrade of GT Designer2 or OS.

20.1 Serial Connection



Select a system configuration suitable for your application.




Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.

Use these numbers as references when confirming models and applications.

20.1.1 System configuration(FA-M3)



1 System configuration and connection conditions



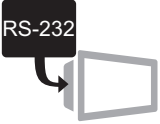



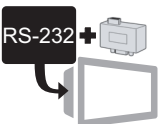

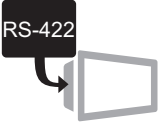



- (1) When the CPU port/D-Sub 9-pin conversion cable is used for connection to the programming tool connector, the GOT cannot be connected to the following PLCs. F3SP10, F3SP20, F3SP30, F3SP36
- (2) Since the F3SP10 is not compatible with the PC link module (F3LC11-2N), RS-422 connection is not available for it.

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	
	15m or less	
	1200m or less	

*1 This includes the length of the CPU port/D-Sub 9-pin conversion cable.


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 




*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	3	PC link module	F3LC01-1N, F3LC11-1N, F3LC11-1F, F3LC12-1F
	4		F3LC11-2N

3 and 4 are products manufactured by YOKOGAWA Electric Corporation. For details of these products, contact YOKOGAWA Electric Corporation.


(3) Cable

Image	No.	Name	Model name
	5	CPU port/D-Sub 9-pin conversion cable	KM10-0C
	6	RS-232 cable 1)* ¹ • Between CPU port/D-Sub 9-pin conversion cable and GOT	GT09-C30R20301-9P(3m)
	7	RS-232 cable 2)* ¹ • Between PC link module and GOT	GT09-C30R20302-9P(3m)
	8	RS-422 cable 1)* ¹ • Between PC link module and GOT	GT09-C30R40301-6T(3m) GT09-C100R40301-6T(10m) GT09-C200R40301-6T(20m) GT09-C300R40301-6T(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. (☞ Section 20.1.4 Connection Cable)

5 is product manufactured by YOKOGAWA Electric Corporation. For detail of this product, contact YOKOGAWA Electric Corporation.

20.1.2 System configuration(FA500)



1 System configuration and connection conditions

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	<p>3 4 PC link module 5 RS-232 cable 3) MAX15m 1</p>
	1200m or less	<p>4 PC link module 6 RS-422 cable 2) MAX1200m 2</p>

17

CONNECTION TO
FUJIFA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23

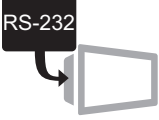



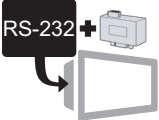

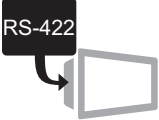



MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 



*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) PLC

Image	No.	Name	Model name
	3	PC link module	LC01-0N
	4		LC02-0N


3 and 4 are products manufactured by YOKOGAWA Electric Corporation. For details of these products, contact YOKOGAWA Electric Corporation.

(3) Cable

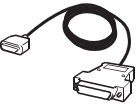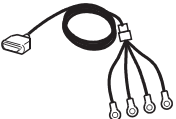Image	No.	Name	Model name
	5	RS-232 cable 3)*1 • Between PC link module and GOT	GT09-C30R20205-25P(3m)
	6	RS-422 cable 2)*2 • Between PC link module and GOT	GT09-C30R40302-6T(3m) GT09-C100R40302-6T(10m) GT09-C200R40302-6T(20m) GT09-C300R40302-6T(30m)

*1 The RS-232 and RS-422 cable can be prepared by the user. (☞ Section 20.1.4 Connection Cable)

20.1.3 System configuration(STARDOM)



1 System configuration and connection conditions

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	

*1 Connect the RS-232 cable to the COM port of the PLC.

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P

(2) Cable

Image	No.	Name	Model name
	5	RS-232 cable 2) • Between PLC and GOT	(To be prepared by the user Section 20.1.4 Connection Cable)

17 CONNECTION TO FUJIFA PLC
 18 CONNECTION TO MATSUSHITA PLC
 19 CONNECTION TO YASKAWA PLC
 20 CONNECTION TO YOKOGAWA PLC
 21 CONNECTION TO ALLEN-BRADLEY PLC
 22 CONNECTION TO SIEMENS PLC
 23 MICROCOMPUTER CONNECTION
 24 CONNECTION TO OMRON TEMPERATURE CONTROLLER

20.1.4 Connection Cable


The RS-232 cable or RS-422 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model		Connection cable	
		RS-232 cable (See this section 7)	RS-422 cable (See this section 2)
CPU port/D-Sub 9-pin conversion cable	KM10-0C	RS-232 cable 1)	—
PC link module	F3LC01-1N	RS-232 cable 2)	—
	F3LC11-1N		—
	F3LC11-2N	—	RS-422 cable 1)
	F3LC11-1F	RS-232 cable 2)	—
	F3LC12-1F		—
	LC01-0N	RS-232 cable 3)	—
	LC02-0N		RS-422 cable 2)
STARDOM		RS-232 cable 2)	—

1 RS-232 cable


The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.

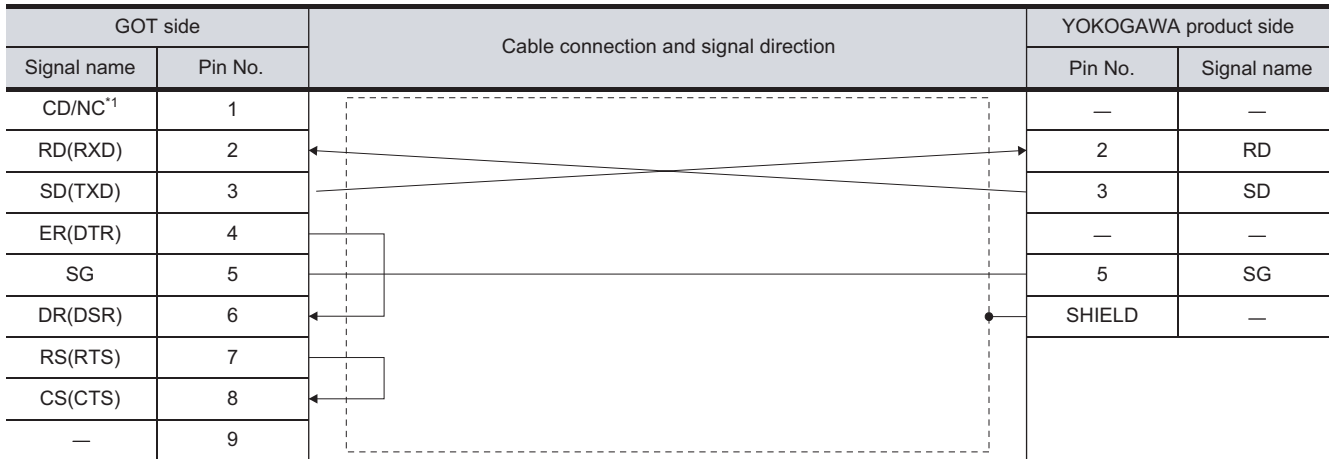(1) Connection diagram (a) RS-232 cable 1



*1 GT15 :CD, GT11: NC

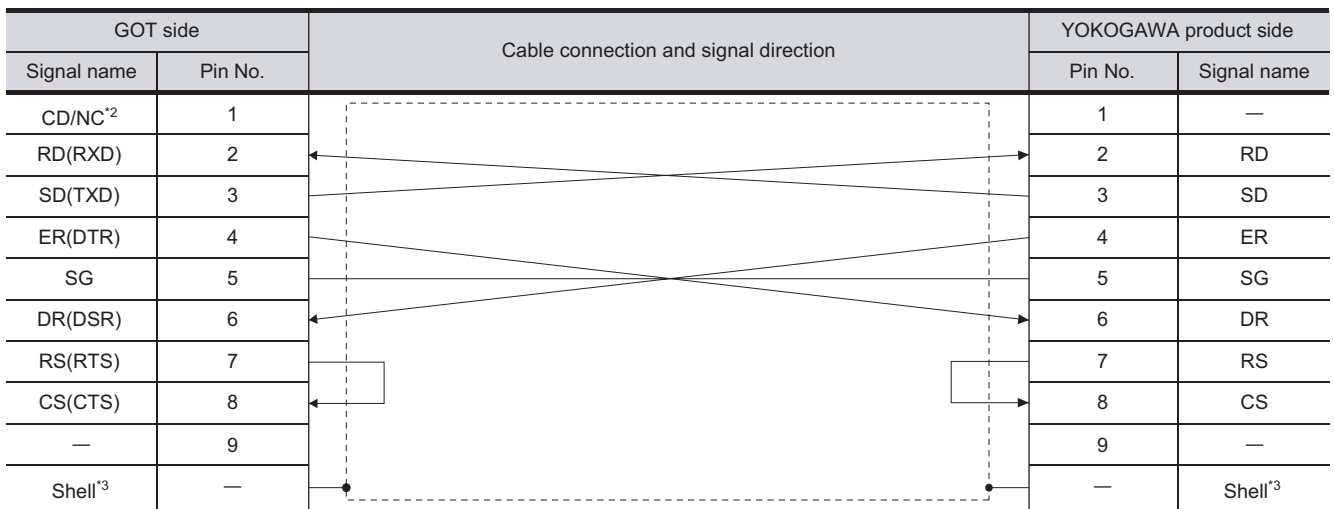
(b) RS-232 cable 2



*2 GT15 :CD, GT11: NC

*3 Connect the shield to the housing of the connectors on both the GOT and YOKOGAWA product sides.

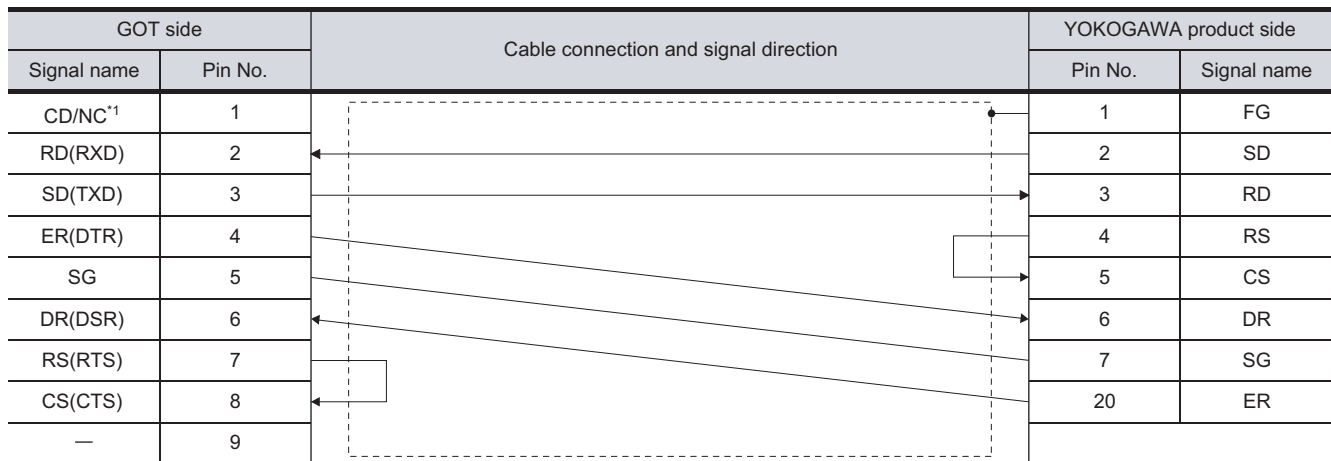(c) RS-232 cable 3)



*1 GT15 : CD, GT11: NC

(2) Connector specifications

(a) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT.

For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

- Connector type
9-pin D-sub (male) inch screw fixed type
- Connector model

GOT	Hardware version*1	Model	Manufacturer		
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd		
GT1585V-S	-				
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd		
	C	17LE-23090-27(D4CK)	DDK Ltd		
GT1585-STBD	-				
GT1575V-S	-				
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.		
	C	17LE-23090-27(D4CK)	DDK Ltd		
GT1575-STBD	-	17LE-23090-27(D4CK)	DDK Ltd		
GT1575-VTBA	D			GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E			17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-				
GT1575-VN	-				
GT1572-VN	-				
GT1565-V	-				
GT1562-VN	-				
GT155□	-				
GT1155-Q, GT1150-Q	-				
GT15-RS2-9P	-	17LE-23090-27(D4CK)			

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(3)

(a) YOKOGAWA PLC side connector

Use the connector compatible with the YOKOGAWA PLC side module.

For details, refer to the following manual.

 User's Manual for the YOKOGAWA PLC

(4) Precautions when preparing a cable

The length of cables RS-232 2) and 3) must be 15m or less.

The length of the cable RS-232 1) must not exceed 15m including the CPU port/D-Sub 9-pin conversion cable length.

2 RS-422 cable

The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a PLC.



Differences in polarity between GOT and YOKOGAWA products

The polarity of poles A and B in signal names is reversed between GOT and YOKOGAWA products.

(1) Connect a cable according to the following connection diagrams.

(1) Connection diagram

(a) RS-422 cable 1

GOT side		Cable connection and signal direction	YOKOGAWA product side
Signal name	Pin No.		Terminal block name
RDA	2		SDB
RDB	7		SDA
SDA	1		RDB
SDB	6		RDA
RSA	3		—
RSB	8		—
CSA	4		—
CSB	9		—
SG	5		SG
FG	—		SHIELD

(b) RS-422 cable 2

GOT side		Cable connection and signal direction	YOKOGAWA product side
Signal name	Pin No.		Terminal block name
RDA	2		SDB
RDB	7		SDA
SDA	1		RDB
SDB	6		RDA
RSA	3		—
RSB	8		—
CSA	4		—
CSB	9		—
SG	5		SG
FG	—		FG

(2) Connector specifications

(a) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

(3) Precautions when preparing a cable

Limit the length of the RS-422 cable to 1200m.

(4) Connecting the terminating resistor

When connecting a PLC link module to a GOT, a terminating resistor must be connected to the PC link module.

No terminating resistor needs to be connected on the GOT side as one is already built into the GOT.

The following describes how to connect it on the PC link module.

(a) F3LC11-2N

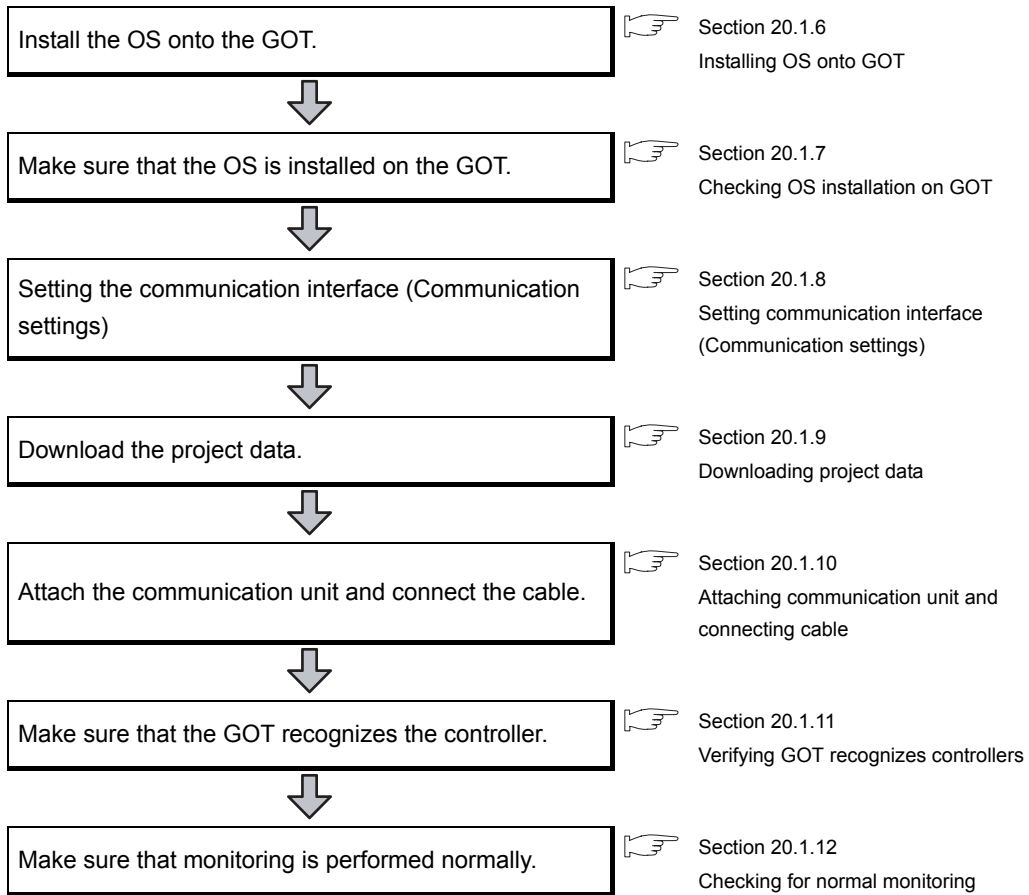
Set the terminator switch (TERMINATOR) on the front panel of F3LC11-2N to the "4-WIRE" side to enable the terminator.

(b) LC02-0N

Connect the terminating resistor provided with the LC02-0N across SDA and SDB, and across RDA and RDB on the terminal block.

20.1.5 Preparatory Procedure for Monitoring

The following shows the procedures to be taken before monitoring and corresponding reference sections.




Confirming the PLC side setting


This section explains the GOT side setting.
When confirming the PLC side settings, refer to the following.

Section 20.1.13 PLC side setting

20.1.6 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

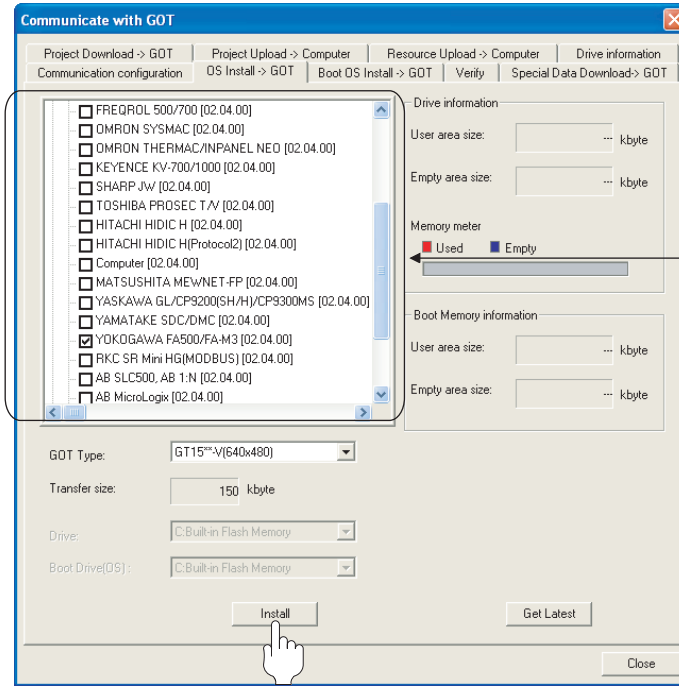 GT Designer2 Version □ Basic Operation/Data Transfer Manual




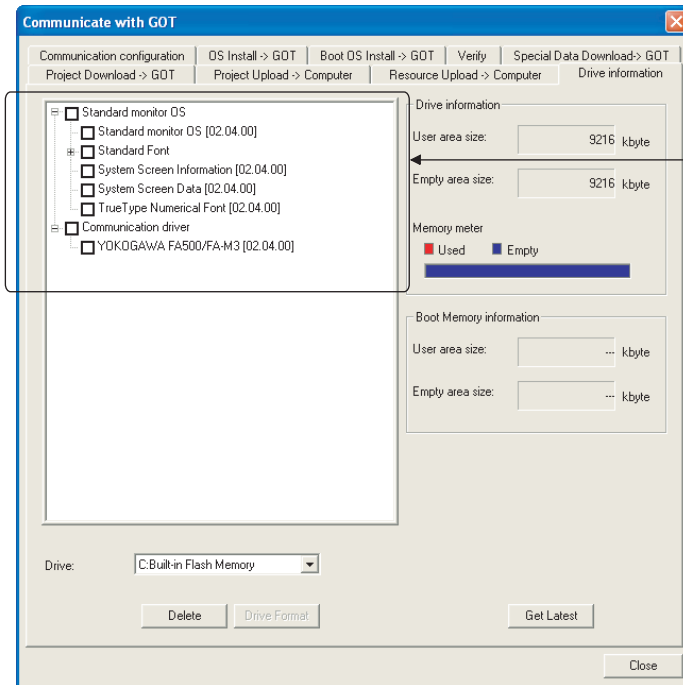
Check the following under the Communication driver.
• YOKOGAWA FA500/FA-M3

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

20.1.7 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.


 GT Designer2 Version Basic Operation/Data Transfer Manual



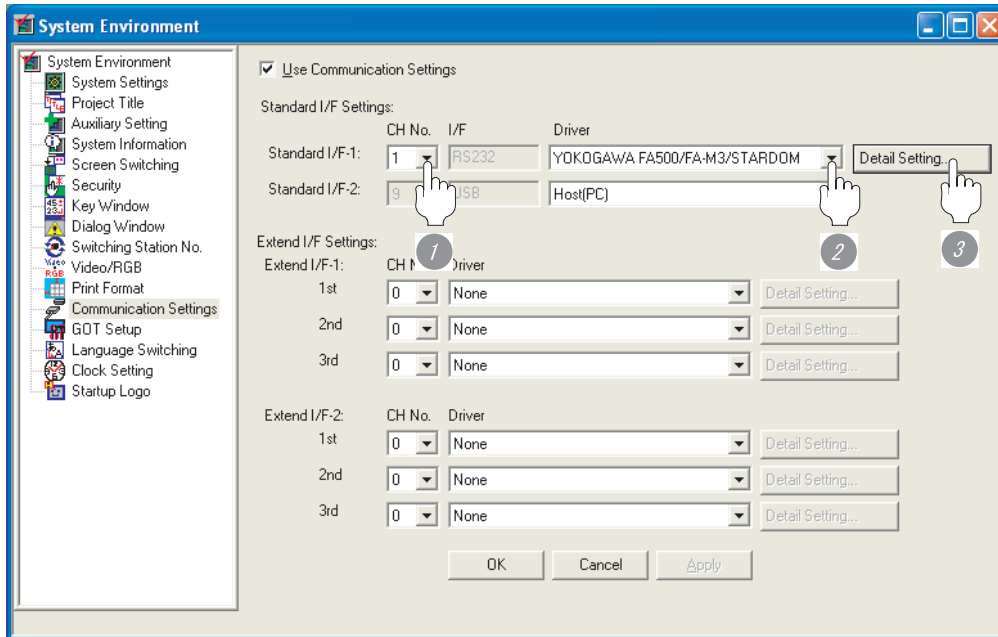
The OS has been installed successfully on the GOT if the following can be confirmed:
1) Standard monitor OS
2) Communication driver: YOKOGAWA FA500/FA-M3

20.1.8 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set [1] to the channel No. used.
- 2 Set the driver to "YOKOGAWA FA500/FA-M3/STARDOM".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Communication Detail Settings

Driver: YOKOGAWA FA500/FA-M3/STARDOM

Transmission Speed: 9600 (BPS)

Data Bit: 8 bit

Stop Bit: 1 bit

Parity: None

Sum Check: Done

Sum Check Type:

Retry: 0 (Times)

Startup Time: 3 (Sec)

Timeout Time: 3 (Sec)

Adapter Address: 0

Host Address: 1

Delay Time: 0 (x 10 ms)

Format: 1

Interrupt Data Byte: 1 (Byte)

Station No. Selection:

Special Interrupt Code:

Control Method:

OK Cancel

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the controller. <Default: 9600bps>	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the controller. <Default: 8 bits>	7 bits or 8 bits
Stop Bit	Specify the stop bit length for communications. <Default: 1 bit>	1 bit or 2bits
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: None>	None Even Odd
Sum check	Set whether or not to perform a sum check during communication. <Default: Done>	Done, None
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 times>	0 to 5 times
Timeout Time	Set the time period for a communication to time out. <Default: 3 seconds>	3 to 30 seconds
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 0ms>	0 to 30 (x 10 ms)

Point

- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's [Communication Settings] after downloading [Communication Settings] of project data.

For details on the Utility, refer to the following manual.


 GT □ User's Manual

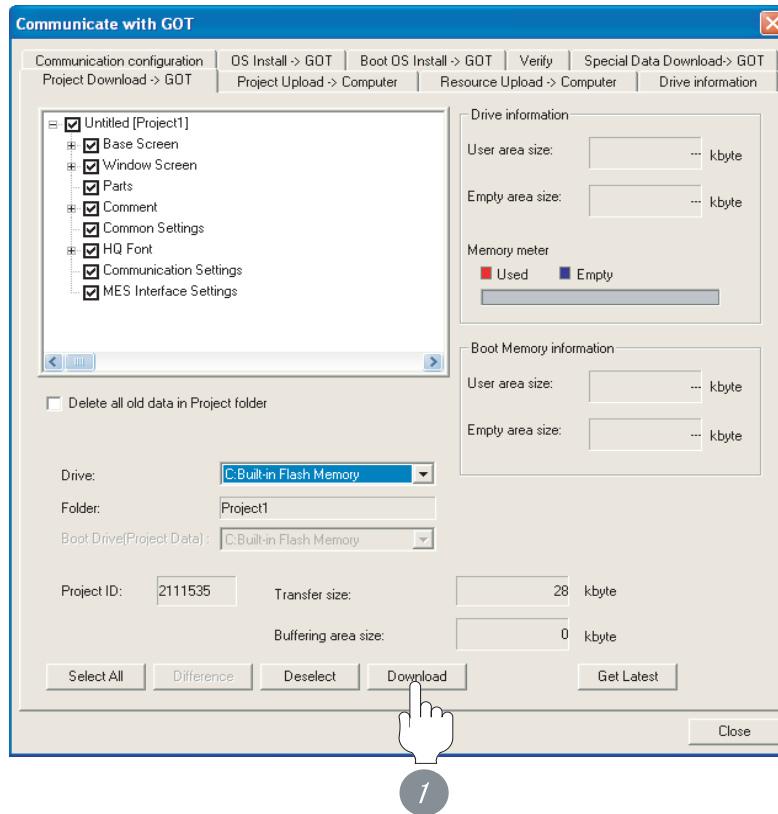
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

20.1.9 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


20.1.10 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

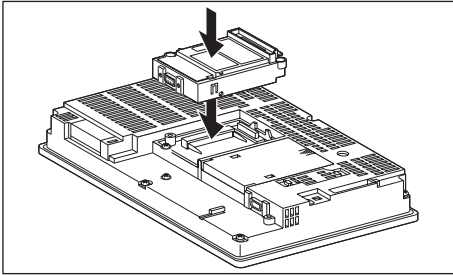1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

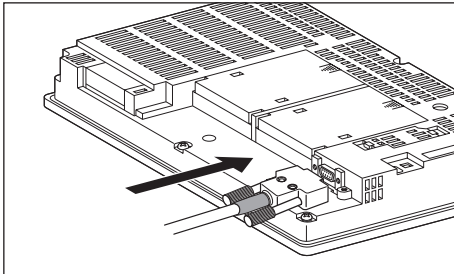
 GT15 Serial Communication Unit User's Manual

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

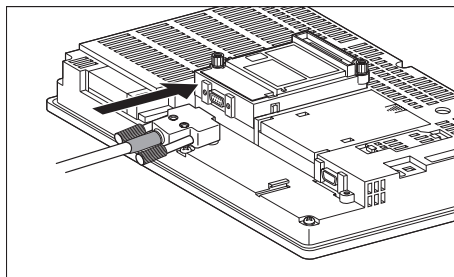- connection to the RS-232 communication unit



- 2 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

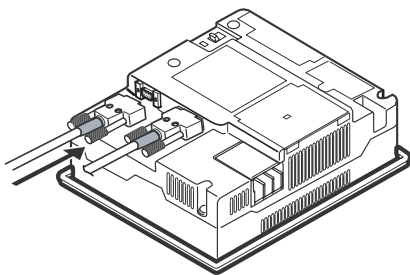(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

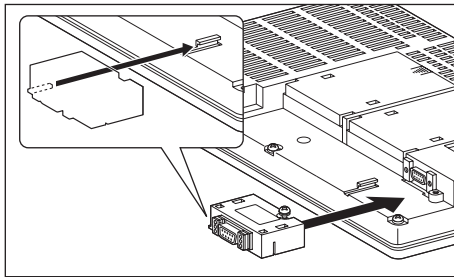- connection to the RS-422 interface




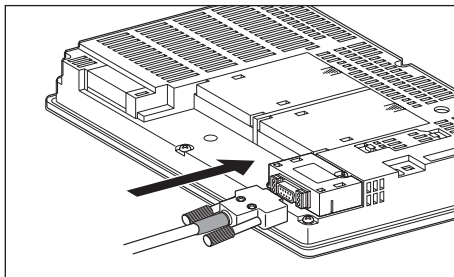- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

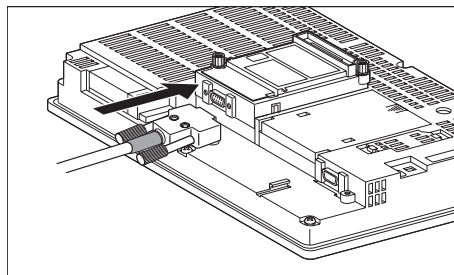- connection to the RS-422/485 communication unit



- 3 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

 GT15 RS-422 Conversion Unit User's Manual

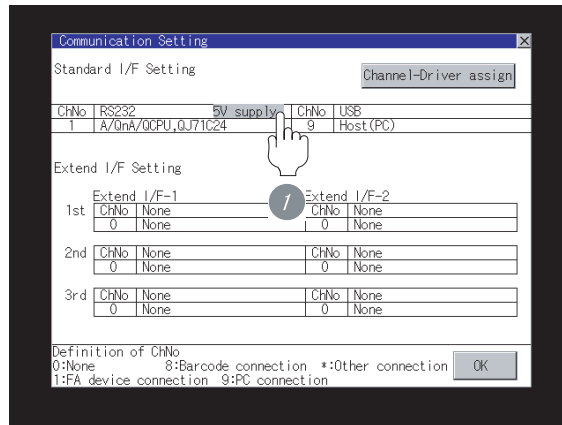


When using the RS-422 conversion unit


On [Communication Settings] on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT.
For details on the utility, refer to the following manual:

GT □ User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to [YES].

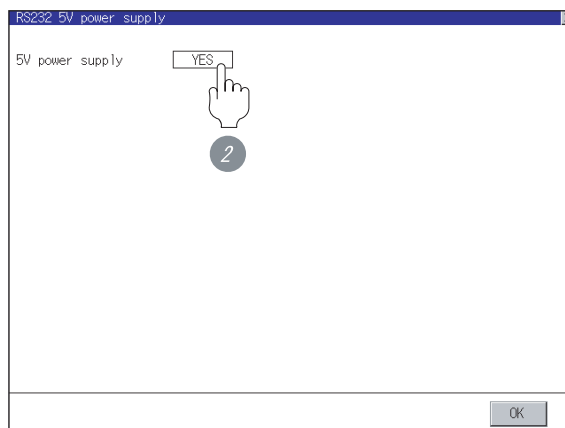

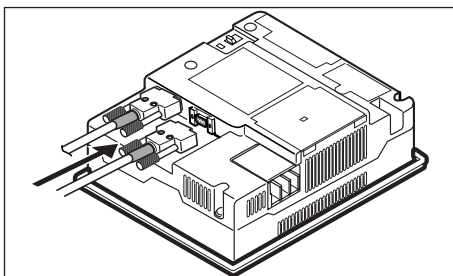(b) In the case of the GT11



1 Connect the RS-422 cable to the RS-422 interface on the GOT.

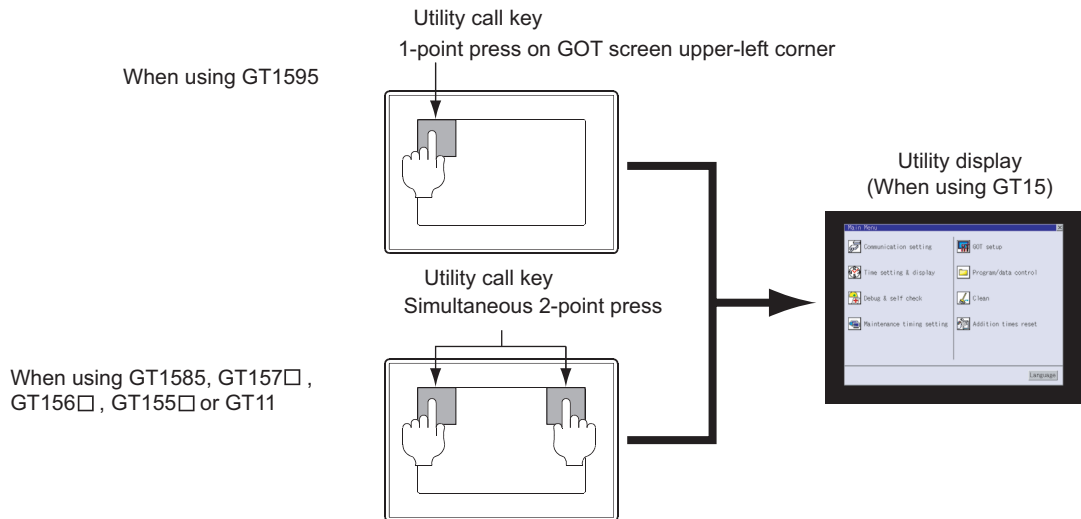
20.1.11 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)



Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

☞ GT□ User's Manual

17

CONNECTION TO
FUJIFA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

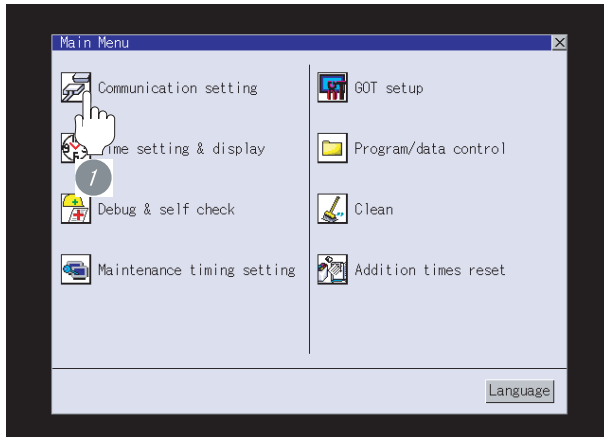
CONNECTION TO
SIEMENS PLC

23


MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER



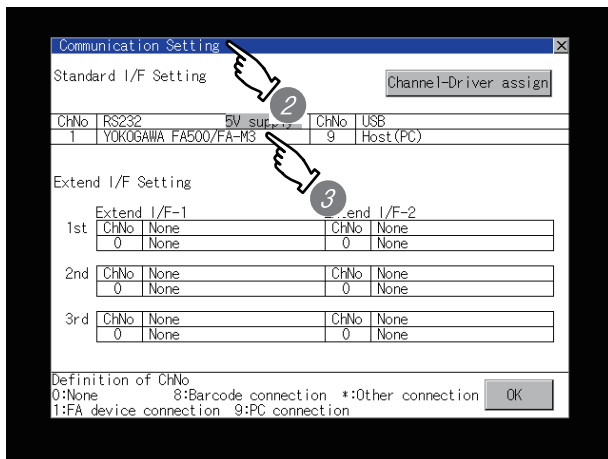- 1 After powering up the GOT, touch [Main Menu] → [Communication Settings] from the Utility.



- 2 The [Communication Settings] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver: YOKOGAWA FA500/FA-M3
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 20.1.5 Preparatory Procedure for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

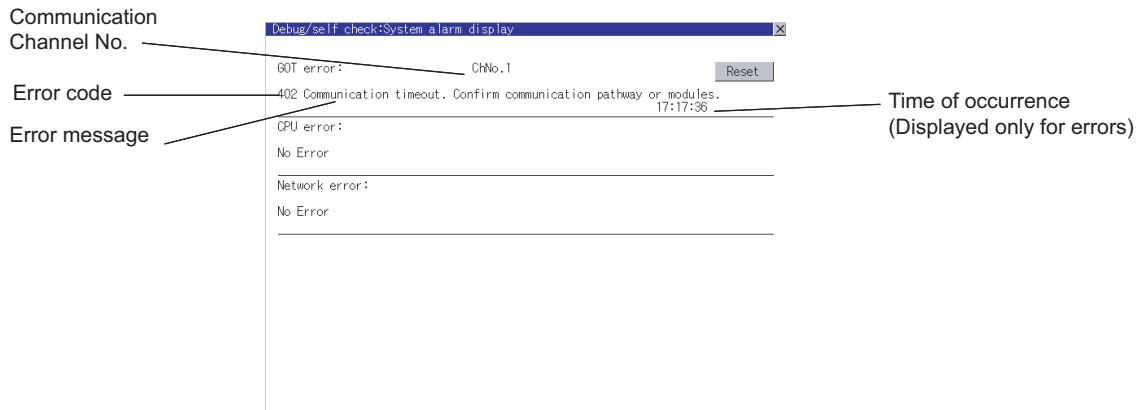
20.1.12 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)




Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.


For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

2 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.

Confirm if the PLC side setting is correct.

 Section 20.1.13 PLC side setting


All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

20.1.13 PLC side setting



YOKOGAWA PLC

For details of YOKOGAWA PLCs, refer to the following manuals.



 Manuals for YOKOGAWA PLCs

Model		Reference
CPU port/D-Sub 9-pin conversion cable	KM10-0C	Section 20.1.14
PC link module	F3LC01-1N	Section 20.1.15
	F3LC11-1N	
	F3LC11-2N	
	F3LC11-1F	Section 20.1.16
	F3LC12-1F	
	LC01-0N	Section 20.1.17
LC02-0N		
STARDOM		Section 20.1.18

20.1.14 Connecting CPU port/D-sub 9-pin conversion cable

1 Setting of PLC CPU

Make the PLC CPU settings, displaying [Configuration] → [Communication Settings] with the program development tool or the ladder-programming tool.

Item	Setting				
Communication mode* ¹	Set the communication mode of the CPU (transmission speed and data format). Set the transmission speed and data format according to settings of the transmission speed, data length, parity and stop bit on the GOT side. For details on these GOT side settings, refer to the following.  Section 20.1.8 Setting communication interface (Communication settings)				
		Transmission speed and data format			
	Item	Transmission speed	Data length	Parity	Stop bit
	Communication mode 0	9600bps	8 bits	Even	1 bit
	Communication mode 1	9600bps	8 bits	None	1 bit
	Communication mode 2	19200bps	8 bits	Even	1 bit
	Communication mode 3	19200bps	8 bits	None	1 bit
	Communication mode 4	38400bps	8 bits	Even	1 bit
	Communication mode 5	38400bps	8 bits	None	1 bit
	Communication mode 6	57600bps	8 bits	Even	1 bit
	Communication mode 7	57600bps	8 bits	None	1 bit
	Communication mode 8	115200bps	8 bits	Even	1 bit
Communication mode 9	115200bps	8 bits	None	1 bit	
CPU PC link function settings	Set the following when using the CPU programming port as the PC link function. Make the checksum setting according to the sum check setting on the GOT side. For the sum check setting on the GOT side, refer to the following.  Section 20.1.8 Setting communication interface (Communication settings)				
	Item	Setting			
	Use of PC link function	Mark. (Use enabled)			
	Checksum	Mark. (ON) Do not mark. (OFF)			
	End character	Do not mark. (OFF)			
Protect function	Do not mark. (OFF)				

*1 The communication mode that can be selected differs according to the CPU.

20.1.15 Connecting PC link module (F3LC01-1N, F3LC11-1N, F3LC11-2N)

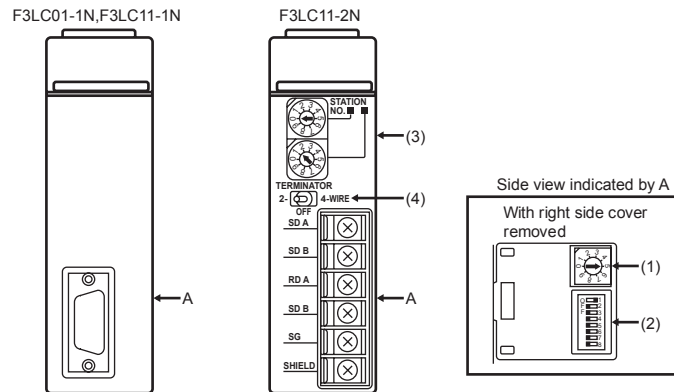
1 Switch setting on the PC link module

Set the switches accordingly.



Switch setting

Set the switches before mounting the PC link module to the base unit.



(1) Transmission speed switch

Set the same transmission speed as that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

➡ Section 20.1.8 Setting communication interface (Communication settings)



Setting *1	Transmission speed
4	4800bps
5	9600bps
6	19200bps

*1 Only transmission speeds available on the GOT side are shown.

(2) Data format setting switch

Set the data length, parity, stop bit and checksum consistent with the corresponding settings on the GOT side.

For the settings on the GOT side, refer to the following.

➡ Section 20.1.8 Setting communication interface (Communication settings)



Switch No.	Description	Setting
1	Data length	ON (8 bits), OFF (7 bits)
2	Parity	ON, OFF
3		ON (even), OFF (odd)
4	Stop bit	ON (2 bits), OFF (1 bit)
5	Checksum	ON, OFF
6	End character specification	OFF (none)
7	Protect function	OFF (disabled)
8	—	OFF

(3) Station No. switch (F3LC11-2N only)



Rotary switch	Description	Setting
1)	Station No. (10's digit)	0
2)	Station No. (1's digit)	1

(4) Terminator switch (F3LC11-2N only)



Setting	Description
4-WIRE	Resistor connected (4-wire type)

20.1.16 Connecting PC link module (F3LC11-1F, F3LC12-1F)

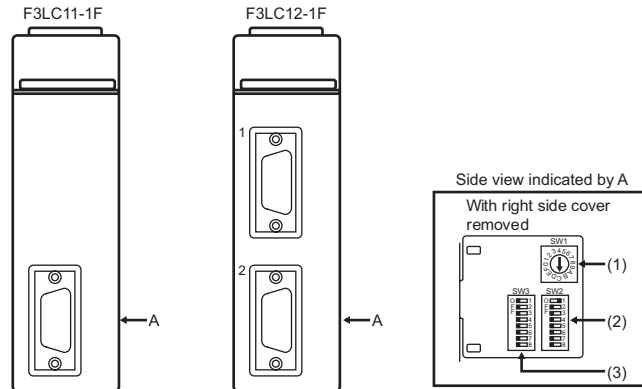
1 Switch setting on the PC link module

Set the switches accordingly.



Switch setting

Set the switches before mounting the PC link module to the base unit.



(1) Transmission speed switch (SW1)

Set the same transmission speed setting as that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

☞ Section 20.1.8 Setting communication interface (Communication settings)



Setting *1	Transmission speed
4	4800bps
5	9600bps
7	19200bps
9	38400bps
A	57600bps
C	115200bps

*1 Only transmission speeds available on the GOT side are shown.

(2) Data format switch (SW2)

Set the character length, parity, stop bit and checksum consistent with the corresponding settings on the GOT side.

For the settings on the GOT side, refer to the following.

☞ Section 20.1.8 Setting communication interface (Communication settings)



Switch No.	Description	Setting
1	Character length	ON (8 bits), OFF (7 bits)
2	Parity	ON, OFF
3		ON (even), OFF (odd)
4	Stop bit	ON (2 bits), OFF (1 bit)
5	Checksum	ON, OFF
6	End character specification	OFF
7	Protect function	OFF (disabled)
8	Security function	OFF (disabled)

(3) Module function switch (SW3)



Switch No.	Description	Setting
1 to 6	User setting inhibited	OFF
7	Modem compatibility	OFF (not compatible)
8	External modem	OFF (none)

17

CONNECTION TO
FUJIFA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23

MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

20.1.17 Connecting PC link module (LC01-0N, LC02-0N)

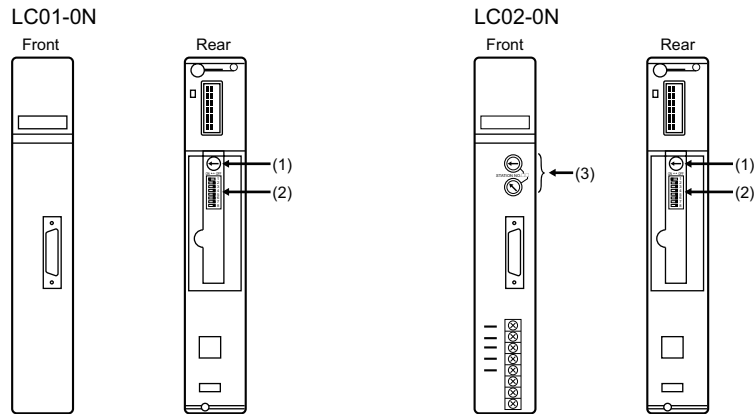
1 Switch setting on the PC link module

Set the switches accordingly.



Switch setting

Set the switches before mounting the PC link module to the base unit.




(1) Transmission speed switch

Set the same transmission speed as that of the GOT side.

For the transmission speed setting on the GOT side, refer to the following.

Section 20.1.8 Setting communication interface (Communication settings)



Setting ^{*1}	Transmission speed
4	4800bps
5	9600bps
6	19200bps

^{*1} Only transmission speeds available on the GOT side are shown.

(2) Data format switch

Set the data length, parity, stop bit and checksum consistent with the corresponding settings on the GOT side.

For the settings on the GOT side, refer to the following.

Section 20.1.8 Setting communication interface (Communication settings)



Switch No.	Description	Setting
1	Data length	ON (8 bits), OFF (7 bits)
2	Parity	ON, OFF
3		ON (even), OFF (odd)
4	Stop bit	ON (2 bits), OFF (1 bit)
5	Checksum	ON, OFF
6	End character specification	OFF
7	Protect function	OFF (disabled)
8	—	OFF

(3) Station No. switch (LC02-0N only)



Rotary Switch	Description	Setting	
		RS-232 communication	RS-422 communication
1)	Station No. (10's digit)	0	0
2)	Station No. (1's digit)	1	2

17

CONNECTION TO FUJIFA PLC

18

CONNECTION TO MATSUSHITA PLC

19

CONNECTION TO YASKAWA PLC

20

CONNECTION TO YOKOGAWA PLC

21

CONNECTION TO ALLEN-BRADLEY PLC

22

CONNECTION TO SIEMENS PLC

23

MICROCOMPUTER CONNECTION

24

CONNECTION TO OMRON TEMPERATURE CONTROLLER

20.1.18 Connecting to STARDOM

Make the communication settings as shown below. For details of the communication settings, refer to the following manual.

 Peripheral Software Manual for YOKOGAWA PLC



Connection between STARDOM and the PC for communication settings

For the communication settings of STARDOM, STARDOM and the PC for communication settings must be connected to Ethernet using the Resource Configurator (peripheral software).

1 COM port setting


Make the settings on the FCX Maintenance Page for STARDOM.

- 1 Select "Reboot (Maintenance Mode)" on the Reboot screen of the FCX Maintenance Page to set the maintenance mode.
- 2 Set the COM1 port driver to be used. Execute "JEROS Basic Setting File" from the "Edit System Setting File" screen on the FCX Maintenance Page.
Confirm that the line of "Com1SioDriver" is as follows.
Com1SioDriver =DUONUS_SIO
- 3 Set the COM1 port to be used. Execute "COM1 Port Setting File" from the "Edit System Setting Files" screen on the FCX Maintenance Page. Make the settings as follows according to the communication specifications on the setting screen.
Leave the settings as default if not listed on the communication setting items.

(Communication setting items) () in the table shows the names on the FCX Maintenance Page.

Item	Set value
Transmission speed (Baudrate) *1	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data length (DataBitLength) *1	8 bits or 7 bits
Stop bit (StopBitLength) *1	1 bit or 2 bits
Parity bit (Parity) *1	none/odd/even

Baudrate =*1
 DataBitLength =*1
 StopBitLength =*1
 Parity =*1
 FifoMode =YES
 InitialDTRState =ON
 SendFlowControlMode =CTS
 ReceiveFlowControlMode =DTR

*1: Adjust the settings with GOT communication settings. ( Section 20.1.8 Setting communication interface (Communication settings))

- 4 Select "Reboot (Online Mode)" on the "Reboot" screen of the FCX Maintenance Page to set the online mode.

2 Defining Logic POU

Define Logic POU using Logic Designer (peripheral software), and download the project to STARDOM. For the detail procedures of communication settings, refer to the following manual.

 Peripheral Software Manual for YOKOGAWA PLC

- 1 Start Logic Designer and create a new project using a template.
Use "STARDOM Serial Communication" template.

- 2 Insert FA-M3 Emulator Firmware Library to the new project.
The library path inserted in the procedures above is as follows.

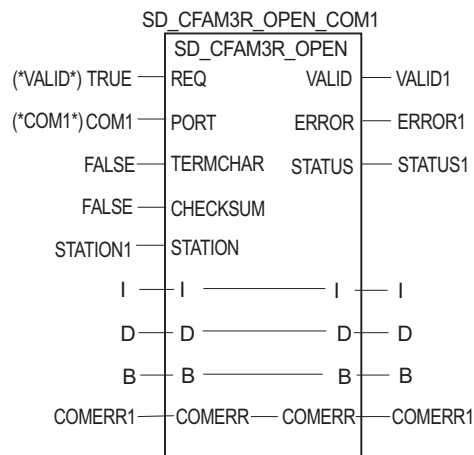
{Install Folder}\LogicDesigner\Mwt\Plc\Fw_lib\SD_FCXP_LCR_LIB\SD_FCXP_LCR_LIB.fwl

- 3 Insert FA-M3 Emulator User Library to the new project.
The library path inserted in the procedures above is as follows.

{Install Folder}\LogicDesigner\Libraries\SD_CFAM3R_PF.mwt

- 4 Copy a sample project POU to the new project.
For the following terminals, set as shown below.

REQ terminal : TRUE
 TERMCHAR terminal : FALSE
 PORT terminal : COM1
 STATION terminal : STATION1



(Definition example of Logic POU)

- 5 Defining the instance
Instantiate Logic POU. Define an already defined instance to Task0 .
- 6 Defining Target Setting
Define the IP address or host name of STARDOM for which the communication settings are made.
- 7 Downloading the project
When the download is completed, start STARDOM.


20.1.19 Precautions

1 Device range

When performing monitoring with the GOT connected to a YOKOGAWA PLC and setting devices for objects, use devices within the device range of the YOKOGAWA PLC.

When a device outside the range is set on an object, an indefinite value is displayed on the object. (No error is displayed in the system alarm.)

For details on the device range of YOKOGAWA PLCs, refer to the following manual:

 User's Manual for the YOKOGAWA PLC

2 Connecting to STARDOM

(1) Redundant system

When STARDOM is configured with a redundant system, the connection is not supported.

(2) System alarm

The PLC error does not appear in the system alarm.

(3) GOT clock function

Since the STARDOM does not have a clock function, the settings of [time adjusting] or [time broadcast] by GOT clock control will be disabled.

20.2 Ethernet Connection



Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of ① System configuration and connection conditions correspond to the numbers (e.g. ①) of ② System equipment.

Use these numbers as references when confirming models and applications.

20.2.1 System configuration(FA-M3)



① System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
TCP: 10 UDP: 128 (recommended to 16 units or less)	100m or less*2	<p>② Ethernet interface module</p> <p>*1</p> <p>③ Twisted pair cable</p> <p>①</p>

*1 The destination connected with the twisted pair cable varies with the configuration of the applicable Ethernet network system.
Connect to the Ethernet module, hub, transceiver or other system equipment corresponding to the applicable Ethernet network system.
Use cables, connectors, and hubs that meet the IEEE802.3 10BASE-T/100BASE-TX standard.


*2 A length between a hub and a node.

② System equipment

(1) GOT


Image	No.	Name	Model name
	①	Ethernet communication unit • For Ethernet communication	GT15-J71E71-100

(2) PLC

Image	No.	Name	Model
	2	Ethernet interface module	F3LE01-5T, F3LE11-0T, F3LE12-0T


2 is a product manufactured by YOKOGAWA Electric Corporation. For details of this product, contact YOKOGAWA Electric Corporation.

(3) Cable

Image	No.	Name	Model
	3	Twisted pair cable	Shielded twisted pair cable (STP) or unshielded twisted pair cable in category (UTP): 3, 4 and 5

20.2.2 Preparatory procedures for monitoring

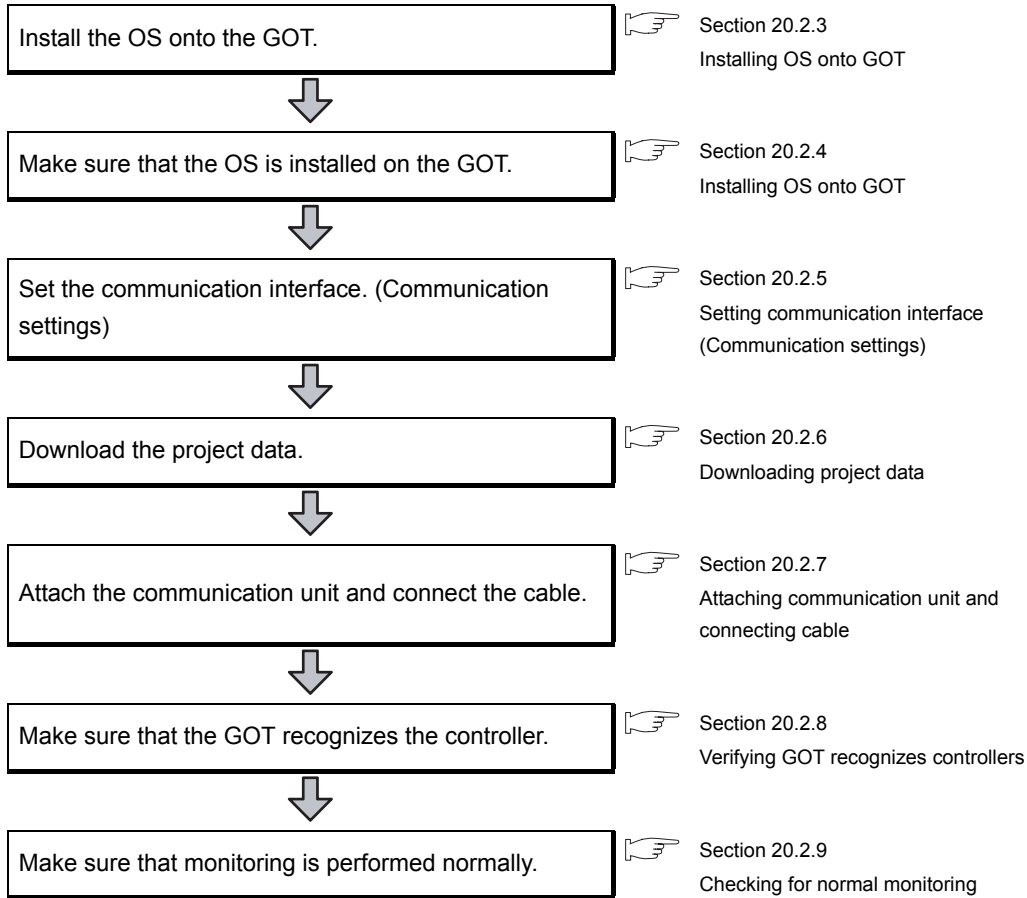The following shows the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the PLC side setting


This section explains the GOT side setting.


When confirming the PLC side settings, refer to the following.

Section 20.2.10 PLC side setting

20.2.3 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

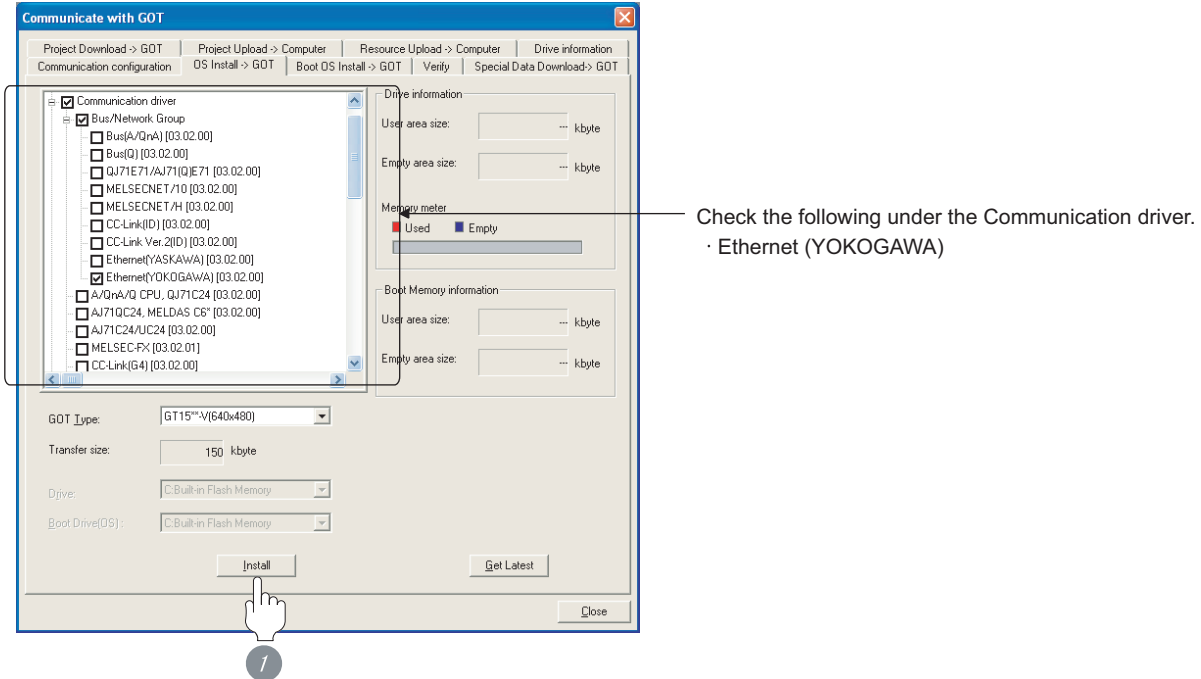
 GT Designer2 Version Basic Operation/Data Transfer Manual




- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

20.2.4 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

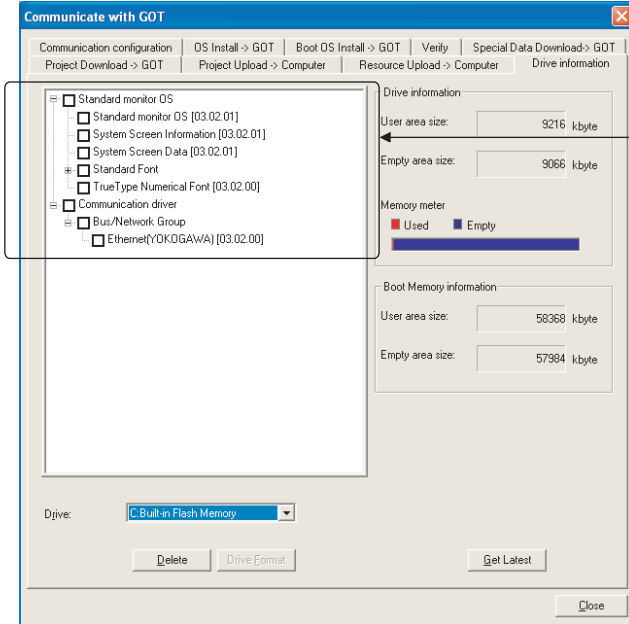 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver: Ethernet (YOKOGAWA)

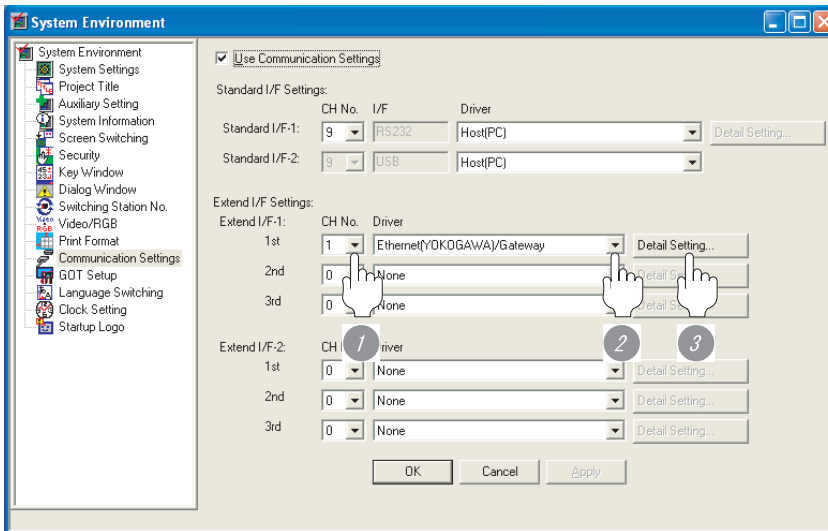
20.2.5 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] and [Ethernet] of GT Designer2.

Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] and [Ethernet] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set [1] to the channel No. used.
- 2 Set the driver to [Ethernet(YOKOGAWA)/Gateway].
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)


2 Communication detail settings

Item	Description	Range
GOT NET No.	Set the network No. of the GOT. <Default: 1>	1 to 239
GOT PC No.	Set the station No. of the GOT. <Default: 1>	1 to 64
GOT IP Address	Set the IP address of the GOT. <Default: 192.168.0.18>	0.0.0.0 to 255.255.255.255
GOT Port No. (Communication)	Set the GOT port No. for the connection with the controller. <Default: 5017>	1024 to 5010, 5014 to 65534 (Except for 5011, 5012 and 5013)
Default Gateway	Set the router address of the default gateway where the GOT is connected. (Only for connection via router) <Default: 0.0.0.0>	0.0.0.0 to 255.255.255.255
Subnet Mask	Set the subnet mask for the sub network. (Only for connection via router) If the sub network is not used, the default value is set. <Default: 255.255.255.0>	0.0.0.0 to 255.255.255.255
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. <Default: 3 Sec>	3 to 255 Sec
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 90 Sec
Delay Time	Set the delay time for reducing the load of the network/destination PLC. <Default: 0ms>	0 to 10000 (10 ms)




Example of communication detail settings

For examples of communication detail settings, refer to the following.

 Section 20.2.10 PLC side setting

3 Ethernet setting

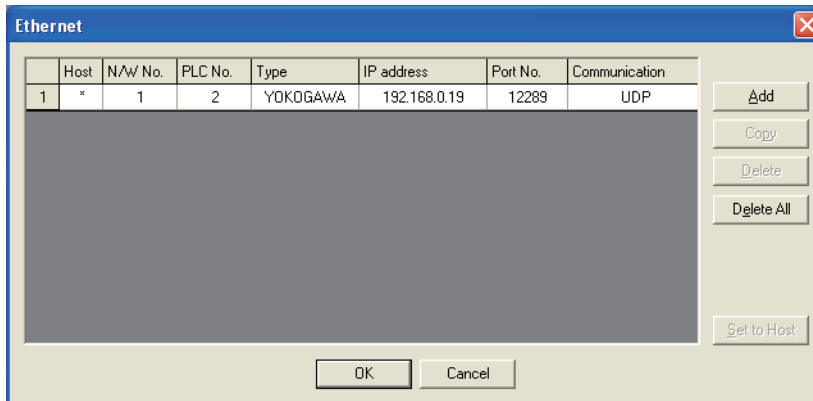(1) Ethernet setting



Item	Description	Setting
Host	The host is displayed. (The host is indicated with an asterisk (*).)	-
N/W No.	Set the network No. of the connected Ethernet module. <Default: blank>	1 to 239
PLC No.	Set the station No. of the connected Ethernet module. <Default: blank>	1 to 64
Type	YOKOGAWA (fixed)	YOKOGAWA (fixed)
IP address	Set the IP address of the connected Ethernet module. <Default: blank>	PLC side IP address
Port No.	Set the port No. of the connected Ethernet module. <Default: 12289>	12289, 12291
Communication	Select a communication protocol. <Default: UDP>	UDP, TCP



Example of Ethernet setting

For examples of Ethernet setting, refer to the following.

☞ Section 20.2.10 PLC side setting



- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's [Communication Settings] after downloading [Communication Settings] of project data.

For details on the Utility, refer to the following manual.


 GT □ User's Manual

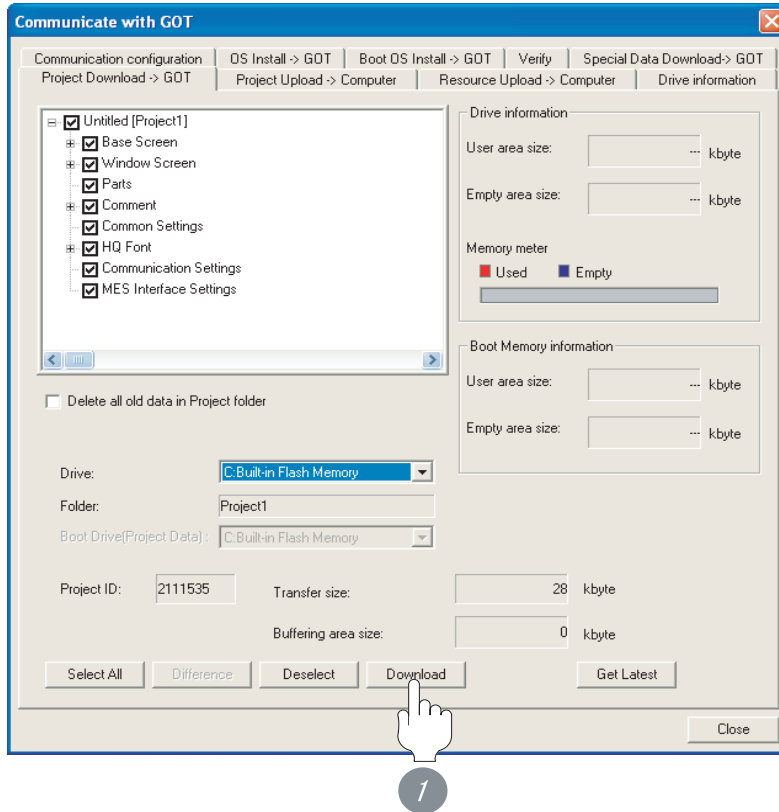
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

20.2.6 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


20.2.7 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

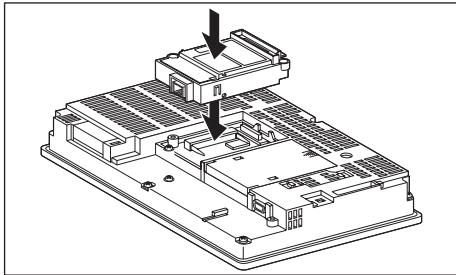1 Attaching the communication unit



- 1 Attach the Ethernet communication unit to the extension unit connector on the GOT.

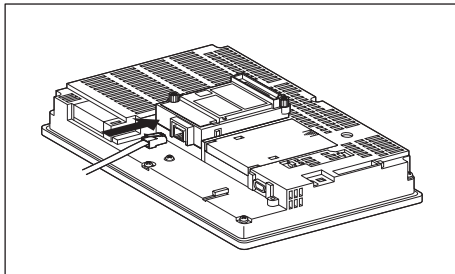


Ethernet communication unit

For details on the Ethernet communication unit, refer to the following manual:

 GT15 Ethernet Communication Unit User's Manual

2 Connecting the cable



- 1 Connect the twisted pair cable to the Ethernet communication unit.

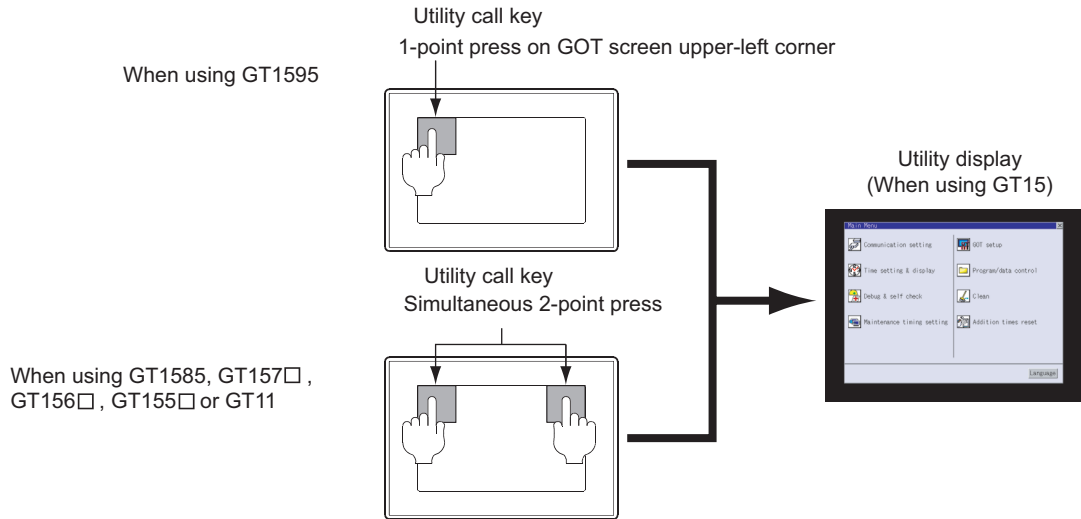
20.2.8 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)



Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

☞ GT□ User's Manual

17

CONNECTION TO
FUJIFXA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

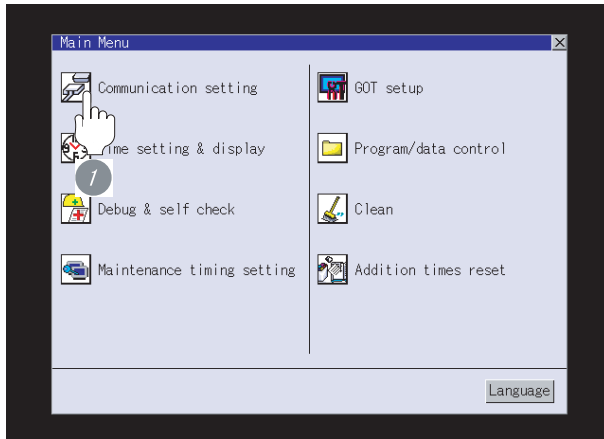
CONNECTION TO
SIEMENS PLC

23


MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER



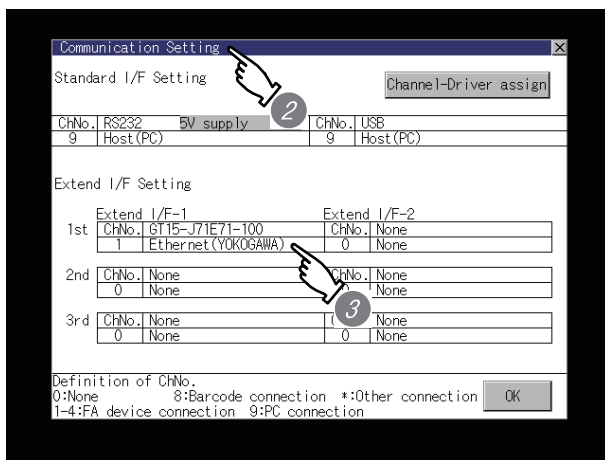- 1 After powering up the GOT, touch [Main Menu] → [Communication Settings] from the Utility.



- 2 The [Communication Settings] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver: Ethernet (YOKOGAWA)
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 20.2.2 Preparatory procedures for monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

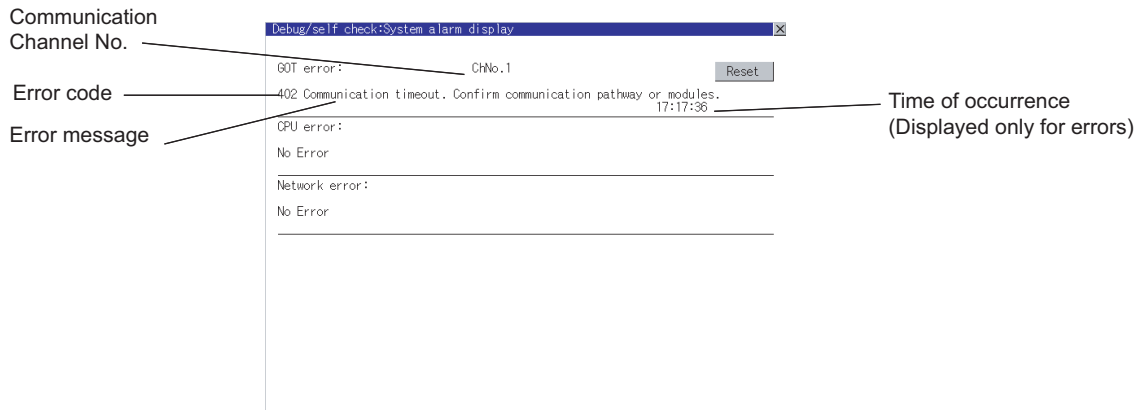
20.2.9 Checking for normal monitoring

1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

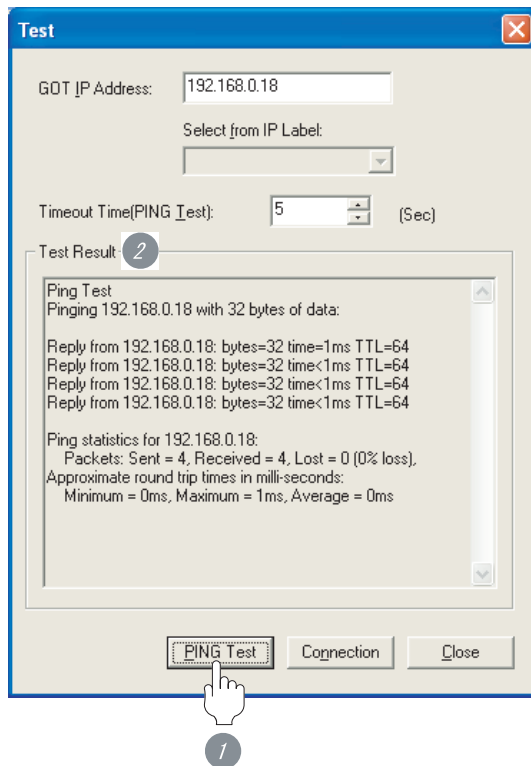
 GT Designer2 Version □ Screen Design Manual

2 Confirming the communication state of GOT

- (1) When using the Command Prompt of Windows®
Execute a Ping command at the Command Prompt of Windows®.
 - (a) When normal communication
C:\>Ping 192.168.0.18
Reply from 192.168.0.18: bytes=32 time<1ms TTL=64
 - (b) When abnormal communication
C:\>Ping 192.168.0.18
Request timed out.

(2) When using the [PING Test] of GT Designer2

Select [Communication] → [Communication configuration] → [Ethernet] and **Test** to display [PING Test].



- 1 Specify the [GOT IP address] of the [PING Test] and click on the **PING Test** button.
- 2 The [Test Result] is displayed after the [PING Test] is finished.

(3) When abnormal communication

At abnormal communication, check the followings and execute the Ping command again.

- Mounting condition of Ethernet communication unit
- Cable connecting condition
- Confirmation of [Communication Settings]
- IP address of GOT specified by Ping command

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.

Confirm if the PLC side setting is correct.

☞ Section 20.2.10 PLC side setting

4 Confirming the communication state to each station (station monitoring function)

The station monitoring function detects the faults (communication timeout) of the stations monitored by the GOT.

When detecting the abnormal state, it is confirming the response by executing a Ping command to the faulty station.

The station monitoring state can be confirmed by using GOT internal device.

(1) Station monitoring state

(a) No. of faulty station (GS230)

Total No. of the faulty CPU are stored.

The station No. of faulty stations are stored to GS231 through GS238. (b) Faulty station information (GS231 to GS238))

Device	b15 to b8	b7 to b0
GS230	(00H fixed)	No. of faulty stations



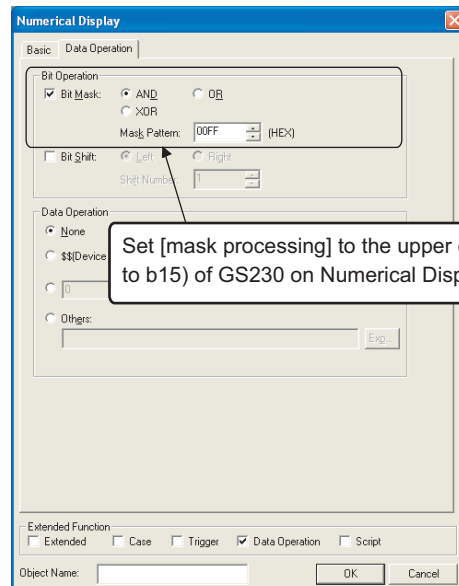
When monitoring GS230 on Numerical Display

When monitoring GS230 on Numerical Display, check [mask processing] with data operation tab as the following.

For the data operation, refer to the following manual.

GT Designer2 Version□ Screen Design Manual

<Numerical Display (Data Operation tab)>



(b) Faulty station information (GS231 to GS238)

- The bit of the Ethernet setting No. corresponding to the faulty station is set.
 0: Normal
 1: Abnormal
- The bit is reset after the fault is recovered.

GS231 bit 0 . . .
 GS231 bit 1 . . .
 GS231 bit 2 . . .
 GS231 bit 3 . . .

Ethernet								
	Host	N/W No.	PLC No.	Type	IP address	Port No.	Communication	
1	*	1	2	YOKOGAWA	192.168.0.19	12289	UDP	Add
2		1	3	YOKOGAWA	192.168.0.20	12289	UDP	Copy
3		1	4	YOKOGAWA	192.168.0.21	12289	UDP	Delete
4		1	5	YOKOGAWA	192.168.0.22	12289	UDP	Delete All

Device	Ethernet setting No.															
	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
GS231	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
GS232	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
GS233	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33
GS234	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49
GS235	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65
GS236	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81
GS237	112	111	110	109	108	107	106	105	104	103	102	101	100	99	98	97
GS238	128	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113

All settings related to communications are complete now.
 Create screens on GT Designer2 and download the project data again.

20.2.10 PLC side setting



YOKOGAWA PLC

For details of YOKOGAWA PLCs, refer to the following manuals.

Manuals for YOKOGAWA PLCs

Model		Reference
Ethernet interface module	F3LE01-5T	Section 20.2.11
	F3LE11-0T	
	F3LE12-0T	Section 20.2.12

20.2.11 Connecting to Ethernet Interface Module (F3LE01-5T, F3LE11-0T)

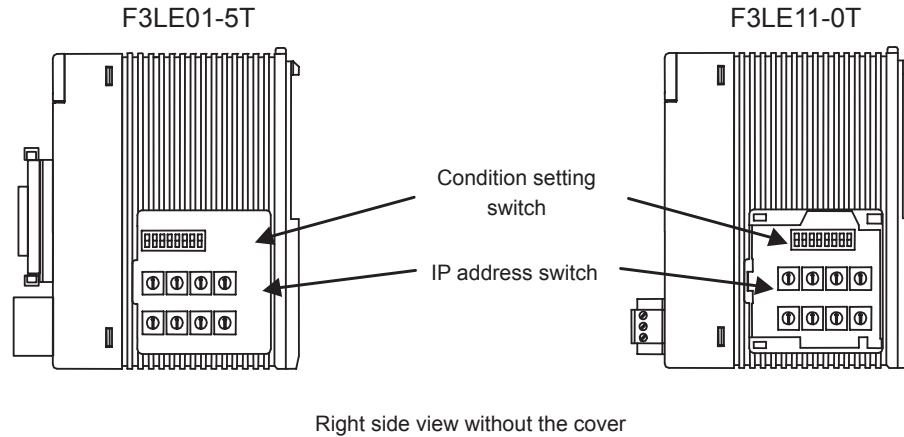
1 Switch settings of Ethernet Interface Module

Set the switches.




Switch setting

Set the switches before mounting the Ethernet Interface Module on the base unit.



(1) IP address switch

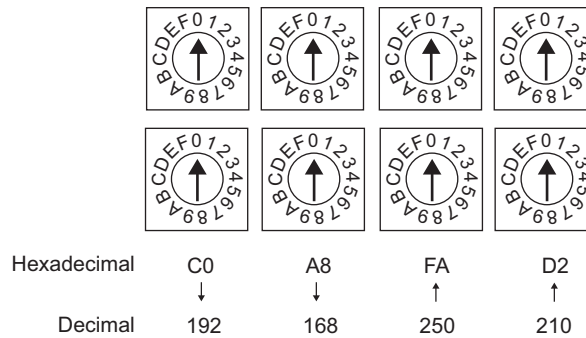Set the IP address with eight Hex rotary switches on the side of the base unit.



(2) Communications condition switch

Set the data format, write protection, line processing at TCP timeout error or operation mode with the DIP switch on the side of the base unit.



Switch No.	Description	Setting
1	Data code	ON (binary), OFF (ASCII)
2	Write protect	ON (protect) OFF (not protect)
3	Always set to off	ON (not available), OFF (always)
4		
5		
6		
7	Line processing on TCP timeout*1	ON (not close the line) OFF (close the line)
8	Loopback test	ON (test operation), OFF (normal operation)

*1 Applicable to only F3LE01-5T.

20.2.12 Connecting to Ethernet Interface Module (F3LE12-0T)

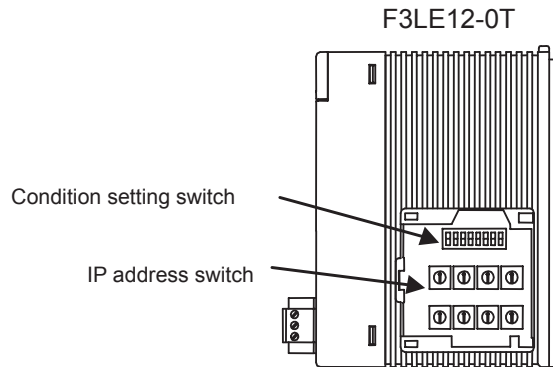
1 Switch settings of Ethernet Interface Module

Set the switches.



Switch setting


Set the switches before mounting Ethernet Interface Module on the base unit.



Right side view with the cover

(1) IP address switch

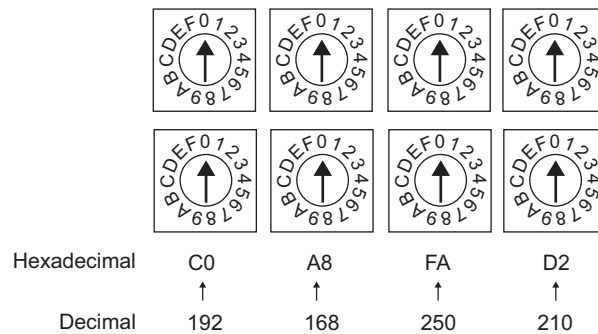Set the IP address with eight Hex rotary switches on the side of the base unit.



(2) Communications condition switch

Set the data format, write protection, line processing at TCP timeout error or operation mode with the DIP switch on the side of the base unit.



Switch No.	Description	Setting
1	Data code	ON (binary), OFF (ASCII)
2	Write protect	ON (protect), OFF (not protect)
3	Always set to off	ON (not available), OFF (always)
4		
5		
6		
7	Loopback test	ON (test operation), OFF (normal operation)
8		


20.2.13 Precautions

1 Device range

When performing monitoring with the GOT connected to a YOKOGAWA PLC and setting devices for objects, use devices within the device range of the YOKOGAWA PLC.

When a device outside the range is set on an object, an indefinite value is displayed on the object. (No error is displayed in the system alarm.)

For details on the device range of YOKOGAWA PLCs, refer to the following manual:

 Manuals for YOKOGAWA PLCs

2 When setting IP address

Do not use "0" and "255" at the end of an IP address.

(Numbers of *.**.0 and *.**.255 are used by the system.)

The GOT may not monitor the controller correctly with the above numbers.

Consult with the administrator of your network before setting an IP address to the GOT and controller.

3 When connecting to multiple GOTs

(1) Setting PLC No.

When connecting two or more GOTs in the Ethernet network, set each [PC No.] to the GOT.

 Section 20.2.5 Setting communication interface (Communication settings)

(2) Setting IP address

Do not use the IP address [192.168.0.18] when using multiple GOTs.

A communication error may occur on the GOT with the IP address.

4 When connecting to the multiple network equipments (including GOT) in a segment

By increasing the network load, the transmission speed between the GOT and PLC may be reduced.

The following actions may improve the communication performance.

- Using a switching hub
- More high speed by 100BASE-TX (100Mbps)
- Reduction of the monitoring points on GOT

20.3 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
YOKOGAWA PLC connection	<ul style="list-style-type: none"> Supporting the connecting to STARDOM Extending the device range of FA-M3 	2.32J	Communication driver YOKOGAWA FA500/FA-M3/ STARDOM [03.00.**]
YOKOGAWA PLC connection	Supporting the F3RP66 and F3RP67 connection	2.47Z	Communication driver YOKOGAWA FA500/FA-M3/ STARDOM [03.02.**] Ethernet (YOKOGAWA) [03.02.**]
YOKOGAWA PLC connection	Supporting the Ethernet connection	2.47Z	Communication driver Ethernet (YOKOGAWA) [03.02.**]

17

CONNECTION TO
FUJIFA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23

MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

CONNECTION TO ALLEN-BRADLEY PLC

21.1 Serial Connection page 21-2

This section describes the equipment and cables needed for RS-232/RS-422 connection.



Select a system suitable for your application.

21.2 Ethernet Connection page 21-32

This section describes the equipment and cables needed when connecting to Ethernet.



21.3 List of Functions Added by Version Upgrade page 21-49

This section describes the functions added by version upgrade of GT Designer2 or OS.

21.1 Serial Connection



Select a system configuration suitable for your application.

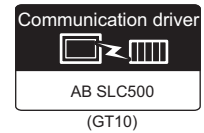


Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.

Use these numbers as references when confirming models and applications.

21.1.1 System Configuration (SLC500 Series)









1 System configuration and connection conditions

Connection conditions		System configuration
No. of GOTs	Distance	
1	15m or less	<div style="text-align: right;"> </div>
		<div style="text-align: right;"> </div>
		<div style="text-align: right;"> </div>


* GT10 cannot connect with the following PLCs.
 SLC500-20, SLC500-30, SLC500-40, SLC5/01, SLC5/02

2 System equipment

(1) GOT

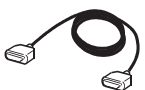


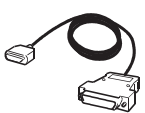






Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)    (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 


(2) PLC

Image	No.	Name	Model name
	2	Adapter	1770-KF3

2 is a product manufactured by Allen-Bradley Co., Inc. For details of this product, contact Allen-Bradley Co., Inc.

(3) Cable

Image	No.	Name	Model
	3	RS-232 cable 1)*1 • Between CPU and GOT	GT09-C30R20701-9S(3m)  
	4	RS-232 cable 2)*1 • Between Adapter and GOT	(To be prepared by the user.  Section 21.1.4 Connection Cable)  
	5	RS-232 cable 5) Between CPU and GOT	To be prepared by the user.  Section 21.1.4 Connection Cable  (RS-232)

*1 The RS-232 cable can be prepared by the user. ( Section 21.1.4 Connection Cable)

21.1.2 System Configuration (MicroLogix1000/1200/1500 Series)



1 System configuration and connection conditions


Connection conditions		System configuration	
No. of GOTs	Distance		
1	15m or less	<p>3 RS-232 cable 3)</p> <p>MAX15m</p>	
		<p>DH485 network</p> <p>2 Adapter</p> <p>4 RS-232 cable 2)</p> <p>MAX15m</p>	
		<p>3 RS-232 cable 3)</p> <p>5 RS-232 cable 6)</p> <p>MAX14.7m</p> <p>MAX0.3m</p>	 (RS-232)
		<p>6 RS-232 cable 7)</p> <p>MAX15m</p>	 (RS-232)

2 System equipment

(1) GOT

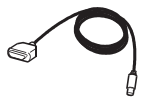



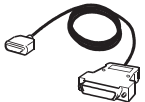








Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P

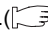
(2) PLC

Image	No.	Name	Model name
	2	Adapter	1770-KF3

2 is a product manufactured by Allen-Bradley Co., Inc. For details of this product, contact Allen-Bradley Co., Inc.


(3) Cable

Image	No.	Name	Model name
	3	RS-232 cable 3)* ¹ • Between CPU and GOT • Between CPU and RS-232 cable 6)	1761-CBL-PM02 cable (Series C or later)    (RS-232)
	4	RS-232 cable 2)* ¹ • Between Adapter and GOT	GT09-C30R20702-9P(3m)   (RS-232)
		RS-232 cable 6) • Between RS-232 cable 3) and GOT	To be prepared by the user.  Section 21.1.4 Connection Cable  (RS-232)
		RS-232 cable 7) • Between CPU and GOT	To be prepared by the user.  Section 21.1.4 Connection Cable  (RS-232)

*1 The RS-232 cable can be prepared by the user. ( Section 21.1.4 Connection Cable)

3 is a product manufactured by Allen-Bradley Co., Inc. For details of this product, contact Allen-Bradley Co., Inc.

21.1.3 System Configuration (Control/Compact/FlexLogix Series)



1 System configuration and connection conditions

Connection conditions		System configuration	
No. of GOTs	Distance		
1	15m or less		

*1 GT10 cannot connect with the Control/Compact/FlexLogix series.

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P

(2) Cable

Image	No.	Name	Model
	2	RS-232 cable 4)* ² • Between CPU and GOT	1747-CP3, 1756-CP3

*2 The RS-232 cable can be prepared by the user. (Section 21.1.4 Connection Cable)

2 is a product manufactured by Allen-Bradley Co., Inc. For details of this product, contact Allen-Bradley Co., Inc.


21.1.4 Connection Cable

The RS-232 cable used for connection between the GOT and PLC needs to be prepared by the user. The following shows each cable connection diagram and relevant connectors.

	Model	Connection cable	
		GT15, GT11	GT10
CPU	SLC500 Series	RS-232 cable 1)	RS-232 cable 5)
	MicroLogix1000/1200/1500 Series	RS-232 cable 3)	RS-232 cable 6) RS-232 cable 7)
	Control/Compact/FlexLogix Series	RS-232 cable 4)	—
Adapter	1770-KF3	RS-232 cable 2)	—


1 Connection diagram

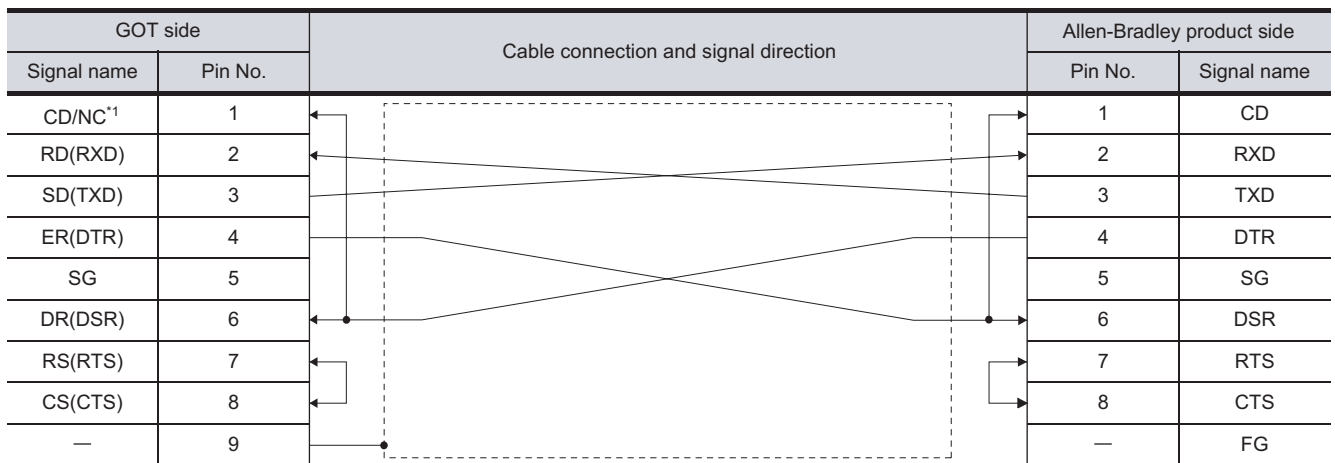(1) RS-232 cable 1) (between CPU (SLC500 Series) and GOT)




*1 GT15 : CD, GT11, NC

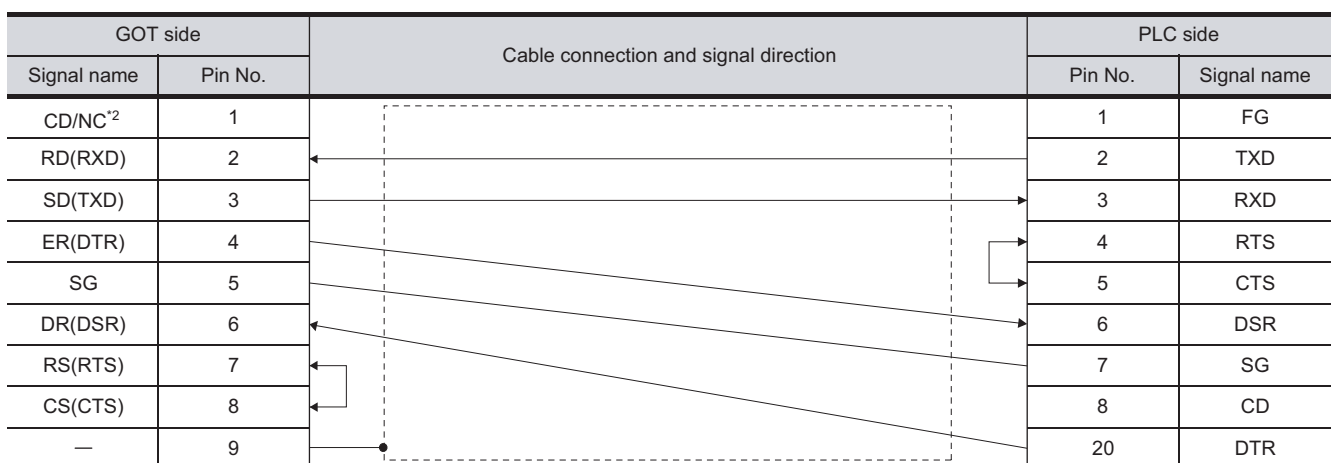(2) RS-232 cable 2) (between Adapter (1770-KF3) and GOT)




*2 GT15 : CD, GT11, NC

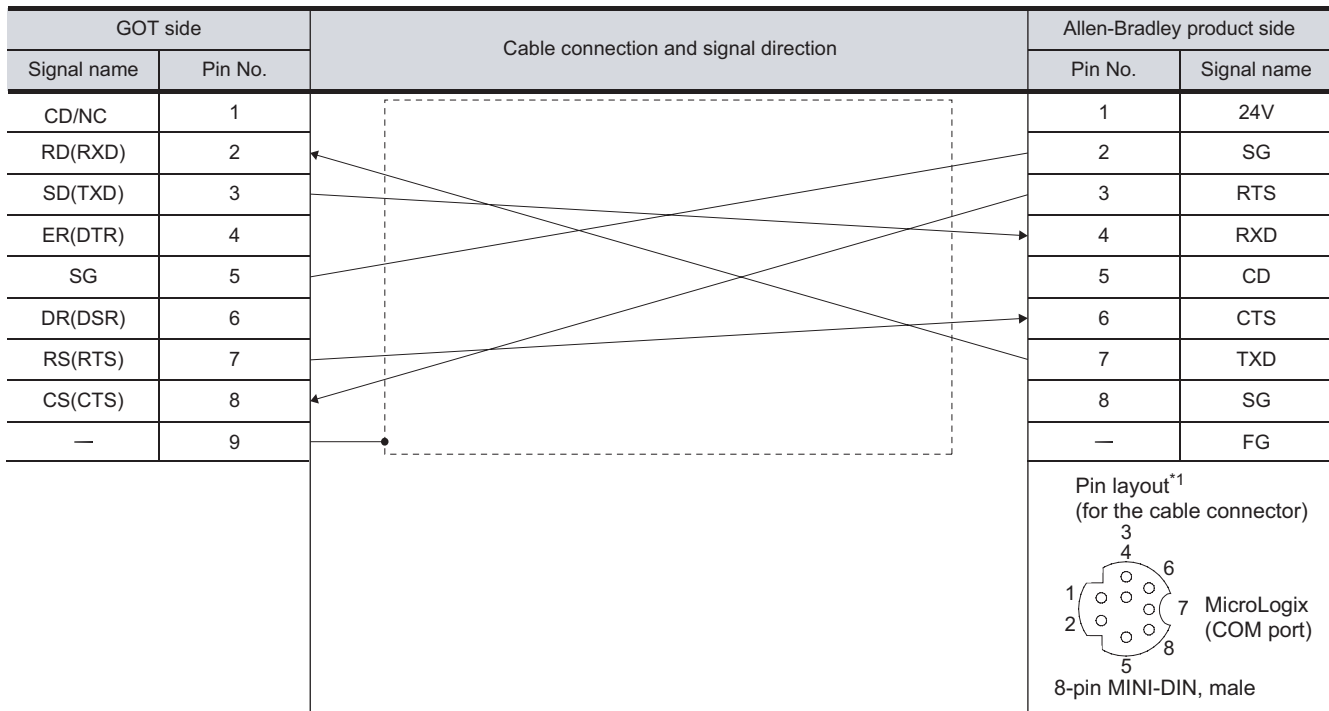(3) RS-232 cable 3) (between CPU (MicroLogix1000/1200/1500 Series) and GOT)



*1 The pin layout shows the engagement face.

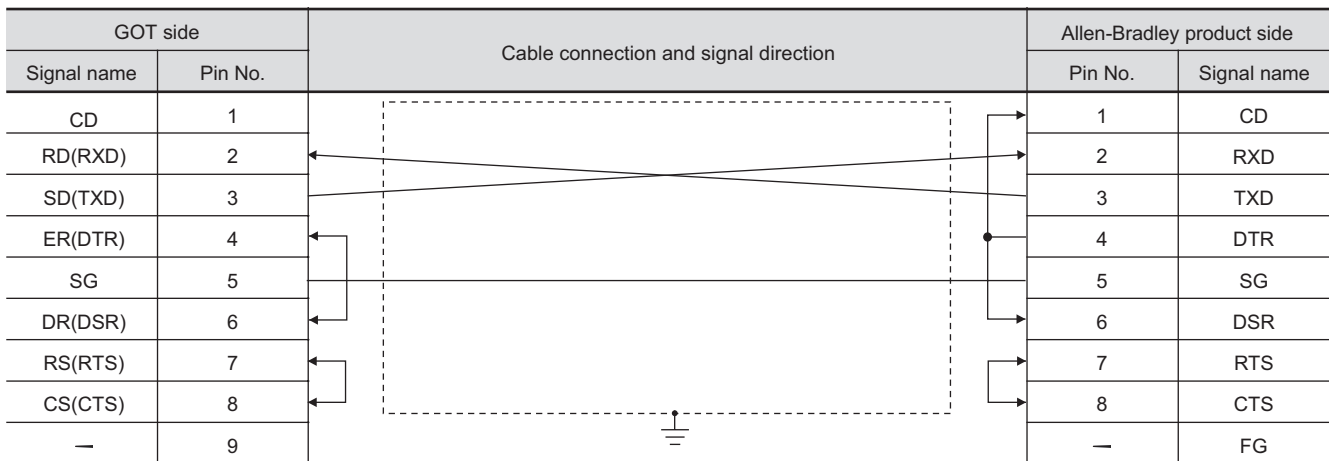(4) RS-232 cable 4) (between CPU (Control/Compact/FlexLogix Series) and GOT)



(5) RS-232 cable 5) (between CPU (SLC500 Series) and GOT(GT10:DC24V type only)).

GOT side (Terminal block)	Cable connection and signal direction	Allen-Bradley product side	
		Pin No.	Signal name
SD		1	CD
RD		2	RXD
ER		3	TXD
DR		4	DTR
SG		5	SG
RS		6	DSR
CS		7	RTS
NC		8	CTS
NC		—	FG

(6) RS-232 cable 6) (between 1761-CBL-PM02 and GOT(GT10:DC24V type only))

GOT side (Terminal block)	Cable connection and signal direction	Allen-Bradley product side (Dedicated cable:1761-CBL-PM02)	
		Pin No.	Signal name
SD		1	—
RD		2	RXD
ER		3	TXD
DR		4	—
SG		5	SG
RS		6	—
CS		7	RTS
NC		8	CTS
NC		9	—

(7) RS-232 cable 7) (between CPU (MicroLogix1000/1200/1500 Series) and GOT(GT10))

GOT side (Terminal block)	Cable connection and signal direction	Allen-Bradley product side	
		Pin No.	Signal name
SD		1	24V
RD		2	SG
ER		3	RTS
DR		4	RXD
SG		5	CD
RS		6	CTS
CS		7	TXD
NC		8	SG
NC		—	FG

17 CONNECTION TO FUJIF A PLC
 18 CONNECTION TO MATSUSHITA PLC
 19 CONNECTION TO YASKAWA PLC
 20 CONNECTION TO YOKOGAWA PLC
 21 CONNECTION TO ALLEN-BRADLEY PLC
 22 CONNECTION TO SIEMENS PLC
 23 MICROCOMPUTER CONNECTION
 24 CONNECTION TO OMRON TEMPERATURE CONTROLLER

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Connector type	Model	Manufacturer		
GT1595-X	-	9-pin D-sub (male) inch screw fixed type	17LE-23090-27(D4CK)	DDK Ltd		
GT1585V-S	-		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd		
GT1585-STBA	B		17LE-23090-27(D4CK)	DDK Ltd		
	C					
GT1585-STBD	-		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.		
GT1575V-S	-		17LE-23090-27(D4CK)	DDK Ltd		
GT1575-STBA	B		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.		
	C					
GT1575-STBD	-		17LE-23090-27(D4CK)	DDK Ltd		
GT1575-VTBA	D		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.		
GT1575-VTBD	E		17LE-23090-27(D4CK)	DDK Ltd		
	-					
GT1575-VN	-					
GT1572-VN	-					
GT1565-V	-					
GT1562-VN	-					
GT155□	-					
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)				
GT10	-	9-pin terminal block*2			MC1.5/9-G-3.5THT	PHOENIX CONTACT Inc.
GT15-RS2-9P	-	9-pin D-sub (male) inch screw fixed type			17LE-23090-27(D4CK)	DDK Ltd

*1 For the confirmation method of GT15 hardware version, refer to the following manual.


 GT15 User's Manual

*2 The terminal block (MC1.5/9-ST-3.5BK or corresponding product) of the cable side is packed together with the GT10.

(2) Allen-Bradley PLC side connector

Use the connector compatible with the Allen-Bradley PLC side module.

For details, refer to the following manual.

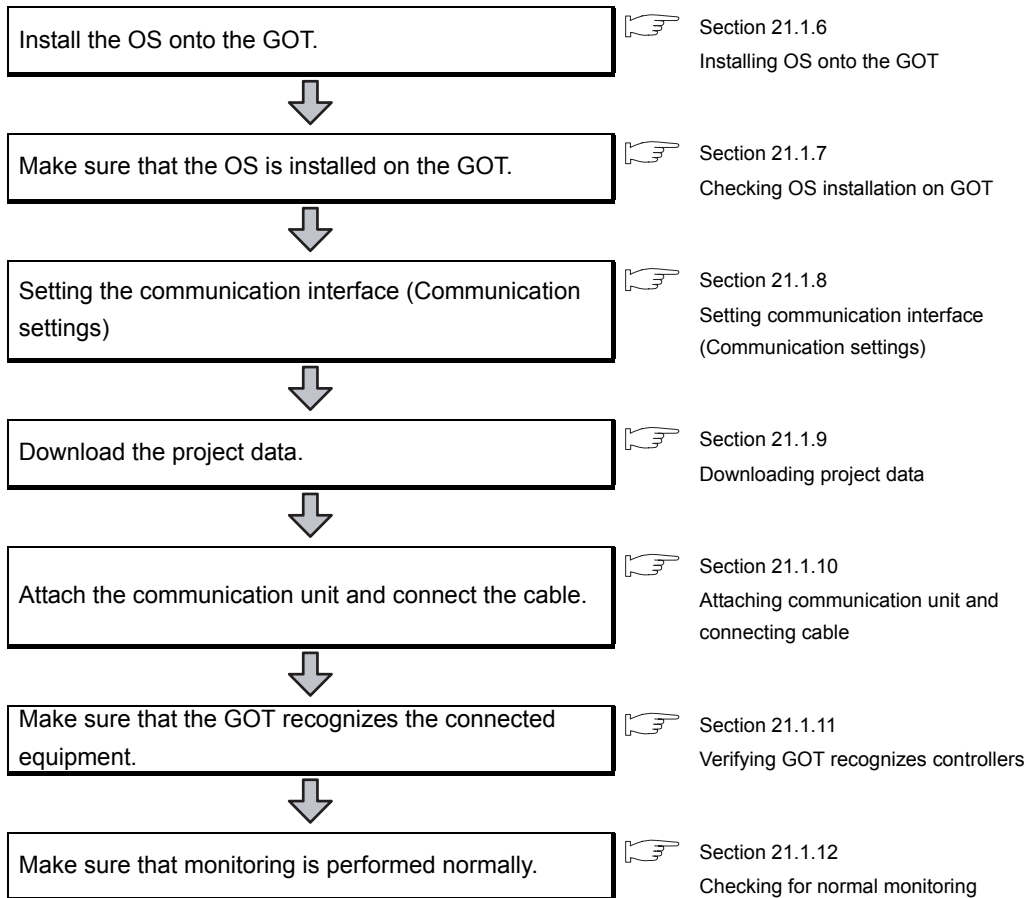
 User's Manual for the Allen-Bradley PLC

3 Precautions when preparing a cable

The length of the RS-232 cable must be 15m or less.

21.1.5 Preparatory Procedures for Monitoring

The following shows the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the PLC side setting

This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

Section 21.1.13 PLC Side Setting

21.1.6 Installing OS onto the GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

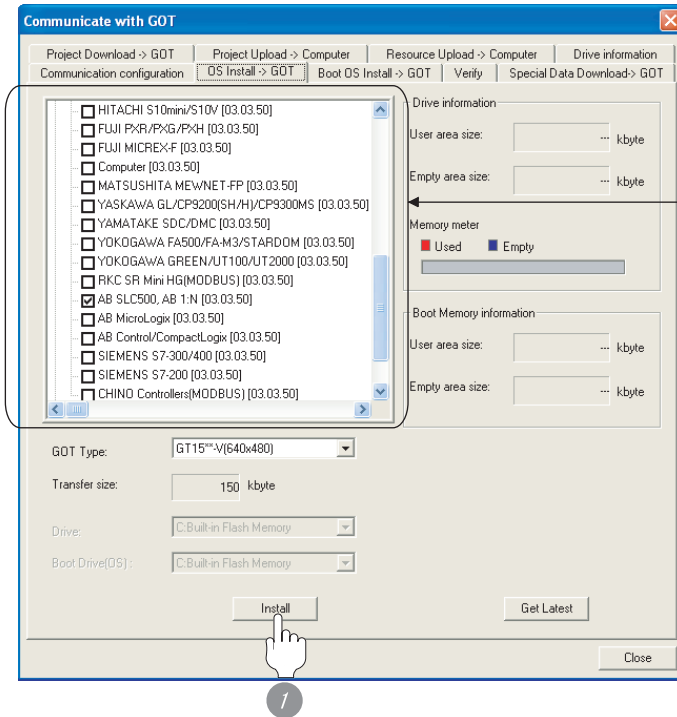GT Designer2 Version □ Basic Operation/Data Transfer Manual



Check either of the following on the communication driver.

- When connecting to SLC500 Series: AB SLC500, AB 1:N
- When connecting to MicroLogix1000/1200/1500 Series: AB MicroLogix
- When connecting to Control/ComPact/FlexLogix Series: AB Control/CompactLogix

<GT10>

- When connecting to SLC500 Series: AB SLC500
- When connecting to MicroLogix1000/1200/1500 Series: AB MicroLogix

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

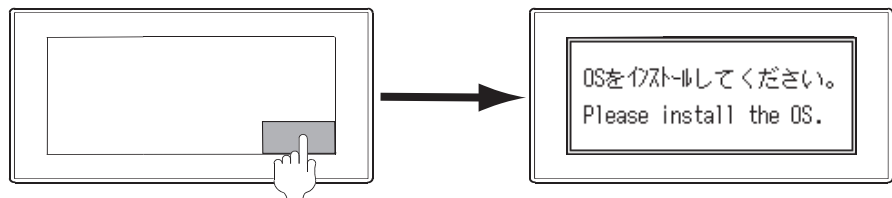


Installing communication driver onto GT10

When installing communication driver onto the GOT, turn on the GOT in the OS transfer mode.

GT10 User's Manual


(Operating of transmission mode)




Turn on the GOT while the bottom right corner is touched.

21.1.7 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

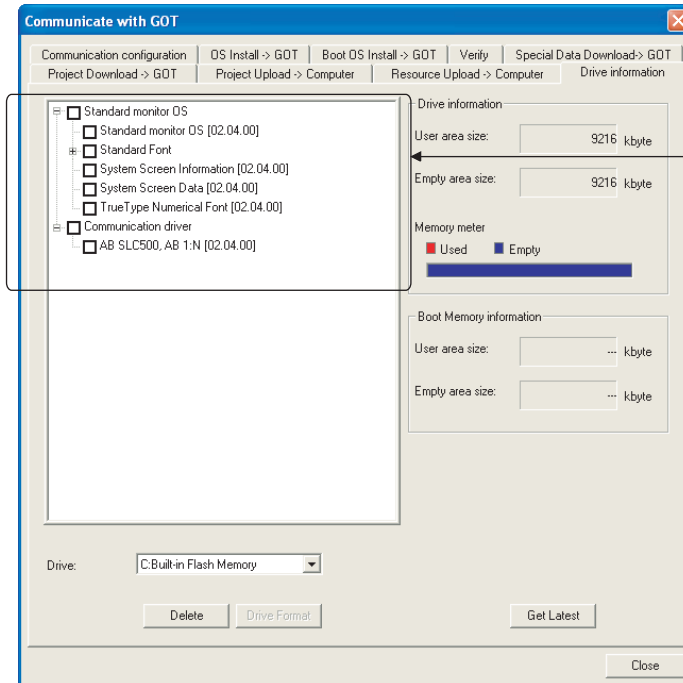 GT Designer2 Version □ Basic Operation/Data Transfer Manual



The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver (either of the following)

- AB SLC500, AB 1:N
- AB MicroLogix
- AB Control/CompactLogix

<GT10>

- AB SLC500
- ABMicroLogix

17

CONNECTION TO
FUJIFXA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23


MICROCOMPUTER
CONNECTION

24

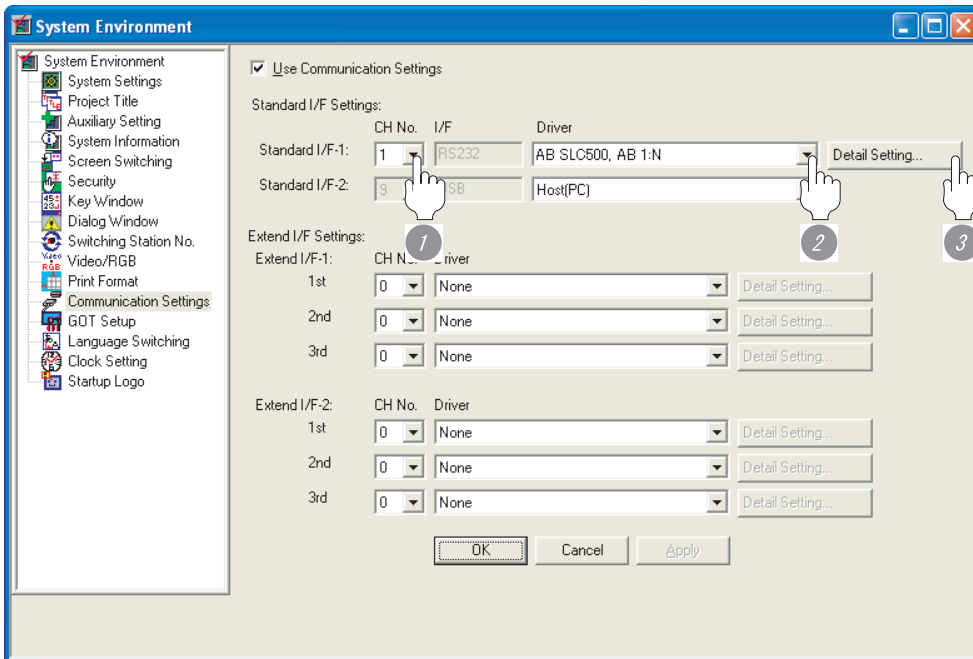
CONNECTION TO OMRON
TEMPERATURE
CONTROLLER


21.1.8 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2.
Select the same communication driver as the one installed on the GOT for each communication interface.
For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set "1" to the channel No. used.
- 2 Set the following to the driver.
<GT15, GT11>
 - When connecting to SLC500 Series: AB SLC500, AB 1:N
 - When connecting to MicroLogix1000/1200/1500 Series: AB MicroLogix
 - When connecting to Control/Compact/FlexLogix Series: AB Control/CompactLogix<GT10>
 - When connecting to SLC500 Series: AB SLC500
 - When connecting to MicroLogix1000/1200/1500 Series: AB MicroLogix
- 5 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

(1) AB SLC500, AB 1:N

Communication Detail Settings

Driver: AB SLC500, AB 1:N

Transmission Speed: 19200 (BPS)

Data Bit: 8 bit

Stop Bit: 1 bit

Parity: Even

Sum Check: Done

Sum Check Type: BCC

Retry: 0 (Times)

Startup Time: 3 (Sec)

Timeout Time: 3 (Sec)

Adapter Address: 0

Host Address: 1

Delay Time: 0 (x 10 ms)

Format: 1

Interrupt Data Byte: 1 (Byte)

Station No. Selection:


Special Interrupt Code:

Control Method:

OK Cancel

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	4800bps, 9600bps, 19200bps
Adapter Address	Specify the adapter address (station No. of the PLC that the GOT will monitor) in the connected network. <Default: 0>	0 to 31
Host Address	Specify the host address (station No. of the adapter to which the GOT is connected) in the connected network. <Default: 1>	1 to 31

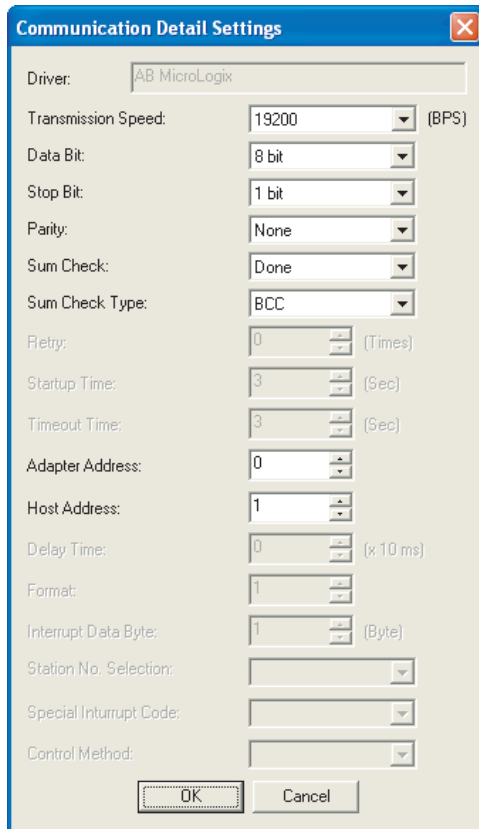(2) AB MicroLogix



Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	4800bps, 9600bps, 19200bps, 38400bps
Sum Check Type	Specify the format in which the sum check is performed during communication when performing sum check. <Default: BCC>	BCC, CRC16
Adapter Address	Specify the adapter address (station No. of the PLC that the GOT will monitor) in the connected network. <Default: 0>	0 to 31
Host Address	Specify the host address (station No. of the adapter to which the GOT is connected) in the connected network. <Default: 1>	1 to 31



(1) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

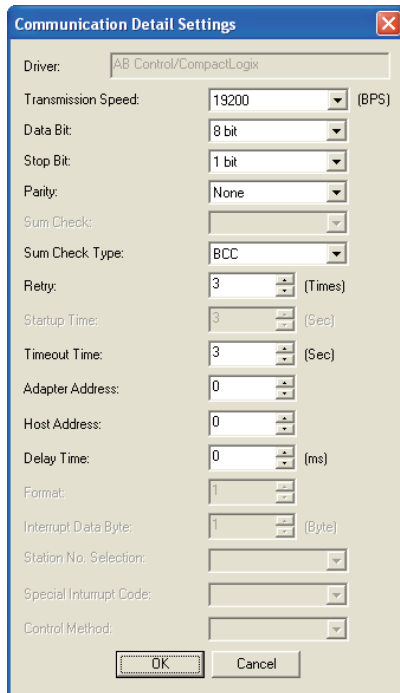
For details on the Utility, refer to the following manual.

GT User's Manual

(2) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

(3) AB Control/CompactLogix



Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: None>	None Even Odd
Sum Check Type	Specify the format in which the sum check is performed during communication when performing sum check. <Default: BCC>	BCC, CRC16
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec
Adapter Address	Specify the adapter address (station No. of the PLC that the GOT will monitor) in the connected network. <Default: 0>	0 to 254
Host Address	Specify the host address (station No. of the adapter to which the GOT is connected) in the connected network. <Default: 0>	0 to 254
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 0ms>	0 to 300 ms

(4) AB SLC500

The screenshot shows the 'Communication Detail Settings' dialog box for an AB SLC500 driver. The settings are as follows:


- Driver: AB SLC500
- Transmission Speed: 19200 (BPS)
- Data Bit: 8 bit
- Stop Bit: 1 bit
- Parity: Even
- Sum Check: Done
- Sum Check Type: BCC
- Retry: 0 (Times)
- Startup Time: 3 (Sec)
- Timeout Time: 3 (Sec)
- Adapter Address: 0
- Host Address: 1
- Delay Time: 0 (x10 ms)
- Format: 1
- Interrupt Data Byte: 1 (Byte)
- Station No. Selection: (empty)
- Special Interrupt Code: (empty)
- Control Method: (empty)

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	4800bps, 9600bps, 19200bps
Adapter Address	Specify the adapter address (station No. of the PLC that the GOT will monitor) in the connected network. <Default: 0>	0 to 31
Host Address	Specify the host address (station No. of the adapter to which the GOT is connected) in the connected network. <Default: 1>	1 to 31

Point


- (1) For GT15, GT11
 - (a) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
For details on the Utility, refer to the following manual.

 GT15 User's Manual, GT11 User's Manual
 - (b) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.
- (2) For GT10
 - (a) Communication interface setting by the Utility

Although the communication interface setting can be checked, it cannot be changed.
For details on the Utility, refer to the following manual.


 GT10 User's Manual
 - (b) Communication settings

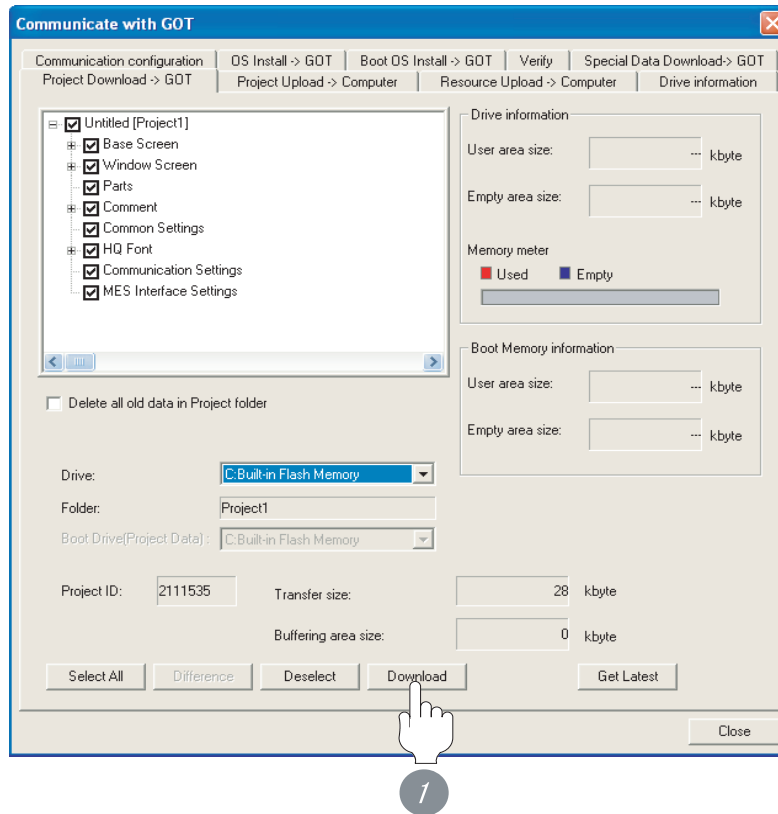
Communication settings can be changed on only GT Designer2.

21.1.9 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


21.1.10 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

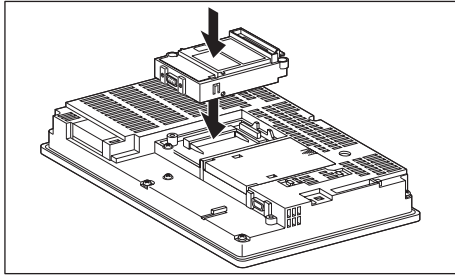1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

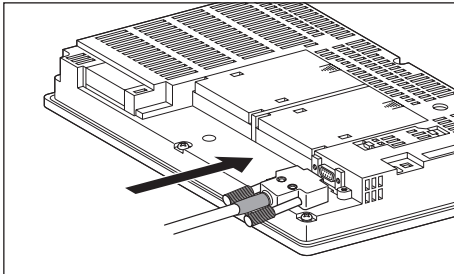
-  GT15 Serial Communication Unit User's Manual
GT15-RS2, GT15-RS4, GT15-RS4-TE

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

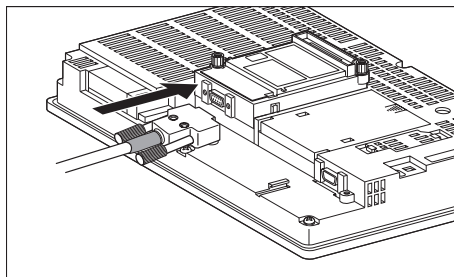- connection to the RS-232 communication unit




- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

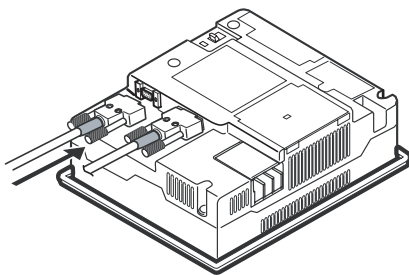(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

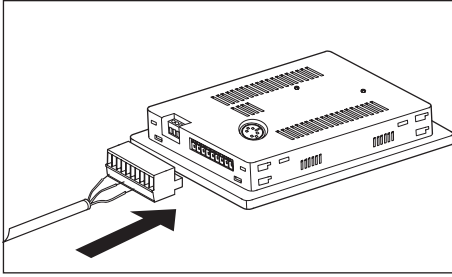(c) For the GT10 (built-in RS-232 interface)



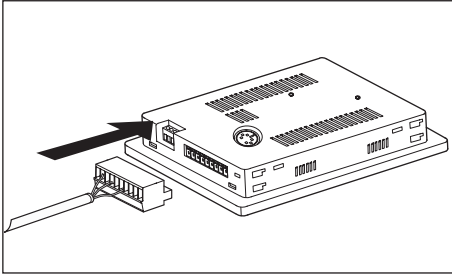- 1 Connect the RS-232 cable to the terminal block packed together with the GOT.



- 2 Connect the terminal block to the GOT.

21.1.11 Verifying GOT recognizes controllers

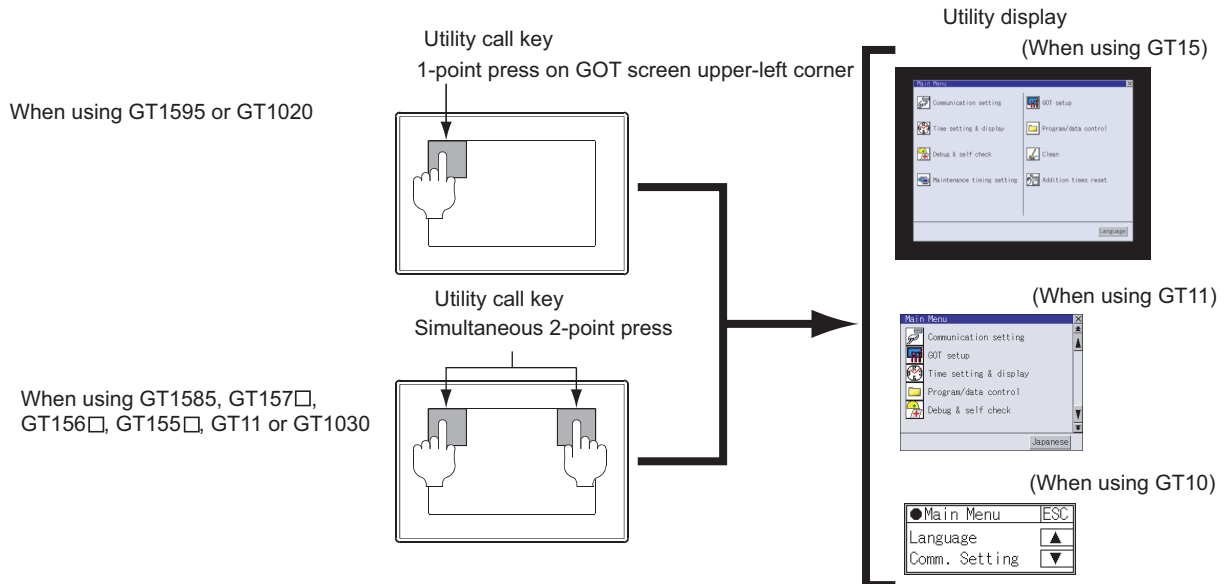
Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status



Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

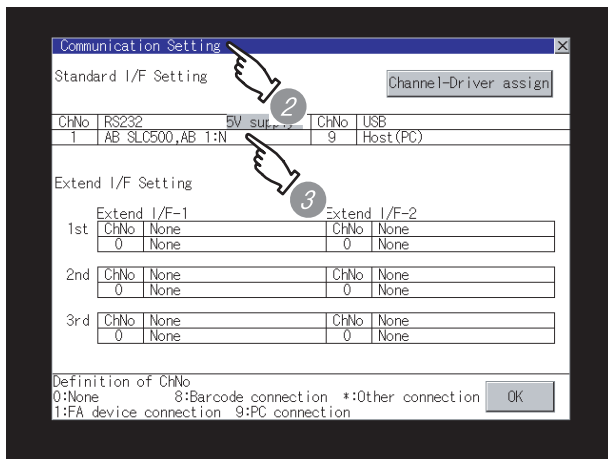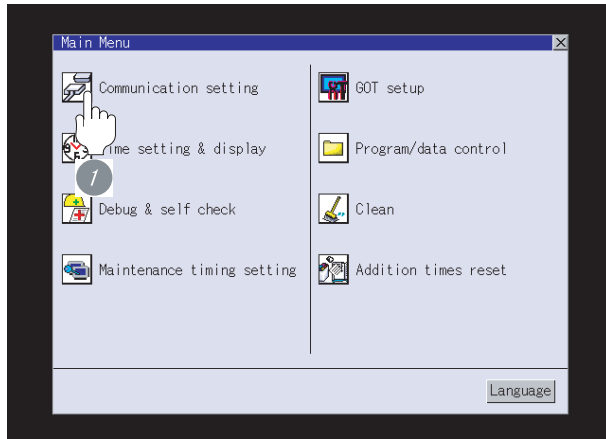GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

<GT15, GT11>

- Communication driver (one of the following)
 AB SLC500, AB 1:N
 AB MicroLogix
 AB Control/CompactLogix

<GT10>

- Communication driver (one of the following)
 AB SLC500
 AB MicroLogix

4 When the communication driver name is not displayed normally, carry out the following procedure again.

➡ Section 21.1.5 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.


➡ GT □ User's Manual

(1) For GT15, GT11

(a) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT15 User's Manual, GT11 User's Manual

(b) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

(2) For GT10

(a) Communication interface setting by the Utility

Although the communication interface setting can be checked, it cannot be changed.

For details on the Utility, refer to the following manual.

 GT10 User's Manual

(b) Communication settings

Communication settings can be changed on only GT Designer2.

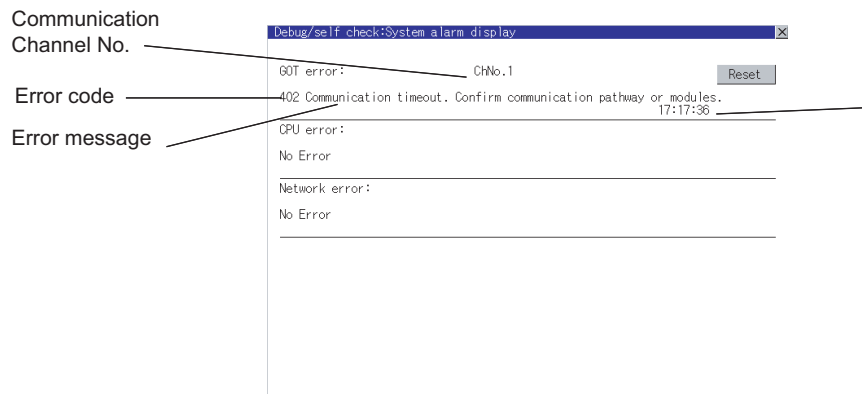
21.1.12 Checking for normal monitoring

1 Check for errors occurring on the GOT. (GT15, GT11 only)

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT □ User's Manual (When using GT15)




Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

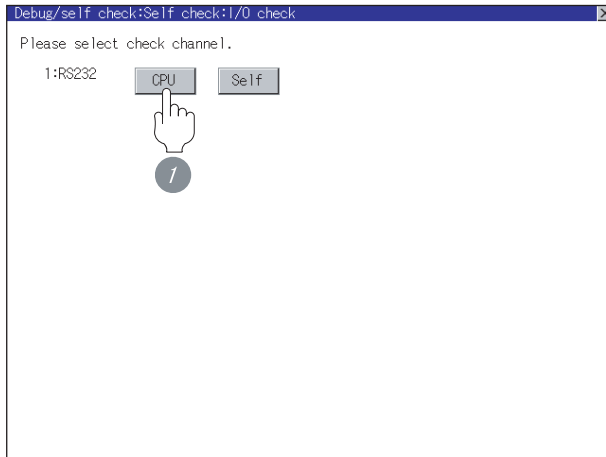
 GT Designer2 Version □ Screen Design Manual

2 Perform an I/O check. (GT15, GT11 only)


Whether the controller can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].

 GT User's Manual



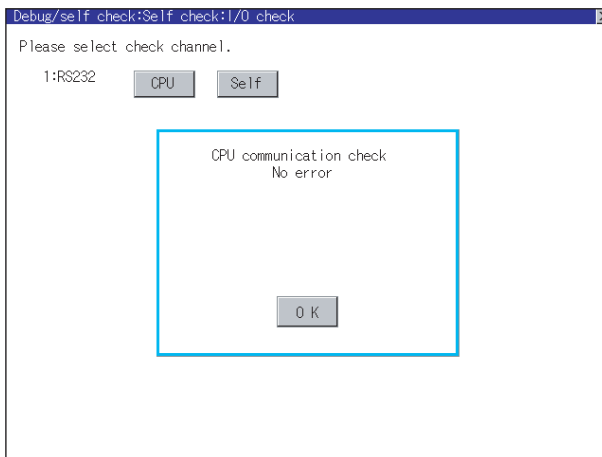- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected controller.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Communication monitoring function (for GT10)

The communication monitoring is a function that checks whether the PLC can communicate with the GOT.

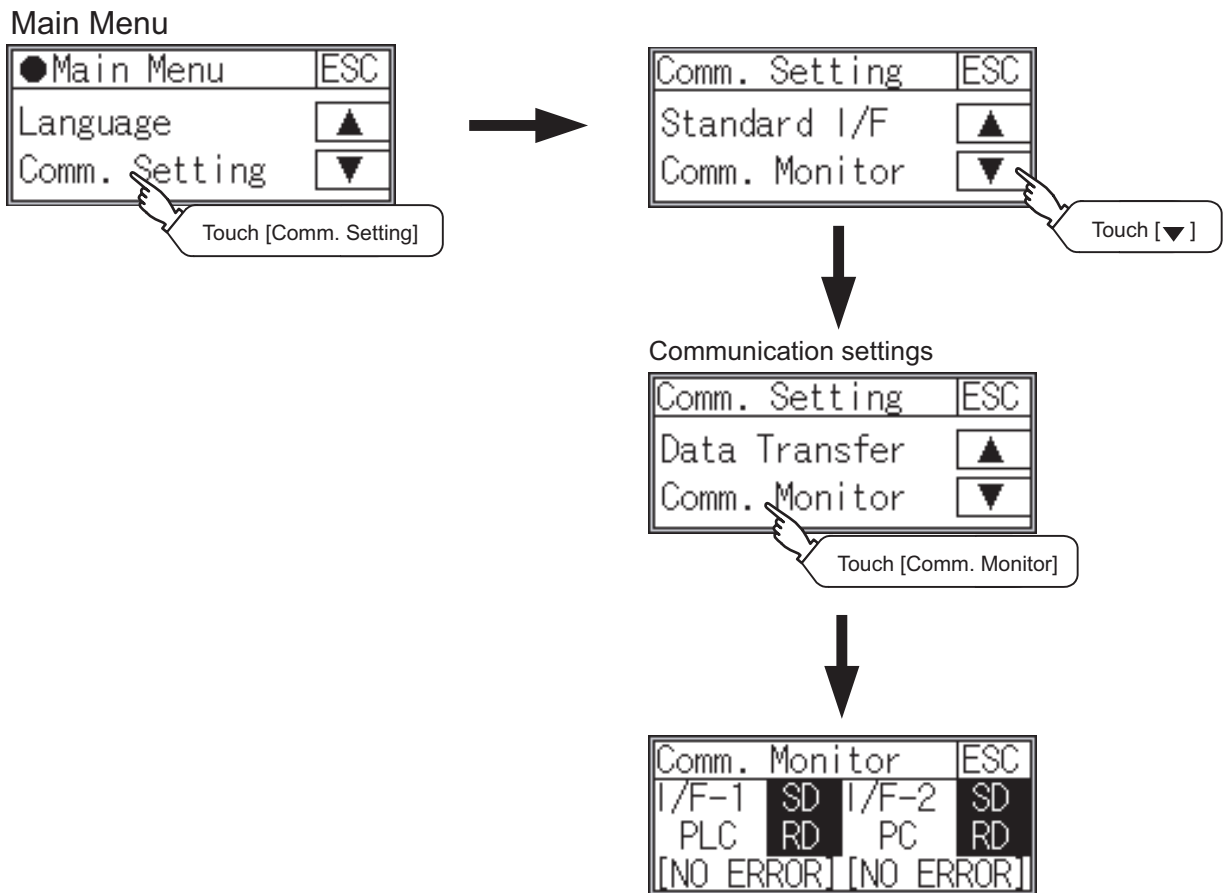
If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the communication monitoring function screen by [Main Menu] → [Comm. Setting] → [Comm. Monitor].

For details on the communication monitoring function, refer to the following manual:

☞ GT10 User's Manual

(Operation of communication monitoring function screen)



4 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.

Confirm if the PLC side setting is correct.

☞ Section 21.1.13 PLC Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

21.1.13 PLC Side Setting



Allen-Bradley PLC

For details of Allen-Bradley PLCs, refer to the following manuals.

Manuals for Allen-Bradley PLCs

1 Direct CPU connection (setting of Allen-Bradley PLC)

Item	Setting details		
	SLC500 Series	MicroLogix1000/1200/1500 Series	Control/Compact/FlexLogix Series
Baud Rate*1	4800bps, 9600bps, 19200bps	4800bps, 9600bps, 19200bps, 38400bps	4800bps, 9600bps, 19200bps, 38400bps
Parity	EVEN	NONE	NONE
Control Line	NO HANDSHAKING		
Communication Driver	DF1 HALF-DUPLEX SLAVE		
Duplicate Packet Detection	DISABLE		
Station Address	0		
Error Detection	BCC	BCC, CRC*2	BCC, CRC*2

*1 Set the Baud Rate according to the transmission speed setting on the GOT side.
For the transmission speed setting on the GOT side, refer to the following.




Section 21.1.8 Setting communication interface (Communication settings)

*2 Set the Error Detection according to the sum check format setting on the GOT side.
For the sum check format setting on the GOT side, refer to the following.

Section 21.1.8 Setting communication interface (Communication settings)

2 Connecting to DH485 network via adapter (1770-KF3) (Setting of Adapter)

Item	Setting details
Baud Rate*1	4800bps, 9600bps, 19200bps
Parity	Even
Flow Control	Disable (No Handshaking)
DF1 Device Category	DF1 half-duplex slave, local mode
Error Detection*2	BCC
DH-485 Baud Rate	19200bps
Maximum Node Address	1 to 31*3
DH-485 Node Address	0 to 31*4

- *1 Set the Baud Rate according to the transmission speed setting on the GOT side.
For the transmission speed setting on the GOT side, refer to the following.
 Section 21.1.8 Setting communication interface (Communication settings)
- *2 Set the Error Detection according to the sum check format setting on the GOT side.
For the sum check format setting on the GOT side, refer to the following.
 Section 21.1.8 Setting communication interface (Communication settings)
- *3 For the Maximum Node Address, set the same address as the Maximum Node Address on the DH-485 network.
- *4 Set the DH-485 Node Address according to the Host Address on the GOT side.
Set a unique DH-485 Node Address so that it does not conflict with the Node Address of the PLC CPU on the DH-485 network.
For the Host Address setting on the GOT side, refer to the following.
 Section 21.1.8 Setting communication interface (Communication settings)

21.2 Ethernet Connection



Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.

21.2.1 System configuration when connecting to ControlLogix, CompactLogix, FlexLogix



1 System configuration and connection conditions


When connecting to ControlLogix

Connection conditions		System configuration
Number of GOTs	Distance	
TCP : 64 (recommended to 16 units or less)	100m or less*2	

When connecting to CompactLogix

Connection conditions		System configuration
Number of GOTs	Distance	
TCP : 32 (recommended to 16 units or less)	100m or less*2	

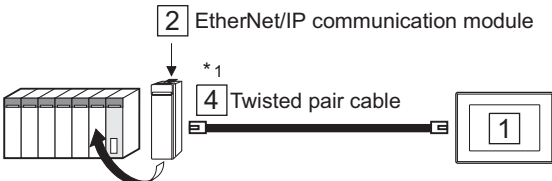When connecting to FlexLogix


Connection conditions		System configuration
Number of GOTs	Distance	
TCP : 32 (recommended to 16 units or less)	100m or less*2	 <p>2 EtherNet/IP communication module</p> <p>*1 4 Twisted pair cable</p> <p>1</p>

*1 The destination connected with the twisted pair cable varies with the configuration of the applicable Ethernet network system.
Connect to the Ethernet module, hub, transceiver or other system equipment corresponding to the applicable Ethernet network system.
Use cables, connectors, and hubs that meet the IEEE802.3 10BASE-T/100BASE-TX standard.



*2 A length between a hub and a node.

2 System equipment

(1) GOT


Image	No.	Name	Model
	1	Ethernet communication unit For Ethernet communication	GT15-J71E71-100

(2) PLC

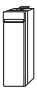Image	No.	Name	Model
	2	EtherNet/IP communication module	1756-ENET(10Mbps), 1756-ENBT(10/100Mbps)
	3	EtherNet/IP communication module	1788-ENBT

2 3 is a product manufactured by Allen-Bradley. For details of this product, contact Allen-Bradley.

(3) Cable

Image	No.	Name	Model
	4	Twisted pair cable	Shielded twisted pair cable (STP) or unshielded twisted pair cable in category (UTP): 3, 4 and 5

17

CONNECTION TO
FUJIFXA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23

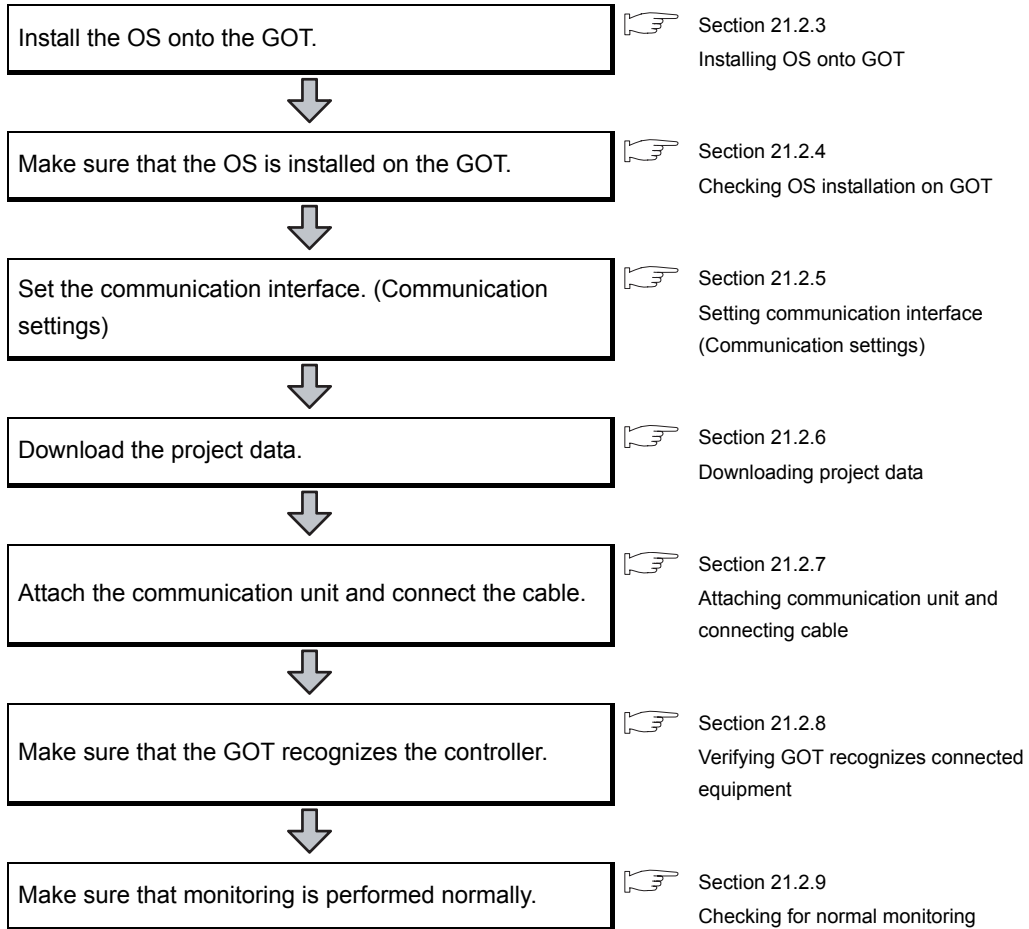
MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

21.2.2 Preparatory Procedures for Monitoring

The following shows the procedures to be taken before monitoring and corresponding reference sections.



Point


Confirming the PLC side setting

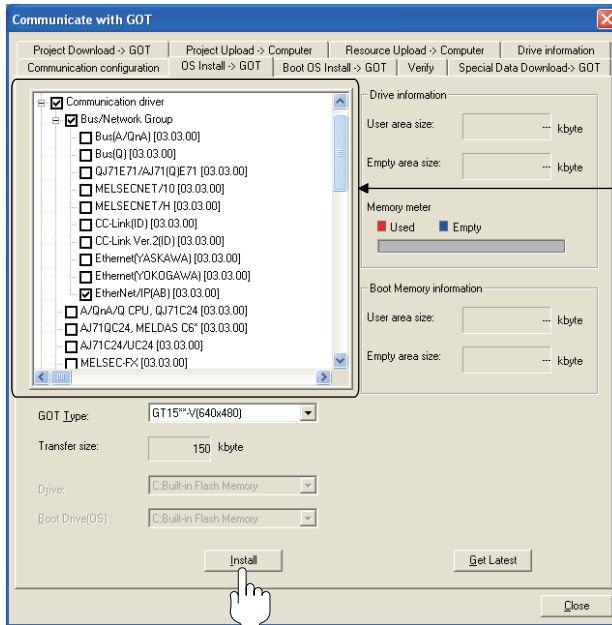
This section explains the GOT side setting.
When checking the PLC side settings, refer to the following.

☞ Section 21.2.10 PLC side setting

21.2.3 Installing OS onto GOT

Install the standard monitor OS, communication driver, and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




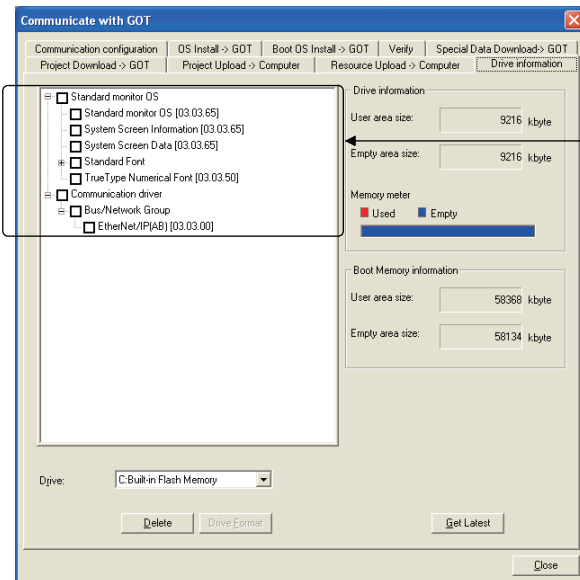
Check the following under the Communication driver.
• EtherNet/IP(AB)

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

21.2.4 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver: EtherNet/IP(AB)

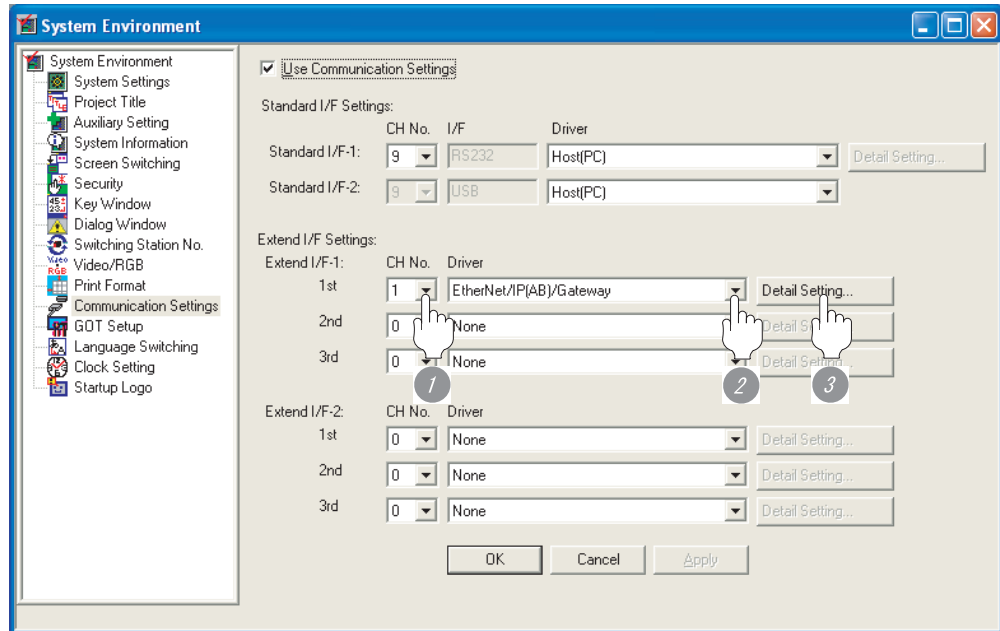
21.2.5 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication setting] and [Ethernet] of GT Designer2.

Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication setting] and [Ethernet] of GT Designer2, refer to the following manual.

 GT Designer2 Version Screen Design Manual

1 Communication settings




- 1 Set "1" to the channel No. used.
- 2 Set the driver to [EtherNet/IP(AB)/Gateway].
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
GOT NET No.	Set the network No. of the GOT. <Default: 1>	1 to 239
GOT PC No.	Set the station No. of the GOT. <Default: 1>	1 to 64
GOT IP Address	Set the IP address of the GOT. <Default: 192.168.0.18>	0.0.0.0 to 255.255.255.255
GOT Port No. (Communication)	Set the GOT port No. for the connection with the connected equipment. Set the port No. without using the same No. as the port No. for the Ethernet download. <Default: 5015>	1024 to 65534 (Except for 5011, 5012, 5013 and 44818)
Default Gateway	Set the router address of the default gateway where the GOT is connected. (Only for connection via router) <Default: 0.0.0.0>	0.0.0.0 to 255.255.255.255
Subnet Mask	Set the subnet mask for the sub network.(Only for connection via router) If the sub network is not used, the default value is set. <Default: 255.255.255.0>	0.0.0.0 to 255.255.255.255
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. <Default: 3 Sec>	3 to 255 Sec
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 90 Sec
Delay Time	Set the delay time for reducing the load of the network/destination PLC. <Default: 0ms>	0 to 10000 (× 10 ms)


3 Ethernet setting

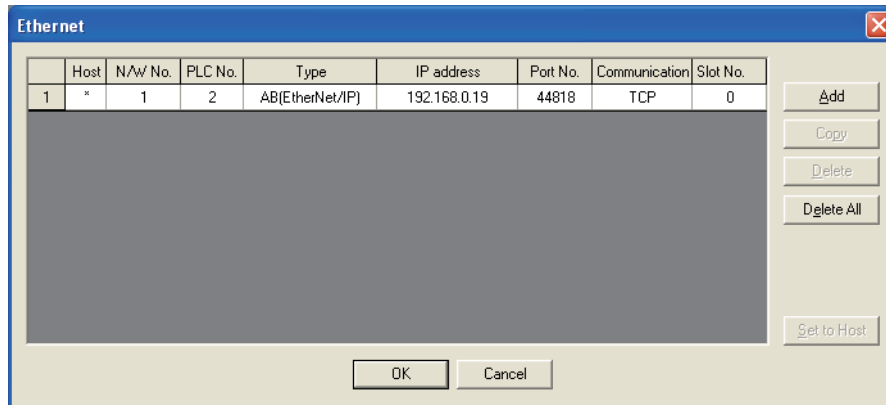(1) Ethernet setting



Item	Description	Setting
Host	The host is displayed.(The host is indicated with an asterisk (*).)	-
N/W No.	Set the network No. of the connected Ethernet module. <Default: blank>	1 to 239
PLC No.	Set the station No. of the connected Ethernet module. <Default: blank>	1 to 64
Type	AB(EtherNet/IP) (fixed)	AB(EtherNet/IP) (fixed)
IP address	Set the IP address of the connected Ethernet module. <Default: blank>	IP address of PLC
Port No.	44818 (fixed)	44818 (fixed)
Communication	TCP (fixed)	TCP (fixed)
Slot No.	Set the slot No. of the PLC to which the Ethernet module is connected. <Default: blank>	0 to 16




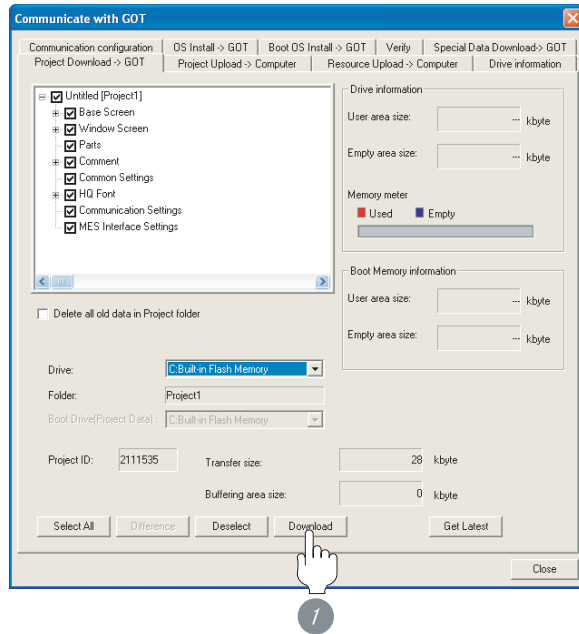
- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's [Communication Settings] after downloading [Communication Settings] of project data.
For details on the Utility, refer to the following manual.
 GT User's Manual
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.
- (3) Setting IP address and port No
The same IP address cannot be set for the same port No. The same IP address can be set for the different port No.

21.2.6 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


21.2.7 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

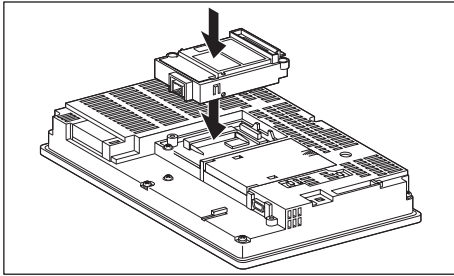1 Attaching the communication unit




- 1 Attach the Ethernet communication unit to the extension unit connector on the GOT.

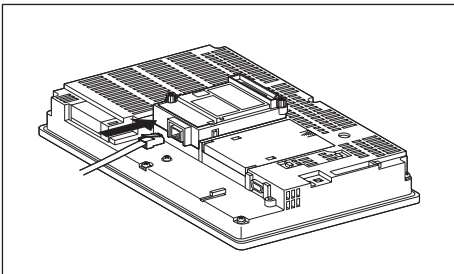
Point

Ethernet communication unit

For details on the Ethernet communication unit, refer to the following manual:

 GT15 Ethernet communication unit User's Manual

2 Connecting the cable



- 1 Connect the twisted pair cable to the Ethernet communication unit.

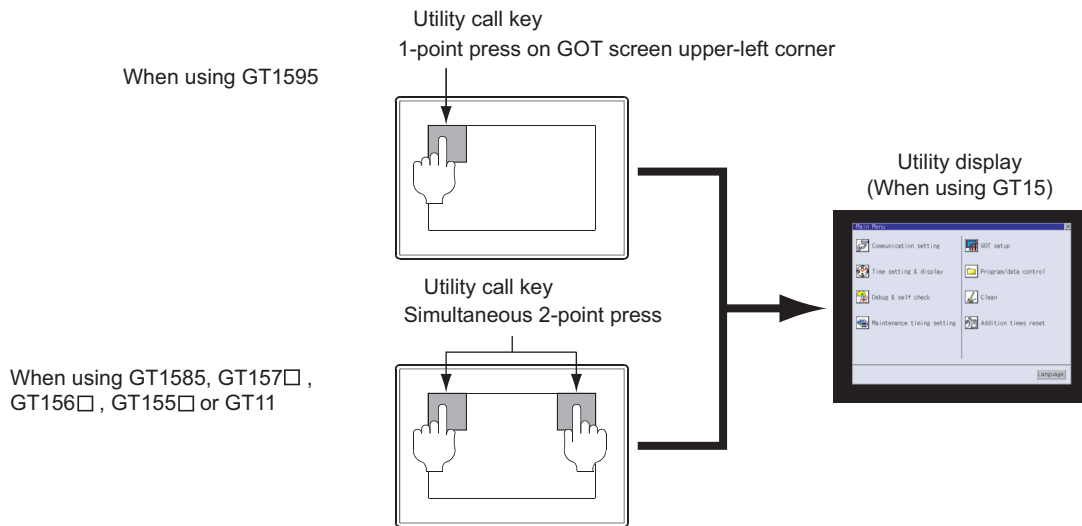
21.2.8 Verifying GOT recognizes connected equipment

Verify the GOT recognizes the controller on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting "Pressing Time" to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

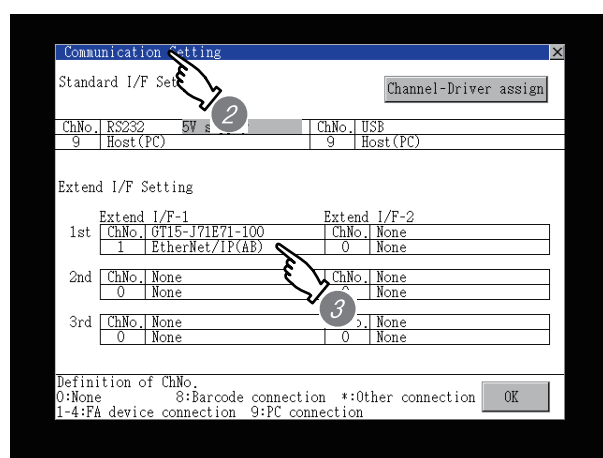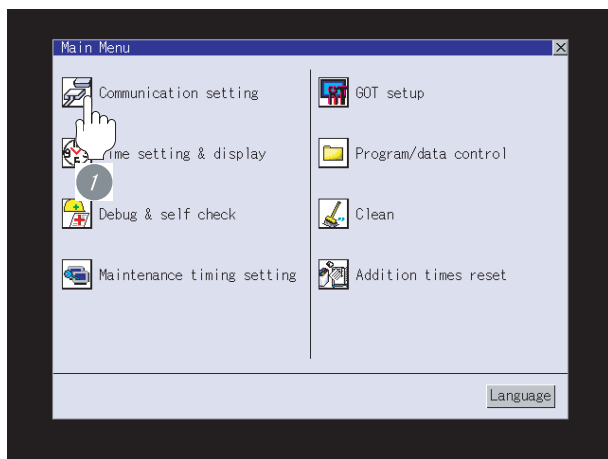 GT □ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication Setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver: EtherNet/IP(AB)

4 When the communication driver name is not displayed normally, carry out the following procedure again.

➡ Section 21.2.2 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

➡ GT □ User's Manual

21.2.9 Checking for normal monitoring

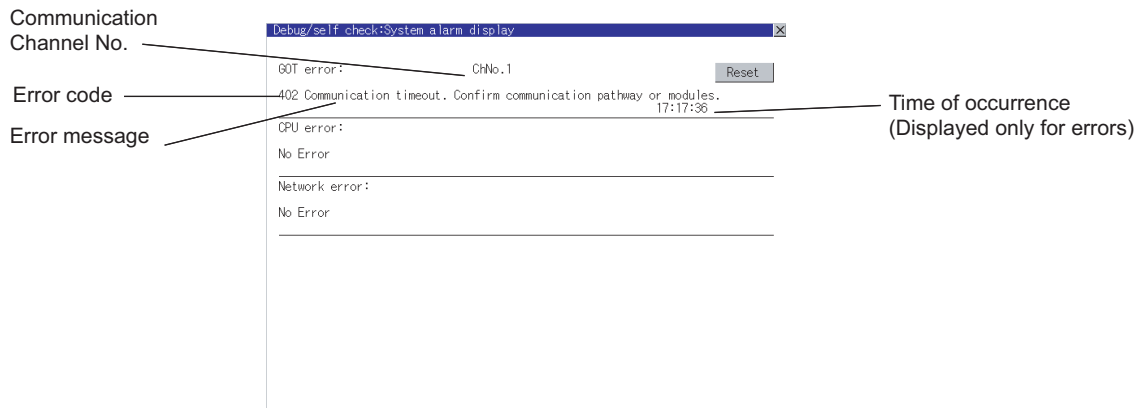
1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT User's Manual

(When using GT15)




Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version Screen Design Manual

2 Confirming the communication state of GOT

(1) When using the Command Prompt of Windows®

Execute a Ping command at the Command Prompt of Windows® .

(a) When normal communication

```
C:\>Ping 192.168.0.18
```

```
Reply from 192.168.0.18: bytes=32 time<1ms TTL=64
```

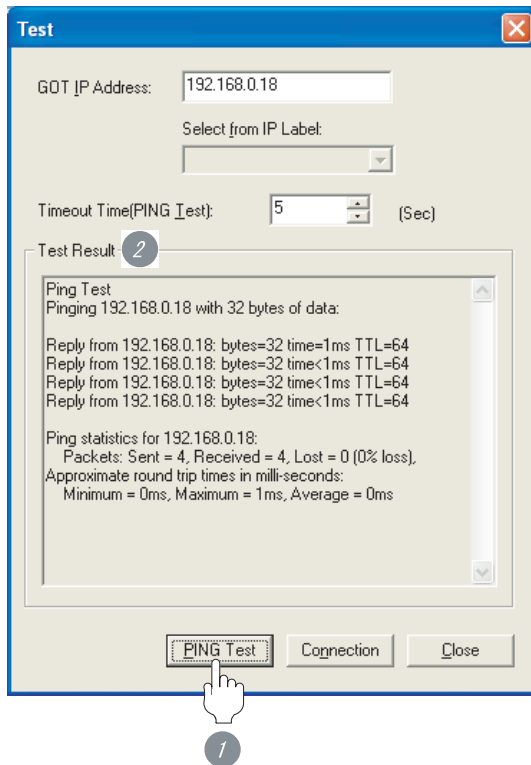
(b) When abnormal communication

```
C:\>Ping 192.168.0.18
```

```
Request timed out.
```

(2) When using the "PING Test" of GT Designer2

Select [Communication] → [Communication configuration] → [Ethernet] and **Test** to display [PING Test].



1 Specify the [GOT IP address] of the [PING Test] and click on the **PING Test** button.

2 The [Test Result] is displayed after the [PING Test] is finished.

(3) When abnormal communication

At abnormal communication, check the followings and execute the Ping command again.

- Mounting condition of Ethernet communication unit
- Cable connecting condition
- Confirmation of [Communication Settings]
- IP address of GOT specified by Ping command

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.

Confirm if the PLC side setting is correct.

☞ Section 21.2.10 PLC side setting

4 Confirming the communication state to each station (station monitoring function)

The station monitoring function detects the faults (communication timeout) of the stations monitored by the GOT. When detecting the abnormal state, it is confirming the response by executing a Ping command to the faulty station.

The station monitoring state can be confirmed by using GOT internal device.

(1) Station monitoring state

(a) No. of faulty station (GS230)

Total No. of the faulty CPU are stored.

The station No. of faulty stations are stored to GS231 through GS238. (b) Faulty station information (GS231 to GS238))

Device	b15 to b8	b7 to b0
GS230	(00H fixed)	No. of faulty stations



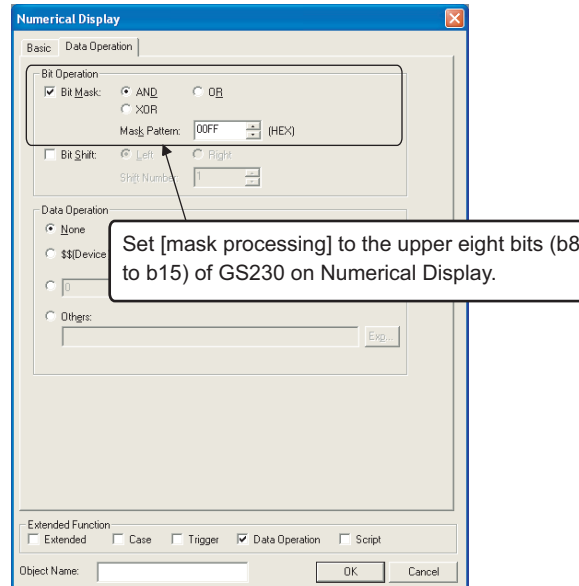
When monitoring GS230 on Numerical Display

When monitoring GS230 on Numerical Display, check [mask processing] with data operation tab as the following.

For the data operation, refer to the following manual.

GT Designer2 Version □ Screen Design Manual


<Numerical Display (Data Operation tab)>



(b) Faulty station information (GS231 to GS238)

- The bit of the Ethernet setting No. corresponding to the faulty station is set.
 - 0: Normal
 - 1: Abnormal
- The bit is reset after the fault is recovered.

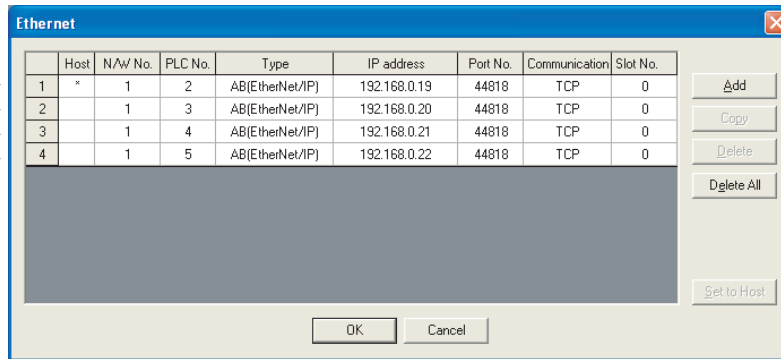GS231 bit 0
 GS231 bit 1
 GS231 bit 2
 GS231 bit 3



Device	Ethernet setting No.															
	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
GS231	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
GS232	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
GS233	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33
GS234	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49
GS235	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65
GS236	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81
GS237	112	111	110	109	108	107	106	105	104	103	102	101	100	99	98	97
GS238	128	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113

All settings related to communications are complete now.
 Create screens on GT Designer2 and download the project data again.

21.2.10 PLC side setting



Allen-Bradley PLC

For details of Allen-Bradley PLC, refer to the following manuals.

User's Manual for the Allen-Bradley PLC

1 Parameter setting

Set the following parameters with the software package manufactured by the Allen-Bradley.

Item	Setting description
Name	Sets the name.
IP Address	IP address of the connected module ^{*1}
Slot	Slots No. for installing the EtherNet/IP communication module

*1 For the IP address, make the same setting as that of each Ethernet module set on GT Designer2.
Do not set the same IP Address as those of GOT and controller on the Ethernet network.
For the address setting on GT Designer2, refer to the following.

Section 21.2.5 Setting communication interface (Communication settings)

21.2.11 Precautions

1 When setting IP address

Do not use "0" and "255" at the end of an IP address.

(Numbers of *.**.0 and *.**.255 are used by the system.)

The GOT may not monitor the controller correctly with the above numbers.

Consult with the administrator of the network before setting an IP address to the GOT and controller.

2 When connecting to multiple GOTs

(1) Setting PLC No.

When connecting two or more GOTs in the Ethernet network, set each "PC No." to the GOT.

Section 21.2.5 Setting communication interface (Communication settings)

(2) Setting IP address

Do not use the IP address "192.168.0.18" when using multiple GOTs.

A communication error may occur on the GOT with the IP address.

3 When connecting to the multiple network equipments (including GOT) in a segment





By increasing the network load, the transmission speed between the GOT and PLC may be reduced.

The following actions may improve the communication performance.

- Using a switching hub
- More high speed by 100BASE-TX (100Mbps)
- Reduction of the monitoring points on GOT

21.3 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
 	Allen-Bradley PLC connection Supporting the Control/Compact/FlexLogix Series connection	2.58L	Communication driver AB Control/CompactLogix [03.03.**]
	Allen-Bradley PLC connection Supporting the Ethernet connection	2.58L	Communication driver Ethernet/IP(AB) [03.03.**]
	Allen-Bradley PLC connection Supporting the SLC500 Series connection Supporting the MicroLogix1000/1200/1500 Series connection	2.58L	Standard Monitor OS [01.04.**] Communication driver AB SLC500 [01.00.**] AB MicroLogix [01.00.**]

17

CONNECTION TO
FUJIFA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23

MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

CONNECTION TO SIEMENS PLC



22.1 System Configuration page 22-2

This section describes the equipment and cables needed when connecting a GOT to a SIEMENS PLC. Select a system suitable for your application.

22.2 Connection Cable page 22-5

This section describes the specifications of the cables needed when connecting a GOT to a SIEMENS PLC. Check the specifications of the connection cables.

22.3 Preparatory Procedures for Monitoring page 22-7

This section provides the procedures to be followed before performing monitoring in connection to a SIEMENS PLC. The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

22.5 Precautions page 22-25

This section describes the precautions to observe when a GOT is connected to a SIEMENS PLC. Be sure to read this section when connecting the GOT to a SIEMENS PLC.

22.1 System Configuration

Select a system configuration suitable for your application.




Conventions used in this section

Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.

22.1.1 Connecting to a SIMATIC S7-300/400 Series



1 System configuration and connection conditions

Connection conditions		System configuration	
No. of GOTs	Distance		
1	15m or less		

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P

(2) PLC

Image	No.	Name	Model name
	2	HMI Adapter	MLFB: 6ES7 972-0CA11-0XA0

2 is a product manufactured by SIEMENS. For details of this product, contact SIEMENS.

(3) Cable

Image	No.	Name	Model name
	3	RS-232 cable 1) • Between HMI Adapter and GOT	GT09-C30R20801-9S(3m)

*1 The RS-232 cable can be prepared by the user. (Section 22.2 Connection Cable)

22.1.2 Connecting to a SIMATIC S7-200 Series



1 System configurations and connection conditions

Connection condition		System configuration
Number of GOTs	Distance	
1	15m or less	<p>GT15 GT11 Serial</p>
		<p>GT10 24V (RS-232)</p>

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) GT15 GT11 Serial GT10 24V (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P GT15

(2) PLC

Image	No.	Name	Model name
	2	PC/PPI cable	6ES7 901-3BF20-0XA0

[2] is a product manufactured by SIEMENS. For details of this product, contact SIEMENS.

(3) Cable


Image	No.	Name	Model name
	3	RS-232 cable 2) • Between PC/PPI cable and GOT	(To be prepared by the user Section 22.2 Connection Cable) GT10 24V (RS-232)

22.2 Connection Cable

The RS-232 cable used for connection between the GOT and PLC needs to be prepared by the user. The following shows each cable connection diagram and relevant connectors.


1 Connection diagram

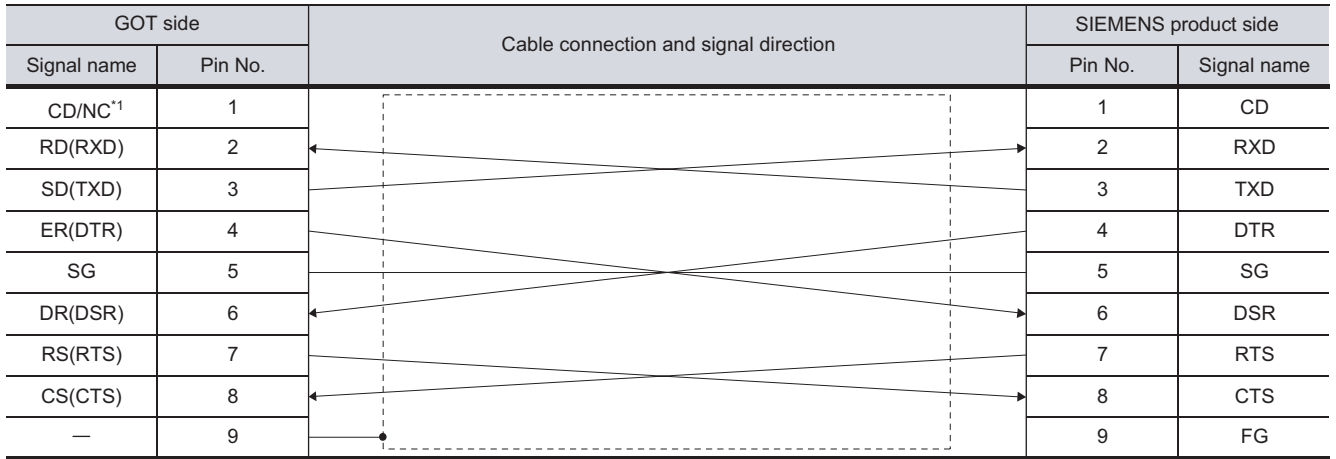(1) RS-232 cable 1) (Between HMI Adapter and GOT) (For GT15,GT11)



*1 GT15 : CD, GT11, NC

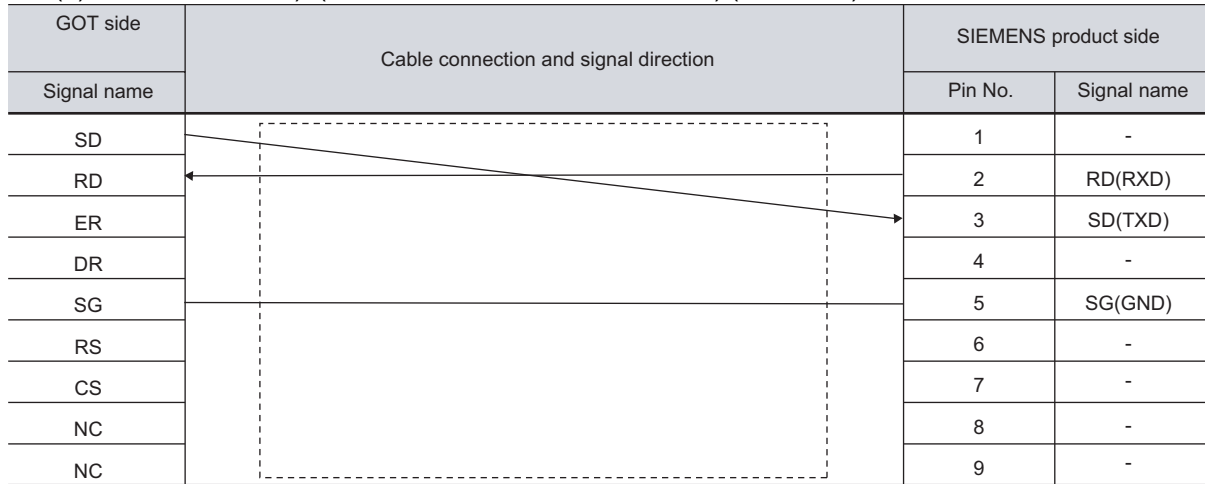(2) RS-232 cable 2) (Between PC/PPI cable and GOT) (For GT10)



2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

GOT	Hardware version*1	Connector type	Model	Manufacturer
GT1595-X	-	9-pin D-sub (male) inch screw fixed type	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
GT1585-STBA	B		17LE-23090-27(D4CK)	DDK Ltd
	C		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
GT1585-STBD	-		17LE-23090-27(D4CK)	DDK Ltd
GT1575V-S	-		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
GT1575-STBA	B		17LE-23090-27(D4CK)	DDK Ltd
	C		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
GT1575-STBD	-		17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBA	D		GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E		17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		17LE-23090-27(D4CK)	DDK Ltd
GT1575-VN	-			
GT1572-VN	-			
GT1565-V	-			
GT1562-VN	-			
GT155□	-			
GT1155-Q, GT1150-Q	-		17LE-23090-27(D3CC)	
GT10	-	9-pin terminal block*2	MC1.5/9-G-3.5THT	PHOENIX CONTACT Inc.
GT15-RS2-9P	-	9-pin D-sub (male) inch screw fixed typ	17LE-23090-27(D4CK)	DDK Ltd

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

*2 The terminal block (MC1.5/9-ST-3.5BK or corresponding product)of the cable side is packed together with the GT10.

(2) SIEMENS PLC side connector

Use the connector compatible with the SIEMENS PLC side.

For details, refer to the following manual.

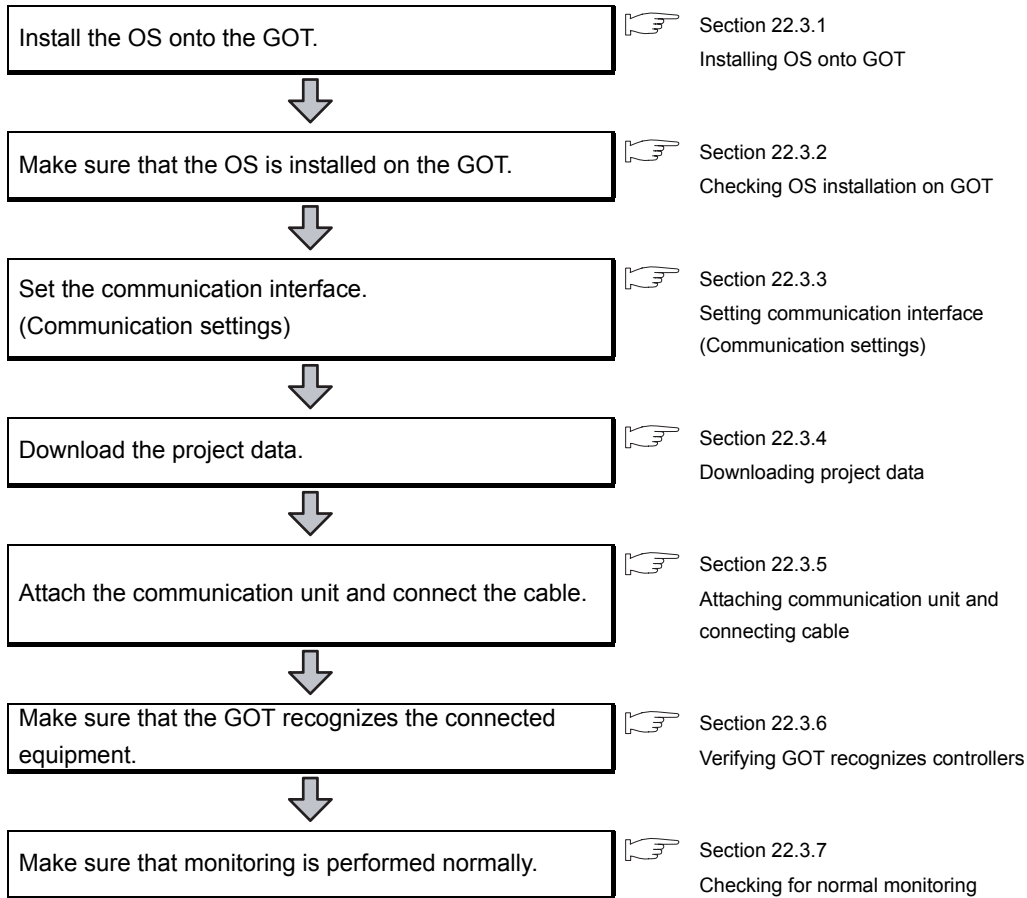
 User's Manual for the SIEMENS PLC

3 Precautions when preparing a cable

The length of the cable RS-232 must be 15m or less.

22.3 Preparatory Procedures for Monitoring


The following shows the procedures to be taken before monitoring and corresponding reference sections.



22.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

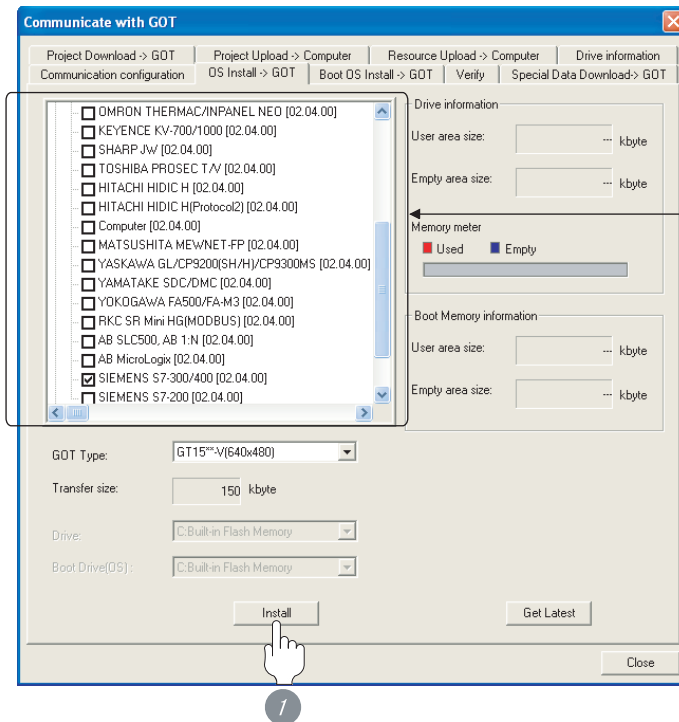☞ GT Designer2 Version □ Basic Operation/Data Transfer Manual



Check the following on the communication driver.

- When connecting to SIEMENS S7-300/400
: SIEMENS S7-300/400
- When connecting to SIEMENS S7-200
: SIEMENS S7-200

<GT10>

- When connecting to SIEMENS S7-200
: SIEMENS S7-200

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

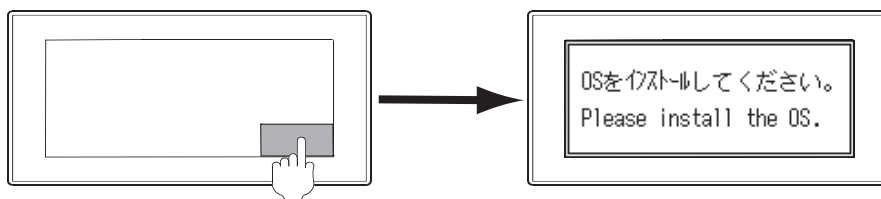
Point

Installing communication driver onto GT10

When installing communication driver onto the GOT, turn on the GOT in the OS transfer mode.

☞ GT10 User's Manual


(Operating of transmission mode)




Turn on the GOT while the bottom right corner is touched.

22.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

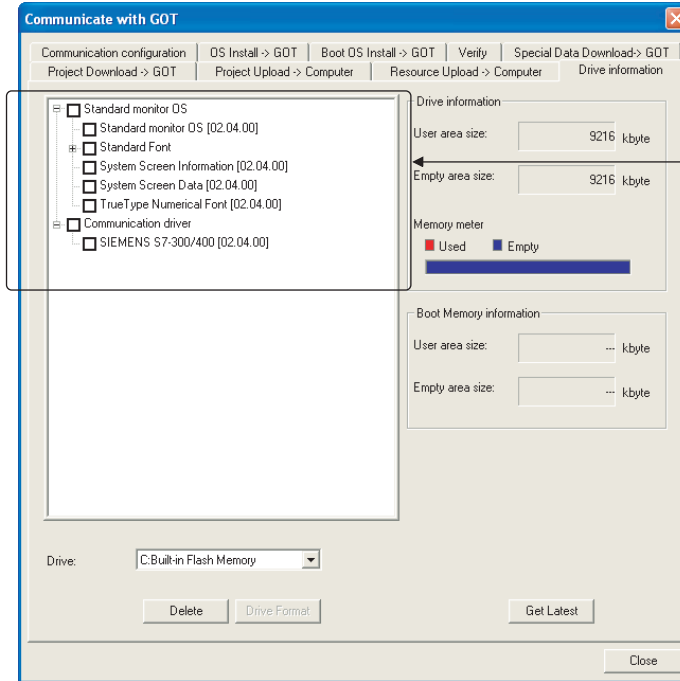 GT Designer2 Version □ Basic Operation/Data Transfer Manual



The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver (any of the following)
 - SIEMENS S7-300/400
 - SIEMENS S7-200

<GT10>

- When connecting to SIEMENS S7-200 : SIEMENS S7-200

17

CONNECTION TO
FUJIFXA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23


MICROCOMPUTER
CONNECTION

24

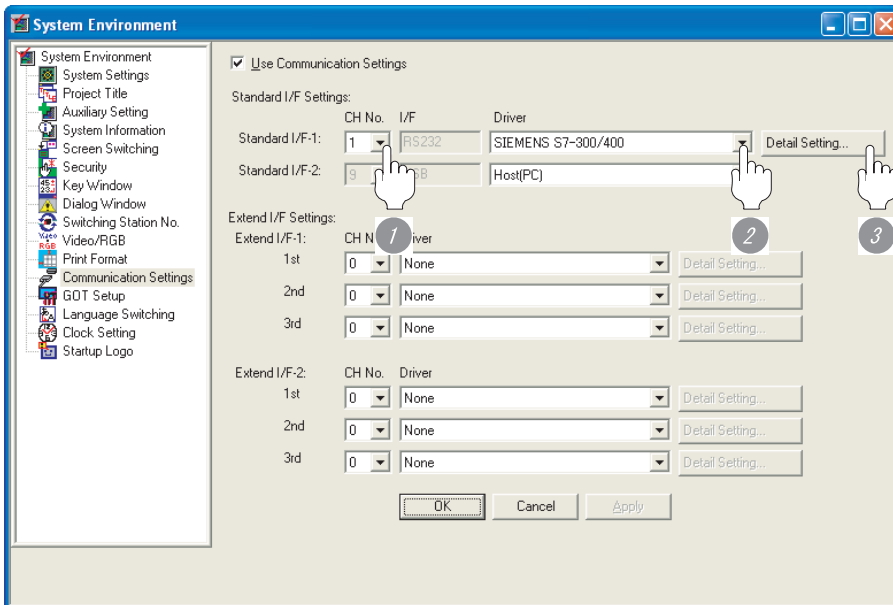
CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

22.3.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2.
Select the same communication driver as the one installed on the GOT for each communication interface.
For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



1 Set "1" to the channel No. used.

2 Set the following in the driver box.

<GT15, GT11>

- When connecting to SIEMENS S7-300/400 : SIEMENS S7-300/400.
- When connecting to SIEMENS S7-200 : SIEMENS S7-200.

<GT10>

- When connecting to SIEMENS S7-200 : SIEMENS S7-200.

4 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

(1) SIEMENS S7-300/400.

The screenshot shows the 'Communication Detail Settings' dialog box for a SIEMENS S7-300/400 driver. The settings are as follows:

- Driver: SIEMENS S7-300/400
- Transmission Speed: 38400 (BPS)
- Data Bit: 8 bit
- Stop Bit: 1 bit
- Parity: Odd
- Sum Check: (empty)
- Sum Check Type: (empty)
- Retry: 0 (Times)
- Startup Time: 3 (Sec)
- Timeout Time: 3 (Sec)
- Adapter Address: 1
- Host Address: 2
- Delay Time: 0 (x 10 ms)
- Format: 1
- Interrupt Data Byte: 1 (Byte)
- Station No. Selection: (empty)
- Special Interrupt Code: (empty)
- Control Method: (empty)

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 38400bps>	9600bps, 19200bps, 38400bps
Adapter Address	Specify the adapter address (station No. of the PLC that the GOT will monitor) in the connected network. <Default: 1>	1 to 31
Host Address	Specify the host address (station No. of the adapter to which the GOT is connected) in the connected network. <Default: 2>	1 to 31

Point

(1) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

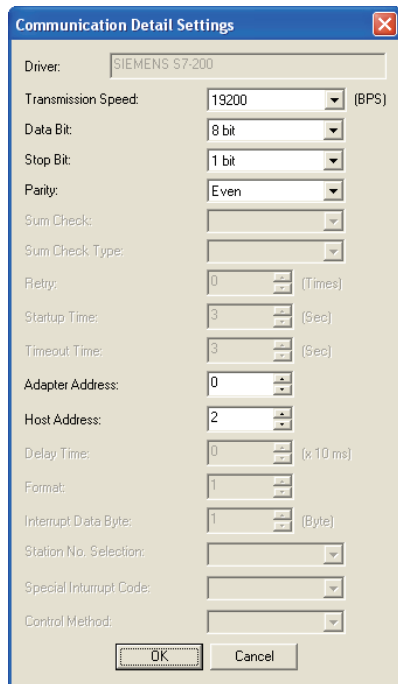
For details on the Utility, refer to the following manual.

GT User's Manual

(2) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

(2) SIEMENS S7-200




Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	9600bps,19200bps,38400bps, 57600bps,115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Even>	None Even Odd
Adapter Addrres	Specify the adapter addrres(station No. of the PLC to which the GOT is connected) in the network of the GOT. <Default: 0>	0 to 31
Host Address	Specify the host address (station No. of the PLC to which the GOT is connected) in the network of the GOT. <Default: 2>	1 to 31

Point


- (1) For GT15, GT11
 - (a) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
For details on the Utility, refer to the following manual.

 GT15 User's Manual, GT11 User's Manual
 - (b) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.
- (2) For GT10
 - (a) Communication interface setting by the Utility

Although the communication interface setting can be checked, it cannot be changed.
For details on the Utility, refer to the following manual.


 GT10 User's Manual
 - (b) Communication settings

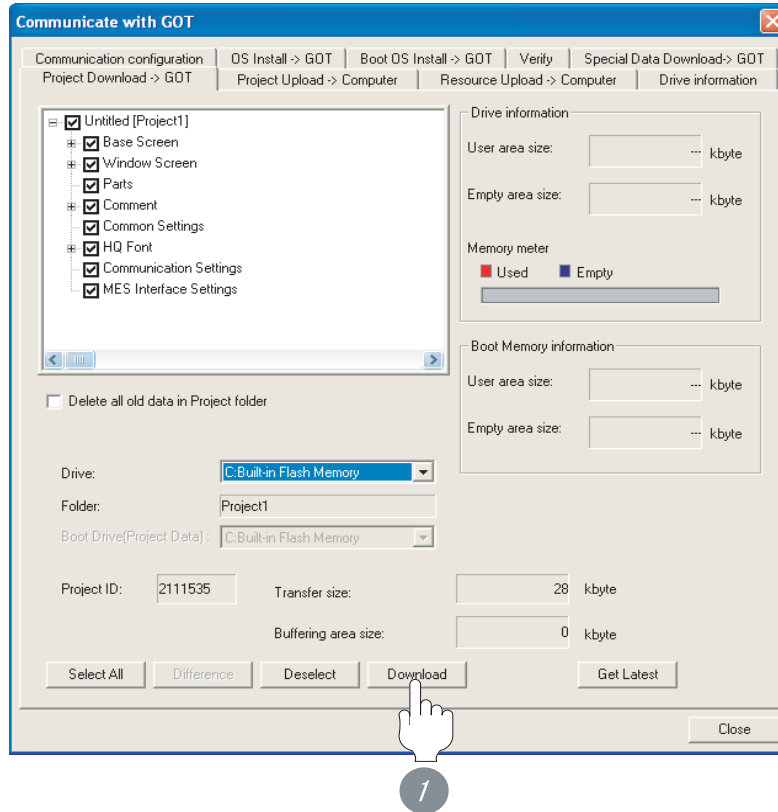
Communication settings can be changed on only GT Designer2.

22.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


22.3.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

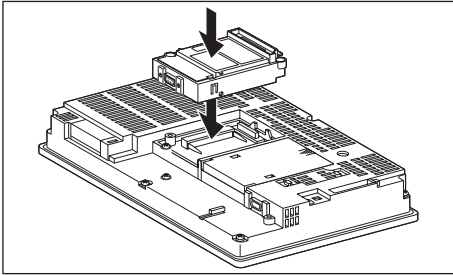1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

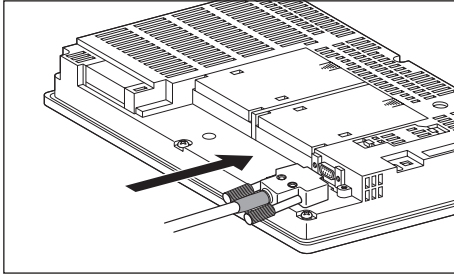
-  GT15 Serial Communication Unit User's Manual
GT15-RS2, GT15-RS4, GT15-RS4-TE

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

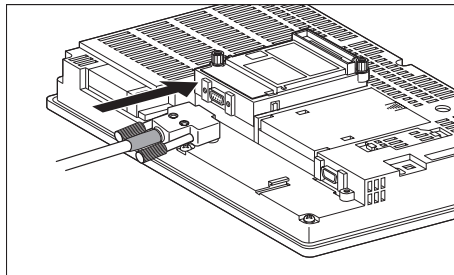- connection to the RS-232 communication unit




- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

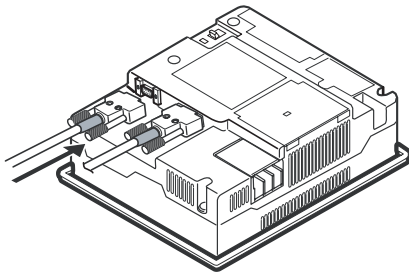(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

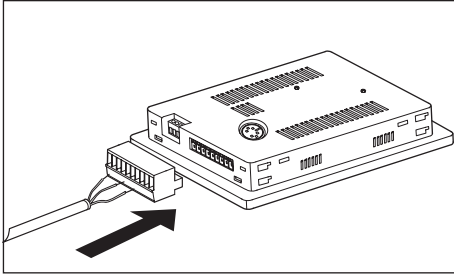(c) For the GT10 (built-in RS-232 interface)



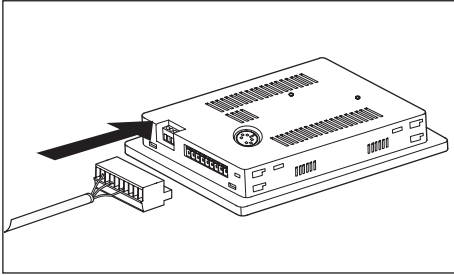- 1 Connect the RS-232 cable to the terminal block packed together with the GOT.



- 2 Connect the terminal block to the GOT.

17

CONNECTION TO
FUJIFXA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23

MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

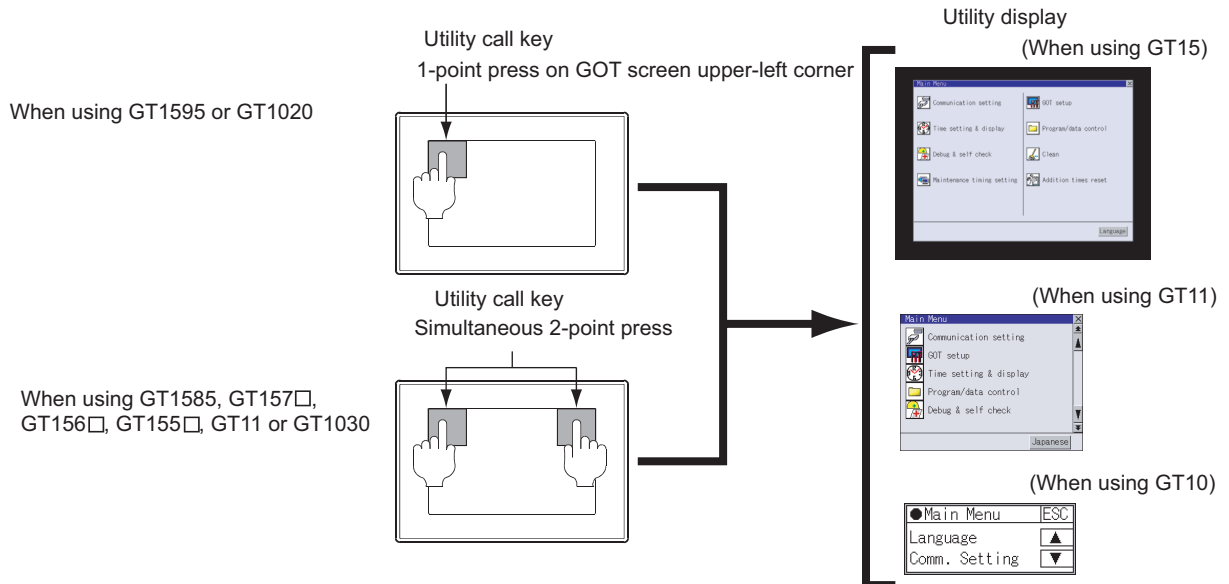
22.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

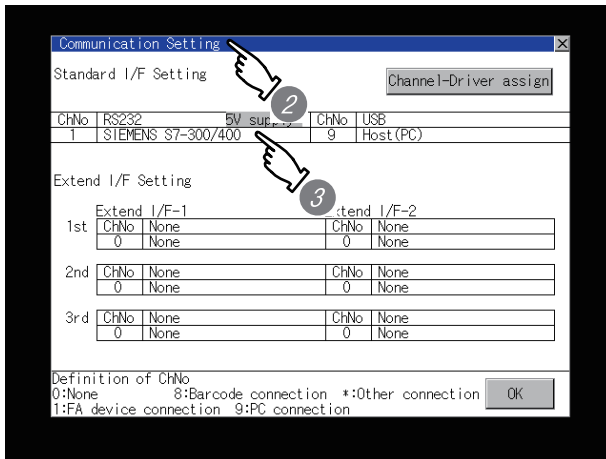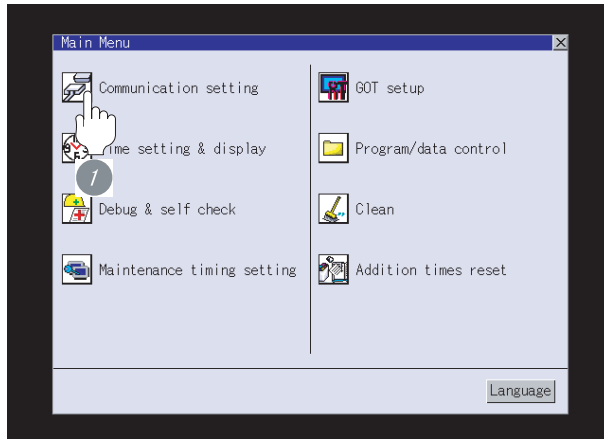☞ GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver (any of the following)

<GT15, GT11>

- SIEMENS S7-300/400
- SIEMENS S7-200

<GT10>

- SIEMENS S7-200

4 When the communication driver name is not displayed normally, carry out the following procedure again.


☞ Section 22.3 Preparatory Procedures for Monitoring

(1) For GT15, GT11

(a) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT15 User's Manual, GT11 User's Manual

(b) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

(2) For GT10

(a) Communication interface setting by the Utility

Although the communication interface setting can be checked, it cannot be changed.

For details on the Utility, refer to the following manual.

 GT10 User's Manual

(b) Communication settings

Communication settings can be changed on only GT Designer2.

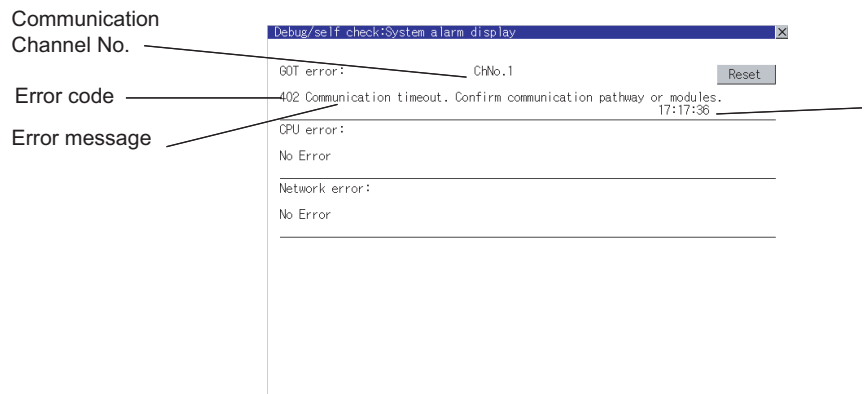
22.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)



Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual



17

CONNECTION TO
FUJIFXA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23

MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

2 Communication monitoring function (for GT10)

The communication monitoring is a function that checks whether the PLC can communicate with the GOT.

If this check ends successfully, it means correct communication interface settings and proper cable connection.

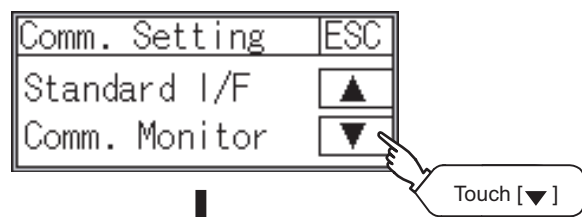
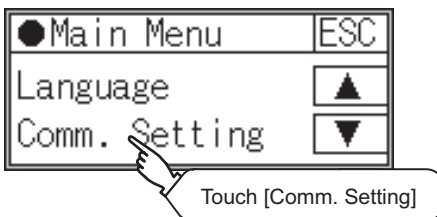
Display the communication monitoring function screen by [Main Menu]→ [Comm. Setting] → [Comm. Monitor] .

For details on the communication monitoring function, refer to the following manual:



☞ GT10 User's Manual

(Operation of communication monitoring function screen)

Main Menu



Communication settings

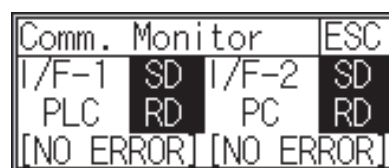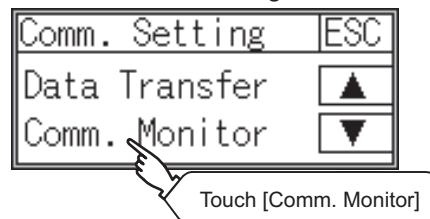

3 Confirming the PLC side setting

When connecting the GOT, setting is required for the PLC side.

Confirm if the PLC side setting is correct.


☞ Section 22.4 PLC Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

22.4 PLC Side Setting

SIEMENS PLC

For details of SIEMENS PLCs, refer to the following manuals.

 USER's Manual for the SIEMENS PLC

	Model name	Reference
PLC CPU	S7-200	Section 22.4.2
HMI Adapter	6ES7 972-0CA11-0XA0	Section 22.4.1
PC/PPI cable	6ES7 901-3BF20-0XA0	Section 22.4.2

22.4.1 Connecting to HMI Adapter

1 Communication settings

Set the communication settings of HMI adapter by operating the GOT.

Setting item	PLC side settings
Transmission speed	9600bps, 19200bps, 38400bps
Data bit	8-bit (fixed)
Parity bit	EVEN (fixed)
Stop bit	1-bit (fixed)
Adapter address* ¹	1 to 31
Host address* ¹	1 to 31

*1 Set the address without overlapping the address of other units.

22.4.2 Connecting to SIMATIC S7-200

1 Communication settings

Set the communication settings of PLC and PC/PPI cable.

(1) PLC settings

Set the communication settings of PLC by operating the SIEMENS programming tool(STEP7-WIN32).

Setting item	PLC settings
Transmission speed*1	9600bps,19200bps
Data bit	8-bit(fixed)
Parity bit	Even(fixed)
Stop bit	1-bit(ifixed)
Host address*2	1 to 31

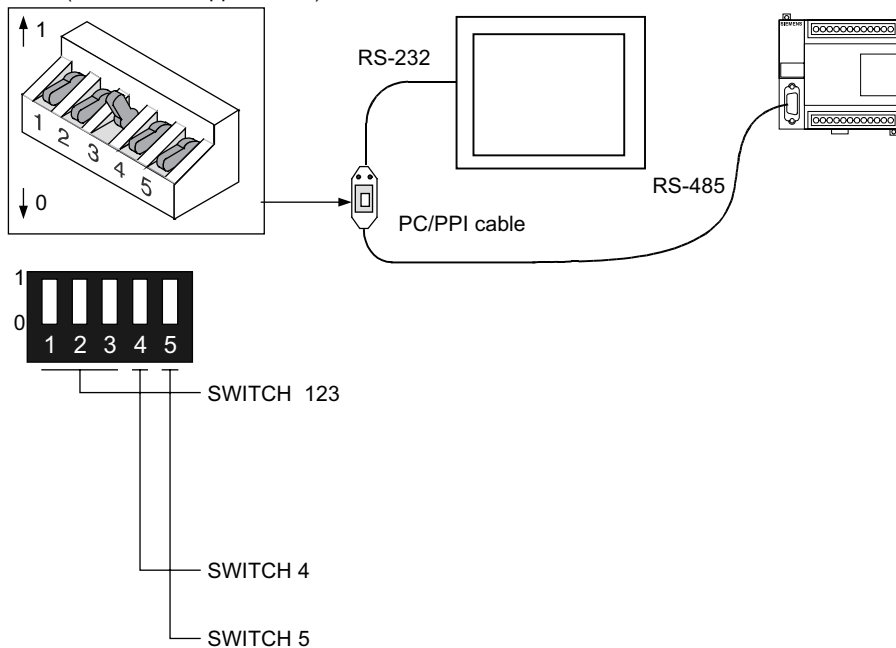
*1 Adjust with GOT settings.

*2 Set the address without overlapping the address of other units.

(2) PC/PPI cable settings

Set the transmission speed by operating the DIP switch on the PC/PPI cable.

DIP switch(down side:0, upper side:1)



SWITCH1	SWITCH2	SWITCH3	SWITCH4	SWITCH5	Transmission speed
0	0	1	0	0	19200bps*1
0	1	0	0	0	9600bps*1

*1 Adjust with GOT settings.

22.5 Precautions

1 GOT alarm list (system alarm) function

Error information cannot be monitored when the GOT is connected to a SIEMENS PLC.

(The error information on the PLC CPU side can be monitored.)

For details on the alarm list (system alarm), refer to the following manual:

 GT Designer2 Version □ Screen Design Manual

2 At system startup

(1) When powering ON the system

Turn ON all PLC CPUs before turning ON the GOT.

If the GOT is turned ON before power-up of the PLC CPUs, restart the GOT.

(2) When powering OFF a PLC CPU at another station






When a PLC CPU at another station (the PLC CPU to which the HMI Adapter is not connected) is turned OFF, monitoring by the GOT is stopped.

To resume the monitoring, restart the GOT.

(Monitoring will not be resumed on GOT even if the PLC CPU is turned ON again.)

22.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
  SIEMENS PLC connection	Supporting the SIEMENS PLC S7-300/400 connection	2.00A	Communication driver SIEMENS S7-300/400 [01.00.**]
  SIEMENS PLC connection	Supporting the SIEMENS PLC S7-200 connection	2.18U	Communication driver SIEMENS S7-200 [02.01.**]
 SIEMENS PLC connection	Supporting the connections to GT10 Supporting the SIEMENS PLC S7-200 connection	2.58L	Standard Monitor OS [01.04.**] Communication driver SIEMENS S7-200 [01.00.**]

INDEX

[A]	Accessing the inverter by the FR Configurator .. 40-32
	Accessing the PLC by the GX Developer..... 40-25
	Allen-Bradley PLC
	Control/Compact/FlexLogix..... 21-6
	MicroLogix1000/1200/1500 Series 21-4
	SLC500 Series..... 21-2
	AnCPU type
	Bus connection 2-5
	CC-Link connection (intelligent device station) .. 7-2
	Computer link connection 4-15
	Direct connection to a CPU..... 3-5
	Ethernet connection..... 9-2,33-68
	MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
	AnSCPU type
	Bus connection 2-8
	CC-Link connection (intelligent device station) .. 7-2
	Computer link connection 4-17
	Direct connection to a CPU..... 3-5
	Ethernet connection..... 9-2,33-68
	MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
[B]	Bar code reader connection 36-1
	Bus connection 2-1
[C]	CC-Link connection (intelligent device station)..... 7-1
	CC-Link connection (via G4) 8-1
	CHINO CONTROLLER
	GT120 26-7
	LT230,LT830..... 26-5
	LT300,LT400,DZ1000,DZ2000 26-2
	CNC CONNECTION
	CC-Link Connection(Intelligent Device Station)
 33-44
	Direct Connection To CPU..... 33-2
	Ethernet Connection 33-68
	MELSECNET/10 Connection (PLC To PLC
	Network)..... 33-21
	CNC connection
	Ethernet connection 19-37,20-39,21-32
	Communication check sheet 2-51
	Computer link connection 4-1
[D]	Direct connection to a CPU 3-1
[E]	Ethernet connection..... 9-1
	EXTERNAL I/O DEVICE 35-1
[F]	FA transparent function 40-1
	FUJI FA PLC
	MICREX-F120S/140S/150S..... 17-7
	MICREX-F55 17-2
	MICREX-F70 17-4
	FUJI SYS TEMPERATURE CONTROLLER
	PXG4, PXG5, PXG9, PXH9 25-4,27-4
	PXR3, PXR4, PXR5, PXR9
 25-2,25-5,27-2,29-2,29-6,29-8
	FXCPU(Direct connection to a CPU)
 3-9,3-12,3-17,3-20
[G]	Gateway function 42-1
[H]	HITACHI IES PLC
	H-200 to 252 series, H series board type, EH-150
	series..... 15-5
	Large-sized H series 15-2
	HITACHI PLC
	S10mini Series 16-5
	S10V Series 16-2
[I]	INVERTER CONNECTION
	FREQROL A500/F500 31-2
	FREQROL A700/F700 31-7
	FREQROL E500/S500 31-5
[J]	JTEKT PLC
	PC2J 13-9,17-7
	PC2JC, PC2J16P, PC2J16PR 13-12
	PC3J, PC3JL..... 13-5,16-5,17-4
	PC3JG, PC3JG-P 13-2,16-2,17-2
[K]	KEYENCE PLC
	KV-1000 11-3
	KV-700 11-6
[M]	MATSUSHITA PLC
	FP SIGMA 18-17
	FP0-C16CT, FP0-C32CT 18-2
	FP10 (S)..... 18-12
	FP10SH..... 18-14
	FP1-C24C, FP1-C40C 18-4
	FP2, FP2SH 18-6
	FP3..... 18-8
	FP5..... 18-10

FP-M (C20TC), FP-M (C32TC).....	18-16
FP-X.....	18-19
MELSECNET/10 connection (PLC to PLC network)	6-1
MELSECNET/H connection (PLC to PLC network)	5-1
MES INTERFACE FUNCTION.....	43-1
Microcomputer connection.....	23-1
Motion controller CPU (A Series)	
Bus connection.....	2-16,2-20
CC-Link connection (intelligent device station) ..	7-2
Computer link connection.....	4-19
Direct connection to a CPU.....	3-25,3-27
Ethernet connection.....	9-2,33-68
MELSECNET/10 connection (PLC to PLC network)	6-3,6-5
Motion controller CPU (Q Series)	
Bus connection.....	2-15
CC-Link connection (intelligent device station) ..	7-2
CC-Link connection (via G4).....	8-2
Computer link connection.....	4-19
Direct connection to a CPU.....	3-25,3-27
Ethernet connection.....	9-2,33-68
MELSECNET/10 connection (PLC to PLC network)	6-3,6-5
MELSECNET/H connection (PLC to PLC network)	5-3,5-5
MULTI-CHANNEL FUNCTION.....	39-1
Multiple-GT11 connection function.....	41-1
[O]	
OMRON PLC	
C1000H/C2000H, CV500/CV1000/CV2000, CVM1	10-18
C200HS, C200H, C200H, CS1.....	10-12
CPM1, CPM1A, CPM2A, CPM2C.....	10-2
CQM1, CQM1H, CJ1.....	10-6
OMRON TEMPERATURE CONTROLLER	
E5AN, E5EN.....	24-2
E5CN, E5GN.....	24-4
E5ZN.....	24-6
[P]	
PLC Side Settings	
CC-Link connection (intelligent device station)	7-25
CC-Link connection (via G4).....	8-18
Computer link connection.....	4-46
Ethernet connection.....	9-20
FUJI FA PLC.....	17-30
HITACHI PLC.....	16-26
JTEKT PLC.....	13-36
KEYENCE PLC.....	11-33
MATSUSHITA PLC.....	18-39
MELSECNET/10 connection (PLC to PLC network)	6-27
MELSECNET/H connection (PLC to PLC network)	5-25
SHARP PLC.....	12-35
TOSHIBA PLC.....	14-26

Precautions	
Bar code reader connection.....	36-14,38-12
Bus connection.....	2-44
CC-Link connection (intelligent device station) ..	7-58
CHINO CONTROLLER.....	26-40
CNC CONNECTION.....	33-20,33-43,33-67,33-89
Ethernet connection.....	9-38,19-59
EXTERNAL I/O DEVICE.....	35-21
FA transparent function.....	40-34
FUJI FA PLC.....	17-40
FUJI SYS TEMPERATURE CONTROLLER..	27-37
INVERTER CONNECTION.....	31-30
JTEKT PLC.....	13-42
MELSECNET/10 connection (PLC to PLC network)	6-49
MELSECNET/H connection (PLC to PLC network)	5-31
Multiple-GT11 connection function.....	41-23
OMRON TEMPERATURE CONTROLLER... ..	24-32
PRINTER CONNECTION.....	38-12
RKC TEMPERATURE CONTROLLER.....	28-43
SERVO AMPLIFIER CONNECTION.....	32-33
SHINKO TECHNOS INDICATING CONTROLLER	25-26
SIEMENS PLC.....	22-25
SOUND OUTPUT UNIT.....	34-12
Video/RGB connection.....	37-22
YAMATAKE TEMPERATURE CONTROLLER	30-49
YOKOGAWA PLC.....	20-38
YOKOGAWA TEMPERATURE CONTROLLER	29-46
Preparatory procedures for accessing	
FA transparent function.....	40-18
Preparatory procedures for monitoring	
Allen-Bradley PLC.....	21-11,21-34
Bar code reader connection.....	36-4,38-4
Bus connection.....	2-26
CC-Link connection (intelligent device station) ..	7-7
CC-Link connection (via G4).....	8-5
CHINO CONTROLLER.....	26-19
CNC CONNECTION.....	33-6,33-23,33-46,33-70
Computer link connection.....	4-27
Direct connection to a CPU.....	3-32
Ethernet connection.....	9-4
EXTERNAL I/O DEVICE.....	35-12
FUJI FA PLC.....	17-15
FUJI SYS TEMPERATURE CONTROLLER..	27-14
Gateway function.....	42-6
HITACHI IES PLC.....	15-11
HITACHI PLC.....	16-11
INVERTER CONNECTION.....	31-15
JTEKT PLC.....	13-21
KEYENCE PLC.....	11-17
MATSUSHITA PLC.....	18-27
MELSECNET/10 connection (PLC to PLC network)	6-7,33-23
MELSECNET/H connection (PLC to PLC network)	5-7

- MES INTERFACE FUNCTION 43-5
 Microcomputer connection 23-78
 MULTI-CHANNEL FUNCTION 39-4
 Multiple-GT11 connection function 41-7
 OMRON PLC 10-31
 OMRON TEMPERATURE CONTROLLER ... 24-14
 PRINTER CONNECTION 38-4
 RKC TEMPERATURE CONTROLLER 30-23
 SERVO AMPLIFIER CONNECTION 32-14
 SHARP PLC 12-21
 SHINKO TECHNOS INDICATING CONTROLLER
 25-10
 SIEMENS PLC 22-7
 SOUND OUTPUT UNIT 34-4
 TOSHIBA PLC 14-12
 Video/RGB CONNECTION 37-12
 YAMATAKE TEMPERATURE CONTROLLER
 28-24
 YASKAWA PLC 19-22,19-40
 YOKOGAWA PLC 20-14,20-41
 YOKOGAWA TEMPERATURE CONTROLLER
 29-23
 PRINTER CONNECTION 38-1
- [Q]
 QCPU (A mode)
 CC-Link connection (intelligent device station) .. 7-2
 Computer link connection 4-6
 Direct connection to a CPU 3-2
 Ethernet connection 9-2,33-68
 MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
 QCPU (Q mode)
 Bus connection 2-3
 CC-Link connection (intelligent device station) .. 7-2
 CC-Link connection (via G4) 8-2
 Computer link connection 4-2
 Direct connection to a CPU 3-2
 Ethernet connection 9-2,33-68
 MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
 MELSECNET/H connection (PLC to PLC network)
 5-3,5-5
 QnACPU type
 Bus connection 2-5
 CC-Link connection (intelligent device station) .. 7-2
 Computer link connection 4-8
 Direct connection to a CPU 3-5
 Ethernet connection 9-2,33-68
 MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
 QnASCPU type
 Bus connection 2-8
 CC-Link connection (intelligent device station) .. 7-2
 Computer link connection 4-12
 Direct connection to a CPU 3-5
 Ethernet connection 9-2,33-68
 MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
- [R]
 Remote I/O station in the MELSECNET/H network
 system
 Computer link connection 4-19
 Direct connection to a CPU 3-25
 RKC TEMPERATURE CONTROLLER
 H-PCP-A, H-PCP-B 30-6
 H-PCP-J 30-2
 SRZ 30-9
- [S]
 SERVO AMPLIFIER
 MELSERVO-J2M Series 32-4
 MELSERVO-J2-Super Series 32-2
 MELSERVO-J3 Series 32-31
 Servo amplifier connection 32-1
 Setting on servo amplifier side 32-28
 SHARP PLC
 JW-21CU, JW-22CU 12-2
 JW-31CUH, JW-32CUH, JW-33CUH 12-5
 JW-50CUH 12-8
 JW-70CUH, JW-100CUH, JW-100CU 12-10
 Z-512J 12-13
 SHINKO TECHNOS INDICATING CONTROLLER
 ACS-13A, JC, JCM-33A, JIR-301-M Series 25-2
 DCL-33A Series 25-5
 FCD-100, FCR-100, FCR-23A, FIR, PC-900 Series
 25-4
 SIEMENS PLC
 SIMATIC S7-200 Series 22-4
 SIMATIC S7-300/400 Series 22-3
 SOUND OUTPUT UNIT 34-1
 Station NO. settings
 CHINO CONTROLLER 26-39
 FUJI FA PLC 17-39
 FUJI SYS TEMPERATURE CONTROLLER .. 27-36
 INVERTER CONNECTION 31-28
 JTEKT PLC 13-41
 OMRON TEMPERATURE CONTROLLER 24-31
 RKC TEMPERATURE CONTROLLER 30-48
 SERVO AMPLIFIER CONNECTION 32-32
 SHINKO TECHNOS INDICATING CONTROLLER
 25-25
 YAMATAKE TEMPERATURE CONTROLLER
 28-42
 YOKOGAWA TEMPERATURE CONTROLLER
 29-45
- [T]
 TEMPERATURE CONTROLLER
 OMRON TEMPERATURE CONTROLLER 24-1
 RKC TEMPERATURE CONTROLLER 30-1
 YAMATAKE TEMPERATURE CONTROLLER 28-1
 TOSHIBA PLC
 model 3000 (S2/S3) 14-5
 T2 (PU224), T2E, T2N, T3, T3H 14-2

[V]
Video/RGB CONNECTION 37-1

[Y]
YAMATAKE TEMPERATURE CONTROLLER
DMC10 28-2
SDC15, SDC25/26, SDC35/36 28-4
SDC20/21 28-6
SDC30/31 28-9
SDC40A/40B/40G 28-11
YASKAWA PLC
MP-920 19-37
MP2200, MP2300 19-39
CP-9200SH 19-11
GL120, GL130 19-2
GL60S, GL60H, GL70H 19-4
MP-920/930, CP-9300MS/9200(H), PROGIC-8
..... 19-6
MP-940 19-9
YOKOGAWA PLC
FA500 20-5
FA-M3 20-2,20-39,21-32
STARDOM 20-7
YOKOGAWA TEMPERATURE CONTROLLER
GREEN Series 29-2
UT100 Series 29-6
UT2000 Series 29-8

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company. However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 2. Failure caused by unapproved modifications, etc., to the product by the user.
 3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation of damages caused by any cause found not to be the responsibility of Mitsubishi, loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products, special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products, replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

6. Product application

- (1) In using the Mitsubishi graphic operation terminal, the usage conditions shall be that the application will not lead to a major accident even if any problem or fault should occur in the graphic operation terminal device, and that backup and fail-safe functions are systematically provided outside of the device for any problem or fault.
- (2) The Mitsubishi graphic operation terminal has been designed and manufactured for applications in general industries, etc. Thus, applications in which the public could be affected such as in nuclear power plants and other power plants operated by respective power companies, and applications in which a special quality assurance system is required, such as for Railway companies or Public service purposes shall be excluded from the graphic operation terminal applications. In addition, applications in which human life or property that could be greatly affected, such as in aircraft, medical applications, incineration and fuel devices, manned transportation, equipment for recreation and amusement, and safety devices, shall also be excluded from the graphic operation terminal range of applications. However, in certain cases, some applications may be possible, providing the user consults their local Mitsubishi representative outlining the special requirements of the project, and providing that all parties concerned agree to the special circumstances, solely at the users discretion.

Microsoft Windows, Microsoft Windows NT are registered trademarks of Microsoft Corporation in the United States and other countries.

Other company and product names herein are either trademarks or registered trademarks of their respective owners.

GRAPHIC OPERATION TERMINAL

GOT1000

GOT1000 Series Connection Manual 2/3

MODEL	GT1000-U(CON)-E
MODEL CODE	1D7M26
SH(NA)-080532ENG-H 2/3(0705)MEE	



MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.

MITSUBISHI



GRAPHIC OPERATION TERMINAL

GOT1000

GOT1000 Series Connection Manual 3/3



● SAFETY PRECAUTIONS ●

(Always read these precautions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product.


In this manual, the safety precautions are ranked as "DANGER" and "CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the  caution level may lead to a serious accident according to the circumstances. Always follow the instructions of both levels because they are important to personal safety.

Please save this manual to make it accessible when required and always forward it to the end user.

[DESIGN PRECAUTIONS]

DANGER

- Some failures of the GOT, communication unit or cable may keep the outputs on or off.
An external monitoring circuit should be provided to check for output signals which may lead to a serious accident.
Not doing so can cause an accident due to false output or malfunction.
- If a communication fault (including cable disconnection) occurs during monitoring on the GOT, communication between the GOT and PLC CPU is suspended and the GOT becomes inoperative.
For bus connection : The CPU becomes faulty and the GOT becomes inoperative.
For other than bus connection : The GOT becomes inoperative.
A system where the GOT is used should be configured to perform any significant operation to the system by using the switches of a device other than the GOT on the assumption that a GOT communication fault will occur.
Not doing so can cause an accident due to false output or malfunction.
- Do not use the GOT as the warning device that may cause a serious accident.
An independent and redundant hardware or mechanical interlock is required to configure the device that displays and outputs serious warning.
Failure to observe this instruction may result in an accident due to incorrect output or malfunction.

[DESIGN PRECAUTIONS]

DANGER

- Incorrect operation of the touch switch(s) may lead to a serious accident if the GOT backlight is gone out.

When the GOT backlight goes out, the POWER LED flickers (green/orange) and the display section turns black and causes the monitor screen to appear blank, while the input of the touch switch(s) remains active.

This may confuse an operator in thinking that the GOT is in "screensaver" mode, who then tries to release the GOT from this mode by touching the display section, which may cause a touch switch to operate.

Note that the following occurs on the GOT when the backlight goes out.

The POWER LED flickers (green/orange) and the monitor screen appears blank.

CAUTION

- Do not bundle the control and communication cables with main-circuit, power or other wiring. Run the above cables separately from such wiring and keep them a minimum of 100mm apart. Not doing so noise can cause a malfunction.

[MOUNTING PRECAUTIONS]

DANGER

- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the GOT to/from the panel.
Not doing so can cause the GOT to fail or malfunction.
- Be sure to shut off all phases of the external power supply used by the system before mounting or removing the communication unit, option function board or multi-color display board onto/from the GOT.
Not doing so can cause the unit to fail or malfunction.
- Before mounting an optional function board or Multi-color display board, wear a static discharge wrist strap to prevent the board from being damaged by static electricity.

CAUTION

- Use the GOT in the environment that satisfies the general specifications described in this manual.
Not doing so can cause an electric shock, fire, malfunction or product damage or deterioration.
- When mounting the GOT to the control panel, tighten the mounting screws in the specified torque range.
Undertightening can cause the GOT to drop, short circuit or malfunction.
Overtightening can cause a drop, short circuit or malfunction due to the damage of the screws or the GOT.

[MOUNTING PRECAUTIONS]

CAUTION

- When loading the communication unit to the GOT, fit it to the connection interface of the GOT and tighten the mounting screws in the specified torque range.
Overtightening can cause a drop, failure or malfunction due to the damage of the screws or unit.
- When mounting the multi-color display board onto the GOT, tighten the mounting screws within the specified torque range.
Loose tightening may cause the unit and/or GOT to malfunction due to poor contact.
Overtightening may damage the screws, unit and/or GOT; they might malfunction.
- When mounting an optional function board onto the GT15□□, fully connect it to the connector until you hear a click.
- When mounting an optional function board onto the GT15□□, fully connect it to the connector.
- Push the multi-color display board onto the corresponding connector so that it will be secured firmly.
- When inserting a CF card into the GOT, push it into the insertion slot until the CF card eject button will pop out.
Failure to do so may cause a malfunction due to poor contact.
- When inserting/removing a CF card into/from the GOT, turn the CF card access switch off in advance.
Failure to do so may corrupt data within the CF card.
- When removing a CF card from the GOT, make sure to support the CF card by hand, as it may pop out.
Failure to do so may cause the CF card to drop from the GOT and break.

[WIRING PRECAUTIONS]

DANGER

- Be sure to shut off all phases of the external power supply used by the system before wiring.
Failure to do so may result in an electric shock, product damage or malfunctions.

[WIRING PRECAUTIONS]

CAUTION

- Please make sure to ground FG terminal and LG terminal of the GOT power supply section by applying Class D Grounding (Class 3 Grounding Method) or higher which is used exclusively for the GOT.
Not doing so may cause an electric shock or malfunction.
- Be sure to tighten any unused terminal screws with a torque of 0.5 to 0.8N•m.
Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Use applicable solderless terminals and tighten them with the specified torque.
If any solderless spade terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Correctly wire the GOT power supply section after confirming the rated voltage and terminal arrangement of the product.
Not doing so can cause a fire or failure.
- Tighten the terminal screws of the GOT power supply section in the specified torque range.
Undertightening can cause a short circuit or malfunction.
Overtightening can cause a short circuit or malfunction due to the damage of the screws or the GOT.
- Exercise care to avoid foreign matter such as chips and wire offcuts entering the GOT. Not doing so can cause a fire, failure or malfunction.
- Plug the bus connection cable by inserting it into the connector of the connected unit until it "clicks".
After plugging, check that it has been inserted snugly.
Not doing so can cause a malfunction due to a contact fault.
- Plug the communication cable into the connector of the connected unit and tighten the mounting and terminal screws in the specified torque range.
Undertightening can cause a short circuit or malfunction.
Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

[TEST OPERATION PRECAUTIONS]

DANGER

- Before performing the test operations of the user creation monitor screen (such as turning ON or OFF bit device, changing the word device current value, changing the settings or current values of the timer or counter, and changing the buffer memory current value), read through the manual carefully and make yourself familiar with the operation method.
During test operation, never change the data of the devices which are used to perform significant operation for the system.
False output or malfunction can cause an accident.

[STARTUP/MAINTENANCE PRECAUTIONS]

DANGER

- When power is on, do not touch the terminals.
Doing so can cause an electric shock or malfunction.
- Connect the battery correctly.
Do not discharge, disassemble, heat, short, solder or throw the battery into the fire.
Incorrect handling may cause the battery to generate heat, burst or take fire, resulting in injuries or fires
- Before starting cleaning or terminal screw retightening, always switch off the power externally in all phases.
Not switching the power off in all phases can cause a unit failure or malfunction.
Undertightening can cause a short circuit or malfunction.
Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

[STARTUP/MAINTENANCE PRECAUTIONS]

CAUTION

- Do not disassemble or modify the unit.
Doing so can cause a failure, malfunction, injury or fire.
- Do not touch the conductive and electronic parts of the unit directly.
Doing so can cause a unit malfunction or failure.
- The cables connected to the unit must be run in ducts or clamped.
Not doing so can cause the unit or cable to be damaged due to the dangling, motion or accidental pulling of the cables or can cause a malfunction due to a cable connection fault.
- When unplugging the cable connected to the unit, do not hold and pull the cable portion.
Doing so can cause the unit or cable to be damaged or can cause a malfunction due to a cable connection fault.
- Do not drop or apply strong impact to the unit.
Doing so may damage the unit.
- Do not drop or give an impact to the battery mounted to the unit.
Doing so may damage the battery, causing the battery fluid to leak inside the battery.
If the battery is dropped or given an impact, dispose of it without using.
- Before touching the unit, always touch grounded metal, etc. to discharge static electricity from human body, etc.
Not doing so can cause the unit to fail or malfunction.

[BACKLIGHT REPLACEMENT PRECAUTIONS]

DANGER

- Be sure to shut off all phases of the external power supply of the GOT (and the PLC CPU in the case of a bus topology) and remove the GOT from the control panel before replacing the backlight (when using the GOT with the backlight replaceable by the user).
Not doing so can cause an electric shock.
Replacing a backlight without removing the GOT from the control panel can cause the backlight or control panel to drop, resulting in an injury.

CAUTION

- Wear gloves for the backlight replacement when using the GOT with the backlight replaceable by the user.
Not doing so can cause an injury.
- Before replacing a backlight, allow 5 minutes or more after turning off the GOT when using the GOT with the backlight replaceable by the user.
Not doing so can cause a burn from heat of the backlight.

[DISPOSAL PRECAUTIONS]

CAUTION

- When disposing of the product, handle it as industrial waste.

[TRANSPORTATION PRECAUTIONS]

CAUTION

- When transporting lithium batteries, make sure to treat them based on the transport regulations.
(For details on models subject to restrictions, refer to the User's Manual for the GOT you are using.)
- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of the User's Manual, as they are precision devices.
Failure to do so may cause the unit to fail.
Check if the unit operates correctly after transportation.

REVISIONS

* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Oct., 2004	SH(NA)-080532ENG-A	First edition
Mar., 2005	SH(NA)-080532ENG-B	<p>Compatible with GT Designer2 Version2.09K</p> <p>Addition</p> <p>Chapter 5, Chapter 6, Chapter 7, Chapter 8, Chapter 10, Chapter 11, Chapter 12, Chapter 13, Chapter 19, Chapter 20, Chapter 21, Chapter 22, Chapter 23, Section 3.1.8, Section 3.1.9</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>SAFETY PRECAUTIONS, ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1, Section 1.1, 1.2, 2.1.3, 2.1.5, 2.1.7, 2.3, 3.1.4, 3.1.5, 3.1.6, 3.1.7, 4.1.7, 4.4.1, 14.1.3, 14.2, 15.3.3, 21.3, 21.4.4, 21.5</p>
Oct., 2005	SH(NA)-080532ENG-C	<p>Compatible with GT Designer2 Version2.18U</p> <p>Addition</p> <p>Chapter 10, Chapter 20, Chapter 21, Chapter 22, Chapter 23, Chapter 26, Chapter 27, Section 14.1.9, Section 18.1.2, Section 24.4.3</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>SAFETY PRECAUTIONS, ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1 to 9, Chapter 11 to 19, Chapter 24, Chapter 25 Chapter 28 to 30</p> <p>Volume separated</p> <p>Separated the manual as the following. SH(NA)-080532ENG-C 1/2:Chapter 1 to 18 SH(NA)-080532ENG-C 2/2:Chapter 19 to 30</p>

(Continued to next page)

Print Date	* Manual Number	Revision
Jan., 2006	SH(NA)-080532ENG-D	<p>Compatible with GT Designer2 Version2.27D</p> <p>Addition</p> <p>Chapter 26, Section 29.2.2, Section 29.4.5, Section 29.5.1, Section 29.5.3</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1, Section 2.2, 3.3, 4.3, 5.2, 6.2, 7.2, 8.2, 9.1.2, 9.2, 9.3, 10.3, 11.3, 12.3, 13.3, 14.3, 15.3, 16.3, 17.3, 18.3, 19.6, 20.3, 21.3, 22.3, 23.3, 24.3, 25.1, 25.2, 25.4, 27.1, 27.2, 27.3, 27.4, 28.3, 29.3, 30.3, 31.2</p>
Apr., 2006	SH(NA)-080532ENG-E	<p>Compatible with GT Designer2 Version2.32J</p> <p>Addition</p> <p>Chapter 5, Section 7.1.2, Section 7.1.3, Section 7.3.2, Section 7.3.3, Section 18.1.3, Chapter 14, Chapter 23, Chapter 29, Chapter 36</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1, Section 2.2, 3.3, 4.3, 6.2, 7.2, 8.2, 9.2, 10.3, 11.3, 12.3, 13.3, 15.3, 16.3, 17.3, 18.3, 19.3, 20.3, 21.6, 22.3, 24.3, 25.3, 26.3, 27.3, 28.2, 30.2, 31.1.3, 31.2.2, 31.3.2, 31.4.2, 32.3, 34.3, 35.2</p>
Nov., 2006	SH(NA)-080532ENG-F	<p>Compatible with GT Designer2 Version2.43V</p> <p>Addition</p> <p>Chapter 16, Chapter 17, Chapter 25, Chapter 28, Section 19.2, Section 20.2 Chapter 40</p> <p>Section numbers revised</p> <p>Revised throughout the manual due to addition of the new connection types and functions.</p> <p>Partial correction</p> <p>ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL, HOW TO READ THIS MANUAL, Chapter 1 to 6, 9, 10, 13, 23, 30, 35, 37, 40</p> <p>Volume separated</p> <p>Separated the manual as the following.</p> <p>SH(NA)-080532ENG-F 1/3:Chapter 1 to 9</p> <p>SH(NA)-080532ENG-F 2/3:Chapter 10 to 22</p> <p>SH(NA)-080532ENG-F 3/3:Chapter 23 to 40</p>

(Continued to next page)

Print Date	* Manual Number	Revision
Feb., 2007	SH(NA)-080532ENG-G	Compatible with GT Designer2 Version2.47Z <div style="border: 1px solid black; padding: 2px;">Partial correction</div> HOW TO READ THIS MANUAL, Chapter 1, 10, 19, 20, 23, 39, 40
May., 2007	SH(NA)-080532ENG-H	Compatible with GT Designer2 Version2.58L <div style="border: 1px solid black; padding: 2px;">Addition</div> Section 18.1.10, 21.1.3, 21.2, 30.1.3 Chapter 26, 33, 34 <div style="border: 1px solid black; padding: 2px;">Section numbers revised</div> Revised throughout the manual due to addition of the new connection types and functions. <div style="border: 1px solid black; padding: 2px;">Partial correction</div> HOW TO READ THIS MANUAL, Chapter 3, 4, 10, 23, 40, 41

Japanese Manual Version SH-080511-M

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2004 MITSUBISHI ELECTRIC CORPORATION

INTRODUCTION

Thank you for choosing Mitsubishi Graphic Operation Terminal (Mitsubishi GOT).

Read this manual and make sure you understand the functions and performance of the GOT thoroughly in advance to ensure correct use.

CONTENTS

SAFETY PRECAUTIONS	A - 1
REVISIONS.....	A - 8
INTRODUCTION.....	A - 11
CONTENTS	A - 11
ABOUT MANUALS	A - 34
ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL.....	A - 35

Connection Manual 1/3

1. OVERVIEW 1 - 1 to 1 - 22

1.1 Connections and Functions Supported by GOT	1 - 4
1.2 Overall System Configurations	1 - 7

MITSUBISHI PLC CONNECTIONS

2. BUS CONNECTION 2 - 1 to 2 - 54

2.1 System Configuration	2 - 2
2.1.1 Connecting to QCPU (Q mode).....	2 - 3
2.1.2 Connecting to QnACPU or AnCPU type.....	2 - 5
2.1.3 Connecting to QnASCPU or AnSCPU type.....	2 - 8
2.1.4 Connecting to A0J2HCPU	2 - 14
2.1.5 Connecting to motion controller CPU (Q Series).....	2 - 15
2.1.6 Connecting to motion controller CPU (A273UCPU, A273UHCPU(-S3), A373UCPU(-S3)).....	2 - 16
2.1.7 Connecting to motion controller CPU (A171SHCPUN, A172SHCPUN, A173UHCPU(-S1)).....	2 - 20
2.2 Preparatory Procedures for Monitoring	2 - 26
2.2.1 Installing OS onto GOT	2 - 27
2.2.2 Checking OS installation on GOT.....	2 - 28
2.2.3 Setting communication interface (Communication settings).....	2 - 29
2.2.4 Downloading project data	2 - 36
2.2.5 Attaching communication unit and connecting cable.....	2 - 37
2.2.6 Verifying GOT recognizes controllers	2 - 39
2.2.7 Checking for normal monitoring.....	2 - 42

2.3	Precautions	2 - 44
2.4	Communication Check Sheet	2 - 51
2.5	List of Functions Added by Version Upgrade	2 - 53

3. DIRECT CONNECTION TO CPU 3 - 1 to 3 - 54

3.1	System Configuration	3 - 2
3.1.1	Connecting to QCPU	3 - 2
3.1.2	Connecting to QnACPU	3 - 5
3.1.3	Connecting to ACPU	3 - 7
3.1.4	Connecting to FXCPU (FX0, FX0S, FX0N, FX1, FX2, FX2c Series)	3 - 9
3.1.5	Connecting to FXCPU (FX1S, FX1N, FX2N Series)	3 - 12
3.1.6	Connecting to FXCPU (FX1NC, FX2NC Series)	3 - 17
3.1.7	Connecting to FXCPU (FX3U, FX3UC Series)	3 - 20
3.1.8	Connecting to motion controller CPU (Q Series)	3 - 25
3.1.9	Connecting to motion controller CPU (A Series)	3 - 25
3.1.10	Connecting to remote I/O station in MELSECNET/H network system	3 - 25
3.2	Connection Cable	3 - 26
3.2.1	RS-232 cable	3 - 27
3.2.2	RS-422 cable	3 - 30
3.3	Preparatory Procedure for Monitoring	3 - 32
3.3.1	Installing OS onto GOT	3 - 33
3.3.2	Checking OS installation on GOT	3 - 34
3.3.3	Setting communication interface (Communication settings)	3 - 35
3.3.4	Downloading project data	3 - 40
3.3.5	Attaching communication unit and connecting cable	3 - 41
3.3.6	Verifying GOT recognizes controllers	3 - 46
3.3.7	Checking for normal monitoring	3 - 49
3.4	Precautions	3 - 52
3.5	List of Functions Added by Version Upgrade	3 - 53

4. COMPUTER LINK CONNECTION 4 - 1 to 4 - 60

4.1	System Configuration	4 - 2
4.1.1	Connecting to QCPU (Q mode)	4 - 2
4.1.2	Connecting to QCPU (A mode)	4 - 6
4.1.3	Connecting to QnACPU type	4 - 8
4.1.4	Connecting to QnASCPU type	4 - 12
4.1.5	Connecting to AnCPU type	4 - 15
4.1.6	Connecting to AnSCPU type	4 - 17
4.1.7	Connecting to motion controller CPU (Q Series)	4 - 19
4.1.8	Connecting to motion controller CPU (A Series)	4 - 19
4.1.9	Connecting to remote I/O station in MELSECNET/H network system	4 - 19
4.2	Connection Cable	4 - 20
4.2.1	RS-232 cable	4 - 21
4.2.2	RS-422 cable	4 - 25
4.3	Preparatory Procedures for Monitoring	4 - 27

4.3.1	Installing OS onto GOT	4 - 28
4.3.2	Checking OS installation on GOT	4 - 29
4.3.3	Setting communication interface (Communication settings).....	4 - 30
4.3.4	Downloading project data	4 - 35
4.3.5	Attaching communication unit and connecting cable.....	4 - 36
4.3.6	Verifying GOT recognizes controllers	4 - 41
4.3.7	Checking for normal monitoring.....	4 - 43
4.4	PLC Side Setting	4 - 46
4.4.1	Connecting serial communication module (Q Series)	4 - 47
4.4.2	Connecting serial communication module (QnA Series)	4 - 50
4.4.3	Connecting computer link module	4 - 53
4.5	Precautions	4 - 59
4.6	List of Functions Added by Version Upgrade	4 - 60

5. MELSECNET/H CONNECTION (PLC TO PLC NETWORK) 5 - 1 to 5 - 32

5.1	System Configuration	5 - 2
5.1.1	Connecting to optical loop system.....	5 - 3
5.1.2	Connecting to the coaxial bus system	5 - 5
5.2	Preparatory Procedures for Monitoring	5 - 7
5.2.1	Installing OS onto GOT	5 - 8
5.2.2	Checking OS installation on GOT.....	5 - 9
5.2.3	Setting communication interface (Communication settings).....	5 - 10
5.2.4	Downloading project data	5 - 14
5.2.5	Attaching communication unit and connecting cable.....	5 - 15
5.2.6	Verifying GOT recognizes controllers	5 - 19
5.2.7	Checking for normal monitoring.....	5 - 21
5.3	PLC Side Setting	5 - 25
5.4	Precautions	5 - 31
5.5	List of Functions Added by Version Upgrade	5 - 32

6. MELSECNET/10 CONNECTION (PLC TO PLC NETWORK) 6 - 1 to 6 - 50

6.1	System Configuration	6 - 2
6.1.1	Connecting to optical loop system.....	6 - 3
6.1.2	Connecting to the coaxial bus system	6 - 5
6.2	Preparatory Procedures for Monitoring	6 - 7
6.2.1	Installing OS onto GOT	6 - 8
6.2.2	Checking OS installation on GOT.....	6 - 9
6.2.3	Setting communication interface (Communication settings).....	6 - 10
6.2.4	Downloading project data	6 - 16
6.2.5	Attaching communication unit and connecting cable.....	6 - 17
6.2.6	Verifying GOT recognizes controllers	6 - 21
6.2.7	Checking for normal monitoring.....	6 - 23
6.3	PLC Side Setting	6 - 27
6.3.1	Connecting to MELSECNET/H network module	6 - 27
6.3.2	Connecting to MELSECNET/10 network module (QnA Series)	6 - 33

6.3.3	Connecting to MELSECNET/10 network module (A Series)	6 - 41
6.4	Precautions	6 - 49
6.5	List of Functions Added by Version Upgrade	6 - 50

7. CC-Link CONNECTION (INTELLIGENT DEVICE STATION) 7 - 1 to 7 - 60

7.1	System Configuration	7 - 2
7.1.1	Connecting with CC-Link Ver.1 compatible	7 - 2
7.1.2	Connecting with CC-Link Ver.2 compatible	7 - 4
7.1.3	Connecting with CC-Link Ver.1/Ver.2 compatibles mixed	7 - 5
7.2	Preparatory Procedures for Monitoring	7 - 7
7.2.1	Installing OS onto GOT	7 - 8
7.2.2	Checking OS installation on GOT	7 - 9
7.2.3	Setting communication interface (Communication settings)	7 - 10
7.2.4	Downloading project data	7 - 16
7.2.5	Attaching communication unit and connecting cable	7 - 17
7.2.6	Verifying GOT recognizes controllers	7 - 20
7.2.7	Checking for normal monitoring	7 - 22
7.3	PLC Side Setting	7 - 25
7.3.1	Connecting to CC-Link module (Q Series) with Ver.1 compatible	7 - 26
7.3.2	Connecting to CC-Link module (Q Series) with Ver.2 compatible	7 - 31
7.3.3	Connecting to CC-Link module (Q Series) with Ver.1/Ver.1 compatibles mixed	7 - 36
7.3.4	Connecting to CC-Link module (QnA Series)	7 - 41
7.3.5	Connecting to CC-Link module (A Series)	7 - 49
7.4	Precautions	7 - 58
7.5	List of Functions Added by Version Upgrade	7 - 59

8. CC-Link CONNECTION (Via G4) 8 - 1 to 8 - 24

8.1	System Configuration	8 - 2
8.1.1	Connecting to QCPU (Q mode)	8 - 2
8.1.2	Connecting to motion controller CPU (Q Series)	8 - 4
8.2	Preparatory Procedures for Monitoring	8 - 5
8.2.1	Installing OS onto GOT	8 - 6
8.2.2	Checking OS installation on GOT	8 - 7
8.2.3	Setting communication interface (Communication settings)	8 - 8
8.2.4	Downloading project data	8 - 10
8.2.5	Attaching communication unit and connecting cable	8 - 11
8.2.6	Verifying GOT recognizes controllers	8 - 14
8.2.7	Checking for normal monitoring	8 - 16
8.3	PLC Side Settings	8 - 18
8.4	List of Functions Added by Version Upgrade	8 - 23

9. ETHERNET CONNECTION 9 - 1 to 9 - 40

9.1	System Configuration	9 - 2
-----	----------------------------	-------

9.2	Preparatory Procedures for Monitoring	9 - 4
9.2.1	Installing OS onto GOT	9 - 5
9.2.2	Checking OS installation on GOT	9 - 6
9.2.3	Setting communication interface (Communication settings)	9 - 7
9.2.4	Downloading project data	9 - 12
9.2.5	Attaching communication unit and connecting cable	9 - 13
9.2.6	Verifying GOT recognizes controllers	9 - 14
9.2.7	Checking for normal monitoring	9 - 16
9.3	PLC Side Setting	9 - 20
9.3.1	Connecting to Ethernet module (Q Series)	9 - 20
9.3.2	Connecting to Ethernet module (QnA Series)	9 - 26
9.3.3	Connecting to Ethernet module (A Series)	9 - 32
9.4	Precautions	9 - 38
9.5	List of Functions Added by Version Upgrade	9 - 39

Connection Manual 2/3

THIRD PARTY PLC CONNECTIONS

10. CONNECTION TO OMRON PLC 10 - 1 to 10 - 66

10.1	System Configuration	10 - 2
10.1.1	When connecting to CPM1, CPM1A, CPM2A or CPM2C	10 - 2
10.1.2	Connecting to CQM1, CQM1H, CJ1 or CP1	10 - 6
10.1.3	Connecting to C200HS, C200H, C200H or CS1	10 - 12
10.1.4	Connecting to C1000H/C2000H, CV500/CV1000/CV2000, CVM1	10 - 18
10.2	Connection Cable	10 - 22
10.2.1	RS-232 cable	10 - 23
10.2.2	RS-422 cable	10 - 26
10.3	Preparatory Procedures for Monitoring	10 - 31
10.3.1	Installing OS onto GOT	10 - 32
10.3.2	Checking OS installation on GOT	10 - 33
10.3.3	Setting communication interface (Communication settings)	10 - 34
10.3.4	Downloading project data	10 - 37
10.3.5	Attaching communication unit and connecting cable	10 - 38
10.3.6	Verifying GOT recognizes controllers	10 - 43
10.3.7	Checking for normal monitoring	10 - 45
10.4	PLC Side Setting	10 - 48
10.4.1	Connecting CPM2A, CQM1, CQM1H, C200H or RS-232C adapter	10 - 49
10.4.2	Connecting CJ1, CS1 or CP1	10 - 50
10.4.3	Connecting CV500/CV1000/CV2000 or CVM1	10 - 53
10.4.4	Connecting connection cable	10 - 55
10.4.5	Connecting rack type host link unit	10 - 56
10.4.6	Connecting serial communication unit	10 - 61
10.4.7	Connecting communication board, serial communication board (CQM1-SCB41)	10 - 62
10.4.8	Connecting serial communication board (CS1W-SCB21, CS1W-SCB41)	10 - 63
10.4.9	Connecting RS-422A/485 Option board	10 - 65
10.5	List of Functions Added by Version Upgrade	10 - 66

11. CONNECTON TO KEYENCE PLC

11 - 1 to 11 - 36

11.1	System configuration	11 - 2
11.1.1	Connecting to KV-1000.....	11 - 3
11.1.2	Connecting to KV-700.....	11 - 6
11.2	Connection cable	11 - 9
11.2.1	RS-232 cable.....	11 - 10
11.2.2	RS-422 cable.....	11 - 13
11.2.3	RS-485 cable.....	11 - 15
11.3	Preparatory Procedures for Monitoring	11 - 17
11.3.1	Installing OS onto GOT.....	11 - 18
11.3.2	Checking OS installation on GOT.....	11 - 18
11.3.3	Setting communication interface (Communication settings).....	11 - 20
11.3.4	Downloading project data.....	11 - 23
11.3.5	Attaching communication unit and connecting cable.....	11 - 24
11.3.6	Verifying GOT recognizes controllers.....	11 - 29
11.3.7	Checking for normal monitoring.....	11 - 31
11.4	PLC Side Setting	11 - 33
11.4.1	Connecting KV-1000.....	11 - 33
11.4.2	Connecting KV-700.....	11 - 33
11.4.3	Connecting multi-communication unit (KV-L20R, KV-L20).....	11 - 34
11.5	List of Functions Added by Version Upgrade	11 - 36

12. CONNECTION TO SHARP PLC

12 - 1 to 12 - 42

12.1	System Configuration	12 - 2
12.1.1	Connecting to JW-21CU or JW-22CU.....	12 - 2
12.1.2	Connecting to JW-31CUH, JW-32CUH or JW-33CUH.....	12 - 5
12.1.3	Connecting to JW-50CUH.....	12 - 8
12.1.4	Connecting to JW-70CUH, JW-100CUH or JW-100CU.....	12 - 10
12.1.5	Connecting to Z-512J.....	12 - 13
12.2	Connection Cable	12 - 15
12.2.1	RS-232 cable.....	12 - 16
12.2.2	RS-422 cable.....	12 - 18
12.3	Preparatory Procedures for Monitoring	12 - 21
12.3.1	Installing OS onto GOT.....	12 - 22
12.3.2	Checking OS installation on GOT.....	12 - 23
12.3.3	Setting communication interface (Communication settings).....	12 - 24
12.3.4	Downloading project data.....	12 - 26
12.3.5	Attaching communication unit and connecting cable.....	12 - 27
12.3.6	Verifying GOT recognizes controllers.....	12 - 31
12.3.7	Checking for normal monitoring.....	12 - 33
12.4	PLC Side Setting	12 - 35
12.4.1	Connecting to JW-22CU, JW-70CUH, JW-100CUH or JW-100CU.....	12 - 36
12.4.2	Connecting to JW-32CUH, JW-33CUH or Z-512J.....	12 - 37
12.4.3	Connecting to the link unit (JW-31CM).....	12 - 38
12.4.4	Connecting to the link unit (JW-10CM or ZW-10CM).....	12 - 40

13. CONNECTION TO JTEKT PLC**13 - 1 to 13 - 44**

13.1	System Configuration	13 - 2
13.1.1	Connecting to PC3JG or PC3JG-P	13 - 2
13.1.2	Connecting to PC3J or PC3JL.....	13 - 5
13.1.3	Connecting to PC2J.....	13 - 9
13.1.4	Connecting to PC2JC, PC2J16P or PC2J16PR.....	13 - 12
13.2	Connection Cable	13 - 15
13.2.1	RS-232 cable.....	13 - 15
13.2.2	RS-422 cable.....	13 - 17
13.3	Preparatory Procedures for Monitoring	13 - 21
13.3.1	Installing OS onto GOT	13 - 22
13.3.2	Checking OS installation on GOT.....	13 - 23
13.3.3	Setting communication interface (Communication settings).....	13 - 24
13.3.4	Downloading project data	13 - 27
13.3.5	Attaching communication unit and connecting cable.....	13 - 28
13.3.6	Verifying GOT recognizes controllers.....	13 - 32
13.3.7	Checking for normal monitoring.....	13 - 34
13.4	PLC Side Setting	13 - 36
13.4.1	Connecting to PC3JG, PC3JG-P, PC3J, PC3JL or PC2J	13 - 36
13.4.2	Connecting to PC2JC.....	13 - 37
13.4.3	Connecting to PC2J16P or PC2J16PR	13 - 38
13.4.4	RS-232/RS-422 interface converter setting.....	13 - 39
13.4.5	Link unit setting.....	13 - 40
13.4.6	Station NO. settings.....	13 - 41
13.5	Precautions	13 - 42
13.5.1	Station No. settings of the PLC side.....	13 - 42
13.5.2	GOT clock function	13 - 42
13.5.3	System configuration	13 - 42
13.5.4	System alarm.....	13 - 42
13.5.5	Version of PC3J.....	13 - 42
13.5.6	Device range	13 - 42
13.6	List of Functions Added by Version Upgrade	13 - 43

14. CONNECTION TO TOSHIBA PLC**14 - 1 to 14 - 28**

14.1	System Configuration	14 - 2
14.1.1	Connecting to T2 (PU224), T2E, T2N, T3 or T3H	14 - 2
14.1.2	Connecting to model 2000(S2), model 3000 (S3)	14 - 5
14.2	Connection Cable	14 - 7
14.2.1	RS-232 cable.....	14 - 8
14.2.2	RS-422 cable.....	14 - 10
14.3	Preparatory Procedures for Monitoring	14 - 12
14.3.1	Installing OS onto GOT	14 - 13
14.3.2	Checking OS installation on GOT.....	14 - 14
14.3.3	Setting communication interface (Communication settings).....	14 - 15

14.3.4	Downloading project data	14 - 17
14.3.5	Attaching communication unit and connecting cable	14 - 18
14.3.6	Verifying GOT recognizes controllers	14 - 22
14.3.7	Checking for normal monitoring	14 - 24
14.4	PLC Side Setting	14 - 26
14.4.1	Connecting to T2 (PU224), T2E or T2N	14 - 26
14.4.2	Connecting to T3 or T3H	14 - 27
14.4.3	Connecting to model 3000 (S2/S3).....	14 - 27
14.5	List of Functions Added by Version Upgrade	14 - 28

15. CONNECTION TO HITACHI IES PLC

15 - 1 to 15 - 28

15.1	System Configuration	15 - 2
15.1.1	Connecting to large-sized H series	15 - 2
15.1.2	Connecting to H-200 to 252 series, H series board type or EH-150 series	15 - 5
15.2	Connection Cable	15 - 6
15.2.1	RS-232 cable	15 - 7
15.2.2	RS-422 cable	15 - 9
15.3	Preparatory Procedures for Monitoring	15 - 11
15.3.1	Installing OS onto GOT	15 - 12
15.3.2	Checking OS installation on GOT	15 - 13
15.3.3	Setting communication interface (Communication settings).....	15 - 14
15.3.4	Downloading project data	15 - 17
15.3.5	Attaching communication unit and connecting cable	15 - 18
15.3.6	Verifying GOT recognizes controllers	15 - 22
15.3.7	Checking for normal monitoring	15 - 24
15.4	PLC Side Setting	15 - 26
15.5	List of Functions Added by Version Upgrade	15 - 28

16. CONNECTION TO HITACHI PLC

16 - 1 to 16 - 28

16.1	System Configuration	16 - 2
16.1.1	Connecting to S10V Series.....	16 - 2
16.1.2	Connecting to S10mini Series	16 - 5
16.2	Connection Cable	16 - 7
16.2.1	RS-232 cable	16 - 8
16.2.2	RS-422 cable	16 - 10
16.3	Preparatory Procedures for Monitoring	16 - 11
16.3.1	Installing OS onto GOT	16 - 12
16.3.2	Checking OS installation on GOT	16 - 13
16.3.3	Setting communication interface (Communication settings).....	16 - 14
16.3.4	Downloading project data	16 - 17
16.3.5	Attaching communication unit and connecting cable	16 - 18
16.3.6	Verifying GOT recognizes controllers	16 - 22
16.3.7	Checking for normal monitoring	16 - 24
16.4	PLC Side Setting	16 - 26
16.4.1	Connecting to communication module.....	16 - 27

17. CONNECTION TO FUJI FA PLC **17 - 1 to 17 - 42**

17.1	System Configuration	17 - 2
17.1.1	Connecting to MICREX-F55	17 - 2
17.1.2	Connecting to MICREX-F70	17 - 4
17.1.3	Connecting to MICREX-F120S/140S/150S	17 - 7
17.2	Connection Cable	17 - 10
17.2.1	RS-232 cable	17 - 11
17.2.2	RS-485 cable	17 - 13
17.3	Preparatory Procedures for Monitoring	17 - 15
17.3.1	Installing OS onto GOT	17 - 16
17.3.2	Checking OS installation on GOT	17 - 17
17.3.3	Setting communication interface (Communication settings)	17 - 18
17.3.4	Downloading project data	17 - 21
17.3.5	Attaching communication unit and connecting cable	17 - 22
17.3.6	Verifying GOT recognizes controllers	17 - 26
17.3.7	Checking for normal monitoring	17 - 28
17.4	PLC Side Setting	17 - 30
17.4.1	Connecting to NV1L-RS2, NC1L-RS2	17 - 31
17.4.2	Connecting to NC1L-RS4	17 - 33
17.4.3	Connecting to FFU120B	17 - 35
17.4.4	RS-232/RS-422 interface converter setting	17 - 37
17.4.5	Station NO. settings	17 - 39
17.5	Precautions	17 - 40
17.5.1	Station No. settings of the PLC side	17 - 40
17.5.2	GOT clock function	17 - 40
17.6	List of Functions Added by Version Upgrade	17 - 41

18. CONNECTION TO MATSUSHITA PLC **18 - 1 to 18 - 42**

18.1	System Configuration	18 - 2
18.1.1	Connecting to FP0-C16CT or FP0-C32CT	18 - 2
18.1.2	Connecting to FP1-C24C or FP1-C40C	18 - 4
18.1.3	Connecting to FP2 or FP2SH	18 - 6
18.1.4	Connecting to FP3	18 - 8
18.1.5	Connecting to FP5	18 - 10
18.1.6	Connecting to FP10 (S)	18 - 12
18.1.7	Connecting to FP10SH	18 - 14
18.1.8	Connecting to FP-M (C20TC) or FP-M (C32TC)	18 - 16
18.1.9	Connecting to FP SIGMA	18 - 17
18.1.10	Connecting to FP-X	18 - 19
18.2	Connection Cable	18 - 22
18.2.1	RS-232 Cable	18 - 22
18.2.2	RS-422 Cable	18 - 25
18.3	Preparatory Procedures for Monitoring	18 - 27
18.3.1	Installing OS onto GOT	18 - 28

18.3.2	Checking OS installation on GOT	18 - 29
18.3.3	Setting communication interface (Communication settings).....	18 - 30
18.3.4	Downloading project data	18 - 32
18.3.5	Attaching communication unit and connecting cable.....	18 - 33
18.3.6	Verifying GOT recognizes controllers	18 - 35
18.3.7	Checking for normal monitoring.....	18 - 37
18.4	PLC Side Setting	18 - 39
18.5	List of Functions Added by Version Upgrade	18 - 41

19. CONNECTION TO YASKAWA PLC 19 - 1 to 19 - 60

19.1	Serial Connection	19 - 2
19.1.1	System configuration(GL120 or GL130).....	19 - 2
19.1.2	System configuration(GL60S, GL60H or GL70H).....	19 - 4
19.1.3	System configuration(MP-920/930, CP-9300MS/9200(H) or PROGIC-8).....	19 - 6
19.1.4	System configuration(MP-940)	19 - 9
19.1.5	System configuration(CP-9200SH).....	19 - 11
19.1.6	System configuration(MP2200 or MP2300).....	19 - 13
19.1.7	Connection Cable	19 - 15
19.1.8	Preparatory Procedure for Monitoring	19 - 22
19.1.9	Installing OS onto GOT.....	19 - 23
19.1.10	Checking OS installation on GOT.....	19 - 24
19.1.11	Setting communication interface (Communication settings).....	19 - 25
19.1.12	Downloading project data	19 - 28
19.1.13	Attaching communication unit and connecting cable.....	19 - 29
19.1.14	Verifying GOT recognizes controllers	19 - 33
19.1.15	Checking for normal monitoring.....	19 - 35
19.1.16	PLC Side Setting	19 - 36
19.2	Ethernet Connection	19 - 37
19.2.1	System configuration(MP-920)	19 - 37
19.2.2	System configuration(MP2200 or MP2300).....	19 - 39
19.2.3	Preparatory procedures for monitoring	19 - 40
19.2.4	Installing OS onto GOT.....	19 - 41
19.2.5	Checking OS installation on GOT.....	19 - 42
19.2.6	Setting communication interface (Communication settings).....	19 - 43
19.2.7	Downloading project data	19 - 48
19.2.8	Attaching communication unit and connecting cable.....	19 - 49
19.2.9	Verifying GOT recognizes controller.....	19 - 50
19.2.10	Checking for normal monitoring.....	19 - 52
19.2.11	PLC side setting.....	19 - 56
19.2.12	Precautions.....	19 - 59
19.3	List of Functions Added by Version Upgrade	19 - 60

20. CONNECTION TO YOKOGAWA PLC 20 - 1 to 20 - 62

20.1	Serial Connection	20 - 2
20.1.1	System configuration(FA-M3).....	20 - 2
20.1.2	System configuration(FA500)	20 - 5
20.1.3	System configuration(STARDOM).....	20 - 7

20.1.4	Connection Cable	20 - 8
20.1.5	Preparatory Procedure for Monitoring	20 - 14
20.1.6	Installing OS onto GOT	20 - 15
20.1.7	Checking OS installation on GOT	20 - 16
20.1.8	Setting communication interface (Communication settings).....	20 - 17
20.1.9	Downloading project data	20 - 20
20.1.10	Attaching communication unit and connecting cable.....	20 - 21
20.1.11	Verifying GOT recognizes controllers	20 - 25
20.1.12	Checking for normal monitoring.....	20 - 27
20.1.13	PLC side setting	20 - 28
20.1.14	Connecting CPU port/D-sub 9-pin conversion cable	20 - 29
20.1.15	Connecting PC link module (F3LC01-1N, F3LC11-1N, F3LC11-2N).....	20 - 30
20.1.16	Connecting PC link module (F3LC11-1F, F3LC12-1F)	20 - 32
20.1.17	Connecting PC link module (LC01-0N, LC02-0N).....	20 - 34
20.1.18	Connecting to STARDOM	20 - 36
20.1.19	Precautions.....	20 - 38
20.2	Ethernet Connection	20 - 39
20.2.1	System configuration(FA-M3).....	20 - 39
20.2.2	Preparatory procedures for monitoring	20 - 41
20.2.3	Installing OS onto GOT	20 - 42
20.2.4	Checking OS installation on GOT.....	20 - 43
20.2.5	Setting communication interface (Communication settings).....	20 - 44
20.2.6	Downloading project data	20 - 49
20.2.7	Attaching communication unit and connecting cable.....	20 - 50
20.2.8	Verifying GOT recognizes controllers	20 - 51
20.2.9	Checking for normal monitoring.....	20 - 53
20.2.10	PLC side setting	20 - 57
20.2.11	Connecting to Ethernet Interface Module (F3LE01-5T, F3LE11-0T).....	20 - 58
20.2.12	Connecting to Ethernet Interface Module (F3LE12-0T).....	20 - 59
20.2.13	Precautions.....	20 - 60
20.3	List of Functions Added by Version Upgrade	20 - 61

21. CONNECTION TO ALLEN-BRADLEY PLC

21 - 1 to 21 - 50

21.1	Serial Connection	21 - 2
21.1.1	System Configuration (SLC500 Series).....	21 - 2
21.1.2	System Configuration (MicroLogix1000/1200/1500 Series)	21 - 4
21.1.3	System Configuration (Control/Compact/FlexLogix Series)	21 - 6
21.1.4	Connection Cable	21 - 7
21.1.5	Preparatory Procedures for Monitoring	21 - 11
21.1.6	Installing OS onto the GOT	21 - 12
21.1.7	Checking OS installation on GOT.....	21 - 13
21.1.8	Setting communication interface (Communication settings).....	21 - 14
21.1.9	Downloading project data	21 - 20
21.1.10	Attaching communication unit and connecting cable.....	21 - 21
21.1.11	Verifying GOT recognizes controllers	21 - 24
21.1.12	Checking for normal monitoring.....	21 - 27
21.1.13	PLC Side Setting	21 - 30
21.2	Ethernet Connection	21 - 32
21.2.1	System configuration when connecting to ControlLogix, CompactLogix, FlexLogix.....	21 - 32

21.2.2	Preparatory Procedures for Monitoring.....	21 - 34
21.2.3	Installing OS onto GOT.....	21 - 35
21.2.4	Checking OS installation on GOT.....	21 - 36
21.2.5	Setting communication interface (Communication settings).....	21 - 37
21.2.6	Downloading project data.....	21 - 40
21.2.7	Attaching communication unit and connecting cable.....	21 - 41
21.2.8	Verifying GOT recognizes connected equipment.....	21 - 42
21.2.9	Checking for normal monitoring.....	21 - 44
21.2.10	PLC side setting.....	21 - 48
21.2.11	Precautions.....	21 - 48
21.3	List of Functions Added by Version Upgrade.....	21 - 49

22. CONNECTION TO SIEMENS PLC

22 - 1 to 22 - 26

22.1	System Configuration.....	22 - 2
22.1.1	Connecting to a SIMATIC S7-300/400 Series.....	22 - 3
22.1.2	Connecting to a SIMATIC S7-200 Series.....	22 - 4
22.2	Connection Cable.....	22 - 5
22.3	Preparatory Procedures for Monitoring.....	22 - 7
22.3.1	Installing OS onto GOT.....	22 - 8
22.3.2	Checking OS installation on GOT.....	22 - 9
22.3.3	Setting communication interface (Communication settings).....	22 - 10
22.3.4	Downloading project data.....	22 - 14
22.3.5	Attaching communication unit and connecting cable.....	22 - 15
22.3.6	Verifying GOT recognizes controllers.....	22 - 18
22.3.7	Checking for normal monitoring.....	22 - 21
22.4	PLC Side Setting.....	22 - 23
22.4.1	Connecting to HMI Adapter.....	22 - 23
22.4.2	Connecting to SIMATIC S7-200.....	22 - 24
22.5	Precautions.....	22 - 25
22.6	List of Functions Added by Version Upgrade.....	22 - 26

Connection Manual 3/3

MICROCOMPUTER CONNECTION

23. MICROCOMPUTER CONNECTION

23 - 1 to 23 - 100

23.1	Microcomputer Connection.....	23 - 2
23.2	System Configuration.....	23 - 4
23.3	Connection Cable.....	23 - 6
23.3.1	RS-232 cable.....	23 - 6
23.3.2	RS-422 cable.....	23 - 9
23.4	Device Data Area.....	23 - 11
23.4.1	D devices.....	23 - 13
23.4.2	R devices.....	23 - 17
23.4.3	L devices.....	23 - 17

23.4.4	M devices	23 - 19
23.4.5	SD devices	23 - 20
23.4.6	SM devices	23 - 23
23.5	Message Formats	23 - 26
23.5.1	Data format type and application	23 - 26
23.5.2	List of commands	23 - 28
23.5.3	Formats 1, 2 (GOT-A900 series microcomputer connection)	23 - 31
23.5.4	Formats 3 to 6 (A compatible 1C frame)	23 - 44
23.5.5	Formats 7 to 10 (QnA compatible 3C/4C frame)	23 - 49
23.5.6	Formats 11 to 13 (Digital Electronics Corporation's memory link method)	23 - 57
23.5.7	Formats 14, 15 (GOT-F900 series microcomputer connection)	23 - 63
23.6	Preparatory Procedures for Monitoring	23 - 78
23.6.1	Installing OS onto GOT	23 - 79
23.6.2	Checking OS installation on GOT	23 - 80
23.6.3	Setting communication interface (Communication settings)	23 - 81
23.6.4	Downloading project data	23 - 84
23.6.5	Attaching communication unit and connecting cable	23 - 85
23.6.6	Verifying GOT recognizes controllers	23 - 90
23.6.7	Checking for normal monitoring	23 - 92
23.7	System Configuration Examples	23 - 94
23.8	Precautions	23 - 98
23.9	List of Functions Added by Version Upgrade	23 - 99

24. CONNECTION TO OMRON TEMPERATURE CONTROLLER

24 - 1 to 24 - 34

24.1	System configuration	24 - 2
24.1.1	Connecting E5AN, E5EN	24 - 2
24.1.2	Connecting to E5CN, E5GN	24 - 4
24.1.3	Connecting to E5ZN	24 - 6
24.2	Connection Cable	24 - 8
24.2.1	RS-232 cable	24 - 9
24.2.2	RS-485 cable	24 - 11
24.3	Preparatory Procedures for Monitoring	24 - 14
24.3.1	Installing OS onto GOT	24 - 15
24.3.2	Checking OS installation on GOT	24 - 16
24.3.3	Setting communication interface (Communication settings)	24 - 17
24.3.4	Downloading project data	24 - 20
24.3.5	Attaching communication unit and connecting cable	24 - 21
24.3.6	Verifying GOT recognizes controllers	24 - 24
24.3.7	Checking for normal monitoring	24 - 26
24.4	Temperature Controller Side Setting	24 - 28
24.4.1	Connecting E5AN, E5EN, E5CN, E5GN	24 - 28
24.4.2	Connecting E5ZN	24 - 28
24.4.3	Connecting to interface converter (K3SC-10)	24 - 29

24.4.4	Station NO. settings.....	24 - 31
24.5	Precautions	24 - 32
24.6	List of Functions Added by Version Upgrade	24 - 33

25. CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER

25 - 1 to 25 - 28

25.1	System Configuration	25 - 2
25.1.1	Connecting to ACS-13A, JC, JCM-33A, JIR-301-M Series	25 - 2
25.1.2	Connecting to FCD-100, FCR-100, FCR-23A, FIR, PC-900 Series	25 - 4
25.1.3	Connecting to DCL-33A Series.....	25 - 5
25.2	Connection Cable	25 - 6
25.2.1	RS-232 cable	25 - 7
25.2.2	RS-485 cable	25 - 9
25.3	Preparatory Procedures for Monitoring	25 - 10
25.3.1	Installing OS onto GOT.....	25 - 11
25.3.2	Checking OS installation on GOT.....	25 - 12
25.3.3	Setting communication interface (Communication settings).....	25 - 13
25.3.4	Downloading project data	25 - 16
25.3.5	Attaching communication unit and connecting cable.....	25 - 17
25.3.6	Verifying GOT recognizes controllers	25 - 19
25.3.7	Checking for normal monitoring.....	25 - 21
25.4	Indicating controller Side Setting	25 - 23
25.4.1	Connecting to ACS-13A, DCL-33A, JC, JCM-33A, JIR-301-M Series	25 - 24
25.4.2	Connecting to FCD-100, FCR-100, FCR-23A, FIR, PC-900 Series	25 - 24
25.4.3	Connecting to communication converter (IF-400).....	25 - 24
25.4.4	Station NO. settings.....	25 - 25
25.5	Precautions	25 - 26
25.6	List of Functions Added by Version Upgrade	25 - 27

26. CONNECTION TO CHINO CONTROLLER

26 - 1 to 26 - 42

26.1	System Configuration	26 - 2
26.1.1	Connecting to LT300, LT400, DZ1000 or DZ2000 series.....	26 - 2
26.1.2	Connecting to LT230, LT830	26 - 5
26.1.3	Connecting to GT120.....	26 - 7
26.2	Connection Cable	26 - 9
26.2.1	RS-232 cable	26 - 10
26.2.2	RS-422 cable	26 - 12
26.2.3	RS-485 cable	26 - 15
26.3	Preparatory Procedures for Monitoring	26 - 19
26.3.1	Installing OS onto GOT.....	26 - 20
26.3.2	Checking OS installation on GOT.....	26 - 21
26.3.3	Setting communication interface (Communication settings).....	26 - 22
26.3.4	Downloading project data	26 - 25
26.3.5	Attaching communication unit and connecting cable.....	26 - 26
26.3.6	Verifying GOT recognizes controllers	26 - 31

26.3.7	Checking for normal monitoring.....	26 - 33
26.4	Controller Side Setting	26 - 35
26.4.1	Connecting to LT230, LT300 Series.....	26 - 35
26.4.2	Connecting to LT400, LT830 Series.....	26 - 36
26.4.3	Connecting to DZ1000, DZ2000 Series.....	26 - 36
26.4.4	Connecting to GT120 Series.....	26 - 37
26.4.5	Connecting SC8-10.....	26 - 38
26.4.6	Station NO. settings.....	26 - 39
26.5	Precautions	26 - 40
26.5.1	Station number settings of temperature controller.....	26 - 40
26.5.2	GOT clock function.....	26 - 40
26.5.3	Cutting the portion of multipul connection of the controller.....	26 - 40
26.6	List of Functions Added by Version Upgrade	26 - 41

27. CONNECTION TO FUJI SYS TEMPERATURE CONTROLLER

27 - 1 to 27 - 38

27.1	System Configuration	27 - 2
27.1.1	Connecting to PXR3, PXR4, PXR5 or PXR9.....	27 - 2
27.1.2	Connecting to PXG4, PXG5, PXG9 or PXH9.....	27 - 4
27.2	Connection Cable	27 - 6
27.2.1	RS-232 cable.....	27 - 7
27.2.2	RS-485 cable.....	27 - 10
27.3	Preparatory Procedures for Monitoring	27 - 14
27.3.1	Installing OS onto GOT.....	27 - 15
27.3.2	Checking OS installation on GOT.....	27 - 16
27.3.3	Setting communication interface (Communication settings).....	27 - 17
27.3.4	Downloading project data.....	27 - 19
27.3.5	Attaching communication unit and connecting cable.....	27 - 20
27.3.6	Verifying GOT recognizes controllers.....	27 - 23
27.3.7	Checking for normal monitoring.....	27 - 25
27.4	Temperature Controller Side Setting	27 - 27
27.4.1	Connecting to PXR3/4/5/9.....	27 - 27
27.4.2	Connecting to PXG4, PXG5 or PXG9.....	27 - 28
27.4.3	Connecting to PXH9.....	27 - 29
27.4.4	Connecting to interface converter (RC-77).....	27 - 30
27.4.5	Connecting to interface converter (SI-30A).....	27 - 32
27.4.6	Connecting to interface converter (KS-485).....	27 - 33
27.4.7	Connecting to interface converter (K3SC-10).....	27 - 34
27.4.8	Station NO. settings.....	27 - 36
27.5	Precautions	27 - 37
27.6	List of Functions Added by Version Upgrade	27 - 38

28. CONNECTION TO YAMATAKE TEMPERATURE CONTROLLER

28 - 1 to 28 - 44

28.1	System Configuration	28 - 2
------	----------------------	--------

28.1.1	Connecting to DMC10	28 - 2
28.1.2	Connecting to SDC15, SDC25/26 or SDC35/36.....	28 - 4
28.1.3	Connecting to SDC20/21	28 - 6
28.1.4	Connecting to SDC30/31	28 - 9
28.1.5	Connecting to SDC40A/40B/40G	28 - 11
28.2	Connection Cable	28 - 14
28.2.1	RS-232 cable	28 - 15
28.2.2	RS-485 cable	28 - 18
28.3	Preparatory Procedures for Monitoring	28 - 24
28.3.1	Installing OS onto GOT	28 - 25
28.3.2	Checking OS installation on GOT	28 - 26
28.3.3	Setting communication interface (Communication settings).....	28 - 27
28.3.4	Downloading project data	28 - 30
28.3.5	Attaching communication unit and connecting cable	28 - 31
28.3.6	Verifying GOT recognizes controllers	28 - 34
28.3.7	Checking for normal monitoring	28 - 36
28.4	Temperature Controller Side Setting	28 - 38
28.4.1	Connecting to DMC10	28 - 38
28.4.2	Connecting SDC40A/40B/40G	28 - 39
28.4.3	Connecting SDC15, SDC25/26, SDC35/36.....	28 - 39
28.4.4	Connecting SDC20/21, SDC30/31	28 - 40
28.4.5	Connecting CMC10L	28 - 40
28.4.6	Station NO. settings.....	28 - 42
28.5	Precautions	28 - 43
28.6	List of Functions Added by Version Upgrade	28 - 44

29. CONNECTION TO YOKOGAWA TEMPERATURE CONTROLLER

29 - 1 to 29 - 48

29.1	System Configuration	29 - 2
29.1.1	Connecting to GREEN Series.....	29 - 2
29.1.2	Connecting to UT100 Series.....	29 - 6
29.1.3	Connecting to UT2000 Series.....	29 - 8
29.2	Connection Cable	29 - 11
29.2.1	RS-232 cable	29 - 11
29.2.2	RS-485 cable	29 - 13
29.3	Preparatory Procedures for Monitoring	29 - 23
29.3.1	Installing OS onto GOT	29 - 24
29.3.2	Checking OS installation on GOT	29 - 25
29.3.3	Setting communication interface (Communication settings).....	29 - 26
29.3.4	Downloading project data	29 - 29
29.3.5	Attaching communication unit and connecting cable	29 - 30
29.3.6	Verifying GOT recognizes controllers	29 - 35
29.3.7	Checking for normal monitoring	29 - 37
29.4	Temperature Controller Side Setting	29 - 39
29.4.1	Connecting to GREEN Series.....	29 - 40
29.4.2	Connecting to UT100 Series.....	29 - 41
29.4.3	Connecting to UT2000 Series.....	29 - 42

29.4.4	Connecting to RS232C/RS485 converter.....	29 - 44
29.4.5	Station NO. settings.....	29 - 45
29.5	Precautions	29 - 46
29.6	List of Functions Added by Version Upgrade	29 - 47

30. CONNECTION TO RKC TEMPERATURE CONTROLLER

30 - 1 to 30 - 50

30.1	System Configuration	30 - 2
30.1.1	Connecting to H-PCP-J	30 - 2
30.1.2	Connecting to H-PCP-A or H-PCP-B.....	30 - 6
	Connecting to SRZ 9	
30.2	Connection Cable	30 - 13
30.2.1	RS-232 cable.....	30 - 14
30.2.2	RS-422 cable.....	30 - 16
30.2.3	RS-485 cable.....	30 - 19
30.3	Preparatory Procedures for Monitoring	30 - 23
30.3.1	Installing OS onto GOT	30 - 24
30.3.2	Checking OS installation on GOT.....	30 - 25
30.3.3	Setting communication interface (Communication settings).....	30 - 26
30.3.4	Downloading project data	30 - 29
30.3.5	Attaching communication unit and connecting cable.....	30 - 30
30.3.6	Verifying GOT recognizes controllers.....	30 - 35
30.3.7	Checking for normal monitoring.....	30 - 37
30.4	Temperature Controller Side Setting	30 - 39
30.4.1	Connecting to H-PCP-J	30 - 39
30.4.2	Connecting to H-PCP-A, H-PCP-B.....	30 - 42
30.4.3	Connecting to Z-TIO, Z-DIO	30 - 44
30.4.4	Connecting to Z-COM.....	30 - 46
30.4.5	Station No. settings	30 - 48
30.5	Precautions	30 - 49
30.6	List of Functions Added by Version Upgrade	30 - 50

31. INVERTER CONNECTION

31 - 1 to 31 - 32

31.1	System Configuration	31 - 2
31.1.1	Connecting to FREQROL A500/F500	31 - 2
31.1.2	Connecting to FREQROL E500/S500	31 - 5
31.1.3	Connecting to FREQROL A700/F700	31 - 7
31.2	Connection Cable	31 - 9
31.3	Preparatory Procedures for Monitoring	31 - 15
31.3.1	Installing OS onto GOT	31 - 16
31.3.2	Checking OS installation on GOT.....	31 - 17
31.3.3	Setting communication interface (Communication settings).....	31 - 18
31.3.4	Downloading project data	31 - 21
31.3.5	Attaching communication unit and connecting cable.....	31 - 22

31.3.6	Verifying GOT recognizes controllers	31 - 25
31.3.7	Checking for normal monitoring	31 - 27
31.4	FREQROL Series Inverter Side Settings	31 - 28
31.5	Precautions	31 - 30
31.6	List of Functions Added by Version Upgrade	31 - 31

32. SERVO AMPLIFIER CONNECTION 32 - 1 to 32 - 34

32.1	System Configuration	32 - 2
32.1.1	Connecting to the MELSERVO-J2-Super series	32 - 2
32.1.2	Connecting to the MELSERVO-J2M series	32 - 4
32.1.3	Connecting to the MELSERVO-J3 Series	32 - 6
32.2	Connection Cable	32 - 9
32.2.1	RS-232 cable	32 - 9
32.2.2	RS-422 cable	32 - 11
32.3	Preparatory Procedures for Monitoring	32 - 14
32.3.1	Installing OS onto GOT	32 - 15
32.3.2	Checking OS installation on GOT	32 - 16
32.3.3	Setting communication interface (Communication settings)	32 - 17
32.3.4	Downloading project data	32 - 19
32.3.5	Attaching communication unit and connecting cable	32 - 20
32.3.6	Verifying GOT recognizes controllers	32 - 24
32.3.7	Checking for normal monitoring	32 - 26
32.4	Setting on Servo Amplifier Side	32 - 28
32.4.1	Connecting to the MELSERVO-J2-Super series	32 - 28
32.4.2	Connecting to the MELSERVO-J2M series	32 - 30
32.4.3	Connecting to the MELSERVO-J3 series	32 - 31
32.4.4	Station NO. settings	32 - 32
32.5	Precautions	32 - 33
32.6	List of Functions Added by Version Upgrade	32 - 34

33. CNC CONNECTION 33 - 1 to 33 - 90

33.1	Direct Connection To CPU	33 - 2
33.1.1	System Configuration	33 - 2
33.1.2	Connection Cable	33 - 4
33.1.3	Preparatory Procedures for Monitoring	33 - 6
33.1.4	Installing OS onto GOT	33 - 7
33.1.5	Checking OS installation on GOT	33 - 8
33.1.6	Setting communication interface (Communication settings)	33 - 9
33.1.7	Downloading project data	33 - 11
33.1.8	Attaching communication unit and connecting cable	33 - 12
33.1.9	Verifying GOT recognizes controllers	33 - 16
33.1.10	Checking for normal monitoring	33 - 18
33.1.11	Precautions	33 - 20
33.2	MELSECNET/10 Connection (PLC To PLC Network)	33 - 21
33.2.1	System Configuration	33 - 21

33.2.2	Preparatory Procedures for Monitoring	33 - 23
33.2.3	Installing OS onto GOT	33 - 24
33.2.4	Checking OS installation on GOT.....	33 - 25
33.2.5	Setting communication interface (Communication settings).....	33 - 26
33.2.6	Downloading project data	33 - 31
33.2.7	Attaching communication unit and connecting cable.....	33 - 32
33.2.8	Verifying GOT recognizes controllers	33 - 36
33.2.9	Checking for normal monitoring.....	33 - 38
33.2.10	CNC Side Settings.....	33 - 40
33.2.11	Precautions.....	33 - 43
33.3	CC-Link Connection (Intelligent Device Station)	33 - 44
33.3.1	System Configuration	33 - 44
33.3.2	Preparatory Procedures for Monitoring	33 - 46
33.3.3	Installing OS onto GOT	33 - 47
33.3.4	Checking OS installation on GOT.....	33 - 48
33.3.5	Setting communication interface (Communication settings).....	33 - 49
33.3.6	Downloading project data	33 - 55
33.3.7	Attaching communication unit and connecting cable.....	33 - 56
33.3.8	Verifying GOT recognizes controllers	33 - 59
33.3.9	Checking for normal monitoring.....	33 - 61
33.3.10	CNC Side Settings.....	33 - 64
33.3.11	Precautions.....	33 - 67
33.4	Ethernet Connection	33 - 68
33.4.1	System Configuration	33 - 68
33.4.2	Preparatory Procedures for Monitoring	33 - 70
33.4.3	Installing OS onto GOT	33 - 71
33.4.4	Checking OS installation on GOT.....	33 - 72
33.4.5	Setting communication interface (Communication settings).....	33 - 73
33.4.6	Downloading project data	33 - 78
33.4.7	Attaching communication unit and connecting cable.....	33 - 79
33.4.8	Verifying GOT recognizes controllers	33 - 80
33.4.9	Checking for normal monitoring.....	33 - 82
33.4.10	CNC Side Settings.....	33 - 86
33.4.11	Precautions.....	33 - 89
33.5	List of Functions Added by Version Upgrade	33 - 90

34. CONNECTION TO SOUND OUTPUT UNIT **34 - 1 to 34 - 14**

34.1	System Configuration	34 - 2
34.2	Preparatory Procedures for Monitoring	34 - 4
34.2.1	Installing OS onto GOT	34 - 5
34.2.2	Checking OS installation on GOT.....	34 - 6
34.2.3	Setting communication interface (Communication settings).....	34 - 7
34.2.4	Downloading project data	34 - 8
34.2.5	Attaching communication unit and connecting cable.....	34 - 9
34.2.6	Verifying GOT recognizes controllers	34 - 10
34.3	Precautions	34 - 12
34.4	List of Functions Added by Version Upgrade	34 - 13

35. CONNECTION TO EXTERNAL I/O DEVICE**35 - 1 to 35 - 22**

35.1	System Configuration	35 - 2
35.2	Connection Cable	35 - 5
35.2.1	Connection cable between external I/O unit and operation panel	35 - 5
35.2.2	Connection cable between external I/O unit and connector/terminal block converter module	35 - 7
35.3	Connection Diagram	35 - 9
35.3.1	Connection diagram between external I/O unit and connector/terminal block converter module	35 - 9
35.3.2	Connection cable between connector/terminal block converter module and user-created original operation panel	35 - 11
35.4	Preparatory Procedures for Monitoring	35 - 12
35.4.1	Installing OS onto GOT	35 - 13
35.4.2	Checking OS installation on GOT	35 - 14
35.4.3	Setting communication interface (Communication settings)	35 - 15
35.4.4	Downloading project data	35 - 16
35.4.5	Attaching communication unit and connecting cable	35 - 17
35.4.6	Verifying GOT recognizes controllers	35 - 18
35.4.7	Checking for normal monitoring	35 - 20
35.5	Precautions	35 - 21
35.6	List of Functions Added by Version Upgrade	35 - 22

36. BAR CODE READER CONNECTION**36 - 1 to 36 - 20**

36.1	System Configuration	36 - 2
36.2	Preparatory Procedures for Monitoring	36 - 4
36.2.1	Installing OS onto GOT	36 - 5
36.2.2	Checking OS installation on GOT	36 - 6
36.2.3	Setting communication interface (Communication settings)	36 - 7
36.2.4	Downloading project data	36 - 9
36.2.5	Attaching communication unit and connecting cable	36 - 10
36.2.6	Verifying GOT recognizes controllers	36 - 11
36.2.7	Checking for normal monitoring	36 - 13
36.3	Precautions	36 - 14
36.4	System Configuration Examples	36 - 15
36.5	List of Functions Added by Version Upgrade	36 - 19

37. VIDEO/RGB CONNECTION**37 - 1 to 37 - 24**

37.1	System Configuration	37 - 2
37.1.1	Displaying video image on GOT	37 - 3
37.1.2	Displaying GOT screen on external monitor	37 - 6
37.2	Connection Cable	37 - 7
37.2.1	Coaxial cable	37 - 7
37.2.2	Analog RGB cable	37 - 10

37.3	Preparatory Procedures for Monitoring	37 - 12
37.3.1	Installing OS onto GOT	37 - 13
37.3.2	Checking OS installation on GOT.....	37 - 14
37.3.3	Setting communication interface (Communication settings).....	37 - 15
37.3.4	Downloading project data	37 - 17
37.3.5	Attaching option unit and connecting cable	37 - 18
37.3.6	Verifying GOT recognizes controllers	37 - 20
37.4	Precautions	37 - 22
37.4.1	Connecting to PC	37 - 22
37.4.2	Connecting to NEC PC-9800 (PC-9801, PC-9821, etc.) series	37 - 22
37.5	List of Functions Added by Version Upgrade	37 - 23

38. PRINTER CONNECTION 38 - 1 to 38 - 14

38.1	System Configuration	38 - 2
38.2	Preparatory Procedures for Monitoring	38 - 4
38.2.1	Installing OS onto GOT	38 - 5
38.2.2	Checking OS installation on GOT.....	38 - 6
38.2.3	Setting communication interface (Communication settings).....	38 - 7
38.2.4	Downloading project data	38 - 8
38.2.5	Attaching communication unit and connecting cable.....	38 - 9
38.2.6	Verifying GOT recognizes controllers	38 - 10
38.3	Precautions	38 - 12
38.4	List of Functions Added by Version Upgrade	38 - 13

39. MULTI-CHANNEL FUNCTION 39 - 1 to 39 - 16

39.1	What is Multi-channel Function?	39 - 2
39.2	System Configuration Examples	39 - 3
39.3	Preparatory Procedures for Monitoring	39 - 4
39.3.1	Installing OS onto GOT	39 - 5
39.3.2	Checking OS installation on GOT.....	39 - 6
39.3.3	Setting communication interface (Communication settings).....	39 - 7
39.3.4	Downloading project data	39 - 8
39.3.5	Attaching option function board/communication unit and connecting cable	39 - 9
39.3.6	Verifying GOT recognizes controllers	39 - 10
39.3.7	Checking for normal monitoring.....	39 - 12
39.4	Connected Equipment Side Settings	39 - 14
39.5	List of Functions Added by Version Upgrade	39 - 15

40. FA TRANSPARENT FUNCTION 40 - 1 to 40 - 42

40.1	FA Transparent Function	40 - 2
40.2	System Configuration	40 - 2
40.2.1	GX Developer	40 - 3

40.2.2	PX Developer, GX Configurator.....	40 - 6
40.2.3	MT Developer	40 - 8
40.2.4	MR Configurator	40 - 10
40.2.5	FR Configurator	40 - 13
40.3	Compatible Software	40 - 15
40.4	Preparatory Procedure for Accessing	40 - 18
40.4.1	Setting communication interface (Communication settings).....	40 - 19
40.4.2	Attaching the communication unit and connecting the cable.....	40 - 21
40.4.3	Verifying GOT recognizes controllers	40 - 23
40.4.4	Accessing the PLC by the GX Developer, PX Developer, GX Configurator.....	40 - 25
40.4.5	Accessing by the MT Developer	40 - 28
40.4.6	Accessing the servo amplifier by the MR Configurator.....	40 - 31
40.4.7	Accessing the inverter by the FR Configurator	40 - 32
40.5	Precautions	40 - 34
40.5.1	Precautions common to each software.....	40 - 34
40.5.2	When using GX Developer	40 - 37
40.5.3	When using MT Developer	40 - 39
40.5.4	When using MR Configurator	40 - 39
40.5.5	When using FR Configurator	40 - 40
40.6	List of Functions Added by Version Upgrade	40 - 41

41. MULTIPLE-GT11, GT10 CONNECTION FUNCTION 41 - 1 to 41 -26

41.1	System Configuration	41 - 2
41.2	Connection Cable	41 - 5
41.3	Preparatory Procedures for Monitoring	41 - 7
41.3.1	Installing OS onto GOT.....	41 - 8
41.3.2	Checking OS installation on GOT.....	41 - 9
41.3.3	Setting communication interface (Communication settings).....	41 - 10
41.3.4	Downloading project data	41 - 15
41.3.5	Attaching communication unit and connecting cable.....	41 - 16
41.3.6	Verifying GOT recognizes controllers	41 - 17
41.3.7	Checking for normal monitoring.....	41 - 20
41.4	Precautions	41 - 23
41.5	List of Functions Added by Version Upgrade	41 - 25

42. GATEWAY FUNCTION 42 - 1 to 42 - 22

42.1	System Configuration	42 - 2
42.2	Preparatory Procedures for Monitoring	42 - 6
42.2.1	Installing OS onto GOT.....	42 - 7
42.2.2	Checking OS installation on GOT.....	42 - 8
42.2.3	Setting communication interface (Communication settings).....	42 - 9
42.2.4	Downloading project data	42 - 15
42.2.5	Attaching communication unit and connecting cable.....	42 - 16
42.2.6	Verifying GOT recognizes controllers	42 - 17
42.2.7	Checking for normal monitoring.....	42 - 19

43. MES INTERFACE FUNCTION**43 - 1 to 43 - 18**

43.1	System Configuration	43 - 2
43.2	Preparatory Procedures for Monitoring	43 - 5
43.2.1	Installing OS onto GOT	43 - 6
43.2.2	Checking OS installation on GOT	43 - 7
43.2.3	Setting communication interface (Communication settings).....	43 - 8
43.2.4	Downloading project data	43 - 12
43.2.5	Attaching communication unit and connecting cable.....	43 - 13
43.2.6	Verifying GOT recognizes controllers	43 - 14
43.2.7	Checking for normal monitoring.....	43 - 16
43.3	List of Functions Added by Version Upgrade	43 - 18

INDEX**Index - 1 to Index - 4**

ABOUT MANUALS

The following manuals are also related to this product.
In necessary, order them by quoting the details in the tables below.

Related Manuals

Manual Name	Manual Number (Model Code)
GT15 User's Manual - Describes the GT15 hardware-relevant contents, including the specifications, part names, mounting, power supply wiring, external dimensions, and option devices. - Describes the GT15 functions, including the utility. (Sold separately)	SH-080528ENG (1D7M23)
GT11 User's Manual - Describes the GT11 hardware-relevant contents, including the specifications, part names, mounting, power supply wiring, external dimensions, and option devices. - Describes the GT11 functions, including the utility. (Sold separately)	JY997D17501 (09R815)
GT10 User's Manual - Describes the GT10 hardware-relevant contents, including the specifications, part names, mounting, power supply wiring, external dimensions, and option devices. - Describes the GT10 functions, including the utility. (Sold separately)	JY997D24701 (09R819)
Handy GOT User's Manual - Describes the Handy GOT hardware-relevant contents, including the system configurations, specifications, part names, mounting, power supply wiring, external dimensions, and option devices. - Describes the Handy GOT functions, including the utility, and how to make cables. (Sold separately)	JY997D20101 (09R817)
GT SoftGOT1000 Version2 Operating Manual Describes the screen configuration, functions and using method of GT SoftGOT1000. (Sold separately)	SH-080602ENG (1D7M48)
GT Designer2 Version2 Basic Operation/Data Transfer Manual (For GOT1000 Series) Describes methods of the GT Designer2 installation operation, basic operation for drawing and transmitting data to GOT1000 series (Sold separately) *1	SH-080529ENG (1D7M24)
GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 1/3 GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 2/3 GT Designer2 Version2 Screen Design Manual (For GOT1000 Series) 3/3 Describes specifications and settings of each object function applicable to GOT1000 series. (Sold separately)*1	SH-080530ENG (1D7M25)
GOT1000 Series Gateway Functions Manual Describes specifications, system configurations and setting method of the gateway function. (Sold separately) *1	SH-080545ENG (1D7M33)
GOT1000 Series MES Interface Function Manual Describes the specifications, system configurations, and setting method of GT MES interface function. (Sold separately) *1	SH-080654ENG (1D7M63)

*1 The manual in PDF-format is included in the GT Works2 and GT Designer2 products.

ABBREVIATIONS AND GENERIC TERMS IN THIS MANUAL

Abbreviations and generic terms used in this manual are described as follows.

■ GOT

Abbreviations and generic terms		Description
GT SoftGOT1000		Abbreviation of GT SoftGOT1000
GT1595	GT1595-X	Abbreviation of GT1595-XTBA, GT1595-XTBD
GT1585	GT1585V-S	Abbreviation of GT1585V-STBA
	GT1585-S	Abbreviation of GT1585-STBA, GT1585-STBD
GT157□	GT1575V-S	Abbreviation of GT1575V-STBA
	GT1575-S	Abbreviation of GT1575-STBA, GT1575-STBD
	GT1575-V	Abbreviation of GT1575-VTBA, GT1575-VTBD
	GT1575-VN	Abbreviation of GT1575-VNBA, GT1575-VNBD
GT156□	GT1572-VN	Abbreviation of GT1572-VNBA, GT1572-VNBD
	GT1565-V	Abbreviation of GT1565-VTBA, GT1565-VTBD
GT155□	GT1562-VN	Abbreviation of GT1562-VNBA, GT1562-VNBD
	GT1555-V	Abbreviation of GT1555-VTBD
GT155□	GT1555-Q	Abbreviation of GT1555-QTBD, GT1555-QSBD
	GT1550-Q	Abbreviation of GT1550-QLBD
GT15□□, GT15		Abbreviation of GT1595, GT1585, GT157□, GT156□, GT155□
GT115□	GT1155-Q	Abbreviation of GT1155-QTBDQ, GT1155-QSBDQ, GT1155-QTBDA, GT1155-QSBDA, GT1155-QSBD
	GT1150-Q	Abbreviation of GT1150-QLBDQ, GT1150-QLBDA, GT1150-QLBD
Handy GOT	GT1155HS-Q	Abbreviation of GT1155HS-QSBD
	GT1150HS-Q	Abbreviation of GT1150HS-QLBD
GT11□□, GT11		Abbreviation of GT1155-Q, GT1150-Q, GT11 Handy GOT
GT1030		Abbreviation of GT1030-LBD, GT1030-LBD2, GT1030-LBDW, GT1030-LBDW2
GT1020		Abbreviation of GT1020-LBD, GT1020-LBD2, GT1020-LBL, GT1020-LBDW, GT1020-LBDW2, GT1020-LBLW
GT10□□, GT10		Abbreviation of GT1030, GT1020
GOT900 Series		Abbreviation of GOT-A900 series, GOT-F900 series
GOT800 Series		Abbreviation of GOT-800 series

■ Communication unit

Abbreviations and generic terms	Description			
Bus connection unit	GT15-QBUS, GT15-75QBUSL,	GT15-QBUS2, GT15-75QBUS2L,	GT15-ABUS, GT15-75ABUSL,	GT15-ABUS2, GT15-75ABUS2L
Serial communication unit	GT15-RS2-9P,	GT15-RS4-9S,	GT15-RS4-TE	
RS-422 conversion unit	GT15-RS2T4-9P,	GT15-RS2T4-25P		
Ethernet communication unit	GT15-J71E71-100			
MELSECNET/H communication unit	GT15-J71LP23-25,	GT15-J71BR13		
MELSECNET/10 communication unit	GT15-75J71LP23-Z ^{*1} ,	GT15-75J71BR13-Z ^{*2}		
CC-Link communication unit	GT15-J61BT13,	GT15-75J61BT13-Z ^{*3}		
Interface converter unit	GT15-75IF900			

*1 A9GT-QJ71LP23 + GT15-75IF900 set

*2 A9GT-QJ71BR13 + GT15-75IF900 set

*3 A8GT-J61BT13 + GT15-75IF900 set

Option unit

Abbreviations and generic terms		Description
Printer unit		GT15-PRN
Video/RGB unit	Video input unit	GT15V-75V4
	RGB input unit	GT15V-75R1
	Video/RGB input unit	GT15V-75V4R1
	RGB output unit	GT15V-75ROUT
CF card unit		GT15-CFCD
CF card extension unit*1		GT15-CFEX-C08SET
External I/O unit		GT15-DIO
Sound output unit		GT15-SOUT

*1 GT15-CFEX + GT15-CFEXIF + GT15-C08CF set.

Option

Abbreviations and generic terms		Description			
Memory card	CF card	GT05-MEM-16MC, GT05-MEM-128MC,	GT05-MEM-32MC, GT05-MEM-256MC	GT05-MEM-64MC,	
Memory card adaptor		GT05-MEM-ADPC			
Option function board		GT15-FNB, GT15-QFNB48M,	GT15-QFNB, GT11-50FNB	GT15-QFNB16M,	GT15-QFNB32M,
Battery		GT15-BAT,	GT11-50BAT		
Protective Sheet		GT15-90PSCB, GT15-80PSCB, GT15-70PSCB, GT15-60PSCB, GT15-50PSCB, GT11-50PSCB, GT11H-50PSC, GT10-30PSCB, GT10-20PSCB,	GT15-90PSGB, GT15-80PSGB, GT15-70PSGB, GT15-60PSGB, GT15-50PSGB, GT11-50PSGB, GT10-30PSGB, GT10-20PSGB,	GT15-90PSCW, GT15-80PSCW, GT15-70PSCW, GT15-60PSCW, GT15-50PSCW, GT11-50PSCW, GT10-30PSCW, GT10-20PSCW,	GT15-90PSGW, GT15-80PSGW, GT15-70PSGW, GT15-60PSGW, GT15-50PSGW, GT11-50PSGW, GT10-30PSGW, GT10-20PSGW
USB environmental protection cover		GT15-UCOV,	GT11-50UCOV		
Stand		GT15-90STAND, GT05-50STAND	GT15-80STAND,	GT15-70STAND,	A9GT-50STAND,
Attachment		GT15-60ATT-97,	GT15-60ATT-96		
Backlight		GT15-90XLTT, GT15-70VLTN,	GT15-80SLTT, GT15-60VLTT,	GT15-70SLTT, GT15-60VLTN	GT15-70VLTT,
Multi-color display board		GT15-XHNB,	GT15-VHNB		
Connector conversion box		GT11H-CNB-37S			
Emergency stop sw guard cover		GT11H-50ESCOV			

Software

Abbreviations and generic terms	Description
GT Works2 Version□	SW□D5C-GTWK2-E, SW□D5C-GTWK2-EV
GT Designer2 Version□	SW□D5C-GTD2-E, SW□D5C-GTD2-EV
GT Designer2	Abbreviation of screen drawing software GT Designer2 for GOT1000/GOT900 series
GT Converter2	Abbreviation of data conversion software GT Converter2 for GOT1000/GOT900 series
GT Simulator2	Abbreviation of screen simulator GT Simulator 2 for GOT1000 / GOT900 series
GT SoftGOT1000	Abbreviation of monitoring software GT SoftGOT1000
GT SoftGOT2	Abbreviation of monitoring software GT SoftGOT2
GX Developer	Abbreviation of SW□D5C-GPPW-E(-EV)/SW□D5F-GPPW-E type software package
GX Simulator	Abbreviation of SW□D5C-LLT-E(-EV) type ladder logic test tool function software packages (SW5D5C-LLT (-EV) or later versions)
Document Converter	Abbreviation of document data conversion software Document Converter for GOT1000 series
PX Developer	Abbreviation of SW□D5C-FBDQ-E type FBD software package for process control

License key (for GT SoftGOT1000)

Abbreviations and generic terms	Description
License	GT15-SGTKEY-U, GT15-SGTKEY-P

License key (for GT SoftGOT2)

Abbreviations and generic terms	Description
License key	A9GTSOFT-LKEY-P (For DOS/ PC)
License key FD	SW5D5F-SGLKEY-J (For PC CPU module)

Others

Abbreviations and generic terms	Description	
Omron PLC	Abbreviation of PLC manufactured by OMRON Corporation	
KEYENCE PLC	Abbreviation of PLC manufactured by KEYENCE	
Sharp PLC	Abbreviation of PLC manufactured by SHARP Corporation	
JTEKT PLC	Abbreviation of PLC manufactured by JTEKT Corporation	
Toshiba PLC	Abbreviation of PLC manufactured by TOSHIBA CORPORATION	
HITACHI IES PLC	Abbreviation of PLC manufactured by Hitachi Industrial Equipment Systems Co., Ltd.	
HITACHI PLC	Abbreviation of PLC manufactured by Hitachi, Ltd.	
FUJI FA PLC	Abbreviation of PLC manufactured by Fuji Electric FA Components & Systems Co., Ltd.	
Matsushita PLC	Abbreviation of PLC manufactured by Matsushita Electric Works, Ltd	
Yaskawa PLC	Abbreviation of PLC manufactured by YASKAWA Electric Corporation	
Yokogawa PLC	Abbreviation of PLC manufactured by Yokogawa Electric Corporation	
Allen-Bradley PLC	Abbreviation of PLC manufactured by Allen-Bradley	
SIEMENS PLC	Abbreviation of PLC manufactured by SIEMENS	
Temperature controller	OMRON temperature controller	Abbreviation of temperature controller manufactured by OMRON
	SHINKO indicating controller	Abbreviation of temperature controller manufactured by Shinko Technos Co., Ltd.
	CHINO controller	Abbreviation of temperature controller manufactured by CHINO CORPORATION
	FUJI SYS temperature controller	Abbreviation of temperature controller manufactured by Fuji Electric Systems Co., Ltd.
	YAMATAKE temperature controller	Abbreviation of temperature controller manufactured by YAMATAKE
	YOKOGAWA temperature controller	Abbreviation of temperature controller manufactured by Yokogawa Electric Corporation
	RKC temperature controller	Abbreviation of temperature controller manufactured by RKC
PC CPU module	Abbreviation of PC CPU Unit manufactured by CONTEC CO., LTD	
GOT (server)	Abbreviation of GOTs that use the server function	
GOT (client)	Abbreviation of GOTs that use the client function	
Windows® font	Abbreviation of TrueType font and OpenType font available for Windows® (Differs from the True Type fonts settable with GT Designer2)	
Intelligent function module	Indicates the modules other than the PLC CPU, power supply module and I/O module that are mounted to the base unit.	

HOW TO READ THIS MANUAL

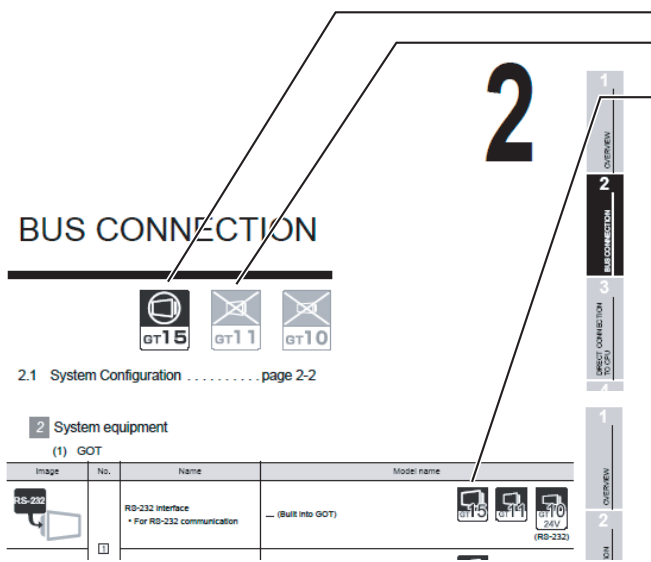
1 About each of functions

This manual includes information of GT Designer2 Version2.58L.

For additional functions of upgraded version, refer to the List of functions added by version upgrade.

2 Symbols

Following symbols are used in this manual.






Connectable model name
Not connectable model name

Applicable model name

- Shows GT15.
- Shows GT11.
- Shows GT11 (BUS).
- Shows GT11 (SERIAL).
- Shows GT10.
- Shows GT10(input power supply : 24V).
- Shows GT10(input power supply : 5V).

2.2.6 Verifying GOT recognizes connected equipment

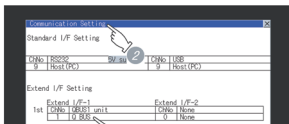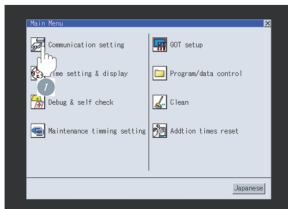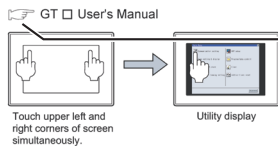Remark How to display Utility
To display the Utility (at default), touch the upper right and upper left positions on the screen at the same time (pressing 2 points).
For how to start and operate the Utility, refer to the following manual.



1 After powering up the GOT, touch [Main Menu] - [Communication setting] from the Utility.

2 The [Communication setting] screen appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

Point Refers to the information required.

Hint! Refers to information useful for operation.

Remark Refers to the supplementary explanations for reference.

Indicates the items in which the detailed explanation is described (manual, chapter, section, item of the manual).

1 → 2 → 3 ...

Indicates the operation steps.

Menu and items are differentiated with parentheses.

[] : refers to menu in menu bar, refers, dialog box item or GOT utility menu.

□ : refers to dialog box buttons or PC keyboard.

*Since the above page was created for explanation purpose, it differs from the actual page



MICROCOMPUTER CONNECTION

Chapter 23 MICROCOMPUTER CONNECTION

MICROCOMPUTER CONNECTION



23.1 Microcomputer Connection page 23-2

This section describes the microcomputer connection of the GOT.

23.2 System Configuration page 23-4

This section describes the equipment and cables needed for establishing a microcomputer connection.
Select a system suitable for your application.

23.3 Connection Cable page 23-6

This section describes the specifications of the cables needed when connecting a GOT to a microcomputer.
Check the specifications of the connection cables.

23.4 Device Data Area. page 23-11

This section describes the virtual devices on the GOT, which are used for data transactions when a microcomputer connection is established.

23.5 Message Formats page 23-26

This section describes the message formats used in the microcomputer connection.

23.6 Preparatory Procedures for Monitoring page 23-78

This section provides the procedures to be followed before performing monitoring in a microcomputer connection.

The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

23.7 System Configuration Examples page 23-94

This section gives an example of a system configuration for the microcomputer connection.

23.8 Precautions page 23-98

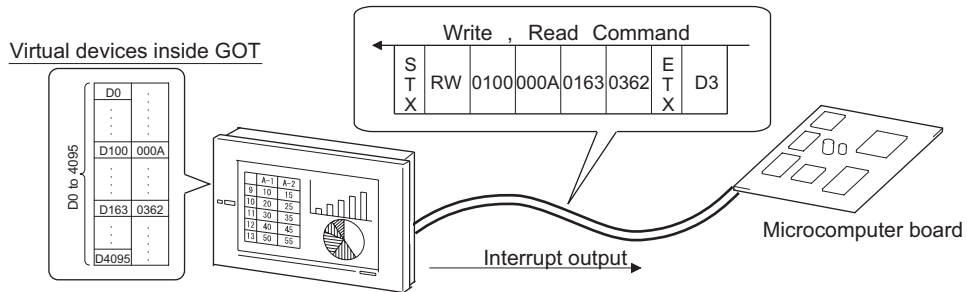
This section describes the precautions about microcomputer connection.

23.9 List of Functions Added by Version Upgrade page 23-99

This section describes the functions added by version upgrade of GT Designer2 or OS.

23.1 Microcomputer Connection

The "microcomputer connection" is a function by which data can be written or read from a PC, microcomputer board, PLC, etc. (hereinafter referred to as "host") to virtual devices of the GOT. Interrupt output is also available from the GOT to the host.




Virtual devices inside the GOT

The devices inside the GOT are used in the microcomputer connection. (PLC devices are not used.)

➡ Section 23.4 Device Data Area


1 Flow of data processing

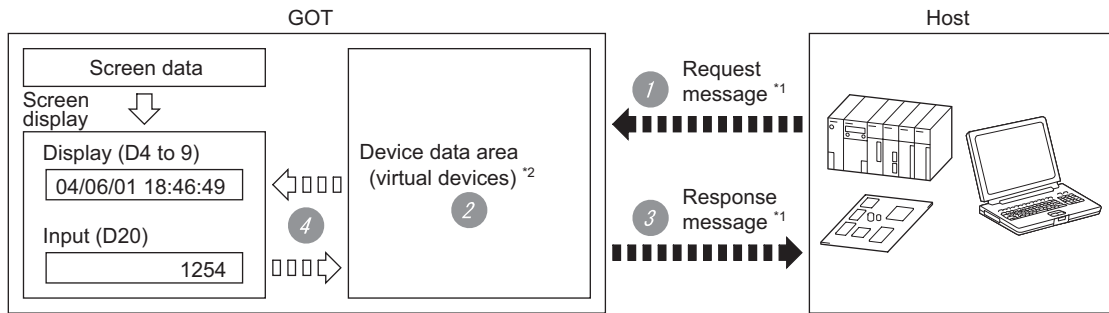(1) When reading or writing data



- 1 The host sends a request message (the read/write command) to the GOT.
- 2 The GOT performs a read/write processing to its virtual devices according to the request from the host.
- 3 Upon completion of the processing, the GOT sends a response message (processing result) to the host.
- 4 Creating the following objects on the screen allows you to use the data read/written to the virtual devices:
 - Numerical Display that displays data written by the write command
 - Numerical Input that is used to input data to be upload to the host

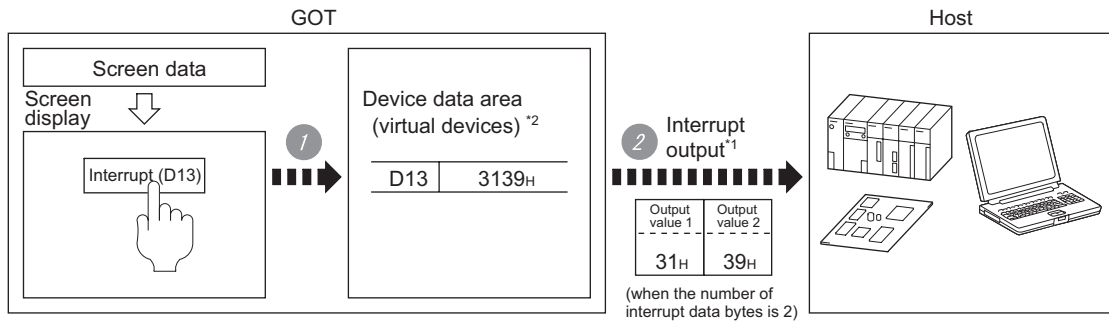(2) When outputting interrupts



- 1 Data are written to the virtual devices for interrupt output from the touch switches on the GOT.
- 2 The GOT sends the written data (interrupt output) to the host.

*1 Section 23.5 Message Formats

*2 Section 23.4 Device Data Area

23.2 System Configuration


Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.







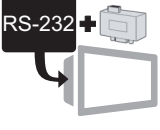



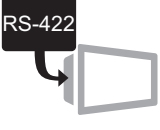




1 System configuration and connection conditions

Connection conditions		System configuration
No. of GOTs	Distance	
1	Differs according to host side specifications.	<p>3 RS-232 cable 1) 1</p>
		<p>4 RS-422 cable 1) 2</p>
		<p>5 RS-232 cable 2) 1</p>
		<p>6 RS-422 cable 2) 2</p>











2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)    (RS-232)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT)   (RS-422)

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) Cable

Image	No.	Name	Model name
	3	RS-232 cable 1) • Between host and GOT	 (To be prepared by the user.  Section 23.3 Connection Cable)
	4	RS-422 cable 1) • Between host and GOT	
	5	RS-232 cable 2) • Between host and GOT	 (To be prepared by the user.  Section 23.3 Connection Cable) (RS-232)
	6	RS-422 cable 2) • Between host and GOT	 (To be prepared by the user.  Section 23.3 Connection Cable) (RS-422)

23.3 Connection Cable

The RS-232 or RS-422 cable used for connecting the GOT to the microcomputer should be prepared by the user.

The following provides connection diagrams for each cable, connector specifications and other information.


23.3.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a microcomputer.

1 Connection diagram


(1) RS-232 cable 1) (for GT15, GT11)

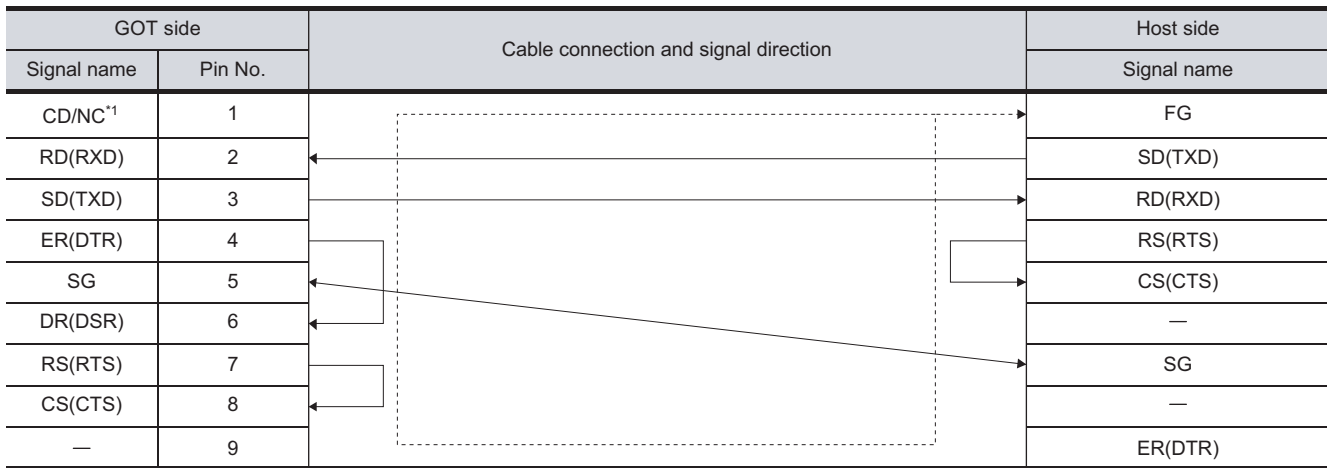(a) Example of the case where the DTR/DSR signal is not used



*1 GT15 : CD ,GT11 : NC

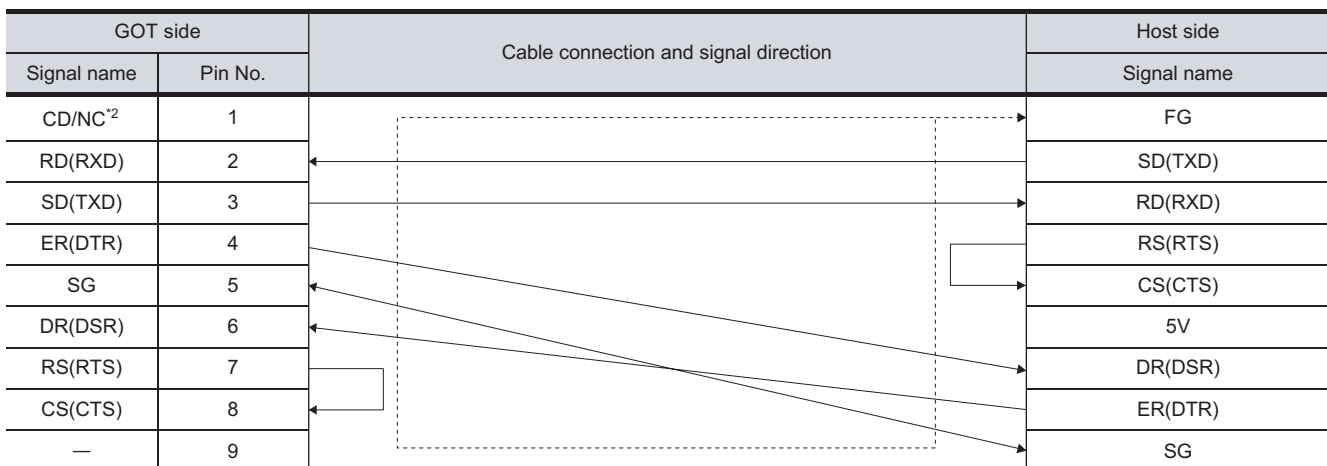
(b) Example of the case where the DTR/DSR signal is used




*2 GT15 : CD ,GT11 : NC

(2) RS-232 cable 2) (for GT10)

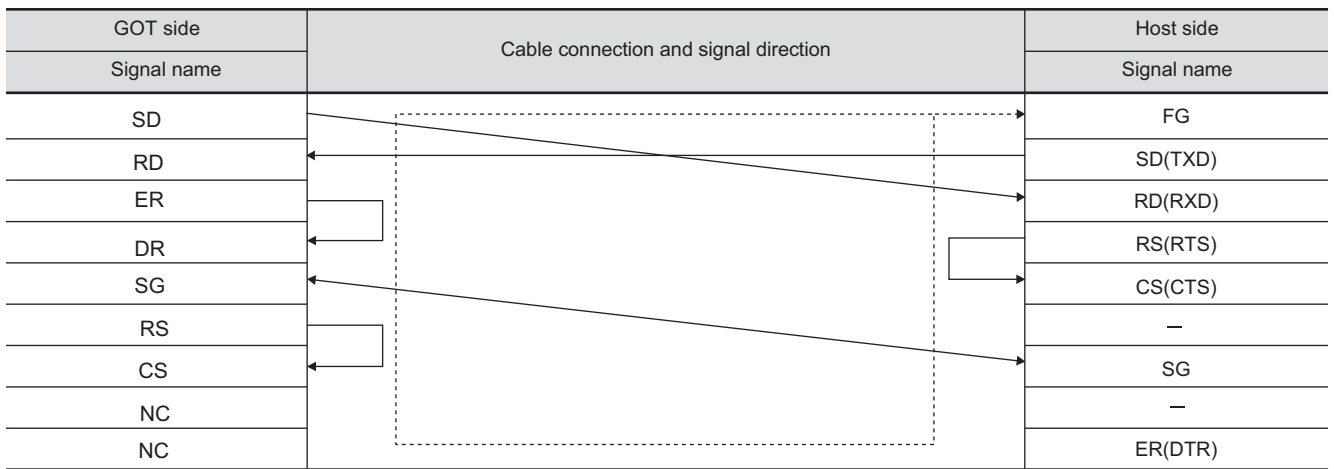(a) Example of the case where the DTR/DSR signal is not used



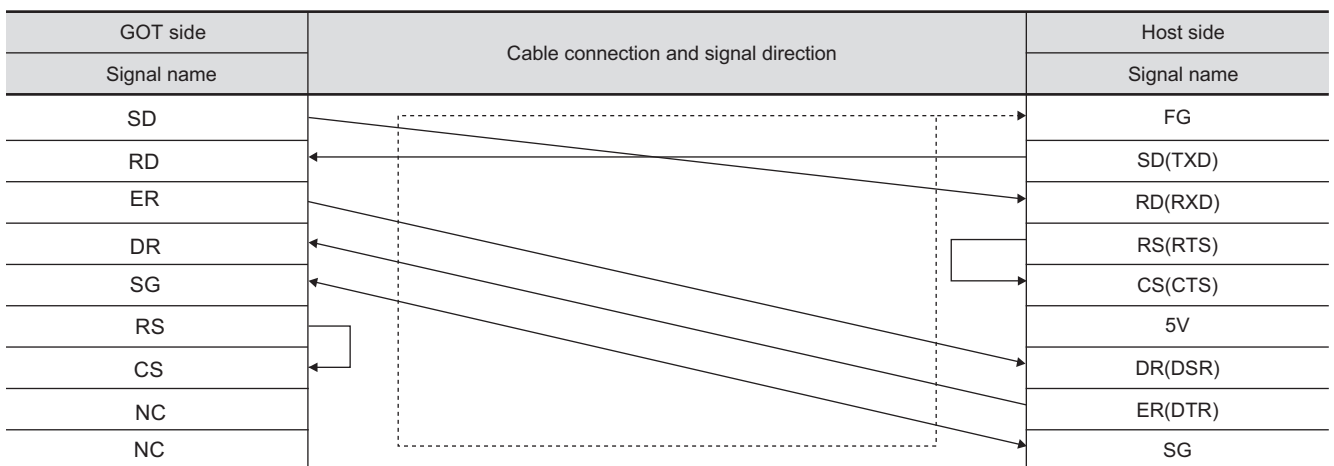(b) Example of the case where the DTR/DSR signal is used



17

CONNECTION TO FUJIF A PLC

18

CONNECTION TO MATSUSHITA PLC

19

CONNECTION TO YASKAWA PLC

20

CONNECTION TO YOKOGAWA PLC

21

CONNECTION TO ALLEN-BRADLEY PLC

22

CONNECTION TO SIEMENS PLC

23

MICROCOMPUTER CONNECTION

24

CONNECTION TO OMRON TEMPERATURE CONTROLLER

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

GOT	Hardware version*1	Connector type	Model	Manufacturer	
GT1595-X	-	9-pin D-sub (male) inch screw fixed type	17LE-23090-27(D4CK)	DDK Ltd	
GT1585V-S	-				
GT1585-STBA	B			GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C				
GT1585-STBD	-			17LE-23090-27(D4CK)	DDK Ltd
GT1575V-S	-				
GT1575-STBA	B			GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C				
GT1575-STBD	-			17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBA	D			GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E				
GT1575-VTBD	-				
GT1575-VN	-				
GT1572-VN	-			17LE-23090-27(D4CK)	DDK Ltd
GT1565-V	-				
GT1562-VN	-				
GT155□	-				
GT1155-Q, GT1150-Q	-			17LE-23090-27(D3CC)	
GT10	-		9-pin terminal block *2	MC1.5/9-G-3.5THT	PHOENIX CONTACT Inc.
GT15-RS2-9P	-		9-pin D-sub (male) inch screw fixed typ	17LE-23090-27(D4CK)	DDK Ltd

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

*2 The terminal block (MC1.5/9-ST-3.5BK or corresponding product) of the cable side is packed together with the GT10.

(2) Host side connector

Use the connector compatible with the host side.

3 Precautions when preparing a cable

The length of the RS-232 cable must be 15m or less.

23.3.2 RS-422 cable

The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a microcomputer.

1 Connection diagram

(1) RS-422 cable 1) (for GT15, GT11)

GOT side		Cable connection and signal direction	Host side
Signal name	Pin No.		Signal name
RDA	2		SDA
RDB	7		SDB
SDA	1		RDA
SDB	6		RDB
RSA	3		—
RSB	8		—
CSA	4		—
CSB	9		—
SG	5		SHELL

(2) RS-422 cable 2) (for GT10)

GOT side		Cable connection and signal direction	Host side
Signal name	Pin No.		Signal name
RDA	2		SDA
RDB	7		SDB
SDA	1		RDA
SDB	6		RDB
RSA	3		—
RSB	8		—
CSA	4		—
CSB	9		—
SG	5		SHELL

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Hardware version*1	Connector type	Model	Manufacturer
RS-422 conversion unit	-	9-pin D-sub (female)	17LE-13090-27(D2AC)	DDK Ltd.
GT11	-		17LE-13090-27(D3AC)	DDK Ltd.
GT10	-	9-pin terminal block*1	MC1.5/9-G-3.5THT	PHOENIX CONTACT Inc.
GT15-RS4-9S	-	9-pin D-sub (female)	17LE-13090-27(D3AC)	DDK Ltd.

*1 The terminal block (MC1.5/9-ST-3.5BK or corresponding product) of the cable side is packed together with the GT10.

(2) Host side connector

Use the connector compatible with the host side.




3 Precautions when preparing a cable

The length of the RS-422 cable must be 1200m or less.


23.4 Device Data Area

The following shows a list of virtual devices inside the GOT available in the microcomputer connection, and the address specification values for each data format.

The address specification of the virtual devices differs depending on the data format.*1

	Virtual device*2			Address specification value					Reference
	Name	Device range (decimal)	Device type	Formats 1, 2	Formats 3 to 6	Formats 7 to 10	Formats 11 to 13	Formats 14, 15	
 	D	0 to 4095	Word	0 to 4095	D0 to 4095	D0 to 4095	0000 to 0FFF _H	8000 to 9FFF _H	Section 23.4.1
	R	0 to 4095	Word	4096 to 8191	R0 to 4095	R0 to 4095	1000 to 1FFF _H	0000 to 1FFF _H	Section 23.4.2
	L	0 to 2047	Bit	8192 to 8319	L0 to 2047	L0 to 2047	2000 to 207F _H	A000 to A0FF _H	Section 23.4.3
	M	0 to 2047	Bit	8320 to 8447	M0 to 2047	M0 to 2047	2080 to 20FF _H	2000 to 20FF _H	Section 23.4.4
	SD	0 to 15	Word	8448 to 8463	D9000 to 9015	SD0 to 15	2100 to 210F _H	2100 to 211F _H (3000 to 300D _H)*3	Section 23.4.5
	SM	0 to 63	Bit	8464 to 8467	M9000 to 9063	SM0 to 63	2110 to 2113 _H	2200 to 2207 _H	Section 23.4.6
	D	0 to 511	Word	0 to 511	—		8000 to 83FF _H		Section 23.4.1
	R	0 to 4095	Word	4096 to 8191	—		0000 to 1FFF _H		Section 23.4.2
	L	0 to 2047	Bit	8192 to 8319	—		A000 to A0FF _H		Section 23.4.3
	M	0 to 2047	Bit	8320 to 8447	—		2000 to 20FF _H		Section 23.4.4
	SD	0 to 15	Word	8448 to 8463	—		2100 to 211F _H (3000 to 300D _H)*3		Section 23.4.5
	SM	0 to 63	Bit	8464 to 8467	—		2200 to 2207 _H		Section 23.4.6

*1 For the address specification method for each data format, refer to the following.

 Section 23.5 Message Formats

- Formats 1, 2 : GOT-A900 Series microcomputer connection
- Formats 3 to 6 : A compatible 1C frame
- Formats 7 to 10 : QnA compatible 3C/4C frame
- Formats 11 to 13 : Digital Electronics Corporation's memory link method
- Formats 14, 15 : GOT-F900 Series microcomputer connection

*2 When reusing GOT900 Series project data

- GOT-A900 Series virtual devices (D0 to 2047)
Can be used as they are without changing the assignments.
- GOT-F900 Series virtual devices
Since some of the assigned virtual device values differ as indicated below, change the assignment using device batch edit of GT Designer2.
Refer to the following manual for device batch edit of GT Designer2.

 GT Designer2 Version Basic Operation/Data Transfer Manual

GOT1000 Series virtual devices	GOT-F900 Series virtual devices
D0 to 2047	—
D2048 to 4095	—
R0 to 4095	D0 to 4095
L0 to 2047	—
M0 to 2047	M0 to 2047
SD0 to 15	D8000 to 8015 GD0 to 6
SM0 to 63	M8000 to 8063

*3 Access to SD3 to 9 can also be made by the specification of the addresses (3000 to 300D_H) of GD0 to 6 on the GOT-F900 Series.



About values of virtual devices inside the GOT

When the GOT is turned OFF or reset, values are cleared to their defaults (bit devices: OFF, word devices: 0).

Values are held in the memory when project data are downloaded to the GOT.

23.4.1 D devices

The D devices are word devices into which GOT communication errors, clock data or other information are stored.

The user can also store data using the user area.

1 List of D devices

The following lists the D devices (virtual devices inside the GOT).




Address	Description	Set side
D0 to 2	Unused	—
D3	<p>Communication error status Stores the communication error details of GOT.</p> <p>(0: Normal 1: Error)</p> <ul style="list-style-type: none"> • b4 to 6 turn ON when an SIO error occurs, and turn OFF when an request message from the host is received successfully after the error occurrence. • b7 turns ON about 3 seconds after the host side DTR becomes OFF, and turns OFF when transmission is performed successfully to the host after the error occurrence. 	—
D4	<p>Clock data (year)</p> <p>Lower 2 digits of calendar year stored as 2-digit BCD</p> <p>Unused</p>	System
D5	<p>Clock data (month)</p> <p>Data of months 01 to 12 stored as 2-digit BCD</p> <p>Unused</p>	
D6	<p>Clock data (day)</p> <p>Data of days 01 to 31 stored as 2-digit BCD</p> <p>Unused</p>	

(Continued to next page)

Address	Description	Set side
D7	Clock data (hour) <p>Diagram: A 16-bit register with bits b15 to b0. Bits b15-b8 are grouped as 'Unused'. Bits b7-b0 are grouped as 'Data of hours 00 to 23 stored as 2-digit BCD'.</p>	System
D8	Clock data (minute) <p>Diagram: A 16-bit register with bits b15 to b0. Bits b15-b8 are grouped as 'Unused'. Bits b7-b0 are grouped as 'Data of minutes 00 to 59 stored as 2-digit BCD'.</p>	
D9	Clock data (second) <p>Diagram: A 16-bit register with bits b15 to b0. Bits b15-b8 are grouped as 'Unused'. Bits b7-b0 are grouped as 'Data of seconds 00 to 59 stored as 2-digit BCD'.</p>	
D10	Clock data (day of week) ^{*1} <p>Diagram: A 16-bit register with bits b15 to b0. Bits b15-b8 are grouped as 'Unused'. Bits b7-b0 are grouped as 'Day-of-week data stored as 2-digit BCD'.</p> <p> (00: Sunday 01: Monday 02: Tuesday 03: Wednesday 04: Thursday 05: Friday 06: Saturday) </p>	
D11, D12	Unused	—

(Continued to next page)

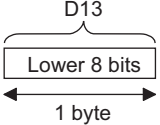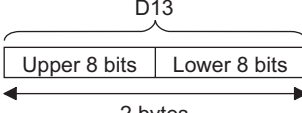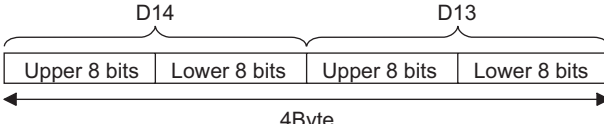- *1 If a wrong day of the week is set by the clock data setting command, the clock data will differ from the time displayed on the utility.
 Example: When June 1, 2004 (Thursday) is set by the clock data setting command (the actual day of the week is Tuesday),
 "04" is stored to D10 although Tuesday (TUE) will be displayed on the utility time display.

Address	Description	Set side	
D13	<p>Interrupt output</p> <p>When data are written to D13 and D14 from a GOT touch switch, for example, the data of D13 and D14 are transmitted (interrupt output) to the host side.*1 *2</p> <p>The data amount (the number of bytes) to be interrupt-output is set at "Interrupt Data Byte" in "Communication Detail Settings". (☞ Section 23.6.3 Setting communication interface (Communication settings))</p> <ul style="list-style-type: none"> Output value when 1 is set to "Interrupt Data Byte" in "Communication Detail Settings" 	User	
D14	<ul style="list-style-type: none"> Output value when 2 is set to "Interrupt Data Byte" in "Communication Detail Settings"  <ul style="list-style-type: none"> Output value when 4 is set to "Interrupt Data Byte" in "Communication Detail Settings" 		
D15 to 19	Unused		—
D20 to 2031	User area		User
D2032 to 2034	Unused	—	
D2035	<p>1-second binary counter</p> <p>The counter is incremented at 1-second intervals after the GOT is turned ON. (The time elapsed after the GOT is turned ON is stored in 1-second units.) Data are stored in binary format.</p>	System	
D2036 to 4095	User area	User	
D20 to 511	User area		

*1 After writing data, the interrupt is output within a period of 1 to 10ms.

*2 When data are written to D13 and D14 from the host side, interrupt output is not performed.




Point

- (1) About the side where virtual devices are set
 - System: Set on the system side.
 - User: Set on the user side (by sending request messages from host or using the touch switches, etc. on the GOT).
- (2) About interrupt output (D13, D14)
 - To disable the interrupt output, turn ON SM52 (interrupt code output disable flag). (☞ Section 23.4.6 SM devices)
 - To enable the interrupt output, set 8 bits to the data length at "Communication Detail Settings". (☞ Section 23.6.3 Setting communication interface (Communication settings))
 - When "7 bits" is set, the MSB (8th bit) is ignored. (Example: FF_H → 7F_H)


2 Differences in address specifications by data format

The address specification of devices varies depending on the data format.*1

The following shows the address specification values of each data format.

Address	Address specification value						
	Formats 1, 2	Formats 3 to 6	Formats 7 to 10	Formats 11 to 13	Formats 14, 15		
 	D0	0	D0	D0	0000H	8000H 8001H	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">8000H Upper 8 bits</div> <div style="text-align: center;">8001H Lower 8 bits</div> </div>
	D1	1	D1	D1	0001H	8002H 8003H	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">8002H Upper 8 bits</div> <div style="text-align: center;">8003H Lower 8 bits</div> </div>
	to	to	to	to	to	to	
	D4095	4095	D4095	D4095	0FFFH	9FFEH 9FFFH	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">9FFEH Upper 8 bits</div> <div style="text-align: center;">9FFFH Lower 8 bits</div> </div>
	D0	0	—			8000H 8001H	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">8000H Upper 8 bits</div> <div style="text-align: center;">8001H Lower 8 bits</div> </div>
	D1	1	—			8002H 8003H	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">8002H Upper 8 bits</div> <div style="text-align: center;">8003H Lower 8 bits</div> </div>
	to	to	—			to	
	D511	511	—			83FEH 83FFH	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">83FEH Upper 8 bits</div> <div style="text-align: center;">83FFH Lower 8 bits</div> </div>

*1 For the address specification method for each data format, refer to the following.

 Section 23.5 Message Formats

- Formats 1, 2 : GOT-A900 Series microcomputer connection
- Formats 3 to 6 : A compatible 1C frame
- Formats 7 to 10 : QnA compatible 3C/4C frame
- Formats 11 to 13 : Digital Electronics Corporation's memory link method
- Formats 14, 15 : GOT-F900 Series microcomputer connection



23.4.2 R devices

The R devices are word devices into which user data are stored.
All of these devices can be used as a user area.


1 List of R devices and differences in address specification by data format

The following shows the R devices (virtual devices inside the GOT).

The address specification values different depending on the data format are also given below.*1

Address	Address specification value				
	Formats 1, 2	Formats 3 to 6	Formats 7 to 10	Formats 11 to 13	Formats 14, 15
 R0 R1 to R4095	4096	R0	R0	1000H	0000H 0001H Upper 8 bits Lower 8 bits
	4097	R1	R1	1001H	0002H 0003H Upper 8 bits Lower 8 bits
	to	to	to	to	to
	8191	R4095	R4095	1FFFH	1FFE _H 1FFF _H Upper 8 bits Lower 8 bits
 R0 R1 to R4095	4096		—		0000H 0001H Upper 8 bits Lower 8 bits
	4097		—		0002H 0003H Upper 8 bits Lower 8 bits
	to	to	—		to
	8191		—		1FFE _H 1FFF _H Upper 8 bits Lower 8 bits

*1 For the address specification method for each data format, refer to the following.

 Section 23.5 Message Formats

- Formats 1, 2 : GOT-A900 Series microcomputer connection
- Formats 3 to 6 : A compatible 1C frame
- Formats 7 to 10 : QnA compatible 3C/4C frame
- Formats 11 to 13 : Digital Electronics Corporation's memory link method
- Formats 14, 15 : GOT-F900 Series microcomputer connection




23.4.3 L devices

The L devices are bit devices into which user data are stored.
All of these devices can be used as a user area.

1 List of L devices and differences in address specification by data format

The following shows the L devices (virtual devices inside the GOT).

The address specification values different depending on the data format are also given below.*1

	Address								Address specification value					
	b7	b6	b5	b4	b3	b2	b1	b0	Formats 1, 2	Formats 3 to 6	Formats 7 to 10	Formats 11 to 13	Formats 14, 15	
 	L7	L6	L5	L4	L3	L2	L1	L0	8192	Same as address column on left*2		2000 _H	A000 _H	
	L15	L14	L13	L12	L11	L10	L9	L8					A001 _H	
	L23	L22	L21	L20	L19	L18	L17	L16	8193			2001 _H	A002 _H	
	L31	L30	L29	L28	L27	L26	L25	L24					A003 _H	
	to								to				to	to
	L2039	L2038	L2037	L2036	L2035	L2034	L2033	L2032	8319			207F _H	A0FE _H	
	L2047	L2046	L2045	L2044	L2043	L2042	L2041	L2040					A0FF _H	
	L7	L6	L5	L4	L3	L2	L1	L0	8192	—	A000 _H			
	L15	L14	L13	L12	L11	L10	L9	L8		A001 _H				
	L23	L22	L21	L20	L19	L18	L17	L16	8193	—	A002 _H			
	L31	L30	L29	L28	L27	L26	L25	L24		—	A003 _H			
	to								to	—	to			
	L2039	L2038	L2037	L2036	L2035	L2034	L2033	L2032	8319	—	A0FE _H			
	L2047	L2046	L2045	L2044	L2043	L2042	L2041	L2040		—	A0FF _H			

*1 For the address specification method for each data format, refer to the following.

☞ Section 23.5 Message Formats

- Formats 1, 2 : GOT-A900 Series microcomputer connection
- Formats 3 to 6 : A compatible 1C frame
- Formats 7 to 10 : QnA compatible 3C/4C frame
- Formats 11 to 13 : Digital Electronics Corporation's memory link method
- Formats 14, 15 : GOT-F900 Series microcomputer connection

*2 For reading or writing data in word units, specify the addresses in 16-point units. (Example: L0, L16, L32, etc.)




23.4.4 M devices

The M devices are bit devices into which user data are stored.
All of these devices can be used as a user area.


1 List of M devices and differences in address specification by data format

The following shows the M devices (virtual devices inside the GOT).

The address specification values different depending on the data format are also given below.*1

	Address								Address specification value					
	b7	b6	b5	b4	b3	b2	b1	b0	Formats 1, 2	Formats 3 to 6	Formats 7 to 10	Formats 11 to 13	Formats 14, 15	
 	M7	M6	M5	M4	M3	M2	M1	M0	8320	Same as address column on left*2		2080H	2000H	
	M15	M14	M13	M12	M11	M10	M9	M8					2001H	
	M23	M22	M21	M20	M19	M18	M17	M16	8321			2081H	2002H	
	M31	M30	M29	M28	M27	M26	M25	M24					2003H	
	to								to				to	to
	M2039	M2038	M2037	M2036	M2035	M2034	M2033	M2032	8447			20FFH	20FEH	
	M2047	M2046	M2045	M2044	M2043	M2042	M2041	M2040					20FFH	
	M7	M6	M5	M4	M3	M2	M1	M0	8320	—	2000H			
	M15	M14	M13	M12	M11	M10	M9	M8		—	2001H			
	M23	M22	M21	M20	M19	M18	M17	M16	8321	—	2002H			
	M31	M30	M29	M28	M27	M26	M25	M24		—	2003H			
	to								to	—	to			
	M2039	M2038	M2037	M2036	M2035	M2034	M2033	M2032	8447	—	20FEH			
	M2047	M2046	M2045	M2044	M2043	M2042	M2041	M2040		—	20FFH			

*1 For the address specification method for each data format, refer to the following.

 Section 23.5 Message Formats

- Formats 1, 2 : GOT-A900 Series microcomputer connection
- Formats 3 to 6 : A compatible 1C frame
- Formats 7 to 10 : QnA compatible 3C/4C frame
- Formats 11 to 13 : Digital Electronics Corporation's memory link method
- Formats 14, 15 : GOT-F900 Series microcomputer connection

*2 For reading or writing data in word units, specify the addresses in 16-point units. (Example: M0, M16, M32, etc.)

23.4.5 SD devices

The SD devices are word devices into which GOT communication errors (error codes), clock data and other information are stored.

1 List of SD devices

The following lists the SD devices (virtual devices inside the GOT).

Address	Description	Set side
SD0 SD1	<p>100ms counter (32 bits)</p> <p>The counter is incremented at 100ms intervals after GOT is turned ON. (The time elapsed after GOT is turned ON is stored in 100ms units.)</p> <p>The lower and upper words are stored to SD0 and SD1 respectively.</p> <div style="text-align: center;"> </div>	
SD2*1	<p>Communication error status</p> <p>An error data (error code) occurred during communication is stored.</p> <ul style="list-style-type: none"> • Host Address (Communication error that occurred on the request destination GOT) <ul style="list-style-type: none"> 0: No error 1: Parity error 2: Framing error 3: Overrun error 4: Communication message error 5: Command error 6: Clock data setting error • Other station (Communication error that occurred on another GOT when multiple GOTs are connected) <ul style="list-style-type: none"> 101: Parity error 102: Framing error 103: Overrun error 104: Communication message error 105: Timeout error (No station of the specified address exists.) 106: Multiple units not connectable 107: Clock data setting error 	System
SD3	<p>Clock data (second)</p> <p>Second data of 00 to 59 is stored.</p>	
SD4	<p>Clock data (minute)</p> <p>Minute data of 00 to 59 is stored.</p>	
SD5	<p>Clock data (hour)</p> <p>Hour data of 00 to 23 is stored.</p>	
SD6	<p>Clock data (day)</p> <p>Day data of 00 to 31 is stored.</p>	
SD7	<p>Clock data (month)</p> <p>Month data of 00 to 12 is stored.</p>	

(Continued on next page)

*1 For details and corrective actions for the errors (error codes) that are stored into SD2, refer to the following:

2 Details and actions for errors (error codes) stored into SD2

Address	Description	Set side
SD8	Clock data (year) 4-digit year data is stored.	System
SD9	Clock data (day of week) ^{*1} Day-of-the-week data is stored. 0: Sunday 1: Monday 2: Tuesday 3: Wednesday 4: Thursday 5: Friday 6: Saturday	
SD10 to 15	Unused	—

*1 If a wrong day of the week is set by the clock data setting command, the clock data will differ from the time displayed on the utility.

Example: When June 1, 2004 (Thursday) is set by the clock data setting command (the actual day of week is Tuesday), "04" is stored to D9 although Tuesday (TUE) will be displayed on the utility time display.




About the side where virtual devices are set

System: Set on the system side.

User: Set on the user side (by sending request messages from host or using the touch switches, etc. on the GOT).

2 Details and actions for errors (error codes) stored into SD2

Error code	Description	Action
0	No error	—
1,101	Parity error The parity bit is not correct.	<ul style="list-style-type: none"> • Check the communication cable and communication unit for correct connection. • Check the Communication Detail Settings. • Set the same transmission settings on the GOT and the host.
2,102	Framing error The data bit and/or stop bit are not correct.	
3,103	Overrun error The next data were transmitted from the host before completion of the received data processing on the GOT.	<ul style="list-style-type: none"> • Check the Communication Detail Settings. • Decrease the transmission speed.
4,104	Communication message error EXT/CR could not be found before the upper limit of the receive buffer was exceeded.	<ul style="list-style-type: none"> • Check the communication cable and communication unit for correct connection. • Check the Communication Detail Settings. • Review the contents of the sending message
5	Command error An unsupported command was used.	<ul style="list-style-type: none"> • Review the contents of the sending message. • Check the command in the message. <p> Section 23.5.2 List of commands)</p>
105	Timeout error There is no response from the GOT, or the station of the specified address does not exist.	<ul style="list-style-type: none"> • Check the communication cable and communication unit for correct connection. • Check the Communication Detail Settings. • Review the contents of the sending message.
106	Multiple units not connectable The RS-232 port is occupied.	<ul style="list-style-type: none"> • Check the communication cable and communication unit for correct connection. • Check the Communication Detail Settings. • Check to see if the RS-232 port is occupied.
6,107	Clock data setting error A wrong value is set in the clock data.	<ul style="list-style-type: none"> • Review the contents of the sending message. • Check if any invalid data (e.g. "07" set as a day of the week) is set as clock data.

3 Differences in address specifications by data format

The address specification of devices varies depending on the data format.*1

The following shows the address specification values for each data format.

Address	Address specification value				
	Formats 1, 2	Formats 3 to 6	Formats 7 to 10	Formats 11 to 13	Formats 14, 15 *2
SD0	8448	D9000	SD0	2100H	2100H 2101H <div style="display: flex; justify-content: space-around; border-top: 1px solid black; border-bottom: 1px solid black;"> 2100H Upper 8 bits 2101H Lower 8 bits </div>
SD1	8449	D9001	SD1	2101H	2102H 2103H <div style="display: flex; justify-content: space-around; border-top: 1px solid black; border-bottom: 1px solid black;"> 2102H Upper 8 bits 2103H Lower 8 bits </div>
SD2	8450	D9002	SD2	2102H	2104H 2105H <div style="display: flex; justify-content: space-around; border-top: 1px solid black; border-bottom: 1px solid black;"> 2104H Upper 8 bits 2105H Lower 8 bits </div>
SD3	8451	D9003	SD3	2103H	2106H (3000H) 2107H (3001H) <div style="display: flex; justify-content: space-around; border-top: 1px solid black; border-bottom: 1px solid black;"> 2106H(3000H) Upper 8 bits 2107H(3001H) Lower 8 bits </div>
SD4	8452	D9004	SD4	2104H	2108H (3002H) 2109H (3003H) <div style="display: flex; justify-content: space-around; border-top: 1px solid black; border-bottom: 1px solid black;"> 2108H(3002H) Upper 8 bits 2109H(3003H) Lower 8 bits </div>
SD5	8453	D9005	SD5	2105H	210AH (3004H) 210BH (3005H) <div style="display: flex; justify-content: space-around; border-top: 1px solid black; border-bottom: 1px solid black;"> 210AH(3004H) Upper 8 bits 210BH(3005H) Lower 8 bits </div>
SD6	8454	D9006	SD6	2106H	210CH (3006H) 210DH (3007H) <div style="display: flex; justify-content: space-around; border-top: 1px solid black; border-bottom: 1px solid black;"> 210CH(3006H) Upper 8 bits 210DH(3007H) Lower 8 bits </div>
SD7	8455	D9007	SD7	2107H	210EH (3008H) 210FH (3009H) <div style="display: flex; justify-content: space-around; border-top: 1px solid black; border-bottom: 1px solid black;"> 210EH(3008H) Upper 8 bits 210FH(3009H) Lower 8 bits </div>
SD8	8456	D9008	SD8	2108H	2110H (300AH) 2111H (300BH) <div style="display: flex; justify-content: space-around; border-top: 1px solid black; border-bottom: 1px solid black;"> 2110H(300AH) Upper 8 bits 2111H(300BH) Lower 8 bits </div>
SD9	8457	D9009	SD9	2109H	2112H (300CH) 2113H (300DH) <div style="display: flex; justify-content: space-around; border-top: 1px solid black; border-bottom: 1px solid black;"> 2112H(300CH) Upper 8 bits 2113H(300DH) Lower 8 bits </div>

*1 For the address specification method for each data format, refer to the following.

Section 23.5 Message Formats

- Formats 1, 2 : GOT-A900 Series microcomputer connection
- Formats 3 to 6 : A compatible 1C frame
- Formats 7 to 10 : QnA compatible 3C/4C frame
- Formats 11 to 13 : Digital Electronics Corporation's memory link method
- Formats 14, 15 : GOT-F900 Series microcomputer connection

*2 SD3 to 9 correspond to GD0 to 6 on the GOT-F900 Series.

Access to SD3 to 9 can be also made by the specification of the addresses (3000 to 300DH) of GD0 to 6 on the GOT-F900 Series.

23.4.6 SM devices

The SM devices are bit devices into which interrupt outputs and clock data that turn ON/OFF at 1-second cycles.

1 List of SM devices

The following shows the SM devices (virtual devices inside the GOT).

Address	Description	Set side																															
SM0 to 49	<p>Interrupt output</p> <p>When the ON/OFF state of SM0 to 49 is changed by a touch switch on the GOT, for example, the interrupt codes shown below are transmitted (interrupt output) to the host side.*1*2</p> <p>The data amount (number of bytes) to be interrupt-output is set at "Interrupt Data Byte" in "Communication Detail Settings". (☞ Section 23.6.3 Setting communication interface (Communication settings))</p> <table border="1"> <thead> <tr> <th>Address</th> <th>Event type</th> <th>Interrupt code</th> </tr> </thead> <tbody> <tr> <td rowspan="2">SM0</td> <td>Changed from OFF to ON</td> <td>50H</td> </tr> <tr> <td>Changed from ON to OFF</td> <td>51H</td> </tr> <tr> <td rowspan="2">SM1</td> <td>Changed from OFF to ON</td> <td>52H</td> </tr> <tr> <td>Changed from ON to OFF</td> <td>53H</td> </tr> <tr> <td rowspan="2">SM2</td> <td>Changed from OFF to ON</td> <td>54H</td> </tr> <tr> <td>Changed from ON to OFF</td> <td>55H</td> </tr> <tr> <td>⋮</td> <td>⋮</td> <td>⋮</td> </tr> <tr> <td rowspan="2">SM48</td> <td>Changed from OFF to ON</td> <td>B0H</td> </tr> <tr> <td>Changed from ON to OFF</td> <td>B1H</td> </tr> <tr> <td rowspan="2">SM49</td> <td>Changed from OFF to ON</td> <td>B2H</td> </tr> <tr> <td>Changed from ON to OFF</td> <td>B3H</td> </tr> </tbody> </table>	Address	Event type	Interrupt code	SM0	Changed from OFF to ON	50H	Changed from ON to OFF	51H	SM1	Changed from OFF to ON	52H	Changed from ON to OFF	53H	SM2	Changed from OFF to ON	54H	Changed from ON to OFF	55H	⋮	⋮	⋮	SM48	Changed from OFF to ON	B0H	Changed from ON to OFF	B1H	SM49	Changed from OFF to ON	B2H	Changed from ON to OFF	B3H	User
Address	Event type	Interrupt code																															
SM0	Changed from OFF to ON	50H																															
	Changed from ON to OFF	51H																															
SM1	Changed from OFF to ON	52H																															
	Changed from ON to OFF	53H																															
SM2	Changed from OFF to ON	54H																															
	Changed from ON to OFF	55H																															
⋮	⋮	⋮																															
SM48	Changed from OFF to ON	B0H																															
	Changed from ON to OFF	B1H																															
SM49	Changed from OFF to ON	B2H																															
	Changed from ON to OFF	B3H																															
SM50	<p>1-second cycle clock</p> <p>Turns ON/OFF at a 1-second cycle.</p>	System																															
SM51	<p>2-second cycle clock</p> <p>Turns ON/OFF at a 2-second cycle.</p>																																
SM52	<p>Interrupt code output disable flag</p> <p>Enables or disables the output of the interrupt code.</p> <p>OFF : Interrupt code output enabled</p> <p>ON : Interrupt code output disabled</p> <p>When set to disable the interrupt code output, no interrupt data are output to the host. (Relevant devices: D13, D14, SM0 to 49)</p>	User																															
SM53 to 63	Unused	—																															

*1 After the ON/OFF state is changed, the interrupt data are output within a period of 1 to 10 ms.

*2 When the ON/OFF state of SM0 to 49 is changed from the host side, interrupt output is not performed.






- (1) About the side where virtual devices are set
 - System: Set on the system side.
 - User: Set on the user side (by sending request messages from host or using the touch switches, etc. on the GOT).


- (2) About interrupt outputs (SM0 to 49)
 - To disable the interrupt output, turn ON SM52 (interrupt code output disable flag). (☞ Section 23.4.6 SM devices)
 - To enable the interrupt output, set 8 bits to the data length at "Communication Detail Settings". (☞ Section 23.6.3 Setting communication interface (Communication settings))
 - When "7 bits" is set, the MSB (8th bit) is ignored. (Example: FF_H → 7F_H)

2 Differences in address specifications by data format

The address specification of devices varies depending on the data format.*1
The following shows the address specification values for each data format.

	Address								Address Specification Value				
	b7	b6	b5	b4	b3	b2	b1	b0	Formats 1, 2	Formats 3 to 6	Formats 7 to 10	Formats 11 to 13	Formats 14, 15
 	SM7	SM6	SM5	SM4	SM3	SM2	SM1	SM0	8464	*2*4	*3*4	2110H	2200H
	SM15	SM14	SM13	SM12	SM11	SM10	SM9	SM8					2201H
	SM23	SM22	SM21	SM20	SM19	SM18	SM17	SM16	8465			2111H	2202H
	SM31	SM30	SM29	SM28	SM27	SM26	SM25	SM24					2203H
	SM39	SM38	SM37	SM36	SM35	SM34	SM33	SM32	8466			2112H	2204H
	SM47	SM46	SM45	SM44	SM43	SM42	SM41	SM40					2205H
	Unused			SM52	SM51	SM50	SM49	SM48	8467			2113H	2206H
	Unused								—				—
	SM7	SM6	SM5	SM4	SM3	SM2	SM1	SM0	8464	—	—	—	2200H
	SM15	SM14	SM13	SM12	SM11	SM10	SM9	SM8		—	—	2201H	
	SM23	SM22	SM21	SM20	SM19	SM18	SM17	SM16	8465	—	—	—	2202H
	SM31	SM30	SM29	SM28	SM27	SM26	SM25	SM24		—	—	2203H	
	SM39	SM38	SM37	SM36	SM35	SM34	SM33	SM32	8466	—	—	—	2204H
	SM47	SM46	SM45	SM44	SM43	SM42	SM41	SM40		—	—	2205H	
	Unused			SM52	SM51	SM50	SM49	SM48	8467	—	—	—	2206H
	Unused								—	—	—		

*1 For the address specification method for each data format, refer to the following.

 Section 23.5 Message Formats

- Formats 1, 2 : GOT-A900 Series microcomputer connection
- Formats 3 to 6 : A compatible 1C frame
- Formats 7 to 10 : QnA compatible 3C/4C frame
- Formats 11 to 13 : Digital Electronics Corporation's memory link method
- Formats 14, 15 : GOT-F900 Series microcomputer connection

*2 In formats 3 to 6, values are specified within a range of M9000 to 9052.

*3 In formats 7 to 10, values are specified within a range of SM0 to 52.

*4 For reading or writing data in word units, specify the addresses in 16-point units. (Example: SM0, SM16, SM32, etc.)

23.5 Message Formats

This section describes the format of messages that can be used in the microcomputer connection.

23.5.1 Data format type and application

1 Data format type and application

Communication is possible using any of the data formats shown below.

(1) Formats 1, 2 (GOT-A900 series microcomputer connection)

This is the same message format as when a microcomputer connection is established with the GOT-A900 series.

Type	Name	Description	Reference
Format 1	GOT-A900 series microcomputer connection (format 1)	This format is used when the GOT is connected to the host in a 1:1 connection.	Section 23.5.3
Format 2	GOT-A900 series microcomputer connection (format 2)	This is the appended format with error code at the error response of the GOT-A900 series microcomputer connection (format 1).	

(2) Formats 3 to 6 (A compatible 1C frame)

This is the same message format as when communication is performed using the dedicated protocol of the A series computer link module.

Type	Name	Description	Reference
Format 3	A compatible 1C frame (format 1)	This is the basic format of the dedicated protocols.	Section 23.5.4
Format 4	A compatible 1C frame (format 2)	This is the appended format of the A compatible 1C frame (format 1) with a block No.	
Format 5	A compatible 1C frame (format 3)	This is the enclosed format of the A compatible 1C frame (format 1) with STX and ETX.	
Format 6	A compatible 1C frame (format 4)	This is the appended format of the A compatible 1C frame (format 1) with CR and LF.	

(3) Formats 7 to 10 (QnA compatible 3C/4C frame)

This is the same message format as when a communication is performed using the MC protocol of Q/QnA Series serial communication module.

Type	Name	Description	Reference
Format 7	QnA compatible 3C/4C frame (format 1)	This is the basic format of the MC protocols.	Section 23.5.5
Format 8	QnA compatible 3C/4C frame (format 2)	This is the appended format of the QnA compatible 3C/4C frame (format 1) with block No.	
Format 9	QnA compatible 3C/4C frame (format 3)	This is the enclosed format of the QnA compatible 3C/4C frame (format 1) with STX and ETX.	
Format 10	QnA compatible 3C/4C frame (format 4)	This is the appended format of the QnA compatible 3C/4C frame (format 1) with CR and LF.	

- (4) Formats 11 to 13 (Digital Electronics Corporation's memory link method)
This is the same format as the protocol of the Digital Electronics Corporation's memory link method.

Type	Name	Description	Reference
Format 11	Digital Electronics Corporation's memory link method (compatible mode)	This is the basic format of the Digital Electronics Corporation's memory link method.	Section 23.5.6
Format 12	Digital Electronics Corporation's memory link method (extended mode, ASCII code 1:1)	This is the appended format of the Digital Electronics Corporation's memory link method (compatible mode) with sum check, CR and LF.	
Format 13	Digital Electronics Corporation's memory link method (extended mode, ASCII code 1:n)	This is the appended format of the Digital Electronics Corporation's memory link method (extended mode, ASCII code 1:1) with a station No.	

- (5) Formats 14, 15 (GOT-F900 series microcomputer connection)
This is the same message format as when a microcomputer connection is established with the GOT-F900 Series.

Type	Name	Description	Reference
Format 14	GOT-F900 series microcomputer connection (format 1)	Use this format when establishing a 1:1 or m:n connection between the GOT and the host. The end code is CR.	Section 23.5.7
Format 15	GOT-F900 series microcomputer connection (format 2)	Use this format when establishing a 1:1 or m:n connection between the GOT and the host. The end code is ETX or sum check.	

2 How to set data format

Set the data format at "Communication Detail Settings" in GT Designer2.
For details of the data format setting method, refer to the following.

 Section 23.6.3 Setting communication interface (Communication settings)

23.5.2 List of commands

The following shows the list of commands available in each data format.

1 List of commands for formats 1, 2 (GOT-A900 series microcomputer connection)

Command		Command name	Description	Max. number of points processed
Symbol	ASCII code			
RD	52 _H 44 _H	Batch read in word units	Reads bit devices in 16-point units.	64 words (1024 points)
			Reads word devices in 1-point units.	64 points
WD	57 _H 44 _H	Batch write in word units	Writes to bit devices in 16-point units.	64 words (1024 points)
			Writes to word devices in 1-point units.	64 points
RR	52 _H 52 _H	Random read in word units ^{*1}	Reads multiple different bit devices in 16-point units.	64 words (1024 points)
			Reads multiple different word devices in 1-point units.	64 points
RW	52 _H 57 _H	Random write in word units ^{*1}	Writes to multiple different bit devices in 16-point units.	64 words (1024 points)
			Writes to multiple different word devices in 1-point units.	64 points
TR	54 _H 52 _H	Read clock data	Reads the clock data of the GOT.	—
TS	54 _H 53 _H	Set clock data	Sets the clock data of the GOT.	—

*1 Mixed specification of bit devices and word devices is also possible.

2 List of commands for formats 3 to 6 (A compatible 1C frame)

Command		Command name	Description	Max. number of points processed
Symbol	ASCII code			
BR JR	42 _H 52 _H 4A _H 52 _H	Batch read in bit units	Reads bit devices in 1-point units.	64 points
WR QR	57 _H 52 _H 51 _H 52 _H	Batch read in word units	Reads bit devices in 16-point units. ^{*3}	64 words (1024 points)
			Reads word devices in 1-point units.	64 points
BW JW	42 _H 57 _H 4A _H 57 _H	Batch write in bit units	Writes to bit devices in 1-point units.	64 points
WW QW	57 _H 57 _H 51 _H 57 _H	Batch write in word units	Writes to bit devices in 16-point units. ^{*3}	64 words (1024 points)
			Writes to word devices in 1-point units.	64 points
BT JT	42 _H 54 _H 4A _H 54 _H	Test in bit units(random write)	Writes to multiple different bit devices in 1-point units.	64 points
WT QT	57 _H 54 _H 51 _H 54 _H	Test in word units(random write)	Writes to multiple different bit devices in 16-point units. ^{*3}	64 words (1024 points)
			Writes to multiple different word devices in 1-point units.	64 points
TR ^{*2}	54 _H 52 _H	Read clock data	Reads the clock data of the GOT.	—
TS ^{*2}	54 _H 53 _H	Set clock data	Sets the clock data of the GOT.	—

*2 This is a dedicated command of GOT for the microcomputer connection.

*3 Specifies the address of bit devices in 16-point units. (Example: M0, M16, M32, and others)

3 Command lists for formats 7 to 10 (QnA compatible 3C/4C frame)

Command	Sub-command	Command name	Description	Max. number of points processed
0401	0001	Batch read in bit units	Reads bit devices in 1-point units.	64 points
0401	0000	Batch read in word units	Reads bit devices in 16-point units. ^{*3}	64 words (1024 points)
			Reads word devices in 1-point units.	64 points
1401	0001	Batch write in bit units	Writes to bit devices in 1-point units.	64 points
1401	0000	Batch read in word units	Writes to bit devices in 16-point units. ^{*3}	64 words (1024 points)
			Writes to word devices in 1-point units.	64 points
0403	0000	Random read in word units ^{*1}	Reads multiple different bit devices in 16-point and 32-point units. ^{*3}	64 words (1024 points)
			Reads multiple different word devices in 1-point and 2-point units.	64 points
1402	0001	Random write in bit units	Writes to multiple different bit devices in 1-point units.	64 points
1402	0000	Random write in word units ^{*1}	Writes to multiple different bit devices in 16-point and 32-point units. ^{*3}	64 words (1024 points)
			Writes to multiple different word devices in 1-point and 2-point units.	64 points
0406	0000	Multiple block batch read	Reads multiple blocks. A bit device (16 bits for 1 point) or a word device (1 word for 1 point) is regarded as one block. ^{*3}	64 points
1406	0000	Multiple block batch write	Writes multiple blocks. A bit device (16 bits for 1 point) or a word device (1 word for 1 point) is regarded as one block. ^{*3}	64 points
1901 ^{*2}	0000	Read clock data	Reads the clock data of the GOT.	—
0901 ^{*2}	0000	Set clock data	Sets the clock data of the GOT.	—

*1 Mixed specification of bit devices and word devices is also possible.

*2 This is a dedicated command of GOT for the microcomputer connection.

*3 Specifies the address of bit devices in 16-point units. (Example: M0, M16, M32, and others)

4 List of commands for formats 11 to 13 (Digital Electronics Corporation's memory link method)

Command		Command name	Description	Max. number of points processed
Symbol	ASCII code			
R	52 _H	Batch read in word units	Reads bit devices in 16-point units.	64 words (1024 points)
			Reads word devices in 1-point units.	64 points
W	57 _H	Batch write in word units	Writes to bit devices in 16-point units.	64 words (1024 points)
			Writes to word devices in 1-point units.	64 points
I	49 _H	Interrupt inquiry	Issues an interrupt inquiry. (format 13 only)	—
N ^{*4}	4D _H	Read clock data	Reads the clock data of the GOT.	—
M ^{*4}	4E _H	Set clock data	Sets the clock data of the GOT.	—

*4 This is a dedicated command of GOT for the microcomputer connection.

5 List of commands for formats 14, 15 (GOT-F900 series microcomputer connection)

Command		Command name	Description	Max. number of points processed
Symbol	ASCII code			
0	30H	Batch read (w/out station No.)	Reads bit devices in byte units.	255bytes (2040 points)
			Reads word devices in byte units.	255bytes (127 points)
A	41H	Batch read (w/ station No.)	Reads bit devices in byte units.	255bytes (2040 points)
			Reads word devices in byte units.	255bytes (127 points)
1	31H	Batch write (w/out station No.)	Writes to bit devices in byte units.	255bytes (2040 points)
			Writes to word devices in byte units.	255bytes (127 points)
B	42H	Batch write (w/ station No.)	Writes to bit devices in byte units.	255bytes (2040 points)
			Writes to word devices in byte units.	255bytes (127 points)
3	33H	Multi-point write in bit units (w/ station No.)	Writes bit patterns (bit ON/OFF, inversion, direct specification) in 1-point units (8 bits for 1 point) to a specified device.	70 bytes (560 points)
D	44H	Multi-point write in bit units (w/ station No.)		
4	34H	Fill command (w/out station No.)	Writes the same value to a range of specified devices.	—
E	45H	Fill command (w/ station No.)		
5	35H	Set clock data (w/out station No.)	Sets the clock data of the GOT.	—
F	46H	Set clock data (w/ station No.)		
6	36H	Read clock data (w/out station No.)	Reads the clock data of the GOT.	—
G	47H	Read clock data (w/ station No.)		

23.5.3 Formats 1, 2 (GOT-A900 series microcomputer connection)



1 Basic format of data communication

Item	Message format											
Request message (host → GOT)	<table border="1"> <tr> <td>STX</td> <td>Command</td> <td>Data</td> <td>ETX</td> <td>Sum Check</td> </tr> <tr> <td>02H</td> <td>(H) (L)</td> <td></td> <td>03H</td> <td>(H) (L)</td> </tr> </table> <p style="text-align: center;">Sum check is performed in this range.</p>		STX	Command	Data	ETX	Sum Check	02H	(H) (L)		03H	(H) (L)
STX	Command	Data	ETX	Sum Check								
02H	(H) (L)		03H	(H) (L)								
Response message during normal communication (GOT → host)	<p>(1) During processing of read commands</p> <table border="1"> <tr> <td>STX</td> <td>Data</td> <td>ETX</td> <td>Sum Check</td> </tr> <tr> <td>02H</td> <td></td> <td>03H</td> <td>(H) (L)</td> </tr> </table> <p style="text-align: center;">Sum check is performed in this range.</p> <p>(2) During processing of write commands</p> <table border="1"> <tr> <td>ACK</td> </tr> <tr> <td>06H</td> </tr> </table>		STX	Data	ETX	Sum Check	02H		03H	(H) (L)	ACK	06H
STX	Data	ETX	Sum Check									
02H		03H	(H) (L)									
ACK												
06H												
Response message during faulty communication (GOT → host)	<p>(format 1: GOT-A900 series microcomputer connection (format 1))</p> <table border="1"> <tr> <td>NAK</td> </tr> <tr> <td>15H</td> </tr> </table>	NAK	15H	<p>(format 2: GOT-A900 series microcomputer connection (format 2))</p> <table border="1"> <tr> <td>NAK</td> <td>Error Code</td> </tr> <tr> <td>15H</td> <td></td> </tr> </table>	NAK	Error Code	15H					
NAK												
15H												
NAK	Error Code											
15H												
During interrupt output	<p>(format 1: GOT-A900 series microcomputer connection (format 1))</p> <table border="1"> <tr> <td>Output value</td> </tr> <tr> <td>1/2/4 bytes*1</td> </tr> </table>	Output value	1/2/4 bytes*1	<p>(format 2: GOT-A900 series microcomputer connection (format 2))</p> <table border="1"> <tr> <td>STX</td> <td>Output value</td> <td>ETX</td> <td>Sum check</td> </tr> <tr> <td>02H</td> <td>1/2/4 bytes*1</td> <td>03H</td> <td>(H) (L)</td> </tr> </table> <p style="text-align: center;">Sum check is performed in this range.</p>	STX	Output value	ETX	Sum check	02H	1/2/4 bytes*1	03H	(H) (L)
Output value												
1/2/4 bytes*1												
STX	Output value	ETX	Sum check									
02H	1/2/4 bytes*1	03H	(H) (L)									

*1 Set the number of interrupt data bytes at "Communication Detail Settings" in GT Designer2. For the setting of the number of interrupt data bytes, refer to the following.

Section 23.6.3 Setting communication interface (Communication settings)

17 CONNECTION TO FUJIF A PLC
18 CONNECTION TO MATSUSHITA PLC
19 CONNECTION TO YASKAWA PLC
20 CONNECTION TO YOKOGAWA PLC
21 CONNECTION TO ALLEN-BRADLEY PLC
22 CONNECTION TO SIEMENS PLC
23 MICROCOMPUTER CONNECTION
24 CONNECTION TO OMRON TEMPERATURE CONTROLLER

2 Details of data items in message format



Data code during communication

Communication is performed in ASCII code. (excluding interrupt output)

(1) Control codes

Symbol	ASCII code	Description
STX	02H	Start of Text (start marker of message frame)
ETX	03H	End of Text (end marker of message frame)
EOT	04H	End of Transmission
ENQ	05H	Enquiry (start of enquiry)
NAK	15H	Negative ACK (error response)
ACK	06H	Acknowledge (write completion response)
LF	0AH	Line Feed
CL	0CH	Clear
CR	0DH	Carriage Return

(2) Command

Specifies the contents to access from the host to GOT.

The command is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.

For details of commands that can be used, refer to the following.

Section 23.5.2 List of commands

(3) Address

Specifies the head No. of the device data to be read/written.

The address notated in decimal is converted to a 4-digit ASCII code (Hex) and transmitted from the upper digit.

For details of the device ranges that can be accessed, refer to the following.

Section 23.4 Device Data Area

(4) Number of points

Specifies the number of device data to be read/written. (Setting range: 1 to 64)

The number of points notated in decimal is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.

(5) Year, month, day, hour, minute, second and day of the week data


Specifies year, month, day, hour, minute, second, and day of the week to be read/set to the GOT clock data.

Data notated in decimal is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.

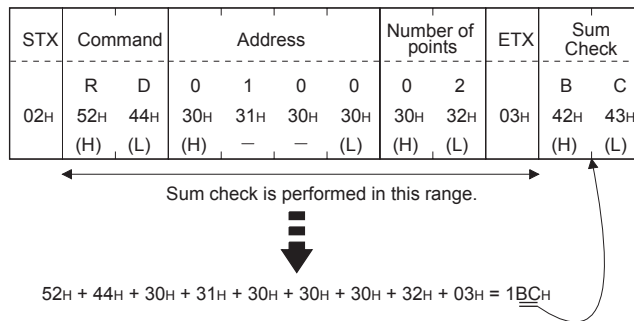
3 (5) Read clock data (TR) command

3 (6) Set clock data (TS) command

- (6) Data
Specifies data to read from/write to the specified device data. (word unit)
Data notated in Hex is converted to a 4-digit ASCII code (Hex) and transmitted from the upper digit.
- (7) Error code
This is the response message at faulty communication appended with error contents.
Error code is transmitted in 1 byte.
For details of the error codes generated in format 2 (GOT-A900 series microcomputer connection (format 2)), refer to the following:

 **4** Error code list

- (8) Sum check code
The sum check code is obtained by converting the lower 1 byte (8 bits) of the result (sum), after having added the sum check target data as binary data, to 2-digit ASCII code (Hex).




3 Message format

(1) Batch read in word units (RD) command

(a) When reading a word device

The following shows an example of reading the two points of the virtual devices D100 and D101.

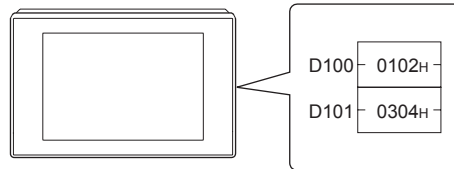(Assuming D100="0102H" and D101="0304H" are stored.)




Item	Message format																																																
Request message (host → GOT)	<table border="1"> <thead> <tr> <th>STX</th> <th colspan="2">Command</th> <th colspan="4">Address</th> <th colspan="2">Number of points</th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>R</td> <td>D</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> <td>0</td> <td>2</td> <td>03H</td> <td>B</td> <td>C</td> </tr> <tr> <td></td> <td>(H)</td> <td>(L)</td> <td>30H</td> <td>31H</td> <td>30H</td> <td>30H</td> <td>30H</td> <td>32H</td> <td></td> <td>42H</td> <td>43H</td> </tr> <tr> <td></td> <td></td> <td></td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td></td> <td>(H)</td> <td>(L)</td> </tr> </tbody> </table> <p style="text-align: center;">← Sum check is performed in this range. →</p>	STX	Command		Address				Number of points		ETX	Sum Check		02H	R	D	0	1	0	0	0	2	03H	B	C		(H)	(L)	30H	31H	30H	30H	30H	32H		42H	43H				(H)	-	-	(L)	(H)	(L)		(H)	(L)
STX	Command		Address				Number of points		ETX	Sum Check																																							
02H	R	D	0	1	0	0	0	2	03H	B	C																																						
	(H)	(L)	30H	31H	30H	30H	30H	32H		42H	43H																																						
			(H)	-	-	(L)	(H)	(L)		(H)	(L)																																						
Response message during normal communication (GOT → host)	<table border="1"> <thead> <tr> <th>STX</th> <th colspan="4">Data 1 (D100)</th> <th colspan="4">Data 2 (D101)</th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>0</td> <td>1</td> <td>0</td> <td>2</td> <td>0</td> <td>3</td> <td>0</td> <td>4</td> <td>03H</td> <td>8</td> <td>D</td> </tr> <tr> <td></td> <td>30H</td> <td>31H</td> <td>30H</td> <td>32H</td> <td>30H</td> <td>33H</td> <td>30H</td> <td>34H</td> <td></td> <td>38H</td> <td>44H</td> </tr> <tr> <td></td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td></td> <td>(H)</td> <td>(L)</td> </tr> </tbody> </table> <p style="text-align: center;">← Sum check is performed in this range. →</p>	STX	Data 1 (D100)				Data 2 (D101)				ETX	Sum Check		02H	0	1	0	2	0	3	0	4	03H	8	D		30H	31H	30H	32H	30H	33H	30H	34H		38H	44H		(H)	-	-	(L)	(H)	-	-	(L)		(H)	(L)
STX	Data 1 (D100)				Data 2 (D101)				ETX	Sum Check																																							
02H	0	1	0	2	0	3	0	4	03H	8	D																																						
	30H	31H	30H	32H	30H	33H	30H	34H		38H	44H																																						
	(H)	-	-	(L)	(H)	-	-	(L)		(H)	(L)																																						
Response message during faulty communication (GOT → host)	<p>(format 1: GOT-A900 series microcomputer connection (format 1))</p> <table border="1"> <tr> <td>NAK</td> </tr> <tr> <td>15H</td> </tr> </table> <p>(format 2: GOT-A900 series microcomputer connection (format 2))</p> <table border="1"> <tr> <td>NAK</td> <td>Error code</td> </tr> <tr> <td>15H</td> <td>06H</td> </tr> </table> <p>The above is a case where the sum check error (06H) has occurred.</p>	NAK	15H	NAK	Error code	15H	06H																																										
NAK																																																	
15H																																																	
NAK	Error code																																																
15H	06H																																																

(2) Batch write in word units (WD) command

(a) When writing to a word device

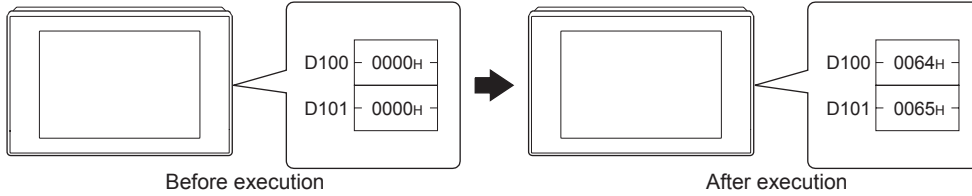The following shows as example of writing "0064H" and "0065H" to virtual devices D100 and D101.




Item	Message format																			
Request message (host → GOT)	STX	Command		Address				Number of points		Data 1 (D100)				Data 2 (D101)		ETX	Sum Check			
	02H	W	D	0	1	0	0	0	2	0	0	6	4	0	0	6	5	03H	5	6
	(H)	(L)	(H)	-	-	(L)	(H)	(L)	(H)	-	-	(L)	(H)	-	-	(L)	(H)	(L)	(H)	(L)
← Sum check is performed in this range. →																				
Response message during normal communication (GOT → host)															ACK					
															06H					
Response message during faulty communication (GOT → host)	(format 1: GOT-A900 series microcomputer connection (format 1))														NAK					
	(format 2: GOT-A900 series microcomputer connection (format 2))														15H					
															NAK	Error code				
														15H	06H					
														The above is a case where the sum check error (06H) has occurred.						

(3) Random read in word units (RR) command

The following shows an example of reading the two points of the virtual devices D100 and M0 to M15.

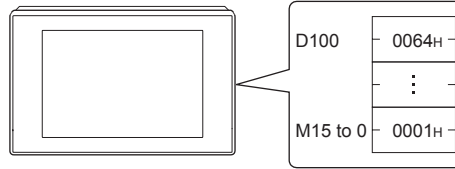(Assuming D100="0064H" and M0="1" are stored.)




Item	Message format																																																																																																																		
Request message (host → GOT)	<table border="1"> <thead> <tr> <th>STX</th> <th colspan="2">Command</th> <th colspan="4">Address 1</th> <th colspan="4">Address 2</th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>R</td> <td>R</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> <td>8</td> <td>3</td> <td>2</td> <td>0</td> <td>03H</td> <td>3</td> <td>5</td> </tr> <tr> <td></td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td></td> <td>(H)</td> <td>(L)</td> </tr> </tbody> </table> <p style="text-align: center;">Sum check is performed in this range.</p>	STX	Command		Address 1				Address 2				ETX	Sum Check		02H	R	R	0	1	0	0	8	3	2	0	03H	3	5		(H)	(L)	(H)	-	-	(L)	(H)	-	-	(L)		(H)	(L)																																																																								
STX	Command		Address 1				Address 2				ETX	Sum Check																																																																																																							
02H	R	R	0	1	0	0	8	3	2	0	03H	3	5																																																																																																						
	(H)	(L)	(H)	-	-	(L)	(H)	-	-	(L)		(H)	(L)																																																																																																						
Response message during normal communication (GOT → host)	<p style="text-align: center;">Sum check is performed in this range.</p> <table border="1"> <thead> <tr> <th>STX</th> <th colspan="4">Data 1 (D100)</th> <th colspan="4">Data 2 (M15 to 0)</th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>0</td> <td>0</td> <td>6</td> <td>4</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>03H</td> <td>8</td> <td>E</td> </tr> <tr> <td></td> <td>30H</td> <td>30H</td> <td>36H</td> <td>34H</td> <td>30H</td> <td>30H</td> <td>30H</td> <td>31H</td> <td></td> <td>38H</td> <td>45H</td> </tr> <tr> <td></td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td></td> <td>(H)</td> <td>(L)</td> </tr> </tbody> </table> <div style="margin-left: 150px;"> <table border="1"> <tr> <td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td> </tr> <tr> <td>M</td><td>M</td><td>M</td><td>M</td><td>M</td><td>M</td><td>M</td><td>M</td><td>M</td><td>M</td><td>M</td><td>M</td><td>M</td><td>M</td><td>M</td><td>M</td> </tr> <tr> <td>1</td><td>1</td><td>1</td><td>1</td><td>1</td><td>1</td><td>1</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> <tr> <td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </table> </div>	STX	Data 1 (D100)				Data 2 (M15 to 0)				ETX	Sum Check		02H	0	0	6	4	0	0	0	1	03H	8	E		30H	30H	36H	34H	30H	30H	30H	31H		38H	45H		(H)	-	-	(L)	(H)	-	-	(L)		(H)	(L)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	1	1	1	1	1	1	1	9	8	7	6	5	4	3	2	1	0	5	4	3	2	1	0											
STX	Data 1 (D100)				Data 2 (M15 to 0)				ETX	Sum Check																																																																																																									
02H	0	0	6	4	0	0	0	1	03H	8	E																																																																																																								
	30H	30H	36H	34H	30H	30H	30H	31H		38H	45H																																																																																																								
	(H)	-	-	(L)	(H)	-	-	(L)		(H)	(L)																																																																																																								
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1																																																																																																				
M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M																																																																																																				
1	1	1	1	1	1	1	9	8	7	6	5	4	3	2	1	0																																																																																																			
5	4	3	2	1	0																																																																																																														
Response message during faulty communication (GOT → host)	<p>(format 1: GOT-A900 series microcomputer connection (format 1))</p> <table border="1"> <tr> <td>NAK</td> </tr> <tr> <td>15H</td> </tr> </table> <p>(format 2: GOT-A900 series microcomputer connection (format 2))</p> <table border="1"> <tr> <td>NAK</td> <td>Error code</td> </tr> <tr> <td>15H</td> <td>06H</td> </tr> </table> <p>The above is a case where the sum check error (06H) has occurred.</p>	NAK	15H	NAK	Error code	15H	06H																																																																																																												
NAK																																																																																																																			
15H																																																																																																																			
NAK	Error code																																																																																																																		
15H	06H																																																																																																																		

(5) Read clock data (TR) command

The following shows an example of reading the clock data of GOT.

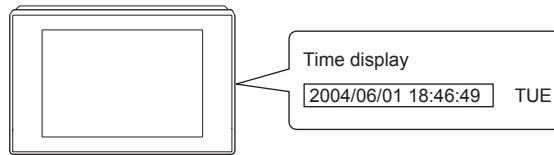(Assuming that the clock data of GOT has been set to "2004, June 1, 18:46:49, Tuesday".)




Item	Message format																																																																								
Request message (host → GOT)	<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>STX</th> <th colspan="2">Command</th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>T</td> <td>R</td> <td>03H</td> <td>A</td> <td>9</td> </tr> <tr> <td></td> <td>54H</td> <td>52H</td> <td></td> <td>41H</td> <td>39H</td> </tr> <tr> <td></td> <td>(H)</td> <td>(L)</td> <td></td> <td>(H)</td> <td>(L)</td> </tr> </tbody> </table> <p style="text-align: center;">← Sum check is performed in this range. →</p>	STX	Command		ETX	Sum Check		02H	T	R	03H	A	9		54H	52H		41H	39H		(H)	(L)		(H)	(L)																																																
STX	Command		ETX	Sum Check																																																																					
02H	T	R	03H	A	9																																																																				
	54H	52H		41H	39H																																																																				
	(H)	(L)		(H)	(L)																																																																				
Response message during normal communication (GOT → host)	<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>STX</th> <th colspan="2">Year data</th> <th colspan="2">Month data</th> <th colspan="2">Day data</th> <th colspan="2">Hour data</th> <th colspan="2">Minute data</th> <th colspan="2">Second data</th> <th colspan="2">Day-of-week data</th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>0</td> <td>4</td> <td>0</td> <td>6</td> <td>0</td> <td>1</td> <td>1</td> <td>8</td> <td>4</td> <td>6</td> <td>4</td> <td>9</td> <td>0</td> <td>2</td> <td>03H</td> <td>D</td> <td>0</td> </tr> <tr> <td></td> <td>30H</td> <td>34H</td> <td>30H</td> <td>36H</td> <td>30H</td> <td>31H</td> <td>31H</td> <td>38H</td> <td>34H</td> <td>36H</td> <td>34H</td> <td>39H</td> <td>30H</td> <td>32H</td> <td></td> <td>44H</td> <td>30H</td> </tr> <tr> <td></td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td></td> <td>(H)</td> <td>(L)</td> </tr> </tbody> </table> <p style="text-align: center;">← Sum check is performed in this range. →</p>	STX	Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data		ETX	Sum Check		02H	0	4	0	6	0	1	1	8	4	6	4	9	0	2	03H	D	0		30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H		44H	30H		(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)		(H)	(L)
STX	Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data		ETX	Sum Check																																																									
02H	0	4	0	6	0	1	1	8	4	6	4	9	0	2	03H	D	0																																																								
	30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H		44H	30H																																																								
	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)		(H)	(L)																																																								
Response message during faulty communication (GOT → host)	<p>(format 1: GOT-A900 series microcomputer connection (format 1))</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>NAK</td> </tr> <tr> <td>15H</td> </tr> </table> <p>(format 2: GOT-A900 series microcomputer connection (format 2))</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>NAK</td> <td>Error code</td> </tr> <tr> <td>15H</td> <td>06H</td> </tr> </table> <p style="text-align: center;">The above is a case where the sum check error (06H) has occurred.</p>	NAK	15H	NAK	Error code	15H	06H																																																																		
NAK																																																																									
15H																																																																									
NAK	Error code																																																																								
15H	06H																																																																								

(6) Set clock data (TS) command

The following shows an example of setting the clock data of GOT.

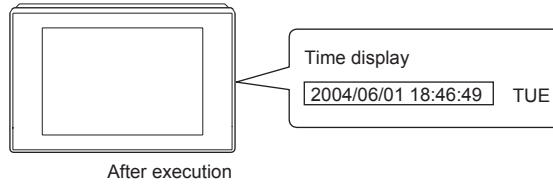(Assuming the clock data of GOT is to be set to "2004, June 1, 18:46:49 Tuesday".)



Item	Message format																																																												
Request message (host → GOT)	<table border="1"> <thead> <tr> <th>STX</th> <th colspan="2">Command</th> <th colspan="2">Year data</th> <th colspan="2">Month data</th> <th colspan="2">Day data</th> <th colspan="2">Hour data</th> <th colspan="2">Minute data</th> <th colspan="2">Second data</th> <th colspan="2">Day-of-week data</th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>T</td> <td>S</td> <td>0</td> <td>4</td> <td>0</td> <td>6</td> <td>0</td> <td>1</td> <td>1</td> <td>8</td> <td>4</td> <td>6</td> <td>4</td> <td>9</td> <td>0</td> <td>2</td> <td>03H</td> <td>7</td> <td>7</td> </tr> <tr> <td></td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td></td> <td>(H)</td> <td>(L)</td> </tr> </tbody> </table> <p style="text-align: center;">← Sum check is performed in this range. →</p>	STX	Command		Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data		ETX	Sum Check		02H	T	S	0	4	0	6	0	1	1	8	4	6	4	9	0	2	03H	7	7		(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)		(H)	(L)
STX	Command		Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data		ETX	Sum Check																																											
02H	T	S	0	4	0	6	0	1	1	8	4	6	4	9	0	2	03H	7	7																																										
	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)		(H)	(L)																																										
Response message during normal communication (GOT → host)	<table border="1"> <tr> <td>ACK</td> </tr> <tr> <td>06H</td> </tr> </table>	ACK	06H																																																										
ACK																																																													
06H																																																													
Response message during faulty communication (GOT → host)	<p>(format 1: GOT-A900 series microcomputer connection (format 1))</p> <table border="1"> <tr> <td>NAK</td> </tr> <tr> <td>15H</td> </tr> </table> <p>(format 2: GOT-A900 series microcomputer connection (format 2))</p> <table border="1"> <tr> <td>NAK</td> <td>Error code</td> </tr> <tr> <td>15H</td> <td>06H</td> </tr> </table> <p>The above is a case where the sum check error (06H) has occurred.</p>	NAK	15H	NAK	Error code	15H	06H																																																						
NAK																																																													
15H																																																													
NAK	Error code																																																												
15H	06H																																																												

Point

When a wrong day of the week has been set by the clock data setting command

If a wrong day of the week is set by the clock data setting commands, the clock data will differ from the time displayed on the utility.

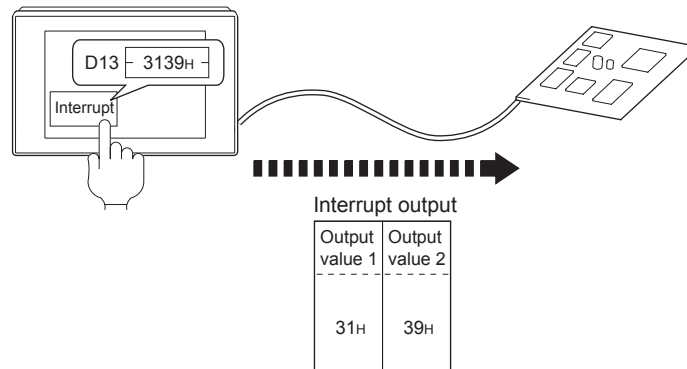
Example: When June 1, 2004 (Thursday) is set by the clock data setting command (the actual day of week is Tuesday), Tuesday (TUE) will be displayed on the utility time display.

(7) In the case of interrupt outputs

The following shows an example of an interrupt output when data are written to the interrupt output devices (D13 and D14).

(Assuming that "3139H" is written to D13 and "AA55H" to D14.)

Example: When the number of interrupt data bytes is 2



Item	Message format																																
Interrupt output (GOT → host)	(1) When [Interrupt Data Byte] in "Communication Detail Settings" is set to "1 byte"																																
	(format 1: in the case of GOT-A900 Series microcomputer connection (format 1)) <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Output value 1</th> </tr> </thead> <tbody> <tr> <td>39H</td> </tr> </tbody> </table>	Output value 1	39H	(format 2: in the case of GOT-A900 Series microcomputer connection (format 2)) <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>STX</th> <th>Output value 1</th> <th>ETX</th> <th colspan="2">Sum check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>39H</td> <td>03H</td> <td>3</td> <td>C</td> </tr> <tr> <td></td> <td></td> <td></td> <td>33H (H)</td> <td>43H (L)</td> </tr> </tbody> </table> <p style="text-align: center;">Sum check is performed in this range.</p>	STX	Output value 1	ETX	Sum check		02H	39H	03H	3	C				33H (H)	43H (L)														
	Output value 1																																
	39H																																
	STX	Output value 1	ETX	Sum check																													
	02H	39H	03H	3	C																												
			33H (H)	43H (L)																													
(2) When [Interrupt Data Byte] in "Communication Detail Settings" is set to "2 bytes"																																	
(format 1: in the case of GOT-A900 Series microcomputer connection (format 1)) <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Output value 1</th> <th>Output value 2</th> </tr> </thead> <tbody> <tr> <td>31H</td> <td>39H</td> </tr> </tbody> </table>	Output value 1	Output value 2	31H	39H	(format 2: in the case of GOT-A900 Series microcomputer connection (format 2)) <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>STX</th> <th>Output value 1</th> <th>Output value 2</th> <th>ETX</th> <th colspan="2">Sum check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>31H</td> <td>39H</td> <td>03H</td> <td>6</td> <td>D</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td>36H (H)</td> <td>44H (L)</td> </tr> </tbody> </table> <p style="text-align: center;">Sum check is performed in this range.</p>	STX	Output value 1	Output value 2	ETX	Sum check		02H	31H	39H	03H	6	D					36H (H)	44H (L)										
Output value 1	Output value 2																																
31H	39H																																
STX	Output value 1	Output value 2	ETX	Sum check																													
02H	31H	39H	03H	6	D																												
				36H (H)	44H (L)																												
(3) When [Interrupt Data Byte] in "Communication Detail Settings" is set to "4 bytes"																																	
(format 1: in the case of GOT-A900 Series microcomputer connection (format 1)) <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Output value1</th> <th>Output value2</th> <th>Output value3</th> <th>Output value4</th> </tr> </thead> <tbody> <tr> <td>AAH</td> <td>55H</td> <td>31H</td> <td>39H</td> </tr> </tbody> </table>	Output value1	Output value2	Output value3	Output value4	AAH	55H	31H	39H	(format 2: in the case of GOT-A900 Series microcomputer connection (format 2)) <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>STX</th> <th>Output value1</th> <th>Output value2</th> <th>Output value3</th> <th>Output value4</th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>AAH</td> <td>55H</td> <td>31H</td> <td>39H</td> <td>03H</td> <td>6</td> <td>C</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>36H (H)</td> <td>43H (L)</td> </tr> </tbody> </table> <p style="text-align: center;">Sum check is performed in this range.</p>	STX	Output value1	Output value2	Output value3	Output value4	ETX	Sum Check		02H	AAH	55H	31H	39H	03H	6	C							36H (H)	43H (L)
Output value1	Output value2	Output value3	Output value4																														
AAH	55H	31H	39H																														
STX	Output value1	Output value2	Output value3	Output value4	ETX	Sum Check																											
02H	AAH	55H	31H	39H	03H	6	C																										
						36H (H)	43H (L)																										



Interrupt output

- To set so that interrupts are not issued, set SM52 (interrupt code output inhibit flag) ON. (☞ Section 23.4.6 SM devices)
- To issue interrupts, set the data length to "8 bits" at "Communication Detail Settings". (☞ Section 23.6.3 Setting communication interface (Communication settings))
- When "7 bits" is set, the MSB (8th bit) is ignored. (Example: FF_H → 7F_H)

4 Error code list

In the case of format 2 (GOT-A900 series microcomputer connection (format 2)), the error contents (error code) are appended to the response message during faulty communication.

The following shows error code, error contents, cause, and measures.

Error code	Description	Measures
06 _H	Sum check error The sum check code created from received data differs from the sum check code in the receive data.	<ul style="list-style-type: none"> • Review the contents of the message to transmit.
10 _H	Command error An unsupported command was used.	<ul style="list-style-type: none"> • Review the contents of the message to transmit. • Check the command in the message. (☞ Section 23.5.2 List of commands)
11 _H	Message length error The message exceeds the upper limit of the data length that GOT can received.	<ul style="list-style-type: none"> • Review the contents of the message to transmit. • Check the data length of the message. (Data length of the data section, etc.)
12 _H	Communication message error EXT was not found within the upper limit of the receive buffer.	<ul style="list-style-type: none"> • Check the communication cable and communication module attachment. • Check the settings of "Communication Detail Settings". • Review the contents of the message to transmit.
15 _H	Clock data setting error The setting value of clock data has error.	<ul style="list-style-type: none"> • Review the contents of the message to transmit. • Check whether the non-existent data is set (e.g. setting "07" at the day of the week) as clock data.
7A _H	Address error The start address of the read/write device is out of range.	<ul style="list-style-type: none"> • Review the contents of the message to transmit. • Check the devices and the device range that can be used.
7B _H	Exceeded number of points error The read/write range exceeded the device range.	(☞ Section 23.4 Device Data Area)

5 Precautions

- (1) Batch reading/writing crossing over different devices
When using the batch read (RD) or batch write (WD) command, do not batch read/write crossing over the different devices.
This will cause an error response.

23.5.4 Formats 3 to 6 (A compatible 1C frame)



1 Basic format of data communication

This is the same message format as when communication is performed using the dedicated protocol (A compatible 1C frame) of the A Series computer link module.

For details of the basic format of data communication, refer to the following manual:

Q Corresponding MELSEC Communication Protocol Reference Manual

This section describes items whose settings differ from the dedicated protocol of the A Series computer link modules, and the dedicated commands for a GOT microcomputer connection.

Example: Request message for the batch read in word units (QR) command in format 4 (A compatible 1C frame (format 2))

ENQ	Block No.		Station No.		PLC No.		Command		Wait	Address						Number of points		Sum Check		
	0	0	0	0	0	0	Q	R		0	D	0	0	0	1	0	0	0	2	B
05H	30H	30H	30H	30H	30H	30H	51H	52H	30H	44H	30H	30H	30H	31H	30H	30H	30H	32H	42H	41H
	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)		(H)	-	-	-	-	-	(L)	(H)	(L)	(H)	(L)

← Character A section →

← Sum check is performed in this range. →

2 Details of data items in message format



Data code during communication

Communication is performed in ASCII code.

(1) Block No, PLC No.

The block No. and PLC No. are ignored in a microcomputer connection of the GOT. Specify "00".

"00" is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.





(2) Station No.


Station No. is used to identify the GOT with which the host communicates. (Setting range: 0 to 31)
The data notated in decimal is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.

The GOT processes the command whose station No. matches to "Host Address (0 to 31)" set at "Communication Detail Settings". (The message of command whose station No. does not match is ignored.)

For setting method of "Communication Detail Settings", refer to the following.

Section 23.6.3 Setting communication interface (Communication settings)

- (3) Command
Specifies the contents of the GOT to which the host accesses.
The command is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.
For details of the commands that can be used, refer to the following.
-  Section 23.5.2 List of commands
- (4) Address
Specifies the head No. of the device data to be read/written.
The data annotated in decimal is converted to a 5- or 7-digit ASCII code (Hex) and transmitted from the upper digit.
For details of the device range that can be accessed, refer to the following.
-  Section 23.4 Device Data Area
- (5) Number of points
Specifies the number of device data to be read/written. (Setting range: 1 to 40H)
The data notated in Hex is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.
- (6) Year, month, day, hour, minute, second and day of the week data
Specifies year, month, day, hour, minute, second, and day of the week to be read/set to the GOT clock data.
Data notated in decimal is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.
-  **3** (1) Read clock data (TR) command
-  **3** (2) Set clock data (TS) command
- (7) Error Code
This is the response message at faulty communication appended with error contents.
Data notated in Hex is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.
For details of error codes generated in formats 3 to 6 (A compatible 1C frame), refer to the following:

 **4** Error code list

Point

When connecting a microcomputer, etc. that uses the dedicated protocol of the A series computer link module with the GOT

When connecting a microcomputer, etc. that uses the dedicated protocol of the A series computer link module with the GOT, correct the commands to use and the device range according to the specifications of GOT.

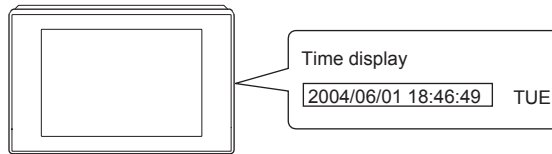
3 Message Format

The following shows the message format of the dedicated commands for the GOT microcomputer connection.

(1) Read clock data (TR) command

The following shows an example of reading the clock data of GOT.

(Assuming that the clock data of GOT has been set to "2004, June 1, 18:46:49, Tuesday".)




Item	Message format																																																																																												
Request message (host → GOT)	<p>Example: Format 3 (A compatible 1C frame (format 1))</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>ENQ</th> <th colspan="2">Station No.</th> <th colspan="2">PLC No.</th> <th colspan="2">Command</th> <th>Wait</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>05H</td> <td>0</td><td>0</td> <td>0</td><td>0</td> <td>T</td><td>R</td> <td>0</td> <td>9</td><td>6</td> </tr> <tr> <td></td> <td>30H</td><td>30H</td> <td>30H</td><td>30H</td> <td>54H</td><td>52H</td> <td>30H</td> <td>39H</td><td>36H</td> </tr> <tr> <td></td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td></td> <td>(H)</td><td>(L)</td> </tr> </tbody> </table> <p style="text-align: center;">← Sum check is performed in this range. →</p>	ENQ	Station No.		PLC No.		Command		Wait	Sum Check		05H	0	0	0	0	T	R	0	9	6		30H	30H	30H	30H	54H	52H	30H	39H	36H		(H)	(L)	(H)	(L)	(H)	(L)		(H)	(L)																																																				
ENQ	Station No.		PLC No.		Command		Wait	Sum Check																																																																																					
05H	0	0	0	0	T	R	0	9	6																																																																																				
	30H	30H	30H	30H	54H	52H	30H	39H	36H																																																																																				
	(H)	(L)	(H)	(L)	(H)	(L)		(H)	(L)																																																																																				
Response message during normal communication (GOT → host)	<p>Example: Format 3 (A compatible 1C frame (format 1))</p> <p style="text-align: center;">Character B section ←→</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>STX</th> <th colspan="2">Station No.</th> <th colspan="2">PLC No.</th> <th></th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>0</td><td>0</td> <td>0</td><td>0</td> <td>Following*1</td> <td>03H</td> <td>9</td><td>0</td> </tr> <tr> <td></td> <td>30H</td><td>30H</td> <td>30H</td><td>30H</td> <td></td> <td></td> <td>39H</td><td>30H</td> </tr> <tr> <td></td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td></td> <td></td> <td>(H)</td><td>(L)</td> </tr> </tbody> </table> <p style="text-align: center;">← Sum check is performed in this range. →</p> <p>*1</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th colspan="2">Year data</th> <th colspan="2">Month data</th> <th colspan="2">Day data</th> <th colspan="2">Hour data</th> <th colspan="2">Minute data</th> <th colspan="2">Second data</th> <th colspan="2">Day-of-week data</th> </tr> </thead> <tbody> <tr> <td>0</td><td>4</td> <td>0</td><td>6</td> <td>0</td><td>1</td> <td>1</td><td>8</td> <td>4</td><td>6</td> <td>4</td><td>9</td> <td>0</td><td>2</td> </tr> <tr> <td>30H</td><td>34H</td> <td>30H</td><td>36H</td> <td>30H</td><td>31H</td> <td>31H</td><td>38H</td> <td>34H</td><td>36H</td> <td>34H</td><td>39H</td> <td>30H</td><td>32H</td> </tr> <tr> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> </tr> </tbody> </table>	STX	Station No.		PLC No.			ETX	Sum Check		02H	0	0	0	0	Following*1	03H	9	0		30H	30H	30H	30H			39H	30H		(H)	(L)	(H)	(L)			(H)	(L)	Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data		0	4	0	6	0	1	1	8	4	6	4	9	0	2	30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)
STX	Station No.		PLC No.			ETX	Sum Check																																																																																						
02H	0	0	0	0	Following*1	03H	9	0																																																																																					
	30H	30H	30H	30H			39H	30H																																																																																					
	(H)	(L)	(H)	(L)			(H)	(L)																																																																																					
Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data																																																																																	
0	4	0	6	0	1	1	8	4	6	4	9	0	2																																																																																
30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H																																																																																
(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)																																																																																
Response message during faulty communication (GOT → host)	<p>Example: Format 3 (A compatible 1C frame (format 1))</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>NAK</th> <th colspan="2">Station No.</th> <th colspan="2">PLC No.</th> <th colspan="2">Error code</th> </tr> </thead> <tbody> <tr> <td>15H</td> <td>0</td><td>0</td> <td>0</td><td>0</td> <td>0</td><td>5</td> </tr> <tr> <td></td> <td>30H</td><td>30H</td> <td>30H</td><td>30H</td> <td>30H</td><td>35H</td> </tr> <tr> <td></td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> </tr> </tbody> </table> <p style="text-align: center;">The above is the case where an overrun error (05H) has occurred.</p>	NAK	Station No.		PLC No.		Error code		15H	0	0	0	0	0	5		30H	30H	30H	30H	30H	35H		(H)	(L)	(H)	(L)	(H)	(L)																																																																
NAK	Station No.		PLC No.		Error code																																																																																								
15H	0	0	0	0	0	5																																																																																							
	30H	30H	30H	30H	30H	35H																																																																																							
	(H)	(L)	(H)	(L)	(H)	(L)																																																																																							

(2) Set clock data (TS) command

The following shows an example of setting the clock data of GOT.

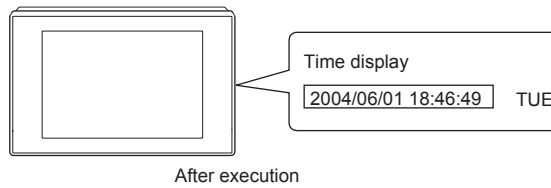(Assuming that the clock data is to be set to "2004, June 1, 18:46:49 Tuesday".)



Item	Message format																																																																																																								
Request message (host → GOT)	<p>Example: Format 3 (A compatible 1C frame (format 1))</p> <table border="1"> <thead> <tr> <th>ENQ</th> <th colspan="2">Station No.</th> <th colspan="2">PLC No.</th> <th colspan="2">Command</th> <th>Wait</th> <th colspan="2">Character C section</th> <th colspan="2">Sum Check</th> </tr> <tr> <td>05H</td> <td>0</td><td>0</td> <td>0</td><td>0</td> <td>T</td><td>S</td> <td>0</td> <td colspan="2">Following*1</td> <td>6</td><td>4</td> </tr> <tr> <td></td> <td>30H</td><td>30H</td> <td>30H</td><td>30H</td> <td>54H</td><td>53H</td> <td>30H</td> <td></td><td></td> <td>36H</td><td>34H</td> </tr> <tr> <td></td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td></td> <td></td><td></td> <td>(H)</td><td>(L)</td> </tr> </thead> </table> <p>Sum check is performed in this range.</p> <p>*1</p> <table border="1"> <thead> <tr> <th colspan="2">Year data</th> <th colspan="2">Month data</th> <th colspan="2">Day data</th> <th colspan="2">Hour data</th> <th colspan="2">Minute data</th> <th colspan="2">Second data</th> <th colspan="2">Day-of-week data</th> </tr> </thead> <tbody> <tr> <td>0</td><td>4</td> <td>0</td><td>6</td> <td>0</td><td>1</td> <td>1</td><td>8</td> <td>4</td><td>6</td> <td>4</td><td>9</td> <td>0</td><td>2</td> </tr> <tr> <td>30H</td><td>34H</td> <td>30H</td><td>36H</td> <td>30H</td><td>31H</td> <td>31H</td><td>38H</td> <td>34H</td><td>36H</td> <td>34H</td><td>39H</td> <td>30H</td><td>32H</td> </tr> <tr> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> </tr> </tbody> </table>	ENQ	Station No.		PLC No.		Command		Wait	Character C section		Sum Check		05H	0	0	0	0	T	S	0	Following*1		6	4		30H	30H	30H	30H	54H	53H	30H			36H	34H		(H)	(L)	(H)	(L)	(H)	(L)				(H)	(L)	Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data		0	4	0	6	0	1	1	8	4	6	4	9	0	2	30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)
ENQ	Station No.		PLC No.		Command		Wait	Character C section		Sum Check																																																																																															
05H	0	0	0	0	T	S	0	Following*1		6	4																																																																																														
	30H	30H	30H	30H	54H	53H	30H			36H	34H																																																																																														
	(H)	(L)	(H)	(L)	(H)	(L)				(H)	(L)																																																																																														
Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data																																																																																													
0	4	0	6	0	1	1	8	4	6	4	9	0	2																																																																																												
30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H																																																																																												
(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)																																																																																												
Response message during normal communication (GOT → host)	<p>Example: Format 3 (A compatible 1C frame (format 1))</p> <table border="1"> <thead> <tr> <th>ACK</th> <th colspan="2">Station No.</th> <th colspan="2">PLC No.</th> </tr> </thead> <tbody> <tr> <td>06H</td> <td>0</td><td>0</td> <td>0</td><td>0</td> </tr> <tr> <td></td> <td>30H</td><td>30H</td> <td>30H</td><td>30H</td> </tr> <tr> <td></td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> </tr> </tbody> </table>	ACK	Station No.		PLC No.		06H	0	0	0	0		30H	30H	30H	30H		(H)	(L)	(H)	(L)																																																																																				
ACK	Station No.		PLC No.																																																																																																						
06H	0	0	0	0																																																																																																					
	30H	30H	30H	30H																																																																																																					
	(H)	(L)	(H)	(L)																																																																																																					
Response message during faulty communication (GOT → host)	<p>Example: Format 3 (A compatible 1C frame (format 1))</p> <table border="1"> <thead> <tr> <th>NAK</th> <th colspan="2">Station No.</th> <th colspan="2">PLC No.</th> <th colspan="2">Error code</th> </tr> </thead> <tbody> <tr> <td>15H</td> <td>0</td><td>0</td> <td>0</td><td>0</td> <td>0</td><td>5</td> </tr> <tr> <td></td> <td>30H</td><td>30H</td> <td>30H</td><td>30H</td> <td>30H</td><td>35H</td> </tr> <tr> <td></td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> </tr> </tbody> </table> <p>The above is the case where an overrun error (05H) has occurred.</p>	NAK	Station No.		PLC No.		Error code		15H	0	0	0	0	0	5		30H	30H	30H	30H	30H	35H		(H)	(L)	(H)	(L)	(H)	(L)																																																																												
NAK	Station No.		PLC No.		Error code																																																																																																				
15H	0	0	0	0	0	5																																																																																																			
	30H	30H	30H	30H	30H	35H																																																																																																			
	(H)	(L)	(H)	(L)	(H)	(L)																																																																																																			

Point



When a wrong day of the week has been set by the clock data setting command

If a wrong day of the week is set by the clock data setting commands, the clock data will differ from the time displayed on the utility.

Example: When June 1, 2004 (Thursday) is set by the clock data setting command (the actual day of week is Tuesday), Tuesday (TUE) will be displayed on the utility time display.

4 Error code list

The following shows error code, error contents, cause, and measures.

Error code	Description	Measures
01 _H	Parity error The parity bit does not match.	<ul style="list-style-type: none"> • Check the communication cable and communication module attachment. • Check the settings of "Communication Detail Settings". • Match the GOT and host transmission settings.
02 _H	Sum check error The sum check code created from received data differs from the sum check code in the receive data.	<ul style="list-style-type: none"> • Review the contents of the message to transmit.
03 _H	Protocol error Received a message that does not follow the control procedure of the format set at "Communication Detail Settings".	<ul style="list-style-type: none"> • Check the settings of "Communication Detail Settings". • Review the contents of the message to transmit.
05 _H	Overrun error The next data was transmitted from the host before GOT completes the processing of the data received.	<ul style="list-style-type: none"> • Check the settings of "Communication Detail Settings". • Decrease the transmission speed.
06 _H	Character section error The character section specification error. <ul style="list-style-type: none"> • The method of specifying the character section is wrong. • The specified command has error. • The number of points of the processing requests exceeds the allowable range. • A non-existent device is specified. • The setting value of the clock data has error. 	<ul style="list-style-type: none"> • Review the contents of the message to transmit. • Check the commands in the message. ( Section 23.5.2 List of commands) • Check the devices that can be used and the device ranges. ( Section 23.4 Device Data Area) • Check whether the non-existent data is set (e.g. setting "07" at the day of the week) as clock data.
07 _H	Character error A character other than "A to Z", "0 to 9", space, and control codes has been received.	<ul style="list-style-type: none"> • Review the contents of the message to transmit.

23.5.5 Formats 7 to 10 (QnA compatible 3C/4C frame)



1 Basic format of data communication

This is the same message format as when communication is performed using the MC protocol (QnA compatible 3C/4C frame) of the Q/QnA Series serial communication module.

For details of the basic format of data communication, refer to the following manual:

Q Corresponding MELSEC Communication Protocol Reference Manual

This section describes items whose settings differ from the MC protocol of the Q/QnA Series serial communication module, and the dedicated commands for a GOT microcomputer connection.

Example: Request message for the batch read in word units (0401) command in format 8 (QnA compatible 4C frame (format 2))

ENQ	Block No.		Frame ID No.		Station No.		Network No.		PLC No.		Request destination module I/O No.				Request destination module station No.		Host Address No.		Following *1		Sum check	
05H	0	0	F	8	0	0	0	0	0	0	0	0	0	0	0	0	0	0			B	A
	30H	30H	46H	38H	30H	30H	30H	30H	30H	30H	30H	30H	30H	30H	30H	30H	30H	30H			42H	41H
	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	-	-	(L)	(H)	(L)	(H)	(L)			(H)	(L)

Sum check is performed in this range.

Character A section

Command		Sub-command				Device code		Start Device						Number of device points						
0	4	0	0	1	0	0	0	0	D	*	0	0	0	1	0	0	0	0	0	2
30H	34H	30H	31H		30H	30H	30H	30H	44H	2AH	30H	30H	30H	31H	30H	30H	30H	30H	30H	32H
(H)	-	-	(L)		(H)	-	-	(L)	(H)	(L)	(H)	-	-	-	-	(L)	(H)	-	-	(L)



QnA compatible 4C frame (format 5)

GOT cannot use the QnA compatible 4C frame (format 5).


2 Data item contents of message format





Data code during communication


Communication is performed in ASCII code.

- (1) Block No., network No., PLC No., request destination module I/O No. and station No.
Ignored in a microcomputer connection of the GOT.
Specify "00". (The request destination module I/O No. is "0000".)
"00" is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.
(The request destination module I/O No. is 4-digit.)

- (2) Station No.
Station No. is used to identify the GOT with which the host communicates. (Setting range: 0 to 1FH)
Data notated in Hex is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.
The GOT processes the command whose station No. matches to "Host Address (0 to 31)" set at "Communication Detail Settings". (The message of command whose station No. does not match is ignored.)
For setting method of "Communication Detail Settings", refer to the following.
 Section 23.6.3 Setting communication interface (Communication settings)

- (3) Command, sub-command
Specifies the contents to access from the host to GOT.
The command and sub-command are converted to a 4-digit ASCII code (Hex) and transmitted from the upper digit.
For details of the commands that can be used, refer to the following.
 Section 23.5.2 List of commands


- (4) Device code
Specifies the code by which the device data to be read/written is recognized.
The device code is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.
For details of the device range that can be accessed, refer to the following.
 Section 23.4 Device Data Area


- (5) Head device
Specifies the head No. of the device data to be read/written.
Data notated in decimal is converted to a 6-digit ASCII code (Hex) and transmitted from the upper digit.
For details of the device range that can be accessed, refer to the following.
 Section 23.4 Device Data Area

- (6) Number of devices
Specifies the number of device data to be read/written. (Setting range: 1 to 40H)
Data notated in Hex is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.
When specifying multiple devices as follows, limit the total number of devices to within 64 points.
 - (a) When using random read/write command
When setting multiple bit accesses, word accesses or double word accesses, limit the total number of access points to within 64 points


 - (b) When using multiple block batch read/write commands
When setting multiple blocks, limit the total number of points of all blocks to within 64 points.

- (7) Year, month, day, hour, minute, second and day of the week data
Specifies year, month, day, hour, minute, second, and day of the week to be read/set to the GOT clock data.
Data notated in decimal is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.

 3 (1) Read clock data (1901) command

 3 (2) Set clock data (0901) command

- (8) Error Code
This is the response message at faulty communication appended with error contents.
Data notated in Hex is converted to a 4-digit ASCII code (Hex) and transmitted from the upper digit.
For details of error codes that are generated in formats 7 to 10 (QnA compatible 3C/4C frame), refer to the following:

 4 Error code list

Point

When connecting a microcomputer, etc. that uses the MC protocol of the Q/QnA series serial communication module with the GOT

When connecting a microcomputer, etc. that uses the MC protocol of the Q/QnA series serial communication module with the GOT, correct the commands to be used and the device ranges to match the GOT specifications.

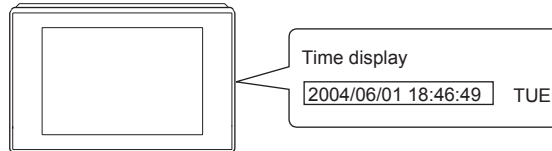
3 Message Format

The following shows the message format of the dedicated commands for a microcomputer connection of GOT.

(1) Read clock data (1901) command

The following shows an example of reading the clock data of GOT.

(Assuming that the clock data of GOT has been set to "2004, June 1, 18:46:49, Tuesday".)



Item	Message format																																				
Request message (host → GOT)	<p>Example: Format 7 (QnA compatible 4C frame (format 1))</p> <table border="1"> <thead> <tr> <th>ENQ</th> <th>Frame ID No.</th> <th>Station No.</th> <th>Network No.</th> <th>PLC No.</th> <th>Request destination module I/O No.</th> <th>Request destination module station No.</th> <th>Following *1</th> <th>Sum check</th> </tr> </thead> <tbody> <tr> <td>05H</td> <td>F 8 46H 38H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 0 0 30H 30H 30H 30H (H) - - (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>Following *1</td> <td>A 9 41H 39H (H) (L)</td> </tr> </tbody> </table> <p>← Sum check is performed in this range. →</p> <p>*1 Character A section</p> <table border="1"> <thead> <tr> <th>Host Address No.</th> <th>Command</th> <th>Sub-command</th> </tr> </thead> <tbody> <tr> <td>0 0 30H 30H (H) (L)</td> <td>1 9 0 1 31H 39H 30H 31H (H) - - (L)</td> <td>0 0 0 0 30H 30H 30H 30H (H) - - (L)</td> </tr> </tbody> </table>	ENQ	Frame ID No.	Station No.	Network No.	PLC No.	Request destination module I/O No.	Request destination module station No.	Following *1	Sum check	05H	F 8 46H 38H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 0 0 30H 30H 30H 30H (H) - - (L)	0 0 30H 30H (H) (L)	Following *1	A 9 41H 39H (H) (L)	Host Address No.	Command	Sub-command	0 0 30H 30H (H) (L)	1 9 0 1 31H 39H 30H 31H (H) - - (L)	0 0 0 0 30H 30H 30H 30H (H) - - (L)												
	ENQ	Frame ID No.	Station No.	Network No.	PLC No.	Request destination module I/O No.	Request destination module station No.	Following *1	Sum check																												
05H	F 8 46H 38H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 0 0 30H 30H 30H 30H (H) - - (L)	0 0 30H 30H (H) (L)	Following *1	A 9 41H 39H (H) (L)																													
Host Address No.	Command	Sub-command																																			
0 0 30H 30H (H) (L)	1 9 0 1 31H 39H 30H 31H (H) - - (L)	0 0 0 0 30H 30H 30H 30H (H) - - (L)																																			
Response message during normal communication (GOT → host)	<p>Example: Format 7 (QnA compatible 4C frame (format 1))</p> <table border="1"> <thead> <tr> <th>STX</th> <th>Frame ID No.</th> <th>Station No.</th> <th>Network No.</th> <th>PLC No.</th> <th>Request destination module I/O No.</th> <th>Request destination module station No.</th> <th>Following *1</th> <th>ETX</th> <th>Sum check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>F 8 46H 38H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 0 0 30H 30H 30H 30H (H) - - (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>Following *1</td> <td>03H</td> <td>E E 43H 43H (H) (L)</td> </tr> </tbody> </table> <p>← Sum check is performed in this range. →</p> <p>*1 Character B section</p> <table border="1"> <thead> <tr> <th>Host Address No.</th> <th>Year data</th> <th>Month data</th> <th>Day data</th> <th>Hour data</th> <th>Minute data</th> <th>Second data</th> <th>Day-of-week data</th> </tr> </thead> <tbody> <tr> <td>0 0 30H 30H (H) (L)</td> <td>0 4 30H 34H (H) (L)</td> <td>0 6 30H 36H (H) (L)</td> <td>0 1 30H 31H (H) (L)</td> <td>1 8 31H 38H (H) (L)</td> <td>4 6 34H 36H (H) (L)</td> <td>4 9 34H 39H (H) (L)</td> <td>0 2 30H 32H (H) (L)</td> </tr> </tbody> </table>	STX	Frame ID No.	Station No.	Network No.	PLC No.	Request destination module I/O No.	Request destination module station No.	Following *1	ETX	Sum check	02H	F 8 46H 38H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 0 0 30H 30H 30H 30H (H) - - (L)	0 0 30H 30H (H) (L)	Following *1	03H	E E 43H 43H (H) (L)	Host Address No.	Year data	Month data	Day data	Hour data	Minute data	Second data	Day-of-week data	0 0 30H 30H (H) (L)	0 4 30H 34H (H) (L)	0 6 30H 36H (H) (L)	0 1 30H 31H (H) (L)	1 8 31H 38H (H) (L)	4 6 34H 36H (H) (L)	4 9 34H 39H (H) (L)	0 2 30H 32H (H) (L)
STX	Frame ID No.	Station No.	Network No.	PLC No.	Request destination module I/O No.	Request destination module station No.	Following *1	ETX	Sum check																												
02H	F 8 46H 38H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 0 0 30H 30H 30H 30H (H) - - (L)	0 0 30H 30H (H) (L)	Following *1	03H	E E 43H 43H (H) (L)																												
Host Address No.	Year data	Month data	Day data	Hour data	Minute data	Second data	Day-of-week data																														
0 0 30H 30H (H) (L)	0 4 30H 34H (H) (L)	0 6 30H 36H (H) (L)	0 1 30H 31H (H) (L)	1 8 31H 38H (H) (L)	4 6 34H 36H (H) (L)	4 9 34H 39H (H) (L)	0 2 30H 32H (H) (L)																														

(continued to next page)

Item	Message format
------	----------------

Example: Format 7 (QnA compatible 4C frame (format 1))

Response message during faulty communication (GOT → host)

NAK	Frame ID No.		Station No.		Network No.		PLC No.		Request destination module I/O No.				Request destination module station No.		Host Address No.		Following *1
15H	F	8	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
	46H	38H	30H	30H	30H	30H	30H	30H	30H	30H	30H	30H	30H	30H	30H	30H	
	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	-	-	(L)	(H)	(L)	(H)	(L)	

*1

Error code			
7	F	6	9
37H	46H	36H	39H
(H)	-	-	(L)


The above is the case where a parity error (7F69H) has occurred.

17	CONNECTION TO FUJIF A PLC
18	CONNECTION TO MATSUSHITA PLC
19	CONNECTION TO YASKAWA PLC
20	CONNECTION TO YOKOGAWA PLC
21	CONNECTION TO ALLEN-BRADLEY PLC
22	CONNECTION TO SIEMENS PLC
23	MICROCOMPUTER CONNECTION
24	CONNECTION TO OMRON TEMPERATURE CONTROLLER

(2) Set clock data (0901) command

The following shows an example of setting the clock data of GOT.

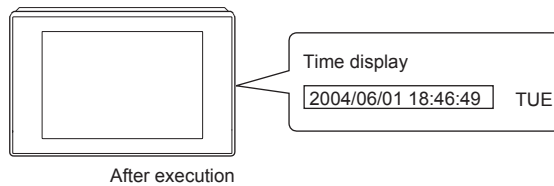(Assuming that the clock data is to be set to "2004, June 1, 18:46:49 Tuesday".)



Item	Message format																																				
Request message (host → GOT)	<p>Example: Format 7 (QnA compatible 4C frame (format 1))</p> <table border="1"> <thead> <tr> <th>ENQ</th> <th>Frame ID No.</th> <th>Station No.</th> <th>Network No.</th> <th>PLC No.</th> <th>Request destination module I/O No.</th> <th>Request destination module station No.</th> <th>Host Address No.</th> <th>Sum check</th> </tr> </thead> <tbody> <tr> <td>05H</td> <td>F 8 46H 38H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 0 0 30H 30H 30H 30H (H) - - (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>7 5 37H 35H (H) (L)</td> </tr> </tbody> </table> <p style="text-align: center;">← Sum check is performed in this range. →</p> <p style="text-align: center;">*1 ← Character C section →</p> <table border="1"> <thead> <tr> <th>Command</th> <th>Sub-command</th> </tr> </thead> <tbody> <tr> <td>0 9 0 1 30H 39H 30H 31H (H) - - (L)</td> <td>0 0 0 0 30H 30H 30H 30H (H) - - (L)</td> </tr> </tbody> </table> <p style="text-align: right;">→ 1)</p> <p style="text-align: center;">← Character C section →</p> <table border="1"> <thead> <tr> <th>Year data</th> <th>Month data</th> <th>Day data</th> <th>Hour data</th> <th>Minute data</th> <th>Second data</th> <th>Day-of-week data</th> </tr> </thead> <tbody> <tr> <td>0 4 30H 34H (H) (L)</td> <td>0 6 30H 36H (H) (L)</td> <td>0 1 30H 31H (H) (L)</td> <td>1 8 31H 38H (H) (L)</td> <td>4 6 34H 36H (H) (L)</td> <td>4 9 34H 39H (H) (L)</td> <td>0 2 30H 32H (H) (L)</td> </tr> </tbody> </table>	ENQ	Frame ID No.	Station No.	Network No.	PLC No.	Request destination module I/O No.	Request destination module station No.	Host Address No.	Sum check	05H	F 8 46H 38H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 0 0 30H 30H 30H 30H (H) - - (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	7 5 37H 35H (H) (L)	Command	Sub-command	0 9 0 1 30H 39H 30H 31H (H) - - (L)	0 0 0 0 30H 30H 30H 30H (H) - - (L)	Year data	Month data	Day data	Hour data	Minute data	Second data	Day-of-week data	0 4 30H 34H (H) (L)	0 6 30H 36H (H) (L)	0 1 30H 31H (H) (L)	1 8 31H 38H (H) (L)	4 6 34H 36H (H) (L)	4 9 34H 39H (H) (L)	0 2 30H 32H (H) (L)
	ENQ	Frame ID No.	Station No.	Network No.	PLC No.	Request destination module I/O No.	Request destination module station No.	Host Address No.	Sum check																												
	05H	F 8 46H 38H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 0 0 30H 30H 30H 30H (H) - - (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	7 5 37H 35H (H) (L)																												
Command	Sub-command																																				
0 9 0 1 30H 39H 30H 31H (H) - - (L)	0 0 0 0 30H 30H 30H 30H (H) - - (L)																																				
Year data	Month data	Day data	Hour data	Minute data	Second data	Day-of-week data																															
0 4 30H 34H (H) (L)	0 6 30H 36H (H) (L)	0 1 30H 31H (H) (L)	1 8 31H 38H (H) (L)	4 6 34H 36H (H) (L)	4 9 34H 39H (H) (L)	0 2 30H 32H (H) (L)																															
Response message during normal communication (GOT → host)	<p>Example: Format 7 (QnA compatible 4C frame (format 1))</p> <table border="1"> <thead> <tr> <th>ACK</th> <th>Frame ID No.</th> <th>Station No.</th> <th>Network No.</th> <th>PLC No.</th> <th>Request destination module I/O No.</th> <th>Request destination module station No.</th> <th>Host Address No.</th> </tr> </thead> <tbody> <tr> <td>06H</td> <td>F 8 46H 38H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 0 0 30H 30H 30H 30H (H) - - (L)</td> <td>0 0 30H 30H (H) (L)</td> <td>0 0 30H 30H (H) (L)</td> </tr> </tbody> </table>	ACK	Frame ID No.	Station No.	Network No.	PLC No.	Request destination module I/O No.	Request destination module station No.	Host Address No.	06H	F 8 46H 38H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 0 0 30H 30H 30H 30H (H) - - (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)																				
ACK	Frame ID No.	Station No.	Network No.	PLC No.	Request destination module I/O No.	Request destination module station No.	Host Address No.																														
06H	F 8 46H 38H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)	0 0 0 0 30H 30H 30H 30H (H) - - (L)	0 0 30H 30H (H) (L)	0 0 30H 30H (H) (L)																														

(continued to next page)

Item	Message format																									
Response message during faulty communication (GOT → host)	Example: Format 7 (QnA compatible 4C frame (format 1))																									
	NAK	Frame ID No.		Station No.		Network No.		PLC No.		Request destination module I/O No.				Request destination module station No.		Host Address No.		Following*1								
	15H	F	8	0	0	0	0	0	0	0	0	0	0	0	0	0	0									
	46H (H)	38H (L)	30H (H)	30H (L)	30H (H)	30H (L)	30H (H)	30H (L)	30H (H)	30H (L)	30H (H)	30H (L)	30H (H)	30H (L)	30H (H)	30H (L)										
	*1																									
	<table border="1"> <thead> <tr> <th colspan="4">Error code</th> </tr> </thead> <tbody> <tr> <td>7</td> <td>F</td> <td>6</td> <td>9</td> </tr> <tr> <td>37H (H)</td> <td>46H (L)</td> <td>36H (L)</td> <td>39H (L)</td> </tr> </tbody> </table>														Error code				7	F	6	9	37H (H)	46H (L)	36H (L)	39H (L)
Error code																										
7	F	6	9																							
37H (H)	46H (L)	36H (L)	39H (L)																							
	The above is the case where a parity error (7F69H) has occurred.																									

Point





When a wrong day of the week has been set by the clock data setting command

If a wrong day of the week is set by the clock data setting commands, the clock data will differ from the time displayed on the utility.

Example: When June 1, 2004 (Thursday) is set by the clock data setting command (the actual day of week is Tuesday), Tuesday (TUE) will be displayed on the utility time display.

4 Error code list

The following shows error code, error contents, cause, and measures.

Error code	Description	Measures
7E40H	Command error An unsupported command or sub-command was used.	<ul style="list-style-type: none"> Review the contents of the message to transmit. Check the commands in the message.  Section 23.5.2 List of commands)
7E41H	Data length error Specified points exceeding the number of points that can be communicated during random read/write.	<ul style="list-style-type: none"> Review the contents of the message to transmit. Check the devices that can be used and the device ranges.  Section 23.4 Device Data Area)
7E42H	Number of data error The number of requests exceeds the command range.	
7E43H	Device error A non-existent device has been specified.	<ul style="list-style-type: none"> Review the contents of the message to transmit. Check the devices that can be used and the device ranges.  Section 23.4 Device Data Area)
7E46H	Clock data setting error The setting value of clock data has error.	<ul style="list-style-type: none"> Review the contents of the message to transmit. Check whether the non-existent data is set (e.g. setting "07" at the day of the week) as clock data.
7E4FH	Exceeded number of points error The read/write range exceeded the device range.	<ul style="list-style-type: none"> Review the contents of the message to transmit. Check the devices that can be used and the device ranges.  Section 23.4 Device Data Area)
7F20H	Character error A character other than "A to Z", "0 to 9", space, and control codes has been received.	<ul style="list-style-type: none"> Review the contents of the message to transmit.
7F23H	Communication message error EXT/CR+LF was not found within the upper limit of the receive buffer.	<ul style="list-style-type: none"> Check the communication cable and communication module attachment. Check the settings of "Communication Detail Settings". Review the contents of the message to transmit.
7F24H	Sum check error The sum check code created from received data differs from the sum check code in the receive data.	<ul style="list-style-type: none"> Review the contents of the message to transmit
7F67H	Overrun error The next data was transmitted from the host before GOT completes the processing of the data received.	<ul style="list-style-type: none"> Check the settings of "Communication Detail Settings". Decrease the transmission speed.
7F68H	Framing error The data bit and stop bit do not match.	<ul style="list-style-type: none"> Check the communication cable and communication module attachment. Check the settings of "Communication Detail Settings". Match the GOT and host transmission settings.
7F69H	Parity error The parity bit does not match.	
7F6AH	Buffer full error The receive buffer overflowed.	<ul style="list-style-type: none"> Check the communication cable and communication module attachment. Check the settings of "Communication Detail Settings". Review the contents of the message to transmit.



1 Basic format of data communication

This is the same format as the protocol of the Digital Electronics Corporation's memory link method. For details of the basic format of data communication, refer to the following manual:

The connection manual of the device manufactured by Digital Electronics Corporation

This section describes items whose settings differ from the protocols of the Digital Electronics Corporation's memory link method and dedicated commands for a microcomputer connection of GOT.

Example: Request message for the batch read in word units (R) command in format 13 (Digital Electronics Corporation's memory link method (extended mode, ASCII code 1:n))

ENQ	Station No.		ESC	Com- mand	Address				Number of points				Sum Check		CR	LF
05H	0	0	1BH	R	0	0	6	4	0	0	0	2	5	E	0DH	0AH
	30H (H)	30H (L)		52H	30H (H)	30H -	36H -	34H (L)	30H (H)	30H -	30H -	32H (L)	35H (H)	45H (L)		

Sum check is performed in this range.

2 Details of data items in message format



Data code during communication

Communication is performed in ASCII code.

(1) Command

Specifies the items to access from the host to GOT. The command is converted to a 1-digit ASCII code (Hex) and transmitted. For details of the commands that can be used, refer to the following.

Section 23.5.2 List of commands


(2) Station No.

Station No. is used to identify the GOT with which the host communicates. (Setting range: 0 to 1FH) Data notated in Hex is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit. The GOT processes only commands whose station No. matches the "Host Address (0 to 31)" set at "Communication Detail Settings". (The messages of commands whose station No. do not match are ignored.)

For details of setting "Communication Detail Settings", refer to the following.

Section 23.6.3 Setting communication interface (Communication settings)

- (3) Address
Specifies the head No. of the device data to be read/written.
Data notated in Hex is converted to a 4-digit ASCII code (Hex) and transmitted from the upper digit.
For details of the device range that can be accessed, refer to the following.



 Section 23.4 Device Data Area

- (4) Number of points
Specifies the number of device data to be read/written. (Setting range: 1 to 40H)
Data notated in Hex is converted to a 4-digit ASCII code (Hex) and transmitted from the upper digit.
- (5) Year, month, day, hour, minute, second and day of the week data
Specifies year, month, day, hour, minute, second, and day of the week to be read/set to the GOT clock data.
Data notated in decimal is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.

  (1) Read clock data (N) command

  (2) Set clock data (M) command

- (6) Error Code
This is the response message at faulty communication appended with error contents.
Data notated in Hex is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.
For details of error codes generated in formats 12 and 13 (Digital Electronics Corporation's memory link method (extended mode)), refer to the following:

  Error code list

Point

When connecting a microcomputer, etc. that uses the protocol of the Digital Electronics Corporation's memory link method with the GOT

When connecting a microcomputer, etc. that uses the protocol of the Digital Electronics Corporation's memory link method with the GOT, correct the commands to be used and the device ranges to match the specifications of the GOT.

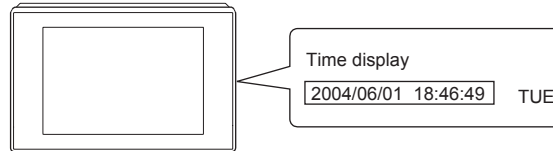
3 Message Format

The following shows the message format of the dedicated command of the GOT for a microcomputer connection.

(1) Read clock data (N) command

The following shows an example of reading the clock data of GOT.

(Assuming that the clock data of GOT has been set to "2004, June 1, 18:46:49, Tuesday".)




Item	Message format																																																		
Request message (host → GOT)	<p>Example: Format 13 (Digital Electronics Corporation's memory link method (extended mode, ASCII code 1:n))</p> <table border="1"> <thead> <tr> <th>ENQ</th> <th>Station No.</th> <th>ESC</th> <th>Com- mand</th> <th>Sum Check</th> <th>CR</th> <th>LF</th> </tr> </thead> <tbody> <tr> <td>05H</td> <td>0 0 30H 30H (H) (L)</td> <td>1BH</td> <td>N 4EH</td> <td>C E 43H 45H (H) (L)</td> <td>0DH</td> <td>0AH</td> </tr> </tbody> </table> <p style="text-align: center;">← This range Sum check →</p>	ENQ	Station No.	ESC	Com- mand	Sum Check	CR	LF	05H	0 0 30H 30H (H) (L)	1BH	N 4EH	C E 43H 45H (H) (L)	0DH	0AH																																				
ENQ	Station No.	ESC	Com- mand	Sum Check	CR	LF																																													
05H	0 0 30H 30H (H) (L)	1BH	N 4EH	C E 43H 45H (H) (L)	0DH	0AH																																													
Response message during normal communication (GOT → host)	<p>Example: Format 13 (Digital Electronics Corporation's memory link method (extended mode, ASCII code 1:n))</p> <table border="1"> <thead> <tr> <th>STX</th> <th>Station No.</th> <th>ESC</th> <th>Com- mand</th> <th></th> <th>ETX</th> <th>Sum Check</th> <th>CR</th> <th>LF</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>0 0 30H 30H (H) (L)</td> <td>1BH</td> <td>A 41H</td> <td>Following*1</td> <td>03H</td> <td>8 E 38H 45H (H) (L)</td> <td>0DH</td> <td>0AH</td> </tr> </tbody> </table> <p style="text-align: center;">← This range Sum check →</p> <p>*1</p> <table border="1"> <thead> <tr> <th></th> <th>Year data</th> <th>Month data</th> <th>Day data</th> <th>Hour data</th> <th>Minute data</th> <th>Second data</th> <th>Day-of-week data</th> </tr> </thead> <tbody> <tr> <td></td> <td>0 4</td> <td>0 6</td> <td>0 1</td> <td>1 8</td> <td>4 6</td> <td>4 9</td> <td>0 2</td> </tr> <tr> <td></td> <td>30H 34H</td> <td>30H 36H</td> <td>30H 31H</td> <td>31H 38H</td> <td>34H 36H</td> <td>34H 39H</td> <td>30H 32H</td> </tr> <tr> <td></td> <td>(H) (L)</td> <td>(H) (L)</td> <td>(H) (L)</td> <td>(H) (L)</td> <td>(H) (L)</td> <td>(H) (L)</td> <td>(H) (L)</td> </tr> </tbody> </table>	STX	Station No.	ESC	Com- mand		ETX	Sum Check	CR	LF	02H	0 0 30H 30H (H) (L)	1BH	A 41H	Following*1	03H	8 E 38H 45H (H) (L)	0DH	0AH		Year data	Month data	Day data	Hour data	Minute data	Second data	Day-of-week data		0 4	0 6	0 1	1 8	4 6	4 9	0 2		30H 34H	30H 36H	30H 31H	31H 38H	34H 36H	34H 39H	30H 32H		(H) (L)	(H) (L)	(H) (L)	(H) (L)	(H) (L)	(H) (L)	(H) (L)
STX	Station No.	ESC	Com- mand		ETX	Sum Check	CR	LF																																											
02H	0 0 30H 30H (H) (L)	1BH	A 41H	Following*1	03H	8 E 38H 45H (H) (L)	0DH	0AH																																											
	Year data	Month data	Day data	Hour data	Minute data	Second data	Day-of-week data																																												
	0 4	0 6	0 1	1 8	4 6	4 9	0 2																																												
	30H 34H	30H 36H	30H 31H	31H 38H	34H 36H	34H 39H	30H 32H																																												
	(H) (L)	(H) (L)	(H) (L)	(H) (L)	(H) (L)	(H) (L)	(H) (L)																																												
Response message during faulty communication (GOT → host)	<p>Example: Format 13 (Digital Electronics Corporation's memory link method (extended mode, ASCII code 1:n))</p> <table border="1"> <thead> <tr> <th>NAK</th> <th>Station No.</th> <th>Error code</th> <th>CR</th> <th>LF</th> </tr> </thead> <tbody> <tr> <td>15H</td> <td>0 0 30H 30H (H) (L)</td> <td>0 6 30H 36H (H) (L)</td> <td>0DH</td> <td>0AH</td> </tr> </tbody> </table> <p style="text-align: center;">The above is a case where the sum check error (06H) has occurred.</p>	NAK	Station No.	Error code	CR	LF	15H	0 0 30H 30H (H) (L)	0 6 30H 36H (H) (L)	0DH	0AH																																								
NAK	Station No.	Error code	CR	LF																																															
15H	0 0 30H 30H (H) (L)	0 6 30H 36H (H) (L)	0DH	0AH																																															

(2) Set clock data (M) command

The following shows an example of setting the clock data of GOT.

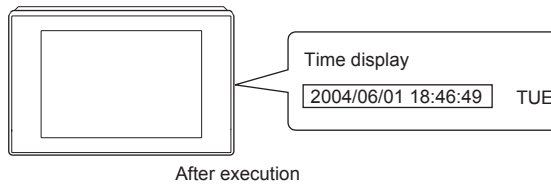(Assuming that the clock data is to be set to "2004, June 1, 18:46:49 Tuesday".)



Item	Message format																																																																																																				
Request message (host → GOT)	<p>Example: Format 13 (Digital Electronics Corporation's memory link method (extended mode, ASCII code 1:n))</p> <table border="1"> <thead> <tr> <th>ENQ</th> <th colspan="2">Station No.</th> <th>ESC</th> <th>Com-mand</th> <th></th> <th colspan="2">Sum Check</th> <th>CR</th> <th>LF</th> </tr> </thead> <tbody> <tr> <td>05H</td> <td>0</td> <td>0</td> <td>1BH</td> <td>M</td> <td>Following*1</td> <td>9</td> <td>A</td> <td>0DH</td> <td>0AH</td> </tr> <tr> <td></td> <td>30H</td> <td>30H</td> <td></td> <td></td> <td></td> <td>39H</td> <td>41H</td> <td></td> <td></td> </tr> <tr> <td></td> <td>(H)</td> <td>(L)</td> <td></td> <td></td> <td></td> <td>(H)</td> <td>(L)</td> <td></td> <td></td> </tr> </tbody> </table> <p>← Sum check is performed in this range.</p> <p>*1</p> <table border="1"> <thead> <tr> <th></th> <th colspan="2">Year data</th> <th colspan="2">Month data</th> <th colspan="2">Day data</th> <th colspan="2">Hour data</th> <th colspan="2">Minute data</th> <th colspan="2">Second data</th> <th colspan="2">Day-of-week data</th> </tr> </thead> <tbody> <tr> <td></td> <td>0</td> <td>4</td> <td>0</td> <td>6</td> <td>0</td> <td>1</td> <td>1</td> <td>8</td> <td>4</td> <td>6</td> <td>4</td> <td>9</td> <td>0</td> <td>2</td> </tr> <tr> <td></td> <td>30H</td> <td>34H</td> <td>30H</td> <td>36H</td> <td>30H</td> <td>31H</td> <td>31H</td> <td>38H</td> <td>34H</td> <td>36H</td> <td>34H</td> <td>39H</td> <td>30H</td> <td>32H</td> </tr> <tr> <td></td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> </tr> </tbody> </table>	ENQ	Station No.		ESC	Com-mand		Sum Check		CR	LF	05H	0	0	1BH	M	Following*1	9	A	0DH	0AH		30H	30H				39H	41H				(H)	(L)				(H)	(L)				Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data			0	4	0	6	0	1	1	8	4	6	4	9	0	2		30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H		(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)
ENQ	Station No.		ESC	Com-mand		Sum Check		CR	LF																																																																																												
05H	0	0	1BH	M	Following*1	9	A	0DH	0AH																																																																																												
	30H	30H				39H	41H																																																																																														
	(H)	(L)				(H)	(L)																																																																																														
	Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data																																																																																								
	0	4	0	6	0	1	1	8	4	6	4	9	0	2																																																																																							
	30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H																																																																																							
	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)																																																																																							
Response message during normal communication (GOT → host)	<p>Example: Format 13 (Digital Electronics Corporation's memory link method (extended mode, ASCII code 1:n))</p> <table border="1"> <thead> <tr> <th>ACK</th> <th colspan="2">Station No.</th> <th>CR</th> <th>LF</th> </tr> </thead> <tbody> <tr> <td>06H</td> <td>0</td> <td>0</td> <td>0DH</td> <td>0AH</td> </tr> <tr> <td></td> <td>30H</td> <td>30H</td> <td></td> <td></td> </tr> <tr> <td></td> <td>(H)</td> <td>(L)</td> <td></td> <td></td> </tr> </tbody> </table>	ACK	Station No.		CR	LF	06H	0	0	0DH	0AH		30H	30H				(H)	(L)																																																																																		
ACK	Station No.		CR	LF																																																																																																	
06H	0	0	0DH	0AH																																																																																																	
	30H	30H																																																																																																			
	(H)	(L)																																																																																																			
Response message during faulty communication (GOT → host)	<p>Example: Format 13 (Digital Electronics Corporation's memory link method (extended mode, ASCII code 1:n))</p> <table border="1"> <thead> <tr> <th>NAK</th> <th colspan="2">Station No.</th> <th>Error code</th> <th>CR</th> <th>LF</th> </tr> </thead> <tbody> <tr> <td>15H</td> <td>0</td> <td>0</td> <td>0</td> <td>6</td> <td></td> </tr> <tr> <td></td> <td>30H</td> <td>30H</td> <td>30H</td> <td>36H</td> <td>0DH</td> </tr> <tr> <td></td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>0AH</td> </tr> </tbody> </table> <p>The above is a case where the sum check error (06H) has occurred.</p>	NAK	Station No.		Error code	CR	LF	15H	0	0	0	6			30H	30H	30H	36H	0DH		(H)	(L)	(H)	(L)	0AH																																																																												
NAK	Station No.		Error code	CR	LF																																																																																																
15H	0	0	0	6																																																																																																	
	30H	30H	30H	36H	0DH																																																																																																
	(H)	(L)	(H)	(L)	0AH																																																																																																



When a wrong day of the week has been set by the clock data setting command

If a wrong day of the week is set by the clock data setting commands, the clock data will differ from the time displayed on the utility.

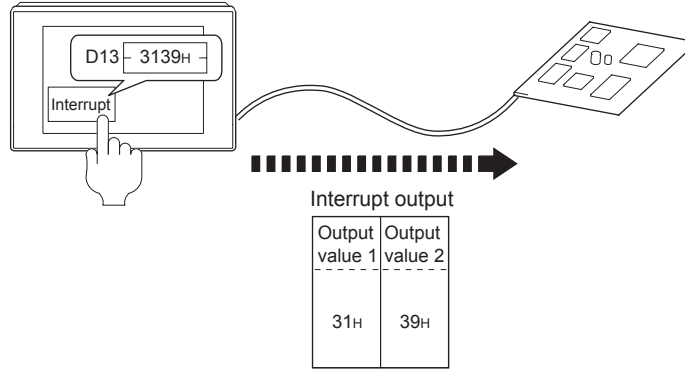
Example: When June 1, 2004 (Thursday) is set by the clock data setting command(the actual day of week is Tuesday), Tuesday (TUE) will be displayed on the utility time display.

(3) In the case of interrupt outputs

The following shows an example of an interrupt output when data are written to the interrupt output devices (D13 and D14).

(Assuming that "3139H" is written to D13 and "AA55H" to D14.)

Example: When the number of interrupt data bytes is 2 in format 11



Item	Message format																																																																															
Interrupt output (GOT → host)	<p>Example: Format 13 (Digital Electronics Corporation's memory link method (extended mode, ASCII code 1:n))</p> <p>(1) When [Interrupt Data Byte] in "Communication Detail Settings" is set to "1 byte"</p> <table border="1" style="margin-left: auto; margin-right: auto; text-align: center;"> <thead> <tr> <th>STX</th> <th colspan="2">Station No.</th> <th>ESC</th> <th>Com- mand</th> <th colspan="2">Number of data</th> <th colspan="2">Output value 1</th> <th>ETX</th> <th colspan="2">Sum Check</th> <th>CR</th> <th>LF</th> </tr> <tr> <td>02H</td> <td>0</td> <td>0</td> <td>1BH</td> <td>I</td> <td>0</td> <td>1</td> <td>3</td> <td>9</td> <td>03H</td> <td>9</td> <td>4</td> <td>0DH</td> <td>0AH</td> </tr> <tr> <td></td> <td>30H (H)</td> <td>30H (L)</td> <td></td> <td>49H</td> <td>30H (H)</td> <td>31H (L)</td> <td>33H (H)</td> <td>39H (L)</td> <td></td> <td>39H (H)</td> <td>44H (L)</td> <td></td> <td></td> </tr> </thead> <tbody> <tr> <td colspan="14" style="text-align: center;">← This range Sum check is performed. →</td> </tr> </tbody> </table>	STX	Station No.		ESC	Com- mand	Number of data		Output value 1		ETX	Sum Check		CR	LF	02H	0	0	1BH	I	0	1	3	9	03H	9	4	0DH	0AH		30H (H)	30H (L)		49H	30H (H)	31H (L)	33H (H)	39H (L)		39H (H)	44H (L)			← This range Sum check is performed. →																																				
	STX	Station No.		ESC	Com- mand	Number of data		Output value 1		ETX	Sum Check		CR	LF																																																																		
	02H	0	0	1BH	I	0	1	3	9	03H	9	4	0DH	0AH																																																																		
		30H (H)	30H (L)		49H	30H (H)	31H (L)	33H (H)	39H (L)		39H (H)	44H (L)																																																																				
← This range Sum check is performed. →																																																																																
<p>(2) When [Interrupt Data Byte] in "Communication Detail Settings" is set to "2 bytes"</p> <table border="1" style="margin-left: auto; margin-right: auto; text-align: center;"> <thead> <tr> <th>STX</th> <th colspan="2">Station No.</th> <th>ESC</th> <th>Com- mand</th> <th colspan="2">Data Number</th> <th colspan="2">Output value 1</th> <th colspan="2">Output value 2</th> <th>ETX</th> <th colspan="2">Sum Check</th> <th>CR</th> <th>LF</th> </tr> <tr> <td>02H</td> <td>0</td> <td>0</td> <td>1BH</td> <td>49H</td> <td>0</td> <td>2</td> <td>3</td> <td>1</td> <td>3</td> <td>9</td> <td>03H</td> <td>F</td> <td>9</td> <td>0DH</td> <td>0AH</td> </tr> <tr> <td></td> <td>30H (H)</td> <td>30H (L)</td> <td></td> <td>49H</td> <td>30H (H)</td> <td>32H (L)</td> <td>33H (H)</td> <td>31H (L)</td> <td>33H (H)</td> <td>39H (L)</td> <td></td> <td>46H (H)</td> <td>39H (L)</td> <td></td> <td></td> </tr> </thead> <tbody> <tr> <td colspan="16" style="text-align: center;">← Sum check is performed in this range. →</td> </tr> </tbody> </table>	STX	Station No.		ESC	Com- mand	Data Number		Output value 1		Output value 2		ETX	Sum Check		CR	LF	02H	0	0	1BH	49H	0	2	3	1	3	9	03H	F	9	0DH	0AH		30H (H)	30H (L)		49H	30H (H)	32H (L)	33H (H)	31H (L)	33H (H)	39H (L)		46H (H)	39H (L)			← Sum check is performed in this range. →																															
STX	Station No.		ESC	Com- mand	Data Number		Output value 1		Output value 2		ETX	Sum Check		CR	LF																																																																	
02H	0	0	1BH	49H	0	2	3	1	3	9	03H	F	9	0DH	0AH																																																																	
	30H (H)	30H (L)		49H	30H (H)	32H (L)	33H (H)	31H (L)	33H (H)	39H (L)		46H (H)	39H (L)																																																																			
← Sum check is performed in this range. →																																																																																
<p>(3) When [Interrupt Data Byte] in "Communication Detail Settings" is set to "4 bytes"</p> <table border="1" style="margin-left: auto; margin-right: auto; text-align: center;"> <thead> <tr> <th>STX</th> <th colspan="2">Station No.</th> <th>ESC</th> <th>Com- mand</th> <th colspan="2">Number of data</th> <th colspan="2">Output value 1</th> <th colspan="2">Output value 2</th> <th colspan="2">Output value 3</th> <th colspan="2">Output value 4</th> <th>ETX</th> <th colspan="2">Sum Check</th> <th>CR</th> <th>LF</th> </tr> <tr> <td>02H</td> <td>0</td> <td>0</td> <td>1BH</td> <td>49H</td> <td>0</td> <td>4</td> <td>A</td> <td>A</td> <td>5</td> <td>5</td> <td>3</td> <td>1</td> <td>3</td> <td>9</td> <td>03H</td> <td>E</td> <td>7</td> <td>0DH</td> <td>0AH</td> </tr> <tr> <td></td> <td>30H (H)</td> <td>30H (L)</td> <td></td> <td>49H</td> <td>30H (H)</td> <td>34H (L)</td> <td>41H (H)</td> <td>41H (L)</td> <td>35H (H)</td> <td>35H (L)</td> <td>33H (H)</td> <td>31H (L)</td> <td>33H (H)</td> <td>39H (L)</td> <td></td> <td>45H (H)</td> <td>37H (L)</td> <td></td> <td></td> </tr> </thead> <tbody> <tr> <td colspan="20" style="text-align: center;">← Sum check is performed in this range. →</td> </tr> </tbody> </table>	STX	Station No.		ESC	Com- mand	Number of data		Output value 1		Output value 2		Output value 3		Output value 4		ETX	Sum Check		CR	LF	02H	0	0	1BH	49H	0	4	A	A	5	5	3	1	3	9	03H	E	7	0DH	0AH		30H (H)	30H (L)		49H	30H (H)	34H (L)	41H (H)	41H (L)	35H (H)	35H (L)	33H (H)	31H (L)	33H (H)	39H (L)		45H (H)	37H (L)			← Sum check is performed in this range. →																			
STX	Station No.		ESC	Com- mand	Number of data		Output value 1		Output value 2		Output value 3		Output value 4		ETX	Sum Check		CR	LF																																																													
02H	0	0	1BH	49H	0	4	A	A	5	5	3	1	3	9	03H	E	7	0DH	0AH																																																													
	30H (H)	30H (L)		49H	30H (H)	34H (L)	41H (H)	41H (L)	35H (H)	35H (L)	33H (H)	31H (L)	33H (H)	39H (L)		45H (H)	37H (L)																																																															
← Sum check is performed in this range. →																																																																																

17 CONNECTION TO FUJIF A PLC
 18 CONNECTION TO MATSUSHITA PLC
 19 CONNECTION TO YASKAWA PLC
 20 CONNECTION TO YOKOGAWA PLC
 21 CONNECTION TO ALLEN-BRADLEY PLC
 22 CONNECTION TO SIEMENS PLC
 23 MICROCOMPUTER CONNECTION
 24 CONNECTION TO OMRON TEMPERATURE CONTROLLER



Interrupt output

- To set so that interrupts are not issued, set SM52 (interrupt code output inhibit flag) ON. (☞ Section 23.4.6 SM devices)
- To issue interrupts in format 11, set the data length to "8 bits" at "Communication Detail Settings". (☞ Section 23.6.3 Setting communication interface (Communication settings))
- When "7 bits" is set, the MSB (8th bit) is ignored. (Example: FF_H → 7F_H)

4 Error code list

In the case of formats 12 and 13 (Digital Electronics Corporation's memory link method (extended mode)), the details (error code) of the error are appended to the response message during faulty communication.

The following shows error code, error contents, cause, and measures.

Error code	Description	Measures
06 _H	Sum check error The sum check code created from received data differs from the sum check code in the receive data.	<ul style="list-style-type: none">• Review the contents of the message to transmit.
10 _H	Command error An unsupported command was used.	<ul style="list-style-type: none">• Review the contents of the message to transmit.• Check the command in the message. (☞ Section 23.5.2 List of commands)
12 _H	Message length error The upper limit of the data length that can be received by the GOT has been exceeded.	<ul style="list-style-type: none">• Review the contents of the message to transmit.• Check the data length of the message. (data length of the data section, etc.)
16 _H	Clock data setting error The setting value of clock data has error.	<ul style="list-style-type: none">• Review the contents of the message to transmit.• Check whether the non-existent data is set (e.g. setting "07" at the day of the week) as clock data.
FA _H	Address error The head address of the read/write device is out of range.	<ul style="list-style-type: none">• Review the contents of the message to transmit.• Check the devices that can be used and device ranges. (☞ Section 23.4 Device Data Area)
FB _H	Exceeded number of points error The read/write range exceeded the device range.	
FC _H	Message format error The format of the received message has error.	<ul style="list-style-type: none">• Check the settings of "Communication Detail Settings".• Review the contents of the message to transmit.
FF _H	Timeout error There is no response from the GOT, or the slave of the specified address does not exist.	<ul style="list-style-type: none">• Check the communication cable and communication module attachment.• Check the settings of "Communication Detail Settings".• Review the contents of the message to transmit.

5 Precautions

(1) Batch reading/writing crossing over different devices

When using the batch read (R) or batch write (W) command, do not batch read/write crossing over the different devices.

This will cause an error response.

23.5.7 Formats 14, 15 (GOT-F900 series microcomputer connection)



1 Basic format of data communication

Item	Message format																																									
Request message (host → GOT)	<p>(format 14: GOT-F900 series microcomputer connection (format 1)) (1) w/out station No.</p> <table border="1"> <tr> <td>STX</td> <td>Com-mand</td> <td>Data</td> <td>CR</td> </tr> <tr> <td>02H</td> <td></td> <td></td> <td>0DH</td> </tr> </table> <p>(2) w/ station No.</p> <table border="1"> <tr> <td>STX</td> <td>Com-mand</td> <td>Station No.</td> <td>Data</td> <td>CR</td> </tr> <tr> <td>02H</td> <td></td> <td>(H) , (L)</td> <td></td> <td>0DH</td> </tr> </table>	STX	Com-mand	Data	CR	02H			0DH	STX	Com-mand	Station No.	Data	CR	02H		(H) , (L)		0DH	<p>(format 15: GOT-F900 series microcomputer connection (format 2)) (1) w/out station No.</p> <table border="1"> <tr> <td>STX</td> <td>Com-mand</td> <td>Data</td> <td>ETX</td> <td>Sum Check</td> </tr> <tr> <td>02H</td> <td></td> <td></td> <td>03H</td> <td>(H) , (L)</td> </tr> </table> <p>Sum check is performed in this range.</p> <p>(2) w/station No.</p> <table border="1"> <tr> <td>STX</td> <td>Com-mand</td> <td>Station No.</td> <td>Data</td> <td>ETX</td> <td>Sum Check</td> </tr> <tr> <td>02H</td> <td></td> <td>(H) , (L)</td> <td></td> <td>03H</td> <td>(H) , (L)</td> </tr> </table> <p>Sum check is performed in this range.</p>	STX	Com-mand	Data	ETX	Sum Check	02H			03H	(H) , (L)	STX	Com-mand	Station No.	Data	ETX	Sum Check	02H		(H) , (L)		03H	(H) , (L)
	STX	Com-mand	Data	CR																																						
02H			0DH																																							
STX	Com-mand	Station No.	Data	CR																																						
02H		(H) , (L)		0DH																																						
STX	Com-mand	Data	ETX	Sum Check																																						
02H			03H	(H) , (L)																																						
STX	Com-mand	Station No.	Data	ETX	Sum Check																																					
02H		(H) , (L)		03H	(H) , (L)																																					
Response message during normal communication (GOT → host)	<p>(1) During processing of read commands (format 14: GOT-F900 series microcomputer connection (format 1))</p> <table border="1"> <tr> <td>STX</td> <td>Data</td> <td>CR</td> </tr> <tr> <td>02H</td> <td></td> <td>0DH</td> </tr> </table>	STX	Data	CR	02H		0DH	<p>(format 15: GOT-F900 series microcomputer connection (format 2))</p> <table border="1"> <tr> <td>STX</td> <td>Data</td> <td>ETX</td> <td>Sum Check</td> </tr> <tr> <td>02H</td> <td></td> <td>03H</td> <td>(H) , (L)</td> </tr> </table> <p>Sum check is performed in this range.</p>	STX	Data	ETX	Sum Check	02H		03H	(H) , (L)																										
	STX	Data	CR																																							
02H		0DH																																								
STX	Data	ETX	Sum Check																																							
02H		03H	(H) , (L)																																							
Response message during faulty communication (GOT → host)	<p>(2) During processing of write commands</p> <table border="1"> <tr> <td>ACK</td> </tr> <tr> <td>06H</td> </tr> </table>	ACK	06H																																							
	ACK																																									
06H																																										
	<table border="1"> <tr> <td>NAK</td> </tr> <tr> <td>15H</td> </tr> </table>	NAK	15H																																							
NAK																																										
15H																																										

17

CONNECTION TO
FUJIFA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23


MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

Item	Message format
During interrupt output	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;"> <p style="text-align: center;">Output value</p> <hr style="border-top: 1px dashed black;"/> <p style="text-align: center;">1/2/4 bytes*1</p> </div>

*1 Set the number of interrupt data bytes at "Communication Details Settings" on GT Designer2.
 For details of setting the number of interrupt data bytes, refer to the following.

 Section 23.6.3 Setting communication interface (Communication settings)

2 Details of data items in message format



Data code during communication

Communication is performed in ASCII code. (excluding interrupt output)

(1) Control codes

Symbol	ASCII code	Description
STX	02H	Start of Text (start marker of message frame)
ETX	03H	End of Text (end marker of message frame)
EOT	04H	End of Transmission
ENQ	05H	Enquiry (start of enquiry)
NAK	15H	Negative ACK (error response)
ACK	06H	Acknowledge (write completion response)
LF	0AH	Line Feed
CL	0CH	Clear
CR	0DH	Carriage Return

(2) Command

Specifies the contents to access from the host to the GOT.

The command is converted to a 1-digit ASCII code (Hex) and transmitted.

For details of the commands that can be used, refer to the following.

Section 23.5.2 List of commands

(3) Station No.

Station No. is used to identify the GOT that the host is to communicate with. (Setting range: 0 to 31)

Data notated in decimal is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.

The GOT processes only commands whose station No. matches the "Host Address (0 to 31)" set at "Communication Detail Settings". (The messages of commands whose station No. do not match are ignored.)

For details of setting "Communication Detail Settings", refer to the following.

Section 23.6.3 Setting communication interface (Communication settings)

(4) Address

Specifies the head No. of the device data to be read/written.

Data notated in Hex is converted to a 4-digit ASCII code (Hex) and transmitted from the upper digit.

For details of the device ranges that can be accessed, refer to the following.

Section 23.4 Device Data Area

(5) Bit pattern

Specifies the pattern of the bits to change.

Data notated in Hex is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.


3 (3) Multi-point write in bit units (3) command (w/out station No.), multi-point write in bit units (D) command (w/ station No.)

(6) Write specification


Specifies how to change the data of the specified address by bit pattern.


(Setting range: 0 to 3)

Data notated in decimal is converted to a 1-digit ASCII code (Hex) and transmitted.

 3 (3) Multi-point write in bit units (3) command (w/out station No.), multi-point write in bit units (D) command (w/ station No.)

- (7) Number of bytes
Specifies the number of bytes of the device data to be batch read/written. (Setting range: 0 to FF_H)
Data notated in Hex is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.
- (8) Number of points
Specifies the number of device data to be written to multiple points in bit units. (Setting range: 0 to 70)
Data notated in decimal is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit
- (9) Year, month, day, hour, minute, second and day of the week data
Specifies year, month, day, hour, minute, second and day of the week to be read/set to the clock data of the GOT.
Data notated in decimal is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.

 3 (5) Read clock data (6) command (w/out station No.), read clock data (G) command (w/station No.)

 3 (6) Set clock data (5) command (w/out station No.), set clock data (F) command (w/ station No.)

- (10) Data
Specifies the data to read from/write to the specified device data. (word unit)
Data notated in Hex is converted to a 4-digit ASCII code (Hex) and transmitted from the upper digit.
- (11) Write data
Specifies the data to write to the specified device data.
Data notated in Hex is converted to a 2-digit ASCII code (Hex) and transmitted from the upper digit.
- (12) Sum check code (for format 15: GOT-F900 series microcomputer connection (format 2) only)
The sum check code is obtained by converting the lower 1 byte (8 bits) of the result (sum), after having added the sum check target data as binary data, to 2-digit ASCII code (Hex).

STX	Command		Address				Number of points		ETX	Sum Check	
	R	D	0	1	0	0	0	2		B	C
02 _H	52 _H	44 _H	30 _H	31 _H	30 _H	30 _H	30 _H	32 _H	03 _H	42 _H	43 _H
	(H)	(L)	(H)	-	-	(L)	(H)	(L)		(H)	(L)

Sum check is performed in this range.

$$52_{\text{H}} + 44_{\text{H}} + 30_{\text{H}} + 31_{\text{H}} + 30_{\text{H}} + 30_{\text{H}} + 30_{\text{H}} + 32_{\text{H}} + 03_{\text{H}} = 1\text{BC}_{\text{H}}$$

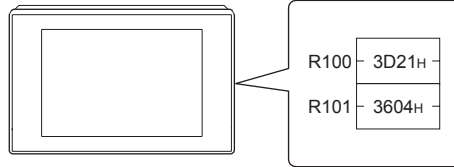
3 Message format

(1) Batch read (0) command (w/out station No.), batch read (A) command (w/station No.)

(a) When reading word device

The following shows an example of reading four bytes of virtual devices R100 to R101 from the GOT at station No.15.

(Assuming that R100="3D21H" and R101="3604H" are stored.)




Item	Message format																				
Request message (host → GOT)	(format 14: GOT-F900 series microcomputer connection (format 1)) <table border="1" style="margin: 10px auto;"> <thead> <tr> <th>STX</th> <th>Com-mand</th> <th>Station No.</th> <th>Address</th> <th>Number of bytes</th> <th>CR</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>A</td> <td>1 5</td> <td>0 0 C 8</td> <td>0 4</td> <td>0DH</td> </tr> <tr> <td></td> <td></td> <td>31H 35H (H) (L)</td> <td>30H 30H 43H 38H (H) - - (L)</td> <td>30H 34H (H) (L)</td> <td></td> </tr> </tbody> </table>	STX	Com-mand	Station No.	Address	Number of bytes	CR	02H	A	1 5	0 0 C 8	0 4	0DH			31H 35H (H) (L)	30H 30H 43H 38H (H) - - (L)	30H 34H (H) (L)			
	STX	Com-mand	Station No.	Address	Number of bytes	CR															
02H	A	1 5	0 0 C 8	0 4	0DH																
		31H 35H (H) (L)	30H 30H 43H 38H (H) - - (L)	30H 34H (H) (L)																	
(format 15: GOT-F900 series microcomputer connection (format 2)) <table border="1" style="margin: 10px auto;"> <thead> <tr> <th>STX</th> <th>Com-mand</th> <th>Station No.</th> <th>Address</th> <th>Number of bytes</th> <th>ETX</th> <th>Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>A</td> <td>1 5</td> <td>0 0 C 8</td> <td>0 4</td> <td>03H</td> <td>E 9</td> </tr> <tr> <td></td> <td></td> <td>31H 35H (H) (L)</td> <td>30H 30H 43H 38H (H) - - (L)</td> <td>30H 34H (H) (L)</td> <td></td> <td>45H 39H (H) (L)</td> </tr> </tbody> </table> <p style="text-align: center;">← Sum check is performed in this range. →</p>	STX	Com-mand	Station No.	Address	Number of bytes	ETX	Sum Check	02H	A	1 5	0 0 C 8	0 4	03H	E 9			31H 35H (H) (L)	30H 30H 43H 38H (H) - - (L)	30H 34H (H) (L)		45H 39H (H) (L)
STX	Com-mand	Station No.	Address	Number of bytes	ETX	Sum Check															
02H	A	1 5	0 0 C 8	0 4	03H	E 9															
		31H 35H (H) (L)	30H 30H 43H 38H (H) - - (L)	30H 34H (H) (L)		45H 39H (H) (L)															
Response message during normal communication (GOT → host)	(format 14: GOT-F900 series microcomputer connection (format 1)) <table border="1" style="margin: 10px auto;"> <thead> <tr> <th>STX</th> <th>Data 1 (R100 upper)</th> <th>Data 2 (R100 lower)</th> <th>Data 3 (R101 upper)</th> <th>Data 4 (R101 lower)</th> <th>CR</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>3 D</td> <td>2 1</td> <td>3 6</td> <td>0 4</td> <td>0DH</td> </tr> <tr> <td></td> <td>33H 44H (H) (L)</td> <td>32H 31H (H) (L)</td> <td>33H 36H (H) (L)</td> <td>30H 34H (H) (L)</td> <td></td> </tr> </tbody> </table>	STX	Data 1 (R100 upper)	Data 2 (R100 lower)	Data 3 (R101 upper)	Data 4 (R101 lower)	CR	02H	3 D	2 1	3 6	0 4	0DH		33H 44H (H) (L)	32H 31H (H) (L)	33H 36H (H) (L)	30H 34H (H) (L)			
	STX	Data 1 (R100 upper)	Data 2 (R100 lower)	Data 3 (R101 upper)	Data 4 (R101 lower)	CR															
02H	3 D	2 1	3 6	0 4	0DH																
	33H 44H (H) (L)	32H 31H (H) (L)	33H 36H (H) (L)	30H 34H (H) (L)																	
(format 15: GOT-F900 series microcomputer connection (format 2)) <table border="1" style="margin: 10px auto;"> <thead> <tr> <th>STX</th> <th>Data 1 (R100 upper)</th> <th>Data 2 (R100 lower)</th> <th>Data 3 (R101 upper)</th> <th>Data 4 (R101 lower)</th> <th>ETX</th> <th>Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>3 D</td> <td>2 1</td> <td>3 6</td> <td>0 4</td> <td>03H</td> <td>A A</td> </tr> <tr> <td></td> <td>33H 44H (H) (L)</td> <td>32H 31H (H) (L)</td> <td>33H 36H (H) (L)</td> <td>30H 34H (H) (L)</td> <td></td> <td>41H 41H (H) (L)</td> </tr> </tbody> </table> <p style="text-align: center;">← Sum check is performed in this range. →</p>	STX	Data 1 (R100 upper)	Data 2 (R100 lower)	Data 3 (R101 upper)	Data 4 (R101 lower)	ETX	Sum Check	02H	3 D	2 1	3 6	0 4	03H	A A		33H 44H (H) (L)	32H 31H (H) (L)	33H 36H (H) (L)	30H 34H (H) (L)		41H 41H (H) (L)
STX	Data 1 (R100 upper)	Data 2 (R100 lower)	Data 3 (R101 upper)	Data 4 (R101 lower)	ETX	Sum Check															
02H	3 D	2 1	3 6	0 4	03H	A A															
	33H 44H (H) (L)	32H 31H (H) (L)	33H 36H (H) (L)	30H 34H (H) (L)		41H 41H (H) (L)															
Response message during faulty communication (GOT → host)	<table border="1" style="margin: 10px auto;"> <tr> <td>NAK</td> </tr> <tr> <td>15H</td> </tr> </table>	NAK	15H																		
NAK																					
15H																					

(2) Batch write (1) command (w/out station No.), batch write (B) command (w/station No.)

(a) When writing to word device

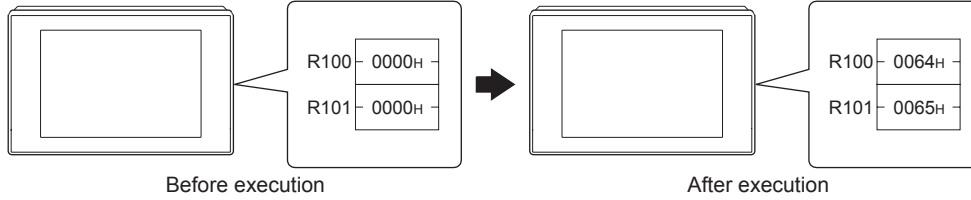The following shows an example of writing "3D21H" and "3604H" to virtual devices R100 and R101 on the GOT at station No.15.



Item	Message format																											
Request message (host → GOT)	(format 14: GOT-F900 series microcomputer connection (format 1))																											
	<table border="1"> <thead> <tr> <th>STX</th> <th>Com-mand</th> <th colspan="2">Station No.</th> <th colspan="4">Address</th> <th colspan="2">Number of bytes</th> <th rowspan="2">Following^{*1}</th> <th>CR</th> </tr> <tr> <th>02H</th> <th>B 42H</th> <th>1 31H (H)</th> <th>5 35H (L)</th> <th>0 30H (H)</th> <th>0 30H (H)</th> <th>C 43H (L)</th> <th>8 38H (L)</th> <th>0 30H (H)</th> <th>4 34H (L)</th> <th>0D</th> </tr> </thead> </table>	STX	Com-mand	Station No.		Address				Number of bytes		Following ^{*1}	CR	02H	B 42H	1 31H (H)	5 35H (L)	0 30H (H)	0 30H (H)	C 43H (L)	8 38H (L)	0 30H (H)	4 34H (L)	0D				
	STX	Com-mand	Station No.		Address				Number of bytes		Following ^{*1}		CR															
02H	B 42H	1 31H (H)	5 35H (L)	0 30H (H)	0 30H (H)	C 43H (L)	8 38H (L)	0 30H (H)	4 34H (L)	0D																		
(format 15: GOT-F900 series microcomputer connection (format 2))																												
	<table border="1"> <thead> <tr> <th>STX</th> <th>Com-mand</th> <th colspan="2">Station No.</th> <th colspan="4">Address</th> <th colspan="2">Number of bytes</th> <th rowspan="2">Following^{*1}</th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> <tr> <th>02H</th> <th>B 42H</th> <th>1 31H (H)</th> <th>5 35H (L)</th> <th>0 30H (H)</th> <th>0 30H (H)</th> <th>C 43H (L)</th> <th>8 38H (L)</th> <th>0 30H (H)</th> <th>4 34H (L)</th> <th>03H</th> <th>9 39H (H)</th> <th>1 31H (L)</th> </tr> </thead> </table> <p style="text-align: center;">Sum check is performed in this range.</p>	STX	Com-mand	Station No.		Address				Number of bytes		Following ^{*1}	ETX	Sum Check		02H	B 42H	1 31H (H)	5 35H (L)	0 30H (H)	0 30H (H)	C 43H (L)	8 38H (L)	0 30H (H)	4 34H (L)	03H	9 39H (H)	1 31H (L)
STX	Com-mand	Station No.		Address				Number of bytes		Following ^{*1}	ETX		Sum Check															
02H	B 42H	1 31H (H)	5 35H (L)	0 30H (H)	0 30H (H)	C 43H (L)	8 38H (L)	0 30H (H)	4 34H (L)		03H	9 39H (H)	1 31H (L)															
	<p>^{*1}</p> <table border="1"> <thead> <tr> <th colspan="2">Data 1 (R100 upper)</th> <th colspan="2">Data 2 (R100 lower)</th> <th colspan="2">Data 3 (R101 upper)</th> <th colspan="2">Data 4 (R101 lower)</th> </tr> </thead> <tbody> <tr> <td>3 33H (H)</td> <td>D 44H (L)</td> <td>2 32H (H)</td> <td>1 31H (L)</td> <td>3 33H (H)</td> <td>6 36H (L)</td> <td>0 30H (H)</td> <td>4 34H (L)</td> </tr> </tbody> </table>	Data 1 (R100 upper)		Data 2 (R100 lower)		Data 3 (R101 upper)		Data 4 (R101 lower)		3 33H (H)	D 44H (L)	2 32H (H)	1 31H (L)	3 33H (H)	6 36H (L)	0 30H (H)	4 34H (L)											
Data 1 (R100 upper)		Data 2 (R100 lower)		Data 3 (R101 upper)		Data 4 (R101 lower)																						
3 33H (H)	D 44H (L)	2 32H (H)	1 31H (L)	3 33H (H)	6 36H (L)	0 30H (H)	4 34H (L)																					
Response message during normal communication (GOT → host)	<table border="1"> <tr> <td>ACK</td> </tr> <tr> <td>06H</td> </tr> </table>	ACK	06H																									
ACK																												
06H																												
Response message during faulty communication (GOT → host)	<table border="1"> <tr> <td>NAK</td> </tr> <tr> <td>15H</td> </tr> </table>	NAK	15H																									
NAK																												
15H																												

- (3) Multi-point write in bit units (3) command (w/out station No.), multi-point write in bit units (D) command (w/ station No.)
 The following shows an example of turning OFF the virtual device M31 and turning ON the virtual device M2038 on the GOT at station No.31.


Item	Message format																																																																																																																												
Request message (host → GOT)	<p>(format 14: GOT-F900 series microcomputer connection (format 1))</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>STX</th> <th>Com-mand</th> <th colspan="2">Station No.</th> <th colspan="2">Number of points</th> <th rowspan="2">Following^{*1}</th> <th>CR</th> </tr> <tr> <td>02H</td> <td>D</td> <td>3</td> <td>1</td> <td>0</td> <td>2</td> <td>0DH</td> </tr> <tr> <td></td> <td></td> <td>33H</td> <td>31H</td> <td>30H</td> <td>32H</td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td></td> <td></td> </tr> </thead> </table>	STX	Com-mand	Station No.		Number of points		Following ^{*1}	CR	02H	D	3	1	0	2	0DH			33H	31H	30H	32H					(H)	(L)	(H)	(L)																																																																																															
	STX	Com-mand	Station No.		Number of points		Following ^{*1}		CR																																																																																																																				
	02H	D	3	1	0	2		0DH																																																																																																																					
		33H	31H	30H	32H																																																																																																																								
		(H)	(L)	(H)	(L)																																																																																																																								
<p>(format 15: GOT-F900 series microcomputer connection (format 2))</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>STX</th> <th>Com-mand</th> <th colspan="2">Station No.</th> <th colspan="2">Number of points</th> <th rowspan="2">Following^{*1}</th> <th>ETX</th> <th colspan="2">Sum check</th> </tr> <tr> <td>02H</td> <td>D</td> <td>3</td> <td>1</td> <td>0</td> <td>2</td> <td>03H</td> <td>E</td> <td>C</td> </tr> <tr> <td></td> <td></td> <td>33H</td> <td>31H</td> <td>30H</td> <td>32H</td> <td></td> <td>45H</td> <td>43H</td> </tr> <tr> <td></td> <td></td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td></td> <td>(H)</td> <td>(L)</td> </tr> </thead> </table> <p style="text-align: center;">← Sum check is performed in this range. →</p> <p>^{*1}</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Write specification 1</th> <th colspan="4">Address1</th> <th colspan="2">Bit pattern1</th> <th>Write specification 2</th> <th colspan="4">Address2</th> <th colspan="2">Bit pattern2</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>2</td> <td>0</td> <td>0</td> <td>3</td> <td>8</td> <td>0</td> <td>0</td> <td>2</td> <td>0</td> <td>F</td> <td>E</td> <td>4</td> <td>0</td> </tr> <tr> <td>31H</td> <td>32H</td> <td>30H</td> <td>30H</td> <td>33H</td> <td>38H</td> <td>30H</td> <td>30H</td> <td>32H</td> <td>30H</td> <td>46</td> <td>45H</td> <td>34H</td> <td>30H</td> </tr> <tr> <td></td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td></td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> </tr> </tbody> </table> <p style="text-align: center;">^{*2} (write specification1=1) ^{*2} (write specification2=0)</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Source data bit pattern</th> <th>Result</th> <th>Source data bit pattern</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>10101010</td> <td>00101010</td> <td>10101010</td> <td>11101010</td> </tr> <tr> <td>10000000</td> <td></td> <td>01000000</td> <td></td> </tr> <tr> <td></td> <td>MMMMMMMM</td> <td></td> <td>MMMMMMMM</td> </tr> <tr> <td></td> <td>33222222</td> <td></td> <td>22222222</td> </tr> <tr> <td></td> <td>10987654</td> <td></td> <td>00000000</td> </tr> <tr> <td></td> <td></td> <td></td> <td>33333333</td> </tr> <tr> <td></td> <td></td> <td></td> <td>98765432</td> </tr> </tbody> </table>	STX	Com-mand	Station No.		Number of points		Following ^{*1}	ETX	Sum check		02H	D	3	1	0	2	03H	E	C			33H	31H	30H	32H		45H	43H			(H)	(L)	(H)	(L)		(H)	(L)	Write specification 1	Address1				Bit pattern1		Write specification 2	Address2				Bit pattern2		1	2	0	0	3	8	0	0	2	0	F	E	4	0	31H	32H	30H	30H	33H	38H	30H	30H	32H	30H	46	45H	34H	30H		(H)	-	-	(L)	(H)	(L)		(H)	-	-	(L)	(H)	(L)	Source data bit pattern	Result	Source data bit pattern	Result	10101010	00101010	10101010	11101010	10000000		01000000			MMMMMMMM		MMMMMMMM		33222222		22222222		10987654		00000000				33333333				98765432
STX	Com-mand	Station No.		Number of points		Following ^{*1}		ETX	Sum check																																																																																																																				
02H	D	3	1	0	2		03H	E	C																																																																																																																				
		33H	31H	30H	32H		45H	43H																																																																																																																					
		(H)	(L)	(H)	(L)		(H)	(L)																																																																																																																					
Write specification 1	Address1				Bit pattern1		Write specification 2	Address2				Bit pattern2																																																																																																																	
1	2	0	0	3	8	0	0	2	0	F	E	4	0																																																																																																																
31H	32H	30H	30H	33H	38H	30H	30H	32H	30H	46	45H	34H	30H																																																																																																																
	(H)	-	-	(L)	(H)	(L)		(H)	-	-	(L)	(H)	(L)																																																																																																																
Source data bit pattern	Result	Source data bit pattern	Result																																																																																																																										
10101010	00101010	10101010	11101010																																																																																																																										
10000000		01000000																																																																																																																											
	MMMMMMMM		MMMMMMMM																																																																																																																										
	33222222		22222222																																																																																																																										
	10987654		00000000																																																																																																																										
			33333333																																																																																																																										
			98765432																																																																																																																										
Response message during normal communication (GOT → host)	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr><td>ACK</td></tr> <tr><td>06H</td></tr> </table>	ACK	06H																																																																																																																										
ACK																																																																																																																													
06H																																																																																																																													
Response message during faulty communication (GOT → host)	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr><td>NAK</td></tr> <tr><td>15H</td></tr> </table>	NAK	15H																																																																																																																										
NAK																																																																																																																													
15H																																																																																																																													

*2 The write specification specifies how the data of the specified address is changed in the bit pattern.

Write specification	Function	Description	Action example
0	ON specification	Bits set to "1" by the bit pattern are turned ON.	Original data 1010 Bit pattern 1100 Result 1110
1	OFF specification	Bits set to "1" by the bit pattern are turned OFF.	Original data 1010 Bit pattern 1100 Result 0010
2	Invert specification	Bits set to "1" by the bit pattern are inverted.	Original data 1010 Bit pattern 1100 Result 0110
3	Write specification	The numerical values to write by the bit pattern are specified directly.	Original data 1010 Bit pattern 1100 Result 1100

- (4) Fill command (4) (w/out station No.), fill command (E) (w/station No.)

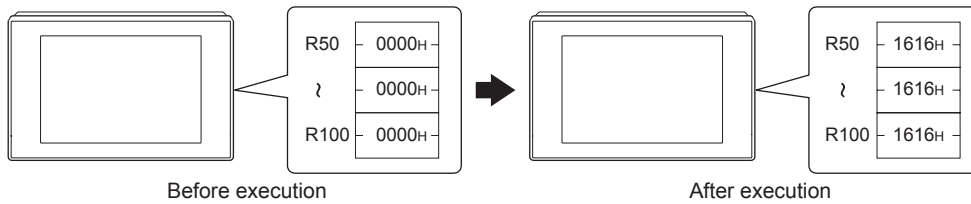The following shows an example of writing "16"s to virtual devices R50 to R100 on the GOT at station No.27.



Item	Message format																																																																				
Request message (host → GOT)	(format 14: GOT-F900 series microcomputer connection (format 1)) <table border="1" style="margin: 10px auto; border-collapse: collapse; text-align: center;"> <thead> <tr> <th>STX</th> <th>Com-mand</th> <th colspan="2">Station No.</th> <th colspan="4">Start address</th> <th colspan="4">End address</th> <th colspan="2">Write Data</th> <th>CR</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>E</td> <td>2</td> <td>7</td> <td>0</td> <td>0</td> <td>6</td> <td>4</td> <td>0</td> <td>0</td> <td>C</td> <td>9</td> <td>1</td> <td>6</td> <td>0Dh</td> </tr> <tr> <td></td> <td></td> <td>32H</td> <td>37H</td> <td>30H</td> <td>30H</td> <td>36H</td> <td>34H</td> <td>30H</td> <td>30H</td> <td>43H</td> <td>39H</td> <td>31H</td> <td>36H</td> <td></td> </tr> <tr> <td></td> <td></td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td></td> </tr> </tbody> </table>	STX	Com-mand	Station No.		Start address				End address				Write Data		CR	02H	E	2	7	0	0	6	4	0	0	C	9	1	6	0Dh			32H	37H	30H	30H	36H	34H	30H	30H	43H	39H	31H	36H				(H)	(L)	(H)	-	-	(L)	(H)	-	-	(L)	(H)	(L)									
	STX	Com-mand	Station No.		Start address				End address				Write Data		CR																																																						
02H	E	2	7	0	0	6	4	0	0	C	9	1	6	0Dh																																																							
		32H	37H	30H	30H	36H	34H	30H	30H	43H	39H	31H	36H																																																								
		(H)	(L)	(H)	-	-	(L)	(H)	-	-	(L)	(H)	(L)																																																								
	(format 15: GOT-F900 series microcomputer connection (format 2)) <table border="1" style="margin: 10px auto; border-collapse: collapse; text-align: center;"> <thead> <tr> <th>STX</th> <th>Com-mand</th> <th colspan="2">Station No.</th> <th colspan="4">Start address</th> <th colspan="4">End address</th> <th colspan="2">Write Data</th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>E</td> <td>2</td> <td>7</td> <td>0</td> <td>0</td> <td>6</td> <td>4</td> <td>0</td> <td>0</td> <td>C</td> <td>9</td> <td>1</td> <td>6</td> <td>03H</td> <td>B</td> <td>E</td> </tr> <tr> <td></td> <td></td> <td>32H</td> <td>37H</td> <td>30H</td> <td>30H</td> <td>36H</td> <td>34H</td> <td>30H</td> <td>30H</td> <td>43H</td> <td>39H</td> <td>31H</td> <td>36H</td> <td></td> <td>42H</td> <td>45H</td> </tr> <tr> <td></td> <td></td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td>(H)</td> <td>-</td> <td>-</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td></td> <td>(H)</td> <td>(L)</td> </tr> </tbody> </table> <p style="text-align: center; margin-top: 5px;">← Sum check is performed in this range. →</p>	STX	Com-mand	Station No.		Start address				End address				Write Data		ETX	Sum Check		02H	E	2	7	0	0	6	4	0	0	C	9	1	6	03H	B	E			32H	37H	30H	30H	36H	34H	30H	30H	43H	39H	31H	36H		42H	45H			(H)	(L)	(H)	-	-	(L)	(H)	-	-	(L)	(H)	(L)		(H)	(L)
STX	Com-mand	Station No.		Start address				End address				Write Data		ETX	Sum Check																																																						
02H	E	2	7	0	0	6	4	0	0	C	9	1	6	03H	B	E																																																					
		32H	37H	30H	30H	36H	34H	30H	30H	43H	39H	31H	36H		42H	45H																																																					
		(H)	(L)	(H)	-	-	(L)	(H)	-	-	(L)	(H)	(L)		(H)	(L)																																																					
Response message during normal communication (GOT → host)	<table border="1" style="margin: 0 auto; border-collapse: collapse;"> <tr><td style="padding: 5px;">ACK</td></tr> <tr><td style="padding: 5px;">06H</td></tr> </table>	ACK	06H																																																																		
ACK																																																																					
06H																																																																					
Response message during faulty communication (GOT → host)	<table border="1" style="margin: 0 auto; border-collapse: collapse;"> <tr><td style="padding: 5px;">NAK</td></tr> <tr><td style="padding: 5px;">15H</td></tr> </table>	NAK	15H																																																																		
NAK																																																																					
15H																																																																					



- (1) Start address/end address specification conditions

Specify addresses so that the start address is the same or less than the end address.

Error response occurs in the following cases:

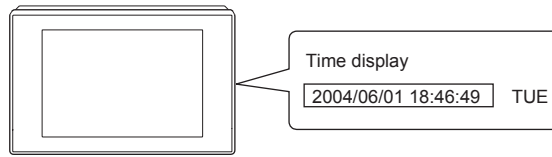
 - The address to specify has the start address greater than the end address.
 - Either of the start address or end address exceeds the device range that can be specified.

- (2) Address specifying crossing over different devices

The start address and end address can be specified crossing over different devices.


17 CONNECTION TO FUJIFXA PLC
 18 CONNECTION TO MATSUSHITA PLC
 19 CONNECTION TO YASKAWA PLC
 20 CONNECTION TO YOKOGAWA PLC
 21 CONNECTION TO ALLEN-BRADLEY PLC
 22 CONNECTION TO SIEMENS PLC
 23 MICROCOMPUTER CONNECTION
 24 CONNECTION TO OMRON TEMPERATURE CONTROLLER

- (5) Read clock data (6) command (w/out station No.), read clock data (G) command (w/station No.)
 The following shows an example of reading the clock data of GOT at station No.27.
 (Assuming that the clock data of GOT has been set to "2004, June 1, 18:46:49, Tuesday".)



Item	Message format																																																																							
Request message (host → GOT)	(format 14: GOT-F900 series microcomputer connection (format 1)) <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>STX</th> <th>Com-mand</th> <th colspan="2">Station No.</th> <th>CR</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>G 47H</td> <td>2 32H</td> <td>7 37H (H) (L)</td> <td>0DH</td> </tr> </tbody> </table>	STX	Com-mand	Station No.		CR	02H	G 47H	2 32H	7 37H (H) (L)	0DH																																																													
	STX	Com-mand	Station No.		CR																																																																			
02H	G 47H	2 32H	7 37H (H) (L)	0DH																																																																				
(format 15: GOT-F900 series microcomputer connection (format 2)) <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>STX</th> <th>Com-mand</th> <th colspan="2">Station No.</th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>G 47H</td> <td>2 32H</td> <td>7 37H (H) (L)</td> <td>03H</td> <td>B 42H</td> <td>3 33H (H) (L)</td> </tr> </tbody> </table> <p style="text-align: center;">←—————→ Sum check is performed in this range.</p>	STX	Com-mand	Station No.		ETX	Sum Check		02H	G 47H	2 32H	7 37H (H) (L)	03H	B 42H	3 33H (H) (L)																																																										
STX	Com-mand	Station No.		ETX	Sum Check																																																																			
02H	G 47H	2 32H	7 37H (H) (L)	03H	B 42H	3 33H (H) (L)																																																																		
Response message during normal communication (GOT → host)	(format 14: GOT-F900 series microcomputer connection (format 1)) <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>STX</th> <th colspan="2">Year data</th> <th colspan="2">Month data</th> <th colspan="2">Day data</th> <th colspan="2">Hour data</th> <th colspan="2">Minute data</th> <th colspan="2">Second data</th> <th colspan="2">Day-of-week data</th> <th>CR</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>0</td><td>4</td> <td>0</td><td>6</td> <td>0</td><td>1</td> <td>1</td><td>8</td> <td>4</td><td>6</td> <td>4</td><td>9</td> <td>0</td><td>2</td> <td>0DH</td> </tr> <tr> <td></td> <td>30H</td><td>34H</td> <td>30H</td><td>36H</td> <td>30H</td><td>31H</td> <td>31H</td><td>38H</td> <td>34H</td><td>36H</td> <td>34H</td><td>39H</td> <td>30H</td><td>32H</td> <td></td> </tr> <tr> <td></td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td></td> </tr> </tbody> </table>	STX	Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data		CR	02H	0	4	0	6	0	1	1	8	4	6	4	9	0	2	0DH		30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H			(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)								
	STX	Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data		CR																																																								
02H	0	4	0	6	0	1	1	8	4	6	4	9	0	2	0DH																																																									
	30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H																																																										
	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)																																																										
(format 15: GOT-F900 series microcomputer connection (format 2)) <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>STX</th> <th colspan="2">Year data</th> <th colspan="2">Month data</th> <th colspan="2">Day data</th> <th colspan="2">Hour data</th> <th colspan="2">Minute data</th> <th colspan="2">Second data</th> <th colspan="2">Day-of-week data</th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>0</td><td>4</td> <td>0</td><td>6</td> <td>0</td><td>1</td> <td>1</td><td>8</td> <td>4</td><td>6</td> <td>4</td><td>9</td> <td>0</td><td>2</td> <td></td> <td>D</td><td>0</td> </tr> <tr> <td></td> <td>30H</td><td>34H</td> <td>30H</td><td>36H</td> <td>30H</td><td>31H</td> <td>31H</td><td>38H</td> <td>34H</td><td>36H</td> <td>34H</td><td>39H</td> <td>30H</td><td>32H</td> <td>03H</td> <td>44H</td><td>30H</td> </tr> <tr> <td></td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td>(H)</td><td>(L)</td> <td></td> <td>(H)</td><td>(L)</td> </tr> </tbody> </table> <p style="text-align: center;">←—————→ Sum check is performed in this range.</p>	STX	Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data		ETX	Sum Check		02H	0	4	0	6	0	1	1	8	4	6	4	9	0	2		D	0		30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H	03H	44H	30H		(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)		(H)	(L)
STX	Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data		ETX	Sum Check																																																								
02H	0	4	0	6	0	1	1	8	4	6	4	9	0	2		D	0																																																							
	30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H	03H	44H	30H																																																							
	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)		(H)	(L)																																																							
Response message during faulty communication (GOT → host)	<table border="1"> <tr> <td>NAK</td> </tr> <tr> <td>15H</td> </tr> </table>	NAK	15H																																																																					
NAK																																																																								
15H																																																																								

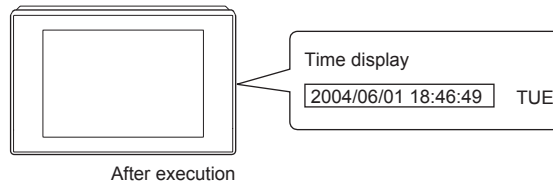- (6) Set clock data (5) command (w/out station No.), set clock data (F) command (w/station No.)
 The following shows an example of setting clock data of GOT at station No.27.
 (Assuming that the clock data is to be set to "2004, June 1, 18:46:49 Tuesday".)




Item	Message format																																																																																								
Request message (host → GOT)	(format 14: GOT-F900 series microcomputer connection (format 1))																																																																																								
	<table border="1"> <thead> <tr> <th>STX</th> <th>Com- mand</th> <th colspan="2">Station No.</th> <th colspan="2">Year data</th> <th colspan="2">Month data</th> <th colspan="2">Day Data</th> <th colspan="2">Hour data</th> <th colspan="2">Minute data</th> <th colspan="2">Second data</th> <th colspan="2">Day-of-week data</th> <th>CR</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>F</td> <td>2</td> <td>7</td> <td>0</td> <td>4</td> <td>0</td> <td>6</td> <td>0</td> <td>1</td> <td>1</td> <td>8</td> <td>4</td> <td>6</td> <td>4</td> <td>9</td> <td>0</td> <td>2</td> <td>0DH</td> </tr> <tr> <td></td> <td></td> <td>32H</td> <td>37H</td> <td>30H</td> <td>34H</td> <td>30H</td> <td>36H</td> <td>30H</td> <td>31H</td> <td>31H</td> <td>38H</td> <td>34H</td> <td>36H</td> <td>34H</td> <td>39H</td> <td>30H</td> <td>32H</td> <td></td> </tr> <tr> <td></td> <td></td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td></td> </tr> </tbody> </table>	STX	Com- mand	Station No.		Year data		Month data		Day Data		Hour data		Minute data		Second data		Day-of-week data		CR	02H	F	2	7	0	4	0	6	0	1	1	8	4	6	4	9	0	2	0DH			32H	37H	30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H				(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)													
	STX	Com- mand	Station No.		Year data		Month data		Day Data		Hour data		Minute data		Second data		Day-of-week data		CR																																																																						
02H	F	2	7	0	4	0	6	0	1	1	8	4	6	4	9	0	2	0DH																																																																							
		32H	37H	30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H																																																																								
		(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)																																																																								
(format 15: GOT-F900 series microcomputer connection (format 2))																																																																																									
	<table border="1"> <thead> <tr> <th>STX</th> <th>Com- mand</th> <th colspan="2">Station No.</th> <th></th> <th>ETX</th> <th colspan="2">Sum Check</th> </tr> </thead> <tbody> <tr> <td>02H</td> <td>F</td> <td>2</td> <td>7</td> <td>Following*1</td> <td>03H</td> <td>7</td> <td>F</td> </tr> <tr> <td></td> <td></td> <td>32H</td> <td>37H</td> <td></td> <td></td> <td>37H</td> <td>46H</td> </tr> <tr> <td></td> <td></td> <td>(H)</td> <td>(L)</td> <td></td> <td></td> <td>(H)</td> <td>(L)</td> </tr> </tbody> </table> <p style="text-align: center;">← Sum check is performed in this range. →</p> <p>*1</p> <table border="1"> <thead> <tr> <th colspan="2">Year data</th> <th colspan="2">Month data</th> <th colspan="2">Day data</th> <th colspan="2">Hour data</th> <th colspan="2">Minute data</th> <th colspan="2">Second data</th> <th colspan="2">Day-of-week data</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>4</td> <td>0</td> <td>6</td> <td>0</td> <td>1</td> <td>1</td> <td>8</td> <td>4</td> <td>6</td> <td>4</td> <td>9</td> <td>0</td> <td>2</td> </tr> <tr> <td>30H</td> <td>34H</td> <td>30H</td> <td>36H</td> <td>30H</td> <td>31H</td> <td>31H</td> <td>38H</td> <td>34H</td> <td>36H</td> <td>34H</td> <td>39H</td> <td>30H</td> <td>32H</td> </tr> <tr> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> <td>(H)</td> <td>(L)</td> </tr> </tbody> </table>	STX	Com- mand	Station No.			ETX	Sum Check		02H	F	2	7	Following*1	03H	7	F			32H	37H			37H	46H			(H)	(L)			(H)	(L)	Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data		0	4	0	6	0	1	1	8	4	6	4	9	0	2	30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)
STX	Com- mand	Station No.			ETX	Sum Check																																																																																			
02H	F	2	7	Following*1	03H	7	F																																																																																		
		32H	37H			37H	46H																																																																																		
		(H)	(L)			(H)	(L)																																																																																		
Year data		Month data		Day data		Hour data		Minute data		Second data		Day-of-week data																																																																													
0	4	0	6	0	1	1	8	4	6	4	9	0	2																																																																												
30H	34H	30H	36H	30H	31H	31H	38H	34H	36H	34H	39H	30H	32H																																																																												
(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)	(H)	(L)																																																																												
Response message during normal communication (GOT → host)	<table border="1"> <tr><td>ACK</td></tr> <tr><td>06H</td></tr> </table>	ACK	06H																																																																																						
ACK																																																																																									
06H																																																																																									
Response message during faulty communication (GOT → host)	<table border="1"> <tr><td>NAK</td></tr> <tr><td>15H</td></tr> </table>	NAK	15H																																																																																						
NAK																																																																																									
15H																																																																																									



When a wrong day of the week has been set by the clock data setting command
 If a wrong day of the week is set by the clock data setting commands, the clock data will differ from the time displayed on the utility.
 Example: When June 1, 2004 (Thursday) is set by the clock data setting command(the actual day of week is Tuesday), Tuesday (TUE) will be displayed on the utility time display.

- (7) In the case of interrupt outputs
 The following shows an example of an interrupt output when data has been written to interrupt output devices D13 and D14.
 (Assuming that "3139H" is written to D13 and "AA55H" to D14.)

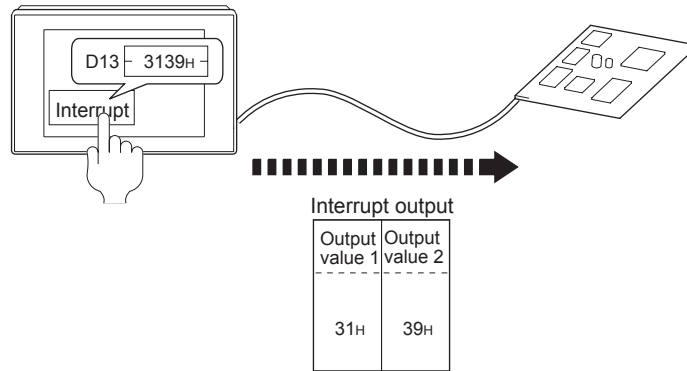Example: When the number of interrupt data bytes is 2



Item	Message format								
Interrupt output (GOT → host)	(1) When [Interrupt Data Byte] in "Communication Detail Settings" is set to "1 byte"								
	<table border="1"> <thead> <tr> <th>Output value 1</th> </tr> </thead> <tbody> <tr> <td>39H</td> </tr> </tbody> </table>	Output value 1	39H						
	Output value 1								
39H									
(2) When [Interrupt Data Byte] in "Communication Detail Settings" is set to "2 bytes"									
	<table border="1"> <thead> <tr> <th>Output value 1</th> <th>Output value 2</th> </tr> </thead> <tbody> <tr> <td>31H</td> <td>39H</td> </tr> </tbody> </table>	Output value 1	Output value 2	31H	39H				
Output value 1	Output value 2								
31H	39H								
	(3) When [Interrupt Data Byte] in "Communication Detail Settings" is set to "4 bytes"								
	<table border="1"> <thead> <tr> <th>Output value 1</th> <th>Output value 2</th> <th>Output value 3</th> <th>Output value 4</th> </tr> </thead> <tbody> <tr> <td>AAH</td> <td>55H</td> <td>31H</td> <td>39H</td> </tr> </tbody> </table>	Output value 1	Output value 2	Output value 3	Output value 4	AAH	55H	31H	39H
Output value 1	Output value 2	Output value 3	Output value 4						
AAH	55H	31H	39H						




Interrupt output

- To set so that interrupts are not issued, set SM52 (interrupt code output inhibit flag) ON. (☞ Section 23.4.6 SM devices)
- To issue interrupts, set the data length to "8 bits" at "Communication Detail Settings". (☞ Section 23.6.3 Setting communication interface (Communication settings))
- When "7 bits" is set, the MSB (8th bit) is ignored. (Example: FFH → 7FH)

4 Error code list

When faulty, the error code is stored in SD2.

For details of error code stored in SD2, the error contents, cause and measures, refer to the following:

 Section 23.4.5 ² Details and actions for errors (error codes) stored into SD2

When an error other than those to be stored in SD2 occurs, at faulty, only the NAK response is executed.

5 Precautions

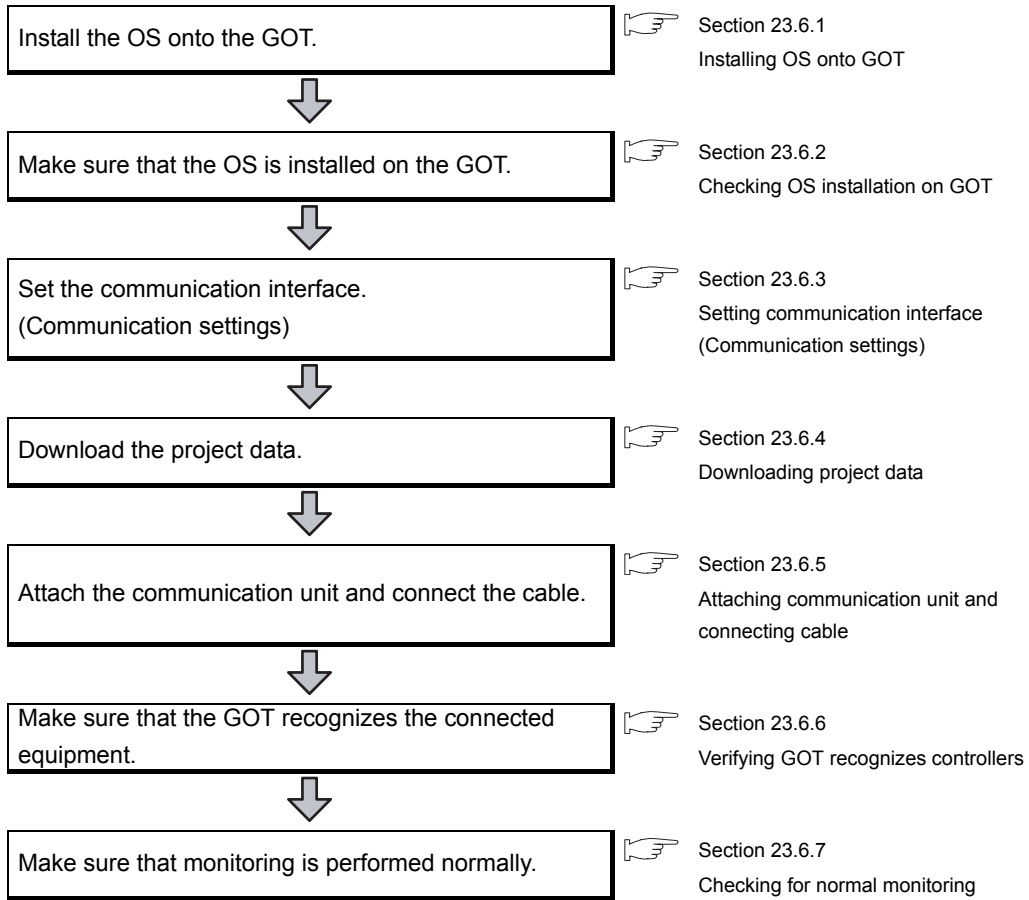
(1) Batch reading/writing crossing over different devices

When using the batch read (0, A) or batch write (1, B) command, do not batch read/write crossing over different devices.

This will cause an error response.


23.6 Preparatory Procedures for Monitoring


The following shows the procedures to be taken before monitoring and corresponding reference sections.



23.6.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

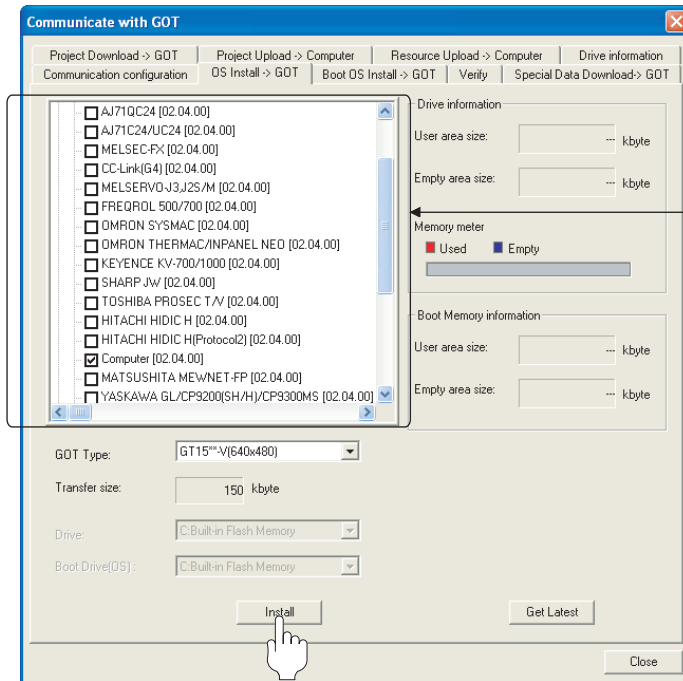 GT Designer2 Version □ Basic Operation/Data Transfer Manual



Check the following under the Communication driver.

- Computer

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

17

CONNECTION TO
FUJIFXA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23


MICROCOMPUTER
CONNECTION

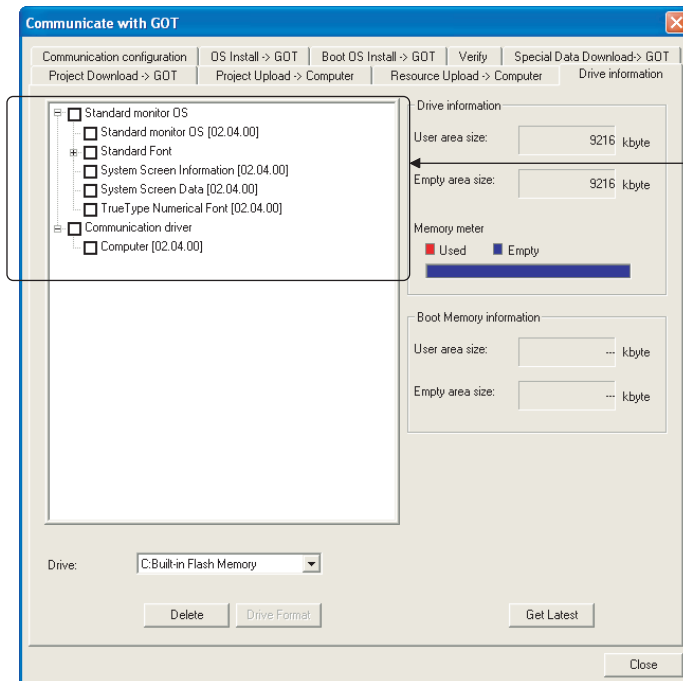
24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

23.6.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

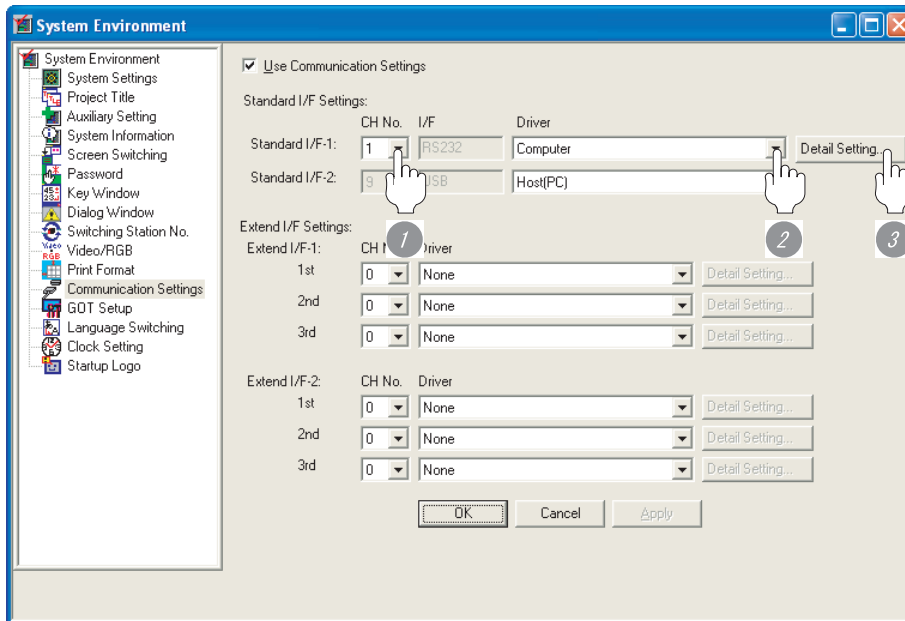
- 1) Standard monitor OS
- 2) Communication driver: Computer


23.6.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.



 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set "1" to the channel No. used.
- 2 Set the driver to "Computer".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 7bits>	7bits or 8bits
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit or 2 bits
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Even>	None Even Odd
Host Address	Specify the host address (station No. of the GOT to which the microcomputer is connected) in the connected network. <Default: 0>	0 to 31
Format	 Select the communication format. <Default: 1>	1 to 15
	 Select the communication format. <Default: 14>	1, 2, 14, 15
Interrupt Data Byte	Specify the number of bytes of interrupt data. <Default: 1byte>	1byte, 2byte, 4byte
Special Interrupt Code	Set whether or not to output the special interrupt code. <Default: No>	Yes or No
Control Method	Set this item when selecting the XON/XOFF control for the control method. <Default: No>	XON/XOFF, No

(1) Special interrupt code output

The following shows the compatibility between the special interrupt codes and the event types.

Special interrupt code (Hex)	Event type
20H	Output when the screens are switched according to the change in the switching device values assigned to the Base Screen* ¹ and Overlap Window* ¹ / ₂ . * ¹ Base Screen or Overlap Window 1/2 switches independently without being interlocked. (Example of output) When all the switching device values assigned to the Base Screen and Overlap Window1/2 are changed, 3 special interrupt codes are output.
21H	Output when Numerical/Ascii Input is completed
22H	Output when Recipe data transfer (read-out, write-in) is completed
23H	Output when Bar code data has been imported into GOT

(2) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT □ User's Manual

(3) Precedence in communication settings


When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

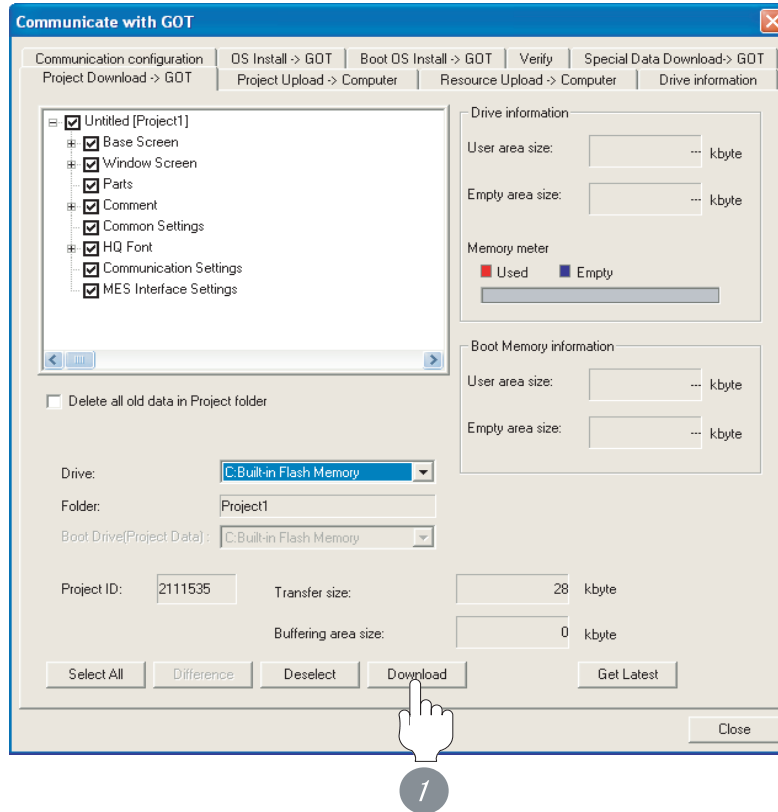
(4)

23.6.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


23.6.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

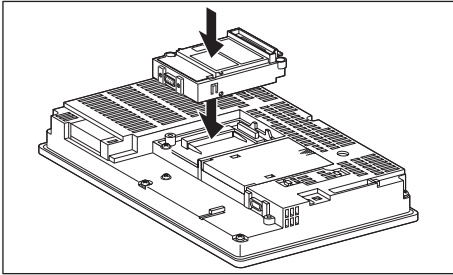1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

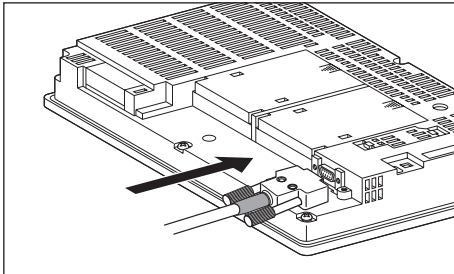
 GT15 Serial Communication Unit User's Manual

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

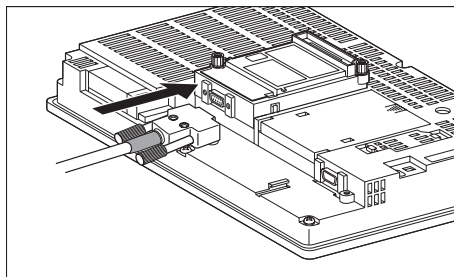- connection to the RS-232 communication unit




- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

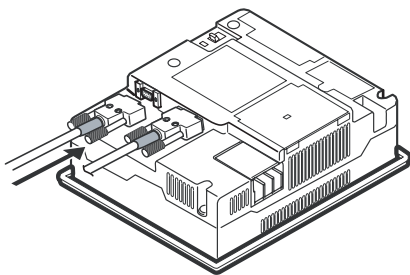(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

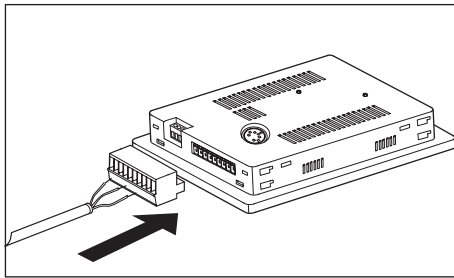(c) For the GT10 (built-in RS-232 interface)



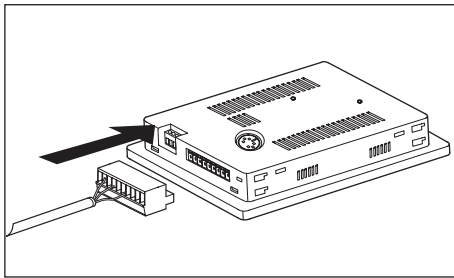- 1 Connect the RS-232 cable to the terminal block packed together with the GOT.




- 2 Connect the terminal block to the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

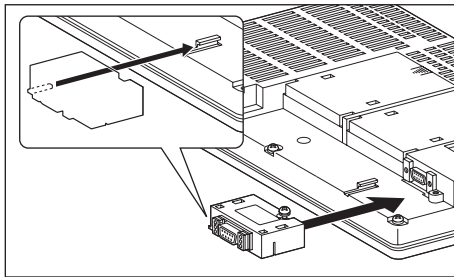- connection to the RS-232 interface




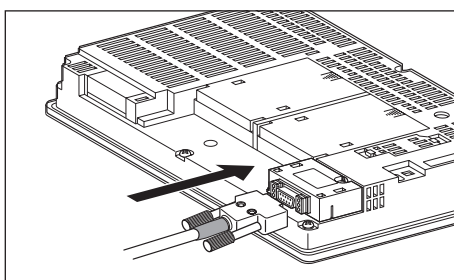- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

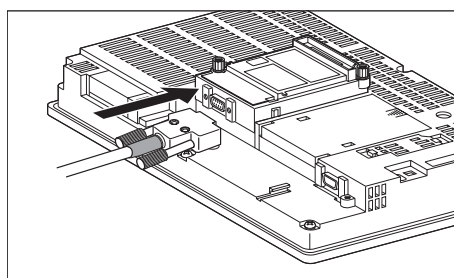- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



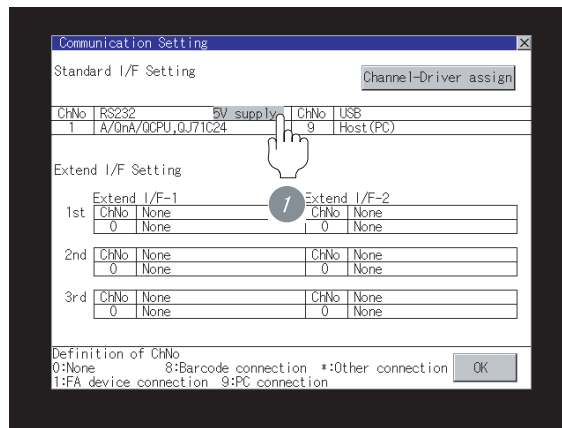
When using the RS-422 conversion unit

On "Communication settings" on the GOT utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the RS-422 conversion unit and the GOT utility, refer to the following manual:


GT15 Serial Communication Unit User's Manual

GT □ User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to "YES".

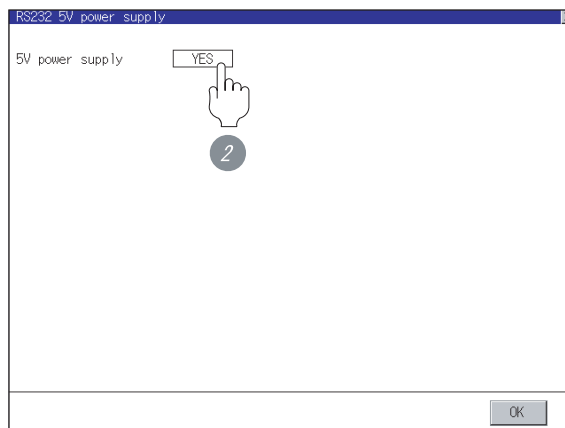


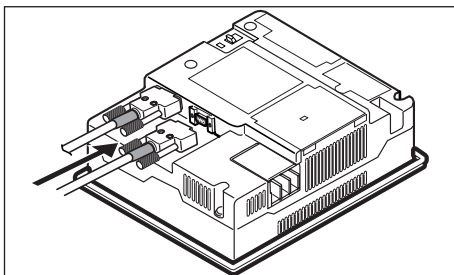(b) In the case of the GT11




1 Connect the RS-422 cable to the RS-422 interface on the GOT.

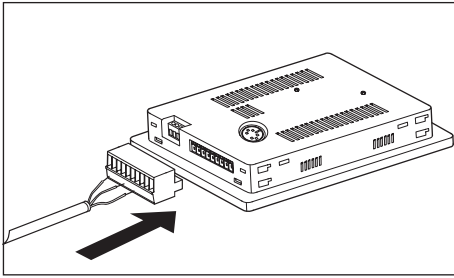(c) For the GT10 (built-in RS-422 interface)



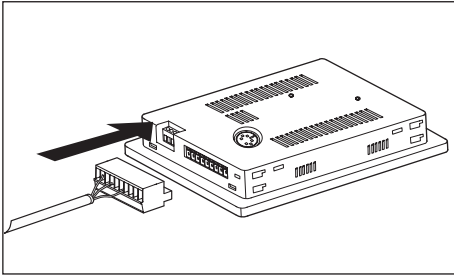- 1 Connect the RS-422 cable to the terminal block packed together with the GOT.



- 2 Connect the terminal block to the GOT.

17

CONNECTION TO
FUJIFXA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23

MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

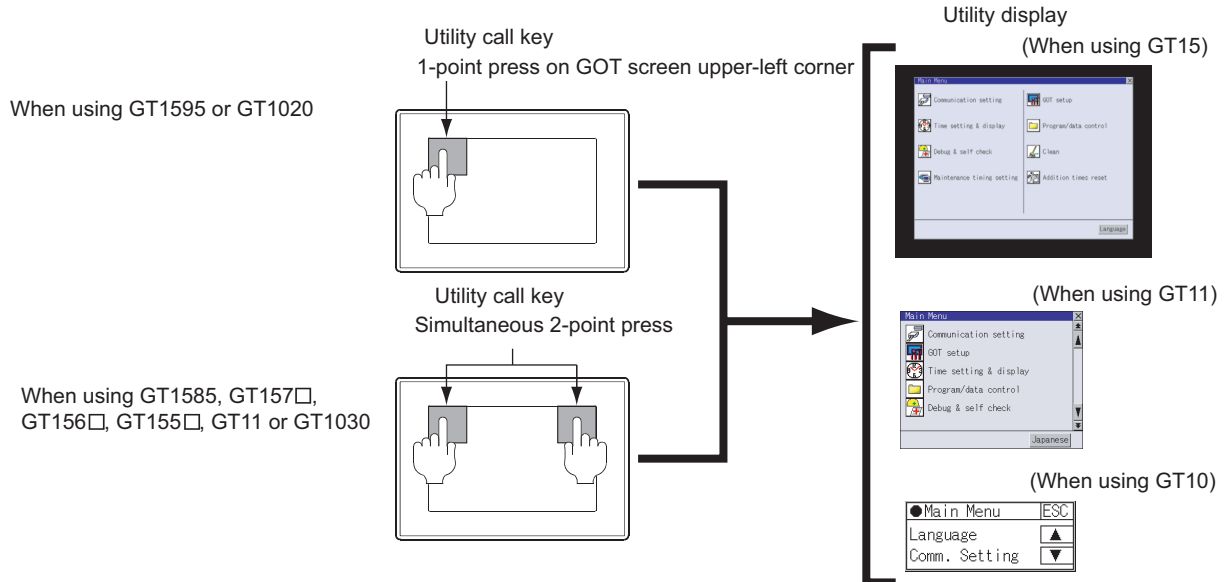
23.6.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

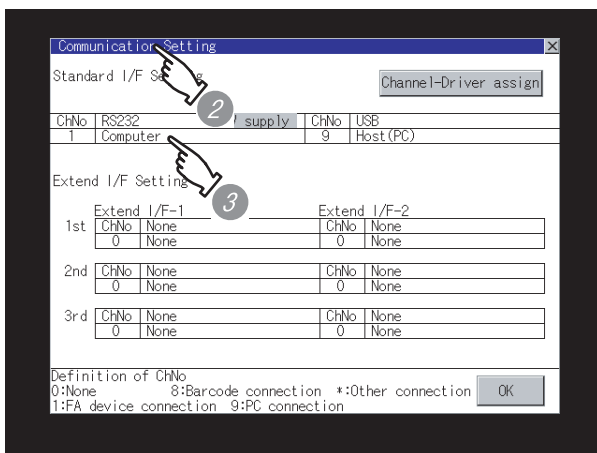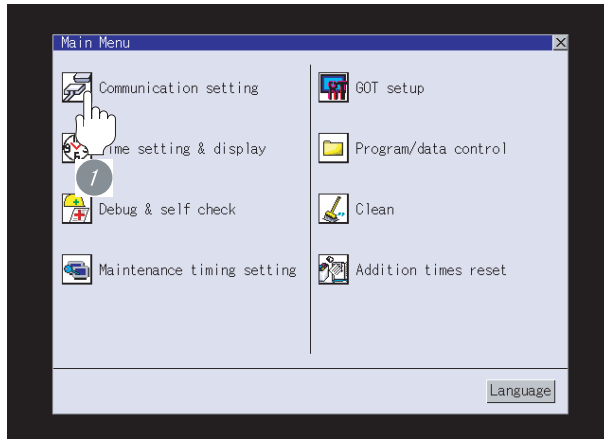☞ GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver: Computer

4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 23.6 Preparatory Procedures for Monitoring

Point

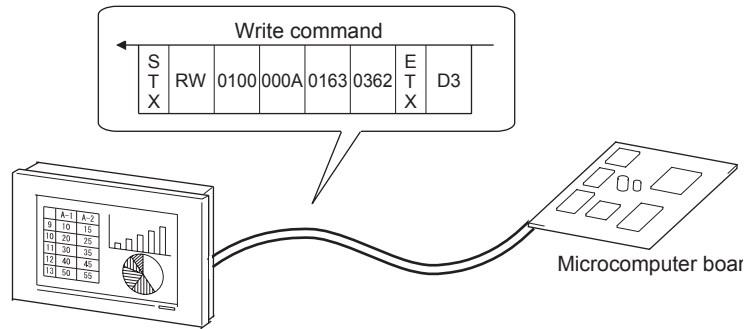
- (1) For GT15, GT11
 - (a) Communication interface setting by the Utility
 The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
 For details on the Utility, refer to the following manual.
 ☞ GT15 User's Manual, GT11 User's Manual
 - (b) Precedence in communication settings
 When settings are made by GT Designer 2 or the Utility, the latest setting is effective.
- (2) For GT10
 - (a) Communication interface setting by the Utility
 Although the communication interface setting can be checked, it cannot be changed.
 For details on the Utility, refer to the following manual.
 ☞ GT10 User's Manual
 - (b) Communication settings
 Communication settings can be changed on only GT Designer2.

23.6.7 Checking for normal monitoring

1 Write data to virtual devices inside GOT.

Send a message from the host to the GOT, and confirm that the values are stored in the virtual devices inside the GOT.

(☞ Section 23.7 System Configuration Examples)




2 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

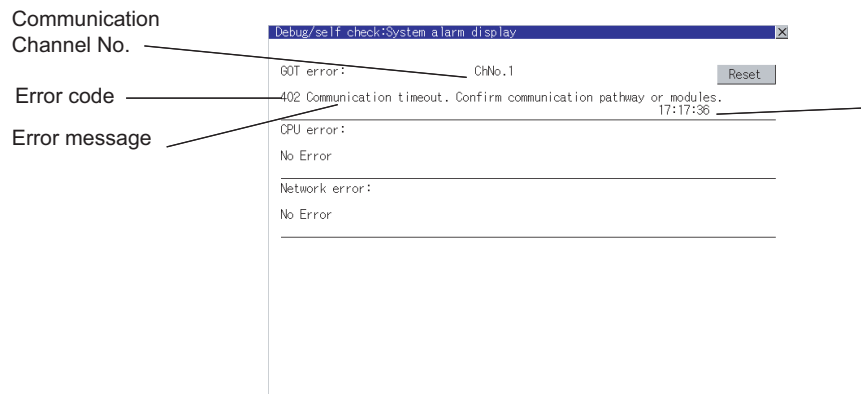☞ GT□ User's Manual (When using GT15)



Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

☞ GT Designer2 Version □ Screen Design Manual



3 Communication monitoring function(for GT10)

The communication monitoring is a function that checks whether the microcomputer can communicate with the GOT.

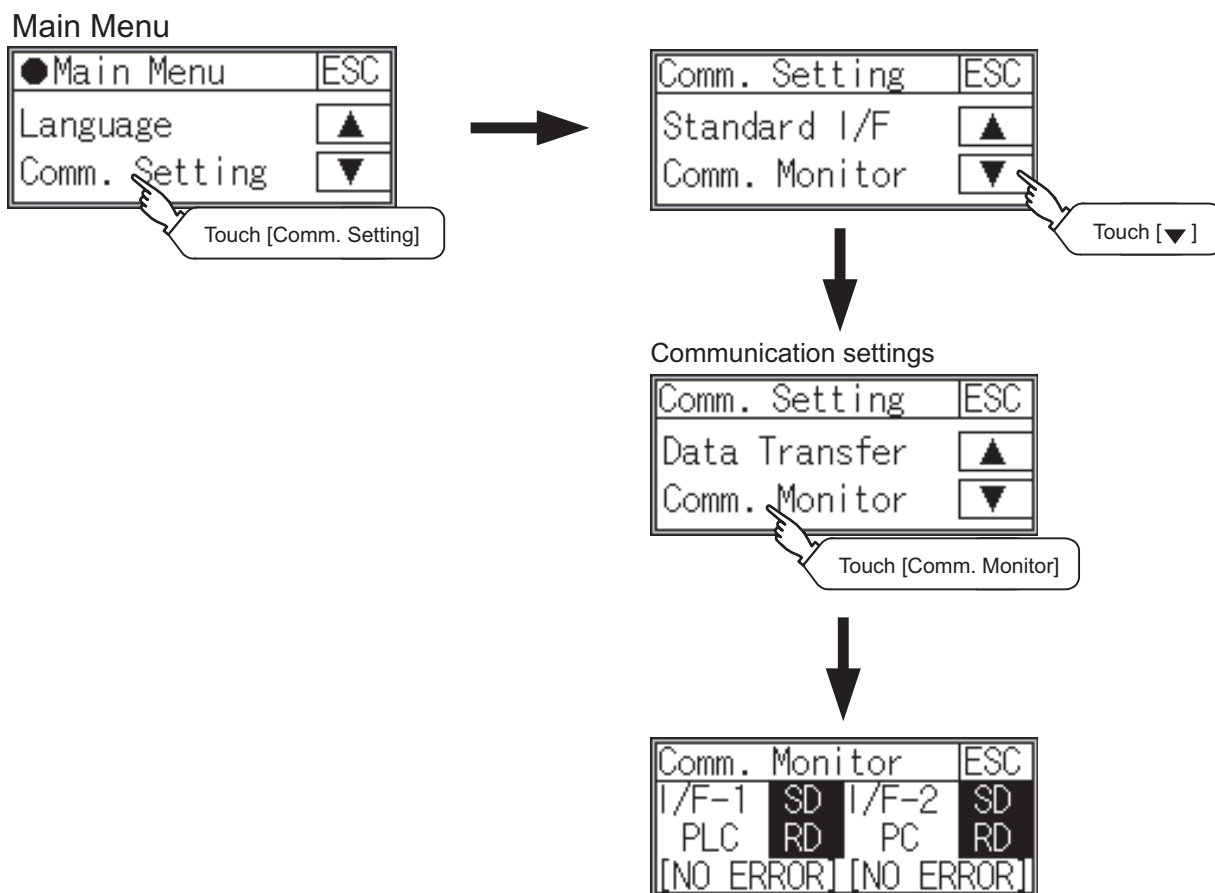
If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the communication monitoring function screen by [Main Menu] → [Comm. Setting] → [Comm. Monitor].

For details on the communication monitoring function, refer to the following manual:

👉 GT10 User's Manual

(Operation of communication monitoring function screen)




All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

23.7 System Configuration Examples

The following shows a system configuration example in the case of the microcomputer connection.

1 System Configuration

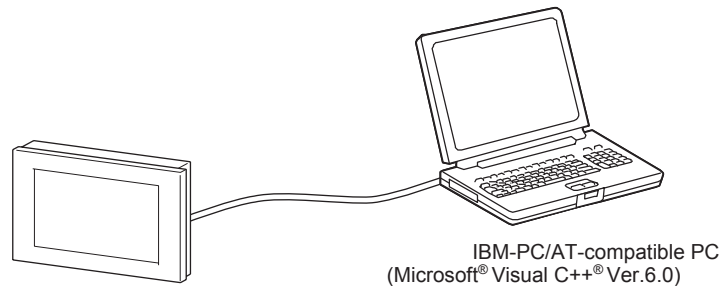The system configuration example illustrated below is explained in this section.



2 Communication settings on GOT side and monitor screen settings

(1) Transmission settings

Set the transmission settings of the GOT.

The transmission settings in the microcomputer connection are made at "Communication Details Settings" on GT Designer2

☞ Section 23.6.3 Setting communication interface (Communication settings)


Setting item	Setting
Transmission speed	38400bps
Data length	8 bits
Stop bit	1 bit
Parity	Even
Interrupt Data Byte	1 byte
Host Address (0 to 31)	0
Format	1

(2) Monitor screen settings


The following shows the monitor screen settings in this system configuration example.

(a) Common settings

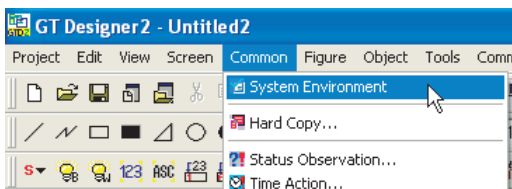Set D20 to the screen switching device (base screen).



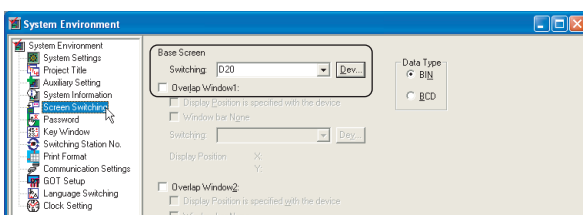
1 Select [Common] → [System Environment] on GT Designer2, and display the [System Environment].



2 Set D20 to the screen switching device (base screen).


- (b) Monitor screen image
Create the following screens by GT Designer2.

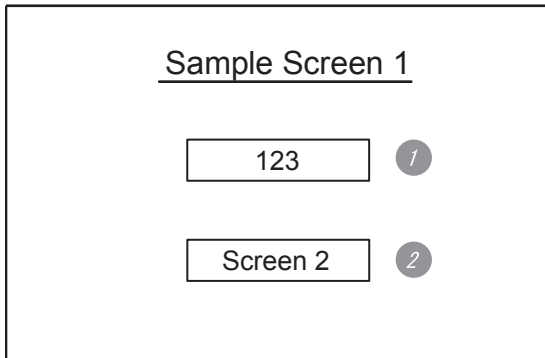Base screen 1



- 1 Numerical value display function
By setting this with the numerical value display function, the device value of D21 can be monitored. The device value is incremented only while "Sample Screen 1" is displayed.
- 2 Touch switch 1
This is the screen switching switch to "Sample Screen 2". Touching this changes the base screen to "Sample Screen 2".

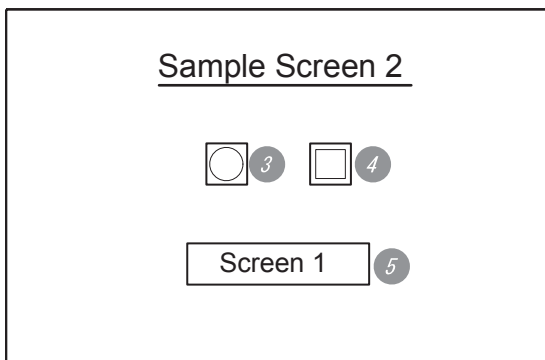Base screen 2



- 3 Lamp display function
The device status of D22.b0 is displayed as a lamp.
- 4 Touch switch 2
This is an alternate switch for changing the state of D22.b0.
- 5 Touch switch 3
This is the screen switching switch to "Sample Screen 1". Touching this changes the base screen to "Sample Screen 1".

Numerical value display function

No.	Basic setting	Display settings		
	Device	Display format	Display size	Number of display digits
1	D21, unsigned binary, 16 bits	Unsigned 16 bits	Arbitrary	4

Touch switch function

No.	Basic setting	Display setting	Operation setting				
			Action	Switch destination	Device	Data format	Action type
2	Arbitrary	Arbitrary	Base switching	Fixed value 2	—	—	—
			Word	—	D13	Signed binary	Fixed value 01
4	Arbitrary	Arbitrary	Bit	—	D22.b0	—	Bit ALT
5	Arbitrary	Arbitrary	Base switching	Fixed value 1	—	—	—
			Word	—	D13	Signed binary	Fixed value 255

Lamp display function

No.	Basic setting		Display method (bit)	
	Device	Graphic	ON	OFF
3	D22.b0, bit	Basic figure	Arbitrary	Arbitrary

3 Host side sample program

The sample program (written in C) on the host side is included in GT Designer2 and installed when GT Designer2 is installed.

4 Outline of system operation

The following describes the processing on the host side, display/processing on the GOT side, and data transfer packets.

Processing	Processing on host side		Packet used for data transfer	Display/Processing on GOT side
Initial processing	Opens the port.		—	—
	Writes "1" to the screen switching device (D20).		Screen 1 batch switchingWrite packet*1	Displays base screen 1.
	Receives a response from the GOT.		—	—
	Judges whether or not there is an error in the response from the GOT.		—	—
	Writes an initial value to device (D21).		Batch numerical value displayWrite packet*2	Displays "0" on the numerical value display on base screen 1.
Reception of response/ interrupt from GOT	When receiving a response to writing to device (D21) from the GOT	Issues the current value acquisition request to device (D21).	Batch numerical value displayRead packet*3	Increments the numerical value displayed on base screen 1. (The host side repeats the processing on the left as long as base screen 1 is displayed.)
	When receiving a response to reading of device (D21) from the GOT	Creates the next device value (D21).	—	
		Calculates the sum check of the send packet.	—	
	When receiving an interrupt requesting the base screen switching from 1 to 2	Issues the update request of device (D21).		Batch numerical value display Write packet*2
		Sets the state of the base screen to base screen 2.	Interrupt receive packet*6	Touch touch switch 1 to switch to base screen 2. Notify the host by an interrupt.
When receiving an interrupt requesting the base screen switching from 2 to 1	Sets the state of the base screen to base screen 1.	Interrupt receive packet*6	Touch touch switch 3 to switch to base screen 1. Notify the host by an interrupt.	
End processing (only when receiving an error response)	Close the port.		—	—

*1 Displays the send packet structure of the screen 1 batch switching write packet.

STX	Command		Address				Number of points		Data 1 (D20)				ETX	Sum Check	
02H	W	D	0	0	2	0	0	1	0	0	0	1	03H	8	2
	57H	44H	30H	30H	32H	30H	30H	31H	30H	30H	30H	31H		38H	32H
	(H)	(L)	(H)	-	-	(L)	(H)	(L)	(H)	-	-	(L)		(H)	(L)

Sum check is performed in this range.

*2 Displays the send packet structure of the numerical value display batch write packet.

STX	Command		Address				Number of points		Data 1 (D21)				ETX	Sum check	
02H	W	D	0	0	2	1	0	1	(any value)				03H	(Changes according to data section.)	
	57H	44H	30H	30H	32H	31H	30H	31H	(H) - - (L)					(H)	(L)
	(H)	(L)	(H)	-	-	(L)	(H)	(L)	(H) - - (L)					(H)	(L)

Sum check is performed in this range.

*3 Displays the send packet structure of the numerical value display batch read packet.

STX	Command		Address				Number of points		ETX	Sum Check	
02H	R	D	0	0	2	1	0	1		B	D
	52H	44H	30H	30H	32H	31H	30H	31H	03H	42H	44H
	(H)	(L)	(H)	-	-	(L)	(H)	(L)		(H)	(L)

Sum check is performed in this range.

*4 Displays the receive packet structure of the batch write response packet.

When normally operated	When an error occurred
ACK	NAK
06H	15H

*5 Displays the receive packet structure of the batch read response packet.

When normally operated	When an error occurred			
STX	Data	ETX	Sum check	NAK
02H	(any data)	03H	(Changes according to data section.)	15H
	(H) - - (L)	(H)	(L)	

Sum check is performed in this range.

*6 Displays the receive packet structure of the interrupt receive packet.

Output value

Interrupt data (value of D13)

17

CONNECTION TO
FUJIFA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23

MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER






23.8 Precautions

1 GOT clock function

The settings of "time adjusting" or "time broad cast" by GOT clock control will be disabled. Use the dedicated commands to set or read out the clock data of microcomputer.

23.9 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
  MICROCOMPUTER CONNECTION	Supporting the followings <ul style="list-style-type: none"> • XON/XOFF control • special interrupt code 	2.32J	Communication driver Computer [03.00.**]
 MICROCOMPUTER CONNECTION	Supporting the connection to GT1020	2.43V	Communication driver Computer [01.00.**]
 MICROCOMPUTER CONNECTION	Supporting the communication format 1, 2	2.47Z	Communication driver Computer [01.01.**]
 MICROCOMPUTER CONNECTION	Supporting the connection to GT1030	2.58L	Standard Monitor OS [01.03.**] Communication driver Computer [01.01.**]

17

CONNECTION TO
FUJIFA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23

MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER



TEMPERATURE CONTROLLER CONNECTIONS

Chapter 24 CONNECTION TO OMRON TEMPERATURE CONTROLLER

Chapter 25 CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER

Chapter 26 CONNECTION TO CHINO CONTROLLER

Chapter 27 CONNECTION TO FUJI SYS TEMPERATURE CONTROLLER

(Continued to next page)

**Chapter 28 CONNECTION TO YAMATAKE
TEMPERATURE CONTROLLER**

**Chapter 29 CONNECTION TO YOKOGAWA
TEMPERATURE CONTROLLER**

**Chapter 30 CONNECTION TO RKC TEMPERATURE
CONTROLLER**

CONNECTION TO OMRON TEMPERATURE CONTROLLER



24.1 System configuration page 24-2

This section describes the equipment and cables needed when connecting a GOT to a OMRON temperature controller. Select a system suitable for your application.

24.2 Connection Cable. page 24-8

This section describes the specifications of the cables needed when connecting a GOT to a OMRON temperature controller. Check the specifications of the connection cables.

24.3 Preparatory Procedures for Monitoring page 24-14

This section provides the procedures to be followed before performing monitoring in connection to a OMRON temperature controller. The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

24.4 Temperature Controller Side Setting page 24-28

The OMRON temperature controller side settings for GOT connection are explained. When checking the PLC side settings, refer to this section.

24.5 Precautions page 24-32

This section describes the precautions about temperature controller connection. Refer to this section without fail before starting temperature controller connection.

24.6 List of Functions Added by Version Upgrade page 24-33

This section describes the functions added by version upgrade of GT Designer2 or OS.

24.1 System configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.

24.1.1 Connecting E5AN, E5EN









1 System configuration and connection conditions


Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	1	Between temperature controller and GOT 15m or less	
1	32 (max.)	Between interface converter and GOT 15m or less	
		Between temperature controller and interface converter 500m or less	
1	31 (max.)	Between temperature controller and GOT 500m or less	

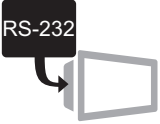2 System equipment

(1) GOT

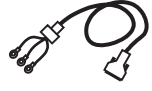




Image	No.	Name	Model name
	①	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	②	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-TE 

(2) Temperature controller

Image	No.	Name	Model name
	③	Interface converter	K3SC-10

③ is a product manufactured by OMRON. For details of this product, contact OMRON.

(3) Cable

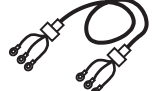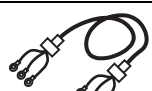Image	No.	Name	Model name
	④	RS-232 cable 1) • Between temperature controller and GOT	(To be prepared by the user.  Section 24.2 Connection Cable)
	⑤	RS-232 cable 2) • Between interface converter③ and GOT	
	⑥	RS-485 cable 1) • Between temperature controller and interface converter	
	⑦	RS-485 cable 2) • Between temperature controller and GOT	

17

CONNECTION TO
FUJIFA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC


23

MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

24.1.2 Connecting to E5CN, E5GN

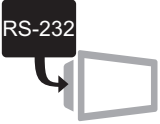

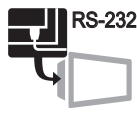





1 System configuration and connection conditions


Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	32 (max.)	Between interface converter and GOT 15m or less	<p>32 (max.)</p> <p>3 Interface converter</p> <p>4 RS-232 cable 2)</p> <p>5 RS-485 cable 1)</p> <p>MAX500m</p> <p>MAX15m</p> <p>1</p>
		Between temperature controller and interface converter 500m or less	
1	31 (max.)	Between temperature controller and GOT 500m or less	<p>31 (max.)</p> <p>6 RS-485 cable 2)</p> <p>MAX500m</p> <p>2</p>

2 System equipment

(1) GOT

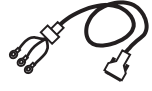

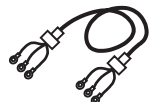
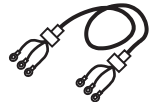
Image	No.	Name	Model name
	①	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	②	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-TE 

(2) Temperature controller

Image	No.	Name	Model name
	③	Interface converter	K3SC-10

③ is a product manufactured by OMRON. For details of this product, contact OMRON.

(3) Cable

Image	No.	Name	Model name
	④	RS-232 cable 2) • Between interface converter ③ and GOT	(To be prepared by the user.  Section 24.2 Connection Cable)
	⑤	RS-485 cable 1) • Between interface converter ③ and temperature controller	
	⑥	RS-485 cable 2) • Between temperature controller and GOT	

17

CONNECTION TO
FUJIFXA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC


23

MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

24.1.3 Connecting to E5ZN

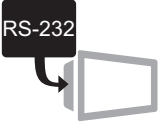

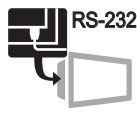





1 System configuration and connection conditions


Connection conditions			System configuration
Number of GOTs	Number of Temperature controller connection	Distance	
1	16 (max.)	Between interface converter and GOT 15m or less	<p>16 (max.)</p> <p>3 Interface converter</p> <p>1</p> <p>5 RS-485 cable 1)</p> <p>4 RS-232 cable 2)</p> <p>MAX500m</p> <p>MAX15m</p>
		Between temperature controller and interface converter 500m or less	
1	15 (max.)	Between temperature controller and GOT 500m or less	<p>15 (max.)</p> <p>2</p> <p>6 RS-485 cable 2)</p> <p>MAX500m</p>

2 System equipment

(1) GOT





Image	No.	Name	Model name
	①	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	②	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-TE 

(2) Temperature controller

Image	No.	Name	Model name
	③	Interface converter	K3SC-10

③ is a product manufactured by OMRON. For details of this product, contact OMRON.

(3) Cable

Image	No.	Name	Model name
	④	RS-232 cable 2) • Between interface converter ③ and GOT	(To be prepared by the user.  Section 24.2 Connection Cable)
	⑤	RS-485 cable 1) • Between interface converter ③ and temperature controller	
	⑥	RS-485 cable 2) • Between temperature controller and GOT	

17

CONNECTION TO
FUJIFXA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23

MICROCOMPUTER
CONNECTION

24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

24.2 Connection Cable

The RS-232 cable or RS-422 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.


Model name		Connection cable	
		RS-232 cable (Refer to Section24.2.1)	RS-422 cable (Refer to Section24.2.2)
Temperature controller	E5AN	RS-232 cable1), RS-232 cable2)	RS-485 cable1), RS-485 cable2)
	E5EN	RS-232 cable1), RS-232 cable2)	RS-485 cable1), RS-485 cable2)
	E5CN	RS-232 cable2)	RS-485 cable1), RS-485 cable2)
	E5GN	RS-232 cable2)	RS-485 cable1), RS-485 cable2)
	E5ZN	RS-232 cable2)	RS-485 cable1), RS-485 cable2)
Interface converter	K3SC-10	RS-232 cable2)	RS-485 cable1)

24.2.1 RS-232 cable


The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a temperature controller.

1 Connection diagram

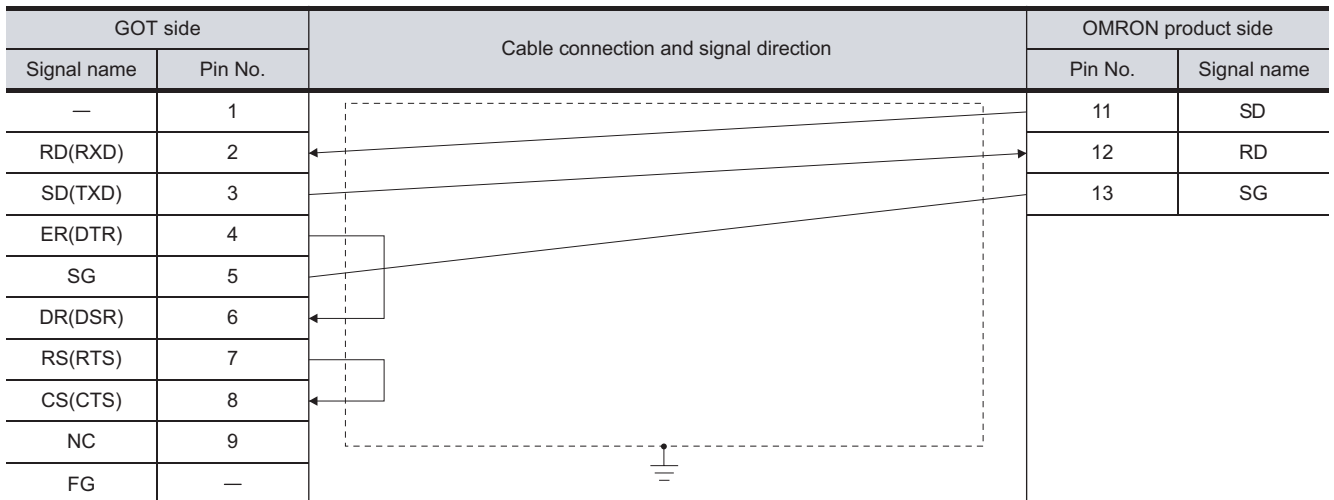(1) RS-232 cable 1)



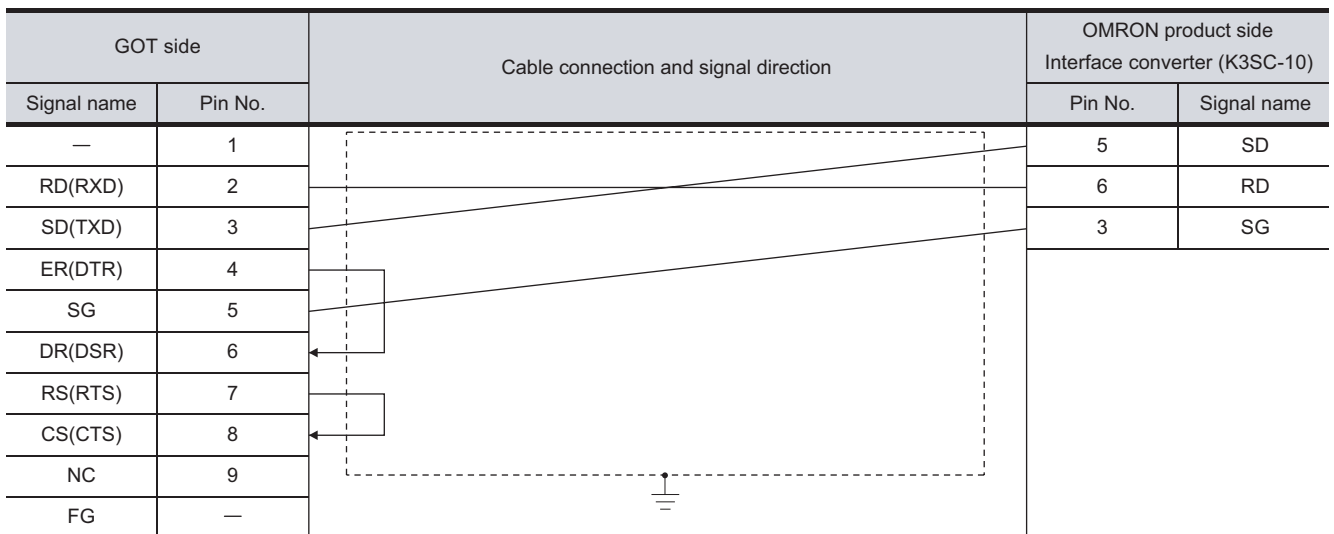(2) RS-232 cable 2)



2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	DDK Ltd
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) OMRON temperature controller side connector

Use the connector compatible with the OMRON temperature controller side.

For details, refer to the following manual.

 User's Manual for the OMRON temperature controller

3 Precautions when preparing cable


The length of the RS-232 cable must be 15m or less.

24.2.2 RS-485 cable

The following shows the connection diagrams and connector specifications of the RS-485 cable used for connecting the GOT to a temperature controller.

1 Connection diagram

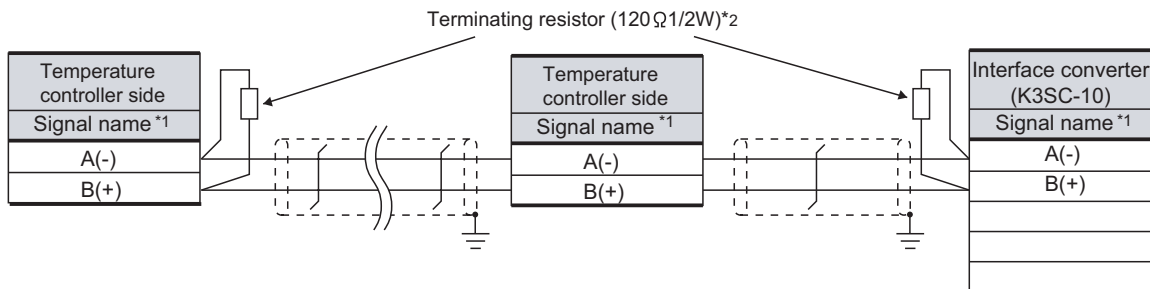(1) RS-485 cable1




*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.

Signal name	Model of temperature controller			Interface converter (K3SC-10)
	E5AN E5EN E5CN	E5GN	E5ZN	
	Pin No.	Pin No.	Pin No.	Pin No.
A(-)	12	6	24	8
B(+)	11	5	23	11

*2 Terminating resistor should be provided for a temperature controller and an interface converter which will be terminals.

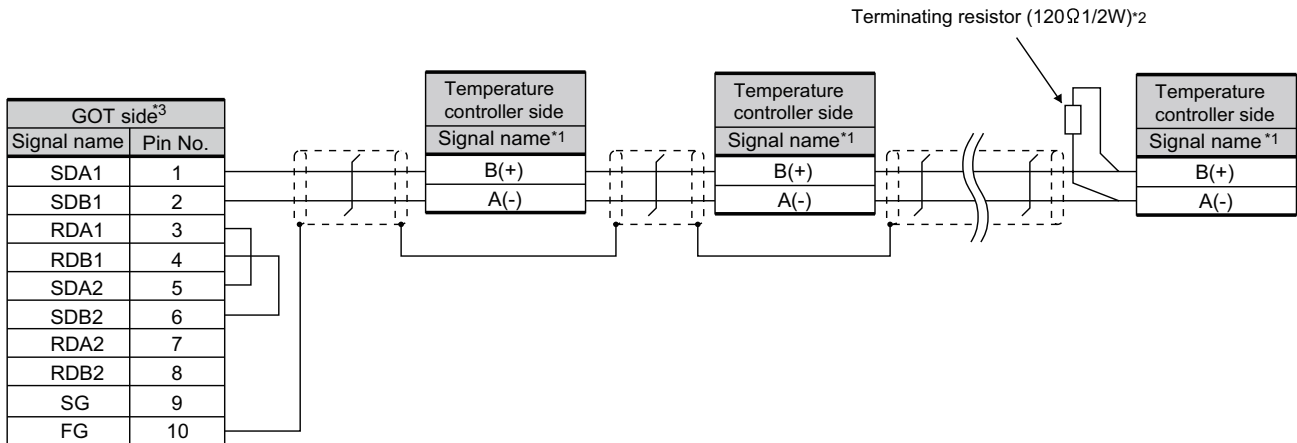(2) RS-485 cable 2)



*1 Pin No. of temperature controller differs depending on model. Refer to the following table.

Signal name	Model of temperature controller		
	E5AN	E5GN	E5ZN
	E5EN		
	E5CN		
	Pin No.	Pin No.	Pin No.
B(+)	11	5	23
A(-)	12	6	24

*2 Terminating resistor should be provided for a temperature controller which will be a terminal.

*3 Set the terminating resistor of GOT side, which will be a terminal, to "Enable".

 **4** Connecting terminating resistors

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-485 cable, use the terminal block packed together with the RS-422/485 communication unit.

GOT	Connector model	Connector type	Manufacturer
GT15-RS4-TE	SL-SMT3.5/10/90F BOX	—	Weidmuller interconnections inc.

(2) OMRON temperature controller side connector

Use the connector compatible with the OMRON temperature controller side module.

For details, refer to the following manual.

 User's Manual for the OMRON temperature controller


3 Precaution when preparing a cable

- (1) The length of the RS-485 cable must be 500m or less.

4 Connecting terminating resistors

(1) OMRON temperature controller

Connect the terminating resistor on the OMRON temperature controller side when connecting a GOT to a OMRON temperature controller.

 Section 24.4 Temperature Controller Side Setting


(2) GOT

Set the terminating resistor of RS-422/485 communication unit using the terminating resistor setting switch.

Terminating resistor*1	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF



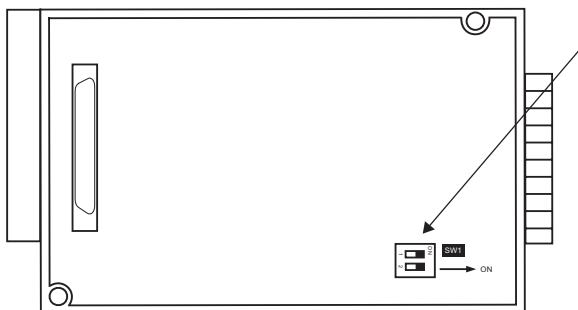*1 The default setting is "Enable".




Terminating resistor setting switch

Rear View of RS-422/485 communication unit

24.3 Preparatory Procedures for Monitoring

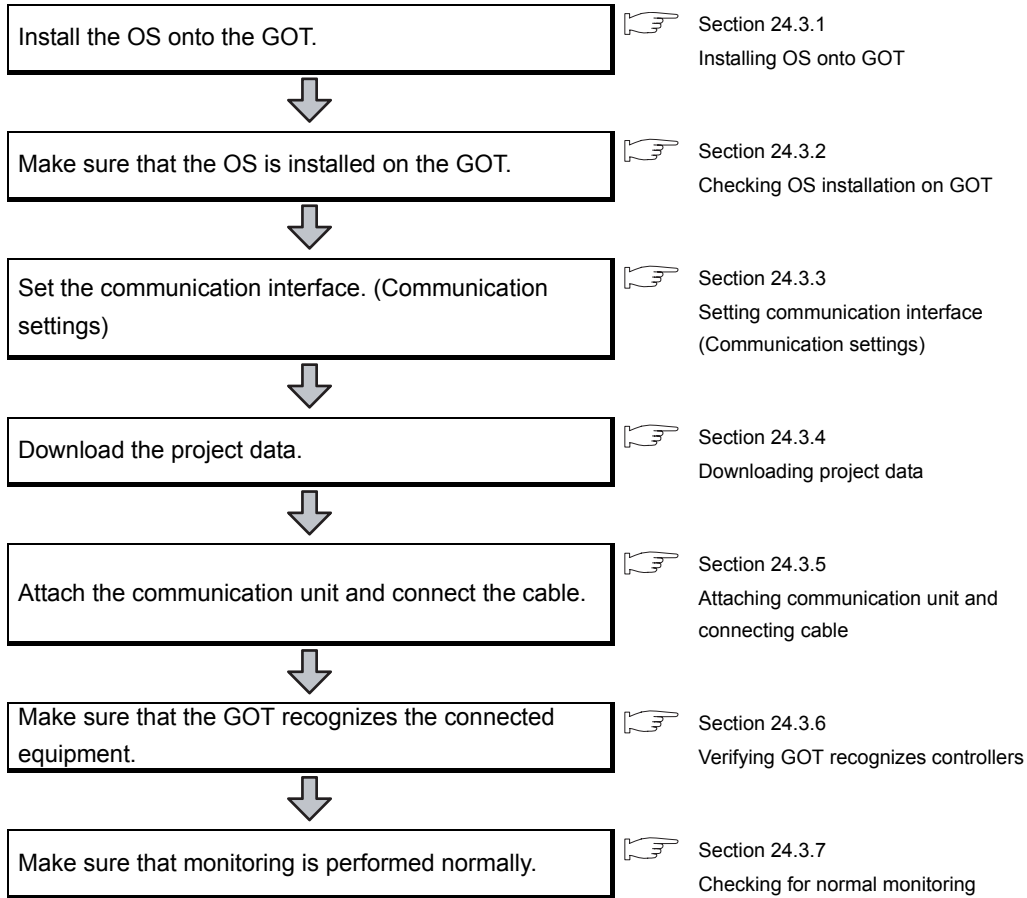The following shows the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the temperature controller side setting


This section explains the GOT side setting.

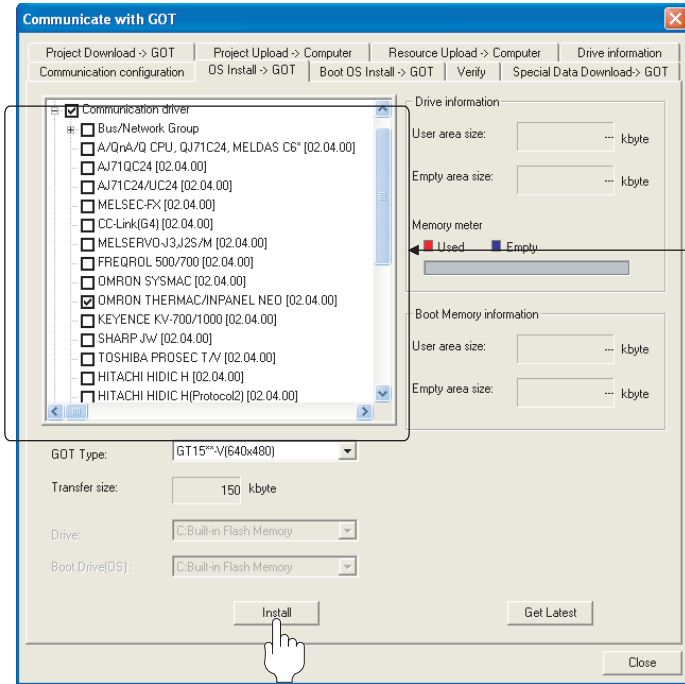
When confirming the temperature controller side setting, refer to the following.

☞ Section 24.4 Temperature Controller Side Setting

24.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



Check the following under the Communication driver.
• OMRON THERMAC/INPANEL NEO

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

17

CONNECTION TO
FUJIFXA PLC

18

CONNECTION TO
MATSUSHITA PLC

19

CONNECTION TO
YASKAWA PLC

20

CONNECTION TO
YOKOGAWA PLC

21

CONNECTION TO
ALLEN-BRADLEY PLC

22

CONNECTION TO
SIEMENS PLC

23


MICROCOMPUTER
CONNECTION

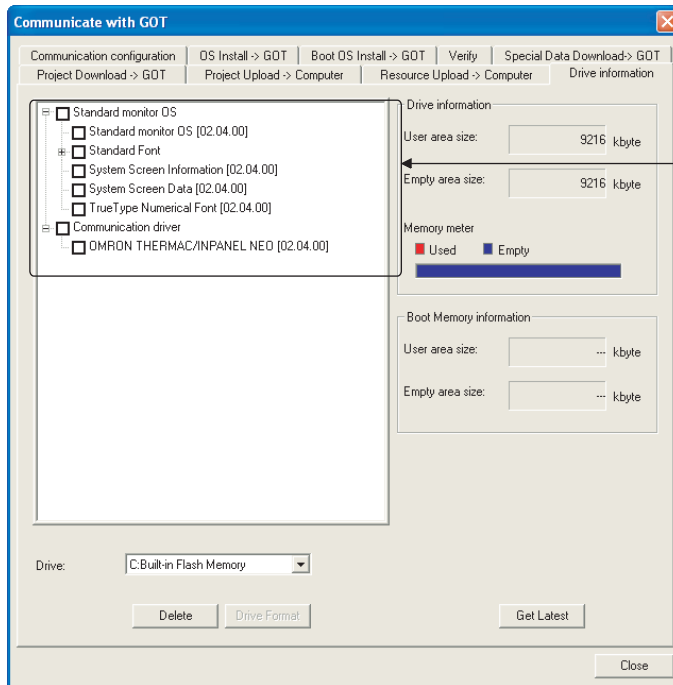
24

CONNECTION TO OMRON
TEMPERATURE
CONTROLLER

24.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

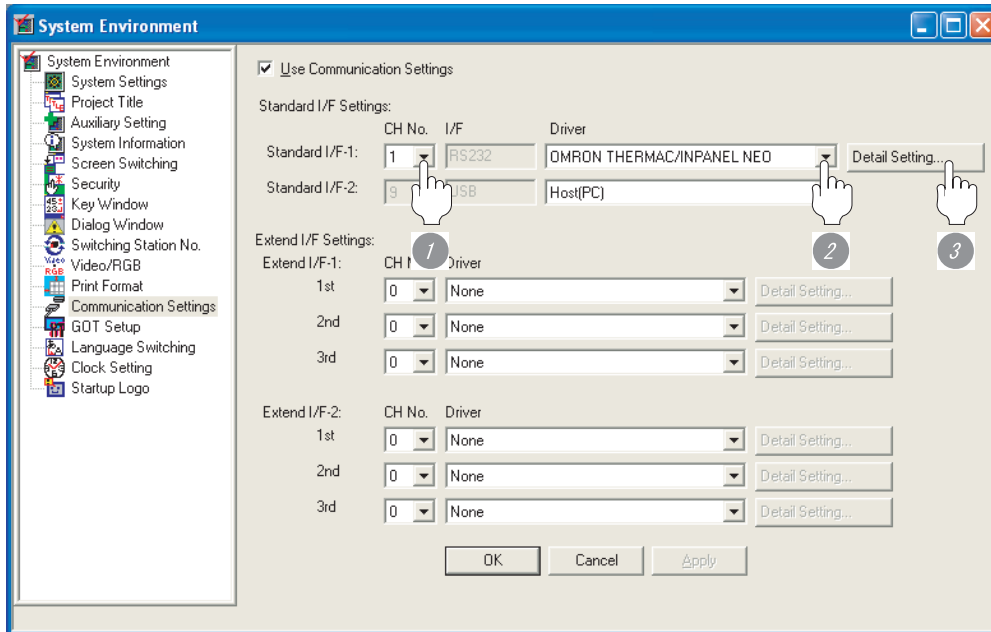
- 1) Standard monitor OS
- 2) Communication driver: OMRON THERMAC/INPANEL NEO

24.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "OMRON THERMAC/INPANEL NEO".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Communication Detail Settings

Driver: OMRON THERMAC/INPANEL NEO

Transmission Speed: 9600 (BPS)

Data Bit: 7 bit

Stop Bit: 2 bit

Parity: Even

Sum Check:

Sum Check Type:

Retry: 0 (Times)

Startup Time: 3 (Sec)

Timeout Time: 3 (Sec)

Adapter Address: 0

Host Address: 0

Delay Time: 2 (ms)

Format: 1

Interrupt Data Byte: 1 (Byte)

Station No. Selection:

Special Interrupt Code:

Control Method:

OK Cancel

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	9600bps,19200bps,38400bps,57600bps,115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 7bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 2bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Even>	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 2ms>	0 to 300 ms
Format	Select the communication format. <Default: 1> format 1: only continuous access format 2: continuous and random access	1 / 2



(1) Delay time
When connecting to the temperature controller E5ZN, set the delay time to 5ms or more.

(2) Format setting
The compatible format of temperature controller differs depending on models.

Model	Compatible format
E5AN, E5CN, E5EN, E5GN	Format 1 only
E5ZN	Format 1 or Format 2

For the continuous access and random access of the temperature controller, refer to the following manual.

User's Manual for the OMRON temperature controller

(3) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.


GT User's Manual

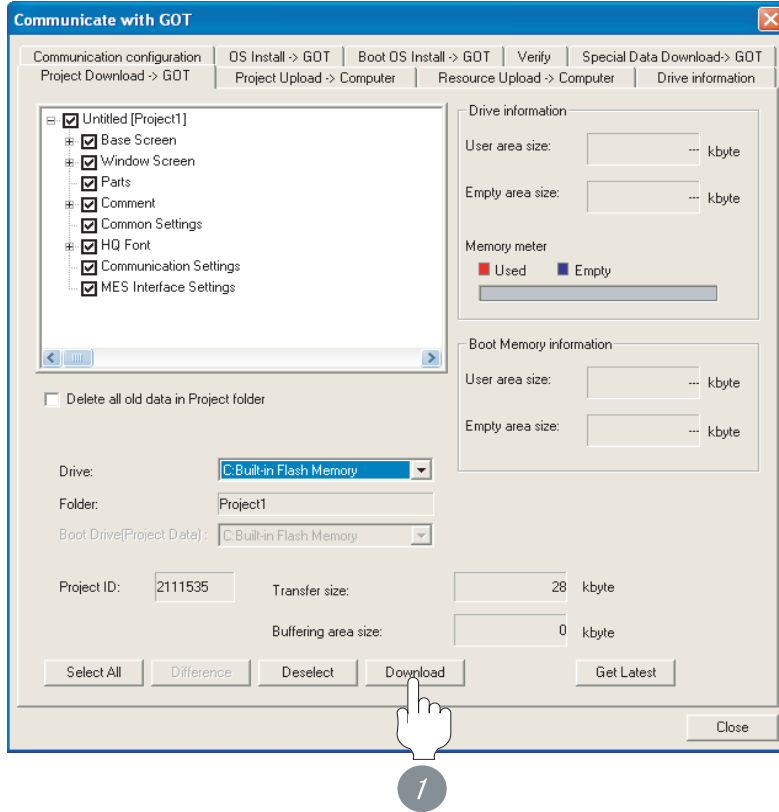
(4) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

24.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


24.3.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

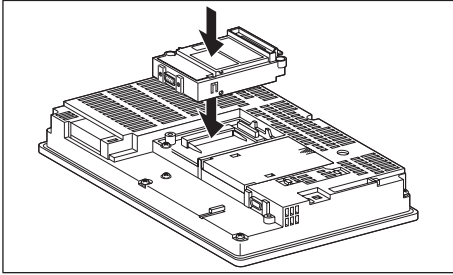1 Attaching the communication unit



- 1 Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

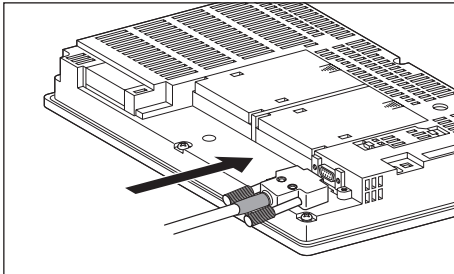
- ☞ GT15 Serial Communication Unit User's Manual
GT15-RS2, GT15-RS4, GT15-RS4-TE

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

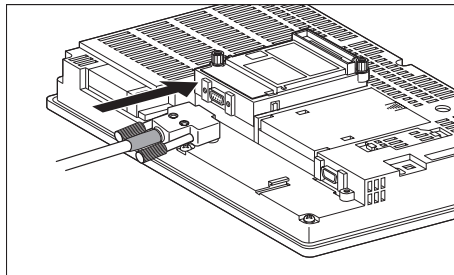- connection to the RS-232 communication unit




- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

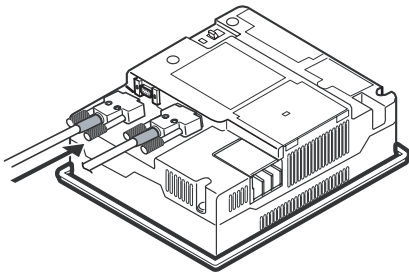(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

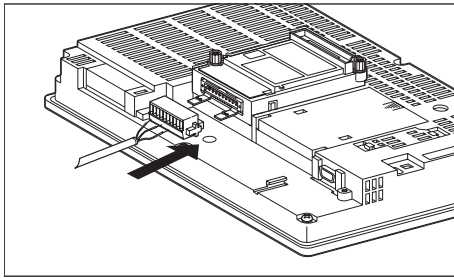(2) How to connect the RS-485 cable



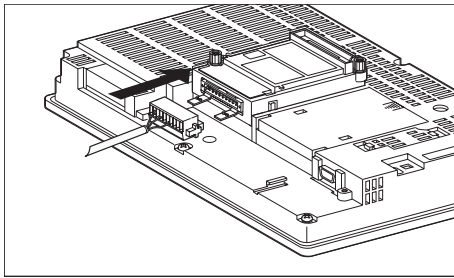- 1 Connect the RS-485 cable to the terminal block packed together with the RS-422/485 communication unit.



- 2 Connect the terminal block to the RS-422/485 communication unit on the GOT.

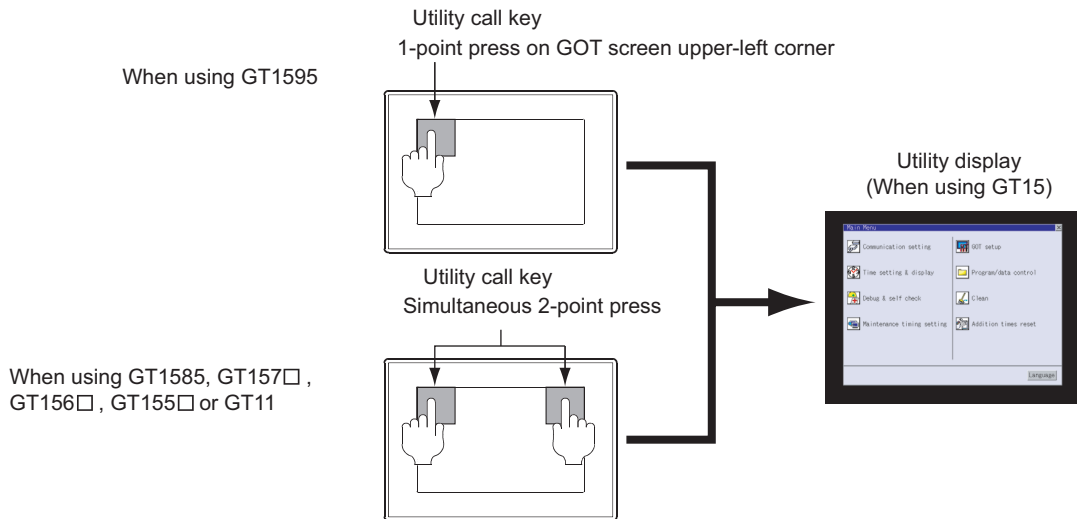
24.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

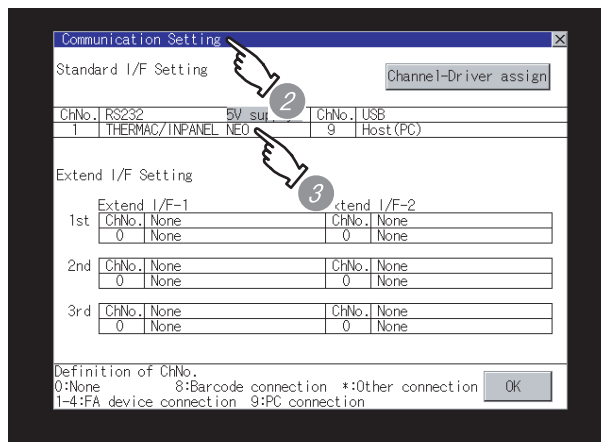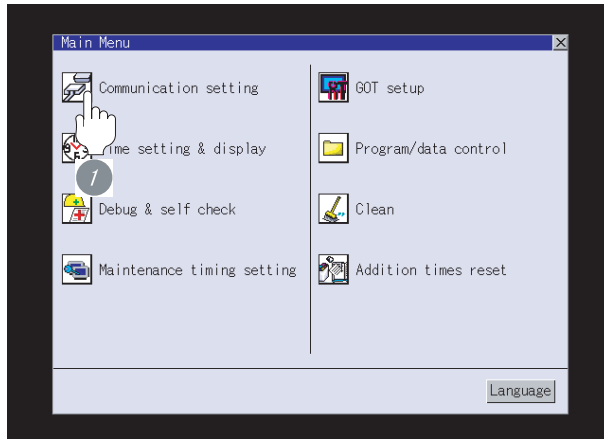☞ GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver:
OMRON THERMAC/INPANEL NEO

4 When the communication driver name is not displayed normally, carry out the following procedure again.

➡ Section 24.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

➡ GT □ User's Manual

24.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

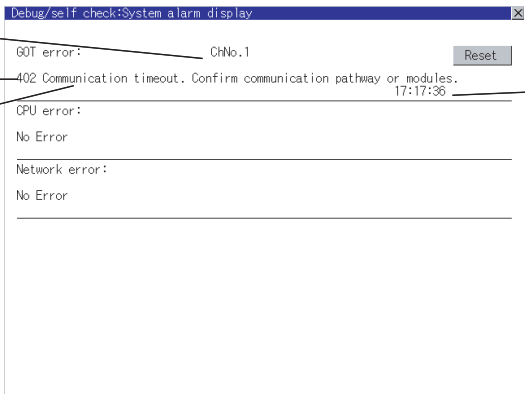
 GT User's Manual (When using GT15)

Communication Channel No. ————

Error code ————

Error message ————

Time of occurrence (Displayed only for errors)




Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

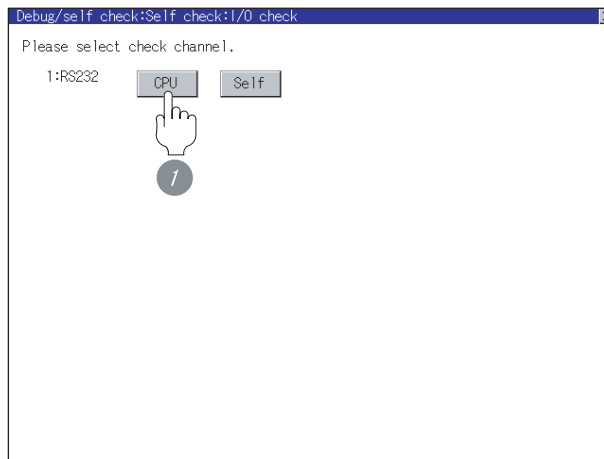
 GT Designer2 Version Screen Design Manual

2 Perform an I/O check


Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check]. For details on the I/O check, refer to the following manual:

 GT User's Manual



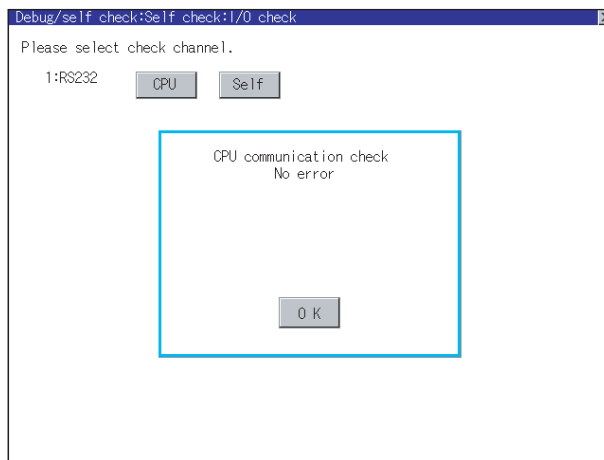- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected temperature controller.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the temperature controller side setting

When connecting the GOT, setting is required for the temperature controller side. Confirm if the temperature controller side setting is correct.

 Section 24.4 Temperature Controller Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

24.4 Temperature Controller Side Setting



OMRON temperature controller

For details of OMRON temperature controller, refer to the following manual.

User's Manual for the OMRON temperature controller

	Model name	Reference
Temperature controller	E5AN, E5EN, E5CN, E5GN	Section 24.4.1
	E5ZN	Section 24.4.2
Interface converter	K3SC-10	Section 24.4.3

24.4.1 Connecting E5AN, E5EN, E5CN, E5GN

Set the communication data by operating the key of the temperature controller.

Setting items	Set value
Protocol	CompoWay/F
Transmission speed* ¹	9600bps, 19200bps
Data length* ¹	8 bits, 7 bits
Parity bit* ¹	Even, odd or none
Stop bit* ¹	1 bit, 2 bits
Communication unit NO.* ²	0 to 99

*1 Make the same setting as that of the GOT side.

*2 Select the communication unit No. without overlapping with that of other units.

24.4.2 Connecting E5ZN

Set the communication data by operating the key of the temperature controller.

Setting items	Set value
Transmission speed* ¹	9600bps, 38400bps
Data length* ¹	8 bits, 7 bits
Parity bit* ¹	Even, odd, none
Stop bit* ¹	1 bit, 2 bits
Communication unit NO.* ²	0 to 15

*1 Make the same setting as that of the GOT side.

*2 Select the communication unit No. without overlapping with that of other unit.

24.4.3 Connecting to interface converter (K3SC-10)

1 Communication settings


Make the communication settings by operating the DIP switch of the temperature controller.

Item	Set value
Transmission speed*1	19200bps, 38400bps
Data length*1	7 bits, 8 bits
Parity bit*1	Odd, even, none
Stop bit*1	1 bit, 2 bits
Master/slave device	RS-232 ↔ RS485
Echoback*2	With, Without


*1 Make the same setting as that of GOT side.

*2 Set to "Without"

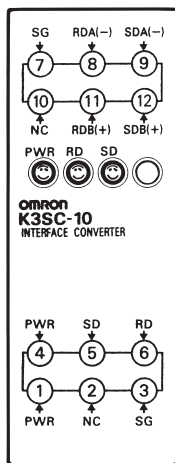2 Settings by DIP switch



Front of K3SC-10 body

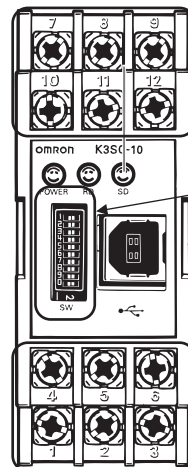

Inside of K3SC-10 body
(When removing the front cover)

(1) Transmission speed settings


Transmission speed(bps)	Switch No.		
	1	2	3
1200	ON	OFF	OFF
2400	OFF	ON	OFF
4800	ON	ON	OFF
9600	OFF	OFF	OFF
19200	ON	OFF	ON
38400	OFF	ON	ON

Set these switches. →



(2) Settings of data length, parity bit, stop bit, master/slave device and echoback


Setting item	Set value	Switch No.							
		4	5	6	7	8	9	0	
Data length	7bits	OFF							
	8bits	ON							
Stop bit	2bits		OFF						
	1bits		ON						
Parity	Even			OFF	OFF				
	Odd			ON	OFF				
	None			OFF	ON				
Master/slave device	RS232 ↔ RS422					OFF	ON		
	RS-232 ↔ RS485					OFF	OFF		
Echoback	Without								OFF
	With								ON

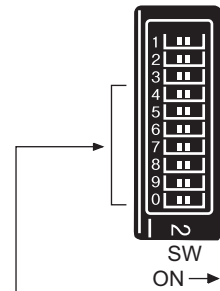

Set these switches.

24.4.4 Station NO. settings

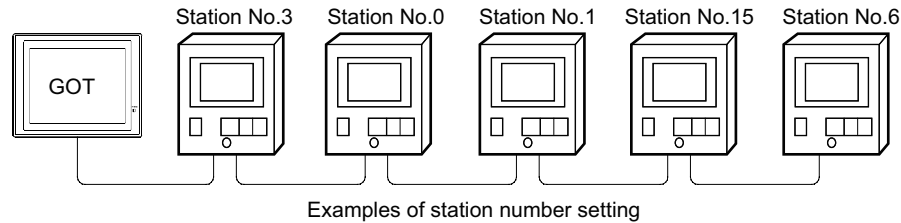Set each station number while making sure that one station number is used only once. The station number can be set without regard to the cable connection order. No problem is expected even if station numbers are not consecutive.



(1) Direct specification

When setting the device, specify the station number of the temperature controller of which data is to be changed.

Model	Specification range
E5AN, E5EN, E5CN, E5GN	0 to 99
E5ZN	0 to 15

(2) Indirect specification

When setting the device, indirectly specify the station number of the inverter of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25). When specifying the station No. from 100 to 155 on GT Designer2, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the temperature controller.

Specification station NO.	Compatible device	Setting range
100	GD10	0 to 99: For E5AN, E5EN, E5CN or E5GN 0 to 15: For E5ZN For the setting other than the above, error (dedicated device is out of range) will occur.
101	GD11	
102	GD12	
103	GD13	
104	GD14	
105	GD15	
106	GD16	
107	GD17	
108	GD18	
109	GD19	
110	GD20	
111	GD21	
112	GD22	
113	GD23	
114	GD24	
115	GD25	

(3) All station specification

Target station differs depending on write-in operation or read-out operation.

- For write-in operation, all station will be a target.
- For read-out operation, only one station will be a target.

24.5 Precautions

1 Station number setting of the temperature controller system

Make sure to establish temperature controller system with No.1 station.

2 GOT clock function

Since the temperature controller does not have a clock function, the settings of “time adjusting” or “time broad cast” by GOT clock control will be disabled.

3 Disconnecting a part of multiple connected equipments

The GOT can disconnect some of multiple connected equipments by setting GOT internal device. For example, the faulty station where a communication timeout error occurs can be disconnected from connected equipments.

For details of GOT internal device setting, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual (2.9.1 GOT internal devices)

24.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
OMRON temperature controller connection	Supporting the OMRON temperature controller connection	2.18U	Communication driver OMRON THERMAC/ INPANEL NEO [02.01.**]
	Supporting the following: <ul style="list-style-type: none"> • Disconnecting some of multiple connected equipments • Preventing the monitoring operation of the faulty station automatically 	2.58L	Communication driver OMRON THERMAC/ INPANEL NEO [03.03.**]

17

CONNECTION TO FUJIF A PLC

18

CONNECTION TO MATSUSHITA PLC

19

CONNECTION TO YASKAWA PLC

20

CONNECTION TO YOKOGAWA PLC

21

CONNECTION TO ALLEN-BRADLEY PLC

22

CONNECTION TO SIEMENS PLC

23

MICROCOMPUTER CONNECTION

24

CONNECTION TO OMRON TEMPERATURE CONTROLLER

CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER



25.1 System Configuration page 25-2

This section describes the equipment and cables needed when connecting a GOT to a Shinko Technos indicating controller. Select a system suitable for your application.

25.2 Connection Cable page 25-6

This section describes the specifications of the cables needed when connecting a GOT to a Shinko Technos indicating controller. Check the specifications of the connection cables.

25.3 Preparatory Procedures for Monitoring page 25-10

This section provides the procedures to be followed before performing monitoring in connection to a Shinko Technos indicating controller. The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

25.4 Indicating controller Side Setting page 25-23

The Shinko Technos indicating controller side settings for GOT connection are explained. When checking the indicating controller side settings, refer to this section.

25.5 Precautions page 25-26

This section describes the precautions about indicating controller connection. Refer to this section without fail before starting indicating controller connection.

25.6 List of Functions Added by Version Upgrade page 25-27

This section describes the functions added by version upgrade of GT Designer2 or OS.

25.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.

25.1.1 Connecting to ACS-13A, JC, JCM-33A, JIR-301-M Series





1 System configuration and connection conditions


Connection conditions			System configuration
Number of GOTs	Number of indicating controllers	Distance	
1	Max. 31 units	Between GOT and communication converter 15m or less	
		Between communication converter and indicating controller 1200m or less	

2 System equipment

(1) GOT

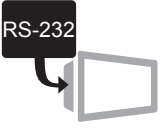


Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P

(2) Indicating controller

Image	No.	Name	Model name
	2	communication converter	IF-400

2 is manufactured by Shinko Technos Co., Ltd. For details of the product, contact Shinko Technos Co., Ltd.

(3) Cable

Image	No.	Name	Model name
	3	RS-232 cable 1) • Between GOT and communication converter	RS-232C CFP-C2
	4	RS-232 cable 2) • Between communication converter and indicating controller	(To be prepared by the user.  Section 25.2 Connection Cable)

3 is manufactured by Shinko Technos Co., Ltd. For details of the product, contact Shinko Technos Co., Ltd.

25.1.2 Connecting to FCD-100, FCR-100, FCR-23A, FIR, PC-900 Series



1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of indicating controllers	Distance	
1	1	Between GOT and indicating controller 15m or less	

* Only the indicating controller equipped with RS-232 communication function can be connected.

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P

(2) Cable

Image	No.	Name	Model name
	2	RS-232 cable 2) • Between GOT and indicating controller	(To be prepared by the user. Section 25.2 Connection Cable)

25.1.3 Connecting to DCL-33A Series



1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	Max. 31 units	Between GOT and communication converter 15m or less	
		Between communication converter and indicating controller 1200m or less	

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P

(2) Indicating controller

Image	No.	Name	Model name
	2	communication converter	IF-400

2 is manufactured by Shinko Technos Co., Ltd. For details of the product, contact Shinko Technos Co., Ltd.

(3) Cable

Image	No.	Name	Model name
	3	RS-232 cable 1) • Between GOT and communication converter	RS-232C CFP-C2
	4	RS-485 cable 3) • Between communication converter and indicating controller • Between indicating controllers	RS-485 CPP

3, 4 is manufactured by Shinko Technos Co., Ltd. For details of the product, contact Shinko Technos Co., Ltd.

25.2 Connection Cable

The RS-232 cable or RS-485 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable	
		RS-232 cable (Refer to Section 25.2.1)	RS-485 cable (Refer to Section 25.2.2)
indicating controller*1	ACS-13A, JC, JCM-33A, JIR-301-M Series	-	RS-485 cable 1)
	FCR-100, FCD-100, FCR-23A, PC-900 ,FIR Series	RS-232 cable 2)	-
communication converter	IF-400	-	RS-485 cable 1)

*1 Select a model with the RS-232/RS-485 communication function.

For details of the models, refer to the following manual.


 User's Manual for the Shinko Technos indicating controller controller

25.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a indicating controller.

1 Connection diagram

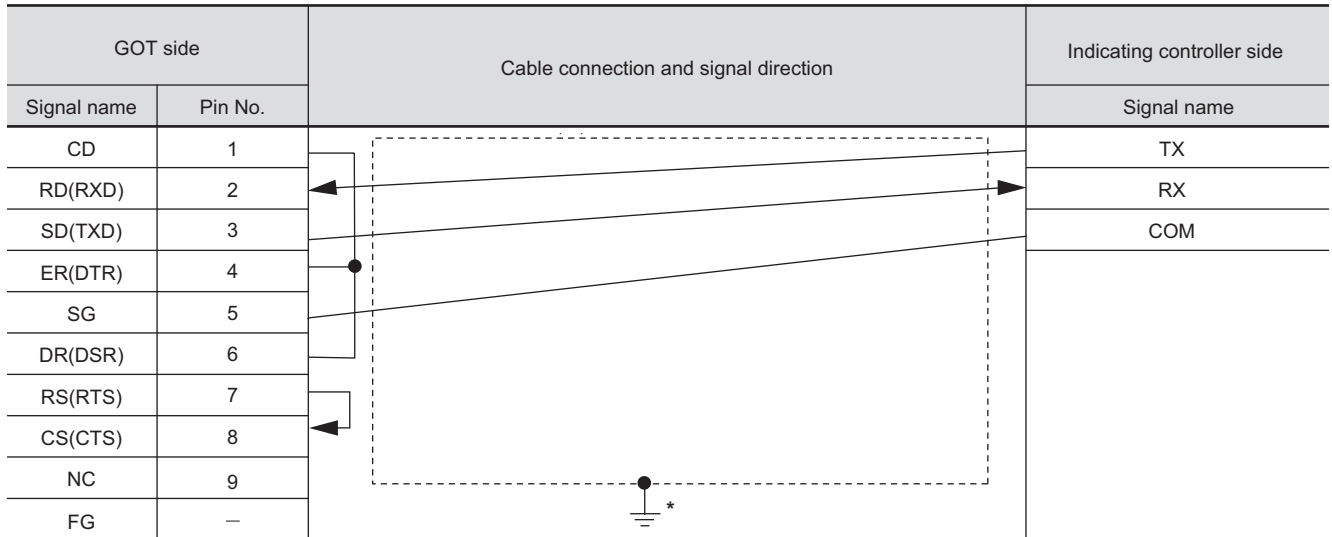(1) RS-232 cable 2)



* Connect FG grounding to the appropriate part of a cable shield line.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT.
For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	DDK Ltd
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) Shinko Technos indicating controller controller side connector

Use the connector compatible with the Shinko Technos indicating controller controller side.

For details, refer to the following manual.

 User's Manual for the Shinko Technos indicating controller controller

3 Precautions when preparing cable


The length of the RS-232 cable must be 15m or less.

25.2.2 RS-485 cable

The following shows the connection diagrams and connector specifications of the RS-485 cable used for connecting the GOT to a temperature controller.

1 Connection diagram

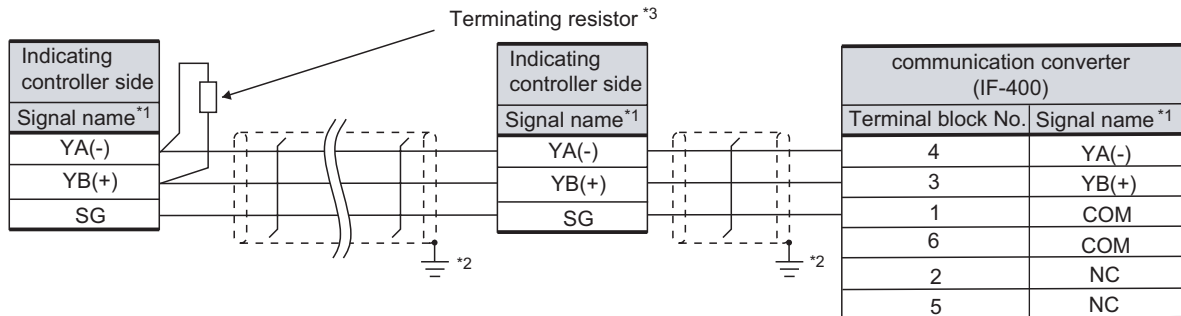(1) RS-485 cable 1)



*1 Pin No. of communication converter differs depending on the model.
Refer to the following table.

Signal name	Model of indicating controller					
	JCS-33A	JCR-33A	JCD-33A	JCM-33A	JIR-301-M	ACS-13A
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
YA(-Aj)	13	11	11	10	11	16
YB(+Aj)	14	14	14	13	14	17
SG	15	17	17	14	17	18

*3 Connect FG grounding to the appropriate part of a cable shield line.

*2 For details of the terminating resistor specifications, refer to the following manual.

User's Manual for the Shinko Technos indicating controller controller

2 Connector specifications

(1) Shinko Technos indicating controller controller side connector

Use the connector compatible with the Shinko Technos indicating controller controller side module.
For details, refer to the following manual.

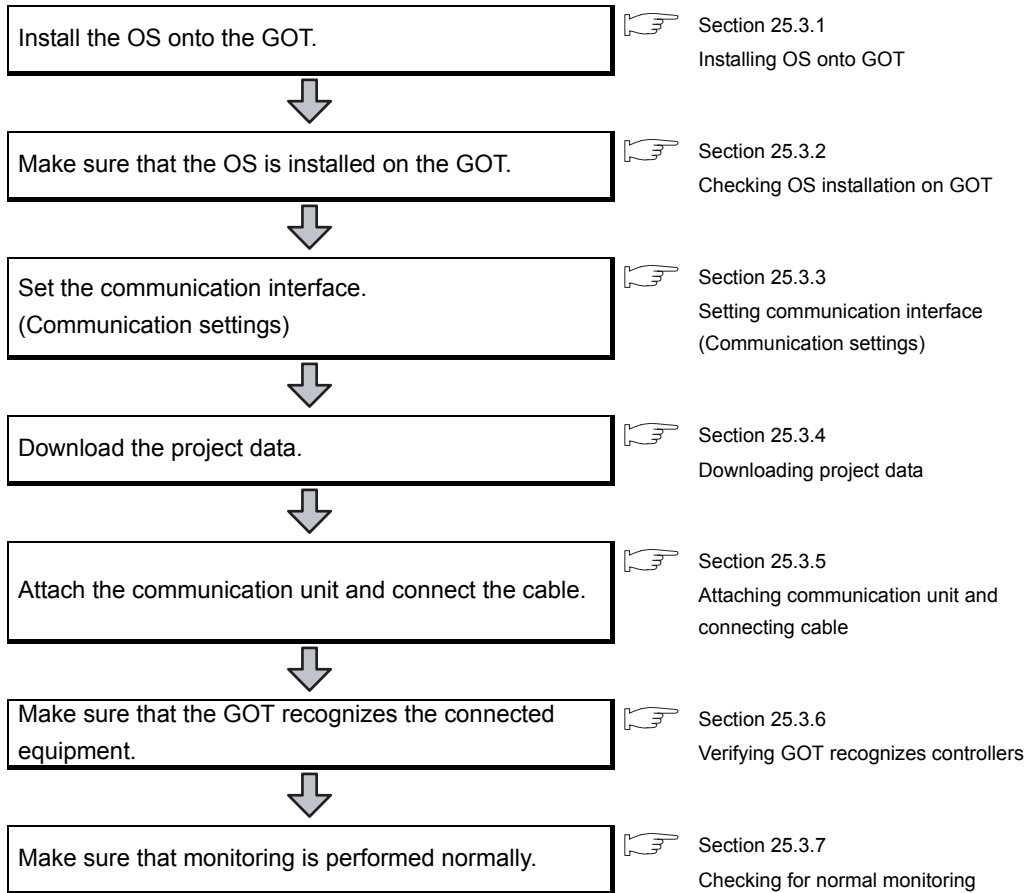
User's Manual for the Shinko Technos indicating controller controller

3 Precaution when preparing a cable

(1) The length of the RS-485 cable must be 1200m or less.

25.3 Preparatory Procedures for Monitoring

The following the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the indicating controller side setting


This section explains the GOT side setting.

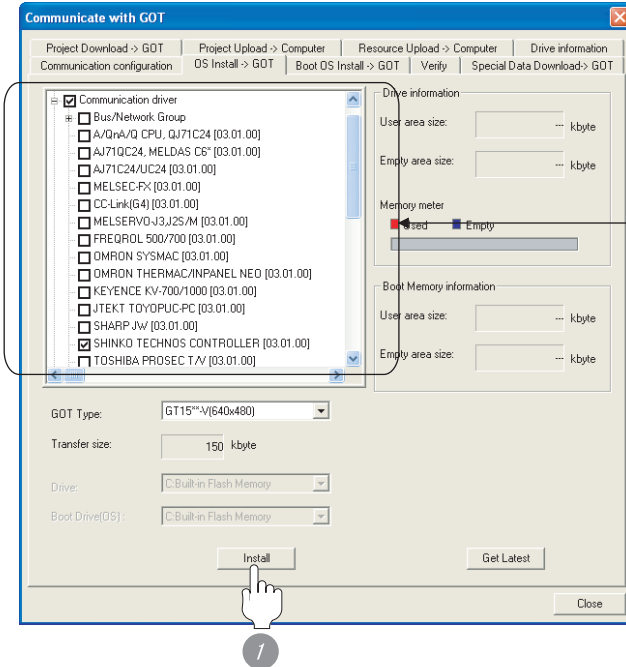
When confirming the indicating controller side setting, refer to the following.

☞ Section 25.4 Indicating controller Side Setting

25.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




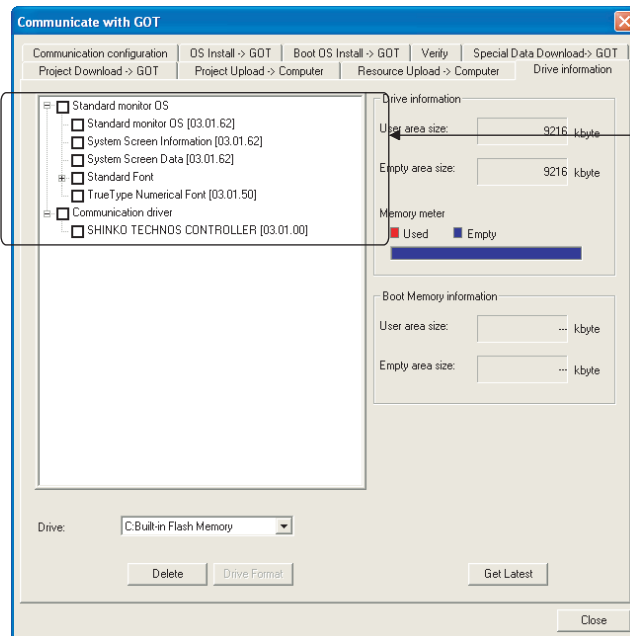
Check the following under the Communication driver.
•Shinko Technos Controller

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

25.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

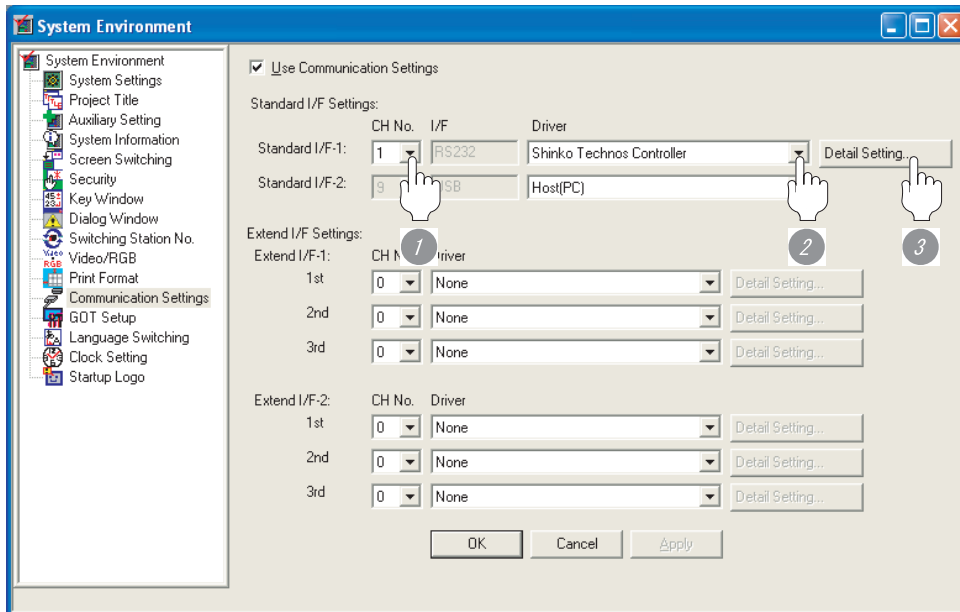
- 1) Standard monitor OS
- 2) Communication driver: Shinko Technos Controller

25.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "Shinko Technos Controller".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Communication Detail Settings

Driver: Shinko Technos Controller

Transmission Speed: 9600 (BPS)

Data Bit: 7 bit

Stop Bit: 1 bit

Parity: Even

Sum Check:

Sum Check Type:

Retry: 0 (Times)

Startup Time: 3 (Sec)

Timeout Time: 3 (Sec)

Adapter Address: 0

Host Address: 0

Delay Time: 5 (ms)

Format: 1

Interrupt Data Byte: 1 (Byte)

Station No. Selection:

Special Interrupt Code:

Control Method:

OK Cancel

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	9600bps,19200bps,38400bps, 57600bps,115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 7bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Even>	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec
Host Address	Specify the host address (station No. of the GOT to which the temperature controller is connected) in the connected network. <Default: 0>	0 to 94
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 5ms>	0 to 300 ms

Point

- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT User's Manual

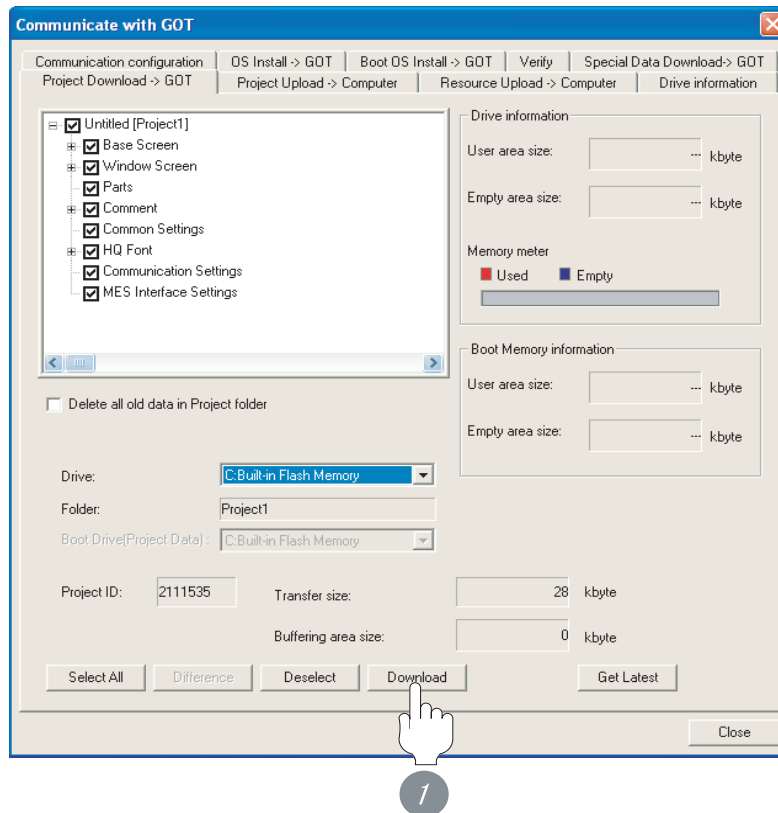
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

25.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

☞ GT Designer2 Version □ Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


25.3.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

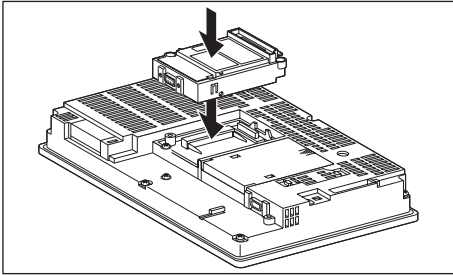1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

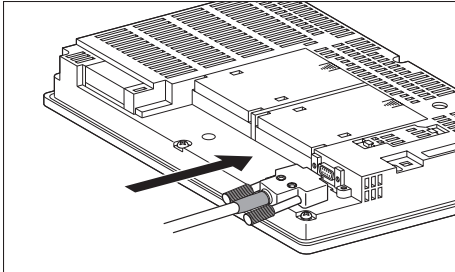
 GT15 Serial Communication Unit User's Manual

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

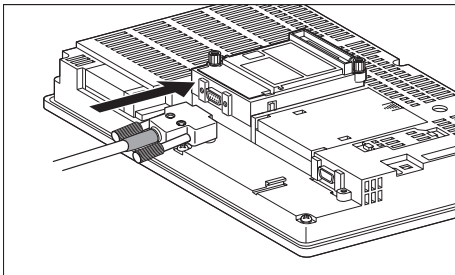- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

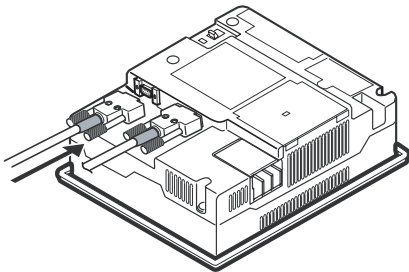(b) For the GT11



- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

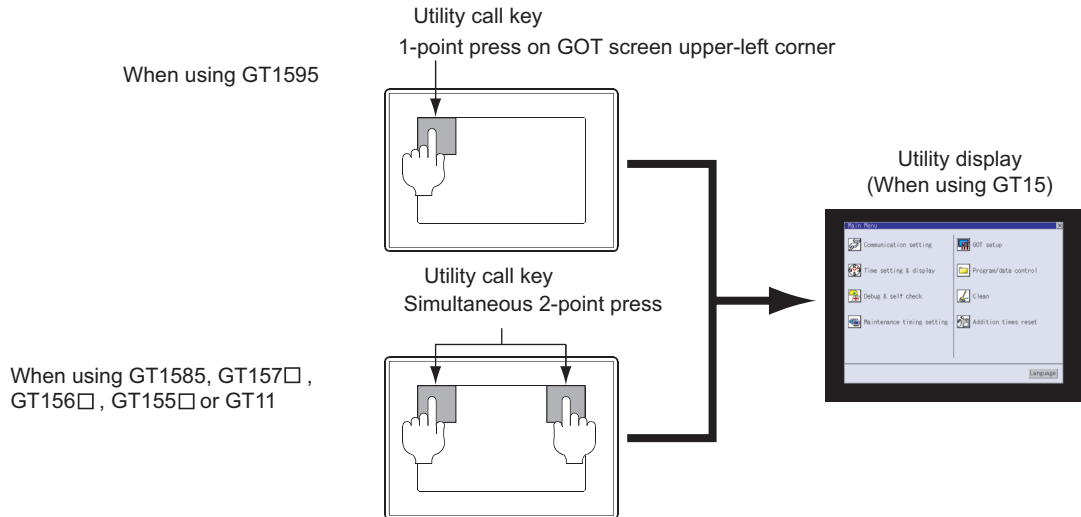
25.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point

When setting the utility call key to 1-point


When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.

For the setting of the utility call key, refer to the following.

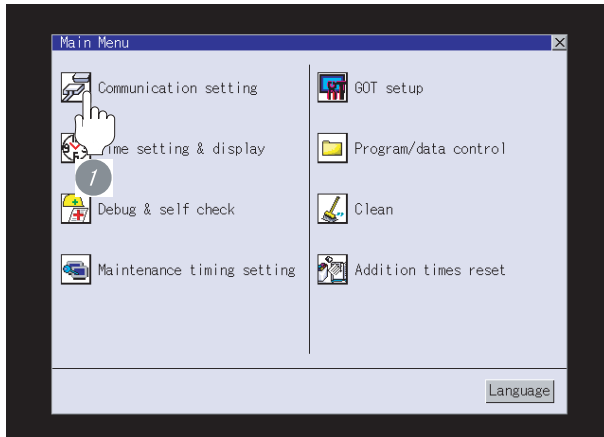☞ GT□ User's Manual



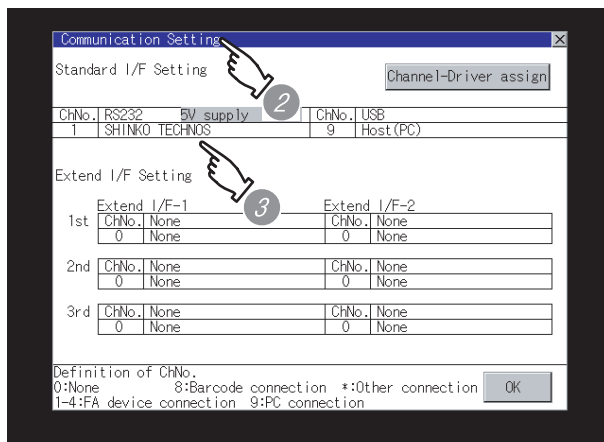- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver:
Shinko Technos
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

➡ Section 25.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

➡ GT □ User's Manual

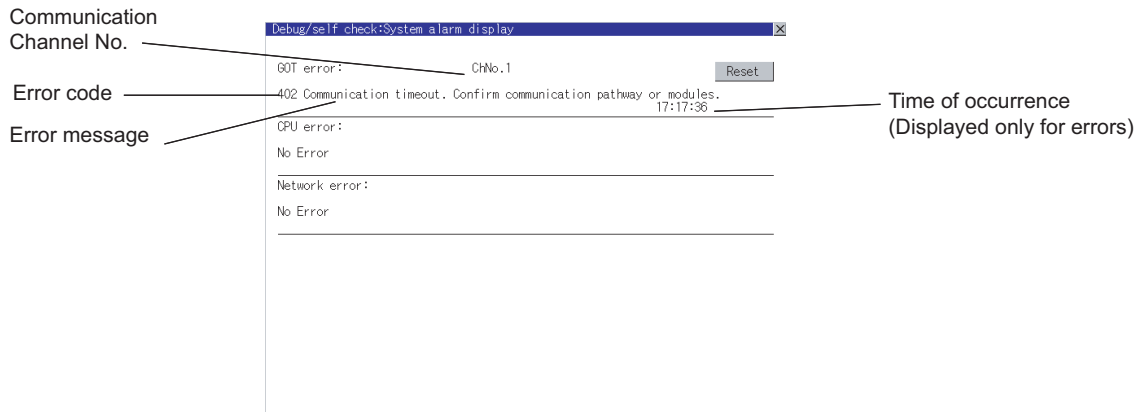
25.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

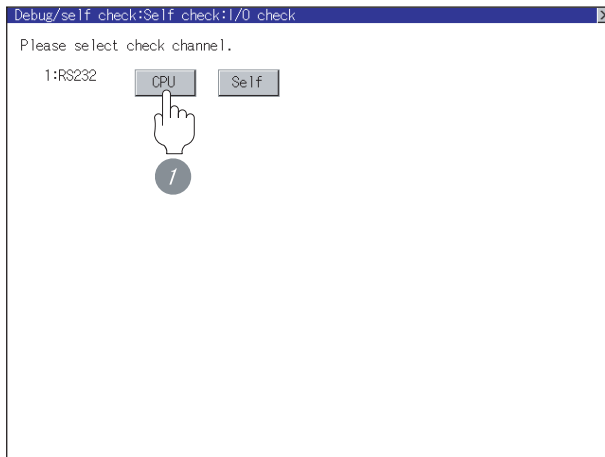
 GT Designer2 Version □ Screen Design Manual

2 Perform an I/O check


Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check]. For details on the I/O check, refer to the following manual:

 GT □ User's Manual



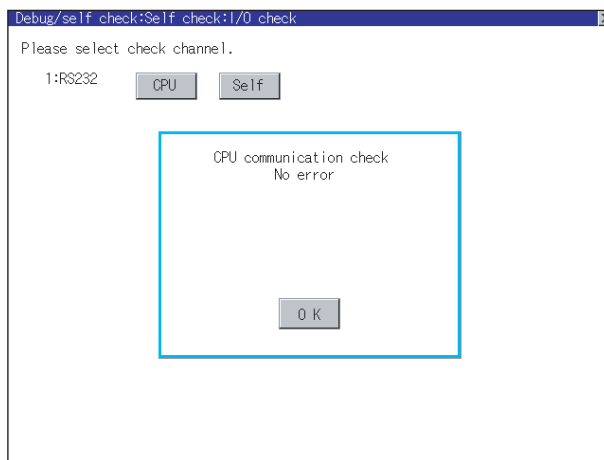- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected temperature controller.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the temperature controller side setting

When connecting the GOT, setting is required for the temperature controller side. Confirm if the temperature controller side setting is correct.

 Section 25.4 Indicating controller Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

25.4 Indicating controller Side Setting

Point

- (1) Shinko Technos indicating controller
 For details of Shinko Technos indicating controller, refer to the following manual.
 ☞ User's Manual for the Shinko Technos indicating controller
- (2) Communication converter
 For details on communication settings of the communication converter, refer to the following manual.
 ☞ User's Manual for communication converter

	Model name	Reference
Indicating controller	ACS-13A, DCL-33A, JC, JCM-33A, JIR-301-M Series	Section 25.4.1
	FCD-100, FCR-100, FCR-23A, FIR, PC-900 Series	Section 25.4.2
communication converter	IF-400	Section 25.4.1

25.4.1 Connecting to ACS-13A, DCL-33A, JC, JCM-33A, JIR-301-M Series

1 Communication settings

Make the communication settings by operating the key of the indicating controller.

Item	Set value
Transmission speed*1	9600, 19200 bps
Data length	7 bits (fixed)
Parity bit	Even (fixed)
Stop bit	1 bit (fixed)
Station No.*2*3	0 to 95
Communication protocol	Shinko protocol

*1 Adjust the settings with GOT settings.

*2 Avoid duplication of the station No. with any of the other units.

*3 When setting the station No. to "95", the read-out of data cannot be performed.

25.4.2 Connecting to FCD-100, FCR-100, FCR-23A, FIR, PC-900 Series

1 Communication settings

Make the communication settings by operating the key of the indicating controller.

Item	Set value
Transmission speed*1	9600, 19200 bps
Data length	7 bits (fixed)
Parity bit	Even (fixed)
Stop bit	1 bit (fixed)
Station No.*1*2	0 to 95
Communication protocol	Shinko protocol

*1 Adjust the settings with GOT settings.

*2 When setting the "95" to the station No., the read-out of data cannot be performed.

25.4.3 Connecting to communication converter (IF-400)

1 Communication settings

Make the communication settings by operating the key of the communication converter.


Item	Set value
Transmission speed*1	9600, 19200 bps
Sending/Receiving switching period*2	1 character, 2 character

*1 Adjust the settings with GOT and the indicating controller settings.

*2 The setting of 1 character is recommended.

25.4.4 Station NO. settings

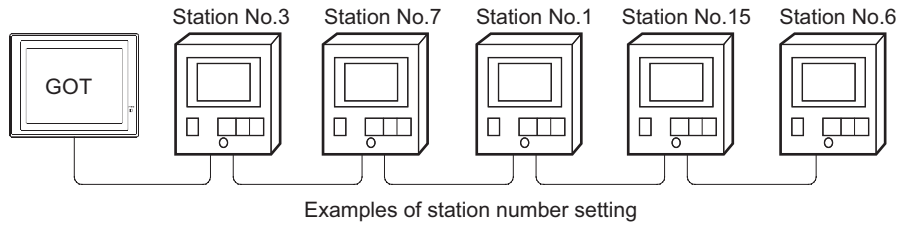Set each station number while making sure that one station number is used only once. The station number can be set without regard to the cable connection order. No problem is expected even if station numbers are not consecutive.



(1) Direct specification

When setting the device, specify the station number of the indicating controller of which data is to be changed.

Specification range
0 to 94

(2) Indirect specification

When setting the device, indirectly specify the station number of the inverter of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).

When specifying the station No. from 100 to 115 on GT Designer2, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the indicating controller.

Specification station NO.	Compatible device	Setting range
100	GD10	0 to 94 For the setting other than the above, error (dedicated device is out of range) will occur.
101	GD11	
102	GD12	
103	GD13	
104	GD14	
105	GD15	
106	GD16	
107	GD17	
108	GD18	
109	GD19	
110	GD20	
111	GD21	
112	GD22	
113	GD23	
114	GD24	
115	GD25	

(3) All station specification

Target station differs depending on write-in operation or read-out operation.

- For write-in operation, all station will be a target.

In the WORD BIT write-in operation, only the indicating controller whose station No. is the the same as host address is applicable.

For details of host address setting, refer to the following.

☞ Section 25.3.3 Setting communication interface (Communication settings)

- In the read-out operation, only the indicating controller whose station No. is the the same as host address is applicable. For details of host address setting, refer to the following.

☞ Section 25.3.3 Setting communication interface (Communication settings)

25.5 Precautions

1 Station number settings of indicating controller

In the system configuration, the indicating controller with the station number set with the host address must be included. For details of host address setting, refer to the following.

 Section 25.3.3 Setting communication interface (Communication settings)

2 GOT clock function

Since the indicating controller does not have a clock function, the settings of "time adjusting" or "time broad cast" by GOT clock control will be disabled.

3 Disconnecting a part of multiple connected equipments

The GOT can disconnect some of multiple connected equipments by setting GOT internal device. For example, the faulty station where a communication timeout error occurs can be disconnected from connected equipments.

For details of GOT internal device setting, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual (2.9.1 GOT internal devices)

25.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Connecting to the Shinko Technos indicating controller	Supporting the Shinko Technos indicating controller connection	2.43V	Communication driver Shinko Technos Controller [03.01.**]
	Supporting the following: <ul style="list-style-type: none"> • Disconnecting some of multiple connected equipments • Preventing the monitoring operation of the faulty station automatically 	2.58L	Communication driver Shinko Technos Controller [03.03.**]

CONNECTION TO CHINO CONTROLLER



26.1 System Configuration page 26-2

This section describes the equipment and cables needed when connecting a GOT to a CHINO controller. Select a system suitable for your application.

26.2 Connection Cable page 26-9

This section describes the specifications of the cables needed when connecting a GOT to a CHINO controller. Check the specifications of the connection cables.

26.3 Preparatory Procedures for Monitoring page 26-19

This section provides the procedures to be followed before performing monitoring in connection to a CHINO controller. The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

26.4 Controller Side Setting page 26-35

The CHINO controller side settings for GOT connection are explained. When checking the temperature controller side settings, refer to this section.

26.5 Precautions page 26-40

This section describes the precautions about controller connection. Refer to this section without fail before starting controller connection.

26.6 List of Functions Added by Version Upgrade page 26-41

This section describes the functions added by version upgrade of GT Designer2 or OS.

26.1 System Configuration


Select a system configuration suitable for your application.



Conventions used in this section


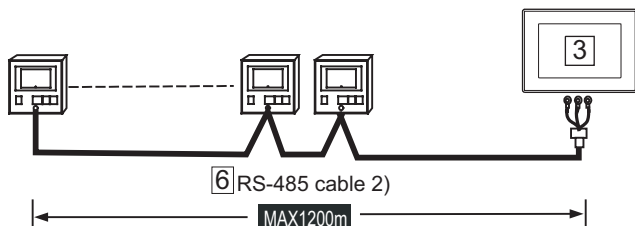
Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.

26.1.1 Connecting to LT300, LT400, DZ1000 or DZ2000 series





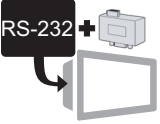

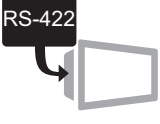

1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of controllers	Distance	
1	Max. 31 units	Between GOT and converter 15m or less	
1	Max. 31 units	Between GOT and converter 15m or less	
		Between converter and controller 1200m or less	
1	 Max. 31 units	Between GOT and controller 1200m or less	
	 Max. 10 units		
1	Max. 31 units	Between GOT and converter 15m or less	
		Between converter and controller 1200m or less	


Connection conditions			System configuration
Number of GOTs	Number of controllers	Distance	
1	 Max. 31 units	Between GOT and controller 1200m or less	

2 System equipment

(1) GOT







Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 Communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 Communication	GT15-RS2-9P
	2	RS-422 conversion unit*1 • For RS-422 Communication	GT15-RS2T4-9P
		RS-422/485 Communication Unit • For RS-422 Communication	GT15-RS4-9S
		RS-422 interface • For RS-422 Communication	— (Built into GOT)
	3	RS-422/485 Communication Unit • For RS-485 Communication	GT15-RS4-TE

(2) Controller


Image	No.	Name	Model name
	4	converter 2)	SC8-10

4 is manufactured by CHINO corporation. For details of the product, contact CHINO corporation.

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 1) • Between GOT and converter • Between controller and GOT	(To be prepared by the user.  Section 26.2 Connection Cable)
	6	RS-422 cable 1) • Between controller and converter	
	7	RS-422 cable 2) • Between controller and GOT	
	8	RS-485 cable 1) • Between controller and converter	
	9	RS-485 cable 2) • Between controller and GOT	

26.1.2 Connecting to LT230, LT830



1 System configuration and connection conditions


Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	Max. 31 units	Between GOT and converter 15m or less	
		Between converter and controller 1200m or less	
1	 Max. 31 units	Between GOT and controller 1200m or less	

2 System equipment

(1) GOT



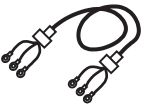

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P
	2	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-TE

(2) Controller


Image	No.	Name	Model name
	[3]	Converter	SC8-10

[3] is manufactured by CHINO corporation. For details of the product, contact CHINO corporation.

(3) Cable

Image	No.	Name	Model name
	[4]	RS-232 cable 1) • Between GOT and converter	(To be prepared by the user.  Section 26.2 Connection Cable)
	[5]	RS-485 cable 1) • Between controller and converter	
	[6]	RS-485 cable 2) • Between controller and GOT	

26.1.3 Connecting to GT120



1 System configuration and connection conditions


Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	Max. 31 units	Between GOT and converter 15m or less	
		Between converter and controller 1200m or less	
1	 Max. 31 units	Between GOT and controller 1200m or less	

2 System equipment

(1) GOT




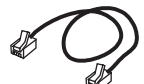


Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P
	2	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-TE

(2) Controller


Image	No.	Name	Model name
	[3]	Converter	SC8-10

[3] is manufactured by CHINO corporation. For details of the product, contact CHINO corporation.

(3) Cable

Image	No.	Name	Model name
	[4]	RS-232 cable 1) • Between GOT and converter	(To be prepared by the user.  Section 26.2 Connection Cable)
	[5]	RS-485 cable 3) • Between controller and converter	GT8-CDM (3m)
	[6]	RS-485 cable 4) • Between controller and controller	GT8-CDD (60mm)
	[7]	RS-485 cable 5) • Between controller and GOT	(To be prepared by the user.  Section 26.2 Connection Cable)

[5], [6] is manufactured by CHINO corporation. For details of the product, contact CHINO corporation.

*1 The RS-485 cable can be prepared by the user. ( Section 26.2 Connection Cable)

26.2 Connection Cable


The RS-232 cable / RS-422 cable / RS-485 cable used for connecting the GOT to the PLC should be prepared by the user.

The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable		
		RS-232 cable (Refer to Section 26.2.1)	RS-422 cable (Refer to Section 26.2.2)	RS-485 cable (Refer to Section 26.2.2)
Controller	LT300, LT400, DZ1000, DZ2000 Series*1,	RS-232 cable 1)	RS-422 cable 1) RS-422 cable 2)	RS-485 cable 1) RS-485 cable 2)
	LT230, LT830*1	-	-	RS-485 cable 1) RS-485 cable 2)
	GT120*1	-	-	RS-485 cable 3) RS-485 cable 4) RS-485 cable 5)
Converter	RC-77	RS-232 cable 1)	-	-

*1 Select the model that support MODBUS communication function.

For details of the models, refer to the following manual.

 User's Manual for the CHINO controller

26.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.

1 Connection diagram

(1) RS-232 cable 1)

GOT side		Cable connection and signal direction	CHINO corporation product side controller, converter
Signal name	Pin No.		Signal name*1
CD	1		-
RD(RXD)	2		SD
SD(TXD)	3		RD
ER(DTR)	4		-
SG	5		SG
DR(DSR)	6		
RS(RTS)	7		
CS(CTS)	8		
-	9		
FG	-		

*1 Terminal number of the controller and the converter may differ for each model. Refer to the table below.

Signal name	Controller type			Converter type
	LT300	LT400	DZ1000, DZ2000	SC8-10
	Terminal No.	Terminal No.	Terminal No.	Terminal No.
SD	11	11	19	2
RD	13	13	21	1
SG	15	15	23	3

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	DDK Ltd
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

3 Precautions when preparing cable


The length of the RS-232 cable must be 15m or less.

26.2.2 RS-422 cable

The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a temperature controller.

1 Connection diagram

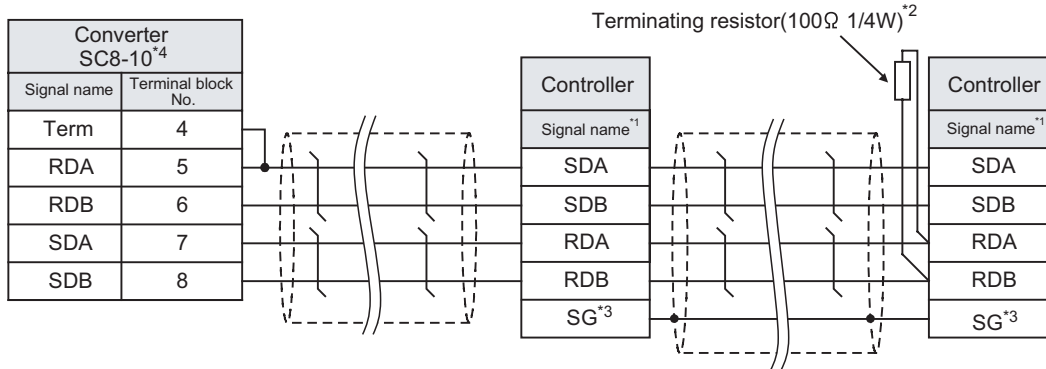(1) RS-422 cable 1)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.


Signal name	Controller type		
	LT300	LT400	DZ1000,DZ2000
	Terminal No.	Terminal No.	Terminal No.
SDA	11	11	19
SDB	12	12	20
RDA	13	13	21
RDB	14	14	22
SG	15	15	23

*2 Terminating resistor should be provided for a controller which will be a terminal.

*3 Do not connect SG of the controller and SG of the GOT.

*4 Set the Communication Type switch of the converter to RS-422.

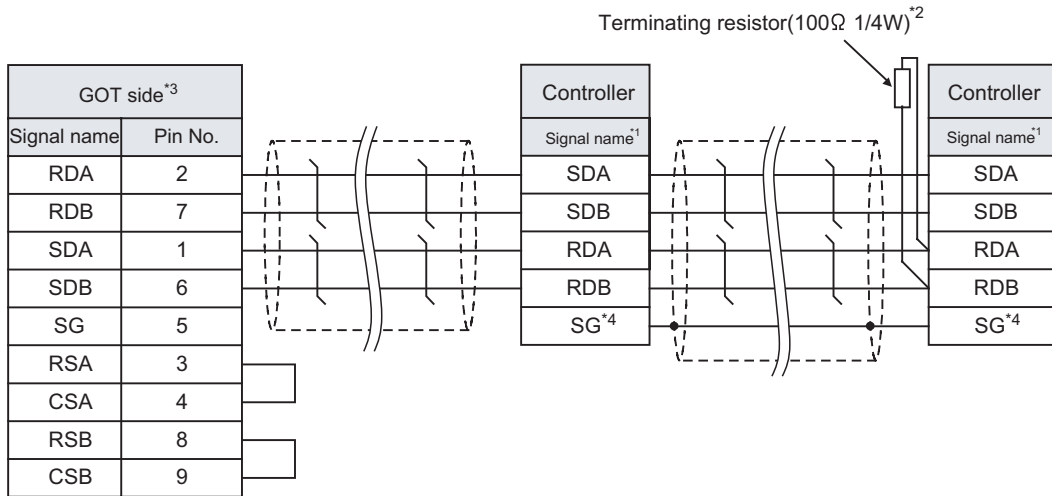(2) RS-422 cable 2)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.

Signal name	Controller type		
	LT300	LT400	DZ1000,DZ2000
	Terminal No.	Terminal No.	Terminal No.
SDA	11	11	19
SDB	12	12	20
RDA	13	13	21
RDB	14	14	22
SG	15	15	23

*2 Terminating resistor should be provided for a controller which will be a terminal.

*3 Set the terminating resistor of GOT side to "Disable".

4 Connecting terminating resistors)

*4 Do not connect SG of the controller and SG of the GOT.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector or connector cover applicable to the GOT connector.

GOT	Connector model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

3 Precautions when preparing a cable

The length of the RS-422 cable must be 1200m or less

4 Connecting terminating resistors


(1) GOT

Set the terminating resistor of RS-422/485 communication unit using the terminating resistor setting switch.

Terminating resistor ^{*1}	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF



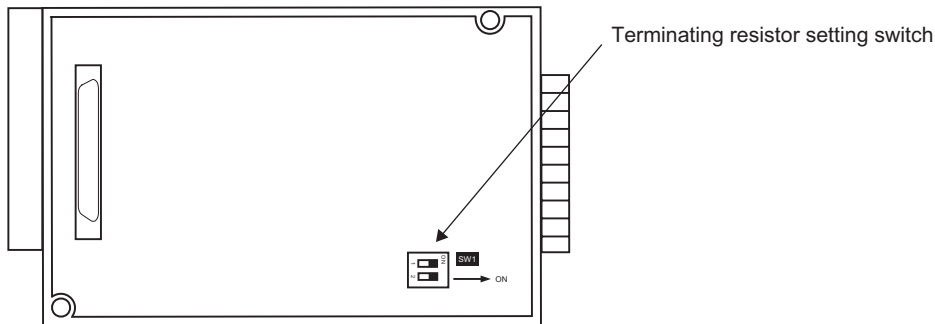*1 The default setting is "Enable".




Rear View of RS-422/485 communication unit

26.2.3 RS-485 cable

The following shows the connection diagrams and connector specifications of the RS-485 cable used for connecting the GOT to a temperature controller.

1 Connection diagram

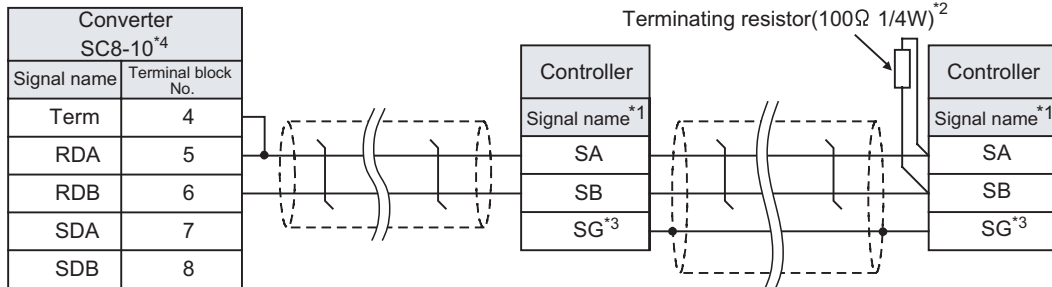(1) RS-485 cable 1)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.


Signal name	Model name				
	LT230	LT300	LT400	LT830	DZ1000, DZ2000
	terminal No.	terminal No.	terminal No.	terminal No.	terminal No.
SA	6	11	11	6	19
SB	7	12	12	7	20
SG	8	15	15	8	23

*2 Terminating resistor should be provided for a controller which will be a terminal.

*3 Do not connect SG of the controller and SG of the GOT.

*4 Set the Communication Type switch of the converter to RS-485.

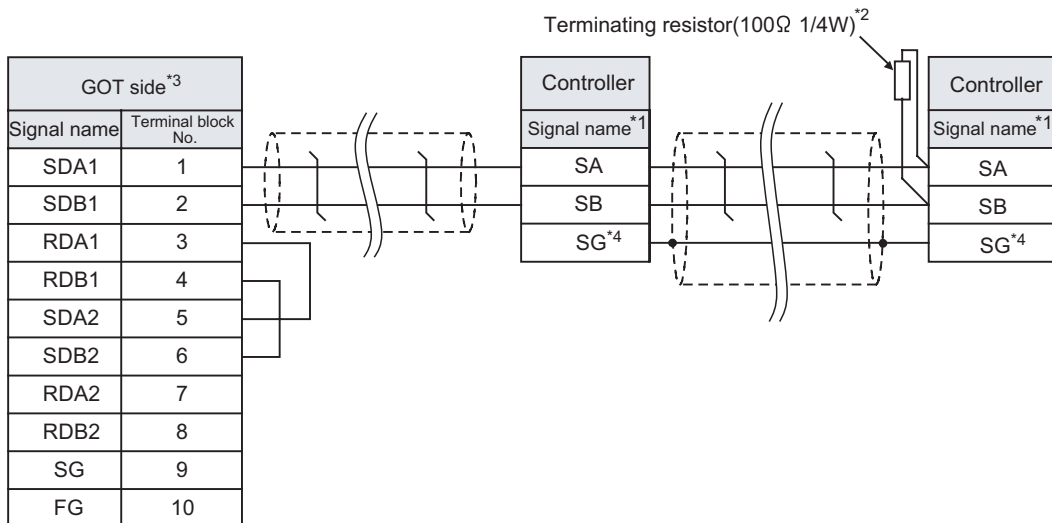(2) RS-485 cable 2) (For GT15)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.


Signal name	Model name				
	LT230	LT300	LT400	LT830	DZ1000, DZ2000
	terminal No.	terminal No.	terminal No.	terminal No.	terminal No.
SA	6	11	11	6	19
SB	7	12	12	7	20
SG	8	15	15	8	23

*2 Terminating resistor should be provided for a controller which will be a terminal.

*3 Set the terminating resistor of GOT side to "Disable". (☞ 4 Connecting terminating resistors)

*4 Do not connect SG of the controller and SG of the GOT.

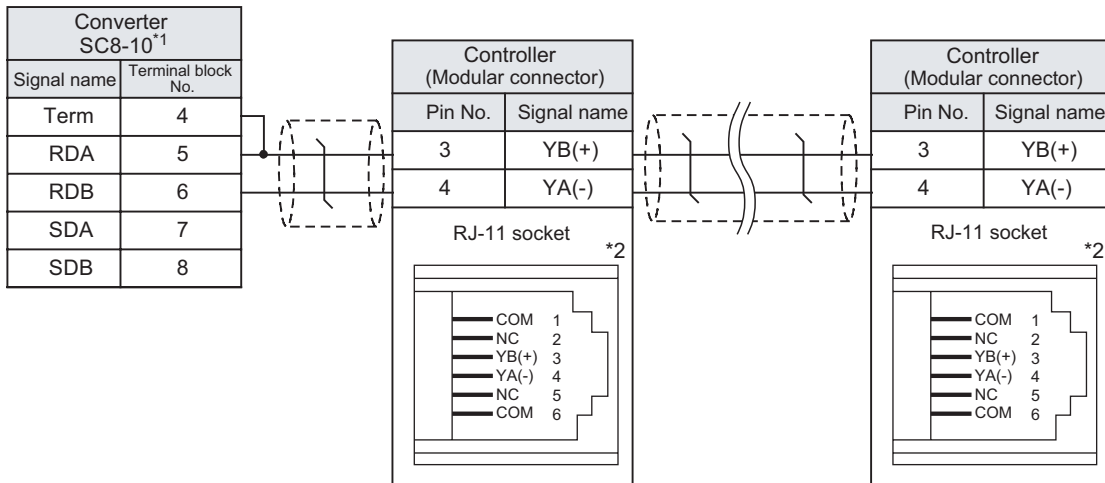(3) RS-485 cable 3)




*1 Set the Communication Type switch of the converter to RS-485.

*2 For details of the pin assignment, refer to the following manual.

User's Manual for the CHINO controller

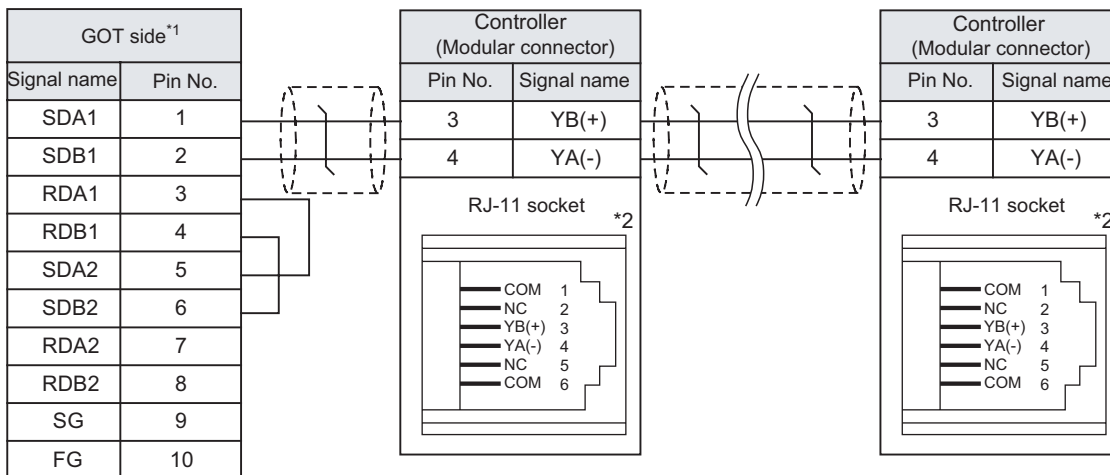(4) RS-485 cable 4) (For GT15)




*1 Set the terminating resistor of GOT side to "Disable". (4 Connecting terminating resistors)

*2 For details of the pin assignment, refer to the following manual.

User's Manual for the CHINO controller

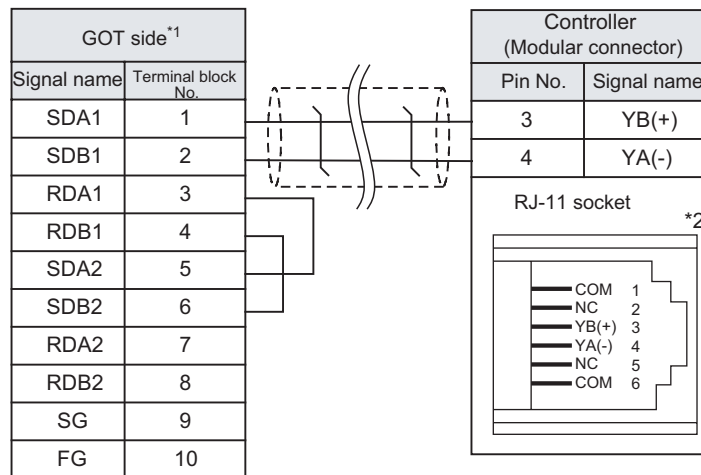(5) RS-485 cable 5) (For GT15)



*1 Set the terminating resistor of GOT side to "Disable". (☞ 4 Connecting terminating resistors)

*2 For details of the pin assignment, refer to the following manual.

☞ User's Manual for the CHINO controller

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422/485 communication unit connector on the GOT.


For the GOT side of the RS-485 cable, use the terminal block packed together with the RS-422/485 communication unit.

GOT	Connector model	Connector type	Manufacturer
GT15-RS4-TE	SL-SMT3.5/10/90F BOX	—	Weidmuller interconnections inc.

(2) CHINO controller side connector

Use the connector compatible with the CHINO controller side module.

For details, refer to the following manual.

 User's Manual for the CHINO controller

3 Precaution when preparing a cable

- (1) The length of the RS-485 cable must be 1200m or less.

4 Connecting terminating resistors


(1) GOT

Set the terminating resistor of RS-422/485 communication unit using the terminating resistor setting switch.

Terminating resistor ^{*1}	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF



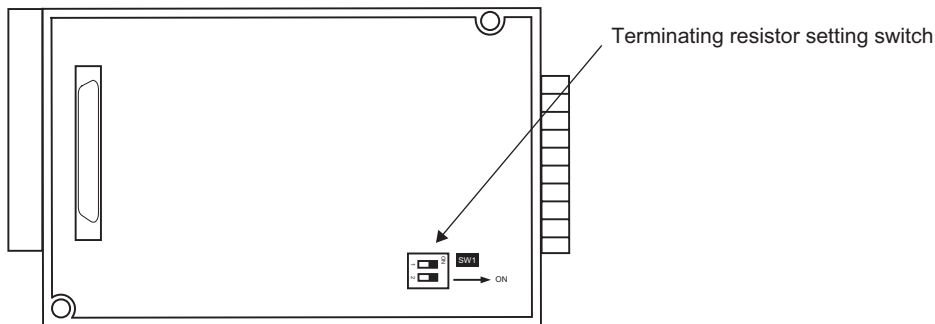
*1 The default setting is "Enable".



Rear View of RS-422/485 communication unit

26.3 Preparatory Procedures for Monitoring

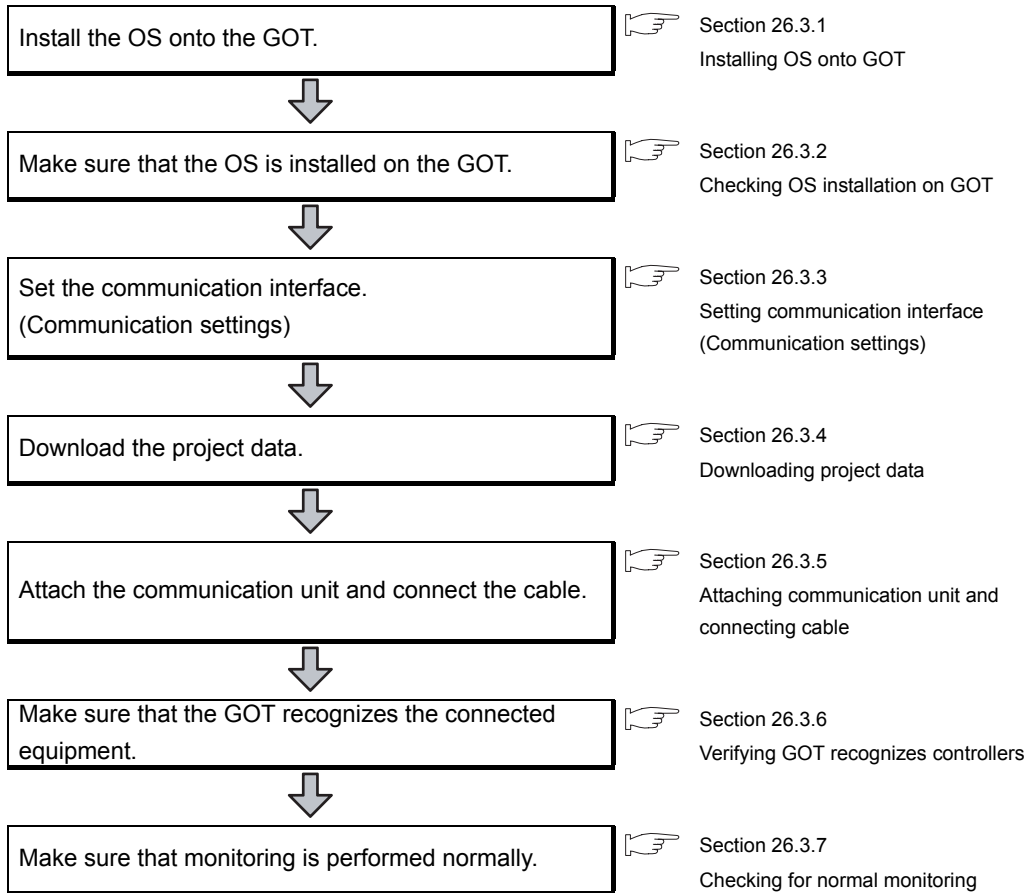The following the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the PLC side setting


This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

Section 26.4 Controller Side Setting

26.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

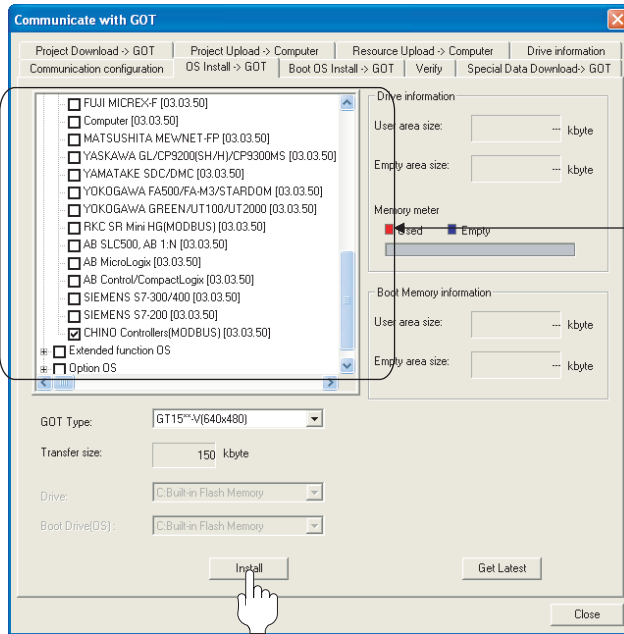 GT Designer2 Version Basic Operation/Data Transfer Manual




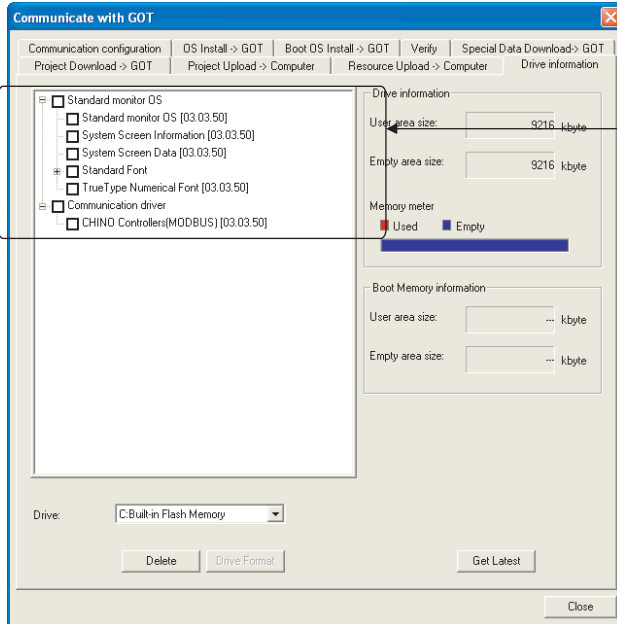
Check the following under the Communication driver.
• CHINO Controllers(MODBUS)

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

26.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

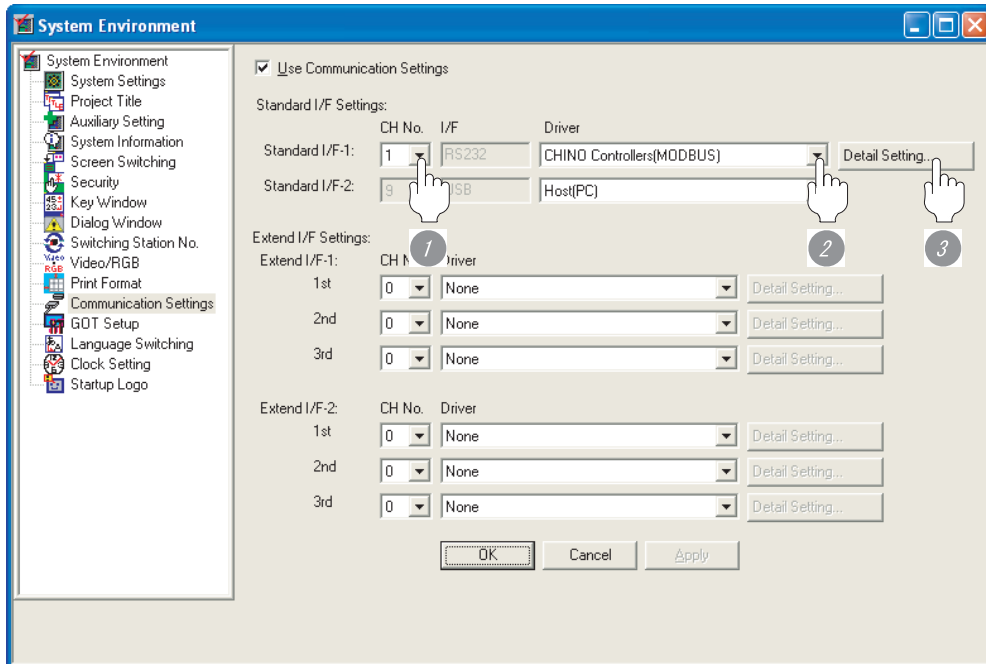
- 1) Standard monitor OS
- 2) Communication driver: CHINO Controllers(MODBUS)

26.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "CHINO Controllers(MODBUS)".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	9600bps,19200bps,38400bps, 57600bps,115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: None>	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 1 Sec>	1 to 30 Sec
Host Address	Specify the host address (station No. of the GOT to which the temperature controller is connected) in the connected network. <Default: 1>	1 to 99
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 5ms>	0 to 300 ms
Format	Select the communication format. <Default: 1> format 1: Accessible to LT230/300/400/830,DZ1000/2000 Not accessible to GT120 format 2: Accessible to GT120	1/2

(1) Format

When connecting to GT120, specify format 2.

(2) Delay time

To connect the following models, set the send delay time to 30ms or more.

Model name
DZ1000, DZ2000

(3) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT □ User's Manual

(4) Precedence in communication settings

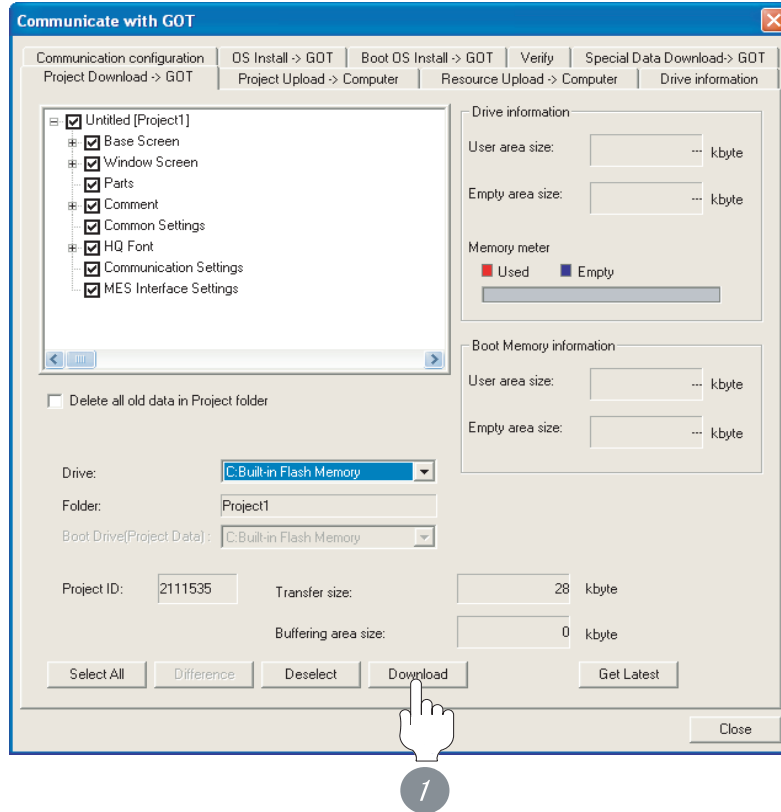
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

26.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


26.3.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

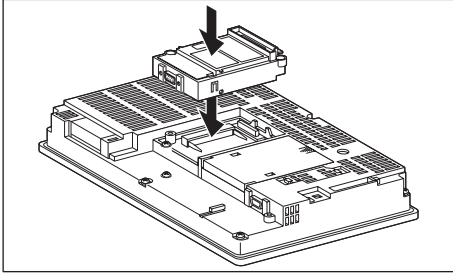1 Attaching the communication unit




- 1** Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

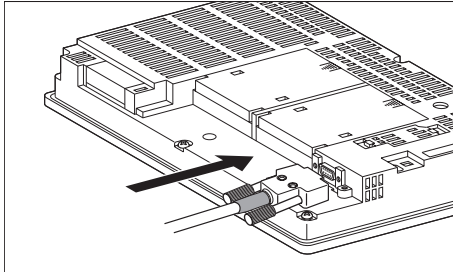
 [GT15 Serial Communication Unit User's Manual](#)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

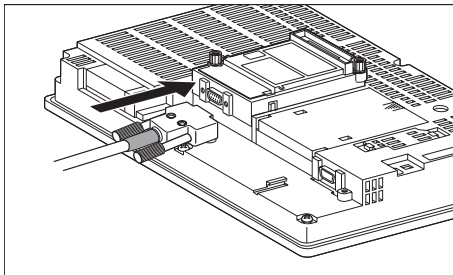- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

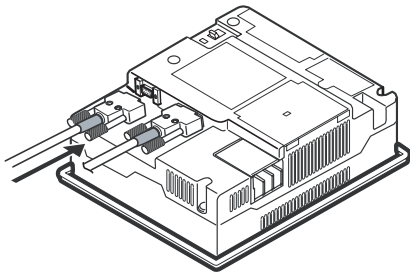(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

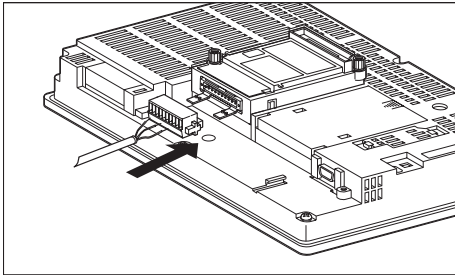- connection to the RS-232 interface




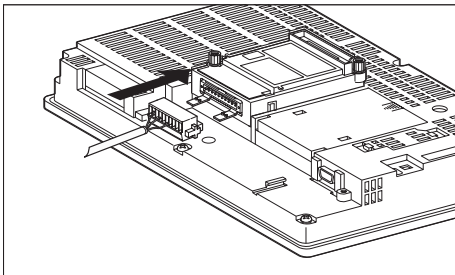- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

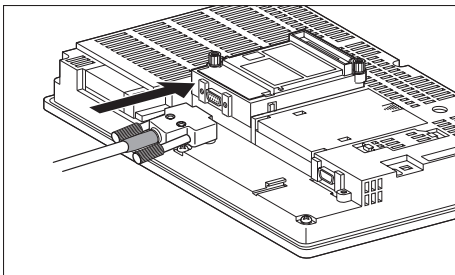- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

➡ GT15 RS-422 Conversion Unit User's Manual

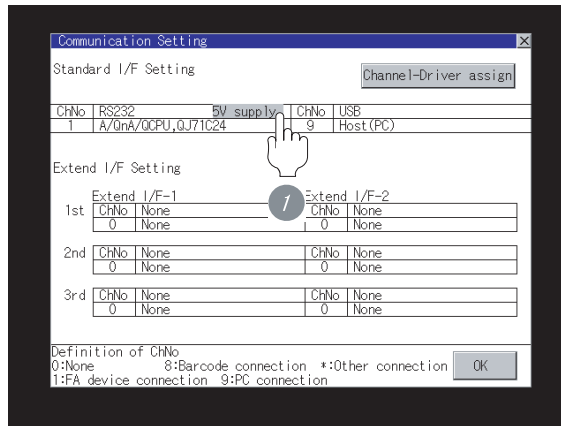
When using the RS-422 conversion unit

On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT.


For details on the utility, refer to the following manual:

GT User's Manual


- 1 Touch [5V supply].



- 2 Set [5V power supply] to "YES".

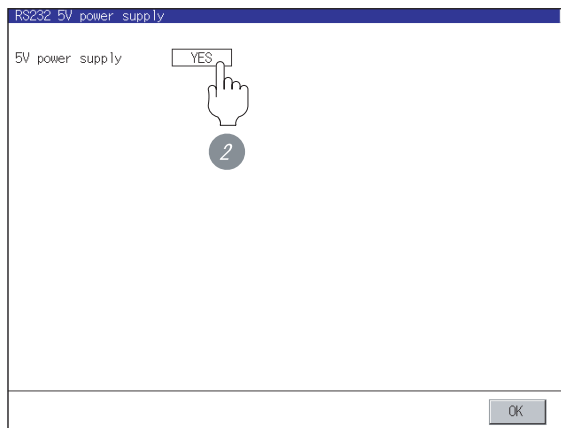


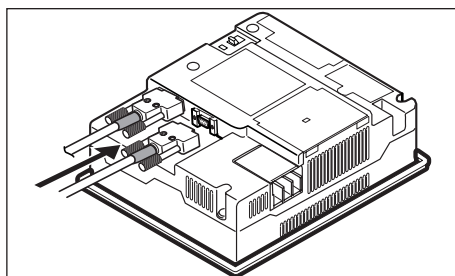(b) In the case of the GT11




- 1 Connect the RS-422 cable to the RS-422 interface on the GOT.

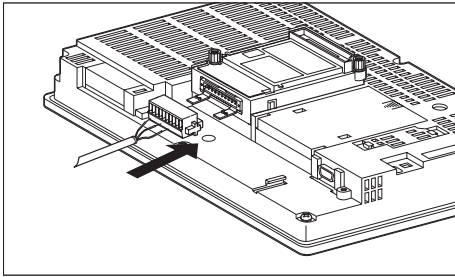(3) How to connect the RS-485 cable



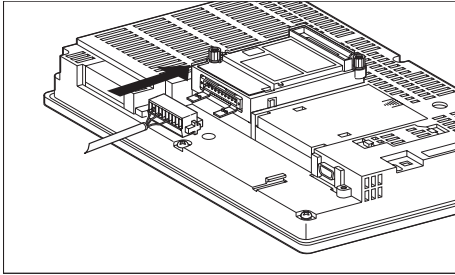- 1 Connect the RS-485 cable to the terminal block packed together with the RS-422/485 communication unit.



- 2 Connect the terminal block to the RS-422/485 communication unit on the GOT.

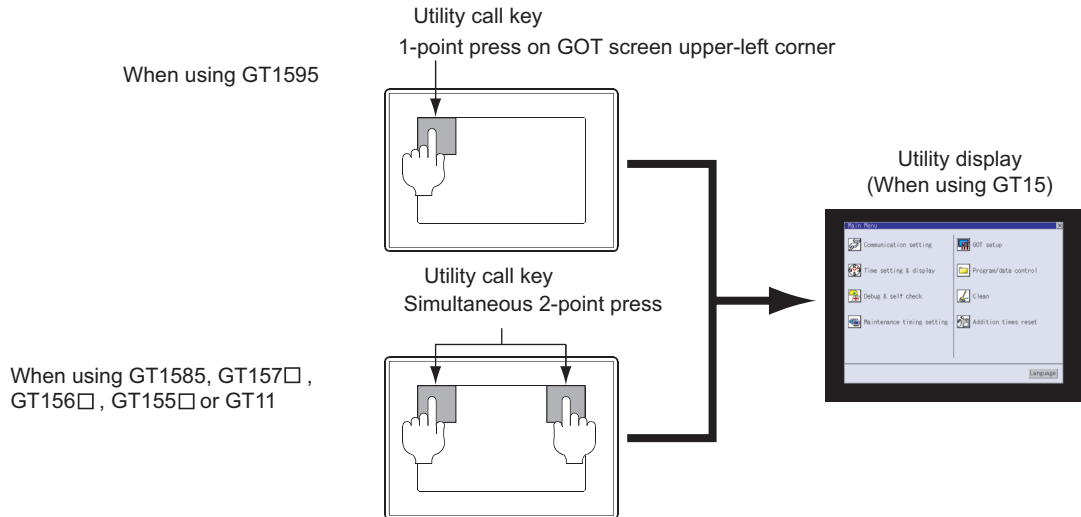
26.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point

When setting the utility call key to 1-point


When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.

For the setting of the utility call key, refer to the following.

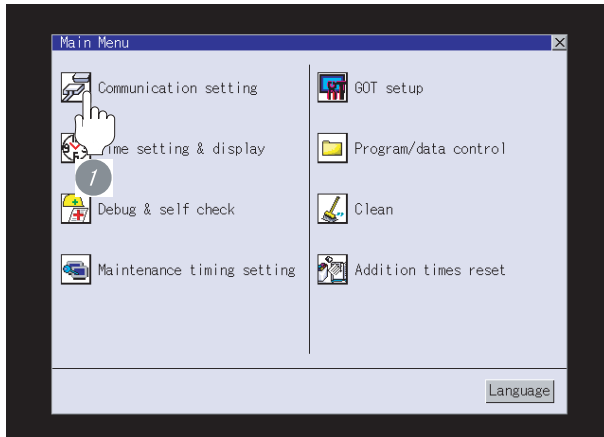☞ GT□ User's Manual



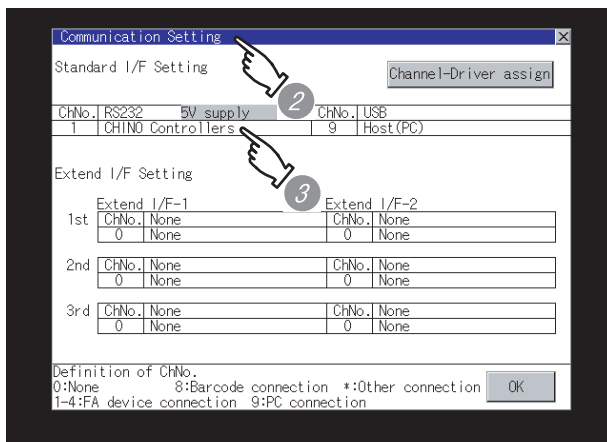- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver:
CHINO Controllers
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

Section 26.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

GT User's Manual

26.3.7 Checking for normal monitoring

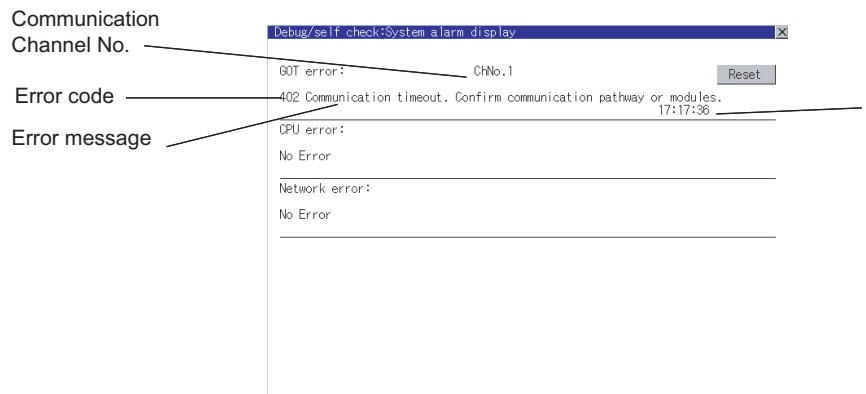
1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual

(When using GT15)



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

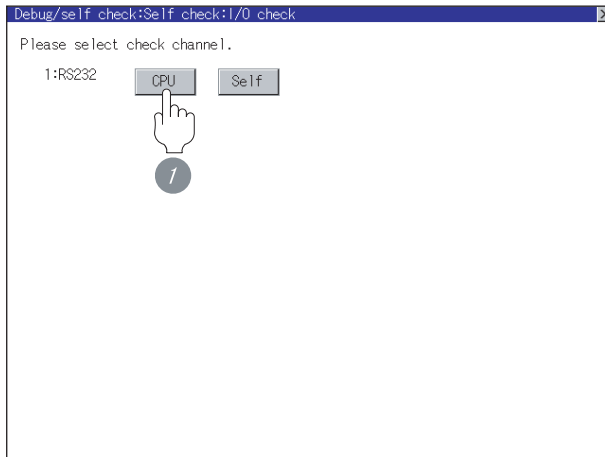
 GT Designer2 Version □ Screen Design Manual

2 Perform an I/O check


Whether the controller can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].
For details on the system alarm, refer to the following manual.

☞ GT □ User's Manual



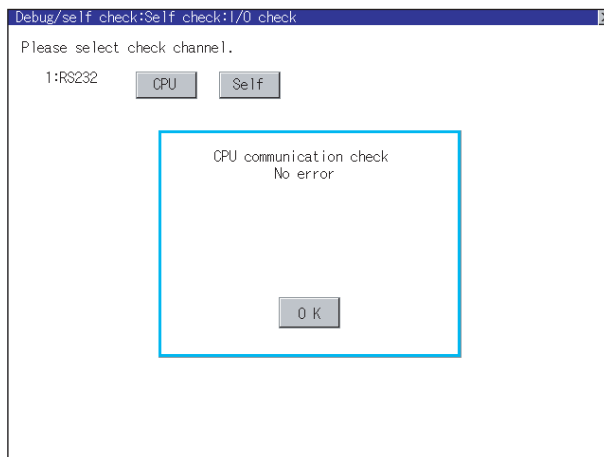- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected controller.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the controller side setting

When connecting the GOT, setting is required for the controller side. Confirm if the controller side setting is correct.

☞ Section 26.4 Controller Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

26.4 Controller Side Setting



(1) CHINO controller

For details of CHINO controller, refer to the following manual.

User's Manual for the CHINO controller

(2) Converter

For details on communication settings of the converter, refer to the following manual.

User's Manual for converter

	Model name	Reference
Controlle	LT230, LT300	Section 26.4.1
	LT400, LT830	Section 26.4.2
	DZ1000, DZ2000	Section 26.4.3
	GT120	Section 26.4.4
RS232C/RS485 converter	SC8-10	Section 26.4.4

26.4.1 Connecting to LT230, LT300 Series

1 Key Lock setting

To write the Digital and the Analog parameters, set the Key Lock setting to Lock 4.

2 Communication settings

Set the communication settings with controller key operation.

Setting items	Set value
Protocol	rtU : MODBUS RTU
Function	Com : Upper communication
Instrument No.*1	1 to 99
Transmission speed*2	9600bps, 19200bps
Character*2 (Bit length, Parity bit, Stop bit)	5: 8bit, None, 1bit 6: 8bit, None, 2bit 7: 8bit, Even, 1bit 8: 8bit, Even, 2bit 9: 8bit, Odd, 1bit 10: 8bit, Odd, 2bit

*1 Avoid duplication of the address with any of the other units.

*2 Adjust the settings with GOT settings.

26.4.2 Connecting to LT400, LT830 Series

1 Key Lock setting

To write the Digital and the Analog parameters, set the following Key Lock setting

- LT400 : Lock4
- LT830 : Lock3

2 Communication settings

Set the communication settings with controller key operation

Setting items	Set value
Protocol	rtU : MODBUS RTU
Function	Com : Upper communication
Instrument No.*1	1 to 99
Transmission speed*2	9600bps, 19200bps
Character*2 (Bit length, Parity bit, Stop bit)	8N1: 8bit, None, 1bit 8N2: 8bit, None, 2bit 8E1: 8bit, Even, 1bit 8E2: 8bit, Even, 2bit 8O1: 8bit, Odd, 1bit 8O2: 8bit, Odd, 2bit

*1 Avoid duplication of the address with any of the other units.

*2 Adjust the settings with GOT settings.

26.4.3 Connecting to DZ1000, DZ2000 Series

1 Key Lock setting

To write the Digital and the Analog parameters, set the Key Lock setting to Lock 2.

2 Communication settings

Set the communication settings with controller key operation.

Setting items	Set value
Protocol	rtU : MODBUS RTU
Function	Com : Upper communication
Instrument No.*1	1 to 31
Transmission speed*2	9600bps, 19200bps
Data length	8bit (fixed)
Stop bit	1bit (fixed)
Parity bit	None (fixed)

*1 Avoid duplication of the address with any of the other units.

*2 Adjust the settings with GOT settings.

26.4.4 Connecting to GT120 Series

1 Key Lock setting

To write the Digital and the Analog parameters, set the Key Lock setting to Lock 2.

2 Communication settings

Release the controller lock function in advance and set the following communication settings.
After completing the communication settings, set the Key Lock setting to Lock 3.

Setting items	Set value
Key lock	Loc3 : Lock3
Protocol	comr : MODBUS RTU
Instrument No.*1	1 to 95
Transmission speed*2	96: 9600bps 192: 19200bps
Data length	8bit
Stop bit*2	1bit, 2bit
Parity bit*2	nonE: None EVEN: Even odd: Odd

*1 Avoid duplication of the address with any of the other units.

*2 Adjust the settings with GOT settings.

26.4.5 Connecting SC8-10


1 Communication settings

Make the communication settings by operating the switches.

Setting item	Set value
Transmission speed select switch*1	9600bps, 19200bps
Communication type switch	RS-485, RS-422

*1 Adjust the settings with GOT and controller settings.

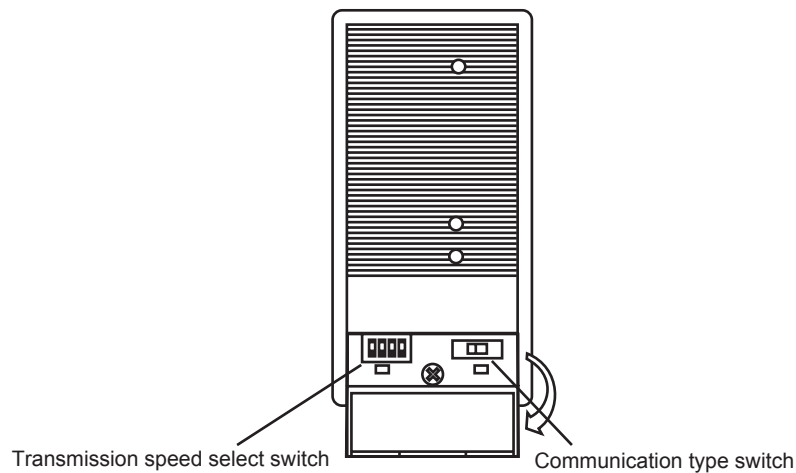2 Switch settings



(1) Transmission speed setting

Setting item	Set value	Switch No.			
		1	2	3	4
Transmission speed	9600bps	OFF	ON	OFF	OFF
	19200bps	OFF	OFF	ON	OFF




(2) Communication type setting

Setting item	
RS-485/RS-422	 RS-485 ↔ RS-422A

26.4.6 Station NO. settings

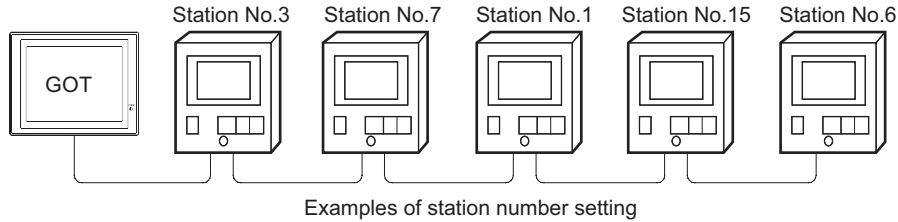Set each station number while making sure that one station number is used only once. The station number can be set without regard to the cable connection order. No problem is expected even if station numbers are not consecutive.



(1) Direct specification

When setting the device, specify the station number of the controller of which data is to be changed.

Model	Specification range
LT230, LT300, LT400, LT830	1 to 99
DZ1000, DZ2000	1 to 31
GT120	1 to 95

(2) Indirect specification

When setting the device, indirectly specify the station number of the controller of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).

When specifying the station No. from 100 to 115 on GT Designer2, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the controller.

Specification station NO.	Compatible device	Setting range
100	GD10	1 to 99 : LT230, LT300, LT400, LT830 1 to 31 : DZ1000, DZ2000 1 to 95 : GT120 For the setting other than the above, error (dedicated device is out of range) will occur.
101	GD11	
102	GD12	
103	GD13	
104	GD14	
105	GD15	
106	GD16	
107	GD17	
108	GD18	
109	GD19	
110	GD20	
111	GD21	
112	GD22	
113	GD23	
114	GD24	
115	GD25	

(3) All station specification

Target station differs depending on write-in operation or read-out operation.

- For write-in operation, all station will be a target.
- For read-out operation, only one station will be a target.

26.5 Precautions

26.5.1 Station number settings of temperature controller

In the system configuration, the controller with the station number set with the host address must be included. For details of host address setting, refer to the following.


 Section 26.3.4 Downloading project data

26.5.2 GOT clock function

Since the controller does not have a clock function, the settings of "time adjusting" or "time broad cast" by GOT clock control will be disabled.

26.5.3 Cutting the portion of multipul connection of the controller

By setting GOT internal device, GOT can cut the portion of multipul connection of the controller. For example, faulty station that has communication timeout can be cut from the system. For details of the setting contents of GOT internal device, refer to the following manual.

 GT Designer2 Version□ Screen Design Manual
Section 2.9.1 GOT internal device

26.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Connecting to the CHINO controller	Supporting the CHINO controller connection Cut the portion of multiple connection of the controller. Automatically avoid the monitoring operation of the faulty station.	2.58L	Communication driver CHINO controllers (MODBUS) [03.03.**]

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

31

INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION

CONNECTION TO FUJI SYS TEMPERATURE CONTROLLER



27.1 System Configuration page 27-2

This section describes the equipment and cables needed when connecting a GOT to a FUJI SYS temperature controller. Select a system suitable for your application.

27.2 Connection Cable page 27-6

This section describes the specifications of the cables needed when connecting a GOT to a FUJI SYS temperature controller. Check the specifications of the connection cables.

27.3 Preparatory Procedures for Monitoring page 27-14

This section provides the procedures to be followed before performing monitoring in connection to a FUJI SYS temperature controller. The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

27.4 Temperature Controller Side Setting page 27-27

The FUJI SYS temperature controller side settings for GOT connection are explained. When checking the temperature controller side settings, refer to this section.

27.5 Precautions page 27-37

This section describes the precautions about temperature controller connection. Refer to this section without fail before starting temperature controller connection.

27.6 List of Functions Added by Version Upgrade page 27-38

This section describes the functions added by version upgrade of GT Designer2 or OS.

27.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.

27.1.1 Connecting to PXR3, PXR4, PXR5 or PXR9






1 System configuration and connection conditions


Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	Max. 31 units	Between GOT and interface converter 15m or less	
		Between interface converter and temperature controller 500m or less	
1	Max. 31 units	Between GOT and interface converter 15m or less	
		Between interface converter and temperature controller 500m or less	
1	Max. 31 units	Between GOT and interface converter 15m or less	
		Between interface converter and temperature controller 500m or less	
1	Max. 31 units	Between GOT and temperature controller 500m or less	

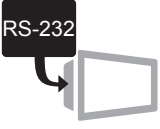2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P
	2	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-TE

(2) Interface converter

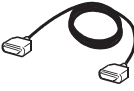

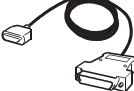
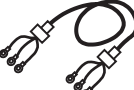

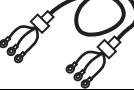
Image	No.	Name	Model name
	3	Interface converter 1)	RC-77
	4	Interface converter 2)	SI-30A
	5	Interface converter 3)	KS-485

3 is manufactured by SYSMEXRA CO., LTD. For details of the product, contact SYSMEXRA CO., LTD.

4 is manufactured by LINEEYE CO., LTD. For details of the product, contact LINEEYE CO., LTD.

5 is manufactured by System Sacom corp. For details of the product, contact System Sacom corp.

(3) Cable

Image	No.	Name	Model name
	6	RS-232 cable 1) • Between GOT and interface converter	(To be prepared by the user.  Section 27.2 Connection Cable)
	7	RS-232 cable 2) • Between GOT and interface converter	
	8	RS-485 cable 1) • Between temperature controller and interface converter	
	9	RS-485 cable 2) • Between temperature controller and interface converter	
	10	RS-485 cable 3) • Between temperature controller and interface converter	
	11	RS-485 cable 4) • Between temperature controller and GOT	

27.1.2 Connecting to PXG4, PXG5, PXG9 or PXH9









1 System configuration and connection conditions


Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	1	Between GOT and temperature controller 3m or less	<p>5 RS-232 cable 3)</p> <p>MAX3m</p>
1	Max. 31 units	Between GOT and interface converter 15m or less	<p>Max. 31 units</p> <p>3 Interface converter 1)</p> <p>8 RS-485 cable 1)</p> <p>6 RS-232 cable 1)</p> <p>MAX500m</p> <p>MAX15m</p>
		Between interface converter and temperature controller 500m or less	
1	Max. 31 units	Between GOT and interface converter 15m or less	<p>Max. 31 units</p> <p>4 Interface converter 4)</p> <p>9 RS-485 cable 5)</p> <p>7 RS-232 cable 4)</p> <p>MAX500m</p> <p>MAX15m</p>
		Between interface converter and temperature controller 500m or less	
1	Max. 31 units	Between GOT and temperature controller 500m or less	<p>Max. 31 units</p> <p>10 RS-485 cable 4)</p> <p>MAX500m</p>

2 System equipment

(1) GOT

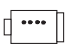Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-TE 

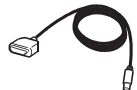
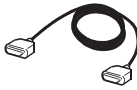

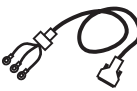
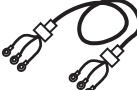
(2) Temperature controller

Image	No.	Name	Model name
	3	Interface converter 1)	RC-77
	4	Interface converter 4)	K3SC-10

3 is manufactured by SYSMEXRA CO., LTD. For details of the product, contact SYSMEXRA CO., LTD.

4 is manufactured by OMRON Corporation. For details of the product, contact OMRON Corporation.

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 3) • Between GOT and temperature controller	ZZPPXH1*TK4H4563
	6	RS-232 cable 1) • Between GOT and interface converter	(To be prepared by the user.  Section 27.2 Connection Cable)
	7	RS-232 cable 4) • Between GOT and interface converter	
	8	RS-485 cable 1) • Between temperature controller and interface converter	
	9	RS-485 cable 5) • Between temperature controller and interface converter	
	10	RS-485 cable 4) • Between temperature controller and GOT	

5 is manufactured by FUJI SYS CO., LTD. For details of the product, contact FUJI SYS CO., LTD.

27.2 Connection Cable


The RS-232 cable or RS-485 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable	
		RS-232 cable (Refer to Section 27.2.1)	RS-485 cable (Refer to Section 27.2.2)
Temperature controller	PXR3* ¹ , PXR4* ¹ , PXR5* ¹ , PXR9* ¹ ,	-	RS-485 cable 1), RS-485 cable 2) RS-485 cable 3), RS-485 cable 4)
	PXG4* ² , PXG5* ² , PXG9* ²	-	RS-485 cable 1), RS-485 cable 4) RS-485 cable 5)
	PXH9* ²		
Interface converter	RC-77	RS-232 cable 1)	RS-485 cable 1)
	SI-30A	RS-232 cable 2)	RS-485 cable 2)
	KS-485		RS-485 cable 3)
	K3SC-10	RS-232 cable 4)	RS-485 cable 5)

*1 For PXR3, PXR4, PXR5 and PXR9, select a model to support the RS-485 MODBUS communication function.

*2 When carrying out RS-485 communication with the GOT, select a model to support the RS-485 function for PXG4, PXG5, PXG9 and PXH9.

For details of the models, refer to the following manual.

 User's Manual for the FUJI SYS temperature controller

27.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a PLC.

1 Connection diagram

(1) RS-232 cable 1)

GOT side		Cable connection and signal direction	Interface converter side (RC-77*)	
Signal name	Pin No.		Pin No.	Signal name
CD	1		1	CD
RD(RXD)	2		2	RXD
SD(TXD)	3		3	TXD
ER(DTR)	4		4	DTR
SG	5		5	SG
DR(DSR)	6		6	DSR
RS(RTS)	7		7	RTS
CS(CTS)	8		8	CTS
NC	9		9	NC
FG	—			


* Use the interface converter in the DCE mode.

(2) RS-232 cable 2)

GOT side		Cable connection and signal direction	Interface converter side (SI-30A*, KS-485)	
Signal name	Pin No.		Pin No.	Signal name
NC	1		1	FG
RD(RXD)	2		3	RXD
SD(TXD)	3		2	TXD
ER(DTR)	4		20	DTR
SG	5		7	SG
DR(DSR)	6		6	DSR
RS(RTS)	7		4	RTS
CS(CTS)	8		5	CTS
NC	9		9	NC
FG	—	Other than above	NC	

* Use the interface converter in the DCE mode.

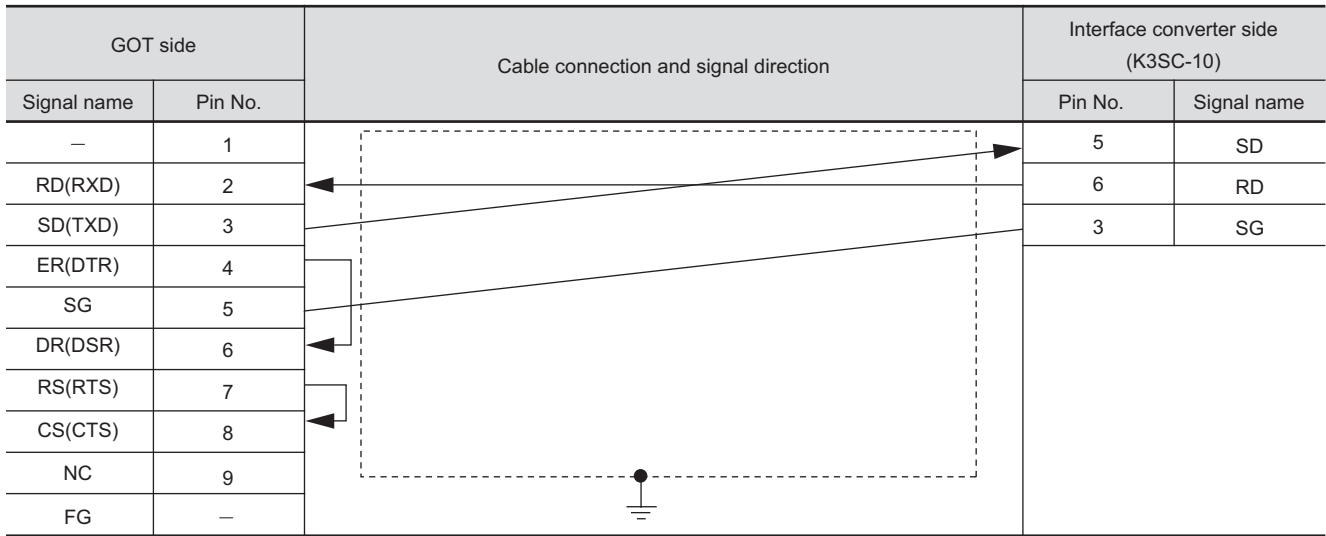(3) RS-232 cable 4)



2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	DDK Ltd
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) FUJI SYS temperature controller side connector

Use the connector compatible with the FUJI SYS temperature controller side.

For details, refer to the following manual.

 User's Manual for the FUJI SYS temperature controller

3 Precautions when preparing cable


The length of the RS-232 cable must be 15m or less.

27.2.2 RS-485 cable

The following shows the connection diagrams and connector specifications of the RS-485 cable used for connecting the GOT to a temperature controller.

1 Connection diagram

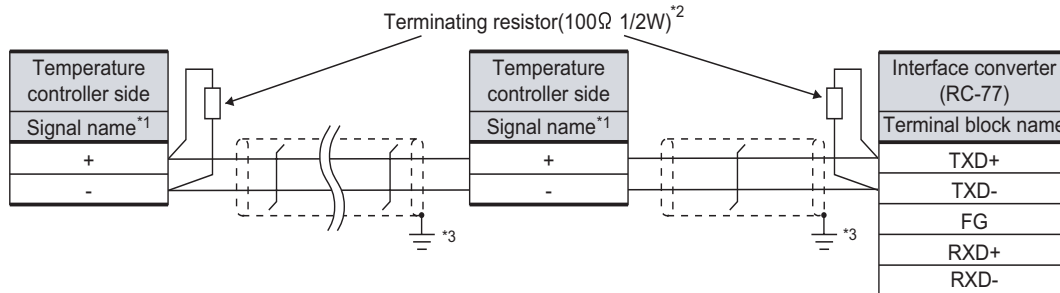(1) RS-485 cable 1)




*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.

Signal name	Model of temperature controller					
	PXR3	PXR4	PXR5/9	PXG4	PXG5/9	PXH9
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
+	15	7	1	7	1	14
-	14	8	2	8	2	16

*2 Terminating resistor should be provided for a temperature controller which will be a terminal.
Terminating resistor should be provided outside for an interface converter which will be a terminal, with the terminating switch turned OFF.

*3 Connect FG grounding to the appropriate part of a cable shield line.

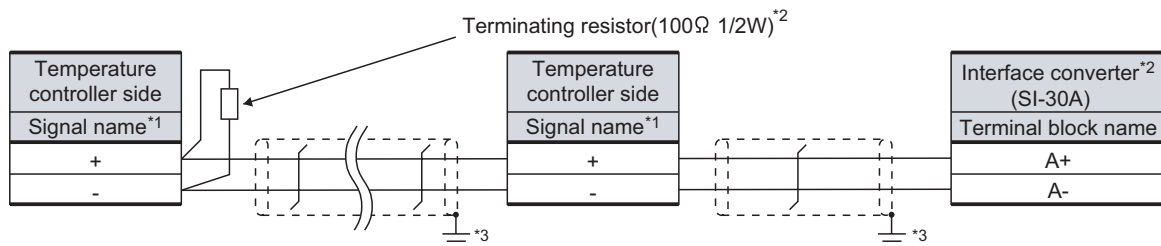(2) RS-485 cable 2)




*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.

Signal name	Model of temperature controller					
	PXR3	PXR4	PXR5/9	PXG4	PXG5/9	PXH9
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
+	15	7	1	7	1	14
-	14	8	2	8	2	16

*2 Terminating resistor should be provided for a temperature controller which will be a terminal.
Turn ON the terminating switch of an interface converter which will be a terminal.

*3 Connect FG grounding to the appropriate part of a cable shield line.

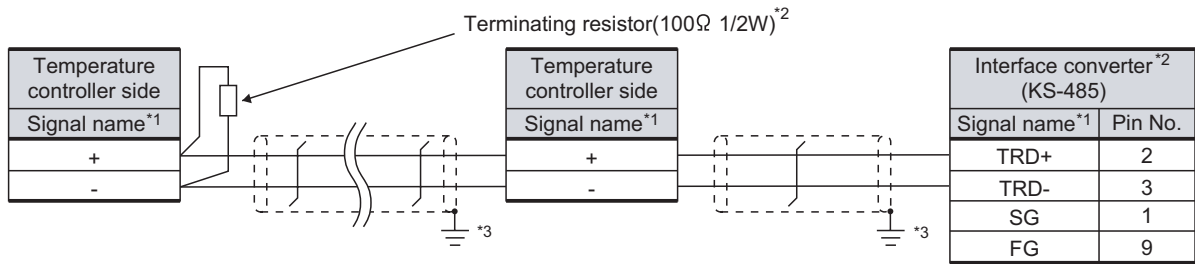(3) RS-485 cable 3)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.


Signal name	Model of temperature controller					
	PXR3	PXR4	PXR5/9	PXG4	PXG5/9	PXH9
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
+	15	7	1	7	1	14
-	14	8	2	8	2	16

*2 Terminating resistor should be provided for a temperature controller which will be a terminal.

Turn ON the terminating switch of a interface converter which will be a terminal.

*3 Connect FG grounding to the appropriate part of a cable shield line.

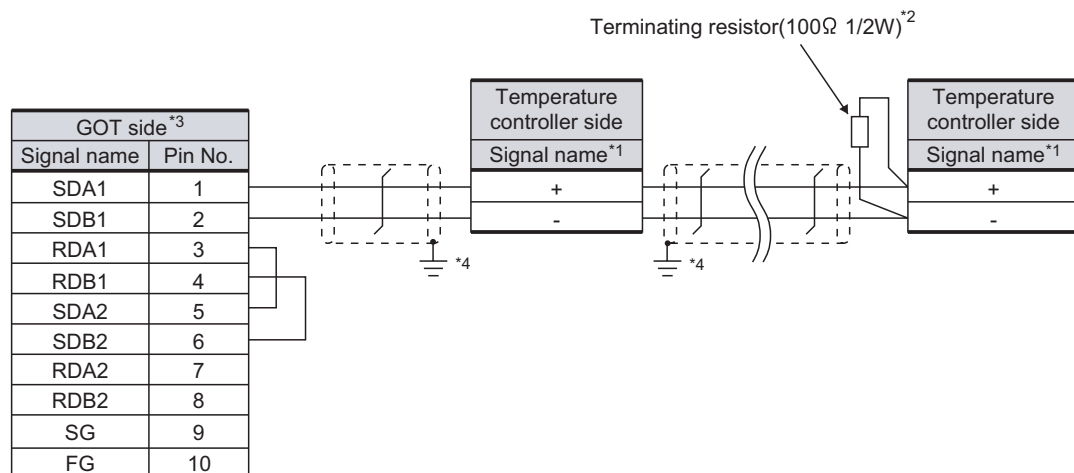(4) RS-485 cable 4)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.

Signal name	Model of temperature controller					
	PXR3	PXR4	PXR5/9	PXG4	PXG5/9	PXH9
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
+	15	7	1	7	1	14
-	14	8	2	8	2	16

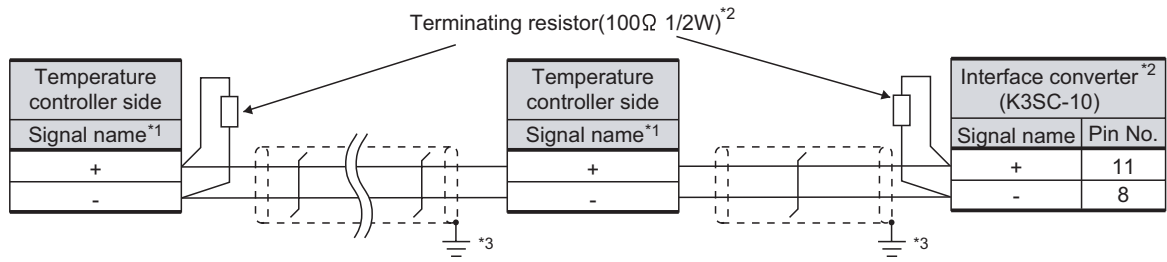
*2 Terminating resistor should be provided for a temperature controller which will be a terminal.

*3 Set the terminating resistor of GOT side to "Enable".

4 Connecting terminating resistors

*4 Connect FG grounding to the appropriate part of a cable shield line.

(5) RS-485 cable 5)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.

Signal name	Model of temperature controller					
	PXR3	PXR4	PXR5/9	PXG4	PXG5/9	PXH9
	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
+	15	7	1	7	1	14
-	14	8	2	8	2	16

*2 Terminating resistor should be provided for an interface converter and a temperature controller which will be terminals.

*3 Connect FG grounding to the appropriate part of a cable shield line.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-485 cable, use the terminal block packed together with the RS-422/485 communication unit.

GOT	Connector model	Connector type	Manufacturer
GT15-RS4-TE	SL-SMT3.5/10/90F BOX	—	Weidmuller interconnections inc.

(2) FUJI SYS temperature controller side connector

Use the connector compatible with the FUJI SYS temperature controller side module.

For details, refer to the following manual.

 User's Manual for the FUJI SYS temperature controller

3 Precaution when preparing a cable

- (1) The length of the RS-485 cable must be 500m or less.

4 Connecting terminating resistors


(1) GOT

Set the terminating resistor of RS-422/485 communication unit using the terminating resistor setting switch.

Terminating resistor ^{*1}	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF



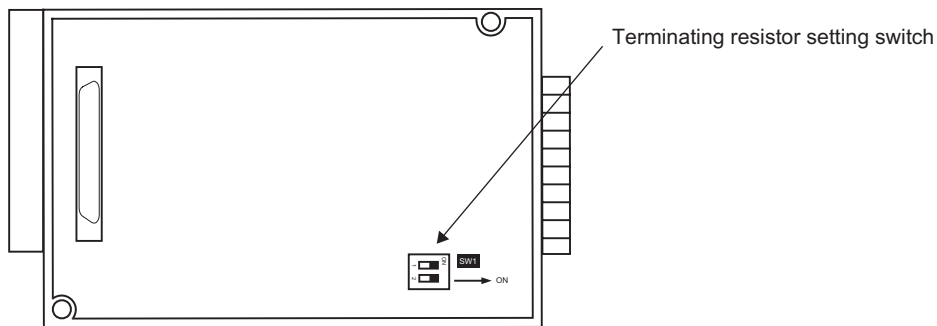
*1 The default setting is "Enable".



Rear View of RS-422/485 communication unit

27.3 Preparatory Procedures for Monitoring

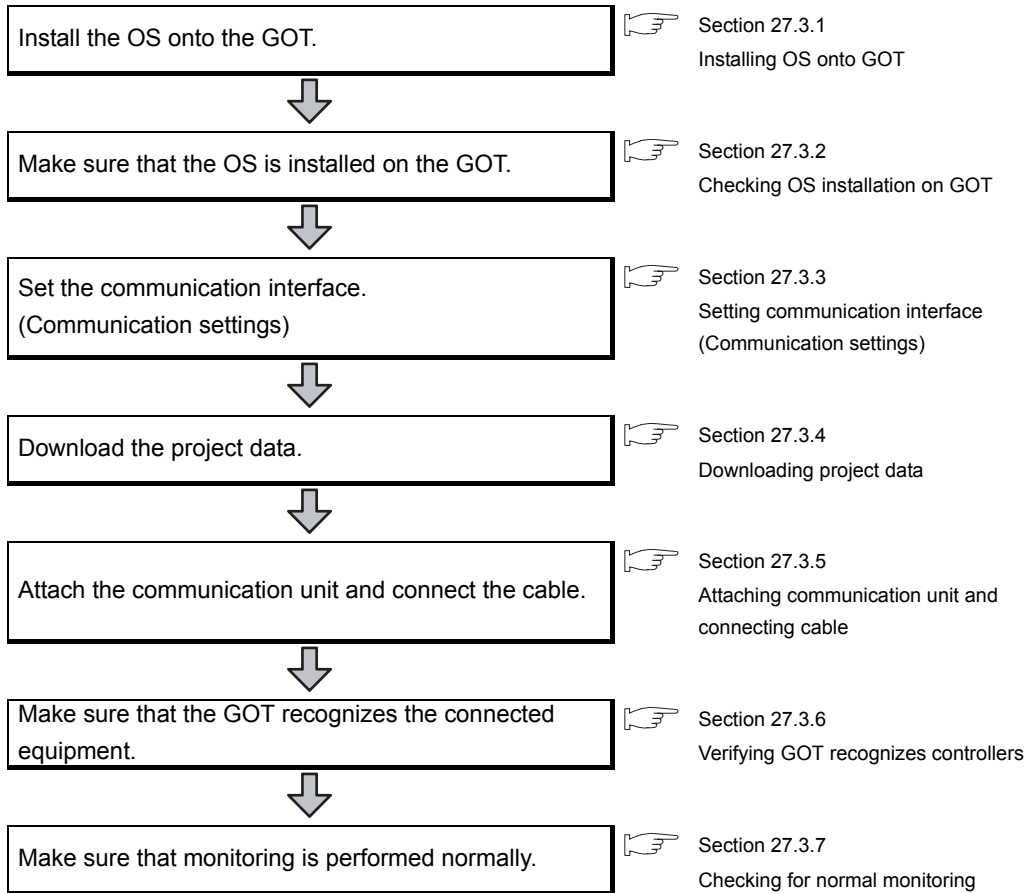The following the procedures to be taken before monitoring and corresponding reference sections.




Point

Confirming the PLC side setting


This section explains the GOT side setting.


When confirming the PLC side setting, refer to the following.

 Section 27.4 Temperature Controller Side Setting

27.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

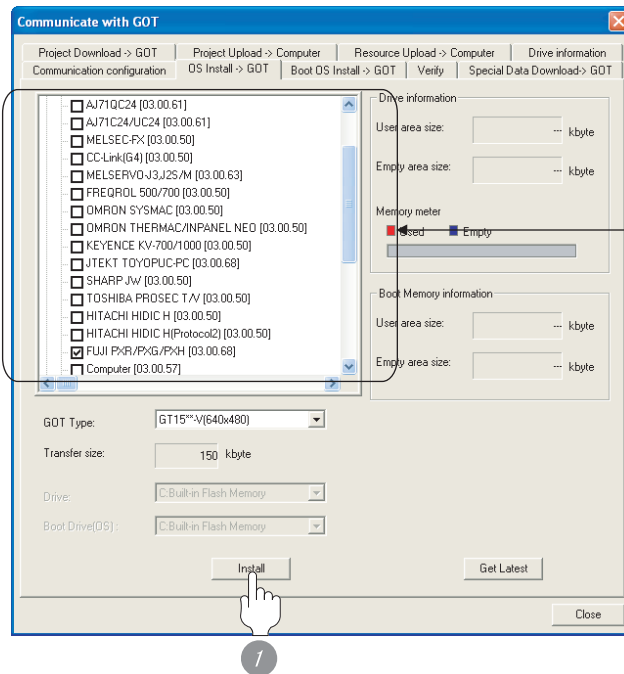 GT Designer2 Version □ Basic Operation/Data Transfer Manual




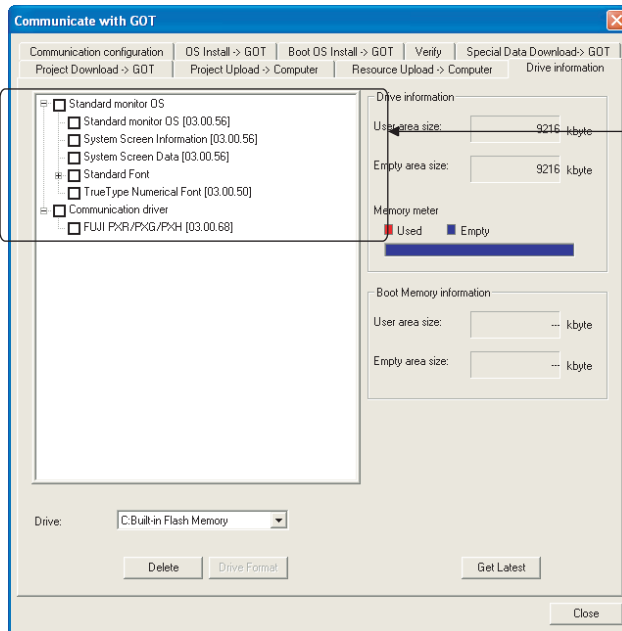
Check the following under the Communication driver.
• FUJI PXR/PXG/PXH

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

27.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

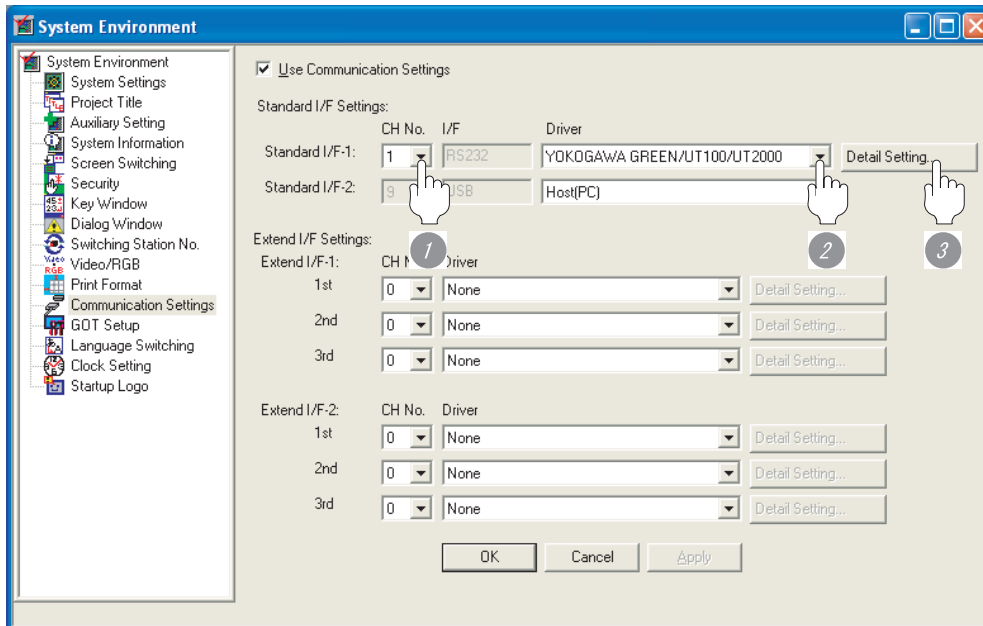
- 1) Standard monitor OS
- 2) Communication driver: FUJII PXR/PXG/PXH

27.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings




(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "FUJI PXR/PXG/PXH".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	9600bps,19200bps,38400bps, 57600bps,115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Odd>	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec
Host Address	Specify the host address (station No. of the GOT to which the temperature controller is connected) in the connected network. <Default: 1>	1 to 255
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 5ms>	0 to 300 ms
Format	Select the communication format. <Default: 1> format 1: Accessible to PXR/PXG/PXH format 2: Accessible to PXR/PXG, Not accessible to PXH	1/2



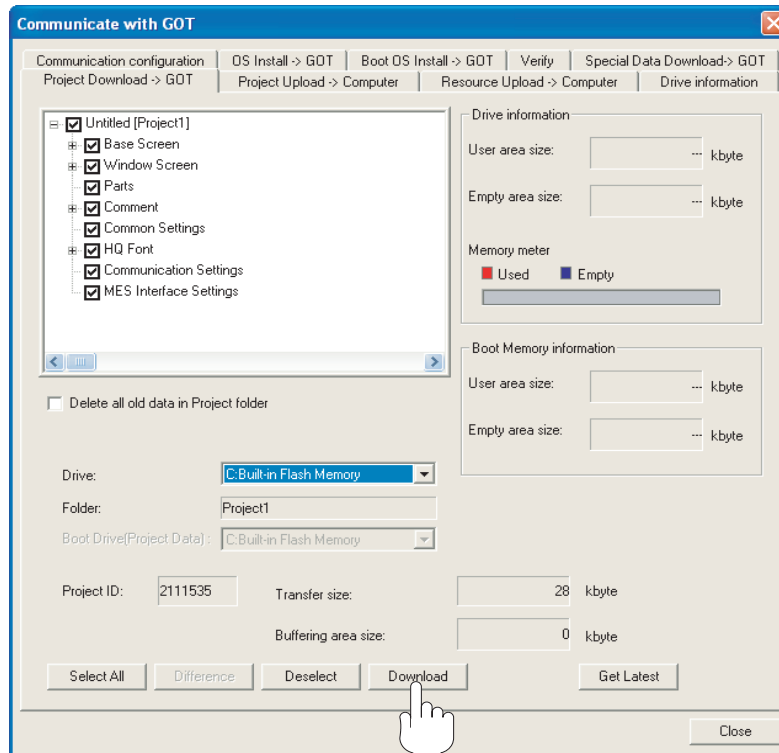
- (1) Host address
Do not specify a number between 200 and 215.
- (2) Format
 - When connecting to PXH, specify the format 1.
 - When connecting to only PXR/PXG, specifying the format 2 is recommended.
- (3) Delay time
Set the delay time to 5ms or more.
- (4) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
For details on the Utility, refer to the following manual.
 GT User's Manual
- (5) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

27.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


27.3.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

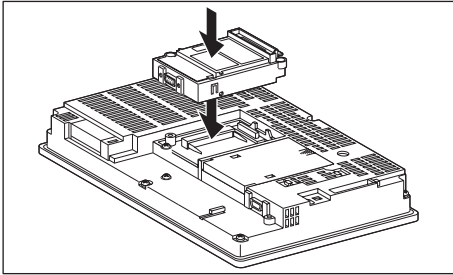1 Attaching the communication unit




- 1** Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

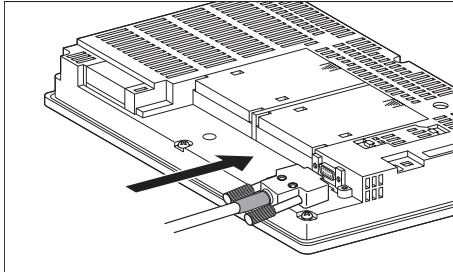
 [GT15 Serial Communication Unit User's Manual](#)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

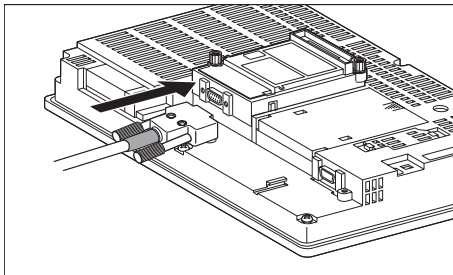- connection to the RS-232 communication unit




- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

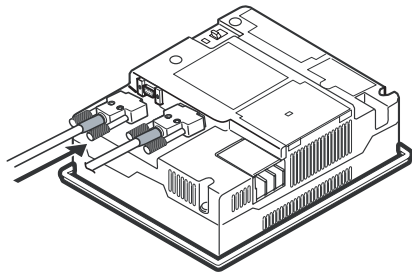(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

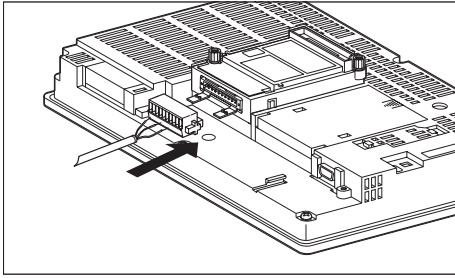(2) How to connect the RS-485 cable



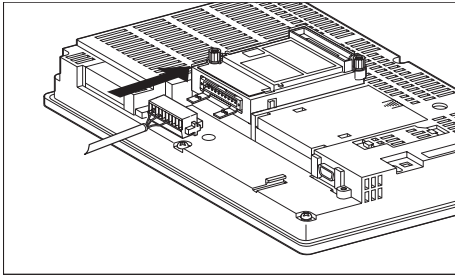- 1 Connect the RS-485 cable to the terminal block packed together with the RS-422/485 communication unit.



- 2 Connect the terminal block to the RS-422/485 communication unit on the GOT.

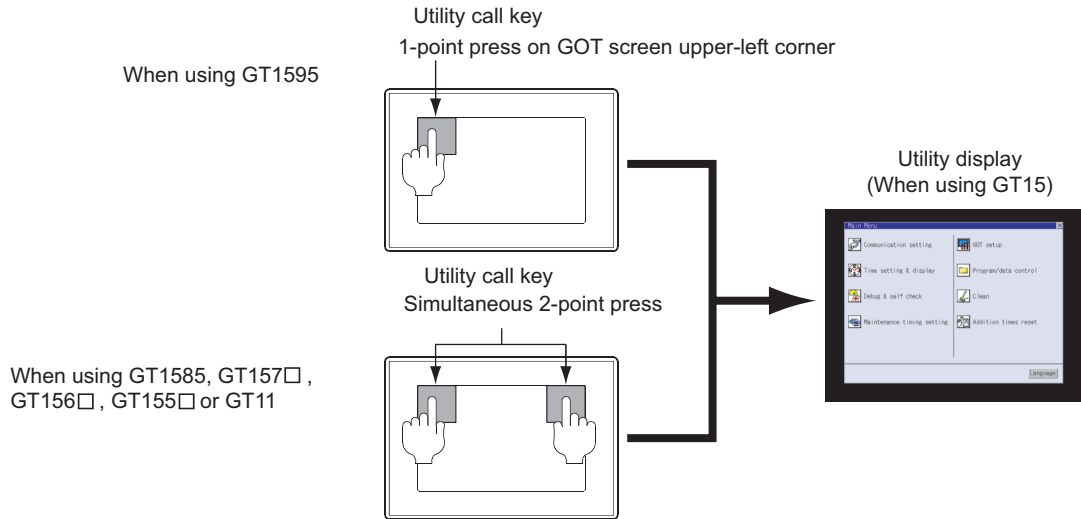
27.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point


When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

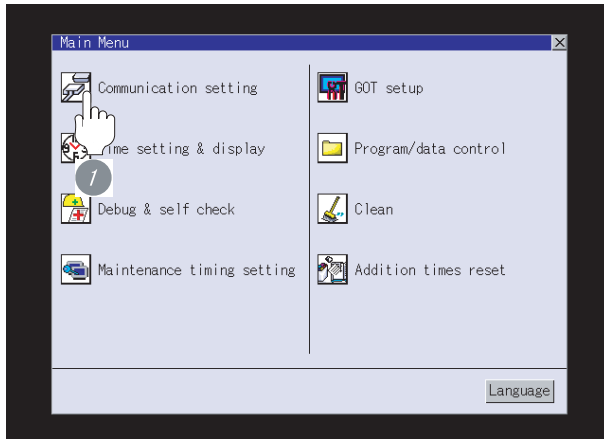☞ GT□ User's Manual



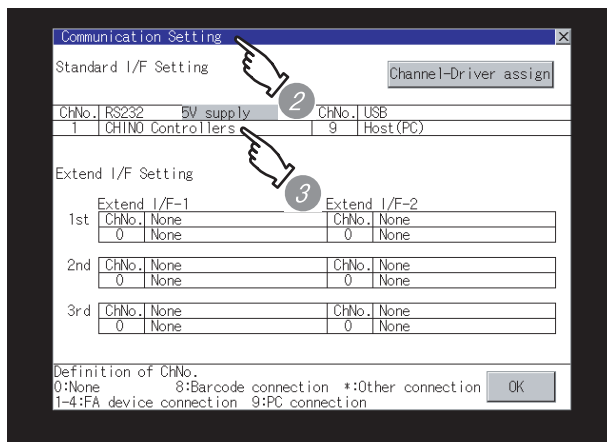- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver:
FUJI PXR/PXG/PXH
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

➡ Section 27.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

➡ GT □ User's Manual

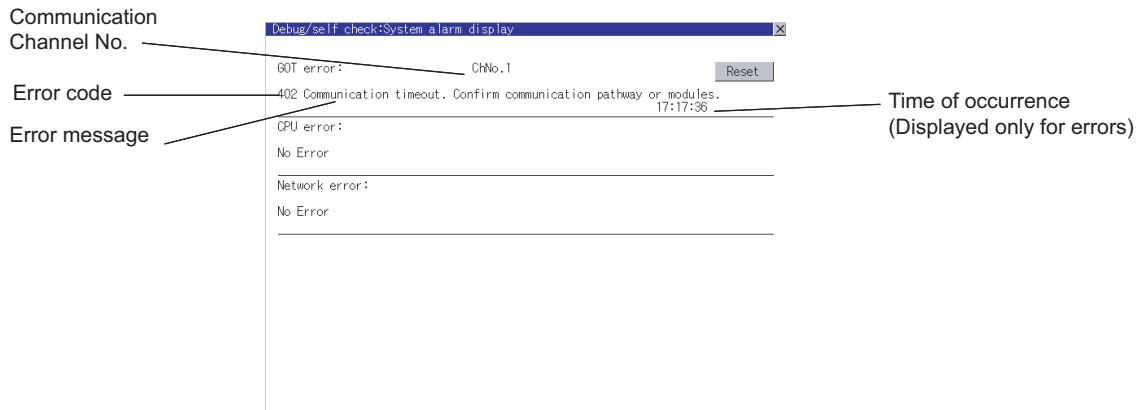
27.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)




Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

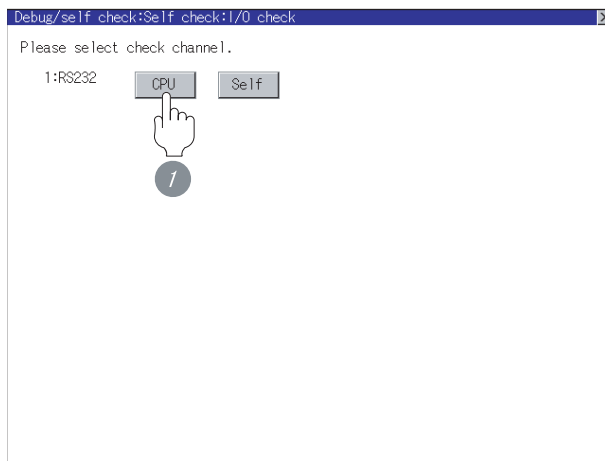
2 Perform an I/O check

Whether the temperature controller can communicate with the GOT or not can be detected by the I/O check function.


If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].
For details on the I/O check, refer to the following manual.

 GT □ User's Manual



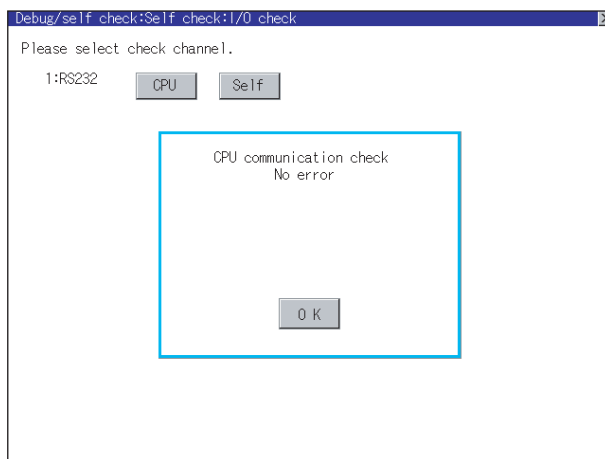- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected temperature controller.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the temperature controller side setting

When connecting the GOT, setting is required for the temperature controller side.

Confirm if the temperature controller side setting is correct.

 Section 27.4 Temperature Controller Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.


27.4 Temperature Controller Side Setting

Point

- (1) FUJI SYS temperature controller
For details of FUJI SYS temperature controller, refer to the following manual.

 User's Manual for the FUJI SYS temperature controller

- (2) Interface converter
For details on communication settings of the interface converter, refer to the following manual.

 User's Manual for interface converter

	Model name	Reference
Temperature controller	PXR3, PXR4, PXR5, PXR9	Section 27.4.1
	PXG4, PXG5, PXG9	Section 27.4.2
	PXH9	Section 27.4.3
Interface converter	RC-77	Section 27.4.4
	SI-30A	Section 27.4.5
	KS-485	Section 27.4.6
	K3SC-10	Section 27.4.7

27.4.1 Connecting to PXR3/4/5/9

1 Communication settings

Make the communication settings by operating the key of the temperature controller.

Item	Set value
Transmission speed	9600bps (fixed)
Data length	8 bits (fixed)
Parity bit ^{*1}	Even, odd or none
Stop bit	1 bit (fixed)
Station No. ^{*2}	1 to 255
Communication protocol	MODBUS

*1 Adjust the settings with GOT settings.

*2 Avoid duplication of the station No. with any of the other units.

27.4.2 Connecting to PXG4, PXG5 or PXG9.

1 Communication settings

Make the communication settings by operating the key of the temperature controller.

(1) RS-485 communication settings

Item	Set value
Transmission speed ^{*1}	9600bps, 19200bps
Data length	8 bits (fixed)
Parity bit ^{*1}	Even, odd or none
Stop bit	1 bit (fixed)
Station No. ^{*2}	1 to 255
Communication permissions ^{*3}	Read only permission or read and overwrite permission

*1 Adjust with GOT settings.

*2 Avoid duplication of the station No. with any of the other units.

*3 Set if required.

(2) RS-232 communication settings (PC loader communication)

Item	Set value
Transmission speed	9600bps (fixed)
Data length	8 bits (fixed)
Parity bit	None (fixed)
Stop bit	1 bit (fixed)

27.4.3 Connecting to PXH9

1 Communication settings

Make the communication settings by operating the key of the temperature controller.

(1) RS-485 communication settings

Item	Set value
Transmission speed ^{*1}	9600bps, 19200bps, 38400bps
Data length	8 bits (fixed)
Parity bit ^{*1}	Even, odd or none
Stop bit	1 bits (fixed)
Station No. ^{*2}	1 to 255

*1 Adjust with GOT settings.

*2 Avoid duplication of the station No. with any of the other units.

(2) RS-232 communication settings (PC loader communication)

Item	Set value
Transmission speed ^{*1}	9600bps, 19200bps, 38400bps
Data length	8 bits (fixed)
Parity bit ^{*1}	Even, odd or none
Stop bit	1 bits (fixed)
Station No.	1 (fixed)

*1 Adjust with GOT settings.

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS. TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

31

INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION

27.4.4 Connecting to interface converter (RC-77)


1 Communication settings

Make the communication settings using a setting switch.

Item	Set value
Transmission speed*1	9600bps, 19200bps, 38400bps
MANUAL-AUTO	AUTO
DCE/DTE switching	DCE
RS-422/485 switching	RS-485
Terminating resistor selection	OFF


*1 Adjust with GOT and temperature controller settings.

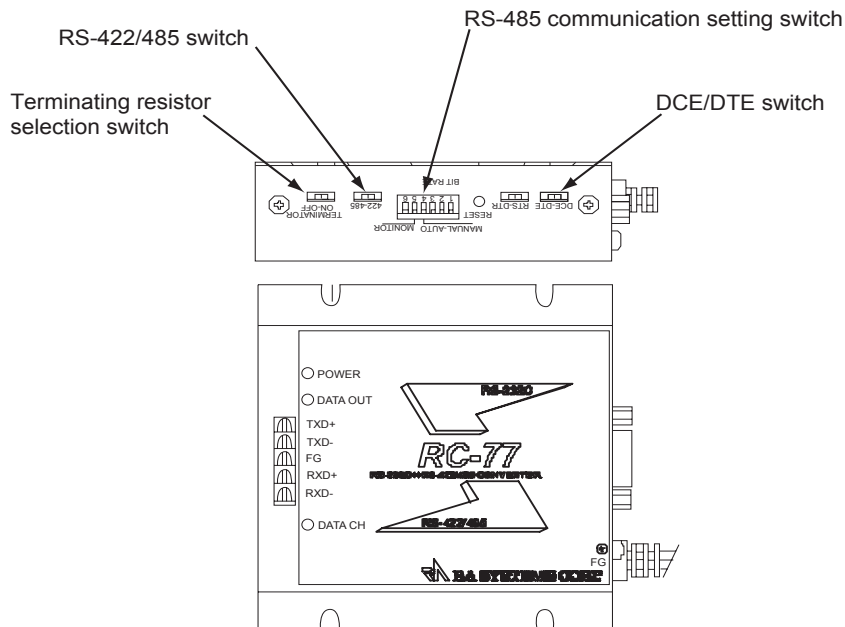2 Settings by switch





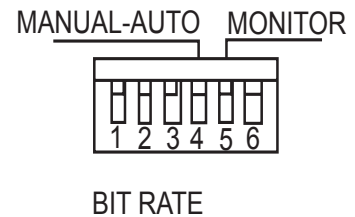
(1) Settings of transmission speed and MANUAL-AUTO

Item	Set value	Switch No.			
		1	2	3	4
Transmission speed	9600bps	ON	ON	OFF	
	19200bps	OFF	OFF	ON	
	38400bps	ON	OFF	ON	
MANUAL-AUTO	AUTO				ON



(2) Settings of DCE/DTE, RS-422/485 and terminating resistor selection

Item	Set value	
DCE/DTE	DCE	DCE-DTE 
RS-422/485	RS-485	422-485 
Terminating resistor selection	OFF	TERMINATOR ON-OFF 

25	CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER
26	CONNECTION TO CHINO CONTROLLER
27	CONNECTION TO FUJI SYS. TEMPERATURE CONTROLLER
28	CONNECTION TO YAMATAKE TEMPERATURE CONTROLLER
29	CONNECTION TO YOKOGAWA TEMPERATURE CONTROLLER
30	CONNECTION TO RKC TEMPERATURE CONTROLLER
31	INVERTER CONNECTION
32	SERVO AMPLIFIER CONNECTION

27.4.5 Connecting to interface converter (SI-30A)


1 Communication settings

Make the communication settings using a setting switch.

Item	Set value
Transmission speed	9600bps
MANUAL-AUTO	AUTO
DCE/DTE switching	DCE
Terminating resistor selection ^{*1}	ON/OFF

*1 Set if required.

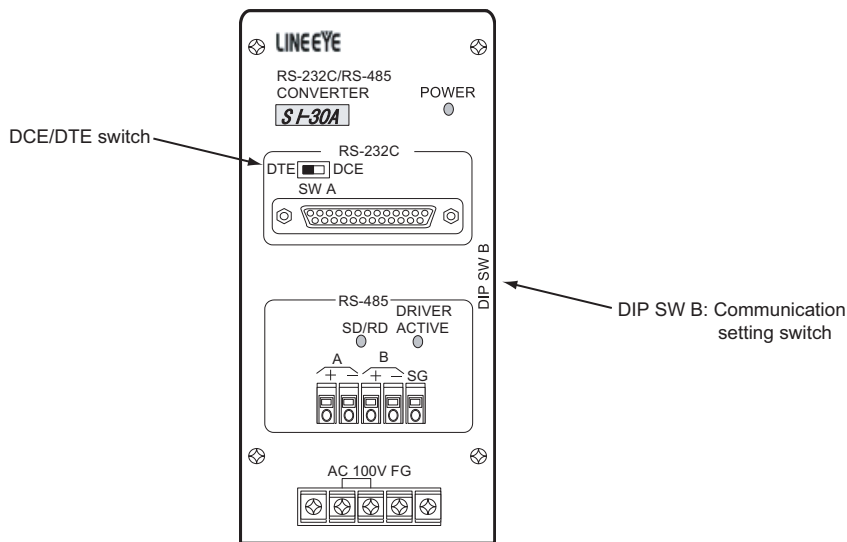2 Settings by switch



(1) Settings of transmission speed, Auto-Manual, terminating resistor selection

Item	Set value	Switch No. of DIP SWB				
		1	2	3	ÇS	5
Transmission speed	9600bps	ON	ON	OFF		
MANUAL-AUTO	AUTO				ON	
Terminating resistor selection ^{*1}	Enable					ON
	Disable					OFF

*1 Set if required.

(2) Setting of DCE/DTE switching

Item	Set value
DCE/DTE	DCE

DTE DCE
SW A

27.4.6 Connecting to interface converter (KS-485)


1 Communication settings

Make the communication settings using a setting switch.

Item	Set value
Transmission speed	9600bps
Terminating resistor selection ^{*1}	ON/OFF

^{*1} Set if required.

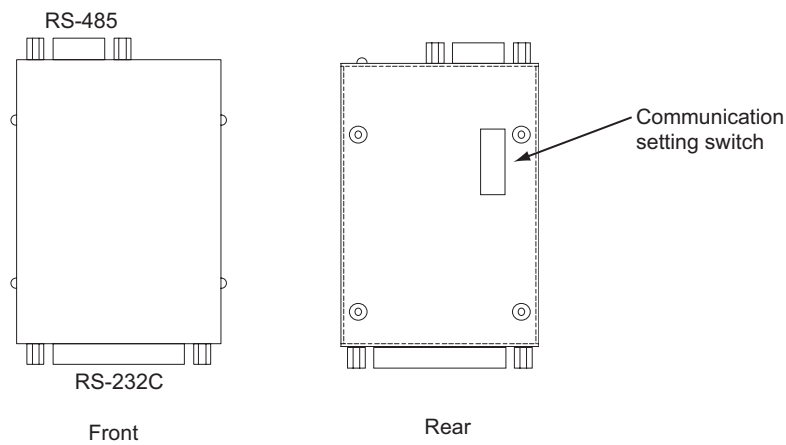2 Settings by switch



(1) Settings of transmission speed and terminating resistor selection

Item	Set value	Switch No.							
		1	2	3	4 ^{*2}	5	6 ^{*2}	7	8
Transmission speed	9600bps	ON	OFF	ON	-	ON	-		
Terminating resistor selection ^{*1}	Enable							ON	ON
	Disable							OFF	OFF

^{*1} Set if required.

^{*2} Disabled.

27.4.7 Connecting to interface converter (K3SC-10)


1 Communication settings

Make the communication settings by operating the DIP switch of the temperature controller.


Item	Set value
Transmission speed ^{*1}	9600bps, 19200bps, 38400bps
Data length ^{*1}	8 bits
Parity bit ^{*1}	Odd, even, none
Stop bit ^{*1}	1 bit
Master/slave device	RS-232 ↔ RS485
Echoback ^{*2}	Without

*1 Make the same setting as that of GOT side.

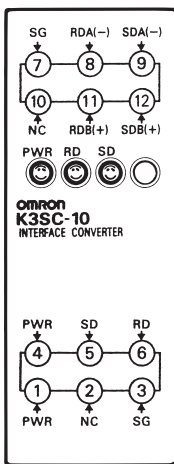2 Settings by DIP switch



Front of K3SC-10 body

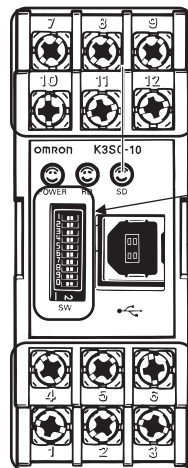

Inside of K3SC-10 body
(When removing the front cover)

(1) Transmission speed settings


Transmission speed(bps)	Switch No.		
	1	2	3
9600	OFF	OFF	OFF
19200	ON	OFF	ON
38400	OFF	ON	ON

Set these switches. →



(2) Settings of data length, parity bit, stop bit, master/slave device and echoback

Item	Set value	Switch No.							
		4	5	6	7	8	9	0	
Data length	8 bits	ON							
Stop bit	1 bits		ON						
Parity	Even			OFF	OFF				
	Odd			ON	OFF				
	None			OFF	ON				
Master/slave device	RS-232 ↔ RS485					OFF	OFF		
Echoback	Without								OFF

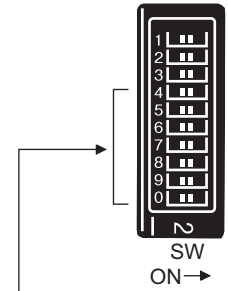


Set these switches.

27.4.8 Station NO. settings

Set each station number while making sure that one station number is used only once.

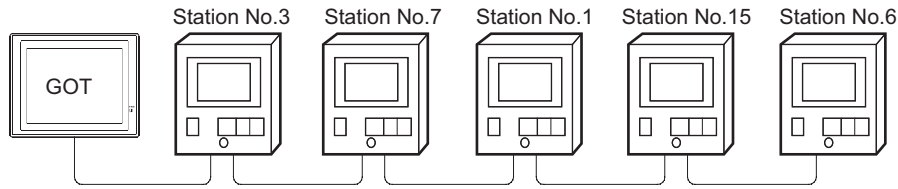The station number can be set without regard to the cable connection order. No problem is expected even if station numbers are not consecutive.



Examples of station number setting

(1) Direct specification

When setting the device, specify the station number of the temperature controller of which data is to be changed.

Specification range
1 to 199
216 to 255



Specifying a station No. between 200 and 215

(Example of specifying the station No. 215)

- 1 Set the station No. to "200".
- 2 Input "215" to the internal device GD10.
- 3 The station No. 215 is specified.
For details, refer to (2) Indirect specification shown below.

(2) Indirect specification

When setting the device, indirectly specify the station number of the inverter of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).

When specifying the station No. from 200 to 215 on GT Designer2, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the temperature controller.

Specification station NO.	Compatible device	Setting range
200	GD10	1 to 255 For the setting other than the above, error (dedicated device is out of range) will occur.
201	GD11	
202	GD12	
203	GD13	
204	GD14	
205	GD15	
206	GD16	
207	GD17	
208	GD18	
209	GD19	
210	GD20	
211	GD21	
212	GD22	
213	GD23	
214	GD24	
215	GD25	

27.5 Precautions

1 Station number settings of temperature controller

In the system configuration, the temperature controller with the station number set with the host address must be included. For details of host address setting, refer to the following.

 Section 37.3.4 Downloading project data

2 FIX processing of temperature controller

The temperature controller power must not be turned off during the FIX processing. Otherwise, data within the non-volatile memory will corrupt and the temperature controller will be unavailable.

3 GOT clock function

Since the temperature controller does not have a clock function, the settings of "time adjusting" or "time broad cast" by GOT clock control will be disabled.

4 Disconnecting a part of multiple connected equipments

The GOT can disconnect some of multiple connected equipments by setting GOT internal device. For example, the faulty station where a communication timeout error occurs can be disconnected from connected equipments.

For details of GOT internal device setting, refer to the following manual.

 GT Designer2 Version Screen Design Manual (2.9.1 GOT internal devices)

27.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Connecting to the FUJI SYS temperature controller	Supporting the FUJI SYS temperature controller connection	2.32J	Communication driver FUJI PXR/PXG/PXH [03.00.**]
	Supporting the following: <ul style="list-style-type: none">• Disconnecting a part of multiple connected equipments• Preventing the monitoring operation of the faulty station automatically	2.58L	Communication driver FUJI PXR/PXG/PXH [03.03.**]

CONNECTION TO YAMATAKE TEMPERATURE CONTROLLER



28.1 System Configuration page 28-2

This section describes the equipment and cables needed when connecting a GOT to a YAMATAKE temperature controller.
Select a system suitable for your application.

28.2 Connection Cable page 28-14

This section describes the specifications of the cables needed when connecting a GOT to a YAMATAKE temperature controller.
Check the specifications of the connection cables.

28.3 Preparatory Procedures for Monitoring page 28-24

This section provides the procedures to be followed before performing monitoring in connection to a YAMATAKE temperature controller.
The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

28.4 Temperature Controller Side Setting page 28-38

The YAMATAKE temperature controller side settings for GOT connection are explained.
When checking the PLC side settings, refer to this section.

28.5 Precautions page 28-43

This section describes the precautions about temperature controller connection.
Refer to this section without fail before starting temperature controller connection.

28.6 List of Functions Added by Version Upgrade page 28-44

This section describes the functions added by version upgrade of GT Designer2 or OS.

28.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.

28.1.1 Connecting to DMC10









1 System configuration and connection conditions


Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	15 (max.)	Between communication controller and GOT 15m or less	
		Between temperature controller and communication controller 500m or less	
1	15 (max.)	Between temperature controller and GOT 500m or less	

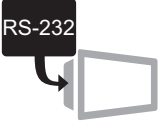2 System equipment

(1) GOT

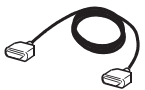

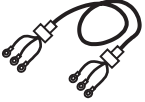
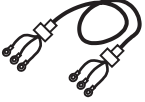
Image	No.	Name	Model name
	①	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	②	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-TE 

(2) Temperature controller


Image	No.	Name	Model name
	③	communication controller	CMC10L

③ is a product manufactured by YAMATAKE. For details of this product, contact YAMATAKE.

(3) Cable

Image	No.	Name	Model name
	④	RS-232 cable 1) • Between interface converter ③ and GOT	(To be prepared by the user.  Section 28.2 Connection Cable)
	⑤	RS-485 cable 1) • Between temperature controller and interface converter ③	
	⑥	RS-485 cable 3) • Between temperature controller and GOT	

28.1.2 Connecting to SDC15, SDC25/26 or SDC35/36






1 System configuration and connection conditions


Connection conditions			System configuration
Number of GOTs	Number of Temperature controllers	Distance	
1	31 (max.)	Between communication controller and GOT 15m or less	<p>31 (max.)</p> <p>3 communication controller</p> <p>4 RS-232 cable 1)</p> <p>5 RS-485 cable 1)</p> <p>MAX500m</p> <p>MAX15m</p>
		Between temperature controller and communication controller 500m or less	
1	31 (max.)	Between temperature controller and GOT 500m or less	<p>31 (max.)</p> <p>2</p> <p>6 RS-485 cable 3)</p> <p>MAX500m</p>

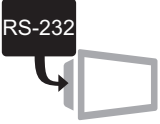2 System equipment

(1) GOT





Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P
	2	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-TE

(2) Temperature controller

Image	No.	Name	Model name
	3	communication controller	CMC10L

3 is a product manufactured by YAMATAKE. For details of this product, contact YAMATAKE.

(3) Cable

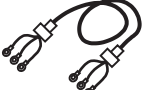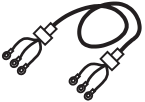Image	No.	Name	Model name
	4	RS-232 cable 1) Between interface converter 3 and GOT	(To be prepared by the user.  Section 28.2 Connection Cable))
	5	RS-485 cable 1) Between temperature controller and interface converter 3	
	6	RS-485 cable 3) Between temperature controller and GOT	

28.1.3 Connecting to SDC20/21













1 System configuration and connection conditions


Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	1	Between temperature controller and GOT 15m or less	
1	31 (max.)	Between communication controller and GOT 15m or less	
		Between temperature controller and communication controller 500m or less	
1	31 (max.)	Between temperature controller and GOT 500m or less	
1	31 (max.)	Between temperature controller and GOT 500m or less	

2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 interface • For RS-485 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-9S 
	3	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-TE 

(2) Temperature controller

Image	No.	Name	Model name
	4	communication controller	CMC10L

4 is a product manufactured by YAMATAKE. For details of this product, contact YAMATAKE.

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER




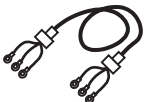


31

INVERTER
CONNECTION


32

SERVO AMPLIFIER
CONNECTION

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 2) • Between temperature controller and GOT	(To be prepared by the user.  Section 28.2 Connection Cable)
	6	RS-232 cable 1) • Between interface converter 4 and GOT	
	7	RS-485 cable 2) • Between temperature controller and interface converter 4	
	8	RS-485 cable 4) • Between temperature controller and GOT	
	9	RS-485 cable 5) • Between temperature controller and GOT	

28.1.4 Connecting to SDC30/31



1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of temperature controller connection	Distance	
1	31 (max.)	Between communication controller and GOT 15m or less	
		Between temperature controller and communication controller 500m or less	
1	31 (max.)	Between temperature controller and GOT 500m or less	
1	31 (max.)	Between temperature controller and GOT 500m or less	

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

31

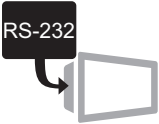









INVERTER
CONNECTION

32


SERVO AMPLIFIER
CONNECTION

2 System equipment

(1) GOT

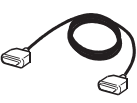

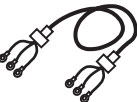


Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 interface • For RS-485 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-9S 
	3	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-TE 

(2) Temperature controller


Image	No.	Name	Model name
	4	communication controller	CMC10L

4 is a product manufactured by YAMATAKE. For details of this product, contact YAMATAKE.

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 1) • Between communication controller 4 and GOT	(To be prepared by the user.  Section 28.2 Connection Cable)
	6	RS-485 cable 2) • Between temperature controller and communication controller 4	
	7	RS-485 cable 4) • Between temperature controller and GOT	
	8	RS-485 cable 5) • Between temperature controller and GOT	

28.1.5 Connecting to SDC40A/40B/40G



1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of Temperature controllers	Distance	
1	1	Between temperature controller and GOT 15m or less	
1	31 (max.)	Between communication controller and GOT 15m or less	
		Between temperature controller and communication controller 500m or less	
1	15 (max.)	Between temperature controller and GOT 500m or less	
1	15 (max.)	Between temperature controller and GOT 500m or less	

25

CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER

26

CONNECTION TO CHINO CONTROLLER

27

CONNECTION TO FUJI SYS TEMPERATURE CONTROLLER

28

CONNECTION TO YAMATAKE TEMPERATURE CONTROLLER

29

CONNECTION TO YOKOGAWA TEMPERATURE CONTROLLER

30

CONNECTION TO RKC TEMPERATURE CONTROLLER

31

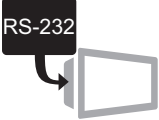









INVERTER CONNECTION

32


SERVO AMPLIFIER CONNECTION

2 System equipment

(1) GOT



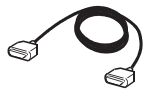
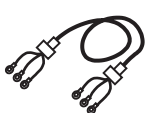

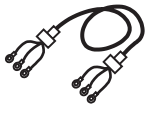
Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 interface • For RS-485 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-9S 
	3	RS-422/485 Communication Unit • For RS-485 communication	GT15-RS4-TE 

(2) Temperature controller

Image	No.	Name	Model name
	4	communication controller	CMC10L

4 is a product manufactured by YAMATAKE. For details of this product, contact YAMATAKE.

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 2) • Between temperature controller and GOT	(To be prepared by the user.  Section 28.2 Connection Cable)
	6	RS-232 cable 1) • Between interface converter ⁴ and GOT	
	7	RS-485 cable 2) • Between temperature controller and interface converter ⁴	
	8	RS-485 cable 4) • Between temperature controller and GOT	
	9	RS-485 cable 5) • Between temperature controller and GOT	

25
CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER

26
CONNECTION TO CHINO CONTROLLER

27
CONNECTION TO FUJI SYS TEMPERATURE CONTROLLER

28
CONNECTION TO YAMATAKE TEMPERATURE CONTROLLER

29
CONNECTION TO YOKOGAWA TEMPERATURE CONTROLLER

30
CONNECTION TO RKC TEMPERATURE CONTROLLER

31
INVERTER CONNECTION

32
SERVO AMPLIFIER CONNECTION

28.2 Connection Cable

The RS-232 cable or RS-485 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable	
		RS-232 cable (Refer to 28.2.1)	RS-485 cable (Refer to 28.2.2)
Temperature controller* ¹	DMC10	—	RS-485 cable 1), RS-485 cable 3)
	SDC15, SDC25/26, SDC35/36	—	RS-485 cable 1), RS-485 cable 3)
	SDC20/21	RS-232 cable 2)	RS-485 cable 2), RS-485 cable 4), RS-485 cable 5)
	SDC30/31	—	RS-485 cable 2), RS-485 cable 4), RS-485 cable 5)
	SDC40A/40B/40G	RS-232 cable 2)	RS-485 cable 2), RS-485 cable 4), RS-485 cable 5)
Interface converter	CMC10L	RS-232 cable 1)	RS-485 cable 1), RS-485 cable 2)


*1 Select a temperature controller with communication function

28.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a temperature controller.

1 Connection diagram

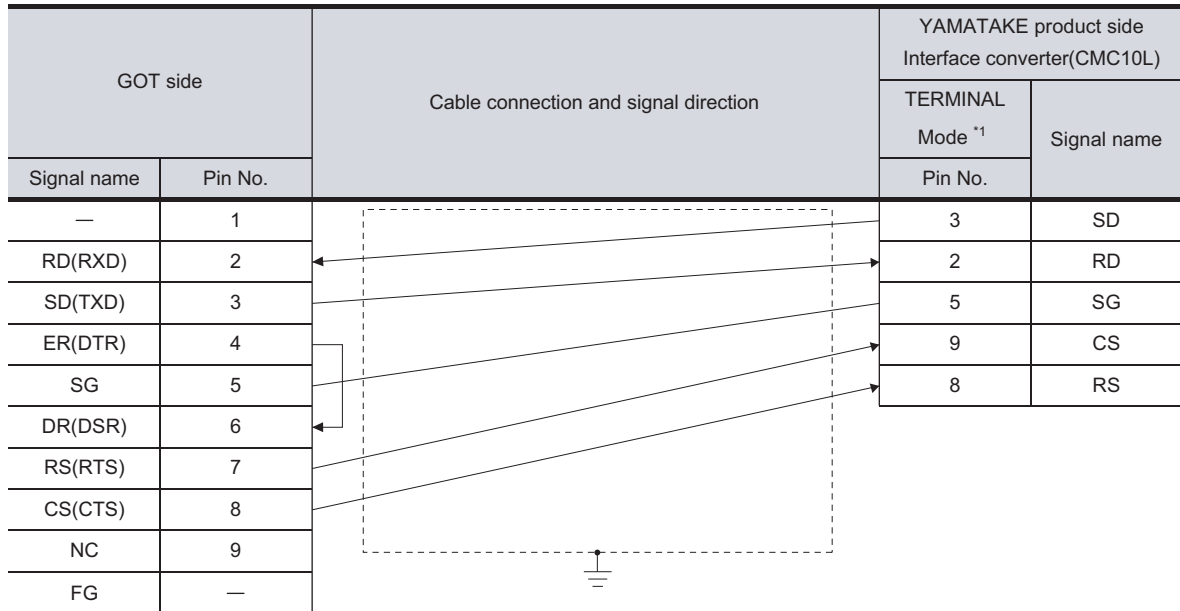(1) RS-232 cable 1)



*1 For details on the setting method of the TERMINAL mode, refer to the following.

Section 28.4.5 Connecting CMC10L

(2) RS-232 cable 2)

Pin No. of temperature controller differs depending on model and optional function model. Refer to the following table. The numbers in () of the following table correspond to optional function models.

GOT side		Cable connection and signal direction	YAMATAKE product side				Signal name
			Model of temperature controller				
SDC20			SDC21	SDC40A SDC40B SDC40G			
(03, 05)	(10)		(04, 07, 09)				
Pin No.	Pin No.		Pin No.	Pin No.			
—	1		17	16	27	60	SD
RD(RXD)	2		18	17	28	59	RD
SD(TXD)	3		5	5	29	61	SG
ER(DTR)	4						
SG	5						
DR(DSR)	6						
RS(RTS)	7						
CS(CTS)	8						
NC	9						
FG	—						

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	DDK Ltd
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) YAMATAKE temperature controller side connector

Use the connector compatible with the YAMATAKE temperature controller side module.

For details, refer to the following manual.

 User's Manual for the YAMATAKE temperature controller

3 Precautions when preparing a cable


The length of the RS-232 cable must be 15m or less.

28.2.2 RS-485 cable

The following shows the connection diagrams and connector specifications of the RS-485 cable used for connecting the GOT to a temperature controller.

1 Connection diagram

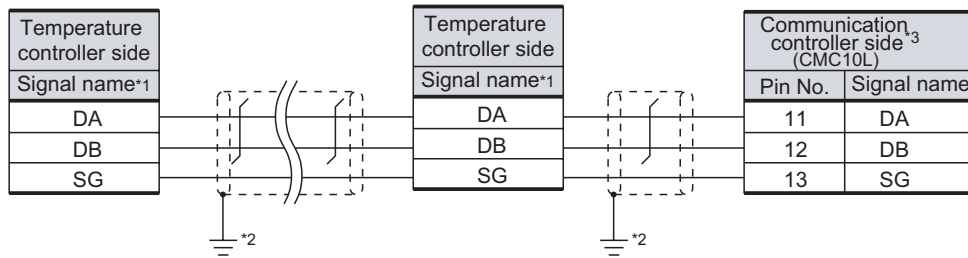(1) RS-485 cable 1)



*1 Pin No. of temperature controller differs depending on model. Refer to the following table.

Signal name	Model of temperature controller		
	DMC10	SDC15	SDC25/26 SDC35/36
	Pin No.	Pin No.	Pin No.
DA	4	16	22
DB	5	17	23
SG	6	18	24


*2 Connect FG grounding to the single-sided end of a cable shield line.

*3 Set the terminal resistor to "Disable".

For details of terminating resistor settings, refer to the following.

Section 28.4.5 Connecting CMC10L

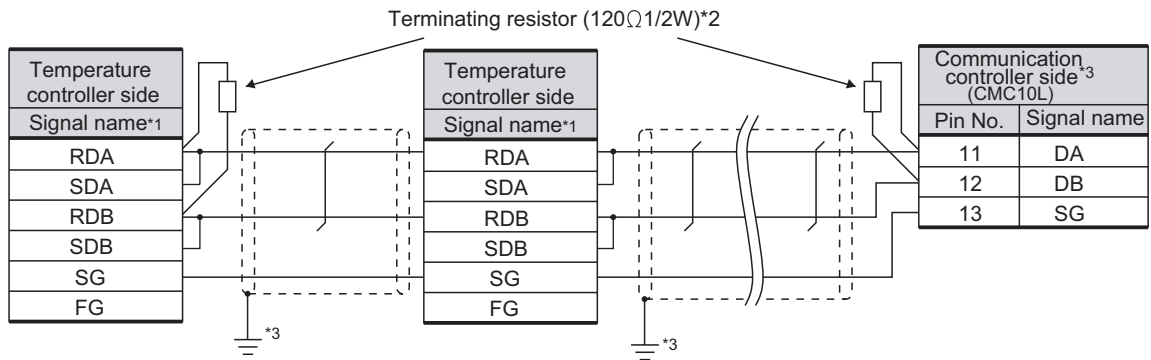(2) RS-485 cable 2)




*1 Pin No. of temperature controller differs depending on model or optional function model. Refer to the following table. The numbers in () of the following table correspond to optional function models.

Signal name	Model of temperature controller					
	SDC20		SDC21	SDC30	SDC31	SDC40A/40B/40G
	(02, 04)	(09)	(03,08)	(040, 041, 045)	(446, 546)	
Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	
RDA	17	18	27	18	27	59
SDA	15	16	25	16	25	57
RDB	18	19	28	19	28	60
SDB	16	17	26	17	26	58
SG	5	5	29	20	29	61
FG	4	4	4	3, 4	3, 4	3

*2 Terminating resistor should be provided for a communication controller and a temperature controller which will be terminals.

*3 Connect FG grounding to the single-sided end of a cable shield line.

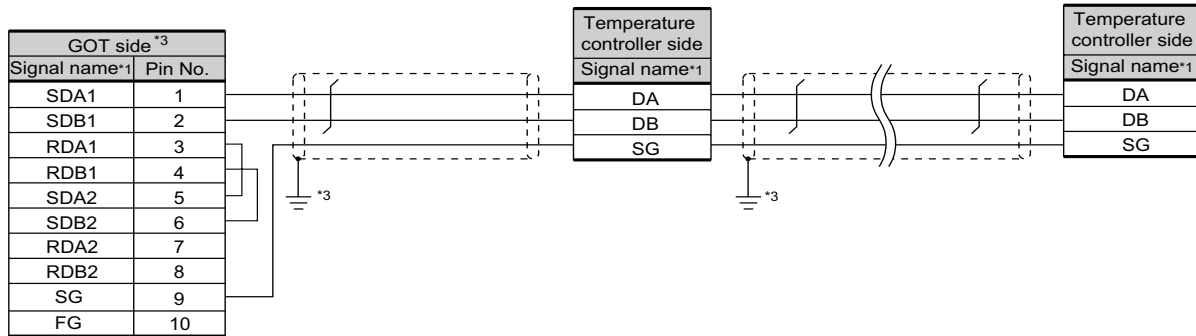(3) RS-485 cable 3)




*1 Pin No. of temperature controller differs depending on model. Refer to the following table.

Signal name	Model of temperature controller		
	DMC10	SDC15	SDC25/26 SDC35/36
	Pin No.	Pin No.	Pin No.
DA	4	16	22
DB	5	17	23
SG	6	18	24

*2 Set the terminating resistor of GOT side to "Disable". (☞ 4 Connecting terminating resistors)

*3 Connect FG grounding to the single-sided end of a cable shield line.

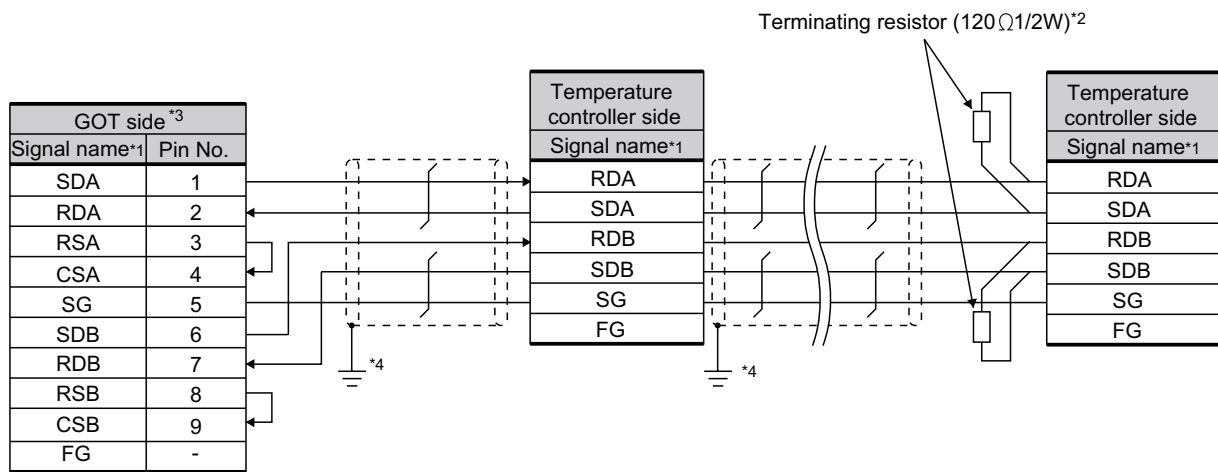
(4) RS-485 cable 4)



*1 Pin No. of temperature controller differs depending on model or optional function model. Refer to the following table. The numbers in () of the following table correspond to optional function models.


Signal name	Model of temperature controller					
	SDC20		SDC21	SDC30	SDC31	SDC40A/40B/40G
	(02, 04)	(09)	(03, 08)	(040, 041, 045)	(446, 546)	
Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	
RDA	17	18	27	18	27	59
SDA	15	16	25	16	25	57
RDB	18	19	28	19	28	60
SDB	16	17	26	17	26	58
SG	5	5	29	20	29	61
FG	4	4	4	3, 4	3, 4	3

*2 Terminating resistor should be provided for a temperature controller which will be a terminal.

*3 Set the terminating resistor of GOT side to "Enable". ( 4 Connecting terminating resistors)

*4 Connect FG grounding to the single-sided end of a cable shield line.

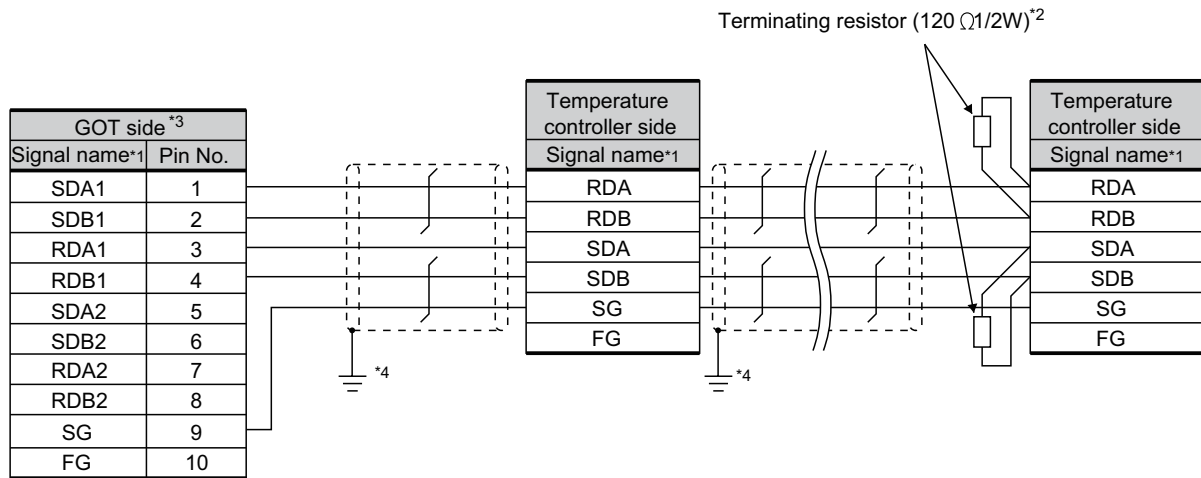
(5) RS-485 cable 5)



*1 Pin No. of temperature controller differs depending on model or optional function model. Refer to the following table. The numbers in () of the following table correspond to optional function models.

Signal name	Model of temperature controller					
	SDC20		SDC21	SDC30	SDC31	SDC40A/40B/40G
	(02, 04)	(09)	(03, 08)	(040, 041, 045)	(446, 546)	
Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	
RDA	17	18	27	18	27	59
RDB	18	19	28	19	28	60
SDA	15	16	25	16	25	57
SDB	16	17	26	17	26	58
SG	5	5	29	20	29	61
FG	4	4	4	3, 4	3, 4	3

*2 Terminating resistor should be provided for a temperature controller which will be a terminal.

*3 Set the terminating resistor of GOT side to "Enable". ( 4 Connecting terminating resistors)

*4 Connect FG grounding to the single-sided end of a cable shield line.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector or connector cover applicable to the GOT connector.

GOT	Connector model	Connector type	Manufacturer
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-TE	SL-SMT3.5/10/90F BOX	terminal block type	Weidmuller interconnections inc.

(2) YAMATAKE temperature controller side connector

Use the connector compatible with the YAMATAKE temperature controller side module.

For details, refer to the following manual.

 User's Manual for the YAMATAKE temperature controller


3 Precautions when preparing a cable

The length of the RS-485 cable must be 500m or less

4 Connecting terminating resistors

(1) YAMATAKE temperature controller

Connect the terminating resistor on the YAMATAKE temperature controller side when connecting a GOT to a YAMATAKE temperature controller.

 Section 28.4 Temperature Controller Side Setting

(2) GOT


Set the terminating resistor of RS-422/485 communication unit using the terminating resistor setting switch.

Terminating resistor ^{*1}	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF



*1 The default setting is "Enable".

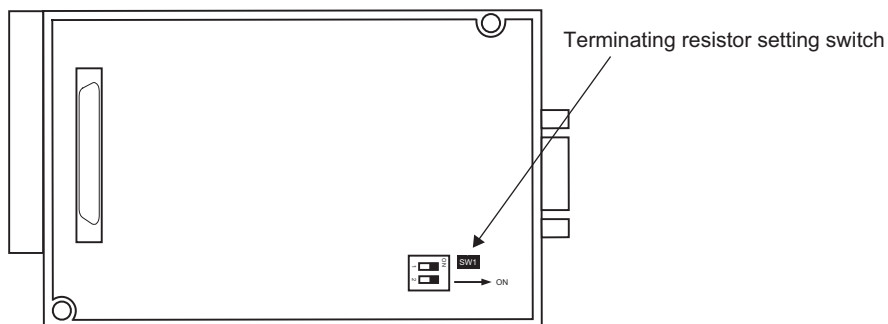
(When using GT15-RS4-9S)



Refer view of RS-422/485 communication unit

28.3 Preparatory Procedures for Monitoring

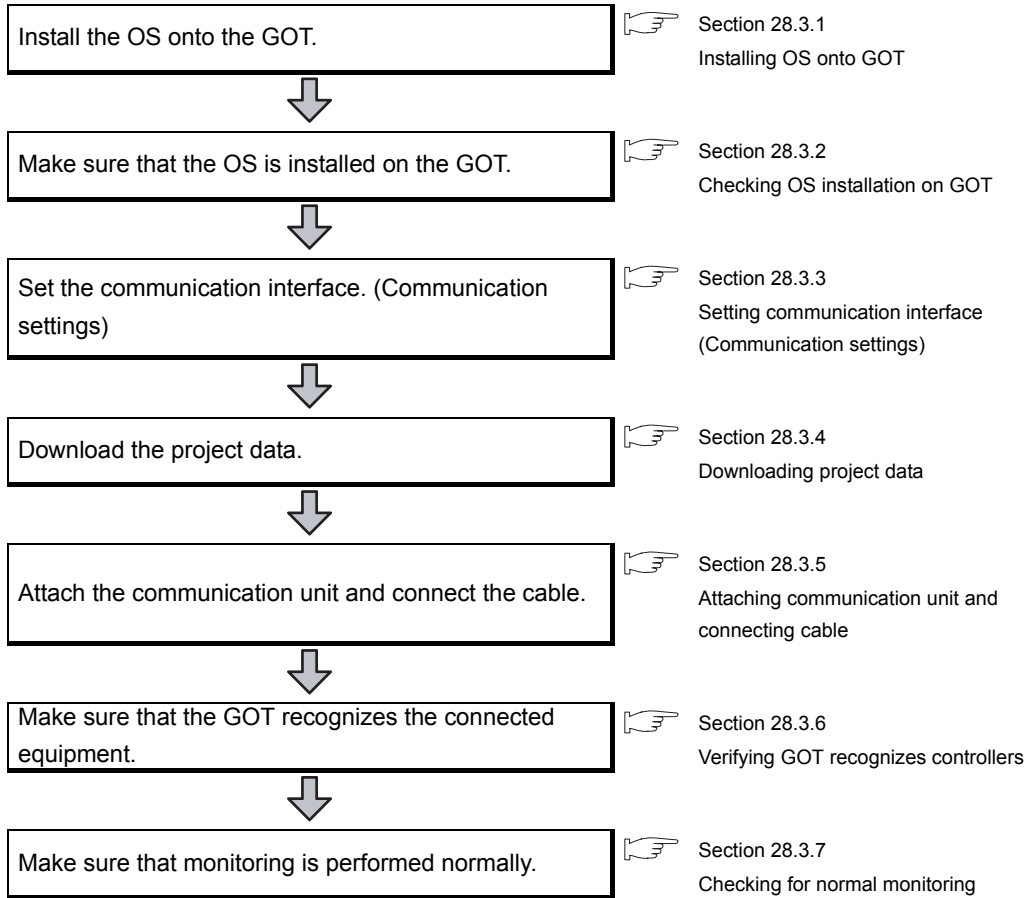The following shows the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the temperature controller side setting


This section explains the GOT side setting.


When confirming the temperature controller side setting, refer to the following.

 Section 28.4 Temperature Controller Side Setting

28.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

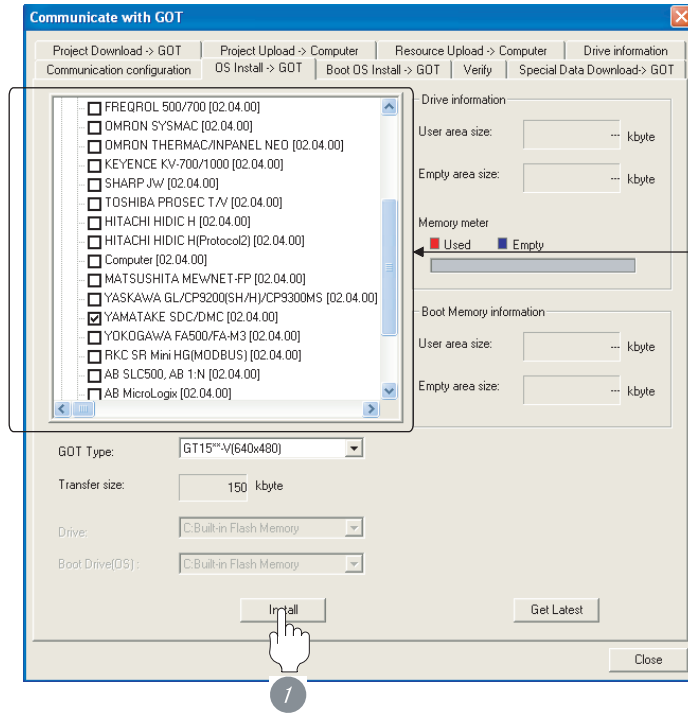 GT Designer2 Version □ Basic Operation/Data Transfer Manual




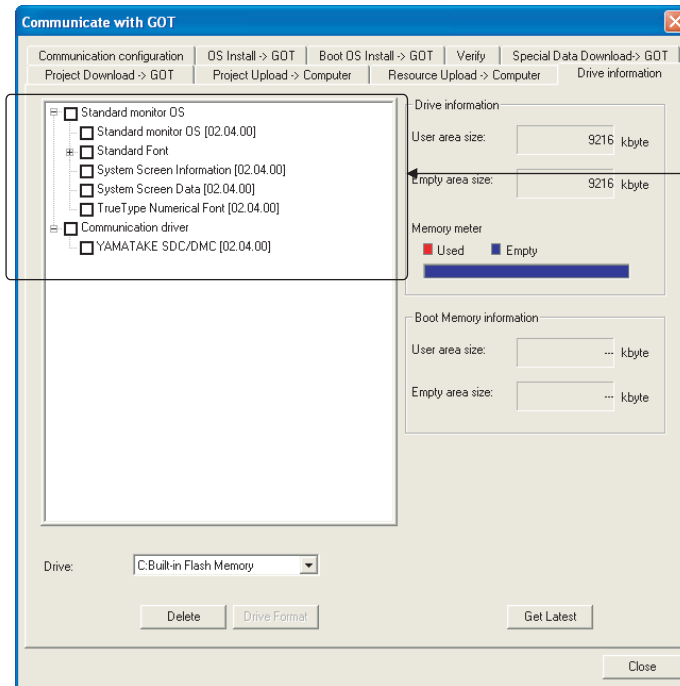
Check the following under the Communication
• YAMATAKE SDC/DMC

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

28.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




The OS has been installed successfully on the C if the following can be confirmed:

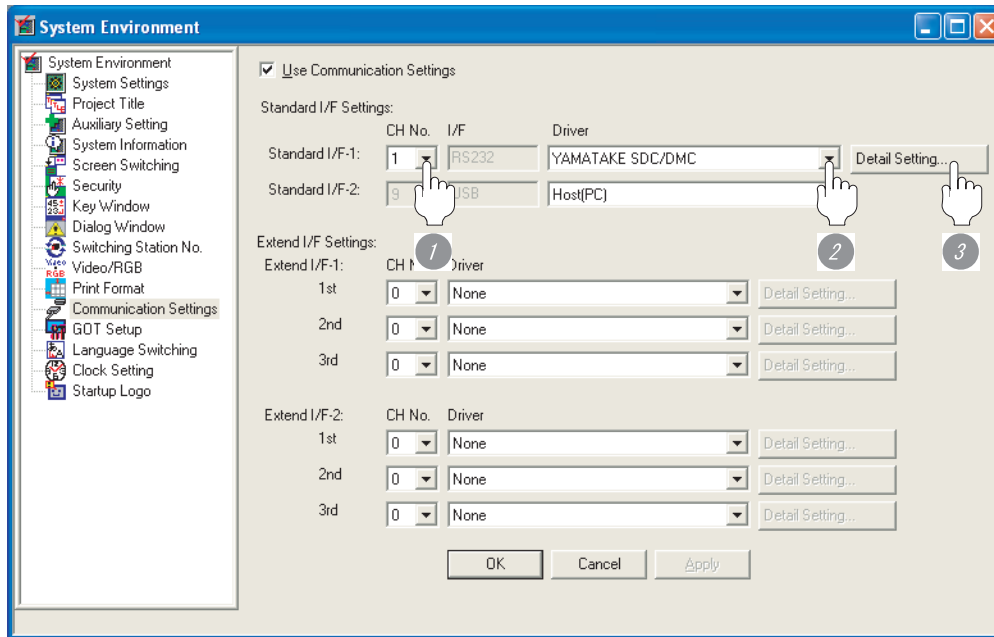
- 1) Standard monitor OS
- 2) Communication driver: YAMATAKE SDC/DM

28.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "YAMATAKE SDC/DMC".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	9600bps,19200bps,38400bps,57600bps,115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Even>	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 1ms>	0 to 300 ms
Format	Select the communication format. <Default: 1> format 1: only continuous access format 2: continuous and random access	1 /2

*1 Do not specify "0"

Format setting

The compatible format of temperature controller differs depending on model.

Model	Compatible format
SDC20/21, SDC30/31, SDC40A/40B/40G	Format 1 only
DMC10, SDC15, SDC25/26, SDC35/36	Format 1 or Format 2

For the continuous access and random access of the temperature controller, refer to the following manual.

 User's Manual for the YAMATAKE temperature controller

- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.


 GT User's Manual

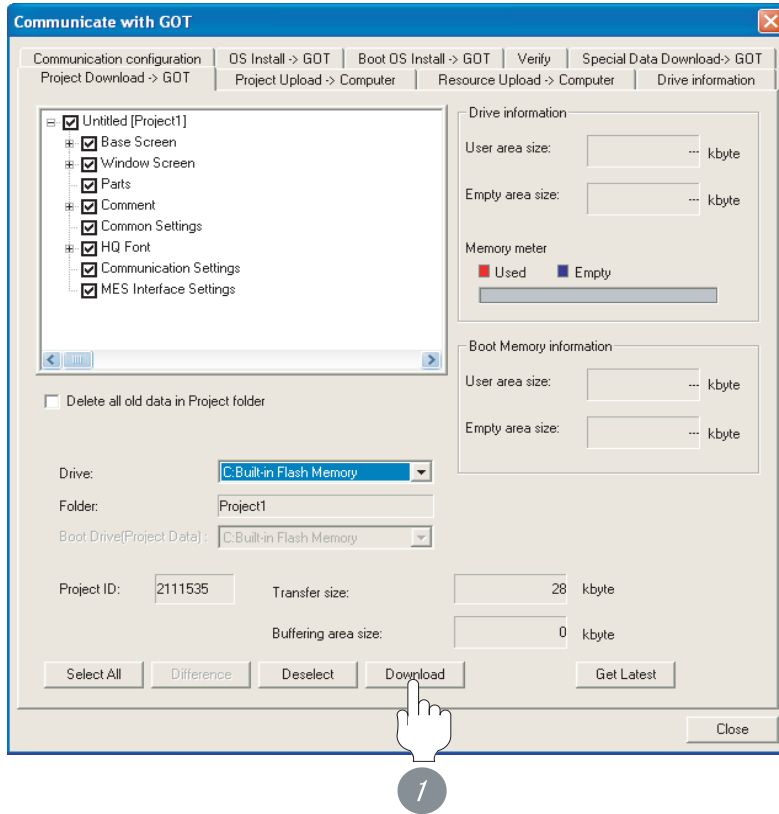
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

28.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


28.3.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

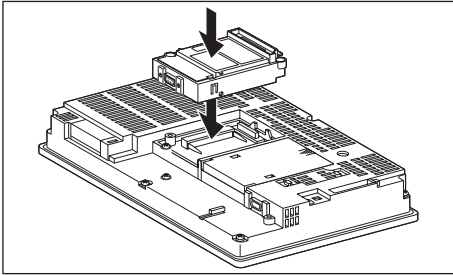1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication units

For details on the serial communication units, refer to the following manual:

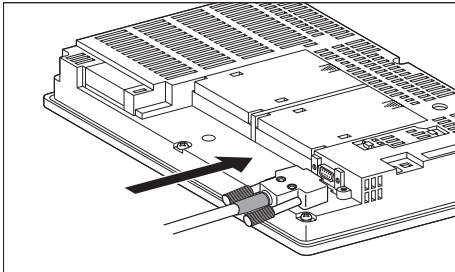
-  GT15 Serial Communication Unit User's Manual
GT15-RS2, GT15-RS4, GT15-RS4-TE

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- Connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT

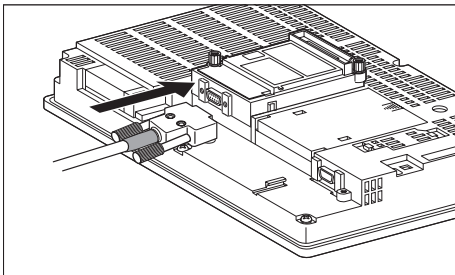- Connection to the RS-232 communication unit



- 2 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

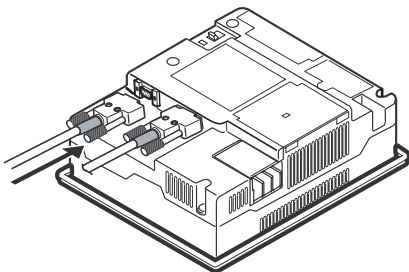(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

(2) How to connect the RS-485 cable


(a) For the GT15

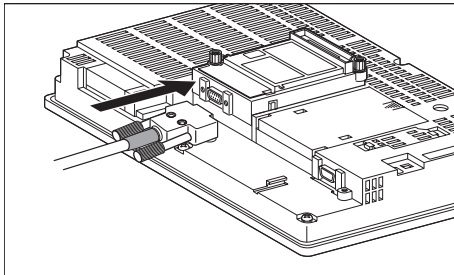•Connection to the RS-422/485 communication unit (model:GT15-RS4-9P)




- 1 Connect the RS-485 cable to the RS-422/485 communication unit on the GOT.

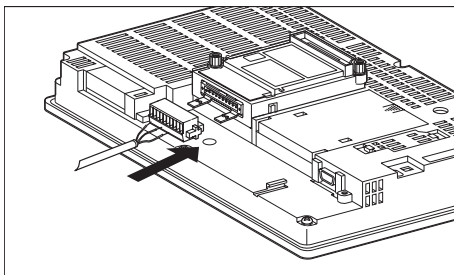•Connection to the RS-422/485 communication unit (model:GT15-RS4-9E)




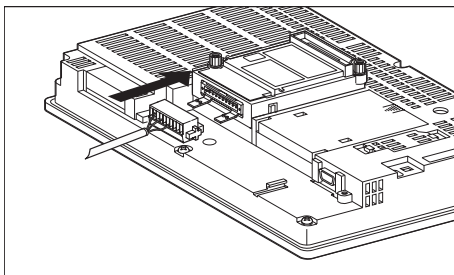- 1 Connect the RS-485 cable to the terminal block enclosed by the RS-422/485 communication unit.



- 2 Connect the terminal block to the RS-422/485 communication unit on the GOT.

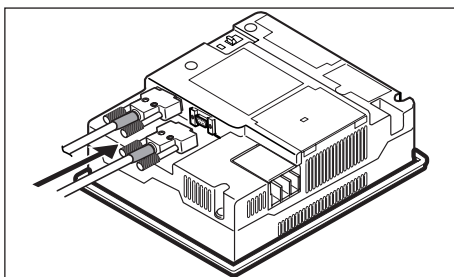(b) For the GT11



- 1 Connect the RS-485 cable to the RS-422 interface on the GOT.

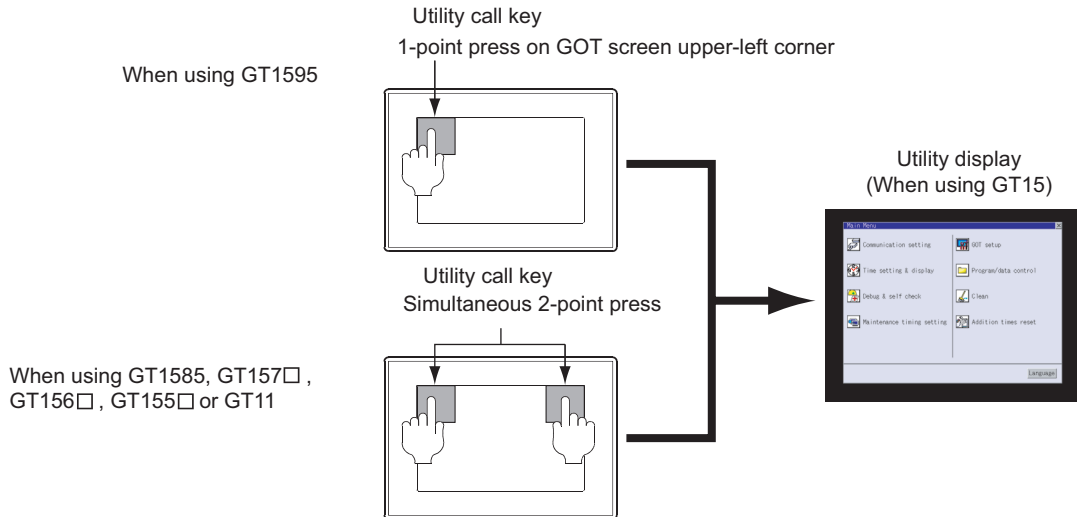
28.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

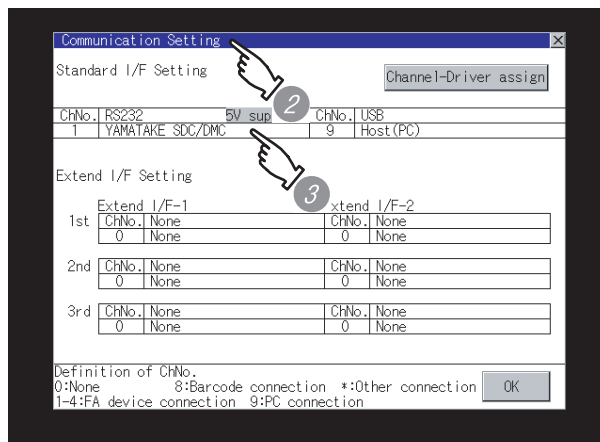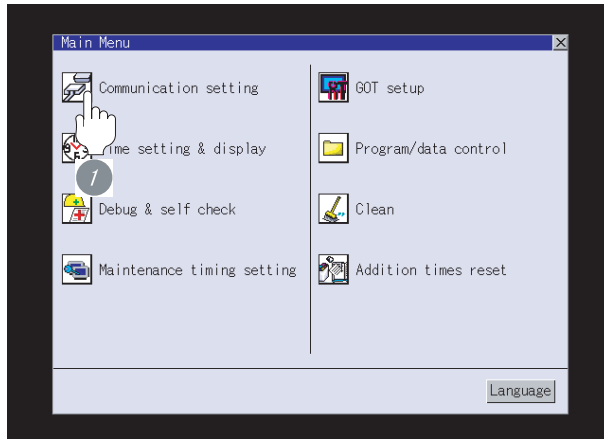 GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver: **YAMATAKE SDC/DMC**

4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 28.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility
 The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

28.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

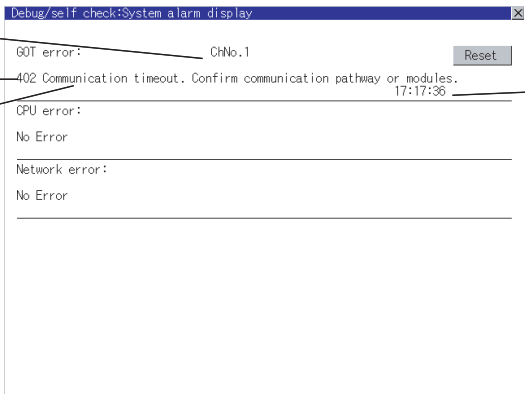
For details on the system alarm, refer to the following manual.

 GT User's Manual (When using GT15)

Communication Channel No. ———

Error code ———

Error message ———



Time of occurrence
(Displayed only for errors)




Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version Screen Design Manual



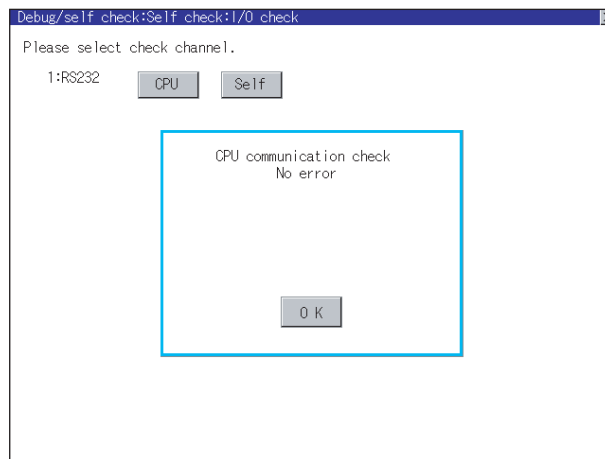
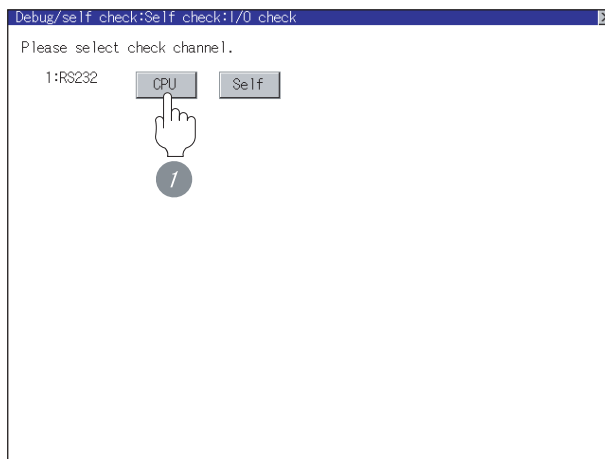
2 Perform an I/O check

Whether the temperature controller can communicate with the GOT or not can be detected by the I/O check function.

If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].
For details on the I/O check, refer to the following manual.

 GT □ User's Manual




- 1 Touch [CPU] on the I/O check screen.
Touching [CPU] executes the communication check with the connected temperature controller.

- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the temperature controller side setting

When connecting the GOT, setting is required for the temperature controller side.

Confirm if the temperature controller side setting is correct.

 Section 28.4 Temperature Controller Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

28.4 Temperature Controller Side Setting



(1) YAMATAKE temperature controller

For details of YAMATAKE temperature controller, refer to the following manual.

User's Manual for the YAMATAKE temperature controller

	Model name	Reference
Temperature controller	DMC10	Section 28.4.1
	SDC15, SDC25/26, SDC35/36	Section 28.4.3
	SDC20/21	Section 28.4.4
	SDC30/31	Section 28.4.4
	SDC40A/40B/40G	Section 28.4.2
Interface converter	CMC10L	Section 28.4.5

28.4.1 Connecting to DMC10

1 Communication settings

Make the communication settings by operating the Smart Loader Package (SLP-D10) of the temperature controller.

Setting items	Set value
Transmission speed*1	9600bps, 19200bps
Communication mode*2	CPL
Data length	8 bits
Parity bit*1	Even, none
Stop bit	2 bits
Communication minimum response time	1ms, 10ms, 100ms, 200ms
Station address*3*4	0 to F

*1 Set the transmission speed according to the GOT side.

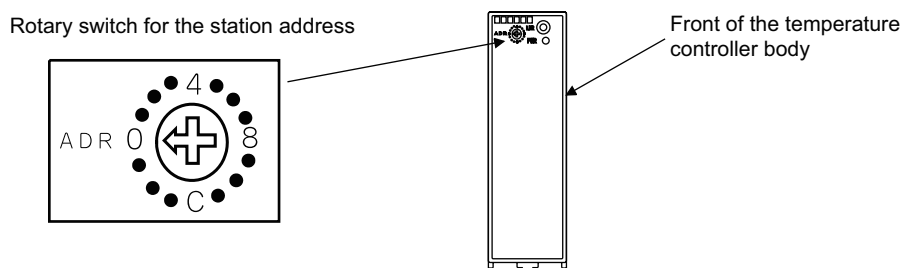
*2 Set to CPL.

*3 Do not set to "0".

*4 Select the station address without overlapping with that of other units.

2 Station address setting

Set the station address using the rotary switch for the station address.



28.4.2 Connecting SDC40A/40B/40G

1 Communication settings

Make the communication settings by operating the key of the temperature controller.

Setting items	Set value
Transmission speed ^{*1}	9600bps
Data length	8 bits
Parity bit ^{*1}	Even, none
Stop bit	1bits, 2bits
Station address ^{*2*3}	0 to 127

*1 Set the transmission speed according to the baud rate of the GOT side.

*2 Do not set to "0".

*3 Select the station address without overlapping with that of other unit.

28.4.3 Connecting SDC15, SDC25/26, SDC35/36

1 Communication settings

Make the communication settings by operating the key or Smart Loader Package (SLP-C35) of the temperature controller.

Setting items	Set value
Transmission speed ^{*1}	9600bps, 19200bps
Communication mode ^{*2}	CPL
Data length ^{*1}	7bits, 8bits
Parity bit ^{*1}	Odd, even, none
Stop bit ^{*1}	1bits, 2bits
Communication minimum response time	1 to 250ms
Station address ^{*3*4}	0 to 127

*1 Set the transmission speed according to the baud rate of the GOT side.

*2 Set to CPL.

*3 Do not set to "0".

*4 Select the station address without overlapping with that of other units.

28.4.4 Connecting SDC20/21, SDC30/31

1 Communication settings

Make the communication settings by operating the key of the temperature controller.

Setting items	Set value
Transmission speed* ¹	9600bps
Data length	8 bits
Parity bit	None
Stop bit	2 bits
Station address* ² * ³	0 to 127

*1 Set the transmission speed according to the baud rate of the GOT side.

*2 Do not set to "0".

*3 Select the station address without overlapping with that of other unit.

28.4.5 Connecting CMC10L

1 Communication settings


Make the communication settings by operating the DIP switch of the temperature controller.

Setting items	Set value
Transmission speed* ¹	9600bps, 19200bps, 38400bps
Frame length* ²	9 to 15 bits

*1 Set the transmission speed according to the baud rate of the GOT side.

*2 The sum of data length, parity bit and stop bit

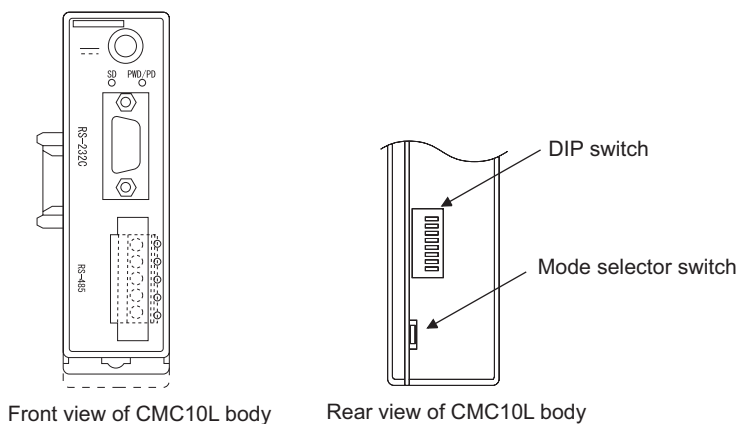2 Settings by switch




Front view of CMC10L body

Rear view of CMC10L body

(1) DIP switch settings


(a) Transmission speed settings

Transmission speed(bps)	Switch No.		
	1	2	3
9600	ON	OFF	ON
19200	OFF	ON	ON
38400	ON	ON	ON

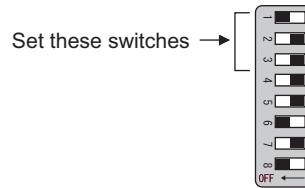


(b) Frame length settings

Frame length	Switch No.		
	4	5	6
8 bits	OFF	OFF	OFF
9 bits	ON	OFF	OFF
10 bits	OFF	ON	OFF
11 bits	ON	ON	OFF
12 bits	OFF	OFF	ON
13 bits	ON	OFF	ON
14 bits	OFF	ON	ON
15 bits	ON	ON	ON

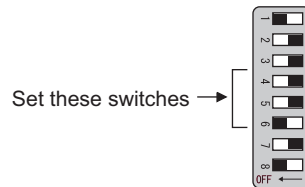


(c) Terminating resistor settings

Terminating resistor	Switch No.
	8
Enable	ON
Disable	OFF

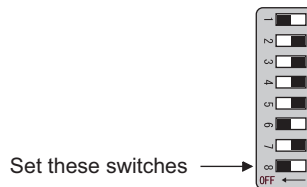

(2) Mode selector switch settings

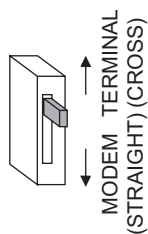
Set the switch to "TERMINAL".



28.4.6 Station NO. settings

Set each station number while making sure that one station number is used only once.

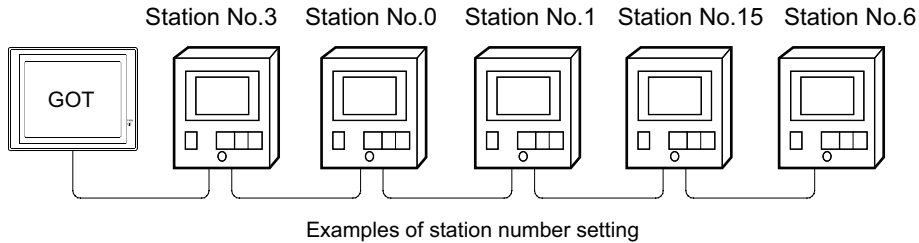The station number can be set without regard to the cable connection order. No problem is expected even if station numbers are not consecutive.



(1) Direct specification

When setting the device, specify the station number of the temperature controller of which data is to be changed.

Model	Specification range
SDC40A/40B/40G, SDC15, SDC25/26, SDC35/36, SDC20/21, SDC30/31	0 to 127
DMC10	0 to 15

(2) Indirect specification

When setting the device, indirectly specify the station number of the inverter of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD 25).

When specifying the station No. from 200 to 215 on GT Designer2, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the temperature controller.

Specification station NO.	Compatible device	Setting range
200	GD10	0 to 127 : For SDC40A/40B/40G, SDC15, SDC25/26, SDC35/36, SDC20/21, SDC30/31 0 to 15 : For DMC10 For the setting other than the above, error (dedicated device is out of range) will occur.
201	GD11	
202	GD12	
203	GD13	
204	GD14	
205	GD15	
206	GD16	
207	GD17	
208	GD18	
209	GD19	
210	GD20	
211	GD21	
212	GD22	
213	GD23	
214	GD24	
215	GD25	

(3) All station specification

Target station differs depending on write-in operation or read-out operation.

- For write-in operation, all station will be a target.
- For read-out operation, only one station will be a target.

28.5 Precautions

1 Station number setting of the temperature controller system

Make sure to establish temperature controller system with No.1 station.

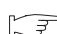
2 GOT clock function

Since the temperature controller does not have a clock function, the settings of “time adjusting” or “time broad cast” by GOT clock control will be disabled.

3 Disconnecting some of multiple connected equipments

The GOT can disconnect some of multiple connected equipments by setting GOT internal device. For example, the faulty station where a communication timeout error occurs can be disconnected from connected equipments.

For details of GOT internal device setting, refer to the following manual.

 GT Designer2 Version Screen Design Manual (2.9.1 GOT internal devices)

28.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

item	Description	Version of GT Designer2	Version of OS
YAMATAKE temperature controller	Supporting the YAMATAKE temperature controller connection	2.18U	Communication driver YAMATAKE SDC/DMC [02.01.**]
	Supporting the following: <ul style="list-style-type: none">• Disconnecting some of multiple connected equipments• Preventing the monitoring operation of the faulty station automatically	2.58L	Communication driver YAMATAKE SDC/DMC [03.03.**]

CONNECTION TO YOKOGAWA TEMPERATURE CONTROLLER



29.1 System Configuration page 29-2

This section describes the equipment and cables needed when connecting a GOT to a YOKOGAWA temperature controller. Select a system suitable for your application.

29.2 Connection Cable page 29-11

This section describes the specifications of the cables needed when connecting a GOT to a YOKOGAWA temperature controller. Check the specifications of the connection cables.

29.3 Preparatory Procedures for Monitoring page 29-23

This section provides the procedures to be followed before performing monitoring in connection to a YOKOGAWA temperature controller. The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

29.4 Temperature Controller Side Setting page 29-39

The YOKOGAWA temperature controller side settings for GOT connection are explained. When checking the temperature controller side settings, refer to this section.

29.5 Precautions page 29-46

This section describes the precautions about temperature controller connection. Refer to this section without fail before starting temperature controller connection.

29.6 List of Functions Added by Version Upgrade page 29-47

This section describes the functions added by version upgrade of GT Designer2 or OS.

25	CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER
26	CONNECTION TO CHINO CONTROLLER
27	CONNECTION TO FUJI SYS TEMPERATURE CONTROLLER
28	CONNECTION TO YAMATAKE TEMPERATURE CONTROLLER
29	CONNECTION TO YOKOGAWA TEMPERATURE CONTROLLER
30	CONNECTION TO RKC TEMPERATURE CONTROLLER
31	INVERTER CONNECTION
32	SERVO AMPLIFIER CONNECTION

29.1 System Configuration

The series names of connectable temperature controllers are as follows.

Series name	Model name
GREEN	UT320, UT321, UT350, UT351, UT420, UT450, UT520, UT550, UT551, UT750
	UP350, UP351, UP550, UP750
	UM330, UM331, UM350, UM351
	US1000
UT100	UT130, UT150, UT152, UT155
	UP150
UT2000	UT2400, UT2800

Select a system configuration suitable for your application.



Conventions used in this section


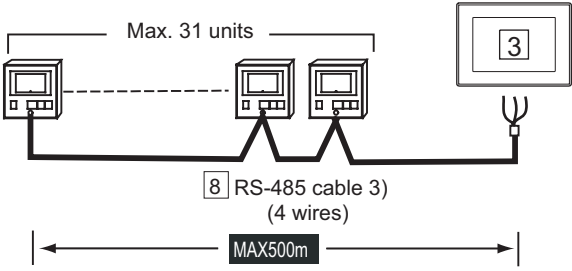
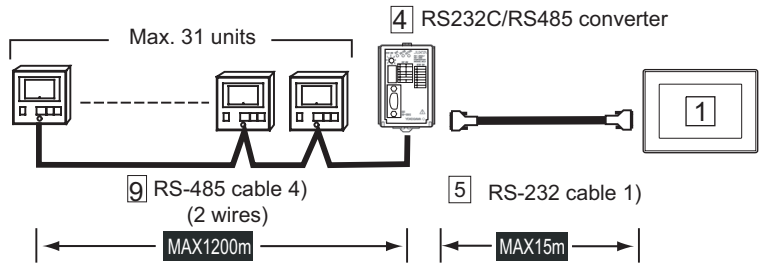

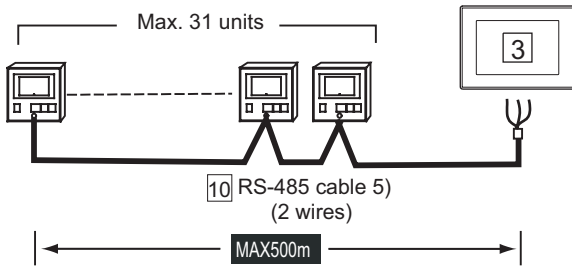
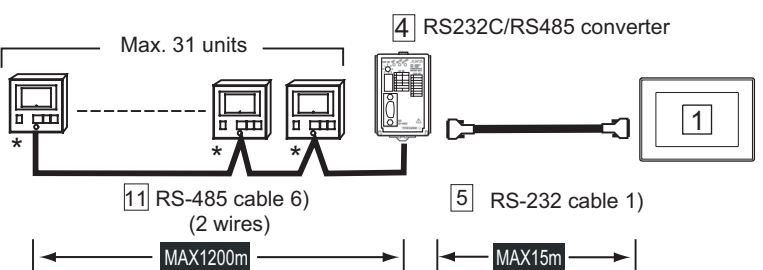

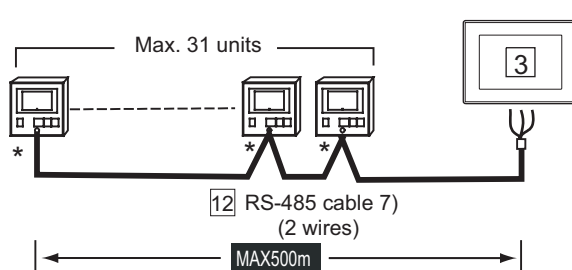
Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.

29.1.1 Connecting to GREEN Series



1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	Max. 31 units	Between GOT and RS232C/RS485 converter 15m or less	<p>Max. 31 units</p> <p>④ RS232C/RS485 converter</p> <p>⑥ RS-485 cable 1) (4 wires) ⑤ RS-232 cable 1)</p> <p>MAX1200m MAX15m</p>
		Between RS232C/RS485 converter and temperature controller 1200m or less	
1	Max. 31 units	Between GOT and temperature controller 500m or less	<p>For GT15, max. 31 units For GT11, max. 10 units</p> <p>⑦ RS-485 cable 2) (4 wires)</p> <p>MAX500m</p>
	Max. 10 units		

Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	 Max. 31 units	Between GOT and temperature controller 500m or less	 8 RS-485 cable 3) (4 wires) MAX500m
1	Max. 31 units	Between GOT and RS232C/RS485 converter 15m or less Between RS232C/RS485 converter and temperature controller 1200m or less	 4 RS232C/RS485 converter 9 RS-485 cable 4) (2 wires) 5 RS-232 cable 1) MAX1200m MAX15m
1	 Max. 31 units	Between GOT and temperature controller 500m or less	 10 RS-485 cable 5) (2 wires) MAX500m
1	Max. 31 units	Between GOT and RS232C/RS485 converter 15m or less Between RS232C/RS485 converter and temperature controller 1200m or less	 4 RS232C/RS485 converter 11 RS-485 cable 6) (2 wires) 5 RS-232 cable 1) MAX1200m MAX15m
1	 Max. 31 units	Between GOT and temperature controller 500m or less	 12 RS-485 cable 7) (2 wires) MAX500m

* For only UP750, UT750, connect the RS-485 cable to the terminal block for High performance RS-485 communication.

25

CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER

26

CONNECTION TO CHINO CONTROLLER

27

CONNECTION TO FUJI SYS TEMPERATURE CONTROLLER

28

CONNECTION TO YAMATAKE TEMPERATURE CONTROLLER

29

CONNECTION TO YOKOGAWA TEMPERATURE CONTROLLER

30

CONNECTION TO RKC TEMPERATURE CONTROLLER

31

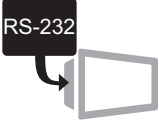

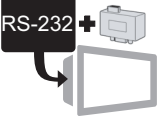

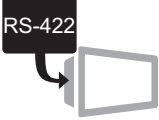

INVERTER CONNECTION

32

SERVO AMPLIFIER CONNECTION


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 Communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 Communication	GT15-RS2-9P
	2	RS-422 conversion unit*1 • For RS-422 Communication	GT15-RS2T4-9P
		RS-422/485 Communication Unit • For RS-422 Communication	GT15-RS4-9S
		RS-422 interface • For RS-422 Communication	— (Built into GOT)
	3	RS-422/485 Communication Unit • For RS-485 Communication	GT15-RS4-TE








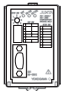

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) Temperature controller

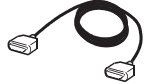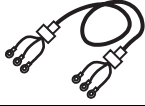Image	No.	Name	Model name
	4	RS232C/RS485 converter	ML2-□

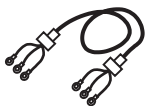4 is manufactured by YOKOGAWA. For details of the product, contact YOKOGAWA

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 1) Between GOT and RS232C/RS485 converter	
	6	RS-485 cable 1) • Between temperature controller and RS232C/RS485 converter	
	7	RS-485 cable 2) • Between GOT and temperature controller	
	8	RS-485 cable 3) • Between GOT and temperature controller	
	9	RS-485 cable 4) • Between temperature controller and RS232C/ RS485 converter	(To be prepared by the user.  Section 29.2 Connection Cable)
	10	RS-485 cable 5) • Between GOT and temperature controller	
	11	RS-485 cable 6) • Between temperature controller and RS232C/ RS485 converter	
	12	RS-485 cable 7) • Between GOT and temperature controller	

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

31

INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION

29.1.2 Connecting to UT100 Series



1 System configuration and connection conditions


Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	Max. 31 units	Between GOT and RS232C/RS485 converter 15m or less	<p>Max. 31 units</p> <p>3 RS232C/RS485 converter</p> <p>5 RS-485 cable 6) (2 wires) 4 RS-232 cable 1)</p> <p>MAX1200m MAX15m</p>
		Between RS232C/RS485 converter and temperature controller 1200m or less	
1	 Max. 31 units	Between GOT and temperature controller 500m or less	<p>Max. 31 units</p> <p>6 RS-485 cable 7) (2 wires)</p> <p>MAX500m</p>

2 System equipment

(1) GOT



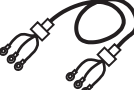

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 Communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 Communication	GT15-RS2-9P
	2	RS-422/485 Communication Unit • For RS-485 Communication	GT15-RS4-TE

(2) Interface converter

Image	No.	Name	Model name
	3	RS232C/RS485 converter	ML2-□

3 is manufactured by YOKOGAWA. For details of the product, contact YOKOGAWA

(3) Cable

Image	No.	Name	Model name
	4	RS-232 cable 1) Between GOT and RS232C/RS485 converter	(To be prepared by the user.  Section 29.2 Connection Cable)
	5	RS-485 cable 6) • Between temperature controller and RS232C/RS485 converter	
	6	RS-485 cable 7) • Between GOT and temperature controller	

29.1.3 Connecting to UT2000 Series

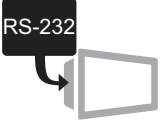

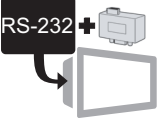

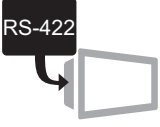



1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of temperature controllers	Distance	
1	Max. 16 units	<p>Between GOT and RS232C/RS485 converter 15m or less</p> <p>Between RS232C/RS485 converter and temperature controller 1200m or less</p>	<p>Max. 16 units</p> <p>4 RS232C/RS485 converter</p> <p>6 RS-485 cable 8) (4 wires)</p> <p>5 RS-232 cable 1)</p> <p>MAX1200m</p> <p>MAX15m</p>
1	<p>GT15 Max. 16 units</p> <p>GT11 Serial Max. 10 units</p>	Between GOT and temperature controller 500m or less	<p>For GT15, max. 16 units For GT11, max. 10 units</p> <p>7 RS-485 cable 9) (4 wires)</p> <p>MAX500m</p>
1	GT15 Max. 16 units	Between GOT and temperature controller 500m or less	<p>Max. 16 units</p> <p>8 RS-485 cable 10) (4 wires)</p> <p>MAX500m</p>


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 Communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 Communication	GT15-RS2-9P
	2	RS-422 conversion unit*1 • For RS-422 Communication	GT15-RS2T4-9P
		RS-422/485 Communication Unit • For RS-422 Communication	GT15-RS4-9S
		RS-422 interface • For RS-422 Communication	— (Built into GOT)
	3	RS-422/485 Communication Unit • For RS-485 Communication	GT15-RS4-TE

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) Temperature controller

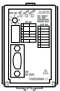Image	No.	Name	Model name
	4	RS232C/RS485 converter	ML2-□

4 is manufactured by YOKOGAWA. For details of the product, contact YOKOGAWA

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER



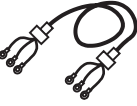

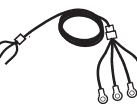
31

INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION

(3) Cable

Image	No.	Name	Model name
	5	RS-232 cable 1) Between GOT and RS232C/RS485 converter	(To be prepared by the user.  Section 29.2 Connection Cable)
	6	RS-485 cable 8) • Between temperature controller and RS232C/RS485 converter	
	7	RS-485 cable 9) • Between GOT and temperature controller	
	8	RS-485 cable 10) • Between GOT and temperature controller	

29.2 Connection Cable

The RS-232 cable or RS-485 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable	
		RS-232 cable (Refer to Section 29.2.1)	RS-485 cable (Refer to Section 29.2.2)
Temperature controller*1	GREEN Series	-	RS-485 cable 1), RS-485 cable 2) RS-485 cable3), RS-485 cable 4) RS-485 cable 5), RS-485 cable 6) RS-485 cable 7)
	UT100 Series	-	RS-485 cable 6), RS-485 cable 7)
	UT2000 Series	-	RS-485 cable 8), RS-485 cable 9) RS-485 cable 10)
RS232C/RS485 converter	ML2-□	RS-232 cable 1)	RS-485 cable 1), RS-485 cable 4) RS-485 cable 6), RS-485 cable 8)

*1 Select a model equipped with the RS-485 communication interface.
For details of the models, refer to the following manual.


 User's Manual for the YOKOGAWA temperature controller

29.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a temperature controller.

1 Connection diagram

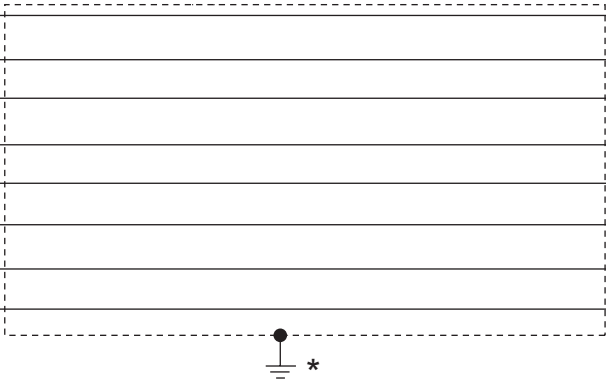(1) RS-232 cable 1)

GOT side		Cable connection and signal direction	RS232C/RS485 converter side (ML2-□)	
Signal name	Pin No.		Pin No.	Signal name
CD	1		1	CD
RD(RXD)	2		2	RD
SD(TXD)	3		3	SD
ER(DTR)	4		4	ER
SG	5		5	SG
DR(DSR)	6		6	DR
RS(RTS)	7		7	RS
CS(CTS)	8		8	CS
NC	9		9	-
FG	-			

* Connect FG grounding to the appropriate part of a cable shield line.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) YOKOGAWA temperature controller side connector

Use the connector compatible with the YOKOGAWA temperature controller side.

For details, refer to the following manual.

 User's Manual for the YOKOGAWA temperature controller

3 Precautions when preparing cable


The length of the RS-232 cable must be 15m or less.

29.2.2 RS-485 cable

The following shows the connection diagrams and connector specifications of the RS-485 cable used for connecting the GOT to a temperature controller.

1 Connection diagram

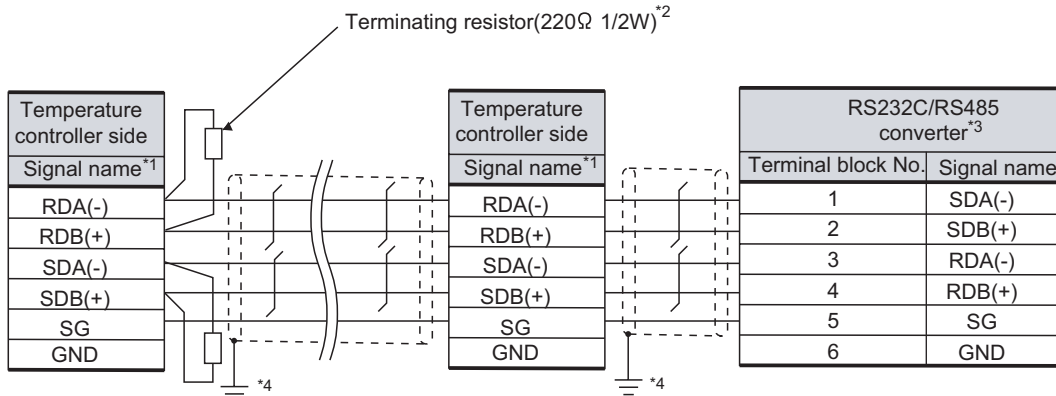(1) RS-485 cable 1)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.


Signal name	Model of temperature controller	
	GREEN Series UT/UP/UM	GREEN Series US
	Pin No.	Pin No.
RDA (-)	26	24
RDB (+)	25	23
SDB (-)	23	21
SDA (+)	24	22
SG	27	25

*2 Terminating resistor should be provided for a temperature controller which will be a terminal.

*3 Turn on the terminating switch on the RS232C/RS485 converter at the end.

*4 Connect FG grounding to the appropriate part of a cable shield line.

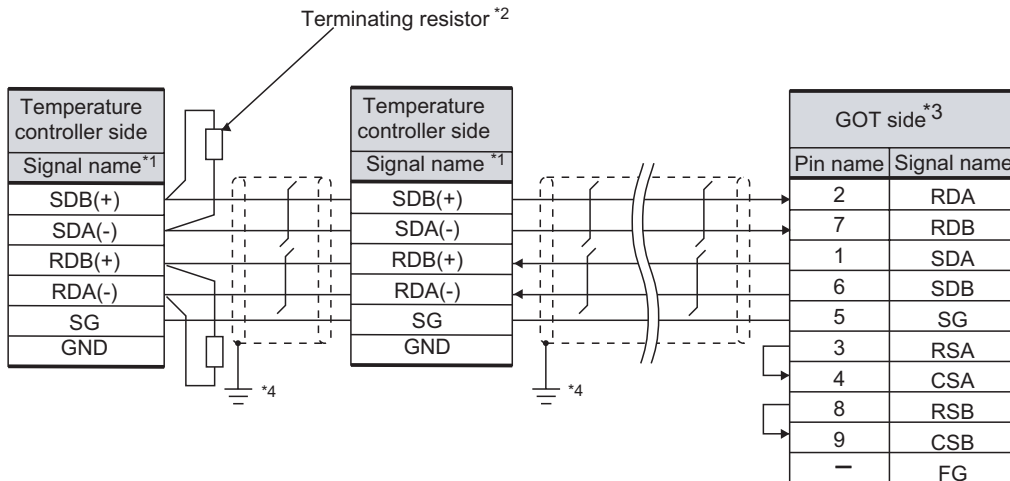(2) RS-485 cable 2)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.

Signal name	Model of temperature controller	
	GREEN Series UT/UP/UM	GREEN Series US
	Pin No.	Pin No.
SDB (+)	23	21
SDA (-)	24	22
RDB (+)	25	23
RDA (-)	26	24
SG	27	25

*2 Terminating resistor should be provided for a temperature controller which will be a terminal.
The value of terminating resistor varies between GT15 and GT11.

For the GT15 :100Ω 1/2W

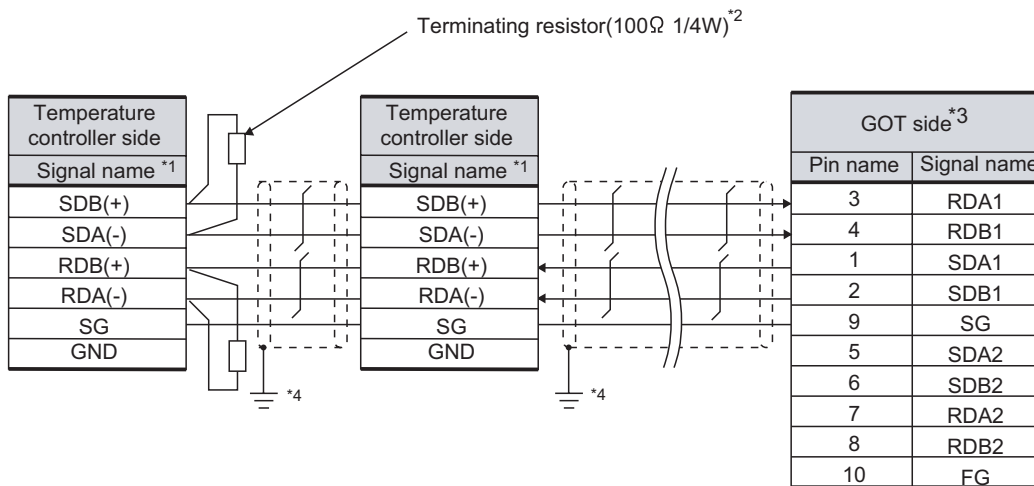
For the GT11 :220Ω 1/4W

*3 Set the terminating resistor of GOT side to "Enable".

4 Connecting terminating resistors

*4 Connect FG grounding to the appropriate part of a cable shield line.

(3) RS-485 cable 3) (for only GT15)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.

Signal name	Model of temperature controller	
	GREEN Series UT/UP/UM	GREEN Series US
	Pin No.	Pin No.
SDB (+)	23	21
SDA (-)	24	22
RDB (+)	25	23
RDA (-)	26	24
SG	27	25

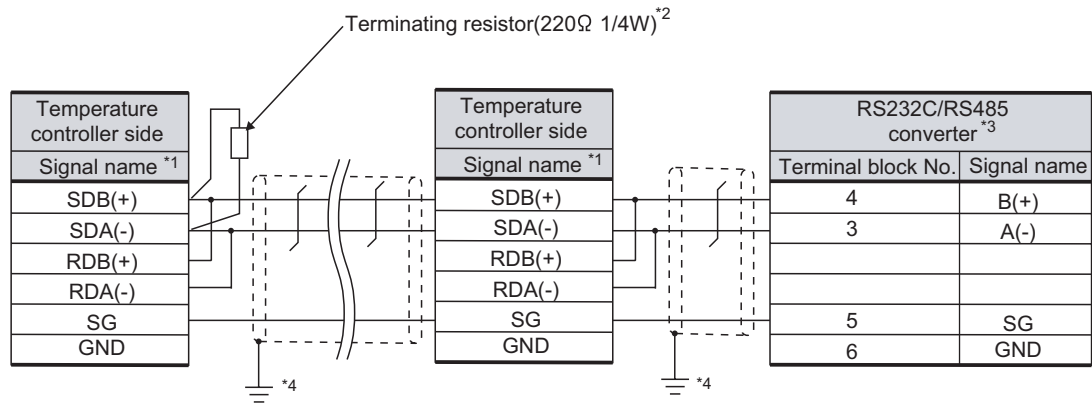
*2 Terminating resistor should be provided for a temperature controller which will be a terminal.

*3 Set the terminating resistor of GOT side to "Enable".

4 Connecting terminating resistors

*4 Connect FG grounding to the appropriate part of a cable shield line.

(4) RS-485 cable 4) (for only GT15)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.


Signal name	Model of temperature controller	
	GREEN Series UT/UP/UM	GREEN Series US
	Pin No.	Pin No.
SDB (+)	23	21
SDA (-)	24	22
RDB (+)	25	23
RDA (-)	26	24
SG	27	25

*2 Terminating resistor should be provided for a temperature controller which will be a terminal.

*3 Turn on the terminating switch on the RS232C/RS485 converter at the end.

*4 Connect FG grounding to the appropriate part of a cable shield line.

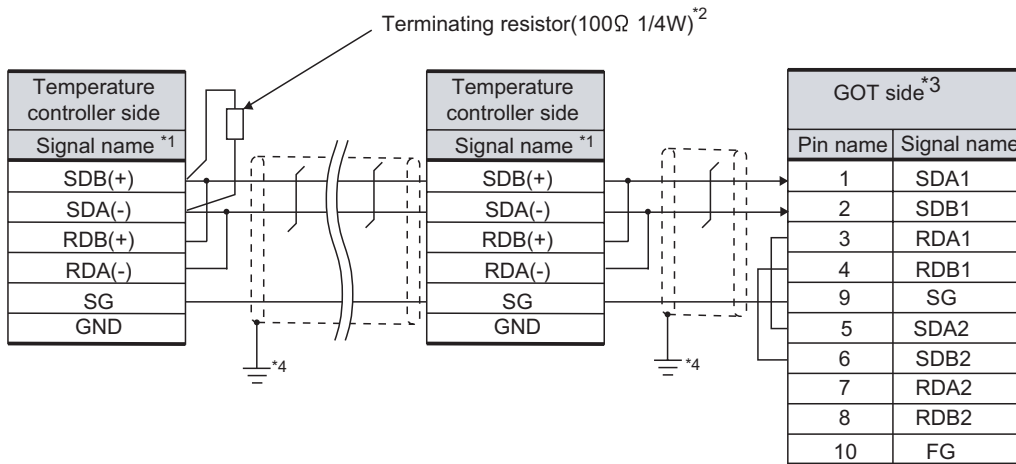(5) RS-485 cable 5) (for only GT15)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.

Signal name	Model of temperature controller	
	GREEN Series UT/UP/UM	GREEN Series US
	Pin No.	Pin No.
SDB (+)	23	21
SDA (-)	24	22
RDB (+)	25	23
RDA (-)	26	24
SG	27	25

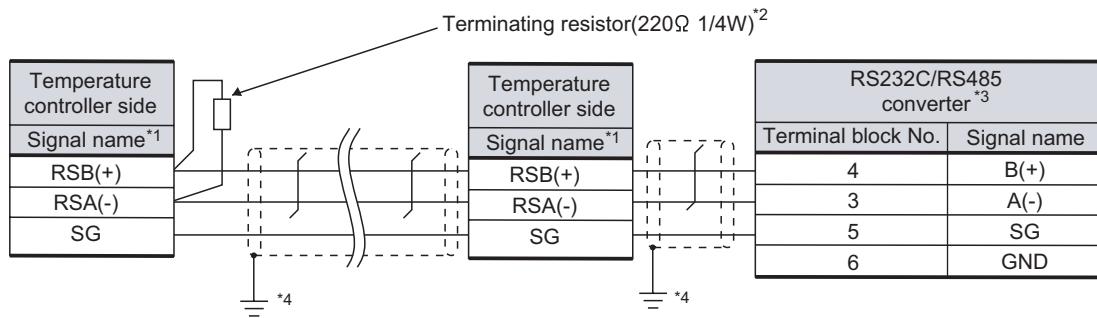
*2 Terminating resistor should be provided for a temperature controller which will be a terminal.

*3 Set the terminating resistor of GOT side to "Enable".

4 Connecting terminating resistors

*4 Connect FG grounding to the appropriate part of a cable shield line.

(6) RS-485 cable 6)



*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.


Signal name	Model of temperature controller		
	GREEN Series UT750/UP750	UT100 Series UT130/UT150/UP150	UT100 Series UT152/UT155
	Pin No.	Pin No.	Pin No.
RSB (+)	28	3	26
RSA (-)	29	4	27
SG	30	5	28

*2 Terminating resistor should be provided for a temperature controller which will be a terminal.

*3 Turn on the terminating switch on the RS232C/RS485 converter at the end.

*4 Connect FG grounding to the appropriate part of a cable shield line.

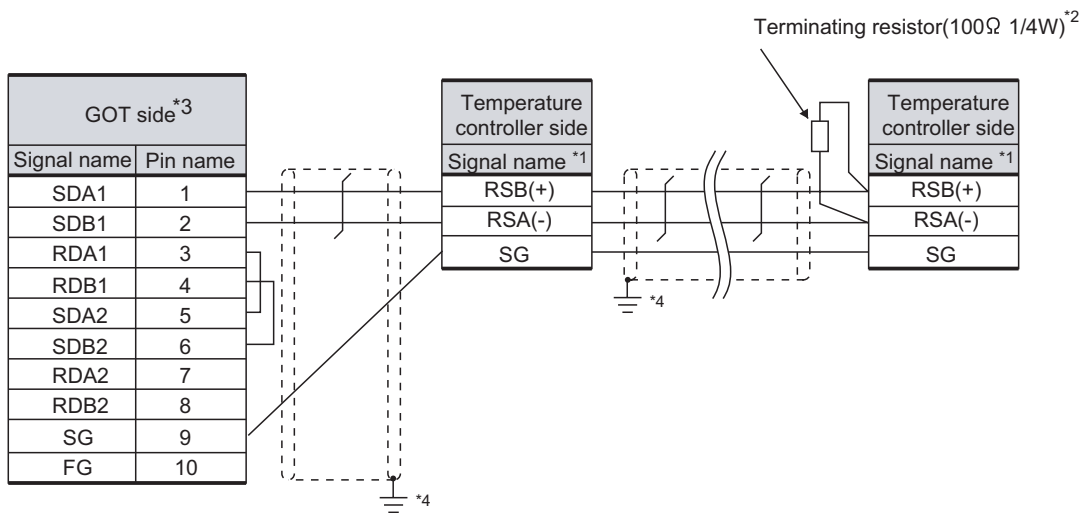(7) RS-485 cable 7) (for only GT15)




*1 Pin No. of temperature controller differs depending on the model. Refer to the following table.

Signal name	Model of temperature controller		
	GREEN Series UT750/UP750	UT100 Series UT130/UT150/UP150	UT100 Series UT152/UT155
	Pin No.	Pin No.	Pin No.
RSB (+)	28	3	26
RSA (-)	29	4	27
SG	30	5	28

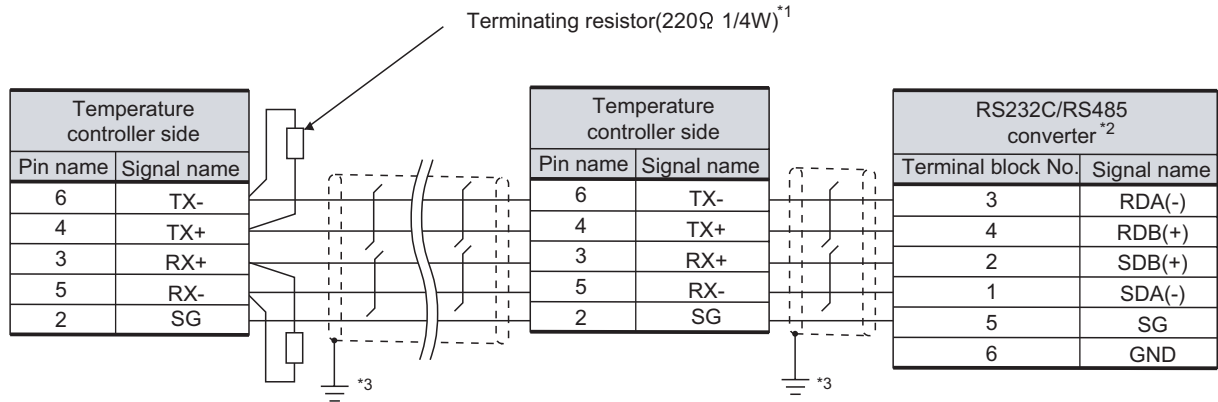
*2 Terminating resistor should be provided for a temperature controller which will be a terminal.

*3 Set the terminating resistor of GOT side to "Enable".

 **4** Connecting terminating resistors


*4 Connect FG grounding to the appropriate part of a cable shield line.

(8) RS-485 cable 8)




- *1 Terminating resistor should be provided for a temperature controller which will be a terminal.
- *2 Turn on the terminating switch on the RS232C/RS485 converter at the end.
- *3 Connect FG grounding to the appropriate part of a cable shield line.

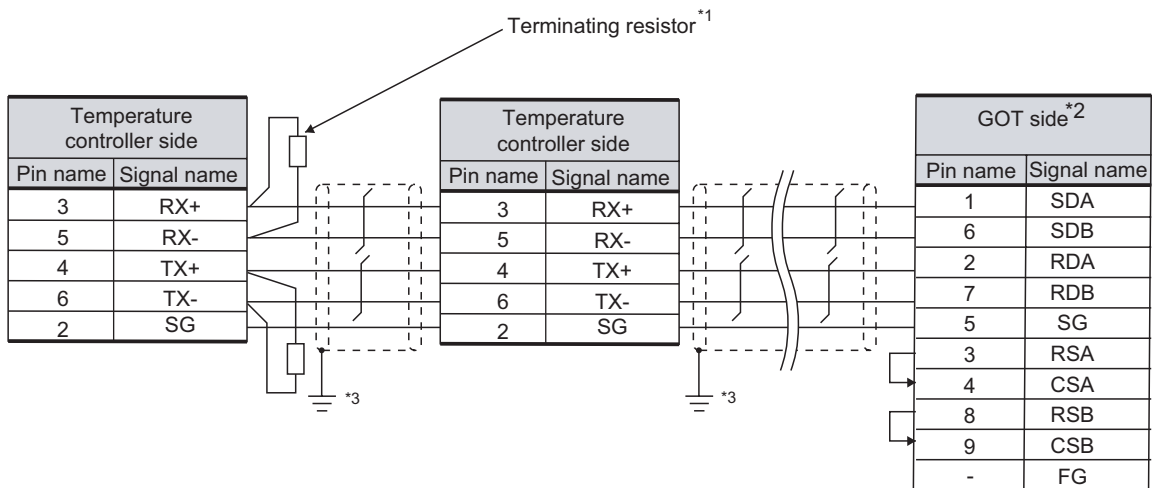(9) RS-485 cable 9)



- *1 Terminating resistor should be provided for a temperature controller which will be a terminal.
The value of terminating resistor varies between GT15 and GT11.
For the GT15 :100Ω 1/2W
For the GT11 :220Ω 1/4W
- *2 Set the terminating resistor of GOT side to "Enable".
- 4** Connecting terminating resistors
- *3 Connect FG grounding to the appropriate part of a cable shield line.

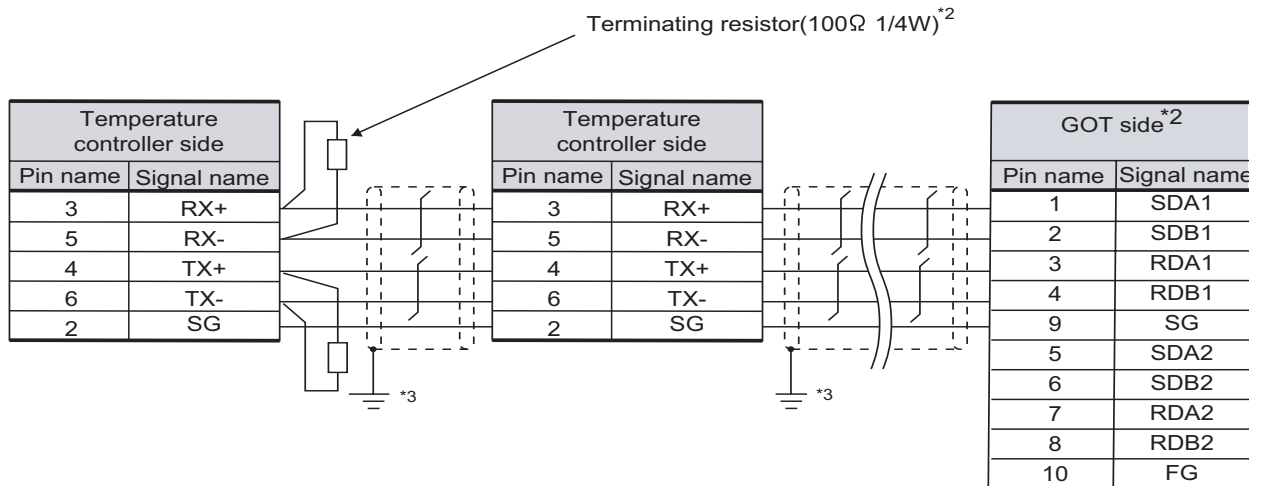(10) RS-485 cable 7) (for only GT15)



*1 Terminating resistor should be provided for a temperature controller which will be a terminal.

*2 Set the terminating resistor of GOT side to "Enable".

4 Connecting terminating resistors

*3 Connect FG grounding to the appropriate part of a cable shield line.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-485 cable, use the terminal block packed together with the RS-422/485 communication unit.

GOT	Connector model	Connector type	Manufacturer
GT15-RS4-TE	SL-SMT3.5/10/90F BOX	—	Weidmuller interconnections inc.

(2) YOKOGAWA temperature controller side connector

Use the connector compatible with the YOKOGAWA temperature controller side module.

For details, refer to the following manual.

 User's Manual for the YOKOGAWA temperature controller

3 Precaution when preparing a cable

When connecting a RS-485 cable to the GOT, the length of the RS-485 cable must be 500m or less.

4 Connecting terminating resistors


(1) GOT

Set the terminating resistor of RS-422/485 communication unit to be "Enable" using the terminating resistor setting switch.

Terminating resistor*1	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF



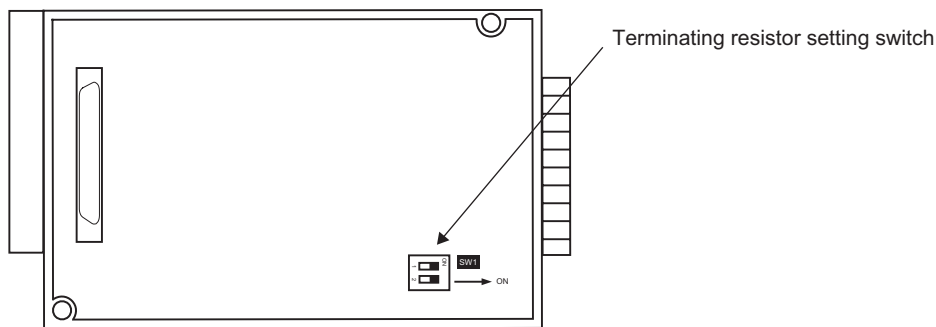
*1 The default setting is "Enable".



Rear View of RS-422/485 communication unit

29.3 Preparatory Procedures for Monitoring

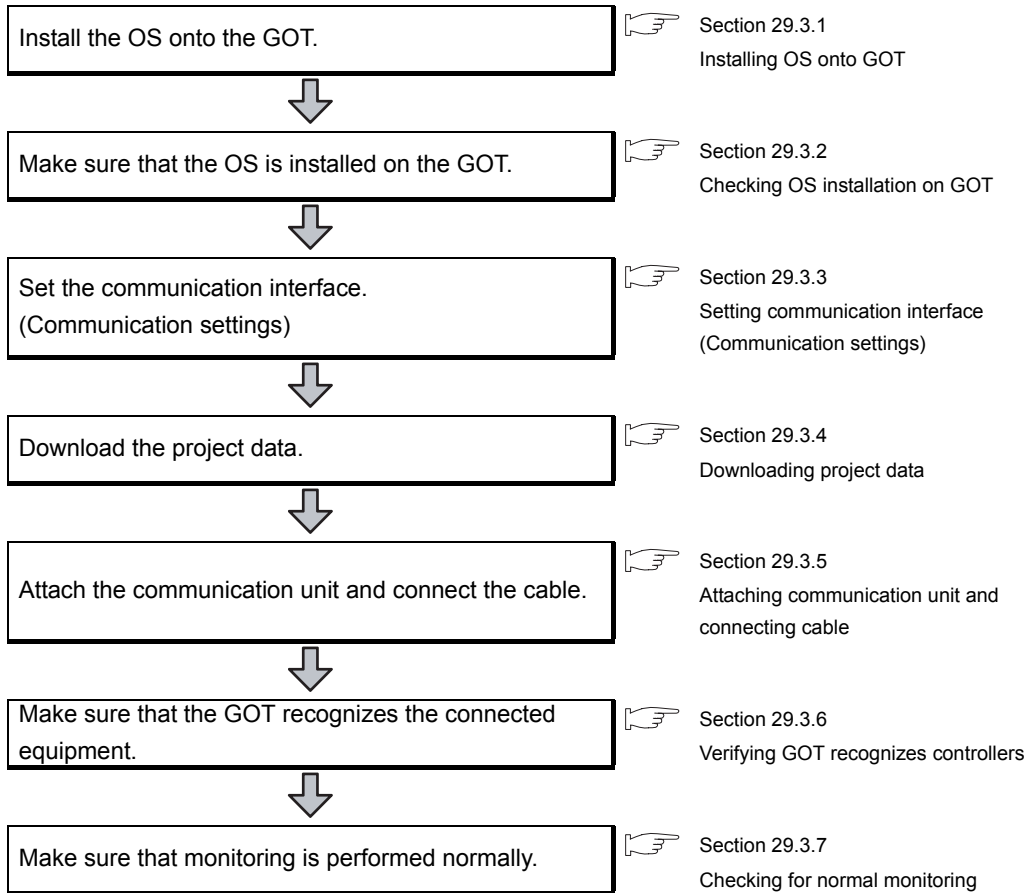The following the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the temperature controller side setting


This section explains the GOT side setting.


When confirming the temperature controller side setting, refer to the following.

Section 29.4 Temperature Controller Side Setting

29.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

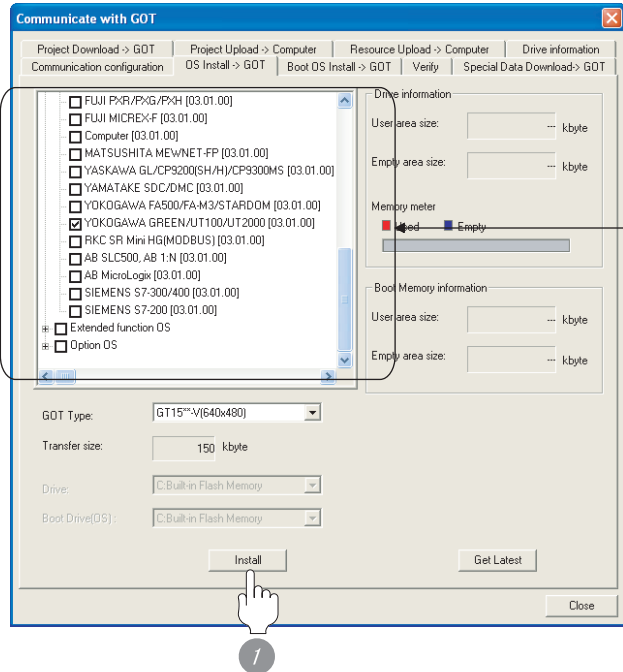 GT Designer2 Version Basic Operation/Data Transfer Manual




Check the following under the Communication driver.

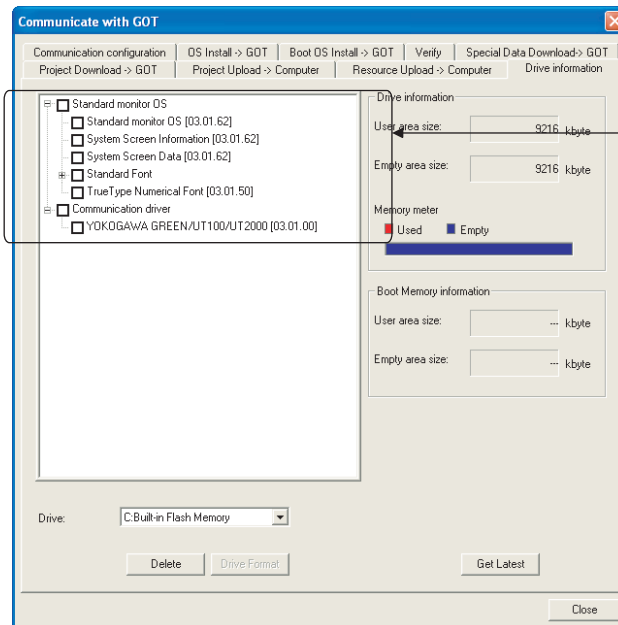
- YOKOGAWA GREEN/UT100/UT2000

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

29.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

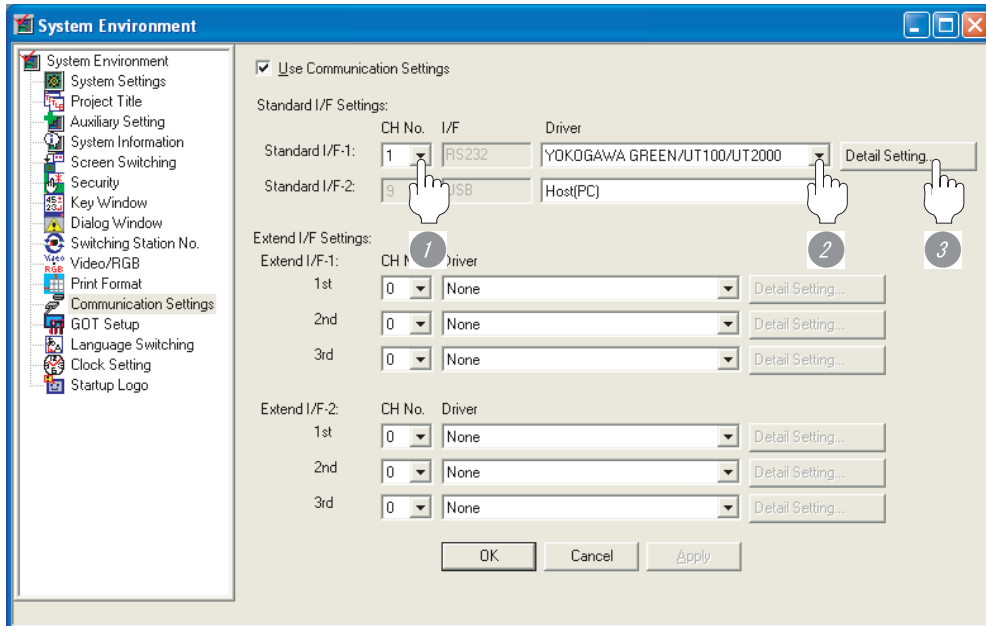
- 1) Standard monitor OS
- 2) Communication driver: YOKOGAWA GREEN/UT100/UT2000

29.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



(When using GT15)

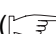- 1 Set "1" to the channel No. used.
- 2 Set the driver to "YOKOGAWA GREEN/UT100/UT2000".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)


2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	9600bps,19200bps,38400bps,57600bps,115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Odd>	None Even Odd
Sum check	Set whether or not to perform a sum check during communication. <Default: None>	Done, None
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec
Host Address	Specify the host address (station No. of the GOT to which the temperature controller is connected) in the connected network. <Default: 1>	1 to 99
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 5ms>	0 to 300 ms
Format	Select the communication format. <Default: 1> format 1: Accessible to GREEN/UT100/UT2000 Series format 2: Accessible to GREEN/UT2000 Series, Not accessible to UT100 Series.	1/2

- (1) Format
 - When connecting to UT100 Series, specify the format 1.
 - When connecting to only GREEN/UT2000 Series, specifying the format 2 is recommended.
- (2) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT User's Manual
- (3) Precedence in communication settings

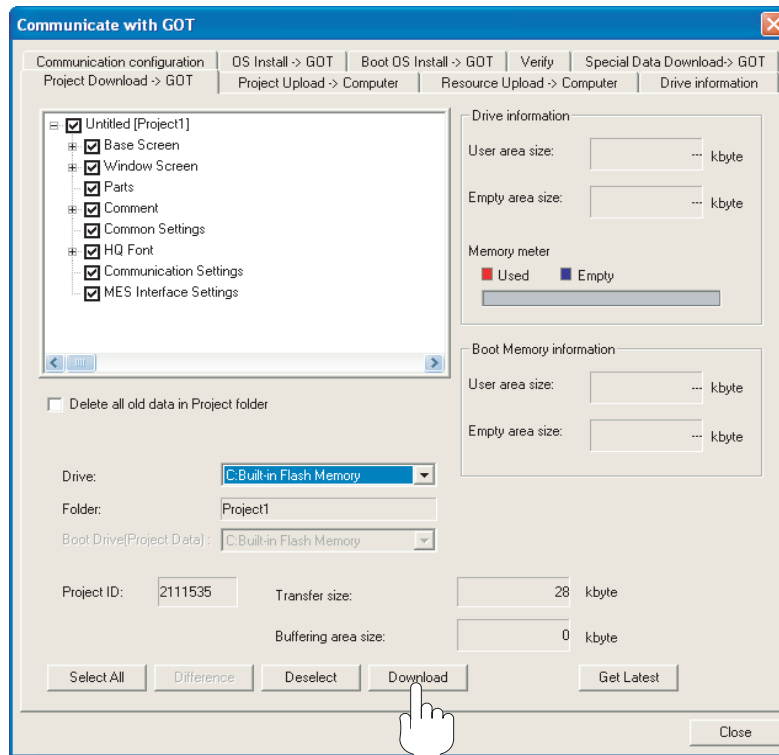
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

29.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


29.3.5 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

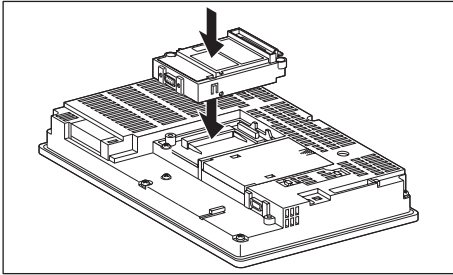1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.



Serial communication unit

For details on the serial communication unit, refer to the following manual:

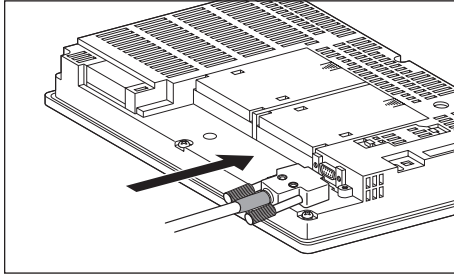
 [GT15 Serial Communication Unit User's Manual](#)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

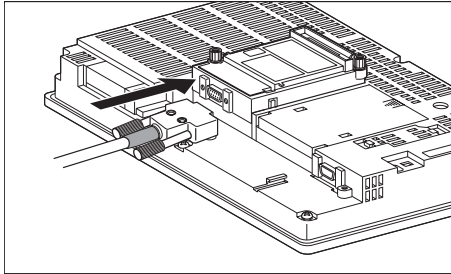- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

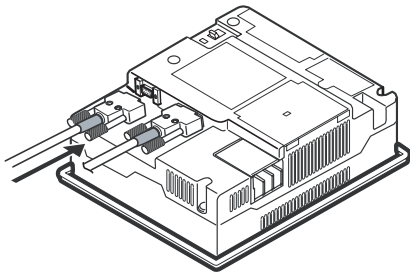(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

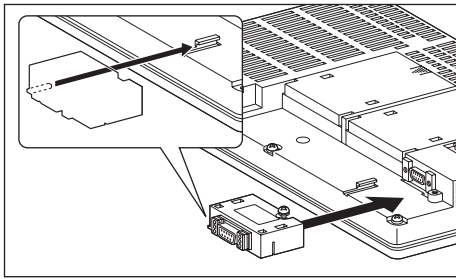- connection to the RS-232 interface




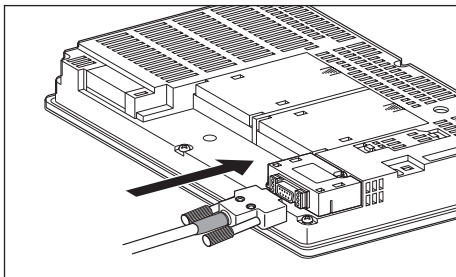- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

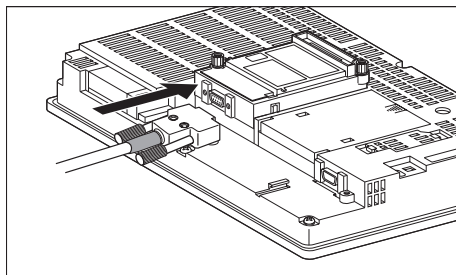- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

☞ GT15 RS-422 Conversion Unit User's Manual

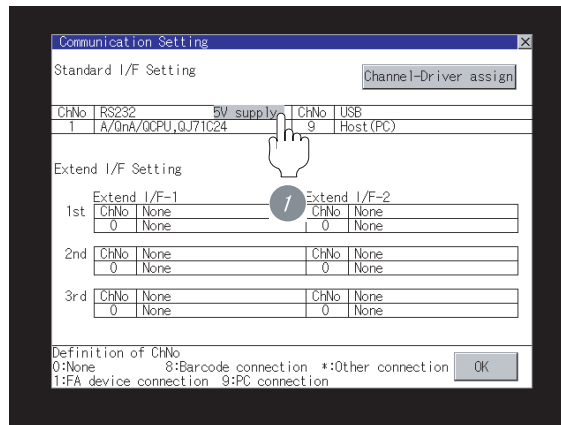
Point

When using the RS-422 conversion unit


On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT.
For details on the utility, refer to the following manual:

 GT □ User's Manual


1 Touch [5V supply].



2 Set [5V power supply] to "YES".

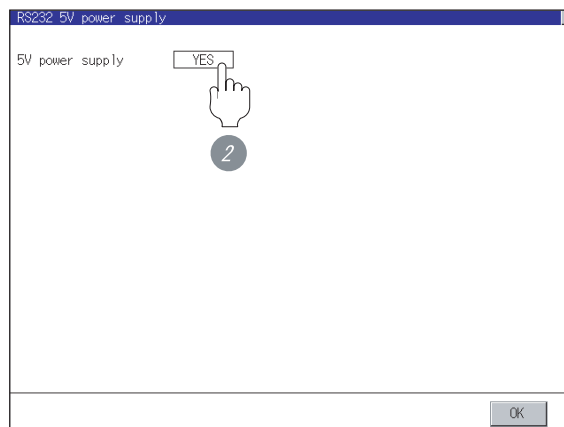


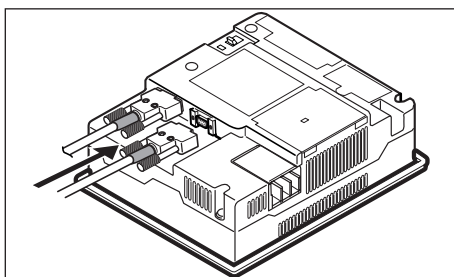(b) In the case of the GT11




1 Connect the RS-422 cable to the RS-422 interface on the GOT.

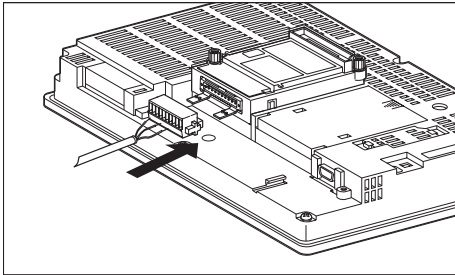(2) How to connect the RS-485 cable



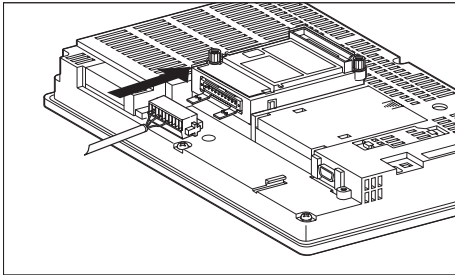- 1 Connect the RS-485 cable to the terminal block packed together with the RS-422/485 communication unit.



- 2 Connect the terminal block to the RS-422/485 communication unit on the GOT.

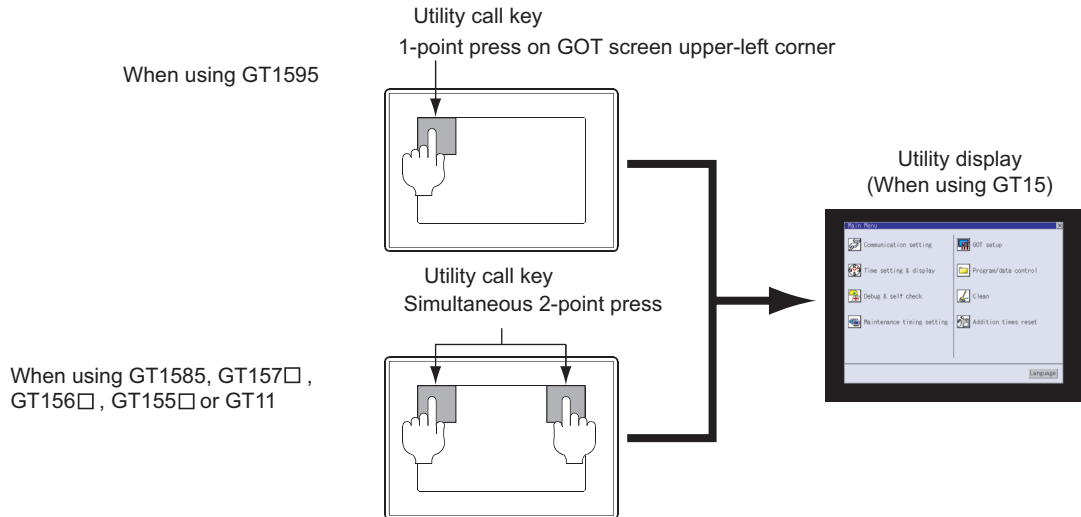
29.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point

When setting the utility call key to 1-point


When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.

For the setting of the utility call key, refer to the following.

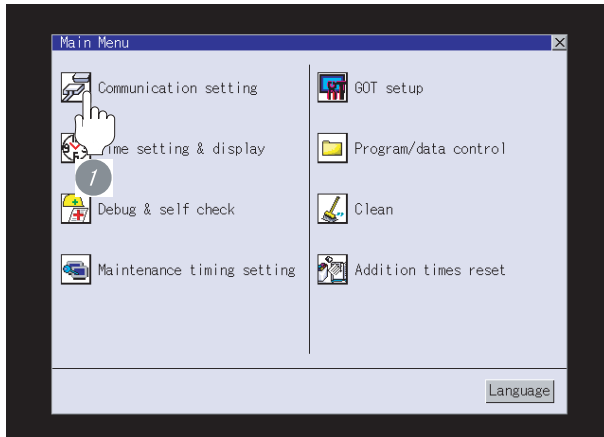☞ GT□ User's Manual



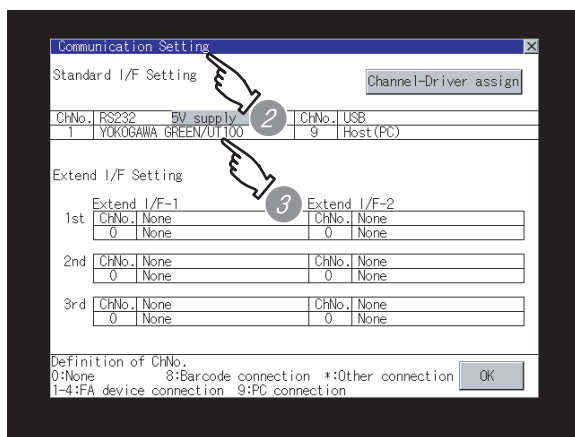- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver:
YOKOGAWA GREEN/UT100
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

➡ Section 29.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

➡ GT □ User's Manual

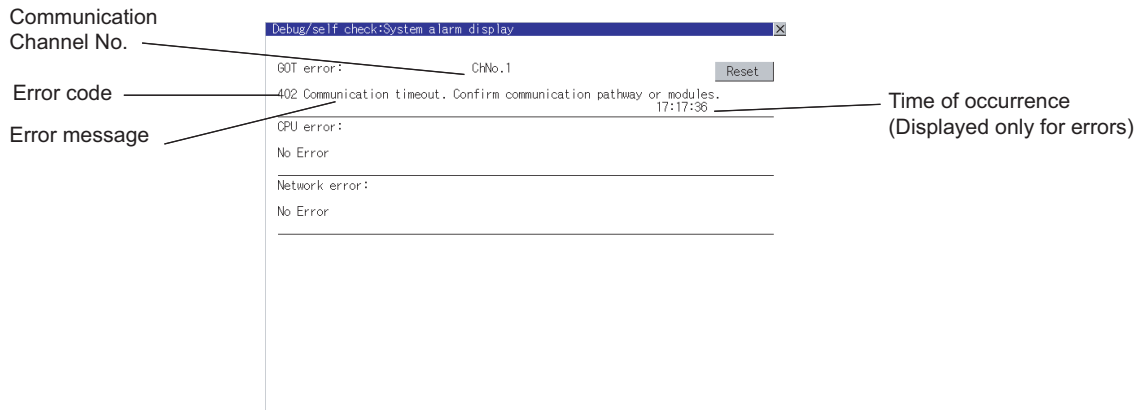
29.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT User's Manual (When using GT15)



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version Screen Design Manual

2 Perform an I/O check

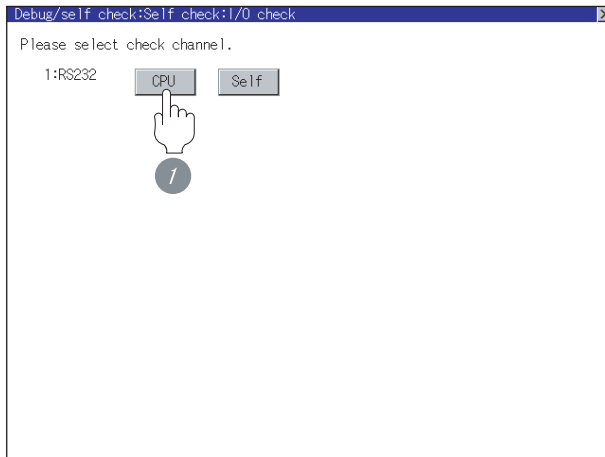
Whether the temperature controller can communicate with the GOT or not can be checked by the I/O check function.

If this check ends successfully, it means correct communication interface settings and proper cable connection.


Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].

For details on the I/O check, refer to the following manual:

 GT □ User's Manual



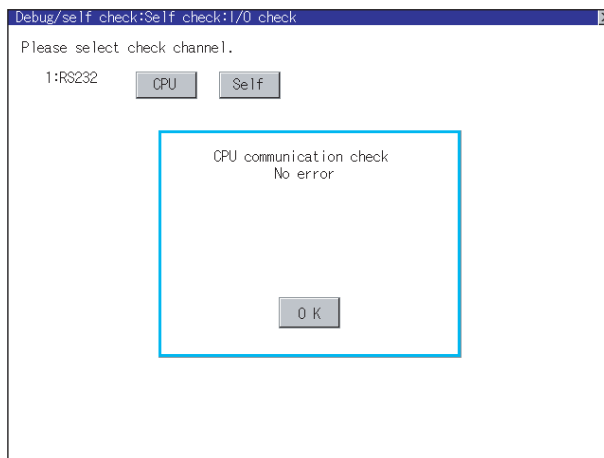- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected temperature controller.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the temperature controller side setting

When connecting the GOT, setting is required for the temperature controller side.



Confirm if the temperature controller side setting is correct.

 Section 29.4 Temperature Controller Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

29.4 Temperature Controller Side Setting

Point

- (1) YOKOGAWA temperature controller
For details of YOKOGAWA temperature controller, refer to the following manual.
 User's Manual for the YOKOGAWA temperature controller
- (2) RS232C/RS485 converter
For details on communication settings of the RS232C/RS485 converter, refer to the following manual.
 User's Manual for RS232C/RS485 converter

	Model name	Reference
Temperature controller	GREEN	Section 29.4.1
	UT100	Section 29.4.2
	UT2000	Section 29.4.3
RS232C/RS485 converter	ML2-□	Section 29.4.4

29.4.1 Connecting to GREEN Series

1 Communication settings

Make the communication settings by operating the key of the temperature controller.

(1) For the UT□/UP□/UM□/US100 (except UT750, UP750)

Item	Set value
Transmission speed	9600bps (fixed)
Data length* ¹	7 bits, 8bits
Parity bit* ¹	Even, Odd, None
Stop bit* ¹	1 bit, 2bits
Address* ² ³	1 to 99
Protocol selection * ¹	0:PC link communication (without sum check) 1:PC link communication (with sum check)

*1 Adjust the settings with GOT settings.

*2 Avoid duplication of the address with any of the other units.

(2) For the UT750, UP750

Item	Set value	
Transmission speed* ¹	RS-485 communication	9600bps (fixed)
	High performance RS-485 communication	9600bps, 19200bps, 38400bps
Data length* ¹	7 bits, 8bits	
Parity bit* ¹	Even, Odd, None	
Stop bit* ¹	1 bit, 2bits	
Address* ² ³	1 to 99	
Protocol selection * ¹	RS-485 communication	0:PC link communication (without sum check) 1:PC link communication (with sum check)
	High performance RS-485 communication	0:PC link communication (without sum check) 1:PC link communication (with sum check)

*1 Adjust the settings with GOT settings.

*2 Avoid duplication of the address with any of the other units.

29.4.2 Connecting to UT100 Series

1 Communication settings

Make the communication settings by operating the key of the temperature controller.

Item	Set value
Transmission speed	9600bps
Data length ^{*1}	7 bits, 8bits
Parity bit ^{*1}	Even, Odd, None
Stop bit ^{*1}	1 bit, 2bits
Address ^{*2*3}	1 to 99
Protocol selection ^{*1}	0:PC link communication (without sum check) 1:PC link communication (with sum check)

*1 Adjust the settings with GOT settings.

*2 Avoid duplication of the address with any of the other units.

29.4.3 Connecting to UT2000 Series

1 Communication settings


Make the communication settings using setting switches.

Item	Set value
Transmission speed	9600bps
Data length	8bits (fixed)
Parity bit ^{*1}	Even, Odd, None
Stop bit	1 bit (fixed)
Station No. ^{*2}	1 to 16
Communication mode	PC link communication mode

*1 Adjust the settings with GOT settings.

*2 Avoid duplication of the station No. with any of the other units.

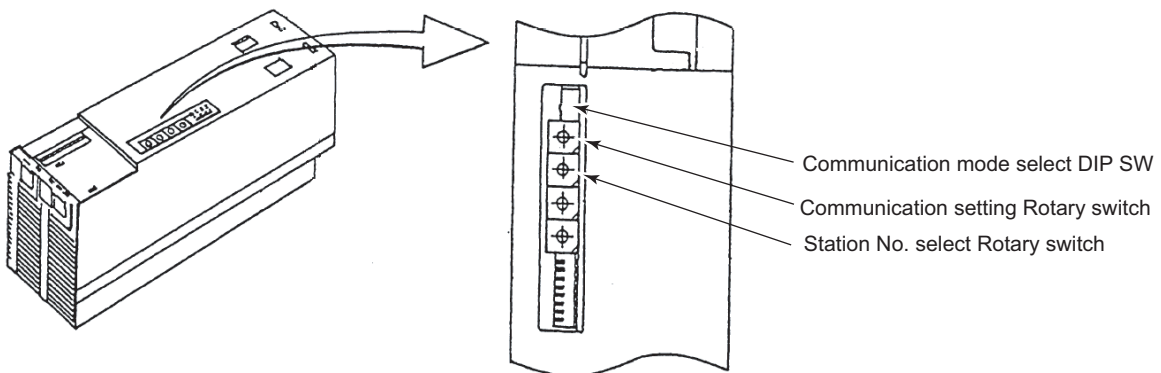2 Settings by switch



(1) Settings of the transmission speed and the parity

Make those settings by operating the communication setting Rotary switch.


Switch positions	Transmission speed	Parity
0	9600bps	None
1		Odd
2		Even



(2) A setting of the communication mode

Make this setting by operating the communication mode select DIP SW.

Switch positions	communication mode
ON	PC link communication mode



- (3) A setting of the station No.
 Make this setting by operating the station No. select Rotary switch.

Switch positions	Station No.
0	1
1	2
2	3
3	4
4	5
5	6
6	7
7	8
8	9
9	10
A	11
B	12
C	13
D	14
E	15
F	16



29.4.4 Connecting to RS232C/RS485 converter


1 Communication settings

Make the communication settings using setting switches.


Item	Set value
Transmission speed*1	9600bps, 19200bps, 38400bps
Setting (2-wire/4-wire)*2	2-wire, 4-wire
Terminating resistor*2	with, without
Echo back	OFF
RS-485 driver-active control	AUTO

*1 Adjust the settings with GOT settings.

*2 Refer to the following connection diagram for setting.

 29.2.2RS-485 cable

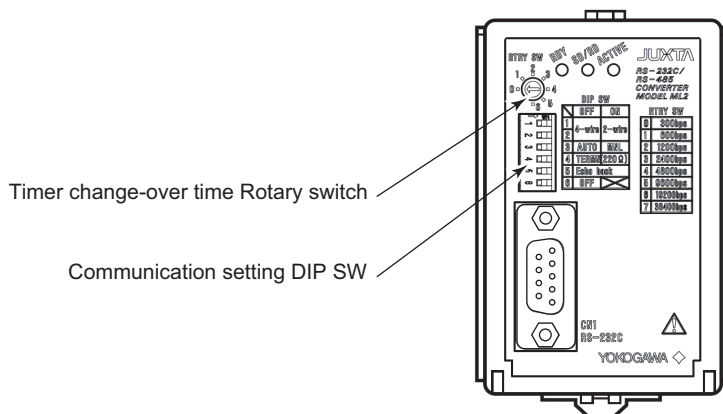
2 Settings by switch



- (1) Settings of the setting (2-wire/4-wire), the RS-485 driver-active control, the terminating resistor, the echo back

Make those settings by operating the communication setting DIP SW.

Item	Set value	Switch No.					
		1	2	2	3	5	6
Setting (2-wire/4-wire)	4-wire	OFF	OFF				
	2-wire	ON	ON				
RS-485 driver-active control	AUTO			OFF			
Terminating resistor	with				ON		
	without				OFF		
Echo back	OFF					OFF	



- (2) A setting of the transmission speed


Make this setting by operating the timer change-over time Rotary switch.

Switch positions	Transmission speed
5	9600bps
6	19200bps
7	38400bps



29.4.5 Station NO. settings

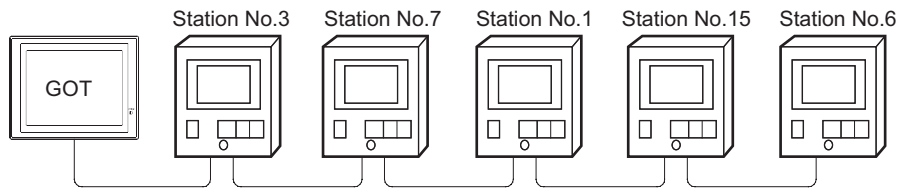Set each station number while making sure that one station number is used only once. The station number can be set without regard to the cable connection order. No problem is expected even if station numbers are not consecutive.



Examples of station number setting

(1) Direct specification

When setting the device, specify the station number of the temperature controller of which data is to be changed.

Specification range
1 to 99

(2) Indirect specification

When setting the device, indirectly specify the station number of the inverter of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).

When specifying the station No. from 100 to 115 on GT Designer2, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the temperature controller.

Specification station NO.	Compatible device	Setting range
100	GD10	0 to 99 For the setting other than the above, error (dedicated device is out of range) will occur.
101	GD11	
102	GD12	
103	GD13	
104	GD14	
105	GD15	
106	GD16	
107	GD17	
108	GD18	
109	GD19	
110	GD20	
111	GD21	
112	GD22	
113	GD23	
114	GD24	
115	GD25	

(3) All station specification

Target station differs depending on write-in operation or read-out operation.

- For write-in operation, all station will be a target.

In the WORD BIT write-in operation, only the indicating controller whose station No. is the the same as host address is applicable.

For details of host address setting, refer to the following.

☞ Section 29.3.3 Setting communication interface (Communication settings)

- In the read-out operation, only the indicating controller whose station No. is the the same as host address is applicable. For details of host address setting, refer to the following.

☞ Section 29.3.3 Setting communication interface (Communication settings)

29.5 Precautions

1 Station number settings of temperature controller

In the system configuration, the temperature controller with the station number set with the host address must be included. For details of host address setting, refer to the following.

 Section 37.3.4 Downloading project data

2 GOT clock function

Since the temperature controller does not have a clock function, the settings of "time adjusting" or "time broad cast" by GOT clock control will be disabled.

3 Disconnecting some of multiple connected equipments

The GOT can disconnect some of multiple connected equipments by setting GOT internal device. For example, the faulty station where a communication timeout error occurs can be disconnected from connected equipments.

For details of GOT internal device setting, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual (2.9.1 GOT internal devices)

29.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Connecting to the YOKOGAWA temperature controller	Supporting the YOKOGAWA temperature controller connection	2.43V	Communication driver FUJI PXR/PXG/PXH [03.01.**]
	Supporting the following: <ul style="list-style-type: none"> • Disconnecting some of multiple connected equipments • Preventing the monitoring operation of the faulty station automatically 	2.58L	Communication driver YOKOGAWA GREEN/UT100/ UT2000 [03.03.**]

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

31

INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION

CONNECTION TO RKC TEMPERATURE CONTROLLER



30.1 System Configuration page 30-2

This section describes the equipment and cables needed when connecting a GOT to a RKC temperature controller. Select a system suitable for your application.

30.2 Connection Cable page 30-13

This section describes the specifications of the cables needed when connecting a GOT to a RKC temperature controller. Check the specifications of the connection cables.

30.3 Preparatory Procedures for Monitoring page 30-23

This section provides the procedures to be followed before performing monitoring in connection to a RKC temperature controller. The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

30.4 Temperature Controller Side Setting page 30-39

The RKC temperature controller side settings for GOT connection are explained. When checking the PLC side settings, refer to this section.

30.5 Precautions page 30-49

This section describes the precautions about temperature controller connection. Refer to this section without fail before starting temperature controller connection.

30.6 List of Functions Added by Version Upgrade page 30-50

This section describes the functions added by version upgrade of GT Designer2 or OS.

30.1 System Configuration

Select a system configuration suitable for your application.




Conventions used in this section

Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.

30.1.1 Connecting to H-PCP-J



1 System configuration and connection conditions

Connection conditions			System configuration
Numbe of GOTs	Numbe of Temperature controllers	Distance	
1	1	15m or less	
1	1	15m or less	
1	1	1200m or less	
1	1	1200m or less	

Connection conditions			System configuration
Numbe of GOT	Numbe of Temperature controller	Distance	
1	16 (max.)	1200m or less	<p>7 RS-422 cable 1) COM.PORT1 COM.PORT2 9 RS-422 cable 2) MAX1200m</p>
1	16 (max.)	1200m or less	<p>3 8 RS-485 cable 1) COM.PORT1 COM.PORT2 10 RS-485 cable 2) MAX1200m</p>

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

31

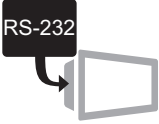

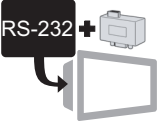

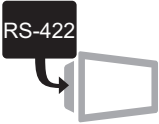
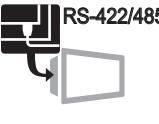
INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 Communication	— (Built into GOT)
		RS-232 Communication Unit • For RS-232 Communication	GT15-RS2-9P
	2	RS-422 conversion unit*1 • For RS-422 Communication	GT15-RS2T4-9P
		RS-422/485 Communication Unit • For RS-422 Communication	GT15-RS4-9S
		RS-422 interface • For RS-422 Communication	— (Built into GOT)
	3	RS-422/485 Communication Unit • For RS-485 Communication	GT15-RS4-TE








*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) Temperature controller

Image	No.	Name	Model name
	4	Conversion connector	FAX067

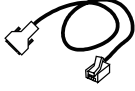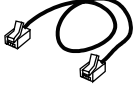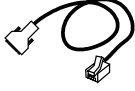4 is a product manufactured by RKC. For details of this product, contact RKC.

(3) Cable

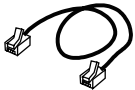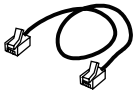
Image	No.	Name	Model name
	5	RS-232 cable 1) ^{*1} • Between temperature controller and GOT	W-BF-28-0500(0.5m), W-BF-28-1000(1m), W-BF-28-3000(3m)
	6	RS-232 cable 2) • Between conversion connector 4 and temperature controller	W-BF-02-0500(0.5m), W-BF-02-1000(1m), W-BF-02-3000(3m)
	7	RS-422 cable 1) • Between temperature controller and GOT	(To be prepared by the user.  Section 30.2 Connection Cable)
	8	RS-485 cable 1) ^{*1*2} • Between temperature controller and GOT	W-BF-01-0500(0.5m), W-BF-01-1000(1m), W-BF-01-3000(3m)
	9	RS-422 cable 2) • Between temperature controllers	W-BF-02-0500(0.5m), W-BF-02-1000(1m), W-BF-02-3000(3m)
	10	RS-485 cable 2) • Between temperature controllers	

*1 The RS-232 cable and RS-485 cable can be prepared by the user. ( Section 30.2 Connection Cable)

*2 To use the dedicated cable, conversion of the cable may be necessary.

[5](#), [6](#), [8](#), [9](#), [10](#) are products manufactured by RKC. For details of these products, contact RKC.

30.1.2 Connecting to H-PCP-A or H-PCP-B

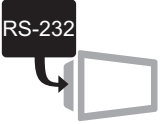



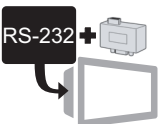

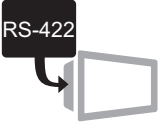





1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOT	Number of Temperature controllers	Distance	
1	1	15m or less	<p>5 RS-232 cable 1) MAX15m Modular connector 1</p>
1	1	15m or less	<p>6 RS-232 cable 2) 4 Conversion connector MAX15m Modular connector 1</p>
1	1	1200m or less	<p>7 RS-422 cable 1) MAX1200m Modular connector 1</p>
1	16 (max.)	1200m or less	<p>7 RS-422 cable 1) Modular connector 1 Modular connector 2 8 RS-422 cable 2) MAX1200m</p>


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) Temperature controller

Image	No.	Name	Model name
	4	Conversion connector	FAX067

4 is a product manufactured by RKC. For details of this product, contact RKC.

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

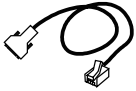
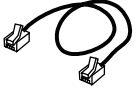
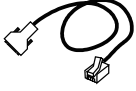

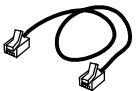
31


INVERTER
CONNECTION

32


SERVO AMPLIFIER
CONNECTION

(3) Cable

Image	No.	Name	Model name
	[5]	RS-232 cable 1) ^{*1} • Between temperature controller and GOT	W-BF-28-0500(0.5m), W-BF-28-1000(1m), W-BF-28-3000(3m)
	[6]	RS-232 cable 2) • Between conversion connector [4] and temperature controller	W-BF-02-0500(0.5m), W-BF-02-1000(1m), W-BF-02-3000(3m)
	[7]	RS-422 cable 1) • Between temperature controller and GOT	(To be prepared by the user.  Section 30.2 Connection Cable)
	[8]	RS-422 cable 2) • Between temperature controller and GOT	W-BF-02-0500(0.5m), W-BF-02-1000(1m), W-BF-02-3000(3m)

*1 The RS-232 cable and RS-422 cable can be prepared by the user. ( Section 30.2 Connection Cable)
[5], [6], [8] are products manufactured by RKC. For details of these products, contact RKC.

30.1.3 Connecting to SRZ



1 System configuration and connection conditions

- Temperature control module (Z-TIO)

Connection conditions			System configuration
Number of GOT	Number of Temperature controllers	Distance	
1	31 (max.)	1200m or less	<p>Number of the Z-TIO : Max 16 Number of the Z-DIO : Max 16 Total unit number of the Z-TIO and Z-DIO : Max 31</p> <p>4 Converter 1) 9 RS-485 cable 3) MAX1200m</p>
1	 31 (max.)	1200m or less	<p>Number of the Z-TIO : Max 16 Number of the Z-DIO : Max 16 Total unit number of the Z-TIO and Z-DIO : Max 31</p> <p>3 10 RS-485 cable 4) MAX1200m</p>

25
CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER

26
CONNECTION TO CHINO CONTROLLER

27
CONNECTION TO FUJI SYS TEMPERATURE CONTROLLER

28
CONNECTION TO YAMATAKE TEMPERATURE CONTROLLER

29
CONNECTION TO YOKOGAWA TEMPERATURE CONTROLLER

30
CONNECTION TO RKC TEMPERATURE CONTROLLER

31
INVERTER CONNECTION

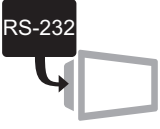



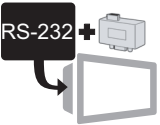



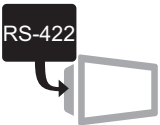



32
SERVO AMPLIFIER CONNECTION

• Communication extension module (Z-COM)

Connection conditions			System configuration
Number of GOT	Number of Temperature controllers	Distance	
1	16 (max.)	Between GOT and converter 15m or less	
		Between converter and Z-COM 1200m or less	
1	16 (max.)	Between GOT and Z-COM 1200m or less	
	10 (max.)		
1	16 (max.)	Between GOT and Z-COM 1200m or less	


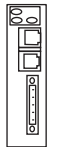
2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 Communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 Communication	GT15-RS2-9P 
	2	RS-422 conversion unit*1 • For RS-422 Communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 Communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 Communication	— (Built into GOT) 
	3	RS-422/485 Communication Unit • For RS-485 Communication	GT15-RS4-TE 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□

(2) Temperature controller

Image	No.	Name	Model name
	4	Converter 1)	CD485/V
	5	Converter 2)	COM-A

4 is a product manufactured by DATA LINK Co.,Ltd. For details of this product, contact DATA LINK Co.,Ltd.

5 is a product manufactured by RKC. For details of this product, contact RKC.

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

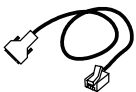
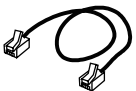
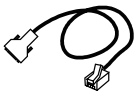






31

INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION

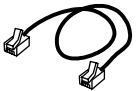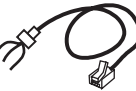(3) Cable

Image	No.	Name	Model name
	[6]	RS-232 cable 3) ^{*1} • Between converter and temperature controller	W-BF-28-0500(0.5m), W-BF-28-1000(1m), W-BF-28-3000(3m)
	[7]	RS-422 cable 3) • Between Z-COM and Z-COM	W-BF-02-0500(0.5m), W-BF-02-1000(1m), W-BF-02-3000(3m)
	[8]	RS-422 cable 4) • Between temperature controller and GOT	(To be prepared by the user.  Section 30.2 Connection Cable)
	[9]	RS-485 cable 3) • Between temperature controller and converter • Between temperature controller and temperature controller	
	[10]	RS-485 cable 4) • Between temperature controller and GOT • Between temperature controller and temperature controller	
	[11]	RS-485 cable 5) ^{*1} • Between Z-COM and Z-COM	
	[12]	RS-485 cable 6) • Between GOT and Z-COM	(To be prepared by the user.  Section 30.2 Connection Cable)
	[13]	Terminating resistor 1)	W-BW-02 (RS-422)
	[14]	Terminating resistor 2)	W-BW-01 (RS-485)

*1 The RS-232 cable and RS-422 cable can be prepared by the user. ( Section 30.2 Connection Cable)

[6], [7], [11], [13], [14] are products manufactured by RKC. For details of these products, contact RKC.

30.2 Connection Cable

The RS-232 cable or RS-422 cable, or RS-485 cable used for connecting the GOT to the temperature controller should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable		
		RS-232 cable (Section 30.2.1)	RS-422 cable (Section 30.2.2)	RS-485 cable (Section 30.2.3)
Temperature controller	H-PCP-J ^{*1}	RS-232 cable 1)	RS-422 cable 1) RS-422 cable 2)	RS-485 cable 1) RS-485 cable 2)
	H-PCP-A ^{*2} , H-PCP-B ^{*2}	RS-232 cable 1)	RS-422 cable 1)	—
	SRZ ^{*3}	RS-232 cable 3)	RS-422 cable 3) RS-422 cable 4)	RS-485 cable 3) RS-485 cable 4) RS-485 cable 5) RS-485 cable 6)

*1 For H-PCP-J, select the following models.

Connector	Communication format	Models
COM.PORT1 COM.PORT2	RS-422	H-PCP-J-□4□-D *□□-□□□
	RS-485	H-PCP-J-□5□-D *□□-□□□
COM.PORT3	RS-232	H-PCP-J-□□1-D *□□-□□□
	RS-422	H-PCP-J-□□4-D *□□-□□□
	RS-485	H-PCP-J-□□5-D *□□-□□□

*2 For H-PCP-A and H-PCP-B, select the following models.

Connector	Communication format	Models
Modular connector1	RS-232	H-PCP-A-□1N-□*□□ Z-1021 H-PCP-B-□1N-□*□□ Z-1021
	RS-422	H-PCP-A-□4N-□*□□ Z-1021 H-PCP-B-□4N-□*□□ Z-1021

*3 For SRZ, select the following models.

Module name	Connector	Communication format	Models
Temperature control module (Z-TIO)	Terminal	RS-485	Z-TIO-A-□-□□□□/□
Digital input/output modules (Z-DIO)			Z-TIO-B-□-□□/□□□
			Z-DIO-A-□-□□/□
Communication extension module (Z-COM)	COM1	RS-422	Z-COM-A-4□/□□□
	COM.PORT1 COM.PORT2	RS-485	Z-COM-A-5□/□□□
	COM2	RS-422	Z-COM-A-□4/□□□
	COM.PORT3 COM.PORT4	RS-485	Z-COM-A-□5/□□□

For details of the models, refer to the following manual.

 User's Manual for the RKC temperature controller

30.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a temperature controller.

1 Connection diagram

(1) RS-232 cable 1)

GOT side		Cable connection and signal direction	RKC product side (Modular connector)			
Signal name	Pin No.		Pin No.	Signal name	Pin assignment ^{*1}	
CD	1		1	NC		
RD(RXD)	2		2	SD		
SD(TXD)	3		3	SG		
ER(DTR)	4		4	RD		
SG	5		5	NC		
DR(DSR)	6		6	SG		
RS(RTS)	7					
CS(CTS)	8					
—	9					

*1 For details of the pin assignment, refer to the following manual.

User's Manual for the RKC temperature controller

(2) RS-232 cable 3)

GOT side		Cable connection and signal direction	RKC product side (Modular connector)			
Signal name	Pin No.		Pin No.	Signal name	Pin assignment ^{*1}	
CD	1		1	NC		
RD(RXD)	2		2	SD		
SD(TXD)	3		3	SG		
ER(DTR)	4		4	RD		
SG	5		5	NC		
DR(DSR)	6		6	CS		
RS(RTS)	7					
CS(CTS)	8					
—	9					

*1 For details of the pin assignment, refer to the following manual.

User's Manual for the RKC temperature controller

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	DDK Ltd
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) RKC temperature controller side connector

Use the connector compatible with the RKC temperature controller side module.

For details, refer to the following manual.

 User's Manual for the RKC temperature controller

3 Precautions when preparing a cable

The length of the RS-232 cable must be 15m or less.

30.2.2 RS-422 cable

The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a temperature controller.



Differences in polarity between GOT and RKC products

The polarity of poles A and B in signal names is reversed between GOT and RKC products.

1 Connect a cable according to the following connection diagrams.

1 Connection diagram

(1) RS-422 cable 1)

GOT side ^{*1}		Cable connection and signal direction	RKC product side (Modular connector)		
Signal name	Pin No.		Pin No.	Signal name	Pin assignment ^{*2}
RDA	2		4	T(B)	
RDB	7		5	T(A)	
SDA	1		2	R(B)	
SDB	6		1	R(A)	
RSA	3		3	SG	
RSB	8		6	SG	
CSA	4				
CSB	9				
SG	5				
FG	—				

*1 Set the terminating resistor of GOT side to "Disable". (☞ **4** Connecting terminating resistors)

*2 For details of the pin assignment, refer to the following manual.

☞ User's Manual for the RKC temperature controller

(2) RS-422 cable 3)

RKC product side (Modular connector)		Cable connection and signal direction	RKC product side (Modular connector)		
Signal name	Pin No.		Pin No.	Signal name	Pin assignment*1
R(A)	1		1	R(A)	 (Level converter(COM-A))
R(B)	2		2	R(B)	
SG	3		3	SG	
T(B)	4		4	T(B)	
T(A)	5		5	T(A)	
SG/N.C.	6		6	SG/N.C.	
 (Communication extension module(Z-COM))					 (Communication extension module(Z-COM))

*1 For details of the pin assignment, refer to the following manual.

User's Manual for the RKC temperature controller

(3) RS-422 cable 4)

GOT side*1		Cable connection and signal direction	RKC product side (Modular connector)		
Signal name	Pin No.		Pin No.	Signal name	Pin assignment*2
RDA	2		4	T(B)	 (Communication extension module(Z-COM))
RDB	7		5	T(A)	
SDA	1		2	R(B)	
SDB	6		1	R(A)	
RSA	3		3	SG	
RSB	8		6	SG	
CSA	4				
CSB	9				
SG	5				
FG	—				

*1 Set the terminating resistor of GOT side to "Disable". **4** Connecting terminating resistors)

*2 For details of the pin assignment, refer to the following manual.

User's Manual for the RKC temperature controller

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-422 cable, use a connector or connector cover applicable to the GOT connector.

GOT	Connector model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

3 Precautions when preparing a cable

The length of the RS-422 cable must be 1200m or less.

4 Connecting terminating resistors

(1) GOT


Set the terminating resistor of RS-422/485 communication unit using the terminating resistor setting switch.

Terminating resistor*1	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF



*1 The default setting is "Enable".

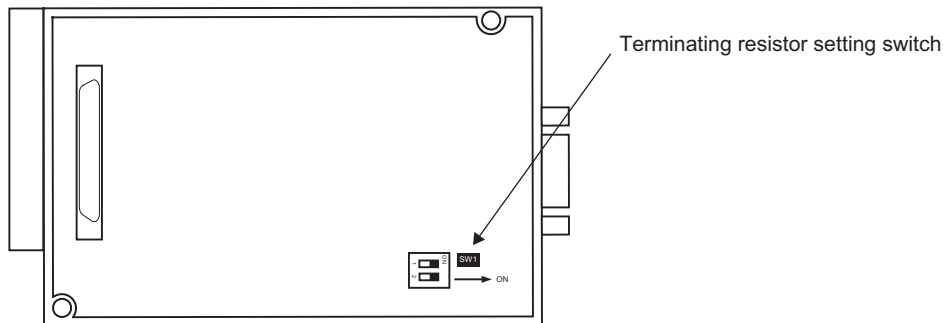(When using GT15-RS4-9S)



Rear view of RS-422/485 communication unit

30.2.3 RS-485 cable

The following shows the connection diagrams and connector specifications of the RS-485 cable used for connecting the GOT to a temperature controller.

1 Connection diagram

(1) RS-485 cable 1)


GOT side ^{*1} (Terminal block)		Cable connection and signal direction	RKC product side (Modular connector)		
Signal name	Pin No.		Pin No.	Signal name	Pin assignment ^{*2}
SDA1	1		2	T/R(B)	
SDB1	2		1	T/R(A)	
RDA1	3		3	SG	
RDB1	4		4	NC	
SDA2	5		5	NC	
SDB2	6		6	SG	
RDA2	7				
RDB2	8				
SG	9				
FG	10				

*1 Set the terminating resistor of GOT side to "Disable". (☞ **4** Connecting terminating resistors)

*2 For details of the pin assignment, refer to the following manual.

☞ User's Manual for the RKC temperature controller

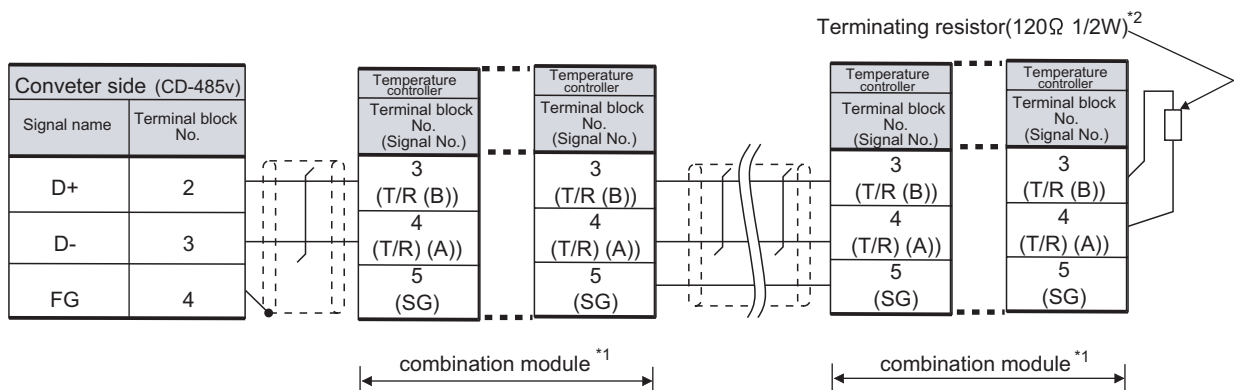
(2) RS-485 cable 3)



*1 When combining the module, because the communication line is connected between the modules with each other, wire only the communication terminal on the both end of the combination module.


*2 Provide the terminating resistor to the terminating temperature controller. When combining the module, provide the terminating resistor to the end of the combination module (the one that is far from the converter).

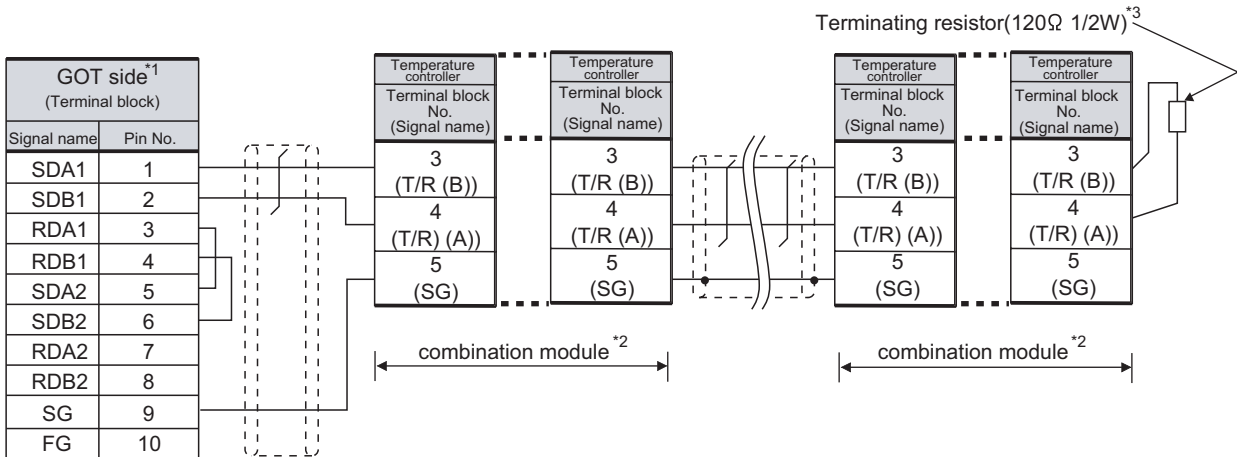(3) RS-485 cable 4)



- *1 Set the terminating resistor of GOT side to "Disable". (4 Connecting terminating resistors)
- *2 When combining the module, because the communication line is connected between the modules with each other, wire only the communication terminal on the both end of the combination module.
- *3 Provide the terminating resistor to the terminating temperature controller. When combining the module, provide the terminating resistor to the end of the combination module (the one that is far from the converter).

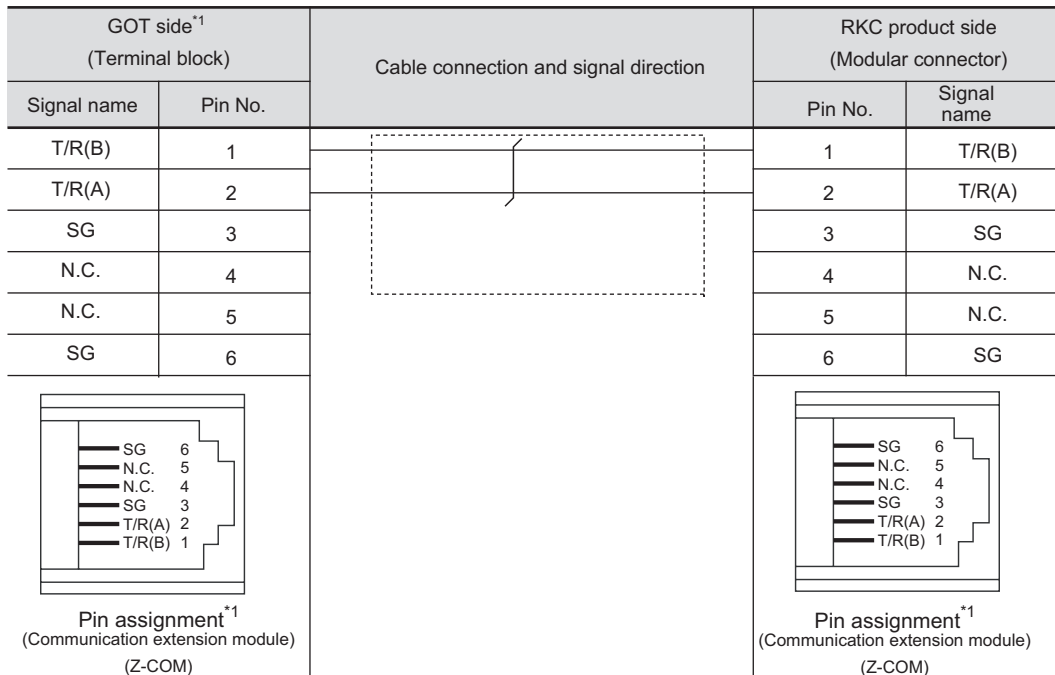(4) RS-485 cable 5)



*1 For details of the pin assignment, refer to the following manual.

User's Manual for the RKC temperature controller

(5) RS-485 cable 6)

GOT side ^{*1} (Terminal block)		Cable connection and signal direction	RKC product side (Module connector)	
Signal name	Pin No.		Pin No.	Signal name
SDA1	1		1	T/R(B)
SDB1	2		2	T/R(A)
RDA1	3		3	SG
RDB1	4		4	N.C.
SDA2	5		5	N.C.
SDB2	6		6	SG
RDA2	7			
RDB2	8			
SG	9			
FG	10			

Pin assignment^{*2}
(Communication extension module)
(Z-COM)

*1 Set the terminating resistor of GOT side to "Disable". (4 Connecting terminating resistors)

*2 For details of the pin assignment, refer to the following manual.

User's Manual for the RKC temperature controller

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422/485 communication unit connector on the GOT.

For the GOT side of the RS-485 cable, use the terminal block packed together with the RS-422/485 communication unit.

GOT	Connector model	Connector type	Manufacturer
GT15-RS4-TE	SL-SMT3.5/10/90F BOX	—	Weidmuller interconnections inc.

(2) RKC temperature controller side connector

Use the connector compatible with the RKC temperature controller side module.

For details, refer to the following manual.

 User's Manual for the RKC temperature controller

3 Precautions when preparing a cable

The length of the RS-485 cable must be 1200m or less.

4 Connecting terminating resistors


(1) GOT

Set the terminating resistor of RS-422/485 communication unit using the terminating resistor setting switch.

Terminating resistor ^{*1}	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF



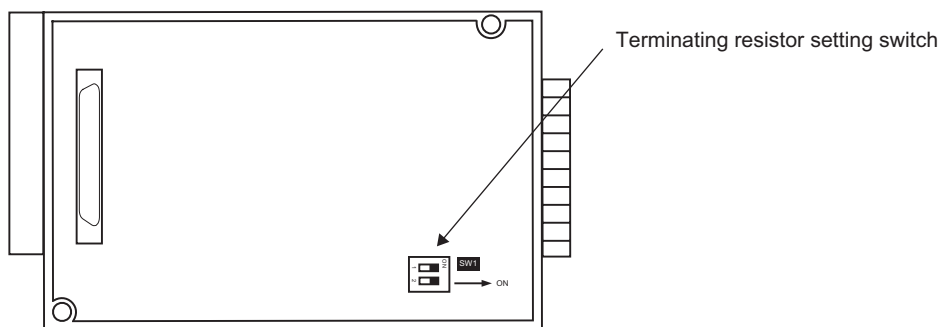
*1 The default setting is "Enable".



Rear view of RS-422/485 communication unit

30.3 Preparatory Procedures for Monitoring

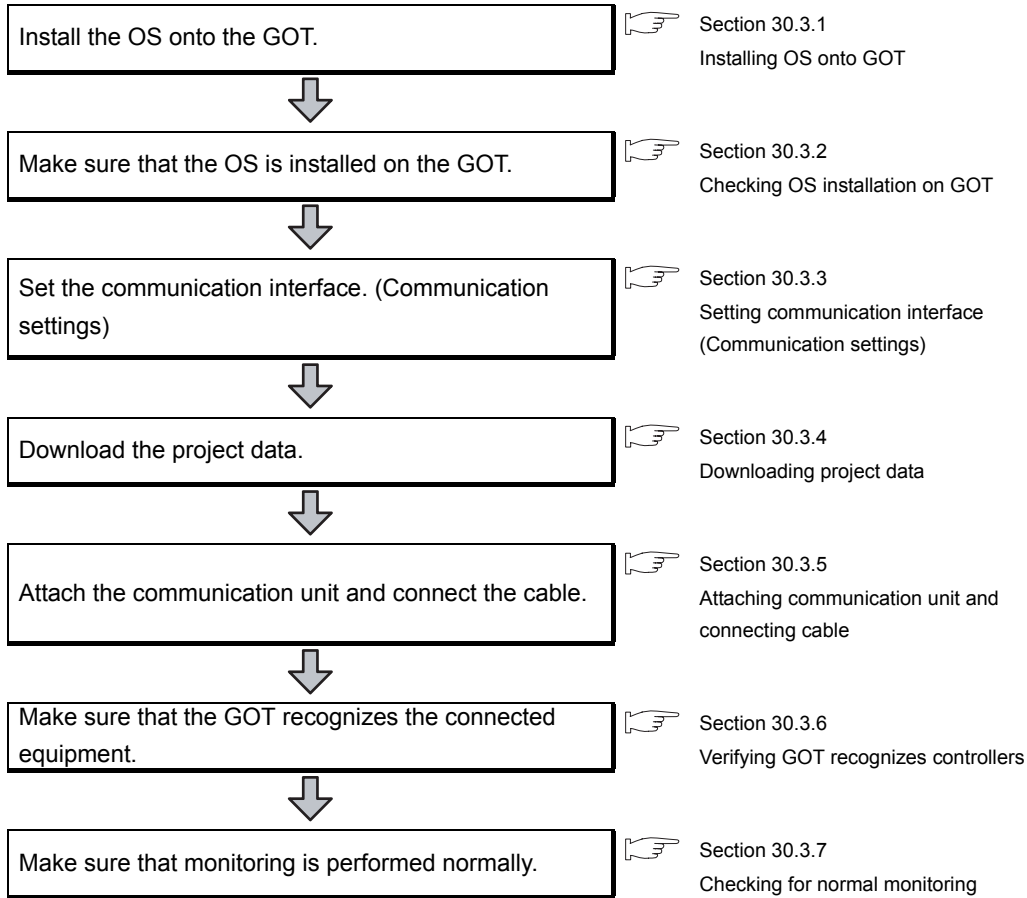The following shows the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the temperature controller side setting


This section explains the temperature controller side setting.


When confirming the temperature controller side setting, refer to the following.

Section 29.4 Temperature Controller Side Setting

30.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

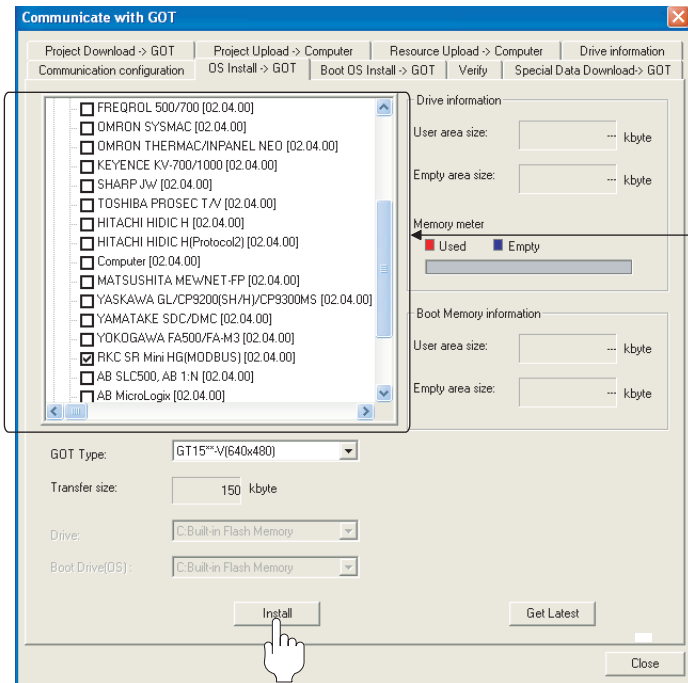 GT Designer2 Version Basic Operation/Data Transfer Manual




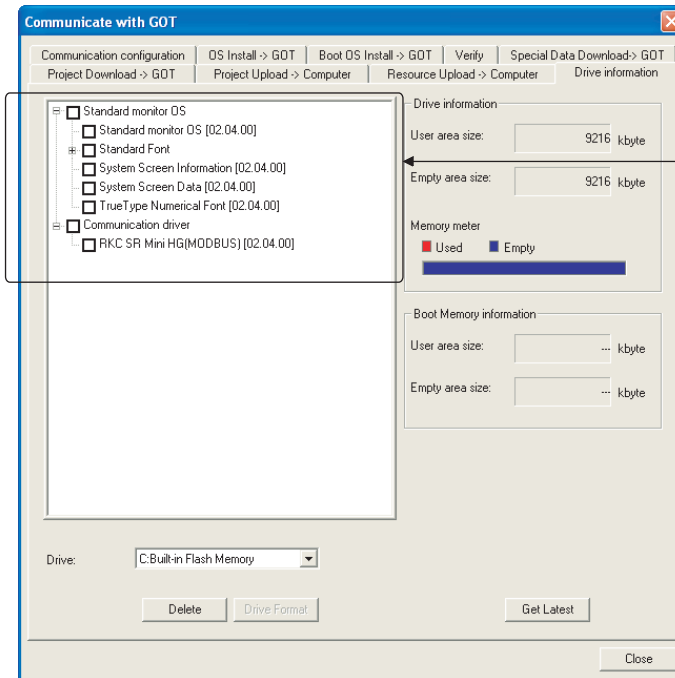
Check the following under the Communication driver.
• RKC SR Mini HG(MODBUS)

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

30.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




The OS has been installed successfully if the following can be confirmed:

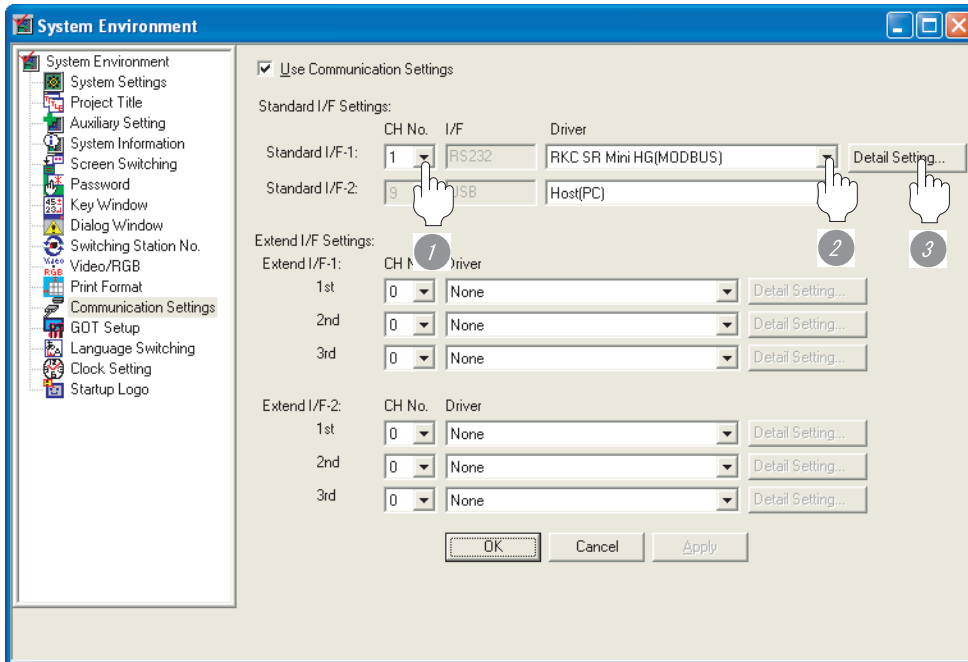
- 1) Standard monitor OS
- 2) Communication driver: RKC SR MHG(MODBUS)


30.3.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set "1" to the channel No. used.
- 2 Set the driver to "RKC SR Mini HG(MODBUS)".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	9600bps,19200bps,38400bps, 57600bps,115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: None>	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. <Default: 0 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 0ms>	0 to 300 ms

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

31

INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION

- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.


 GT □ User's Manual

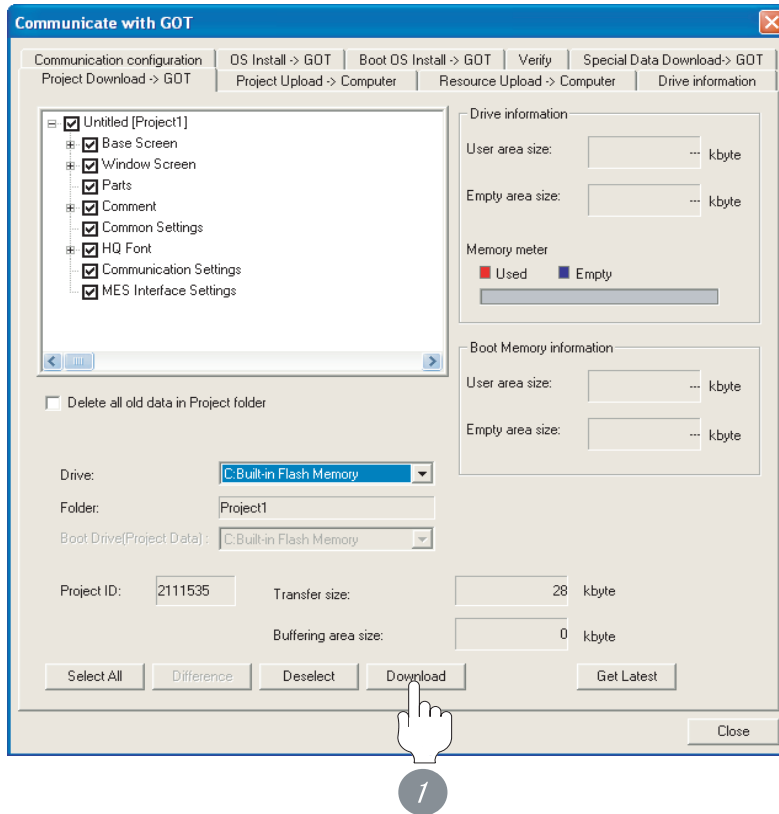
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

30.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


30.3.5 Attaching communication unit and connecting cable

Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

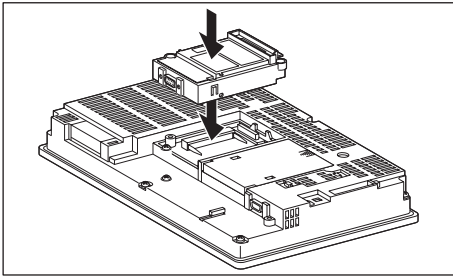1 Attaching the communication unit




- 1** Attach the serial communication unit to the extension unit connector on the GOT.

Point

Serial communication unit

For details on the serial communication unit, refer to the following manual:

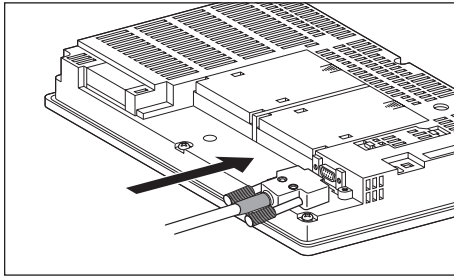
 [GT15 Serial Communication Unit User's Manual](#)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

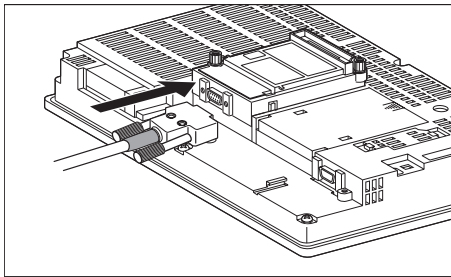- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

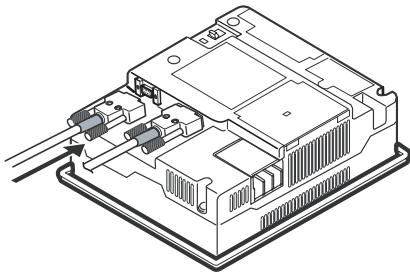(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

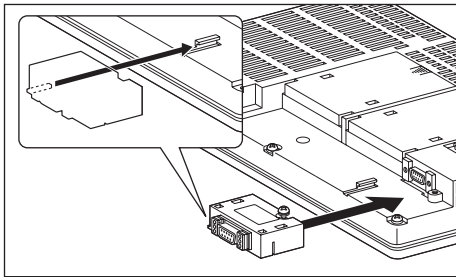- connection to the RS-232 interface




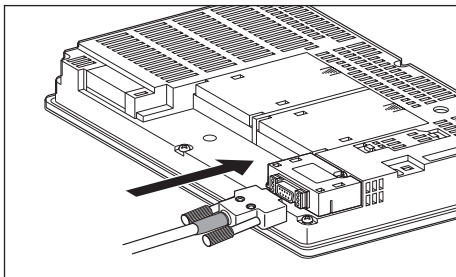- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

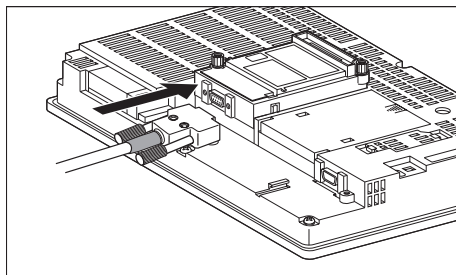- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

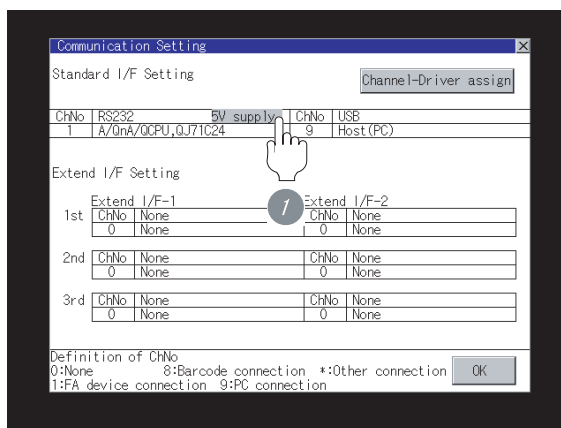
☞ GT15 RS-422 Conversion Unit User's Manual

When using the RS-422 conversion unit


On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the utility, refer to the following manual:

GT □ User's Manual


- 1 Touch [5V supply].



- 2 Set [5V power supply] to "YES".

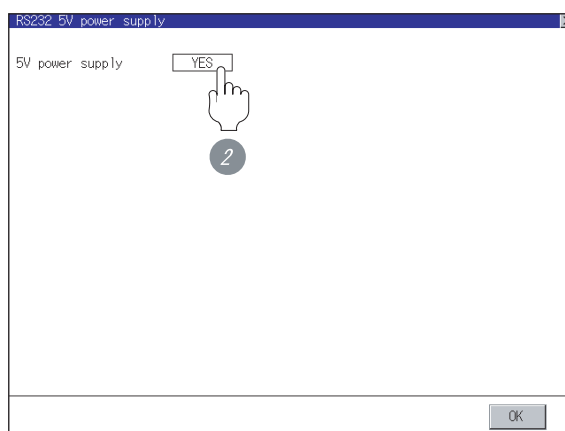


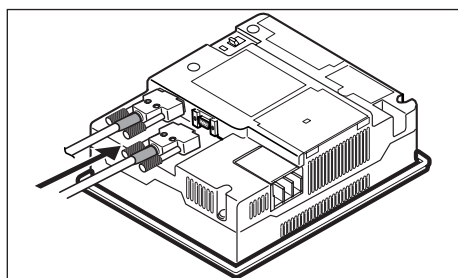(b) In the case of the GT11




- 1 Connect the RS-422 cable to the RS-422 interface on the GOT.

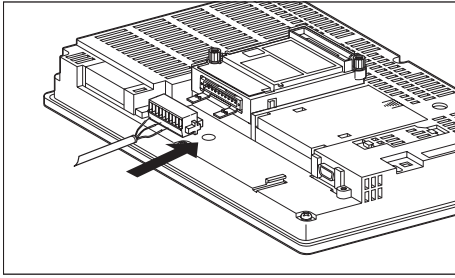(3) How to connect the RS-485 cable



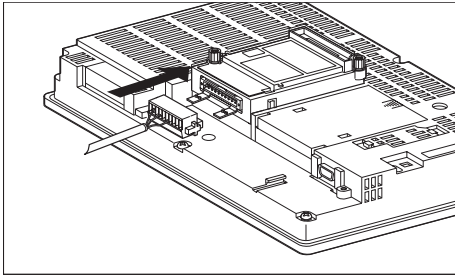- 1 Connect the RS-485 cable to the terminal block packed together with the RS-422/485 communication unit.



- 2 Connect the terminal block to the RS-422/485 communication unit on the GOT.

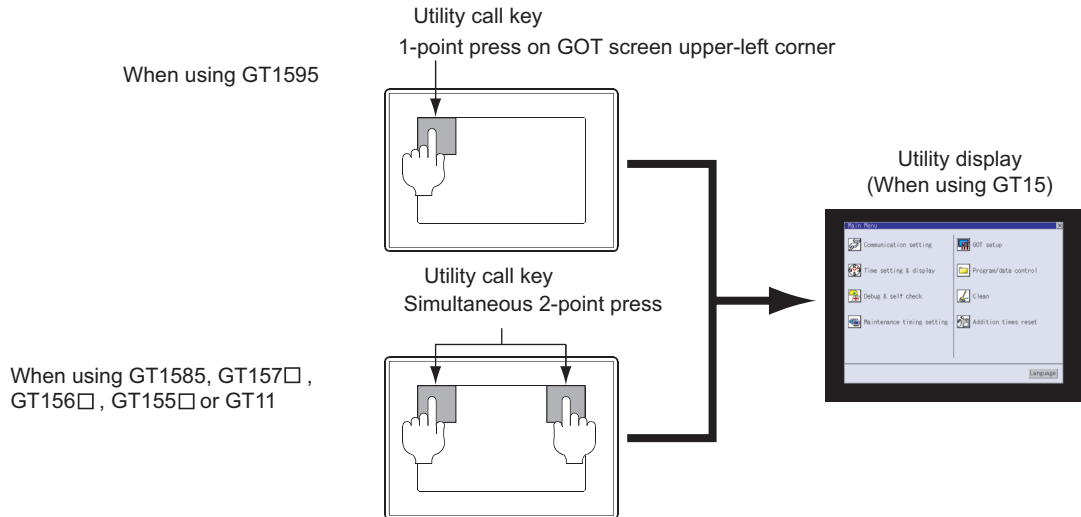
30.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point

When setting the utility call key to 1-point


When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.

For the setting of the utility call key, refer to the following.

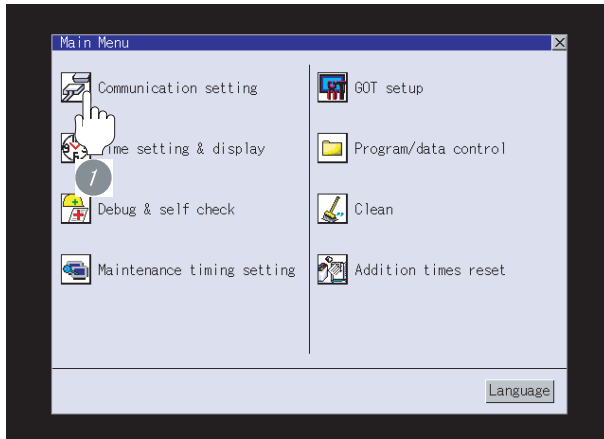 GT□ User's Manual



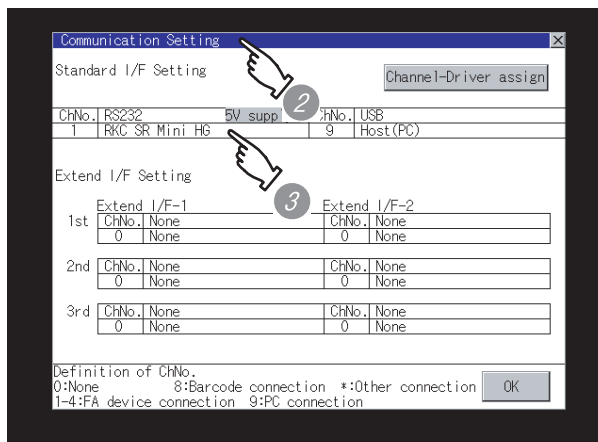- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver:
RKC SR Mini HG(MODBUS)
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

➡ Section 30.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

➡ GT □ User's Manual

30.3.7 Checking for normal monitoring

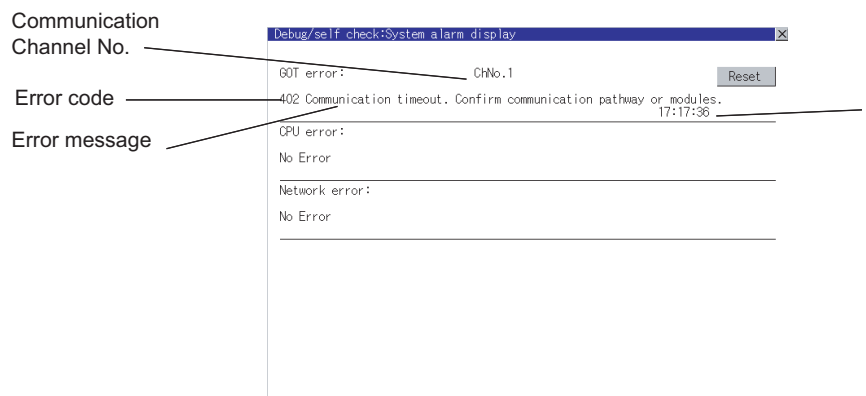
1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT □ User's Manual

(When using GT15)



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

2 Perform an I/O check

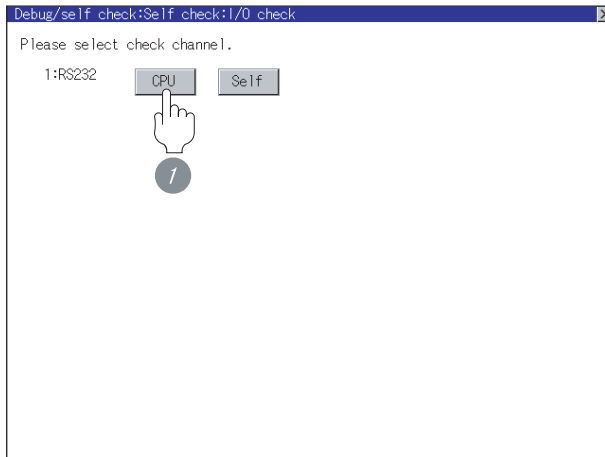
Whether the temperature controller can communicate with the GOT or not can be checked by the I/O check function.

If this check ends successfully, it means correct communication interface settings and proper cable connection.


Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].

For details on the I/O check, refer to the following manual:

 GT User's Manual



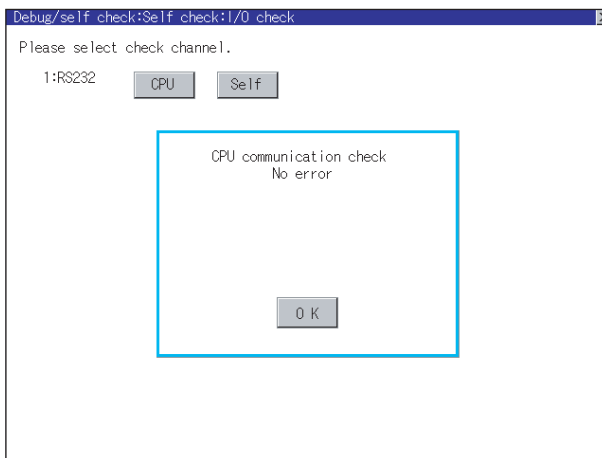- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected controller.




- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the Temperature Controller side setting

When connecting the GOT, setting is required for the temperature controller side.

Confirm if the temperature controller side setting is correct.

 Section 30.4 Temperature Controller Side Setting

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

30.4 Temperature Controller Side Setting



RKC temperature controller

For details of RKC temperature controller, refer to the following manual.

User's Manual for the RKC temperature controller

	Model name	Reference
Temperature controller	H-PCP-J	Section 30.4.1
	H-PCP-A, H-PCP-B	Section 30.4.2

30.4.1 Connecting to H-PCP-J

1 Communication settings

Make the communication settings of the temperature controller.


Setting item	Setting range
Transmission speed*1	9600bps, 19200bps, 38400bps
Communication mode	MODBUS
Data length	8bits
Parity bit	None
Stop bit	1bit
Unit address*2	0 to F

*1 Make the same setting as that of the GOT side.

*2 Select the unit address without overlapping with that of other units.

2 Settings by DIP switch

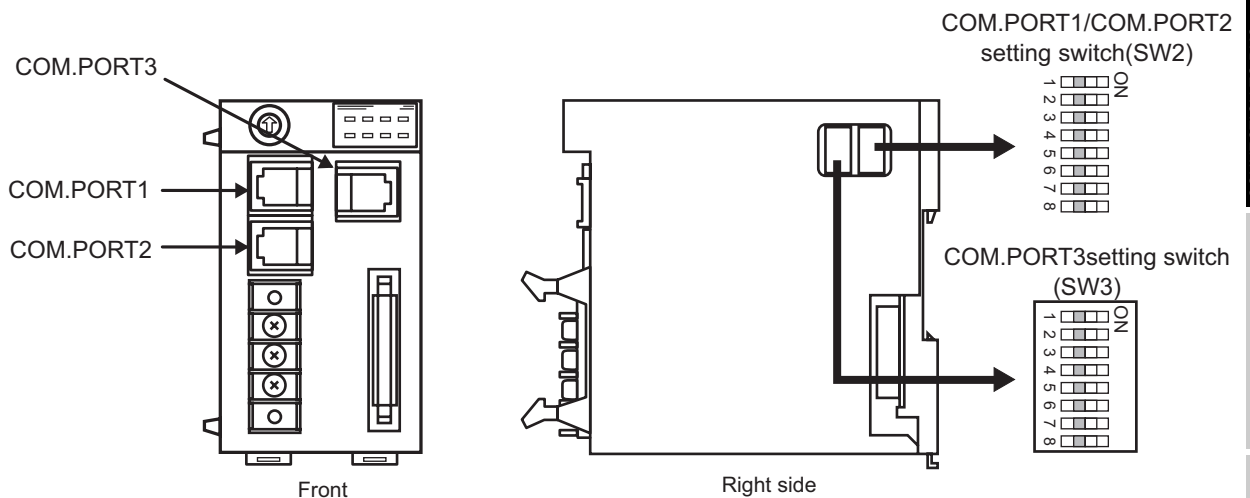Make the settings of transmission speed, communication mode, data length, parity bit and stop bit.



(1) Transmission speed settings

(a) COM.PORT1/COM.PORT2

SW2		Communication speed
3	4	
OFF	OFF	9600bps
ON	OFF	19200bps
OFF	ON	38400bps

(b) COM.PORT3

SW3		Communication speed
3	4	
OFF	OFF	9600bps
ON	OFF	19200bps
OFF	ON	38400bps

(2) Communication mode settings

(a) COM.PORT1/COM.PORT2

SW2				Communication protocol
5	6	7	8	
ON	OFF	OFF	OFF	MODBUS protocol

(b) COM.PORT3

SW3	Communication protocol
5	
ON	MODBUS protocol

(3) Settings of data length, parity bit, and stop bit

(a) COM.PORT1/COM.PORT2


SW2		Data bit configuration
1	2	
OFF	OFF	Data 8-bit, Non parity, Stop 1 bit

(b) COM.PORT3

SW3		Data bit configuration
1	2	
OFF	OFF	Data 8-bit, Non parity, Stop 1 bit

3 Unit address settings

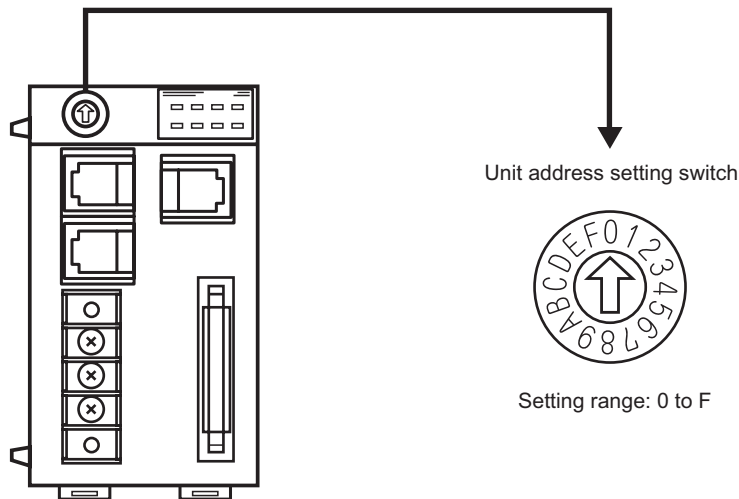Set the unit address using the unit address setting switch.



30.4.2 Connecting to H-PCP-A, H-PCP-B

1 Communication settings

Make the communication settings of the temperature controller.


Setting item	Set value
Transmission speed* ¹	9600bps, 19200bps
Data length	8bits
Parity bit	None
Unit address* ²	0 to F

*1 Make the same setting as that of the GOT side.

*2 Select the unit address without overlapping with that of other units.

2 Settings by DIP switch

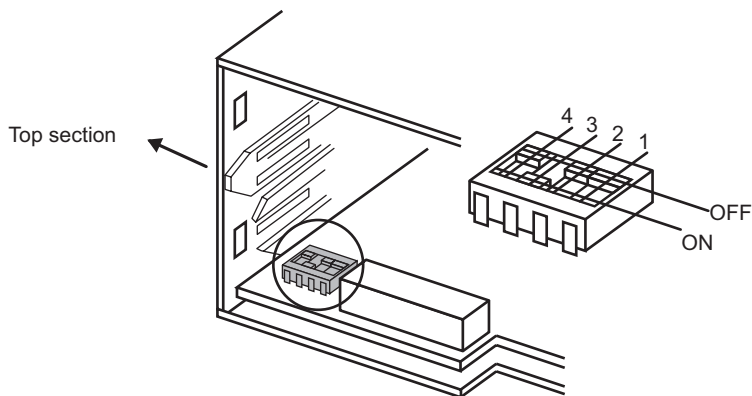Make the settings of transmission speed, data length, parity bit, and stop bit.



Rear view of module mainframe with mother block removed

(1) Transmission speed


3	4	Communication speed
OFF	ON	9600bps
ON	ON	19200bps

(2) Settings of data length and parity bit

1	2	Data bit configuration
OFF	OFF	Data 8-bit, Non parity

3 Unit address settings

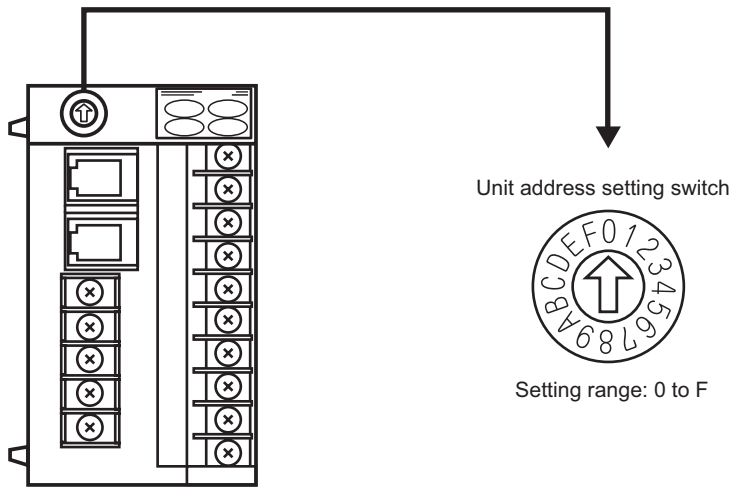Set the unit address using the unit address setting switch.



30.4.3 Connecting to Z-TIO, Z-DIO

1 Communication settings


Setting item	Set value
Communication speed*1	9600bps, 19200bps, 38400bps
Communication protocol	MODBUS
Data bit configuration	Data length : 8bit, Parity : None
	Data length : 8bit, Parity : Even
	Data length : 8bit, Parity : Odd
	Stop bit : 1bit (fixed)
Module address*2	0 to F

*1 Make the same setting as that of the GOT side.

*2 Select the module address without overlapping with that of other units.

2 Settings by DIP switch

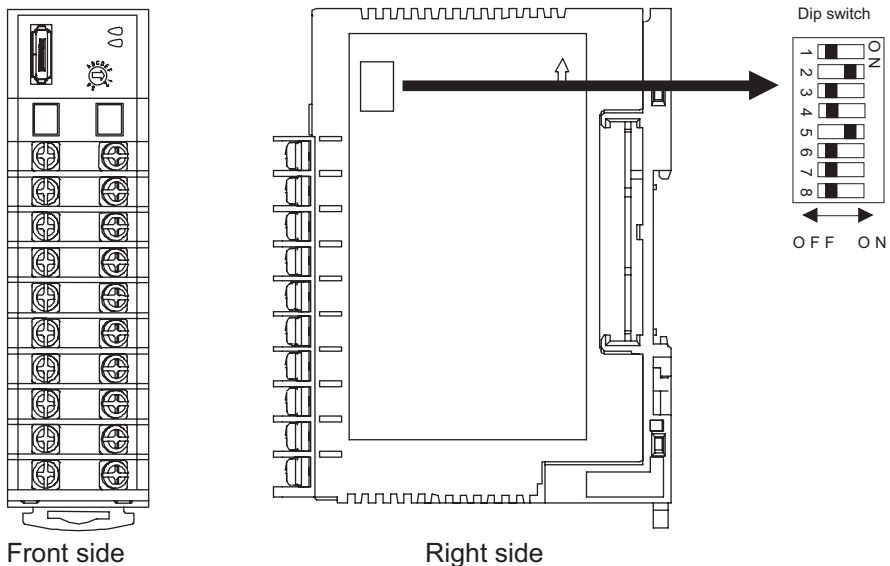Make the settings of transmission speed, data bit configuration, communication protocol




Setting item	Set value	Switch No					
		1	2	3	4	5	6
Communication speed	9600bps	ON	OFF				
	19200bps	OFF	ON				
	38400bps	ON	ON				
Data bit configuration	Data length : 8bit, Parity : None			OFF	OFF	ON	
	Data length : 8bit, Parity : Even			OFF	ON	ON	
	Data length : 8bit, Parity : Odd			ON	ON	ON	
Communication protocol	MODBUS						ON

3 Unit address settings

Set the unit address using the unit address setting switch.

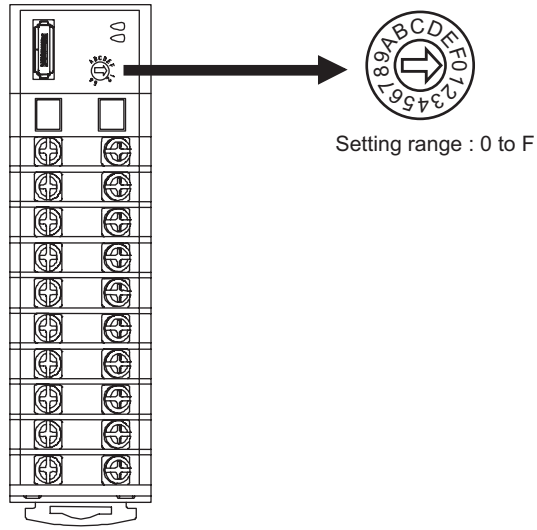Module address setting switch



30.4.4 Connecting to Z-COM

1 Communication settings


Setting item	Set value
Communication speed*1	9600bps, 19200bps, 38400bps
Communication protocol	Host (MODBUS)
Data bit configuration	Data length : 8bit, Parity : None, Stop bit : 1bit (fixed)
Unit address*2	0 to F
Dip switch settings valid / invalid	valid

*1 Make the same setting as that of the GOT side.

*2 Select the module address without overlapping with that of other units.

2 Settings by DIP switch

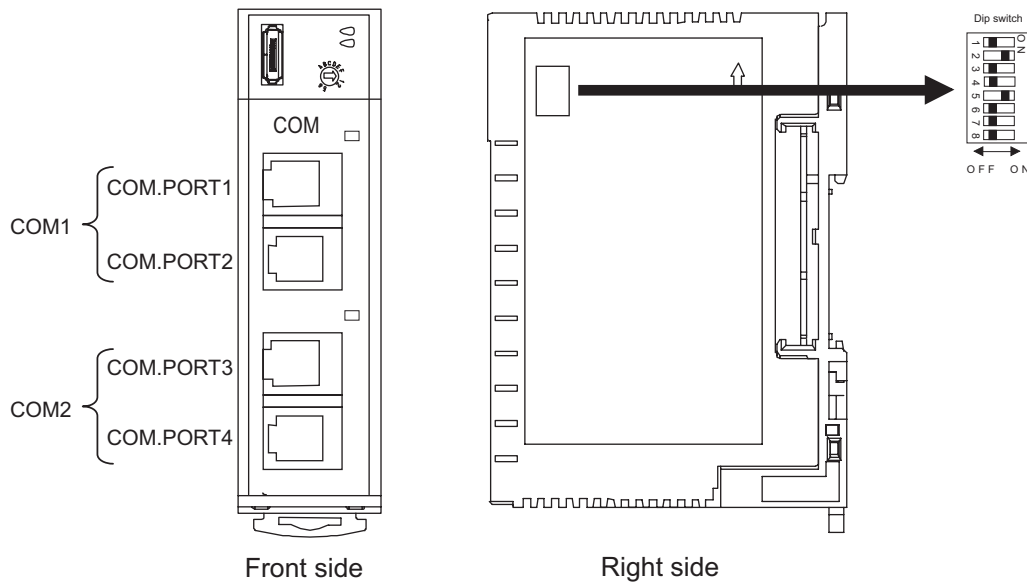Make the settings of transmission speed, data bit configuration, communication protocol.




Setting item	Set value	Switch No							
		1	2	3	4	5	6	7	8
Communication speed (COM1)	9600bps	ON	OFF						
	19200bps	OFF	ON						
	38400bps	ON	ON						
Communication protocol (COM1)	Host (MODBUS)			ON					
Communication speed (COM2)	9600bps				OFF				
	19200bps				ON				
Communication protocol (COM2)	Host (MODBUS)					ON	OFF	OFF	
Dip switch settings valid / invalid	valid								OFF

3 Unit address settings

Set the unit address using the unit address setting switch.

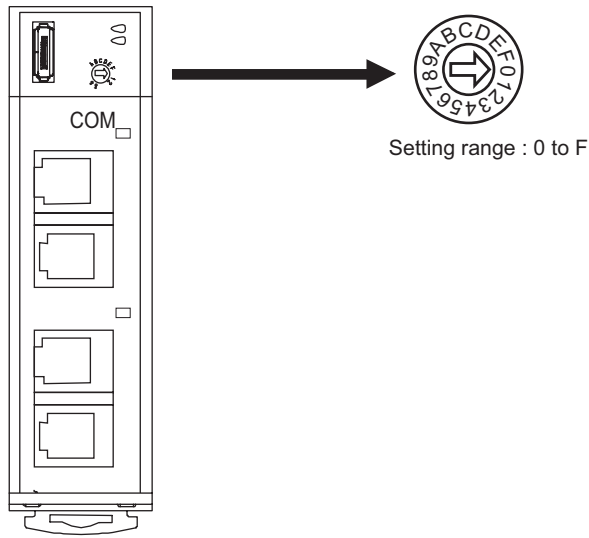
Unit address setting switch



30.4.5 Station No. settings

Set each station number while making sure that one station number is used only once.

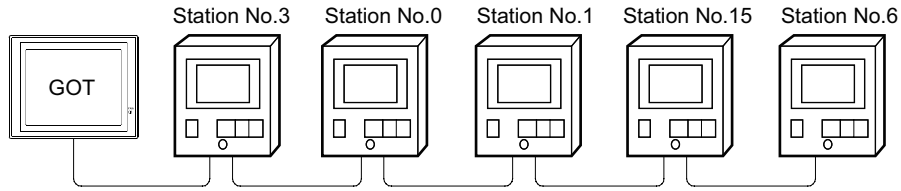The station number can be set without regard to the cable connection order. No problem is expected even if station numbers are not consecutive.



Examples of station number setting

(1) Direct specification

The station number setting range of the temperature controller side differs from that of the GOT side. Specify the station No. of the temperature controller to be changed when setting devices referring the following table.

- H-PCP-J, H-PCP-A, H-PCP-B, Z-TIO, Z-COM

	Specification range		
Module/Unit address setting of temperature controller side	0	1 to E	F
Station number setting of GOT side when setting devices	1	2 to 15	16

- Z-DIO

	Specification range		
Module address setting of temperature controller side	0	1 to E	F
Station number setting of GOT side when setting devices	17	18 to 31	32

(2) Indirect specification

When setting the device, indirectly specify the station number of the inverter of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).

When specifying the station No. from 100 to 155 on GT Designer2, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the temperature controller.

Specification station NO.	Compatible device	Setting range
100	GD10	1 to 99 For the setting other than the above, error (dedicated device is out of range) will occur.
101	GD11	
102	GD12	
103	GD13	
104	GD14	
105	GD15	
106	GD16	
107	GD17	
108	GD18	
109	GD19	
110	GD20	
111	GD21	
112	GD22	
113	GD23	
114	GD24	
115	GD25	

30.5 Precautions

1 Station number setting of the temperature controller system

Make sure to establish temperature controller system with No.01 station.

2 GOT clock function


Since the temperature controller does not have a clock function, the settings of “time adjusting” or “time broad cast” by GOT clock function will be disabled.

3 Cutting the portion of multipul connection of the controller

By setting GOT internal device, GOT can cut the portion of multipul connection of the controller.

For example, faulty station that has communication timeout can be cut from the system.

For details of the setting contents of GOT internal device, refer to the following manual.

 GT Designer2 Version□ Screen Design Manual
Section 2.9.1 GOT internal device

30.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
RKC connection	Supporting the RKC temperature controller connection	2.18U	Communication driver RKC SR HG(MODBUS) [02.01.**]
RKC connection	Supporting the CHINO controller connection Cut the portion of multiple connection of the controller. Automatically avoid the monitoring operation of the faulty station.	2.58L	Communication driver RKC SR HG(MODBUS) [03.03.**]



OTHER CONNECTIONS

Chapter 31 INVERTER CONNECTION

Chapter 32 SERVO AMPLIFIER CONNECTION

Chapter 33 CNC CONNECTION

Chapter 34 CONNECTION TO SOUND OUTPUT UNIT

Chapter 35 CONNECTION TO EXTERNAL I/O DEVICE

(Continued to next page)

Chapter 36 BAR CODE READER CONNECTION

Chapter 37 VIDEO/RGB CONNECTION

Chapter 38 PRINTER CONNECTION

INVERTER CONNECTION



31.1 System Configuration page 31-2

This section describes the equipment and cables needed when connecting a GOT to a FREQOL SERIES INVERTER. Select a system suitable for your application.

31.2 Connection Cable page 31-9

This section describes the specifications of the cables needed when connecting a GOT to a FREQOL SERIES INVERTER. Check the specifications of the connection cables.

31.3 Preparatory Procedures for Monitoring page 31-15

This section provides the procedures to be followed before performing monitoring in connection to a FREQOL SERIES INVERTER. The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

31.4 FREQOL Series Inverter Side Settings page 31-28

The FREQOL SERIES INVERTER side settings for GOT connection are explained. When checking the PLC side settings, refer to this section.

31.5 Precautions page 31-30

This section describes the precautions about FREQOL SERIES INVERTER connection. Refer to this section without fail before starting servo FREQOL SERIES INVERTER.

31.6 List of Functions Added by Version Upgrade page 31-31

This section describes the functions added by version upgrade of GT Designer2 or OS.

31.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.

31.1.1 Connecting to FREQROL A500/F500



1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of inverters	Distance	
1	1	500m or less	
1	1	500m or less	







*1 Connect to the PU port of the inverter.

Connection conditions			System configuration
Number of GOTs	Number of inverters	Distance	
1	10 (max.)	500m or less	
1	10 (max.)	500m or less	

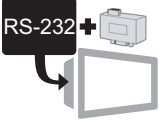*1 Connect to the PU port of the inverter.



2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-422 conversion unit ^{*1} • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 




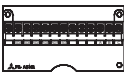


*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) Inverter


Image	No.	Name	Model name
	2	Computer link option	FR-A5NR
	3	Distributor	BMJ-8 (Recommended)

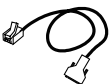3 is a product manufactured by HACHIKO ELECTRIC CO., LTD.
For details of this product, contact HACHIKO ELECTRIC CO., LTD.

(3) Cable

Image	No.	Name	Model name
	4	RS-422 cable 1) • Between inverter and GOT • Between distributor and GOT	(To be prepared by the user.  Section 31.2 Connection Cable)
	5	RS-422 cable 2) • Between FR-A5NR and GOT	
	6	RS-422 cable 3) • Between distributor and inverter • Between distributors	
	7	RS-422 cable 4) • Between FR-A5NR and FR-A5NR	
	8	RS-422 cable 7) • Mounting a terminating resistor	

31.1.2 Connecting to FREQROL E500/S500



1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Number of inverters	Distance	
1	1	500m or less	<p>3 RS-422 cable 1)</p> <p>MAX500m</p>
1	10 (max.)	500m or less	<p>10 (max.)</p> <p>5 RS-422 cable 1)</p> <p>4 RS-422 cable 3)</p> <p>2 Distributor 2 Distributor 2 Distributor 3 RS-422 cable 1)</p> <p>MAX500m</p>

*1 Connect to the PU port of the inverter.

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

31

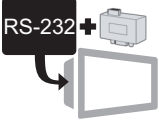





INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 

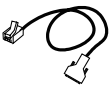

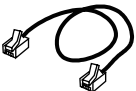

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT15□.

(2) Inverter


Image	No.	Name	Model name
	2	Distributor	BMJ-8 (Recommended)

2 is a product manufactured by HACHIKO ELECTRIC CO., LTD.
For details of this product, contact HACHIKO ELECTRIC CO., LTD.

(3) Cable

Image	No.	Name	Model name
	3	RS-422 cable 1) • Between inverter and GOT • Between distributor and GOT	(To be prepared by the user.  Section 31.2 Connection Cable)
	4	RS-422 cable 3) • Between distributor and inverter • Between distributors	
	5	RS-422 cable 7) • Mounting a terminating resistor	

31.1.3 Connecting to FREQROL A700/F700



1 System configuration and connection conditions

Connection conditions			System configuration
Number of GOT	Number of inverters	Distance	
1	1	500m or less	<p>*1 RS-422 cable 3</p> <p>MAX500m</p>
1	1	500m or less	<p>*2 RS-485 cable 4</p> <p>MAX500m</p>
1	10 (max.)	500m or less	<p>10 (max.)</p> <p>*1</p> <p>*1</p> <p>*1</p> <p>6 RS-422 cable 7</p> <p>5 RS-422 cable 3</p> <p>2 Distributor 2 Distributor 2 Distributor</p> <p>3 RS-422 cable 1</p> <p>MAX500m</p>
1	10 (max.)	500m or less	<p>10 (max.)</p> <p>*2</p> <p>*2</p> <p>*2</p> <p>7 RS-422 cable 6</p> <p>MAX500m</p>

*1 Connect to the PU port of the inverter.

*2 Connect to the RS485 terminal block (built into inverter).

25
CONNECTION TO SHINKO TECHNOS INDICATING CONTROLLER

26
CONNECTION TO CHINO CONTROLLER

27
CONNECTION TO FUJI SYS TEMPERATURE CONTROLLER

28
CONNECTION TO YAMATAKE TEMPERATURE CONTROLLER

29
CONNECTION TO YOKOGAWA TEMPERATURE CONTROLLER

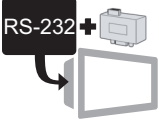





30
CONNECTION TO RKC TEMPERATURE CONTROLLER

31
INVERTER CONNECTION

32
SERVO AMPLIFIER CONNECTION


2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT15□.




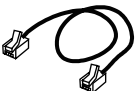


(2) Inverter

Image	No.	Name	Model name
	2	Distributor	BMJ-8 (Recommended)

2 is a product manufactured by HACHIKO ELECTRIC CO., LTD.

For details of this product, contact HACHIKO ELECTRIC CO., LTD

(3) Cable

Image	No.	Name	Model name
	3	RS-422 cable 1) • Between inverter and GOT • Between distributor and GOT	(To be prepared by the user.  Section 31.2 Connection Cable)
	4	RS-422 cable 5) • Between inverter and GOT	
	5	RS-422 cable 3) • Between distributor and inverter • Between distributors	
	6	RS-422 cable 7) • Mounting a terminating resistor	
	7	RS-422 cable 6) • Between inverter and GOT • Between inverters	


31.2 Connection Cable

The RS-422 cable used for connecting the GOT to the inverter should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable
		RS-422 cable (Section 31.2)
FREQROL	A500/F500	RS-422 cable 1), RS-422 cable 2), RS-422 cable 4)
	E500/ S500	RS-422 cable 1)
	A700/F700	RS-422 cable 1), RS-422 cable 5), RS-422 cable 6)
Distributor	BMJ-8	RS-422 cable 1), RS-422 cable 3), RS-422 cable 7)
Computer link option	FR-A5NR	RS-422 cable 4), RS-422 cable 5)

1 Connection diagram

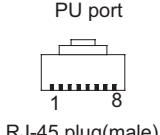(1) RS-422 cable 1)

GOT side		Cable connection and signal direction	Inverter side (Modular connector)		
Signal name	Pin No.		Pin No.	Signal name	Pin layout ¹
RDA	2	←	5	SDA	
RDB	7	←	4	SDB	
SDA	1	→	3	RDA	
SDB	6	→	6	RDB	
RSA	3	↔	2	P5S	
RSB	8	↔	8	P5S	
CSA	4	↔	—	—	
CSB	9	↔	—	—	
SG	5	→	1	SG	
FG	—	—	—	—	

*1 The connector figure shows the engagement face.

(2) RS-422 cable 2)


GOT side		Cable connection and signal direction	FR-A5NR side (Terminal block)
Signal name	Pin No.		
RDA	2	←	SDA
RDB	7	←	SDB
SDA	1	→	RDA
SDB	6	→	RDB
RSA	3		
RSB	8		
CSA	4		
CSB	9	←	
SG	5		SG
FG	—		

(3) RS-422 cable 3)

Distributor side (Modular connector)			Cable connection and signal direction	inverter side or distributor side (Modular connector)		
Pin layout*1	Signal name	Pin No.		Pin No.	Signal name	Pin layout*1
 PU port RJ-45 plug(male)	SDA	5		5	SDA	 PU port RJ-45 plug(male)
	SDB	4		4	SDB	
	RDA	3		3	RDA	
	RDB	6		6	RDB	
	P5S	2		2	P5S	
	P5S	8		8	P5S	
	SG	1		1	SG	

*1 The connector figure shows the engagement face.

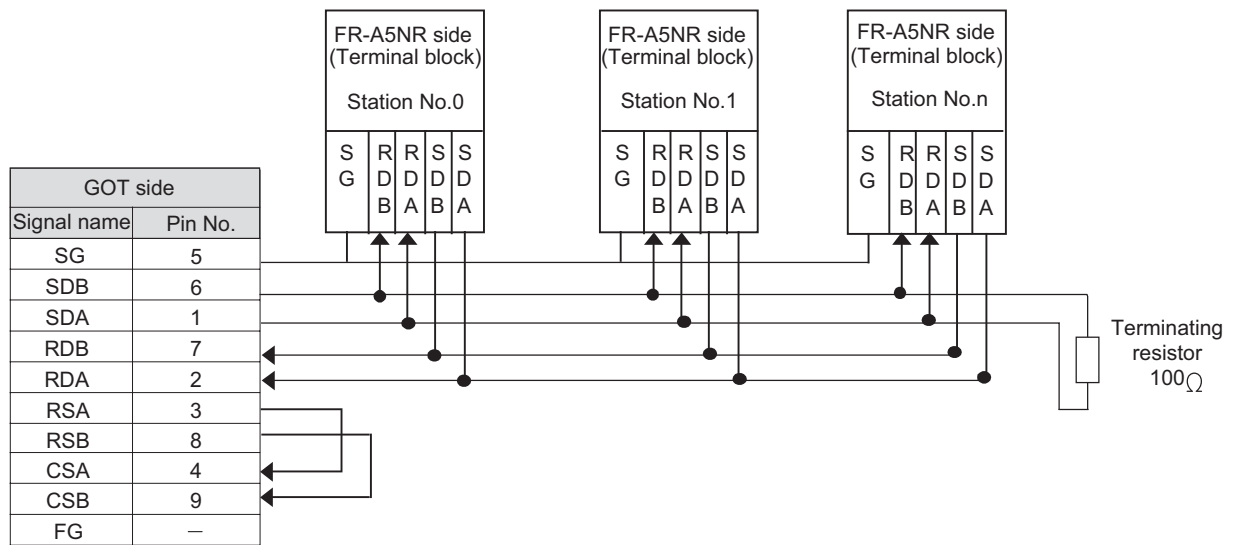(4) RS-422 cable 4)



- Connect a terminating resistor (100 ohm) to RDB and RDR which are assigned in the FR-A5NR of the inverter located farthest from the GOT.
The terminating resistor is packed together with the FR-A5NR.
- Set the terminating resistor of GOT side, which will be a terminal, to “Enable”.


4 Connecting terminating resistors

(5) RS-422 cable 5)


GOT side		Cable connection and signal direction	Inverter side RS485 terminal block(built into the inverter)	
Signal name	Pin No.		Terminal name	Terminal block name
RDA	2	←	SDA1(TXD1+)	TXD
RDB	7	←	SDB1(TXD1-)	
SDA	1	→	RDA1(RXD1+)	RXD
SDB	6	→	RDB1(RXD1-)	
RSA	3		—	—
RSB	8		—	—
CSA	4		—	—
CSB	9		—	—
SG	5		SG(GND)	VCC
FG	—			

- RDA2, RDB2, SDA2 and SDB2 terminals of the RS485 terminal block (built into the inverter) cannot be used.

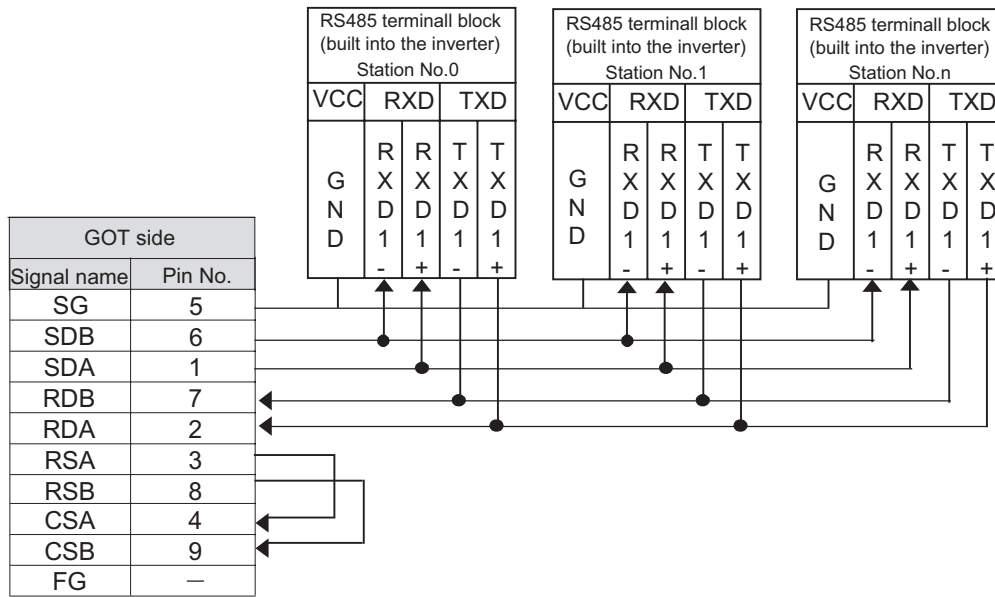
(6) RS-422 cable 6)



- Set the terminator switch built in the farthest inverter from the GOT to ON ($100\ \Omega$).
- Set the terminating resistor of GOT side, which will be a terminal, to “Enable”.

 **4** Connecting terminating resistors

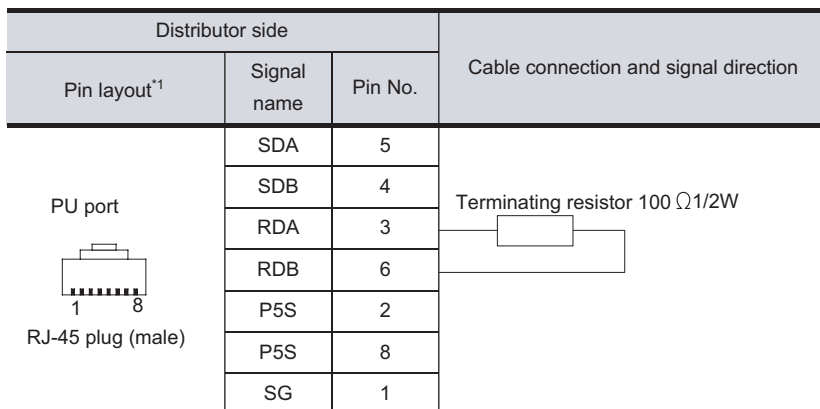(7) RS-422 cable 7)



*1 The connector figure shows the engagement face.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422/485 communication unit connector on the GOT.


For the GOT side of the RS-422 cable, use a connector or connector cover applicable to the GOT connector.

GOT	Connector model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

(2) Inverter connector specifications

(a) Pin layout in the PU port

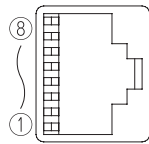When seen from the front of the inverter
(receptacle side)



Modular jack

Pin No.	Signal name	Remark
1	GND (SG)	
2	(P5S)	Not used
3	RXD+ (RDA)	
4	TXD- (SDB)	
5	TXD+ (SDA)	
6	RXD- (RDB)	
7	GND (SG)	
8	(P5S)	Not used

The contents inside () indicate symbols described in the inverter manual.

The pins number 2 and 8 (P5S) are connected to the power supply for an operation panel or a parameter unit. Do not use them in RS-422 communication.


(b) Connector of cable between FREQROL Series inverters

Use the commercial connectors and cables shown in the table below or the comparable products. (Refer to the manual for the inverter.)

Introduced products (as of October, 2005)

Name	Model name	Specifications	Manufacture
Connector	5-554720-3	RJ45 conector	Tyco International, Ltd
Modular ceiling rossette	BMJ-8		HACHIKO ELECTRIC CO.,LTD.
Cable	SGLPEV 0.5mm × 4P	Cable conforming to EIA568 (such as cable 10BASE-T)	MITSUBISHI CABLE INDUSTRIES, LTD.

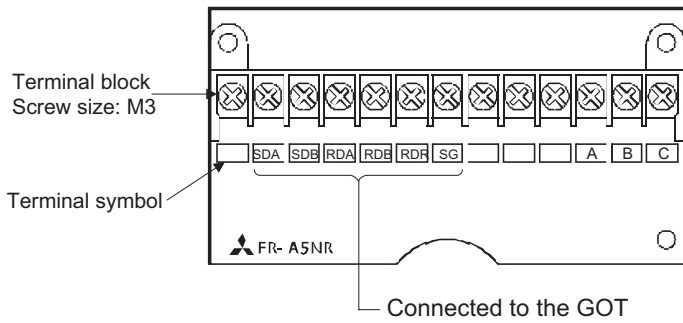- (3) Terminal block layout in the FR-A5NR computer link option
Attach this option to the A500 and F500 Series.



3 Precautions when preparing a cable


The length of the RS-422 cable must be 1200m or less.

4 Connecting terminating resistors

- (1) GOT


Set the terminating resistor of RS-422/485 communication unit using the terminating resistor setting switch of RS-422/485 communication unit.

Terminating resistor ^{*1}	Switch No.	
	1	2
Enable	ON	ON
Disable	OFF	OFF



*1 The default setting is "Enable".

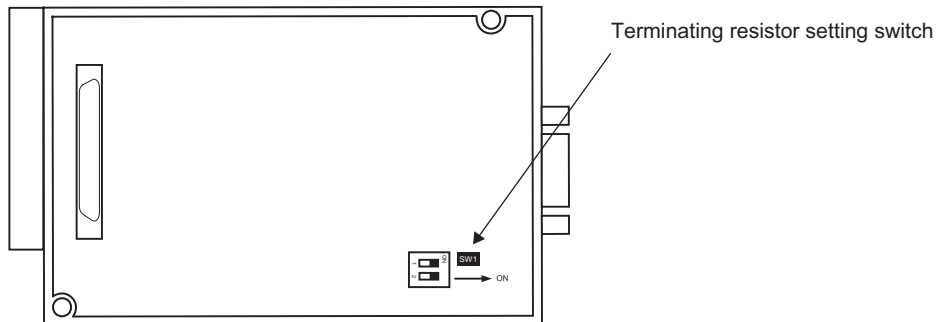
(When using GT15-RS4-9S)



Rear view of RS-422/485 communication unit

31.3 Preparatory Procedures for Monitoring

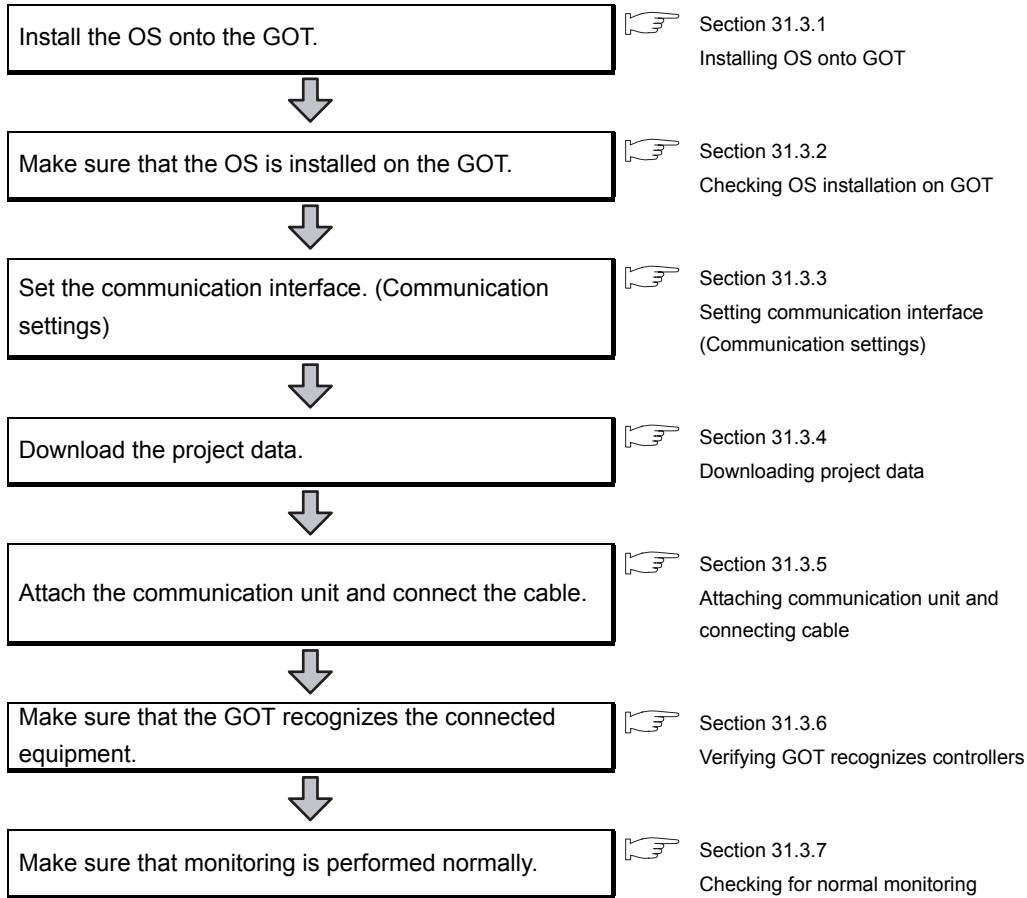The following shows the procedures to be taken before monitoring and corresponding reference sections.



Confirming the inverter side setting


This section explains the GOT side setting.


When confirming the inverter side setting, refer to the following.

Section 31.4 FREQROL Series Inverter Side Settings

31.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

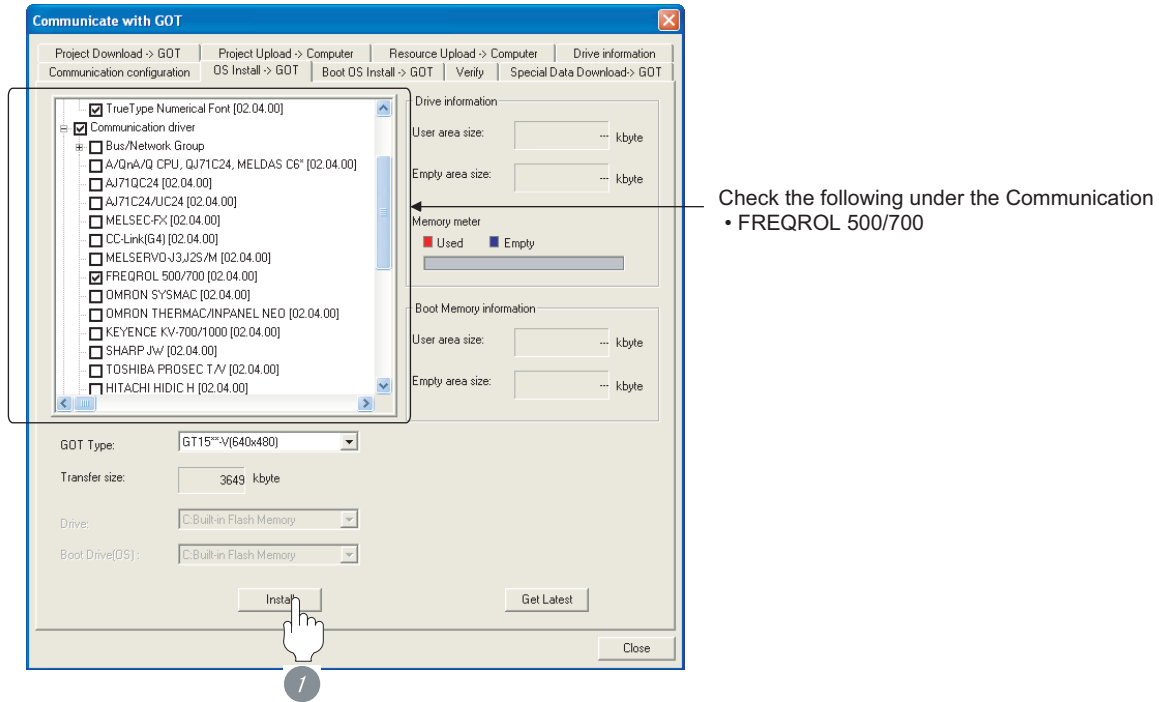
 GT Designer2 Version □ Basic Operation/Data Transfer Manual




- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

31.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

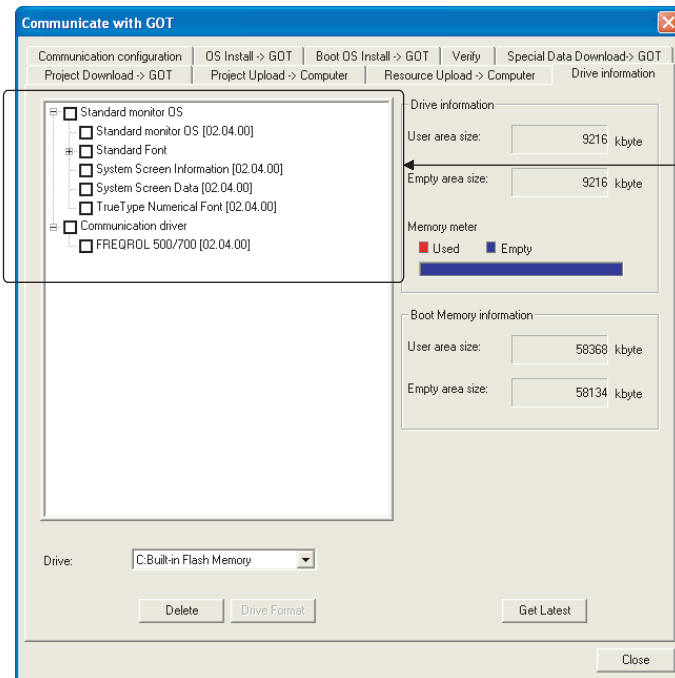 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

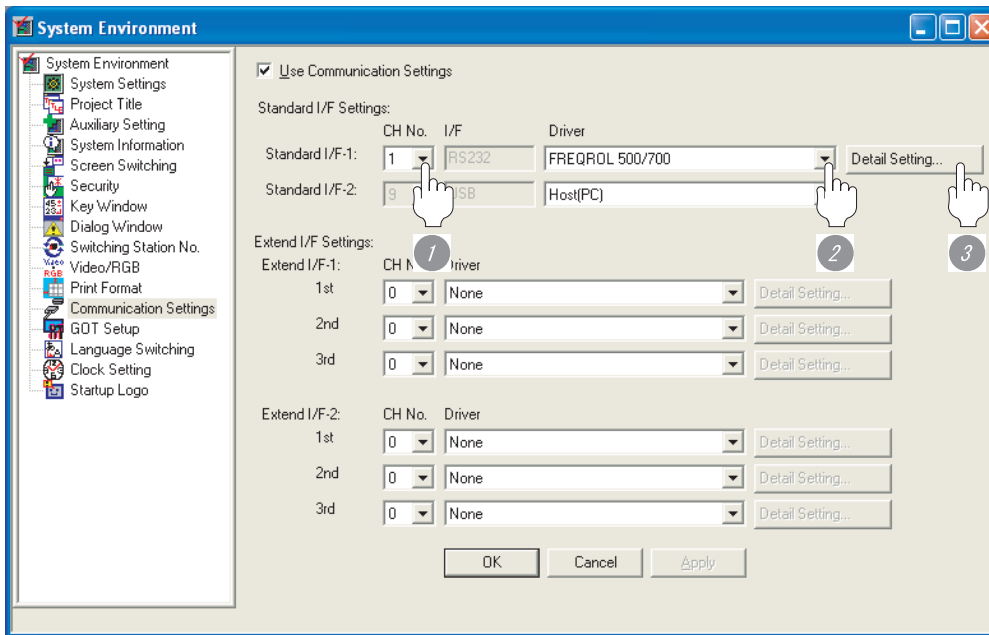
- 1) Standard monitor OS
- 2) Communication driver: FREQROL 500/700

31.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version Screen Design Manual


1 Communication settings



(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "FREQROL 500/700".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

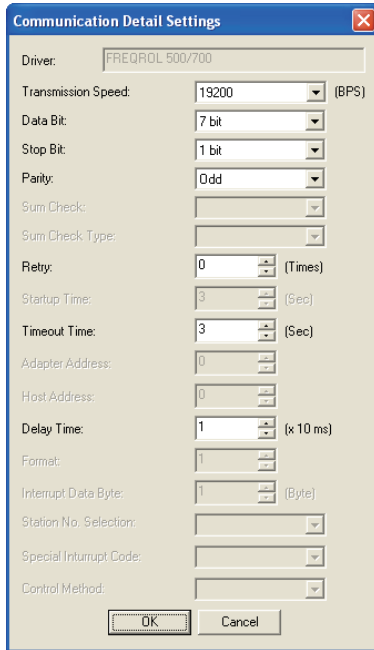2 Communication detail settings



Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps>	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 7bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Odd>	None Even Odd
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 0 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	1 to 30 Sec
Delay Time	Set this item to adjust the transmission timing of the communication request from the GOT. <Default: 10ms>	0 to 300 ms

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

31

INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION

- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.


 GT □ User's Manual

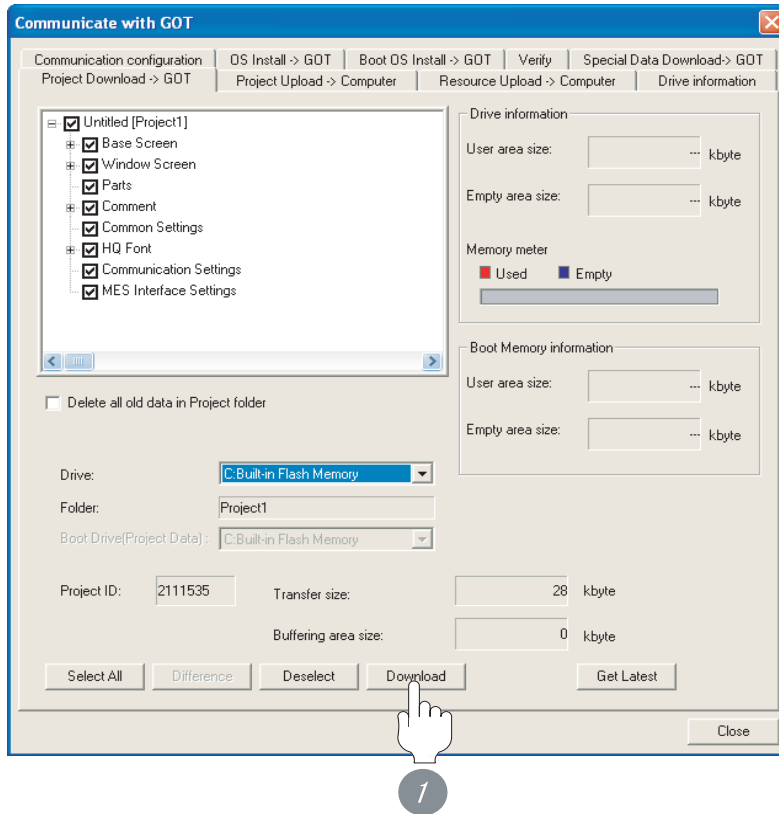
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

31.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


31.3.5 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

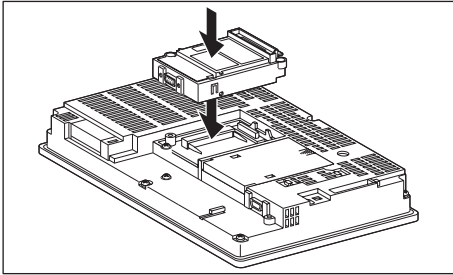1 Attaching the communication unit



- 1 Attach the serial communication unit to the extension unit connector on the GOT.



Serial communication unit

For details on the serial communication unit, refer to the following manual:

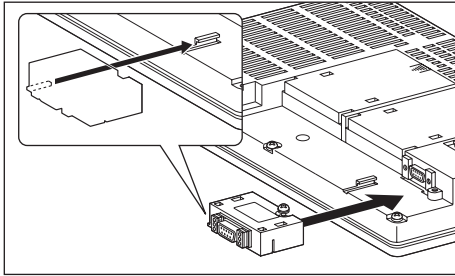
- ☞ GT15 Serial Communication Unit User's Manual
GT15-RS2, GT15-RS4, GT15-RS4-TE

2 How to connect the cable


(1) How to connect the RS-422 cable

(a) For the GT15

- connection to the RS-232 interface




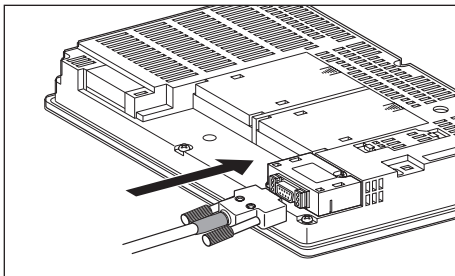- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

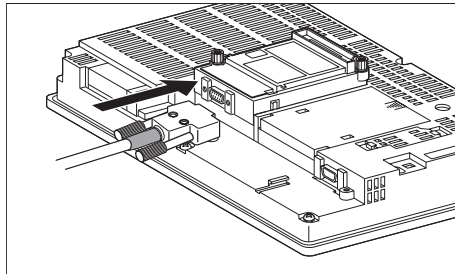- connection to the RS-422/485 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

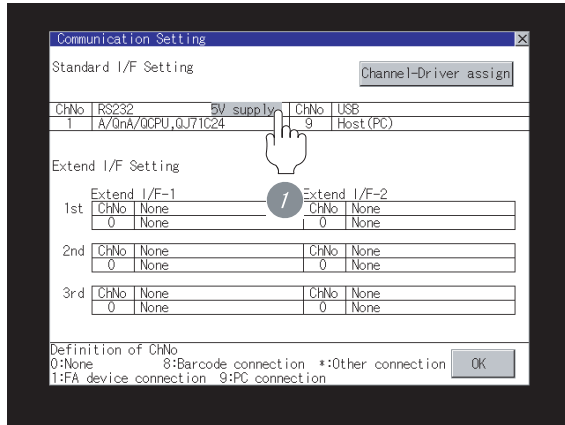
GT15 RS-422 Conversion Unit User's Manual

When using the RS-422 conversion unit


On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the utility, refer to the following manual:

 GT User's Manual


- 1 Touch [5V supply].



- 2 Set [5V power supply] to "YES".

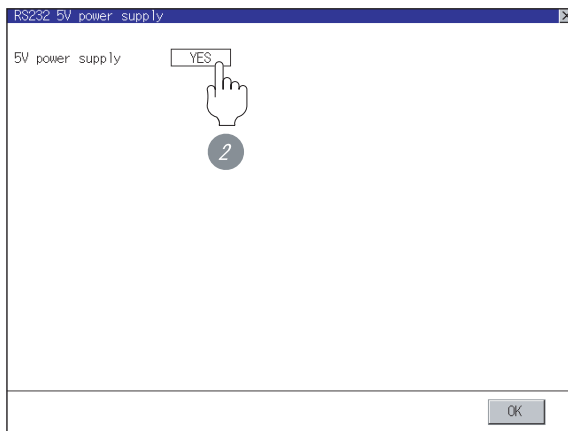

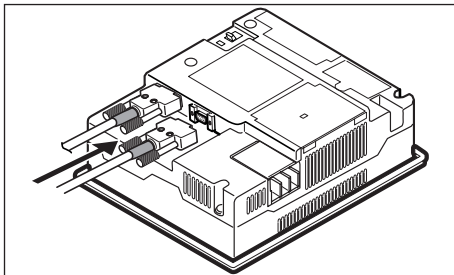(b) In the case of the GT11



- 1 Connect the RS-422 cable to the RS-422 interface on the GOT.

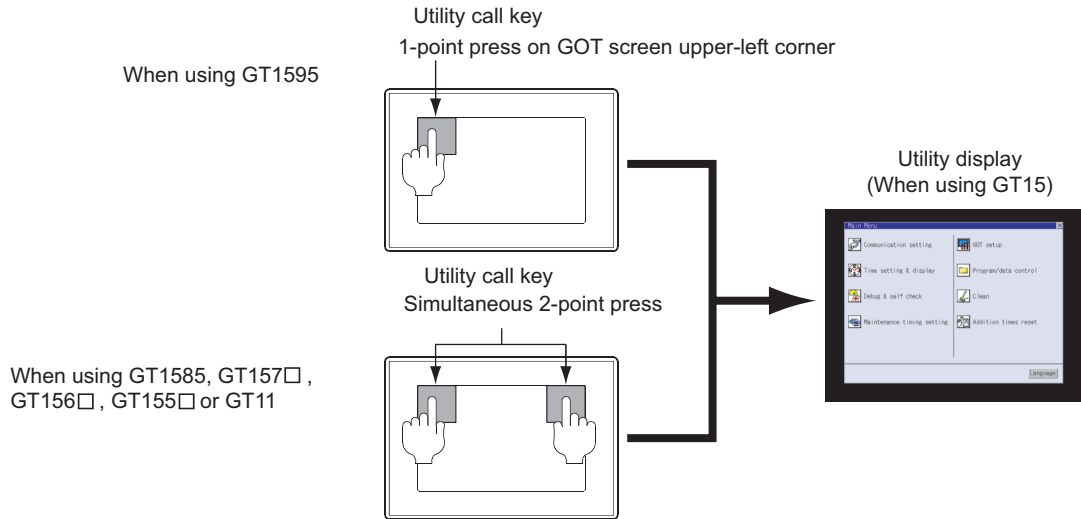
31.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point

When setting the utility call key to 1-point


When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.

For the setting of the utility call key, refer to the following.

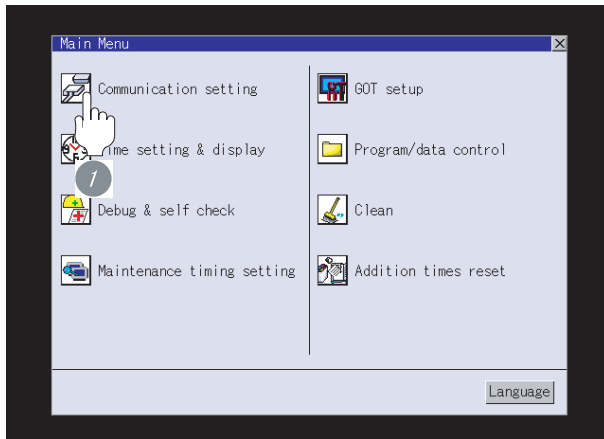 GT□ User's Manual



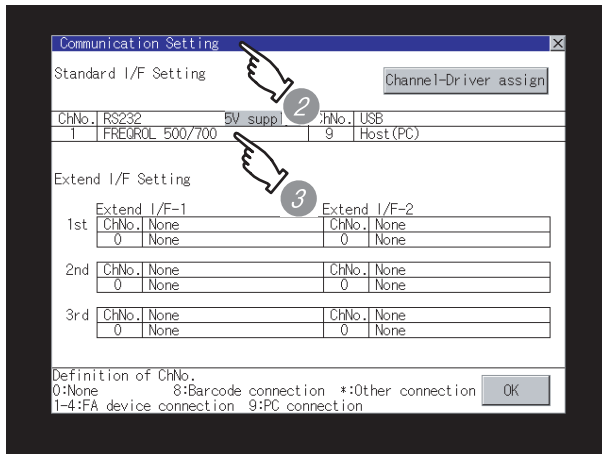- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver: FREQROL 500/700
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.
 - Section 31.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.

For details on the Utility, refer to the following manual.

➡ GT □ User's Manual

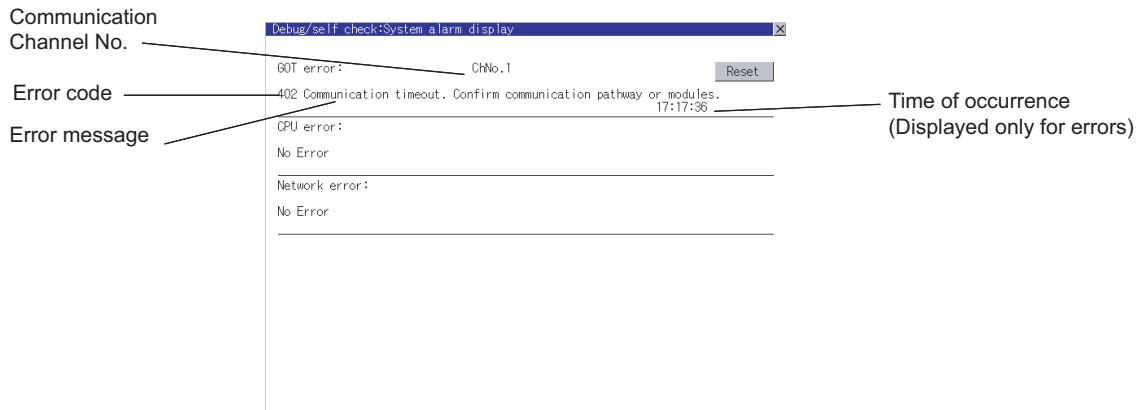
31.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT User's Manual (When using GT15)



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version Screen Design Manual

2 Confirming the inverter side setting

When connecting the GOT, setting is required for the inverter side.

Confirm if the inverter side setting is correct.

 Section 31.4 FREQROL Series Inverter Side Settings

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

31.4 FREQROL Series Inverter Side Settings



Inverter

For details of the inverter, refer to the manual of each series.

Model name	
FREQROL series	S500 series (including RS485 communication function)
	E500 series
	A500/700 series
	F500/700 series

1 Communication settings

(1) Make the communication settings of the inverter.


Setting item ^{*1}	Settings ^{*1}
Inverter station No.	00 to 31
Transmission speed ^{*2}	19200bps
Data length ^{*2}	7bits
Stop bit ^{*2}	1bit
Parity ^{*2}	Odd
Communication retry count	No abnormal stop
Communication check time interval	Communication check stop
Waiting time setting	0ms
CR, LF Yes/No selection	CR: Provided, LF: Not provided
Operation mode	External operation mode at power on
Link start mode selection	Computer link
EEPROM write selection	Write to RAM and EEPROM
Frequency setting command selection	Volume disabled

*1 Depending on target model, parameter No. to be set may differ, or no setting item may exist. For details, refer to the manual of the inverter.

*2 Described using the example with transmission speed 19200bps, data length 7bits, stop bit 1bit and parity odd. When communicating with other than the above setting, make sure to match each setting of the GOT and inverter sides.

2 Station No. settings

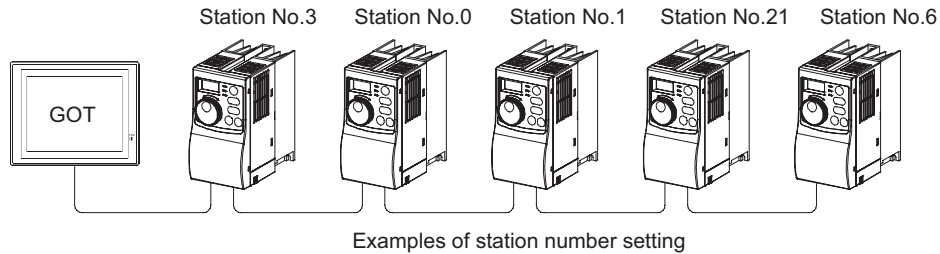Set each station number while making sure that one station number is used only once. The station number can be set without regard to the cable connection order. No problem is expected even if station numbers are not consecutive.



(1) Direct specification

When setting the device, specify the station number of the inverter of which data is to be changed.

Specification range
0 to 31

(2) Indirect specification

When setting the device, indirectly specify the station number of the inverter of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).

When specifying the station No. from 100 to 155 on GT Designer2, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the inverter.

Specification station NO.	Compatible device	Setting range
100	GD10	0 to 31 For the setting other than the above, error (dedicated device is out of range) will occur.
101	GD11	
102	GD12	
103	GD13	
104	GD14	
105	GD15	
106	GD16	
107	GD17	
108	GD18	
109	GD19	
110	GD20	
111	GD21	
112	GD22	
113	GD23	
114	GD24	
115	GD25	

31.5 Precautions

1 Precautions of connection to the inverter

- (1) Make sure to establish inverter system with No.0 station.
- (2) Up to 10 inverters can be connected.
- (3) Do not make any change for each communication parameter of the inverter side from GOT. If changed, the communication to the inverter cannot be made.
- (4) When setting “8888” or “9999” to the parameter (Pr) of the inverter “8888” and “9999” are numerical values which have special roles. When specifying from the GOT, it will be as follows.

Set value of inverter side	Value specified by GOT
8888	65520
9999	65535

- (5) Make sure to use GD for screen switching and system information devices.
- (6) Since the inverter does not have a clock function, the settings of “time adjusting” or “time broadcast” by GOT clock control will be disabled.

31.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Inverter connection	Supporting the inverter connection	2.18U	Communication driver FREQROL 500/700 [02.01.**]
Inverter connection	Changing the range of Timeout Time	2.43V	Communication driver FREQROL 500/700 [03.01.**]

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

31

INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION

SERVO AMPLIFIER CONNECTION



32.1 System Configuration page 32-2

This section describes devices and cables needed for servo amplifier connection.
Refer to this section to select the desired system.

32.2 Connection Cable page 32-9

This section describes the specifications of the cables needed for servo amplifier connection.
Refer to this section to check the specifications of the connection cable to be used.

32.3 Preparatory Procedures for Monitoring page 32-14

This section describes the preparatory procedures for the monitoring in the servo amplifier connection.
The sequential checkup procedure will be helpful for those who communicate through the GOT for the first time.

32.4 Setting on Servo Amplifier Side page 32-28

This section describes the servo amplifier setting for connection with the GOT.
Refer to this section to check the servo amplifier setting.

32.5 Precautions page 32-33

This section describes the precautions about servo amplifier connection.
Refer to this section without fail before starting servo amplifier connection.

32.6 List of Functions Added by Version Upgrade page 32-34

This section describes the functions added by version upgrade of GT Designer2 or OS.

32.1 System Configuration

The series names of connectable servo amplifiers are as follows.

Series name	Model name
MELSERVO-J2-Super	MR-J2S- □ A, MR-J2S- □ CP
MELSERVO-J2M	MR-J2M-P8, MR-J2M- □ DU
MELSERVO-J3	MR-J3- □ A

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.

32.1.1 Connecting to the MELSERVO-J2-Super series



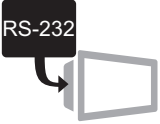



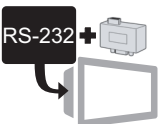

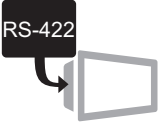



1 System configuration and connection conditions

Connection conditions		System Configuration
Number of GOTs	Distance	
1	15m or less	
	30m or less	

- *1 Connect the connector of the servo amplifier to CN3.
- *2 Multi-drop communication (Up to 32 axes can be connected.)


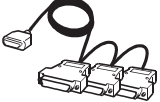

2 System equipment


(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) Cable

Image	No.	Name	Model name
	3	RS-232 cable *2	MR-CPCATCBL3M(3m)
	4	RS-422 cable	(To be prepared by the user.  Section 32.2 Connection Cable)

*2 The RS-232 cable can be prepared by the user. ( See Section 32.2 Connection Cable)

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

31

INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION

32.1.2 Connecting to the MELSERVO-J2M series



1 System configuration and connection conditions

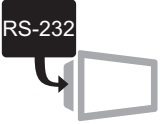



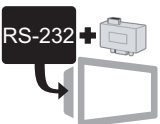

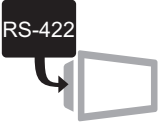



Connection conditions		System Configuration
Number of GOTs	Distance	
1	15m or less	<p>Diagram showing a single servo amplifier connected to a GOT (1) via an RS-232 cable (3). The distance is labeled MAX 15m.</p>
	30m or less	<p>Diagram showing two servo amplifiers connected to a GOT (2) via RS-422 cables (4). The distance is labeled MAX 30m.</p>

*1 Connect the connector of servo amplifier to CN3.

*2 Installation of 20 to 31 interface unit or drive unit stations is available.


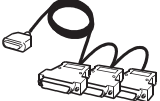

2 System equipment


(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) Cable

Image	No.	Name	Model name
	3	RS-232 cable*2	MR-CPCATCBL3M(3m)
	4	RS-422 cable	(To be prepared by the user.  Section 32.2 Connection Cable)

*2 The RS-232 cable can be prepared by the user. ( See Section 32.2 Connection Cable)

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

31

INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION

32.1.3 Connecting to the MELSERVO-J3 Series



1 System configuration and connection conditions

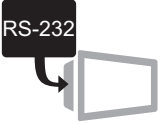



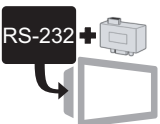

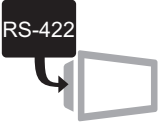



Connection conditions			System Configuration
Number of GOTs	Communication	Distance	
1	RS-232/422	—	
1	RS-232	—	
	RS-422	—	
1	RS-422	30m or less	
1	RS-422	30m or less	

*1 Connect the connector of the servo amplifier to CN3.

*2 Multi-drop communication (Up to 32 axes can be connected.)



2 System equipment

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) Servo amplifier

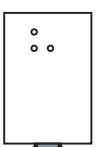Image	No.	Name	Model name
	3	RS-422/232 interface converter	FA-T-RS40VS (packed together with the 6 RS-232 cable2) and 7 RS-422 cable 2)
	4	Distributor	BMJ-8 (Recommended)

3 is a product manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.
For detail of this product, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

4 is a product manufactured by HACHIKO ELECTRIC CO.,LTD.
For detail of this product, contact HACHIKO ELECTRIC CO.,LTD.

25

CONNECTION TO
SHINKO TECHNOS
INDICATING CONTROLLER

26

CONNECTION TO CHINO
CONTROLLER

27

CONNECTION TO FUJI
SYS TEMPERATURE
CONTROLLER

28

CONNECTION TO
YAMATAKE TEMPERATURE
CONTROLLER

29

CONNECTION TO
YOKOGAWA TEMPERATURE
CONTROLLER

30

CONNECTION TO RKC
TEMPERATURE
CONTROLLER

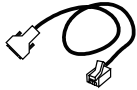
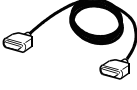
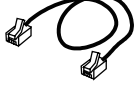
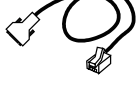

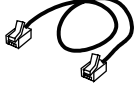



31

INVERTER
CONNECTION

32

SERVO AMPLIFIER
CONNECTION

(3) Cable

Image	No.	Name	Model name
	[5]	RS-422/232 conversion cable • Between servo amplifier and GOT	DSV-CABV(1.5m)
	[6]	RS-232 cable 2) • Between RS-422/232 interface converter [3] and GOT	RS-PCATCBL-0.5M(0.5m) (packed together with the RS-422/232 interface converter [3])
	[7]	RS-422 cable 2) • Between RS-422/232 interface converter [3] and Servo amplifier	RS-422SCBL-2M(2m) (packed together with the RS-422/232 interface converter [3])
	[8]	RS-422 cable 3) • Between servo amplifier and GOT	(To be prepared by the user.  Section 32.2 Connection Cable)
	[9]	RS-422 cable 4) • Between distributors	(To be prepared by the user.  Section 32.2 Connection Cable)
	[10]	RS-422 cable 5) • Between servo amplifier and distributor	
	[11]	RS-422 cable 6) • Between pins of distributor	(To be prepared by the user.  Section 32.2 Connection Cable)

[5] is a product manufactured by Diatrend Corporation.
For detail of this product, contact Diatrend Corporation.

[6], [7] are products manufactured by MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.
For detail of these products, contact MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED.

32.2 Connection Cable

The RS-232 cable or RS-422 cable used for connecting the GOT to the servo amplifier should be prepared by the user.

The following provides connection diagrams for each cable, connector specifications and other information.

Series and model names		connection cable	
		RS-232 cable (Refer to section 32.21)	RS-422 cable (Refer to section 32.22)
servo amplifier	MELSERVO-J2-Super Series	RS-232 cable 1)	RS-422 cable 1)
	MELSERVO-J2M Series	RS-232 cable 1)	RS-422 cable 1)
	MELSERVO-J3 Series	—	RS-422 cable 3) RS-422 cable 4) RS-422 cable 5) RS-422 cable 6)
Distributor	BMJ-8	—	RS-422 cable 4)

32.2.1 RS-232 cable

The following shows the connection diagrams and connector specifications of the RS-232 cable used for connecting the GOT to a servo amplifier.

1 Connection diagram

GOT side		Cable connection and signal direction	Connector for interface unit's or servo amplifier's CN3	
Signal name	Pin No.		Pin No.	Signal name
CD/NC ^{*1}	1		Plate	FG
SD(TXD)	3		2	RXD
—	9		11	LG
RD(RXD)	2		12	TXD
SG	5		11	LG
RS(RTS)	7			
CS(CTS)	8			
DR(DSR)	6			
ER(DTR)	4			

*1 GT15 : CD, GT11 : NC

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT.
For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-	17LE-23090-27(D3CC)	
GT15-RS2-9P	-	17LE-23090-27(D4CK)	


*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) Servo amplifier side connector

Use the connector compatible with the servo amplifier.

For details, refer to the following manual.

 See the technical data of the servo amplifier to be used.

3 Precautions when preparing a cable

- Use a shielded multi-core cable and connect the shield to the FG terminal securely.
- The length of the RS-232 cable must be within 15m.


However, for use at the transmission speed of 38400bps or higher, the length must be within 3m.

32.2.2 RS-422 cable


The following shows the connection diagrams and connector specifications of the RS-422 cable used for connecting the GOT to a servo amplifier.

1 Connection diagram

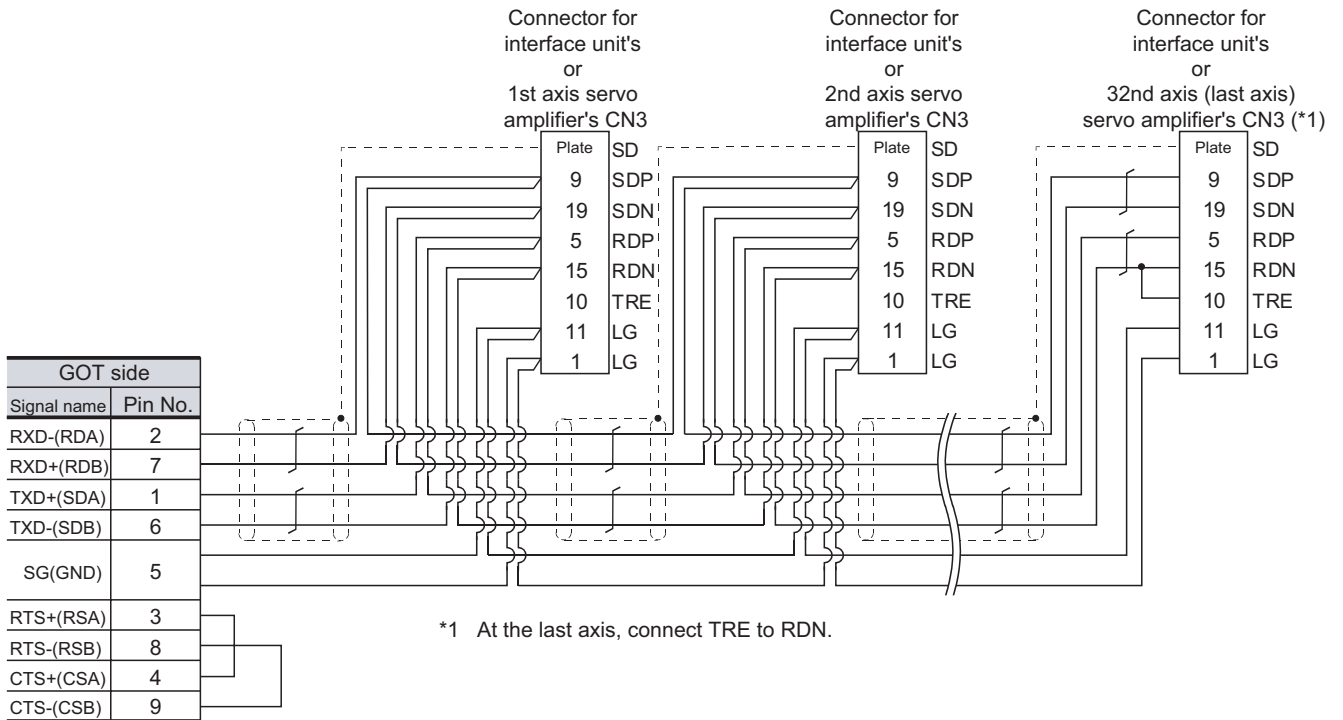(1) RS-422 cable 1)





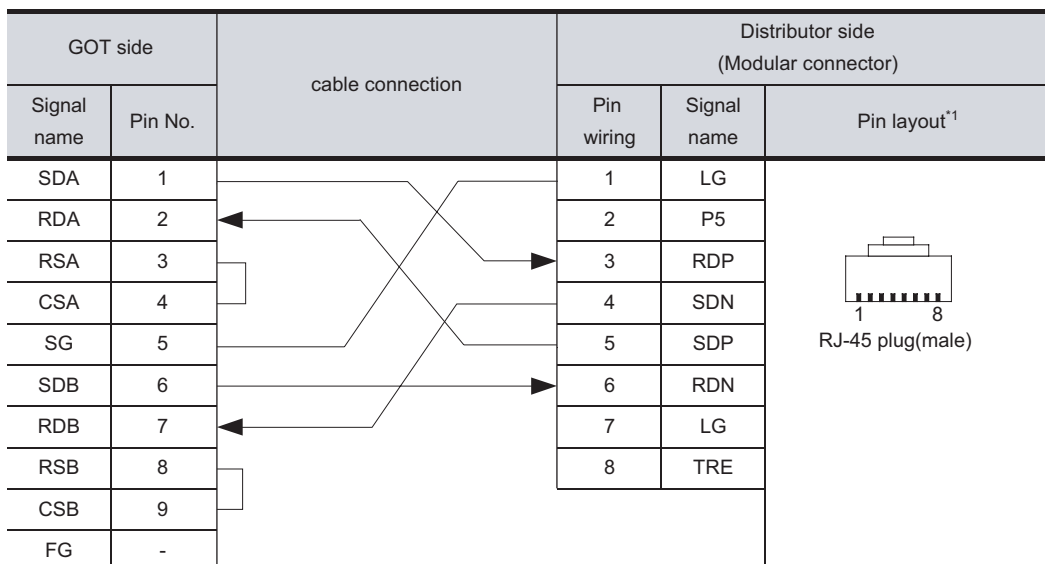(2) RS-422 cable 3)





*1 The pin layout shows the engagement face.

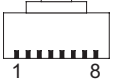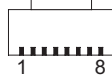(3) RS-422 cable 4)

Servo amplifier side or distributor side (Modular connector)			cable connection	Distributor side (Modular connector)		
Pin layout*1	Signal name	Pin No.		Pin wiring	Signal name	Pin layout*1
 RJ-45 plug(male)	1	LG		1	LG	 RJ-45 plug(male)
	2	P5		2	P5	
	3	RDP		3	RDP	
	4	SDN		4	SDN	
	5	SDP		5	SDP	
	6	RDN		6	RDN	
	7	LG		7	LG	
	8	TRE		8	TRE	


*1 The pin layout shows the engagement face.

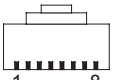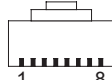(4) RS-422 cable 5)

Servo amplifier side or distributor side (Modular connector)			cable connection	Distributor side (Modular connector)		
Pin layout*1	Signal name	Pin No.		Pin wiring	Signal name	Pin layout*1
 RJ-45 plug(male)	1	LG		1	LG	 RJ-45 plug(male)
	2	P5		2	P5	
	3	RDP		3	RDP	
	4	SDN		4	SDN	
	5	SDP		5	SDP	
	6	RDN		6	RDN	
	7	LG		7	LG	
	8	TRE		8	TRE	

*1 The pin layout shows the engagement face.

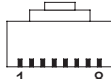(5) RS-422 cable 6)

Distributor side (Modular connector)			cable connection
Pin layout*1	Signal name	Pin No.	
 RJ-45 plug (male)	1	LG	
	2	P5	
	3	RDP	
	4	SDN	
	5	SDP	
	6	RDN	
	7	LG	
	8	TRE	

*1 The pin layout shows the engagement face.

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface and RS-422/485 communication unit connector on the GOT.


For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

GOT	Model	Connector type	Manufacturer
RS-422 conversion unit	17LE-13090-27(D2AC)	9-pin D-sub (female)	DDK Ltd.
GT11	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.
GT15-RS4-9S	17LE-13090-27(D3AC)	9-pin D-sub (female)	DDK Ltd.

(2) Servo amplifier side connector

Use the connector compatible with the servo amplifier.

For details, refer to the following manual.

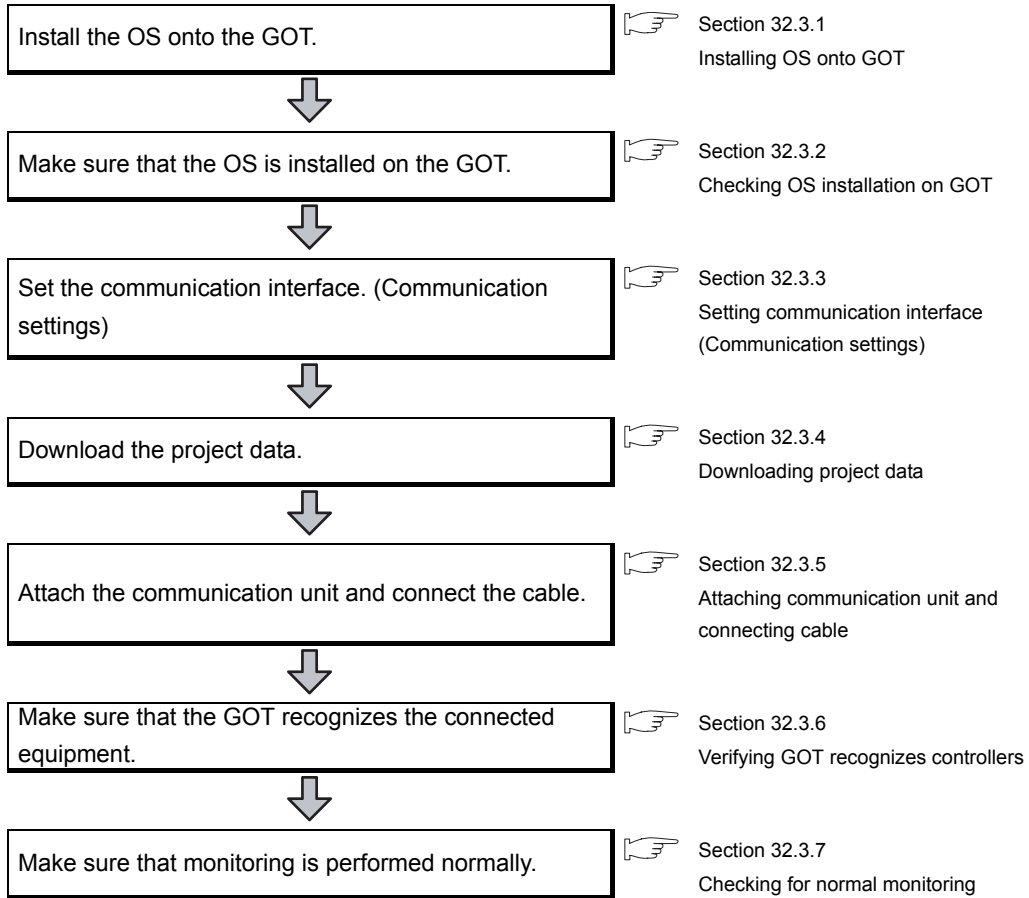
 See the technical data of the servo amplifier to be used.

3 Precautions when preparing a cable

The length of the RS-422 cable must be 1200m or less.

32.3 Preparatory Procedures for Monitoring

The following shows the procedures to be taken before monitoring and corresponding reference sections.



Point

Confirming the servo amplifier side setting


This section explains the GOT side setting.

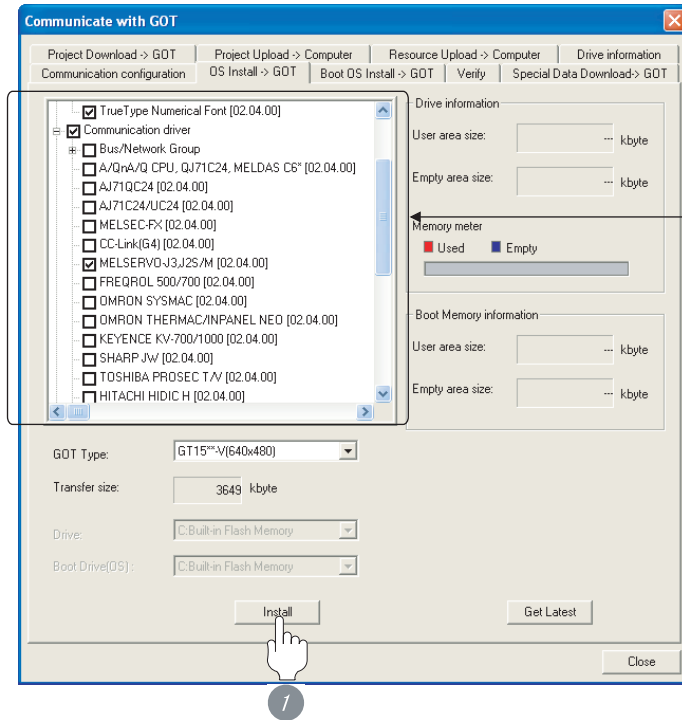
When confirming the servo amplifier side setting, refer to the following.

☞ Section 32.4 Setting on Servo Amplifier Side

32.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




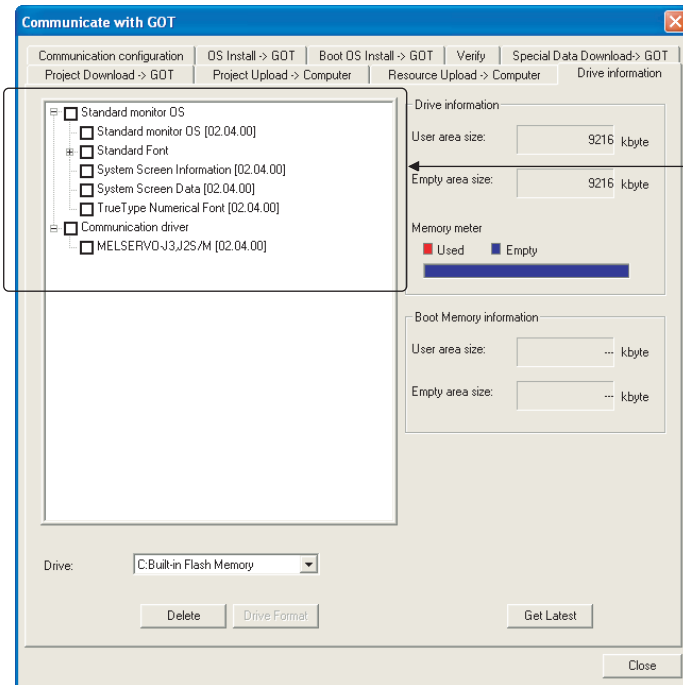
Check the following under the Communication driver.
• MELSERVO-J3, J2S/M

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

32.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

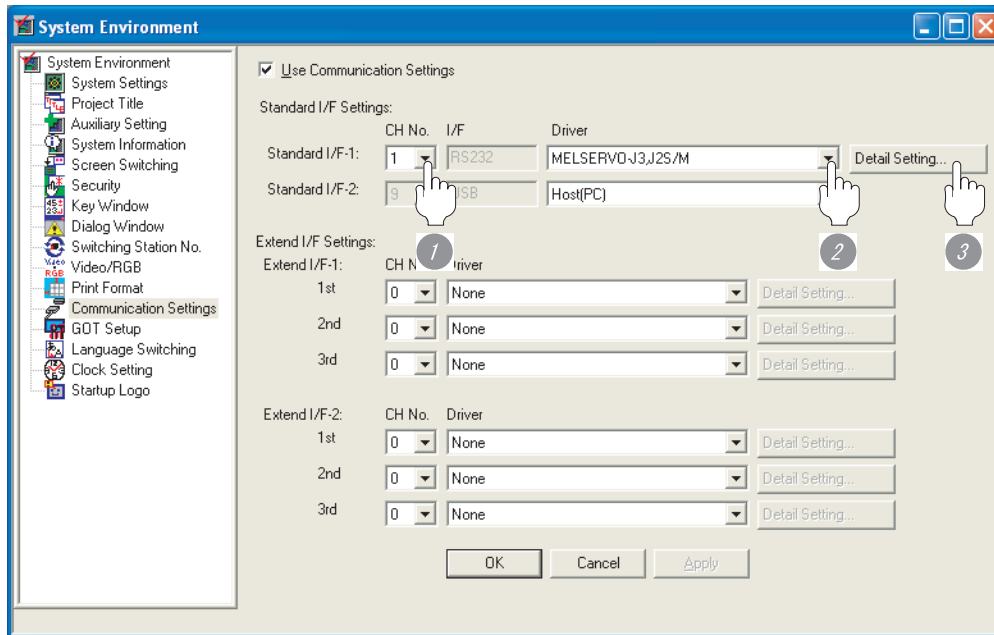
- 1) Standard driver
- 2) Communication driver : MELSERVO-J3, J2S/M

32.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings




(When using GT15)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "MELSERVO-J3, J2S/M".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	9600bps, 19200bps, 38400bps, 57600bps 115200bps
Station No. Selection	Specify whether to use the station No. during communication. If [Yes] is selected, the station No. is fixed to "0." <Default: Yes>	Yes or No


Point

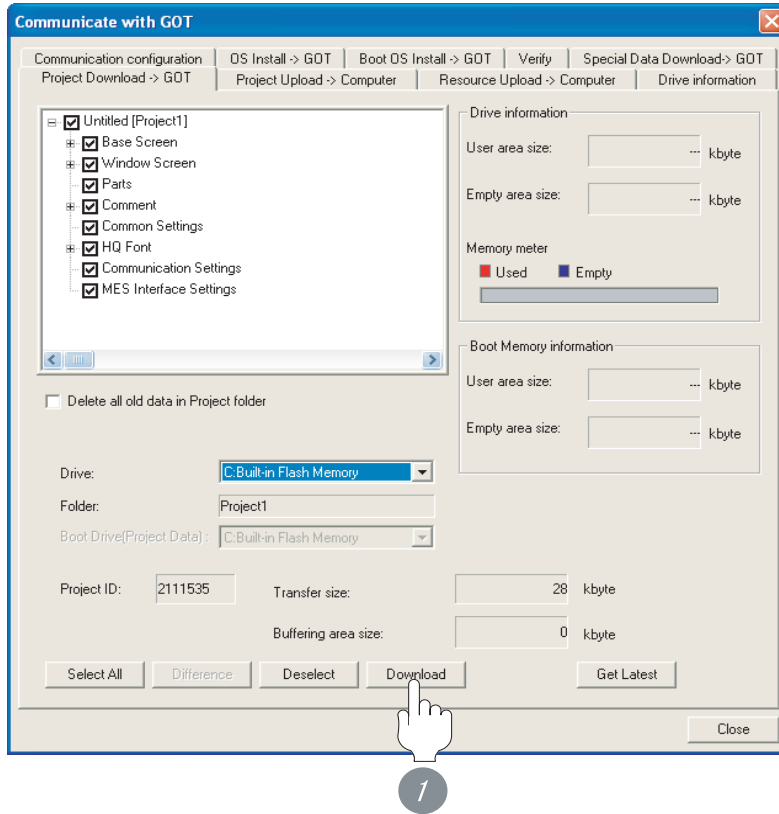
- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
For details on the Utility, refer to the following manual.
 GT User's Manual
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

32.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


32.3.5 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

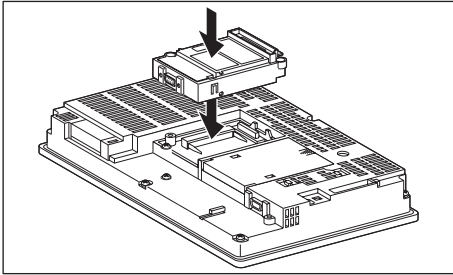1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.



Serial communication unit

For details on the serial communication unit, refer to the following manual:

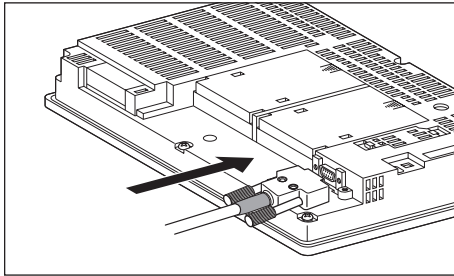
 [GT15 Serial Communication Unit User's Manual](#)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

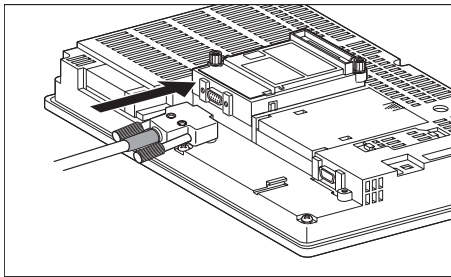- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

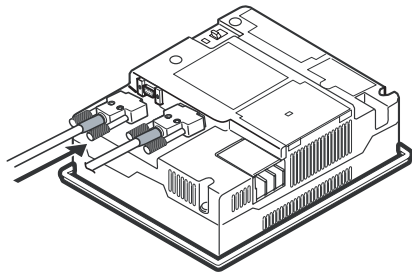(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

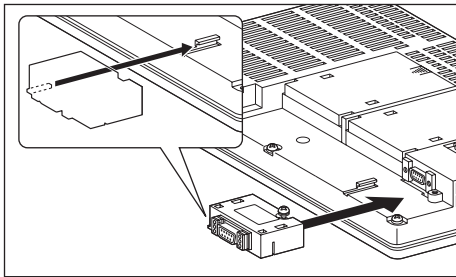- connection to the RS-232 interface




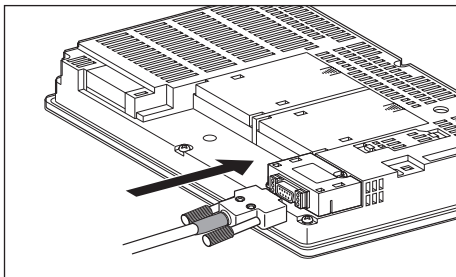- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

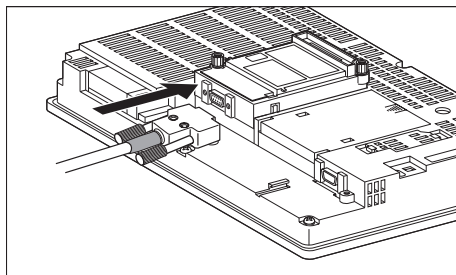- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

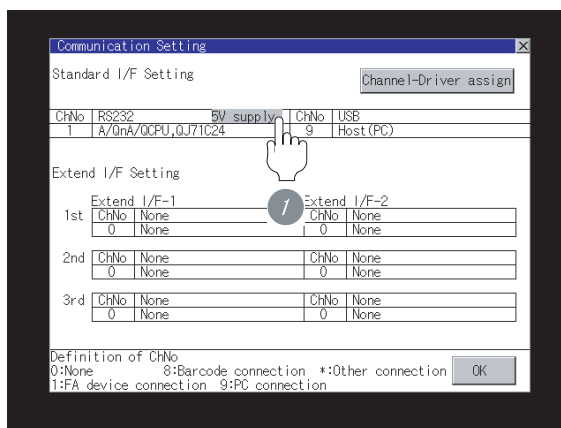
☞ GT15 RS-422 Conversion Unit User's Manual

When using the RS-422 conversion unit


On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the utility, refer to the following manual:

☞ GT □ User's Manual


- 1 Touch [5V supply].



- 2 Set [5V power supply] to "YES".

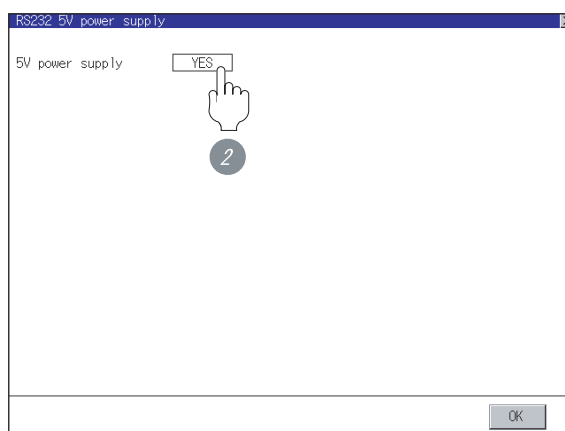

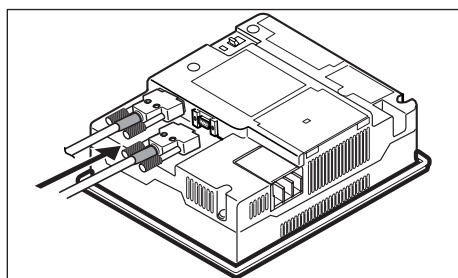(b) In the case of the GT11



- 1 Connect the RS-422 cable to the RS-422 interface on the GOT.

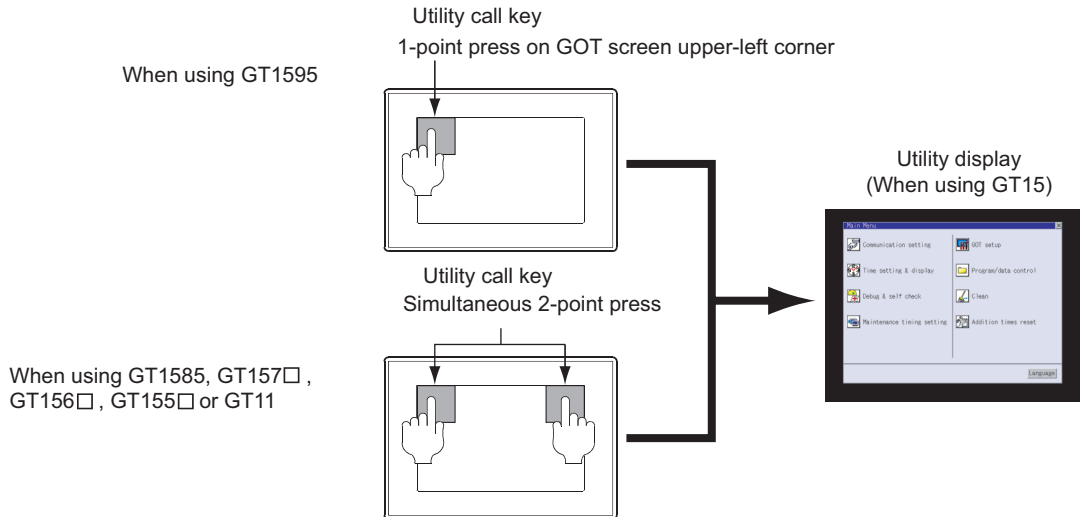
32.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

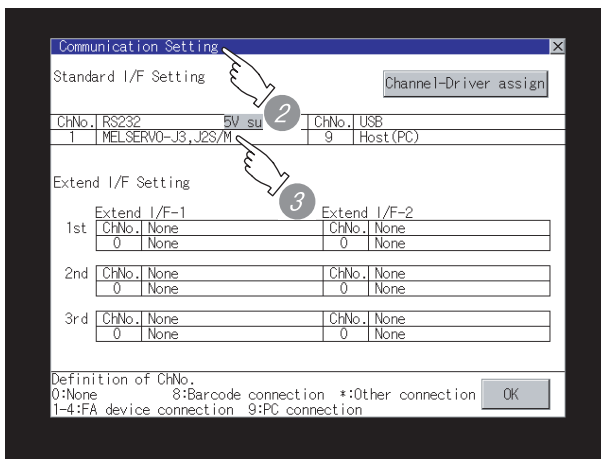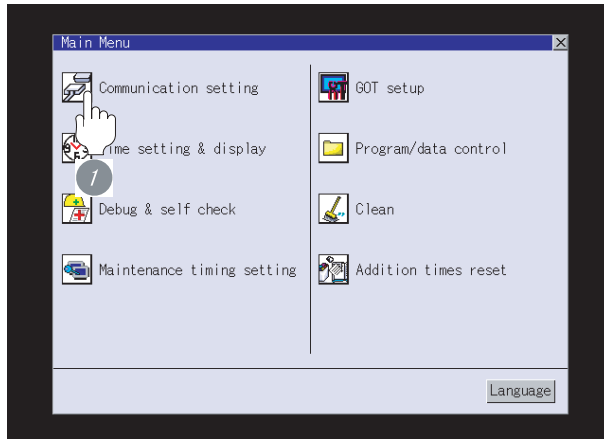GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver :MELSERVO-J3, J2S/M

4 When the communication driver name is not displayed normally, carry out the following procedure again.

- Section 32.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

GT □ User's Manual

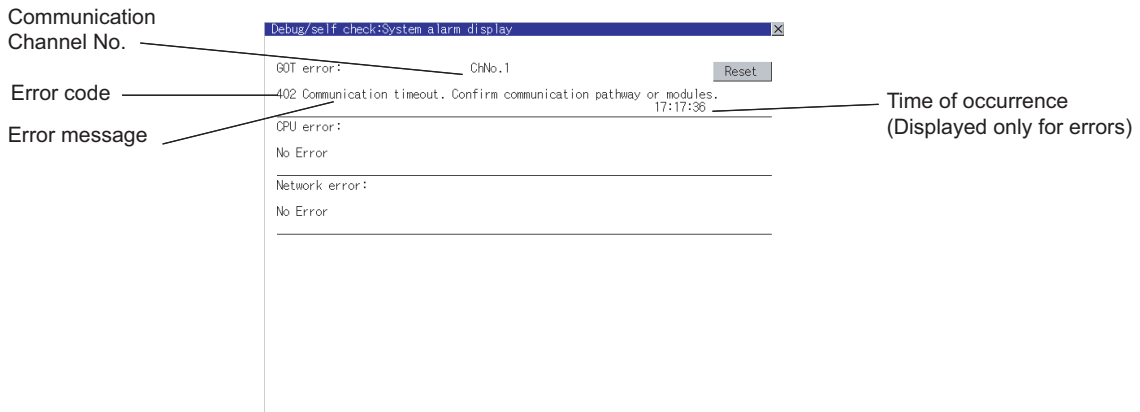
32.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)




Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual



2 Perform an I/O check

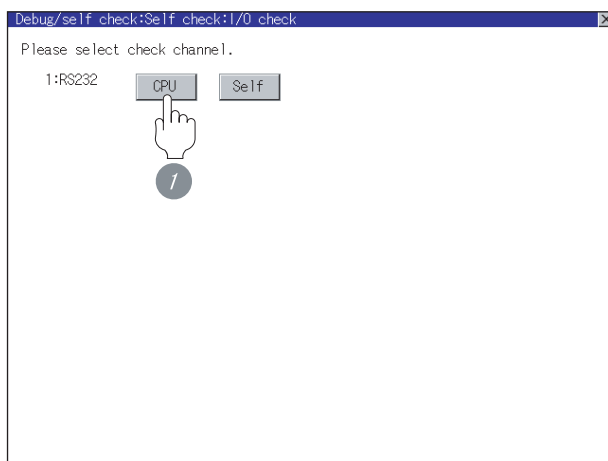
Whether the servo amplifier can communicate with the GOT or not can be checked by the I/O check function.

If this check ends successfully, it means correct communication interface settings and proper cable connection.


Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].

For details on the I/O check, refer to the following manual:

 GT User's Manual



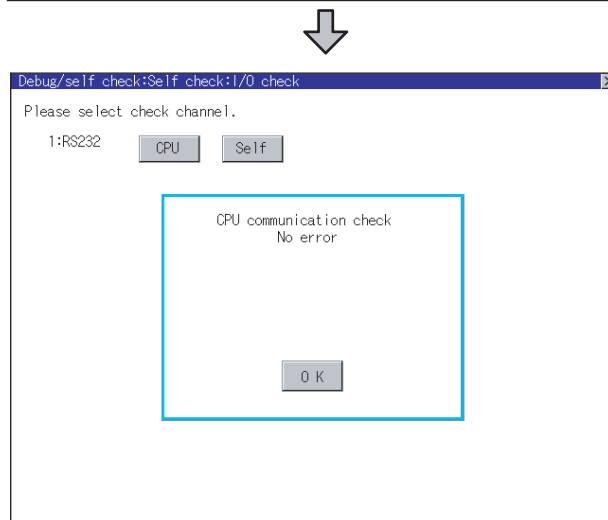- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected servo amplifier.




- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Confirming the servo amplifier side setting

When connecting the GOT, setting is required for the servo amplifier side.

Confirm if the servo amplifier side setting is correct.

 Section 32.4 Setting on Servo Amplifier Side

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

32.4 Setting on Servo Amplifier Side

Model name	Refer to
MELSERVO-J2-Super series	Section 32.4.1
MELSERVO-J2M series	Section 32.4.2

32.4.1 Connecting to the MELSERVO-J2-Super series



MELSERVO-J2-Super series

For details of the MELSERVO-J2-Super series, refer to the following manual.

See the technical manual for the MELSERVO-J2-Super series servo amplifiers.

1 Parameters of MELSERVO-J2-Super series

Enter the parameters of the MELSERVO-J2-Super series.

Item	Setting
Basic parameter No. 15	Station No. setting: 0 to 31 <Default: 0> (*1)
Basic parameter No. 16	Serial communication function selection <Default: 0000> Basic parameter No. 16 <input type="text" value="3"/> <input type="text" value="2"/> <input type="text" value="0"/> <input type="text" value="1"/> (1) Serial communication baud rate selection (*2) 0: 9600bps 1: 19200bps 2: 38400bps 3: 57600bps (2) Serial communication I/F selection 0: RS-232 1: RS-422 (3) Communication response delay time selection 0: Invalid 1: Valid (Response after 800μs or longer delay)
In case of MR-J2S_A Expansion parameter 2 No. 53 In case of MR-J2S_CP Expansion parameter 2 No. 57	Function selection 8 <Default: 0000> (*3) Expansion parameter 2 No. 53 or No. 57 <input type="text" value="0"/> <input type="text" value="1"/> <input type="text" value="0"/> <input type="text" value="0"/> (1) Station No. selection for protocol 0: With station No. 1: Without station No.

*1 Avoid duplication of the station No. with any of the other axes.

*2 Specify the same transmission speed as that of the GOT.

For the transmission speed setting method of the GOT, refer to the following.

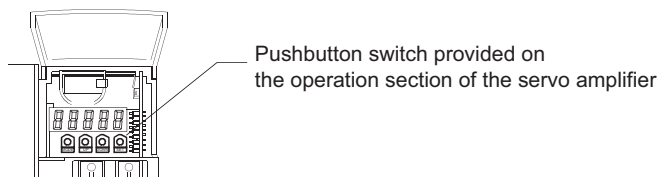
See Section 32.3.3 Setting communication interface (Communication settings)

*3 To change the set value, enter "000E" to basic parameter No. 19.

Point

(1) Parameter setting

Set the parameter at the pushbutton switch provided on the operation section of the servo amplifier or setup software.



(2) When changing the parameter

Turn off then on the servo amplifier to be effective the new parameter.

32.4.2 Connecting to the MELSERVO-J2M series



MELSERVO-J2M series

For details of the MELSERVO-J2M series, refer to the following manual.

☞ See the technical manual for the MELSERVO-J2M series servo amplifiers.

1 Parameter of MELSERVO-J2M series

Enter the parameters of the MELSERVO-J2M series.

Item	Setting
	Serial communication selection <Default: 0000>
Basic IFU parameter No. 0	Basic IFU parameter No. 0 <input type="text" value="3"/> <input type="text" value="2"/> <input type="text" value="0"/> <input type="text" value="1"/> (1) Serial communication baud rate selection (*1) 0: 9600bps 1: 19200bps 2: 38400bps 3: 57600bps (2) Serial communication I/F selection 0: RS-232 1: RS-422 (3) Communication response delay time selection 0: Invalid 1: Valid (Response after 800μs or longer delay time)
Basic IFU parameter No. 10	Interface unit serial communication station No. selection: 0 to 31 <Default: 0> (*2)
Basic IFU parameter No. 11	Slot 1 serial communication station No. selection: 0 to 31 <Default: 1> (*2)
Basic IFU parameter No. 12	Slot 2 serial communication station No. selection: 0 to 31 <Default: 2> (*2)
Basic IFU parameter No. 13	Slot 3 serial communication station No. selection: 0 to 31 <Default: 3> (*2)
Basic IFU parameter No. 14	Slot 4 serial communication station No. selection: 0 to 31 <Default: 4> (*2)
Basic IFU parameter No. 15	Slot 5 serial communication station No. selection: 0 to 31 <Default: 5> (*2)
Basic IFU parameter No. 16	Slot 6 serial communication station No. selection: 0 to 31 <Default: 6> (*2)
Basic IFU parameter No. 17	Slot 7 serial communication station No. selection: 0 to 31 <Default: 7> (*2)
Basic IFU parameter No. 18	Slot 8 serial communication station No. selection: 0 to 31 <Default: 8> (*2)

*1 Specify the same transmission speed as that of the GOT.
For the transmission speed setting method of the GOT, refer to the following.

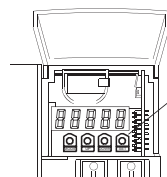
☞ See Section 32.3.3 Setting communication interface (Communication settings)

*2 Avoid duplication of the station No. with any of the other units.



(1) Parameter setting

Set the parameter at the pushbutton switch provided on the operation section of the servo amplifier or setup software.



Pushbutton switch provided on the operation section of the servo amplifier

(2) When changing the parameter

Turn off then on the servo amplifier to be effective the new parameter.

32.4.3 Connecting to the MELSERVO-J3 series



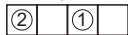
MELSERVO-J3 series

For details of the MELSERVO-J3 series, refer to the following manual.

See the technical manual for the MELSERVO-J3 series servo amplifiers.

1 Parameters of MELSERVO-J3 series

Enter the parameters of the MELSERVO-J3 series.

Item	Setting
Basic parameter No. PC20	Station No. setting: 0 to 31 <Default: 0> (*1)
Basic parameter No. PC21	Serial communication function selection <Default: 0000> Basic parameter No. PC21  (1) Serial communication baud rate selection (*2) 0: 9600bps 1: 19200bps 2: 38400bps 3: 57600bps (2) Communication response delay time selection 0: Invalid 1: Valid (Response after 800μs or longer delay)

*1 Avoid duplication of the station No. with any of the other axes.

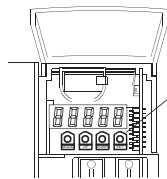
*2 Specify the same transmission speed as that of the GOT.
 For the transmission speed setting method of the GOT, refer to the following.

See Section 32.3.3 Setting communication interface (Communication settings)



(1) Parameter setting

Set the parameter at the pushbutton switch provided on the operation section of the servo amplifier or setup software.




Pushbutton switch provided on the operation section of the servo amplifier

(2) When changing the parameter

Turn off then on the servo amplifier to be effective the new parameter.

32.4.4 Station NO. settings

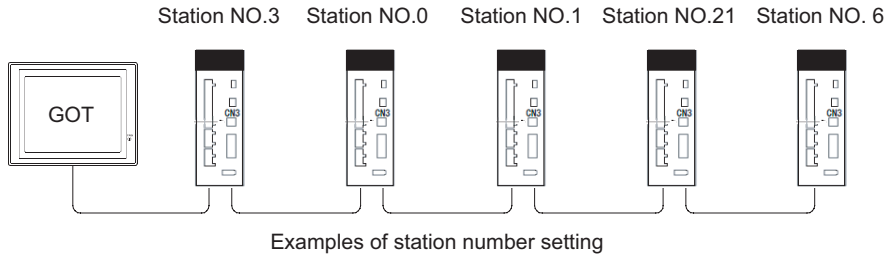Set each station number while making sure that one station number is used only once.
 The station number can be set without regard to the cable connection order.
 No problem is expected even if station numbers are not consecutive.



(1) Direct specification

When setting the device, specify the station number of the servo amplifier of which data is to be changed.

Specification range
0 to 31

(2) Indirect specification

When setting the device, indirectly specify the station number of the inverter of which data is to be changed using the 16-bit GOT internal data register (GD10 to GD25).

When specifying the station No. from 100 to 115 on GT Designer2, the value of GD10 to GD25 compatible to the station No. specification will be the station No. of the servo amplifier.

Specification station NO.	Compatible device	Setting range
100	GD10	0 to 31 For the setting other than the above, a communication timeout error will occur.
101	GD11	
102	GD12	
103	GD13	
104	GD14	
105	GD15	
106	GD16	
107	GD17	
108	GD18	
109	GD19	
110	GD20	
111	GD21	
112	GD22	
113	GD23	
114	GD24	
115	GD25	

(3) All station specification

Target station differs depending on write-in operation or read-out operation.

- For write-in operation, all station will be a target.
- For read-out operation, only one station will be a target.

32.5 Precautions

1 Station number setting in the servo system

Configure the servo system properly so that there is always station No. 00.

2 GOT clock function

Since the servo amplifier does not have a clock function, the settings of "time adjusting" or "time broadcast" by GOT clock control will be disabled.

3 Servo amplifier/test operation using the GOT

During the servo amplifier/test operation, when the communication between the GOT and the servo amplifier is interrupted for 0.5[ms] or more, the servo amplifier decelerates, stops, and then gets into the servo lock status. During the servo amplifier/test operation, continue the communication constantly by monitoring the status display of the servo amplifier on the GOT screen, etc.

32.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Servo amplifier connection	Supporting the servo amplifier connection	2.09K	communication driver MELSERVO-J2S/M [01.02.**]
Servo amplifier connection	Supporting the servo amplifier MELSERVO-J3 series connection	2.18U	communication driver MELSERVO-J3, J2S/M [02.01.**]
Servo amplifier connection	<ul style="list-style-type: none">• Supporting the test operation mode• Supporting the write to the EEPROM for parameter• Supporting the read/write of the point tape for MR-J2S-CP	2.32J	communication driver MELSERVO-J3, J2S/M [03.00.**]

CNC CONNECTION

33.1 Direct Connection To CPU page33-2

This section describes the equipment and cables needed for direct connection to a CNC.



Select a system suitable for your application.

33.2 MELSECNET/10 Connection (PLC To PLC Network) page33-21

This section describes the equipment and cables needed when connecting to MELSECNET/10 (PLC to PLC network).



Select a system suitable for your application.

33.3 CC-Link Connection (Intelligent Device Station) page33-44

This section describes the equipment and cables needed for CC-Link connection (intelligent device station).



Select a system suitable for your application.

33.4 Ethernet Connection page33-68

This section describes the equipment and cables needed when connecting to Ethernet.



Select a system suitable for your application.

33.5 List of Functions Added by Version Upgrade page33-90

This section describes the functions added by version upgrade of GT Designer2 or OS.

33.1 Direct Connection To CPU



Connectable CNC is MELDAS C6/C64 series.
 Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of ① System configuration and connection conditions correspond to the numbers (e.g. ①) of ② System equipment.
 Use these numbers as references when confirming models and applications.

33.1.1 System Configuration



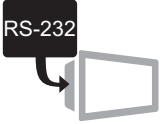



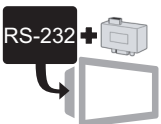





① System configuration and connection conditions

Connection conditions			System configuration
Number of GOTs	Communication	Distance	
1	RS-232	15m or less	
	RS-422	30.5m or less	

*1 Connect the connector of the CNC side to TERMINAL.
 *2 Connect the connector of the CNC side to SIO.

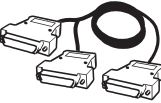

2 System equipment

(1) GOT

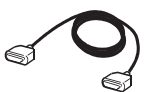

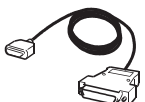
Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT) 
		RS-232 Communication Unit • For RS-232 communication	GT15-RS2-9P 
	2	RS-422 conversion unit *1 • For RS-422 communication	GT15-RS2T4-9P 
		RS-422 interface • For RS-422 communication	— (Built into GOT) 
		RS-422/485 Communication Unit • For RS-422 communication	GT15-RS4-9S 

*1 Connect it to the RS-232 interface (built into GOT). It cannot be mounted on GT155□.

(2) CNC

Image	No.	Name	Model name
	3	F311 cable	To be prepared by the user, referring the following.  MELDAS C6/C64 CONNECTION AND MAINTENANCE MANUAL (BNP-B2255) F311 Cable Production Drawing

(3) Cable

Image	No.	Name	Model name
	4	RS-232 cable • Between CNC and GOT	 Section 33.1.2 Connection Cable
	5	RS-422 cable • Between F311 cable and GOT	GT01-C30R4-25P(3m), GT01-C100R4-25P(10m), GT01-C200R4-25P(20m), GT01-C300R4-25P(30m)

33.1.2 Connection Cable

The RS-232 cable used for connecting the GOT to the PLC should be prepared by the user. The following provides connection diagrams for each cable, connector specifications and other information.

Model name		Connection cable
		RS-232 cable
CNC	MELDAS C6/C64	RS-232 cable

1 Connection diagram

(1) RS-232 cable 1)

GOT side		Cable connection and signal direction	CNC ^{*1}	
Signal name	Pin No.		Pin No.	Signal name
CD	1		1	GND
RD(RXD)	2		—	—
SD(TXD)	3		6	SD
ER(DTR)	4		—	—
SG	5		11	GND
DR(DSR)	6		—	—
RS(RTS)	7		16	RD
CS(CTS)	8		18	ER(DTR)
—	9		—	—

*1 For details of the CNC side connection, refer to the following manual.



MELDAS C6/C64 CONNECTION AND MAINTENANCE MANUAL BNP-B2255
MELDAS C6/C64 NETWORK MANUAL BNP-B2372

2 Connector specifications

(1) GOT side connector

Use the following as the RS-232 interface and RS-232 communication unit connector on the GOT. For the GOT side of the RS-232 cable, use a connector or connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (male) inch screw fixed type

(b) Connector model

GOT	Hardware version*1	Model	Manufacturer
GT1595-X	-	17LE-23090-27(D4CK)	DDK Ltd
GT1585V-S	-		
GT1585-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1585-STBD	-		
GT1575V-S	-		
GT1575-STBA	B	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	C	17LE-23090-27(D4CK)	DDK Ltd
GT1575-STBD	-		
GT1575-VTBA	D	GM-C9RMDU11	Honda Tsushin Kogyo Co., Ltd.
	E	17LE-23090-27(D4CK)	DDK Ltd
GT1575-VTBD	-		
GT1575-VN	-		
GT1572-VN	-		
GT1565-V	-		
GT1562-VN	-		
GT155□	-		
GT1155-Q, GT1150-Q	-		
GT15-RS2-9P	-	17LE-23090-27(D4CK)	

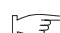
*1 For the confirmation method of GT15 hardware version, refer to the following manual.

 GT15 User's Manual

(2) CNC side connector

Use the connector compatible with the CNC side module.

For details, refer to the following manual.


 MELDAS C6/C64 CONNECTION AND MAINTENANCE MANUAL BNP-B2255
MELDAS C6/C64 NETWORK MANUAL BNP-B2372

3 Precautions when preparing a cable

The length of the RS-232 cable must be 15m or less.


33.1.3 Preparatory Procedures for Monitoring

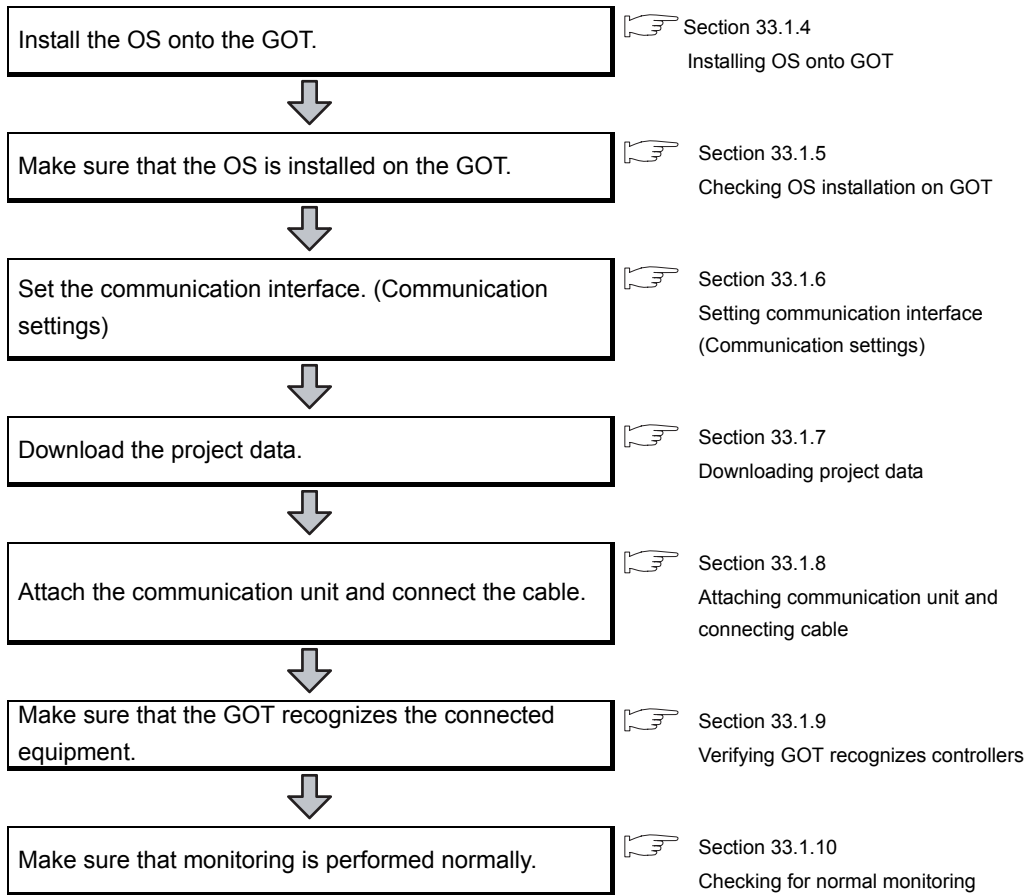
The following shows the procedures to be taken before monitoring and corresponding reference sections.



33.1.4 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

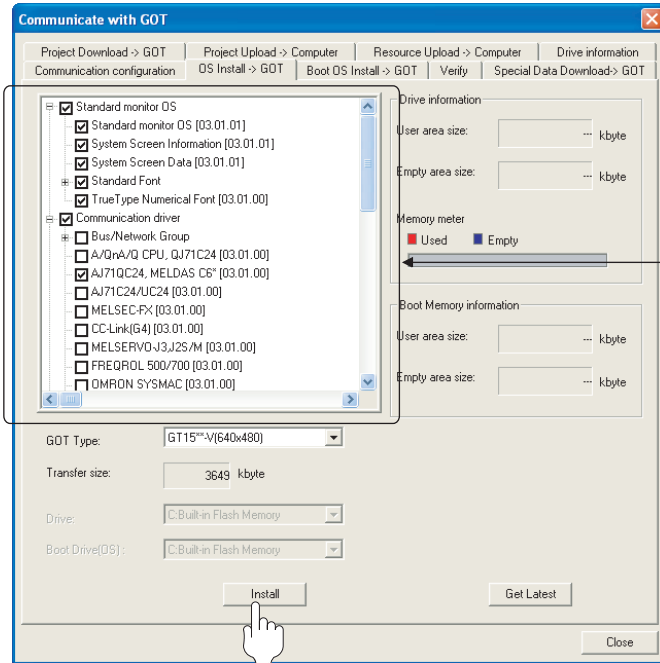 GT Designer2 Version □ Basic Operation/Data Transfer Manual




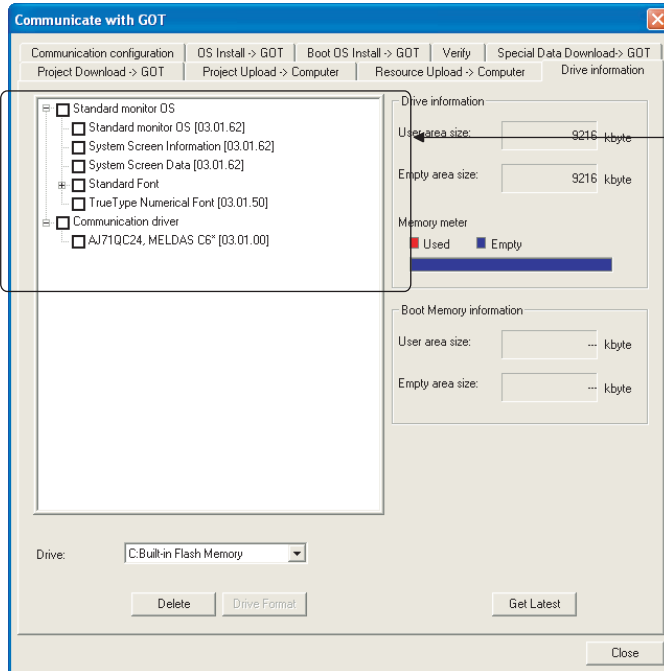
Check either of the following under the Communication driver.
AJ71C24, MELDAS C6*

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

33.1.5 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

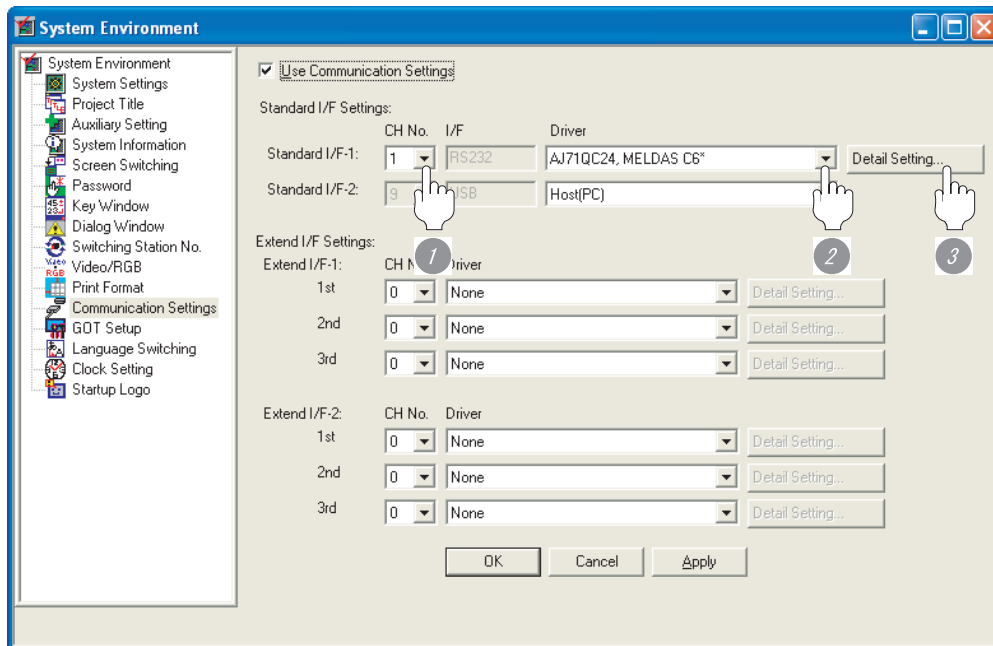
- 1) Standard monitor OS
- 2) Communication driver
 - AJ71C24, MELDAS C6*


33.1.6 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings




- 1 Set "1" to the channel No. used.
- 2 Set the driver to "AJ71QC24, MELDAS C6**"
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 19200bps> When the setting exceeds the limit of the connected equipment, communication is performed at the fastest transmission speed supported by the connected equipment	9600bps, 19200bps, 38400bps, 57600bps, 115200bps


Point

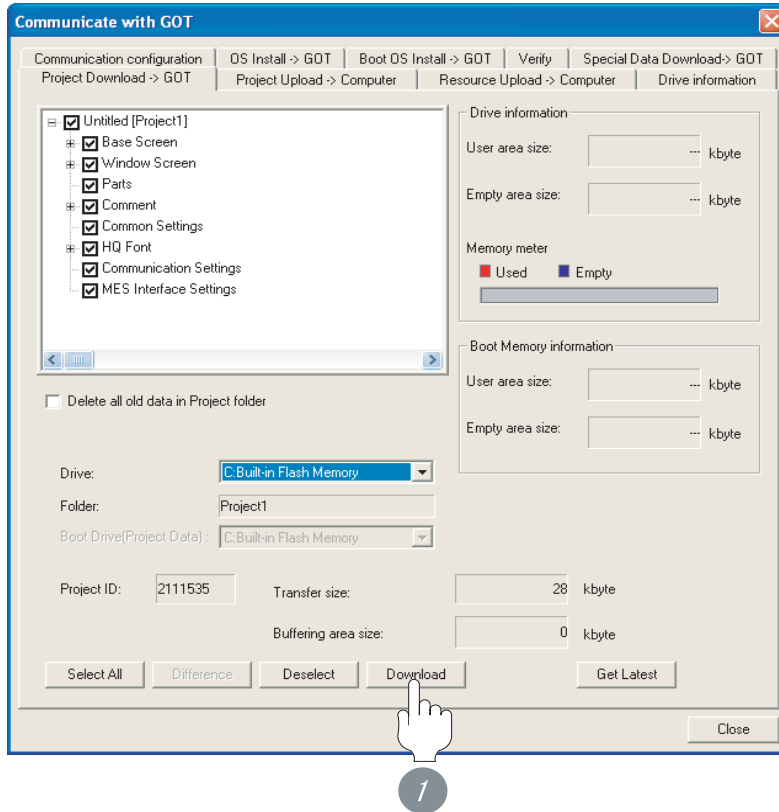
- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
For details on the Utility, refer to the following manual.
 GT User's Manual
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

33.1.7 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


33.1.8 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

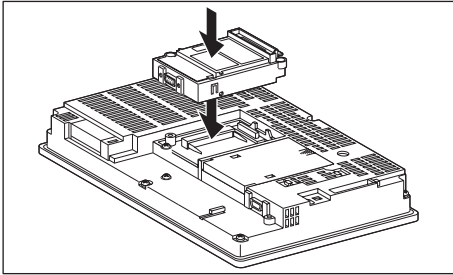1 Attaching the communication unit




- 1 Attach the serial communication unit to the extension unit connector on the GOT.



Serial communication unit

For details on the serial communication unit, refer to the following manual:

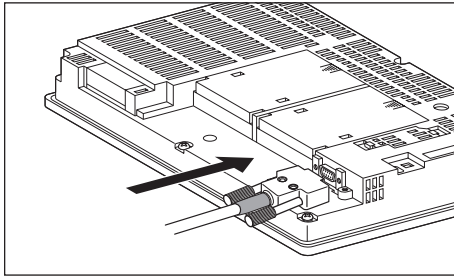
 [GT15 Serial Communication Unit User's Manual](#)

2 How to connect the cable

(1) How to connect the RS-232 cable


(a) For the GT15

- connection to the RS-232 interface




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

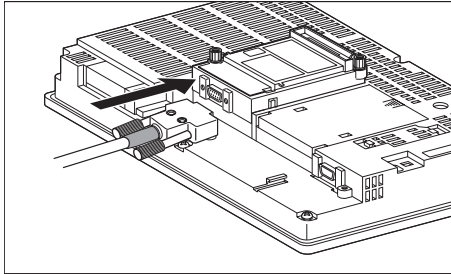- connection to the RS-232 communication unit



- 1 Connect the RS-232 cable to the RS-232 communication unit on the GOT.

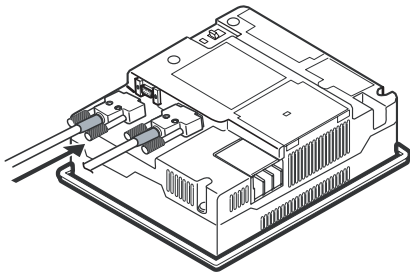(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.


(2) How to connect the RS-422 cable

(a) For the GT15

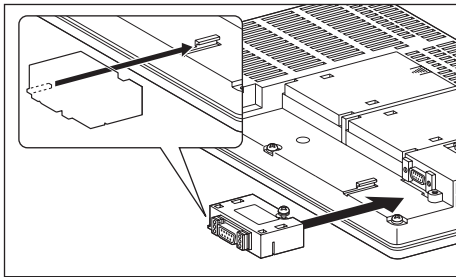- connection to the RS-232 interface




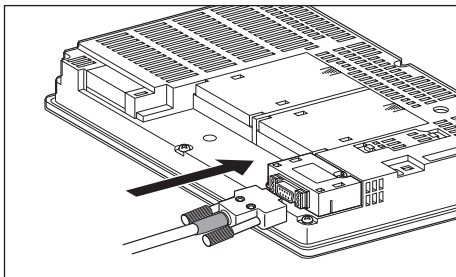- 1 Connect the RS-422 conversion unit to the RS-232 interface on the GOT.



- 2 Connect the RS-422 cable to the RS-422 conversion unit.

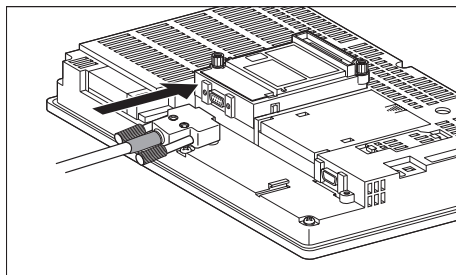- connection to the RS-422/485 communication unit



- 1 Connect the RS-422 cable to the RS-422/485 communication unit on the GOT.



RS-422 conversion unit

For details of the RS-422 conversion unit, refer to the following manual.

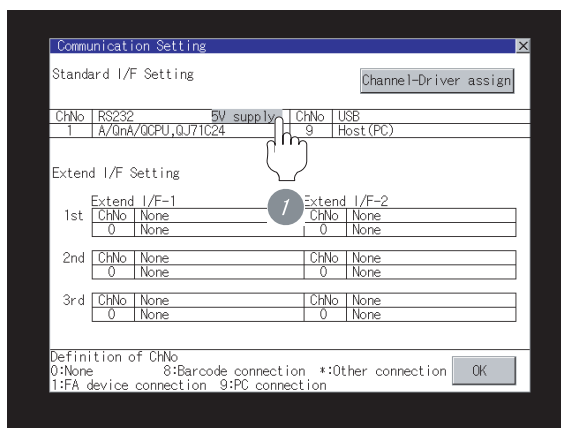
➡ GT15 RS-422 Conversion Unit User's Manual

When using the RS-422 conversion unit


On "Communication settings" on the utility, make setting so that 5V DC power is supplied to the RS-422 conversion unit from the RS-232 interface on the GOT. For details on the utility, refer to the following manual:

 GT User's Manual


- 1 Touch [5V supply].



- 2 Set [5V power supply] to "YES".

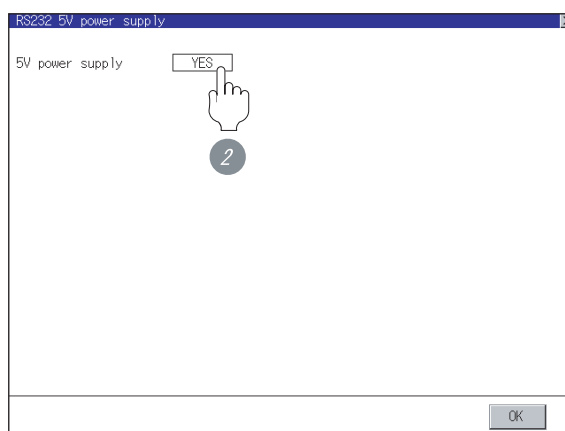

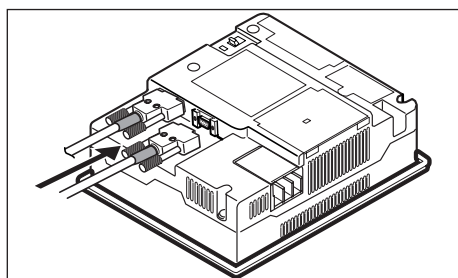(b) In the case of the GT11



- 1 Connect the RS-422 cable to the RS-422 interface on the GOT.

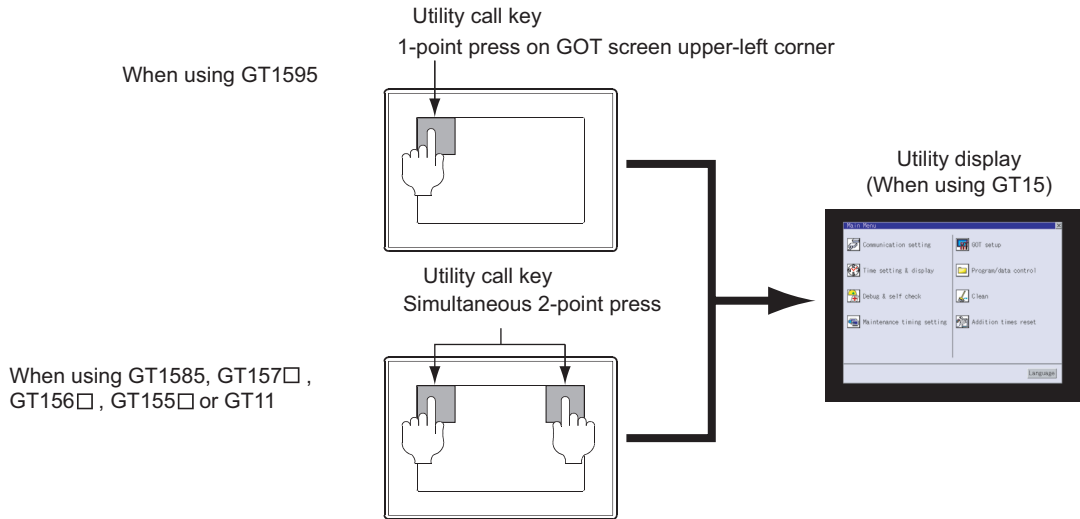
33.1.9 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

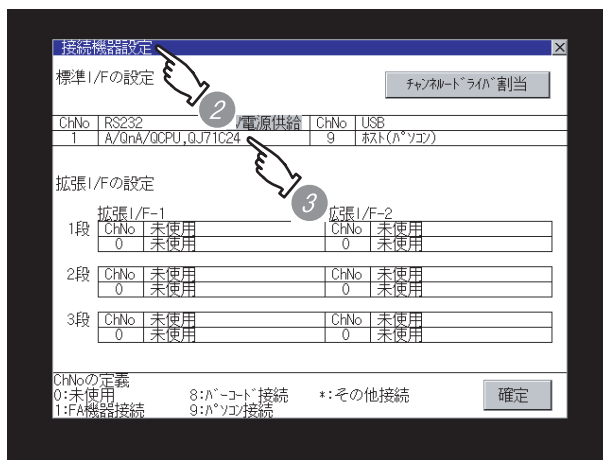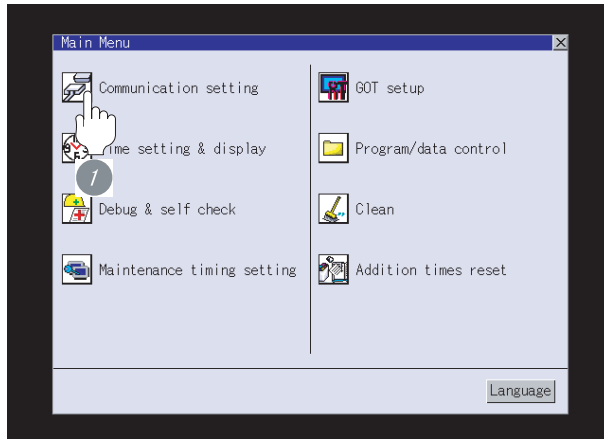 [GT□ User's Manual](#)



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver
AJ71C24, MELDAS C64*

4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 33.1.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

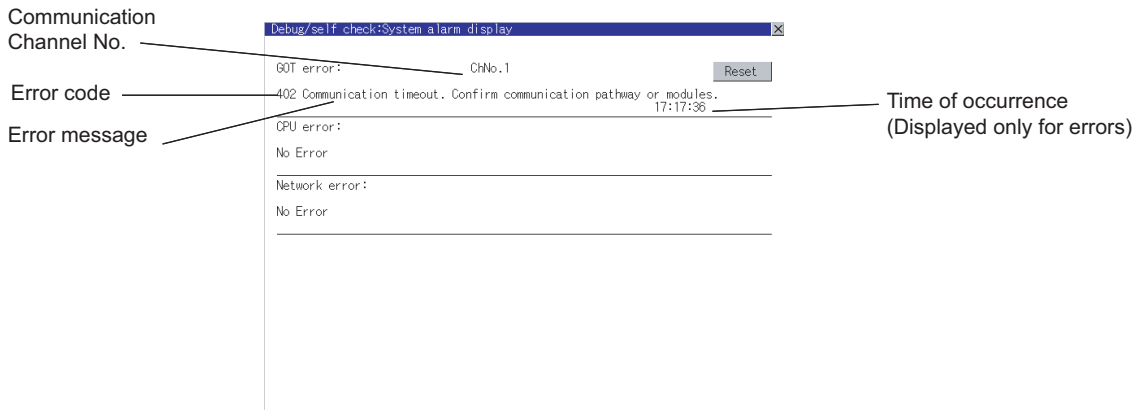
33.1.10 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT User's Manual (When using GT15)




Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version Screen Design Manual

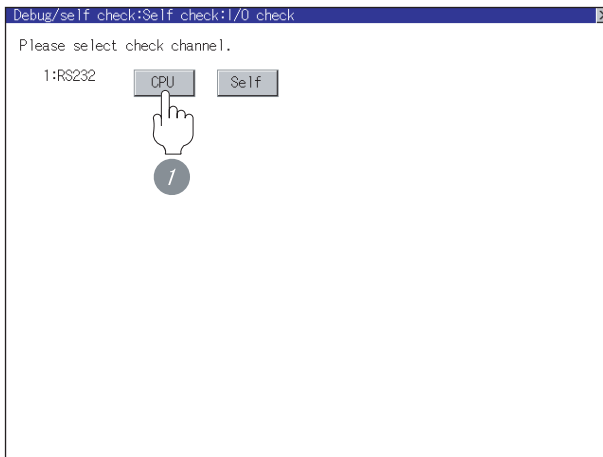


2 Perform an I/O check.


Whether the CNC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check]. For details on the I/O check, refer to the following manual:

 GT User's Manual



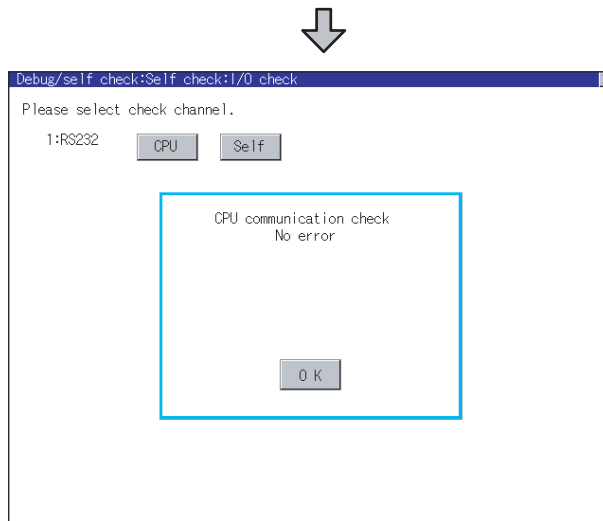- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected CNC.



- 2 When the communication screen ends successfully, the screen on the left is displayed.

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

33.1.11 Precautions

1 Communication settings

The communication driver names differs depending on the GT Designer2 versions.

GT Designer2 versions	
2.32J or before	2.43V or later
A/QnA/Q CPU, QJ71C24, MELDAS C6*	A/QnA/Q CPU, QJ71C24
AJ71QC24	AJ71QC24, MELDAS C6*



Upgrading the version of the Standard monitor OS

When upgrading the Standard monitor OS on the GOT, an installation of the Communication driver [AJ71QC24, MELDAS C6*] onto the GOT may be necessary, according to the message on GT Designer2.

2 Version of CNC

For MELDAS C6/C64, use NC system software version D0 or later.

33.2 MELSECNET/10 Connection (PLC To PLC Network)

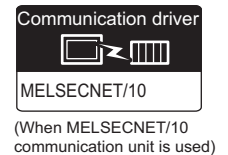
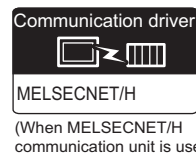


Connectable CNC is MELDAS C6/C64 series.
Select a system configuration suitable for your application.



- (1) Connectable network
Connect the GOT to the following network systems as an ordinary station.
 - MELSECNET/10 network system (PLC to PLC network) optical loop system
 - MELSECNET/10 network system (PLC to PLC network) coaxial bus system
- (2) Conventions used in this section
Numbers (e.g. 1) of 7 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.
Use these numbers as references when confirming models and applications.

33.2.1 System Configuration



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
63 (max.)	*1	<p>3 Expansion unit 5 Optical fiber cable 1</p>
31 (max.)	*1	<p>4 Expansion unit 6 Coaxial cable 2</p>



*1 The overall extension cable length and the length between stations vary depending on the cable type to be used and the total number of stations.

For details, refer to the following manuals.

- MELDAS C6/C64 CONNECTION AND MAINTENANCE MANUAL BNP-B2255
- MELDAS C6/C64 NETWORK MANUAL BNP-B2373

2 System equipment

(1) GOT

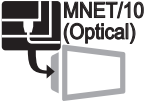

Image	No.	Name	Model name
	1	MELSECNET/H communication unit *1 • For optical loop system	GT15-J71LP23-25
		MELSECNET/10 communication unit • For optical loop system	GT15-75J71LP23-Z
	2	MELSECNET/H communication unit *1 • For coaxial bus system	GT15-J71BR13
		MELSECNET/10 communication unit • For coaxial bus system	GT15-75J71BR13-Z

*1 Specify the MELSECNET/10 Mode as the Communication Settings.





For details of settings, refer to the following.

 Section 33.1.6 Setting communication interface (Communication settings)

(2) CNC


Image	No.	Name	Model name
	3	Expansion unit	FCU6-EX879 (Optical interface)
	4	Expansion unit	FCU6-EX878 (Coaxial interface)

(3) Cable

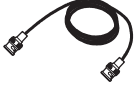Image	No.	Name	Model name
	5	Optical fiber cable	For details of the optical fiber cable, refer to the following manual.  <ul style="list-style-type: none"> • MELDAS C6/C64 CONNECTION AND MAINTENANCE MANUAL BNP-B2255 • MELDAS C6/C64 NETWORK MANUAL BNP-B2373
	6	Coaxial cable	For details of the coaxial cable, refer to the following manual.  <ul style="list-style-type: none"> • MELDAS C6/C64 CONNECTION AND MAINTENANCE MANUAL BNP- B2255 • MELDAS C6/C64 NETWORK MANUAL BNP-B2373

33.2.2 Preparatory Procedures for Monitoring

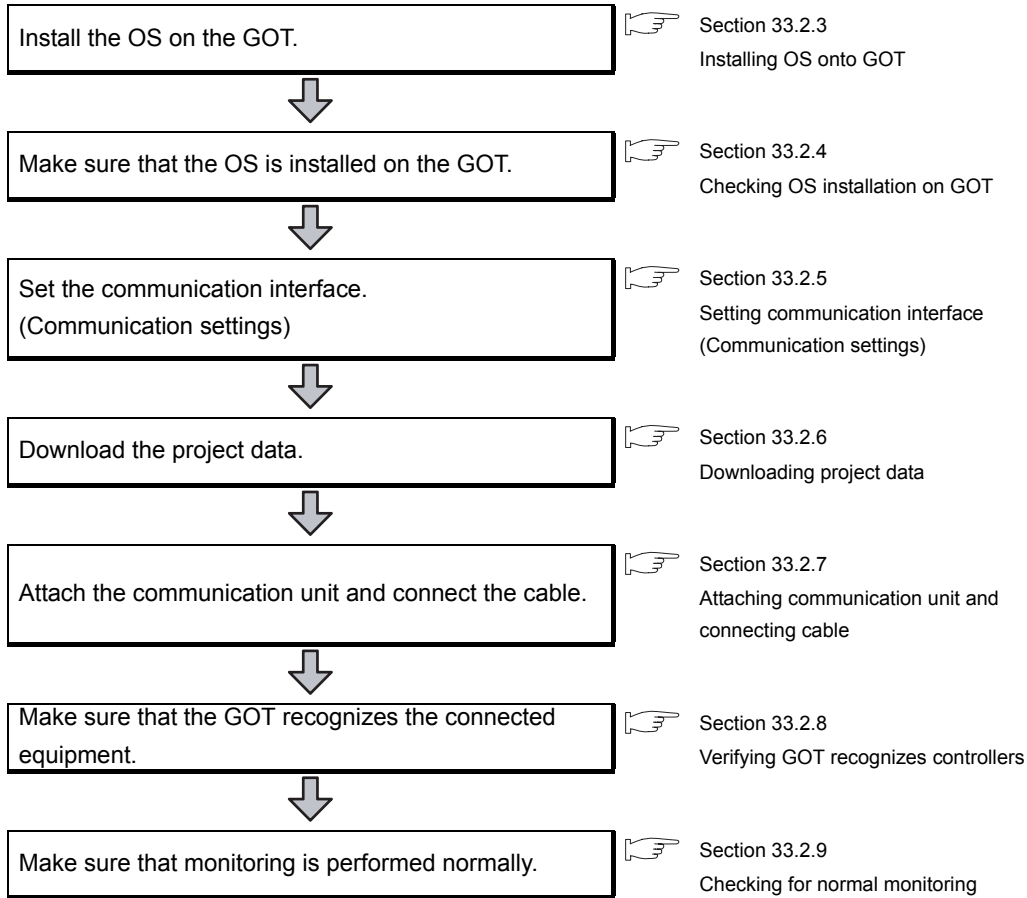The following shows the procedures to be taken before monitoring and corresponding reference sections.



Confirming the CNC side setting

This section explains the GOT side setting.


When confirming the CNC side setting, refer to the following.

Section 33.2.10 CNC Side Settings

33.2.3 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

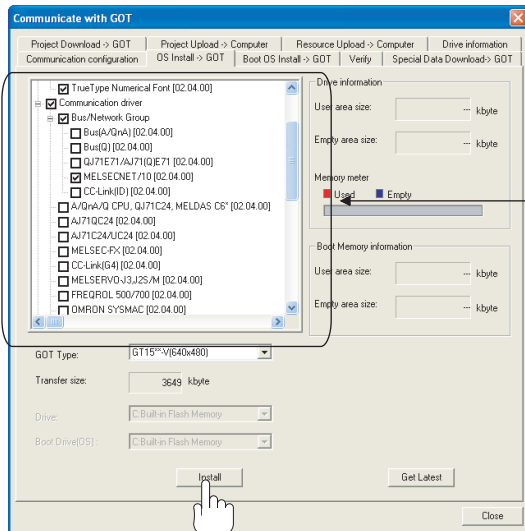 GT Designer2 Version □ Basic Operation/Data Transfer Manual




Check the following under the Communication driver.

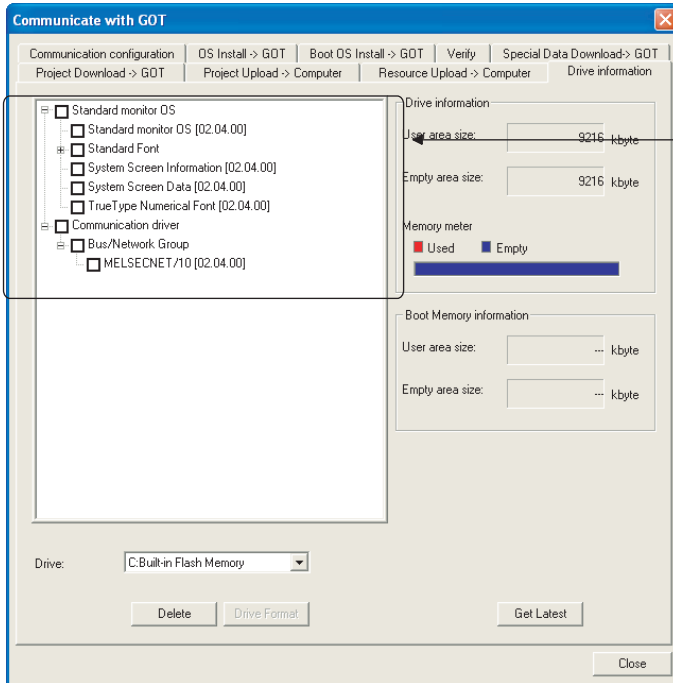
- When using the MELSECNET/10 communication unit
: MELSECNET/10
- When using the MELSECNET/H communication unit
: MELSECNET/H

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

33.2.4 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
 - 2) Communication driver
- When using the MELSECNET/10 communication unit : MELSECNET/H
 - When using the MELSECNET/H communication unit : MELSECNET/10

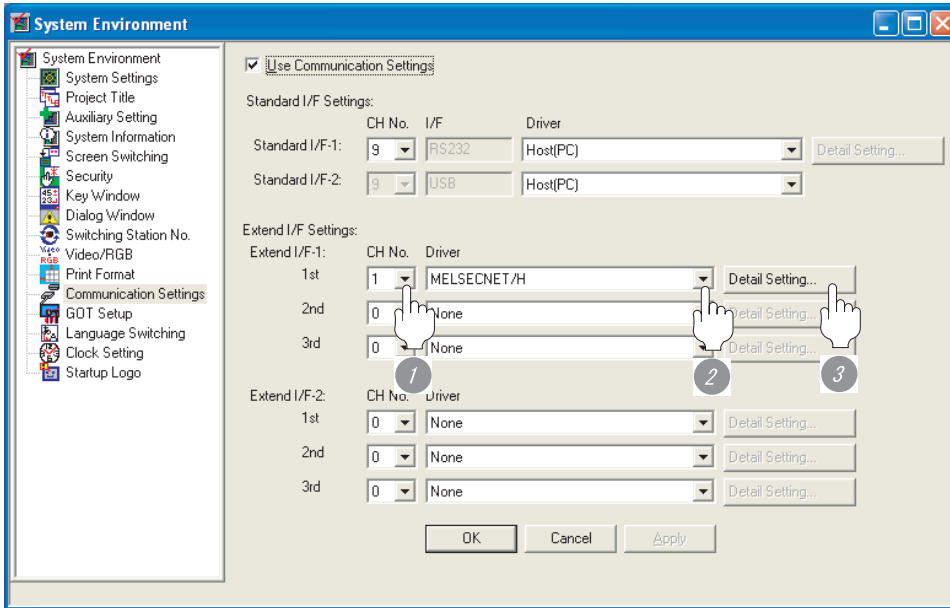
33.2.5 Setting communication interface (Communication settings)

To configure the communication interface of the GOT, use the [Communication settings] of GT Designer2 and the switches of the communication unit.

Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



1 Set "1" to the channel No. used.

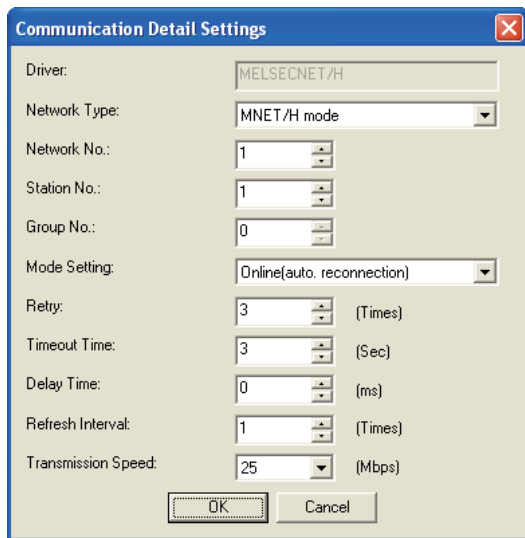
2 Set the driver.

- When using the MELSECNET/H communication unit. : "MELSECNET/H"
- When using the MELSECNET/10 communication unit. : "MELSECNET/10"

3 Perform the detailed settings for the driver. ( 2 Communication detail settings)


2 Communication detail settings

(1) MELSECNET/H




Item	Description	Range
Network Type	Set the network type. <Default: MNET/H mode>	<ul style="list-style-type: none"> • MNET/H mode • MNET/10 mode • MNET/H EXT mode
Network No.	Set the network No. <Default: 1>	• 1 to 239
Station No.	Set the station No. of the GOT. <Default: 1>	• 1 to 64
Mode Setting	Set the operation mode of the GOT. <Default: Online (auto. reconnection)>	<ul style="list-style-type: none"> • Online (auto. reconnection) • Offline • Test between slave station • Self-loopback test • Internal self-loopback test • H/W test
Retry	Set the number of retries to be performed when a communication timeout occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Timeout time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 90 Sec
Delay Time	Set the delay time for reducing the load of the network/destination PLC. <Default: 0ms>	0 to 300ms
Refresh Interval	Set the number of refreshes to secure the send/receive data in station units during communication. <Default: 1 Time> Valid when "Secured data send/Secured data receive" is marked by the control station side network parameters of the MELSECNET/H network system.	1 to 1000 Times
Transmission Speed	Set the communication transmission speed. <Default: 25Mbps>	10Mbps/25Mbps

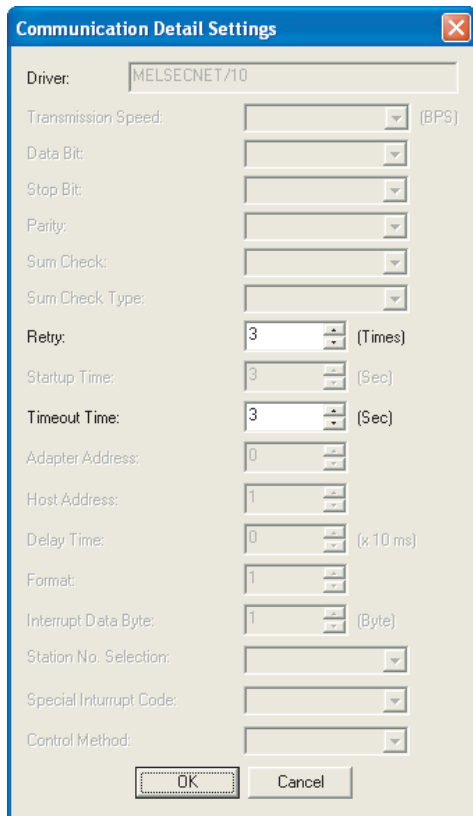(2) MELSECNET/10



Item	Description	Range
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec

Point 

- (1) When MELSECNET/H communication unit is used
When connecting to the MELSECNET/10 network, specify "MELSECNET/10 Mode" as "Network Type".
- (2) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
For details on the Utility, refer to the following manual.
 GT User's Manual
- (3) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

3 Switch setting (GT15-75J71P23-Z, GT15-75JBR13-Z)

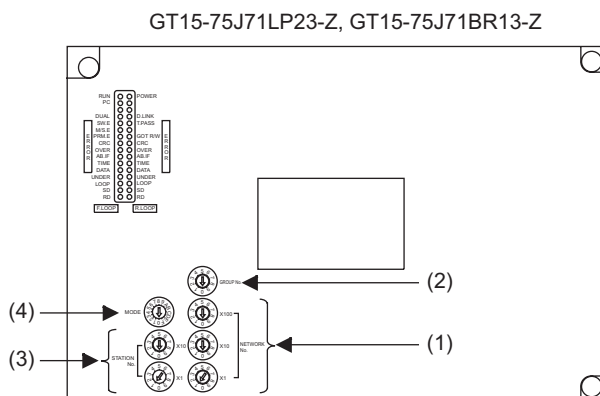


Switch setting of the communication unit

When using the MELSECNET/H communication unit, the switch setting is not needed.

For details of each setting switch and LED, refer to the following manual.

GT15 MELSECNET/10 communication unit User's Manual



(1) Network number setting switch


Network number setting switch	Description	Setting
	<p>Set the network No. of the MELSECNET/10 communication unit. <Default: 001></p>	1 to 239

(2) Group number setting switch


Group number setting switch	Description	Setting
	<p>Set the group No. of the MELSECNET/10 communication unit. <Default: 0></p>	0: No group setting (fixed) ^{*1}

*1 The GOT does not use the group number.
Specify "0".

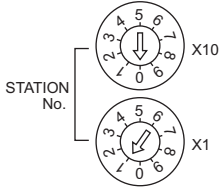(3) Station number setting switch

Station number setting switch	Description	Setting
	Set the station No. of the MELSECNET/10 communication unit. Set to not duplicate other stations in the network. <Default: 01>	1 to 64: GT15-75J71LP23-Z 1 to 32: GT15-75J71BR13-Z


(4) Mode setting switch

Mode setting switch	Description	Setting
	On-line <Default: 0>	0

Point

(1) Switch setting example

For the switch setting example, refer to the following.

 Section 6.3 PLC Side Setting

(2) When the switch setting is changed

When changing the switch setting after mounting the MELSECNET/10 communication unit to the GOT, reset the GOT.

(3) Self check test

Select "3" to "9" as the mode setting switch to provide a self check test of the MELSECNET/10 communication unit.


For details, refer to the following manual.

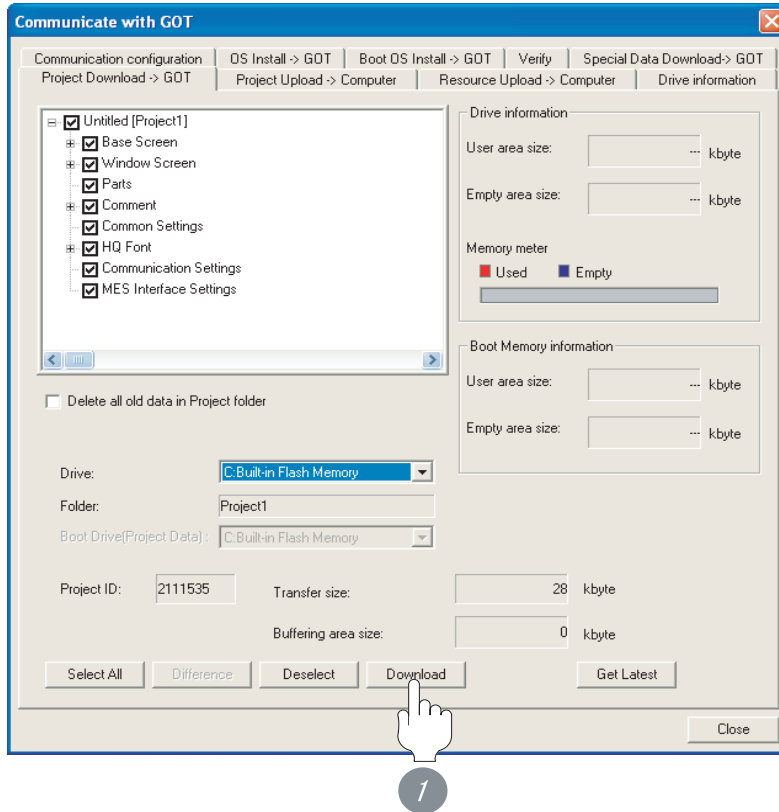
 GT15 MELSECNET/10 communication unit User's Manual

33.2.6 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.

33.2.7 Attaching communication unit and connecting cable


Point

Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

1 Attaching the communication unit

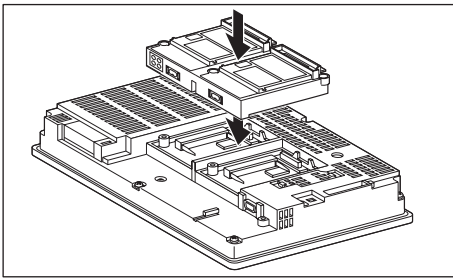(1) When MELSECNET/H communication unit is used



1 Mount the MELSECNET/H communication unit on the extension unit connector of the GOT.

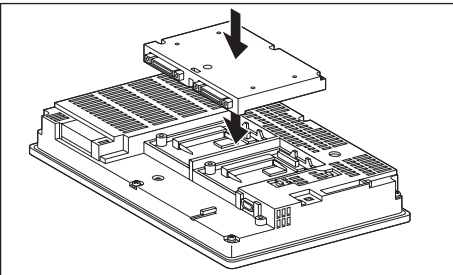
Point

MELSECNET/H communication unit


For the details of mounting the MELSECNET/H communication unit, refer to the following manual.

➔ GT15 MELSECNET/H communication unit User's Manual

(2) When MELSECNET/10 communication unit is used



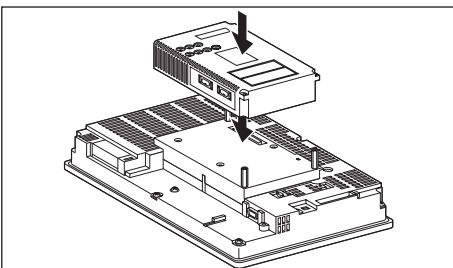1 Mount the interface converter unit to the extension unit connector of the GOT.



2 Mount the MELSECNET/10 communication unit to the interface converter unit.

Point

MELSECNET/10 communication unit

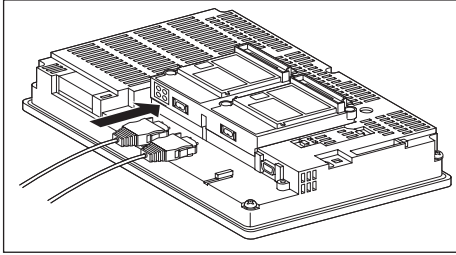
For details of the MELSECNET/10 communication unit, refer to the following manual.

➔ GT15 MELSECNET/10 communication unit User's Manual

2 Connecting the cable

(1) Optical fiber cable


(a) Optical fiber cable connection method



- 1 Mount the optical fiber cable to the MELSECNET/H communication unit or the MELSECNET/10 communication unit.


(b) Wiring diagram

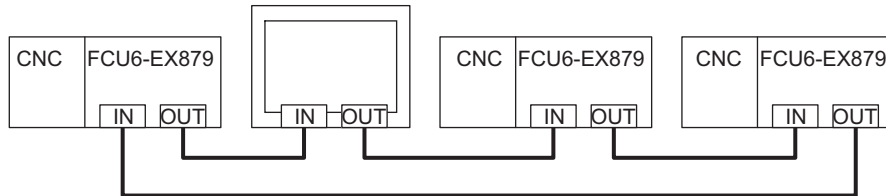When connecting the adjacent stations, connect the IN with the adjacent OUT as follows.




(2) Coaxial cable

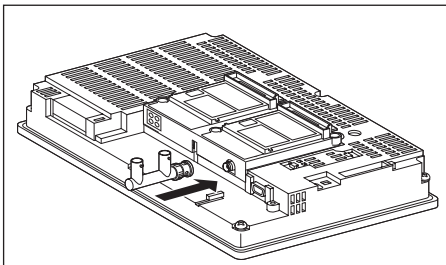(a) Coaxial cable connection method



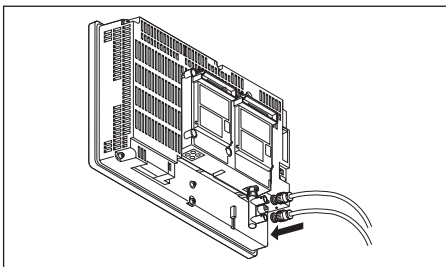- 1 Mount the F-type connector to the MELSECNET/H communication unit or the MELSECNET/10 communication unit.



- 2 Mount the coaxial cable to the F-type connector. If the MELSECNET/H communication unit or the MELSECNET/10 communication unit is terminal station of the network, be sure to connect a terminating resistor (sold separately: A6RCON-R75) to the F-type connector.

Point

Precautions for connection of coaxial cable

Before connecting or disconnecting the coaxial connector, touch a grounded metal object to discharge the static electricity from the human body.

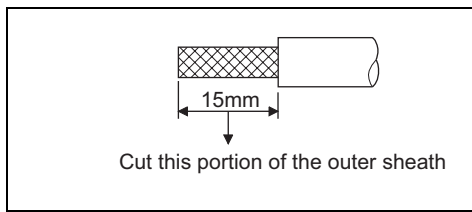
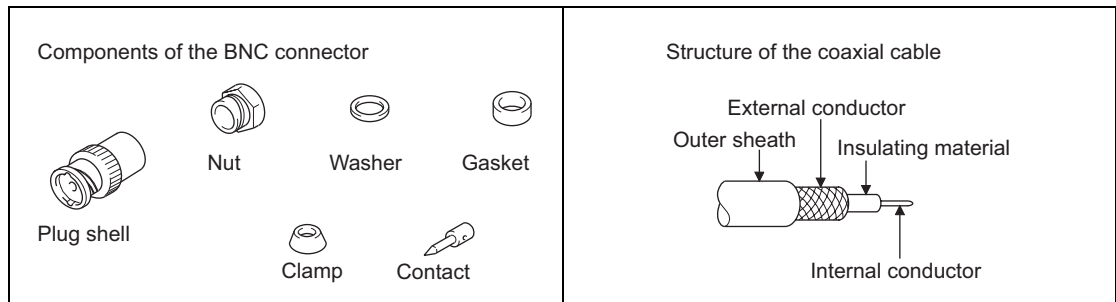
Failure to do so may result in a MELSECNET/H or MELSECNET/10 communication unit malfunction.

(a) Coaxial cable connector connection method


The following describes the method for connecting the BNC connector (connector plug for coaxial cable) and the cable.

! CAUTION


- Solder the coaxial cable connectors properly. Insufficient soldering may result in malfunctions.



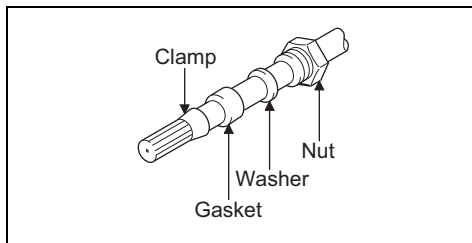- 1 Remove the external sheath of the coaxial cable with dimensions as shown on the left.




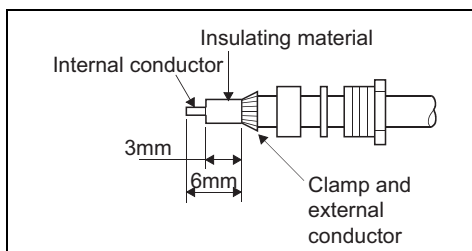- 2 Pass the nut, washer, gasket, and clamp through the coaxial cable as shown on the left and loosen the external conductor.




- 3 Cut the external conductor, insulating material, and internal conductor with the dimensions as shown on the left.

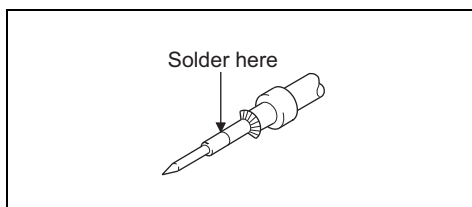Note that the external conductor should be cut to the same dimension as the tapered section of the clamp and smoothed down to the clamp.



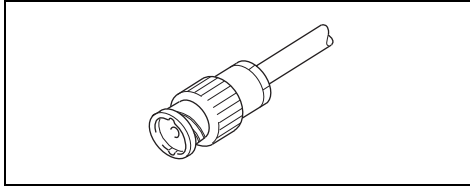- 4 Solder the contact to the internal conductor.



- 5 Insert the connector assembly shown in 4 into the plug shell and screw the nut into the plug shell.

Point

Precautions for soldering

Note the following precautions when soldering the internal conductor and contact.

- Make sure that the solder does not bead up at the soldered section.
- Make sure there are no gaps between the connector and cable insulator or they do not cut into each other.
- Perform soldering quickly so the insulation material does not become deformed.

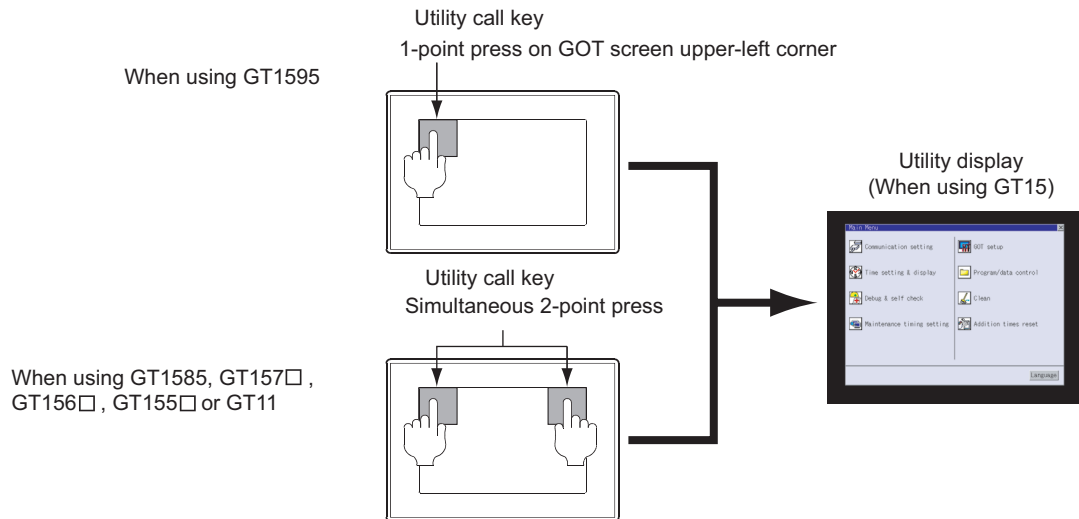
33.2.8 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

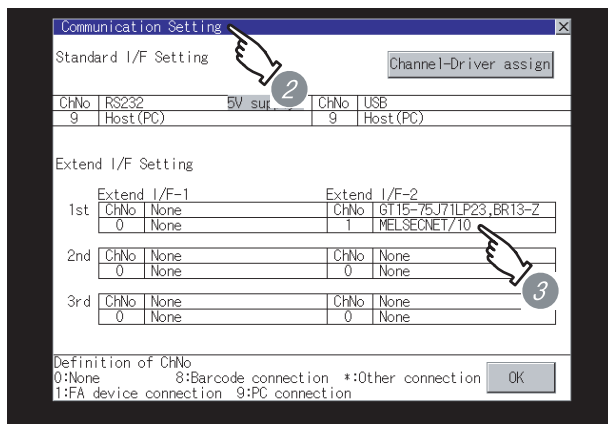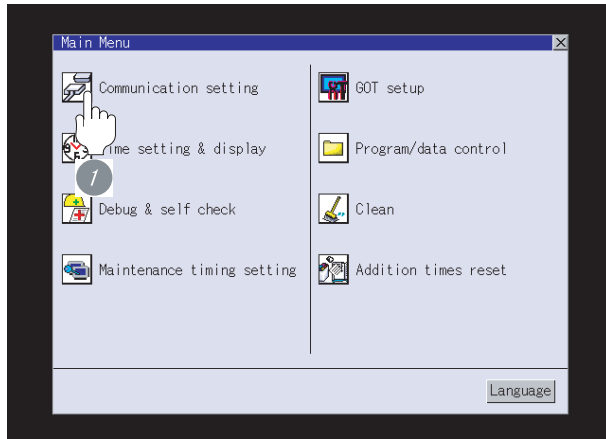 [GT□ User's Manual](#)



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver:
 (When using the MELSCNET/H communication unit) : MELSECNET/H
 (When using the MELSCNET/10 communication unit) : MELSECNET/10

4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 33.2.2 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

33.2.9 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

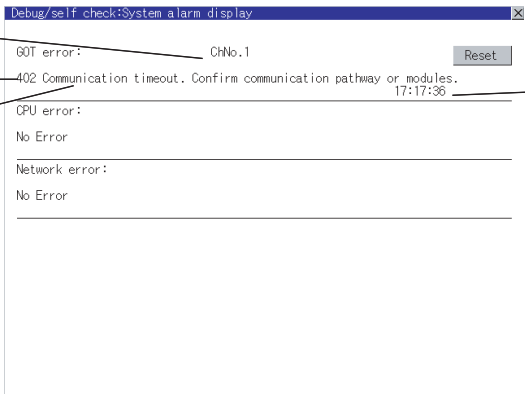
 GT□ User's Manual (When using GT15)

Communication Channel No. ————

Error code ————

Error message ————

Time of occurrence (Displayed only for errors)




Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

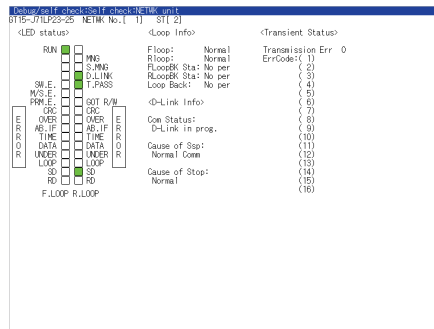


2 Confirming the communication state with network unit by GOT

The communication state between the GOT and the MELSECNET/10 network system can be confirmed by the Utility screen of the GOT.

For details on the operation method of the GOT Utility screen, refer to the following manual


 GT15 User's Manual



3 Confirming the CNC side setting

When connecting the GOT, setting is required for the CNC side.

Confirm if the CNC side setting is correct.

 Section 33.2.10 CNC Side Settings

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

33.2.10 CNC Side Settings

1 Parameter Setting

Set parameters related to MELSECNET/10 with MELSEC's peripheral devices in the same way as parameter setting of MELSEC CPU, and write them on CNC by PC. However, in the case of using the default parameters or not requiring separate settings due to normal stations, it is not necessary to set the network


(1) Control Station Parameter

If you wish to place the control station in CNC and set the common parameters, set the network parameters by peripheral device and write them on CNC. An example of parameter setting by GPPW is as follows.


Set the first I/O No. as follows according to the expansion slot to which the unit is inserted.

(a) Start I/O No.

Slot	Start I/O No.
EXT1	0200
EXT2	0280

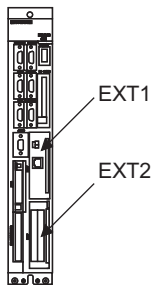

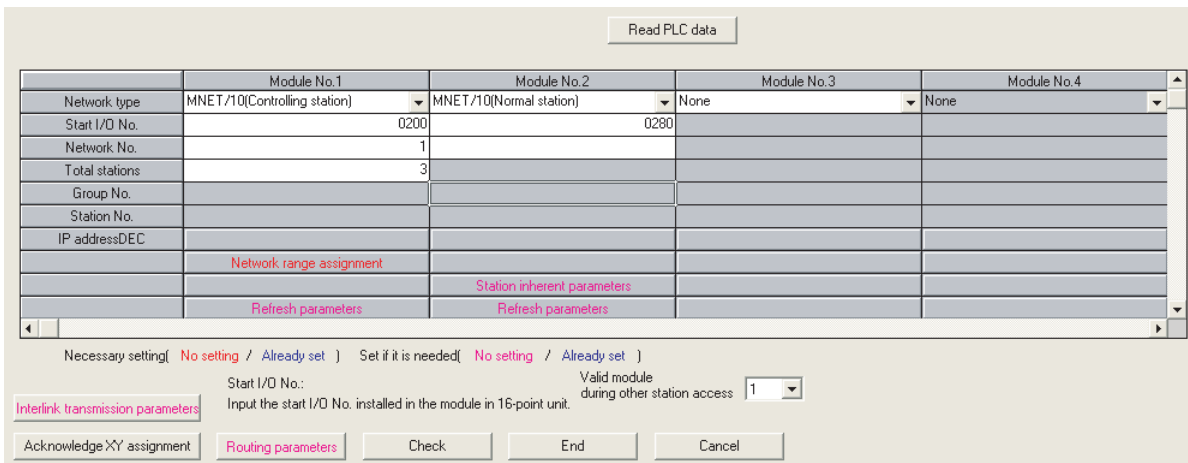(b) Example of GX Developer setting



	Module No.1	Module No.2	Module No.3	Module No.4
Network type	MNET/10(Controlling station)	MNET/10(Normal station)	None	None
Start I/O No.	0200	0280		
Network No.	1			
Total stations	3			
Group No.				
Station No.				
IP address:DEC				
	Network range assignment	Station inherent parameters		
	Refresh parameters	Refresh parameters		

Necessary setting[No setting / Already set] Set if it is needed[No setting / Already set]

Start I/O No.: Input the start I/O No. installed in the module in 16-point unit. Valid module during other station access: 1

Interlink transmission parameters

Acknowledge XY assignment Routing parameters Check End Cancel

For details of the parameter setting, refer to the following.

☞ MELDAS C6/C64 NETWORK MANUAL BNP-B2373

(2) Normal Station Parameter

As for normal stations, it is not necessary to set parameters unless separate settings are required. The refresh parameters are set and written as required. In this case, the parameter setting of the first I/O No. is the same as in the case of the control station.

2 Expansion unit settings

(1) FCU6-EX879 (Optical fiber cable)

Switch layout	No.	Switch name	Settings				
	1)	Condition setting switch	Set the operation condition.				
			SW	Description	OFF	ON	
		1	Network type ^{*1}	Inter-PC net (PC)	Remote I/O net		
		2	Station type ^{*4}	Normal station (N.ST)	Control station (MNG)		
		3	Used parameter ^{*2}	Common parameters (PRM)	Default parameter (D.PRM)		
		4	Number of stations ^{*2} (Valid when SW3 is ON)	OFF	ON	OFF	ON
		5		8 stations	16 stations	32 stations	64 stations
		6	B/W total points ^{*2} (Valid when SW3 is ON)	OFF	ON	OFF	ON
7	2K points	4K points		6K points	8K points		
8	Not used	Always OFF					
	2)	Station number switch	Station number setting ^{*2*3} <Setting range> 01 to 64: Station number Other than 01 to 64: Setting error				
	3)	Settings switch of group NO.	Group number setting Not used, fixed to 0				
	4)	Settings switch of Network NO.	Network number setting ^{*2} <Setting range> 001 to 255: Network number Other than 001 to 255: Setting error				
	5)	Mode setting switch	Mode setting ^{*2} 0: Online 1: Cannot be used 2: Offline 3 to F: Test mode				

*1 Set the network type to the PLC to PLC network.

*2 Set as necessary.

*3 Set the station No. not to overlap with that of other units.

*4 Set the station type to the control station.

*1 For details of the parameter setting, refer to the following.

MELDAS C6/C64 NETWORK MANUAL BNP-B2373

(2) FCU6-EX878 (Coaxial cable)

Switch layout	No.	Switch name	Settings																																																																
	1)	Condition setting switch	<p>Set the operation condition.</p> <table border="1"> <thead> <tr> <th>SW</th> <th>Description</th> <th>OFF</th> <th>ON</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Network type^{*1}</td> <td>Inter-PC net (PC)</td> <td>Remote I/O net</td> </tr> <tr> <td>2</td> <td>Station type^{*4}</td> <td>Normal station (N.ST)</td> <td>Control station (MNG)</td> </tr> <tr> <td>3</td> <td>Used parameter^{*2}</td> <td>Common parameters (PRM)</td> <td>Default parameter (D.PRM)</td> </tr> <tr> <td>4</td> <td rowspan="2">Number of stations^{*2} (Valid when SW3 is ON)</td> <td>OFF</td> <td>8 stations</td> <td>ON</td> <td>16 stations</td> <td>OFF</td> <td>32 stations</td> <td>ON</td> <td>64 stations</td> </tr> <tr> <td>5</td> <td>OFF</td> <td>2K points</td> <td>ON</td> <td>4K points</td> <td>OFF</td> <td>6K points</td> <td>ON</td> <td>8K points</td> </tr> <tr> <td>6</td> <td rowspan="2">B/W total points^{*2} (Valid when SW3 is ON)</td> <td>OFF</td> <td>2K points</td> <td>ON</td> <td>4K points</td> <td>OFF</td> <td>6K points</td> <td>ON</td> <td>8K points</td> </tr> <tr> <td>7</td> <td>OFF</td> <td>points</td> <td>ON</td> <td>points</td> <td>ON</td> <td>points</td> <td>ON</td> <td>points</td> </tr> <tr> <td>8</td> <td>Not used</td> <td colspan="8">Always OFF</td> </tr> </tbody> </table>	SW	Description	OFF	ON	1	Network type ^{*1}	Inter-PC net (PC)	Remote I/O net	2	Station type ^{*4}	Normal station (N.ST)	Control station (MNG)	3	Used parameter ^{*2}	Common parameters (PRM)	Default parameter (D.PRM)	4	Number of stations ^{*2} (Valid when SW3 is ON)	OFF	8 stations	ON	16 stations	OFF	32 stations	ON	64 stations	5	OFF	2K points	ON	4K points	OFF	6K points	ON	8K points	6	B/W total points ^{*2} (Valid when SW3 is ON)	OFF	2K points	ON	4K points	OFF	6K points	ON	8K points	7	OFF	points	ON	points	ON	points	ON	points	8	Not used	Always OFF							
		SW	Description	OFF	ON																																																														
		1	Network type ^{*1}	Inter-PC net (PC)	Remote I/O net																																																														
		2	Station type ^{*4}	Normal station (N.ST)	Control station (MNG)																																																														
		3	Used parameter ^{*2}	Common parameters (PRM)	Default parameter (D.PRM)																																																														
		4	Number of stations ^{*2} (Valid when SW3 is ON)	OFF	8 stations	ON	16 stations	OFF	32 stations	ON	64 stations																																																								
		5		OFF	2K points	ON	4K points	OFF	6K points	ON	8K points																																																								
		6	B/W total points ^{*2} (Valid when SW3 is ON)	OFF	2K points	ON	4K points	OFF	6K points	ON	8K points																																																								
7	OFF	points		ON	points	ON	points	ON	points																																																										
8	Not used	Always OFF																																																																	
2)	Station number switch	<p>Station number setting^{*2*3}</p> <p><Setting range></p> <p>01 to 64: Station number</p> <p>Other than 01 to 64: Setting error</p>																																																																	
3)	Setting switch of group number	<p>Group number setting</p> <p>Not used, fixed to 0</p>																																																																	
4)	Setting switch of network number	<p>Network number setting^{*2}</p> <p><Setting range></p> <p>001 to 255: Network number</p> <p>Other than 001 to 255: Setting error</p>																																																																	
5)	Mode setting switch	<p>Mode setting^{*2}</p> <p>0: Online</p> <p>1: Cannot be used</p> <p>2: Offline</p> <p>3 to F: Test mode</p>																																																																	

*1 Set the network type to the PLC to PLC network.

*2 Set as necessary.

*3 Set the station No. not to overlap with that of other units.

*4 Set the station type to the control station.

*1 For details of the parameter setting, refer to the following.

MELDAS C6/C64 NETWORK MANUAL BNP-B2373

1 Network configuration


Use the MELSECNET/10 mode of MELSECNET/H (PLC to PLC network) or MELSECNET/10 (PLC to PLC network) to configure a network including the GOT.

- (1) The following networks including the GOT cannot be configured.
 - MELSECNET/10 (Remote I/O network)
 - MELSECNET/H (Remote I/O network)(2)
- (2) When configuring the network (MELSECNET/H (PLC to PLC network) including the GOT, refer to the following.

 Chapter 5 MELSECNET/H CONNECTION (PLC TO PLC NETWORK)

2 Monitoring range

Only CNC of the same networks No. can be monitored in GOT.
For details, refer to the following manual.

 GT Designer2 Version□ Screen Design Manual

3 Version of CNC

For MELDAS C6/C64, use NC system software version E0 or later.

33.3 CC-Link Connection (Intelligent Device Station)



Connectable CNC is MELDAS C6/C64 series.
Select a system configuration suitable for your application.




Conventions used in this section


Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.

33.3.1 System Configuration



(When MODEL GT15-J61BT13
CC-Link communication unit is used)



(When MODEL GT15-75J61BT13-Z
CC-Link communication unit is used)

1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
26 (max.)	*1	




*1 Max. overall cable length and the length between stations vary depending on the cable type to be used and transmission speed.

For details, refer to the following manuals.

- MELDAS C6/C64 CONNECTION AND MAINTENANCE MANUAL BNP-B2255
- MELDAS C6/C64 NETWORK MANUAL BNP-B2373

2 System equipment


(1) GOT

Image	No.	Name	Model name
	1	MODEL GT15-J61BT13 CC-Link communication unit *2 • Intelligent device station	GT15-J61BT13 
		MODEL GT15-75J61BT13-Z CC-Link communication unit • Intelligent device station	GT15-75J61BT13-Z 



*2 Specify Ver.1 as the mode setting in the Communication Settings to use it.
For details of the settings, refer to the following the manual.

 Section 31.3.5 Setting communication interface (Communication settings)

(2) CNC


Image	No.	Name	Model name
	2	Expansion unit	FUC6-HR865

(3) Cable

Image	No.	Name	Model name
	3	CC-Link dedicated cable	For the specifications and inquiries of the CC-Link dedicated cable, refer to the following.  CC-Link Partner Association's home page: http://www.cc-link.org/

33.3.2 Preparatory Procedures for Monitoring

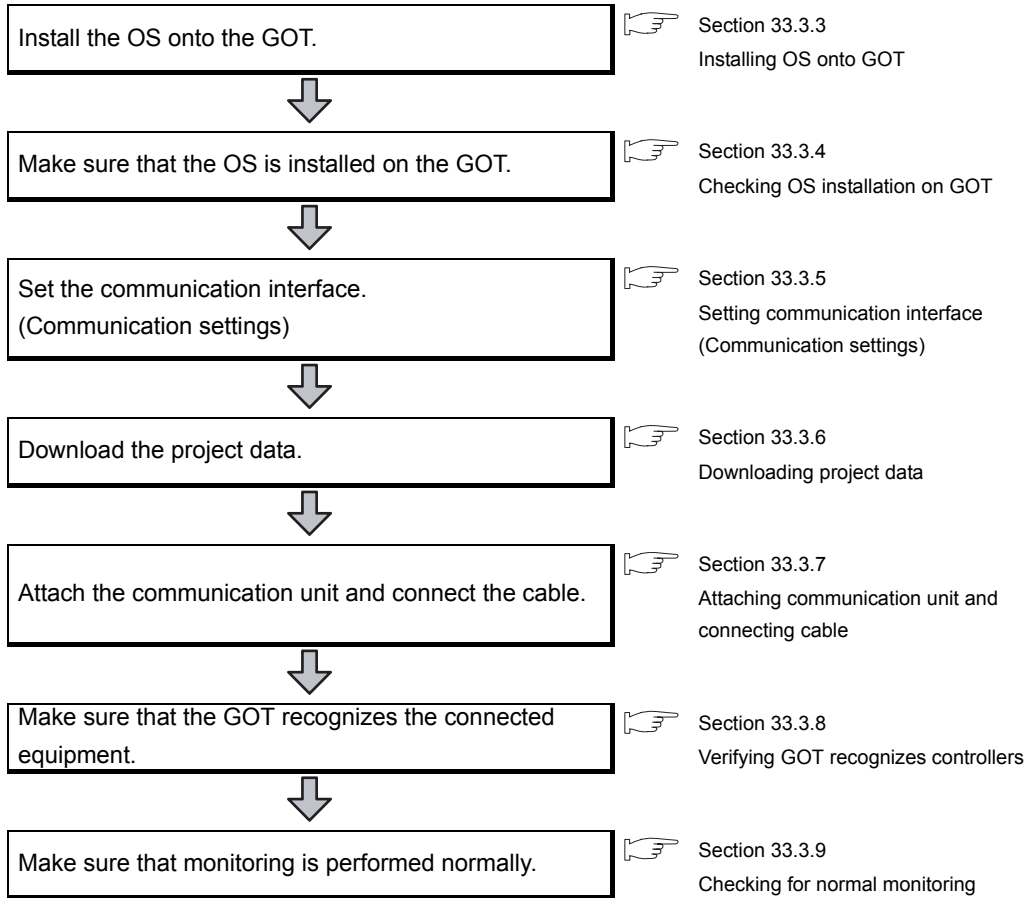The following the procedures to be taken before monitoring and corresponding reference sections.




Confirming the CNC side setting

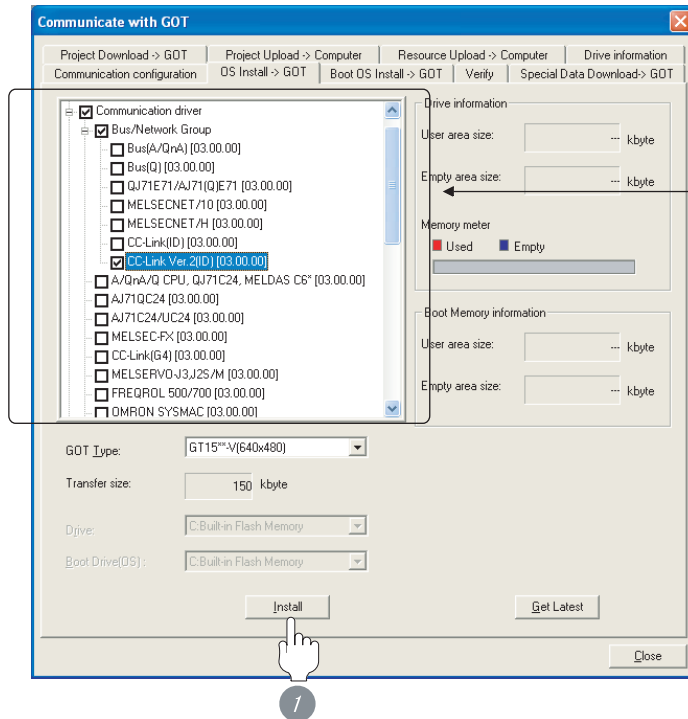
This section explains the GOT side setting.
When confirming the CNC side setting, refer to the following.

☞ Section 33.3.10 CNC Side Settings

33.3.3 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




Check the following communication driver as necessary.

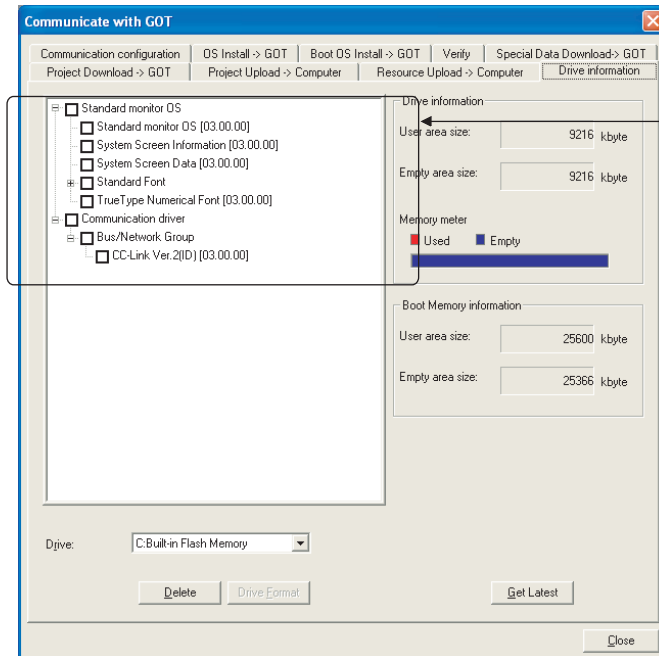
- When MODEL GT15-J61BT13 CC-Link communication unit is used: CC-Link Ver2(ID)
- When MODEL GT15-75J61BT13-Z CC-Link communication unit is used: CC-Link(ID)

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

33.3.4 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver (any of the following)

When MODEL GT15-J61BT13 CC-Link communication unit is used:

CC-Link Ver2(ID)


When MODEL GT15-75J61BT13-Z CC-Link communication unit is used:

CC-Link(ID)

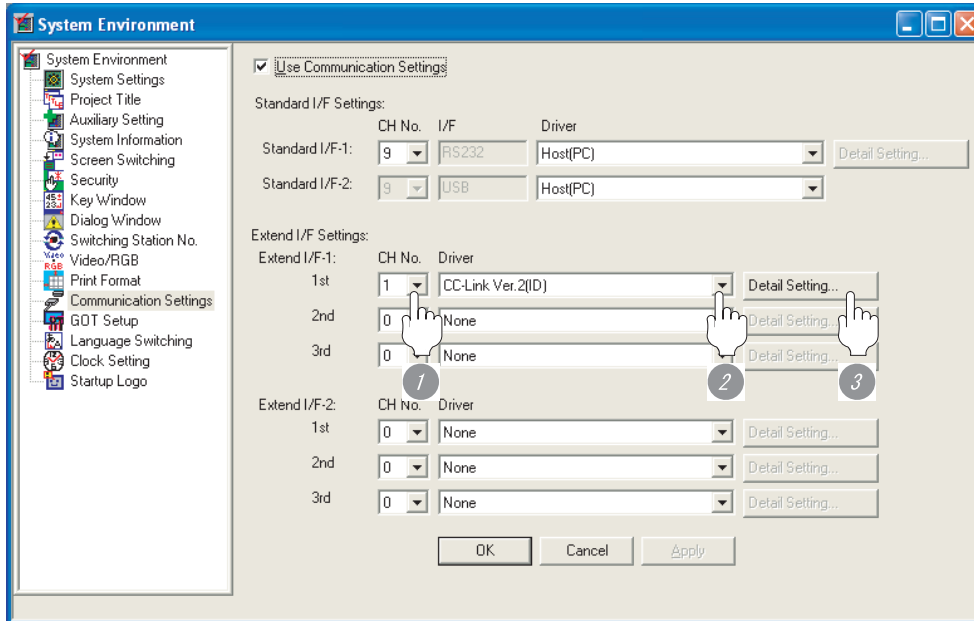
33.3.5 Setting communication interface (Communication settings)

To set the communication interface of the GOT, use the [Communication settings] of GT Designer2 and the switches of the communication unit.

Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication Settings



1 Set "1" to the channel No. used.

2 Set the driver as follows:

When MODEL GT15-J61BT13 CC-Link communication unit is used: CC-Link Ver 2(ID)

When MODEL GT15-75J61BT13-Z CC-Link communication unit is used: CC-Link(ID)

5 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

(1) CC-Link Ver.2 (ID)

The screenshot shows a dialog box titled "Communication Detail Settings" with a close button in the top right corner. The settings are as follows:

- Driver: CC-Link Ver.2(ID)
- Station No.: 1
- Transmission Rate: 0:Online:156kbps
- Mode: Ver.1
- Expanded Cyclic: Single
- Occupied Station: 1 Station
- Input for Error Station: Clear
- Retry: 3 (Times)
- Timeout Time: 3 (Sec)
- Delay Time: 0 (ms)

Buttons for "OK" and "Cancel" are located at the bottom of the dialog.

Item	Description	Range
Station No.	Set the station No. of the GOT. <Default: 1>	1 to 64
Transmission Rate* ¹	Set the transmission speed and the mode of the GOT. <Default: 0>	0 to E
Mode	Set the mode of CC-Link. <Default: Ver.1>	Ver.1/Ver.2/Additional/Offline
Expanded Cyclic	Set the cyclic point expansion. <Default: Single>	Single/Double/Quadruple/ Octuple
Occupied Station	Set the number of stations occupied by the GOT. <Default: 1 Station>	1 Station/4 Stations
Input for Error Station	Set Clear/Hold at an error occurrence. <Default: Clear>	Clear/Hold
Retry	Set the number of retries to be performed when a communication times out. When no response is received after retries, a communication times out. <Default: 3 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 90 Sec
Delay Time	Set the delay time for reducing the load of the network/destination PLC. <Default: 0ms>	0 to 300 (ms)

*1 For details of *1, refer to the next page.



Mode setting

CNC is compatible only with CC-Link Ver.1.
Do not make the setting for Ver.2.

***1 Transmission speed settings**

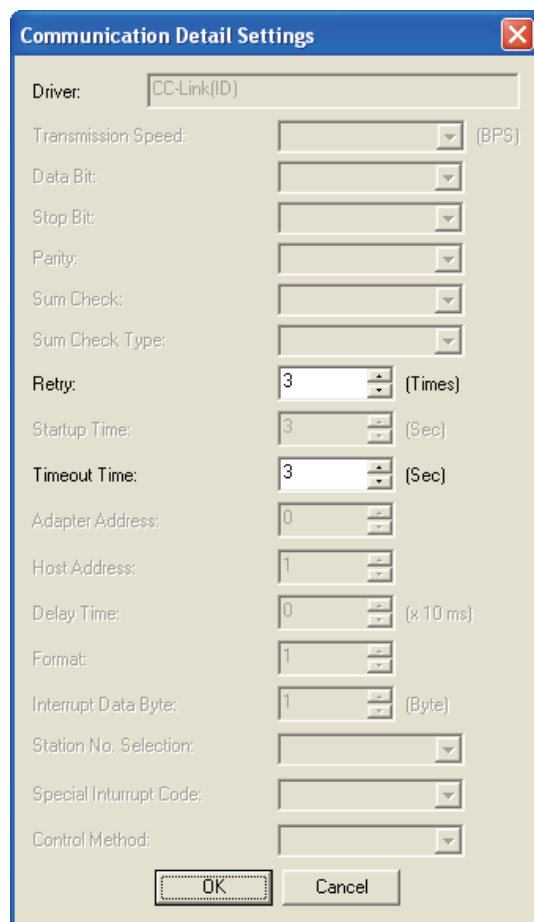
The following lists the transmission speed settings of the CC-Link communication.

Setting	Description
0	Online : 156kbps
1	Online : 625kbps
2	Online : 2.5Mbps
3	Online : 5Mbps
4	Online : 10Mbps
A	Hardware test : 156kbps
B	Hardware test : 625kbps
C	Hardware test : 2.5Mbps
D	Hardware test : 5Mbps
E	Hardware test : 10Mbps

For details of the hardware test, refer to the following manual.


☞ **CC-Link System Master/Local Module User's Manual for CC-Link module to be used**

(2) CC-Link(ID)



Item	Description	Range
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Timeout Time	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 30 Sec



- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
For details on the Utility, refer to the following manual.
 GT User's Manual
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

3 Switch setting
 (Only when MODEL GT15-75J61BT13-Z CC-Link communication unit is used)

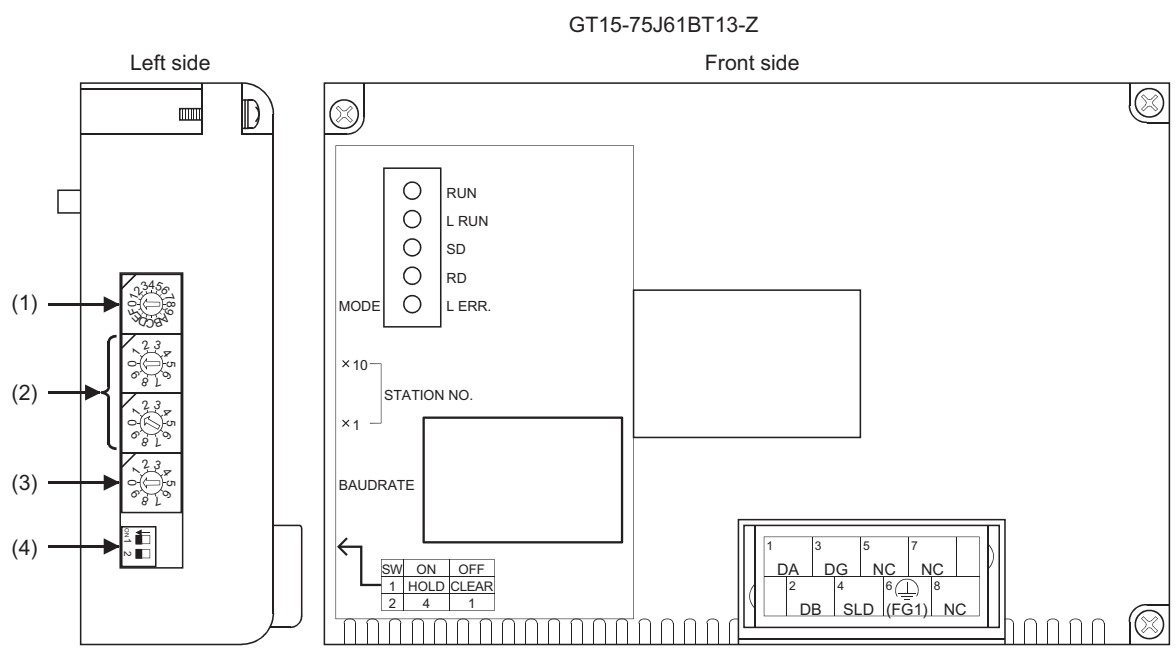


Switch setting of the communication unit

When using the MODEL GT15-J61BT13 CC-Link communication unit, the switch setting is not needed.

For details of each setting switch and LED, refer to the following manual.

GT15 CC-Link communication unit User's Manual




(1) Mode setting switch

Mode setting switch	Description	Setting
	Select the online mode. <Default: 0>	0 (fixed)


(2) Station number setting switch

Station number setting switch	Description	Setting
	Specify the station No. of the CC-Link communication unit. <Default: 01>	1 to 64

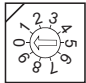(3) Transmission baudrate setting switch

Transmission baudrate setting switch	Description	Setting
	Specify the transmission speed. <Default: 0>	0: 156kbps 1: 625kbps 2: 2.5Mbps 3: 5Mbps 4: 10Mbps

(4) Condition setting switches

Condition setting switches	Setting switch	Description	Setting
	SW1	Specify input data status of the data link error station. <Default: OFF>	OFF: Cleared ON: Held
	SW2	Specify the number of stations occupied. <Default: OFF>	OFF: 1 station ON: 4 stations



(1) Switch setting example

For the switch setting example, refer to the following.



Section 33.3.10 CNC Side Settings


(2) When the switch setting is changed

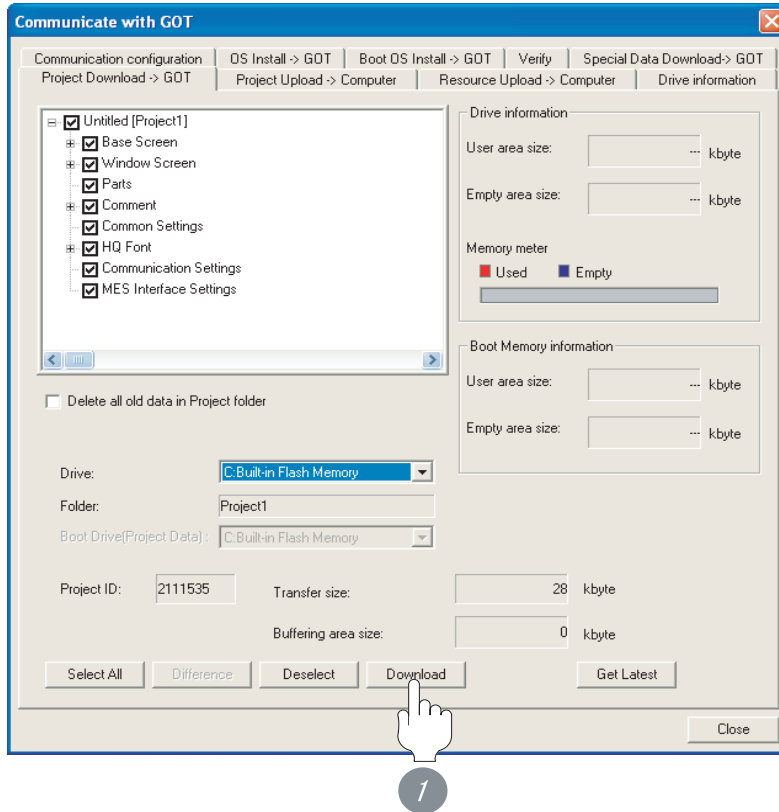
When changing the switch setting after mounting the GT15-75J61BT13 type CC-Link communication unit to the GOT, reset the GOT.

33.3.6 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.

33.3.7 Attaching communication unit and connecting cable




Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.


1 Attaching the communication unit

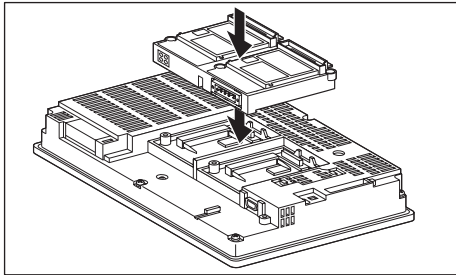(1) When MODEL GT15-J61BT13 CC-Link communication unit is used




- 1 Mount the CC-Link communication unit on the extension unit connector of the GOT.

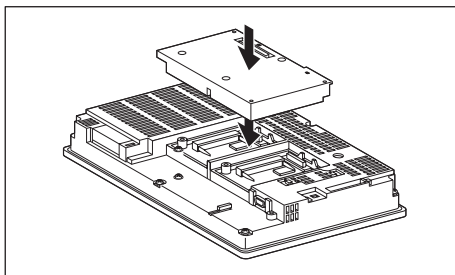(1) When MODEL GT15-75J61BT13-Z CC-Link communication unit is used



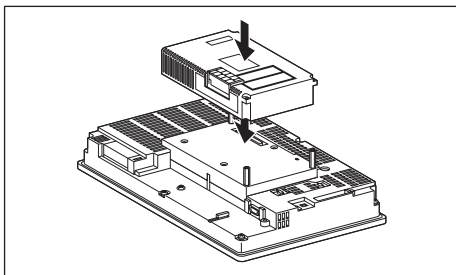- 1 Mount the interface converter unit to the extension unit connector of the GOT.



- 2 Mount the CC-Link communication unit to the interface converter unit.



CC-Link communication unit

For the details of mounting the CC-Link communication unit, refer to the following manuals.

For details of the CC-Link communication unit, refer to the following manual.

- ☞ • MODEL GT15-J61BT13 CC-Link communication unit User's Manual
- GT15 CC-Link communication unit User's Manual

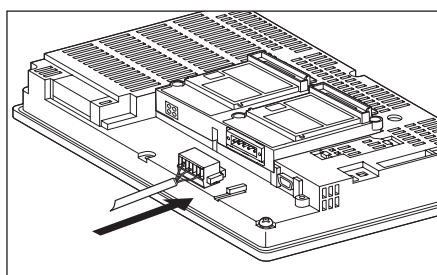
2 Connecting the cable

(1) When MODEL GT15-J61BT13 CC-Link communication unit is used


! CAUTION

- Make sure to ground the FG terminal of the GOT power supply section and that of this unit by applying Class D Grounding (Class 3 Grounding Method) or higher which is used exclusively for the GOT.
Not doing so may cause an electric shock or malfunction.

(a) CC-Link dedicated cable connection method




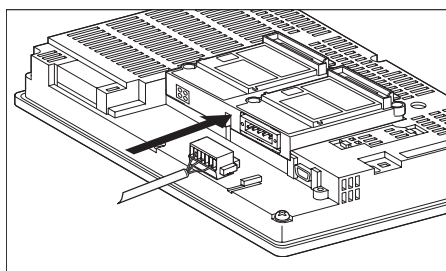- 1 Connect the CC-Link cable to the terminal block socket (packed together) of the CC-Link communication unit.
When the communication unit is terminal station of the network, be sure to connect a terminating resistor (packed together with the CC-Link communication unit) to the terminal block socket.



- 2 Mount the terminal block socket on the CC-Link communication unit connector of the GOT.

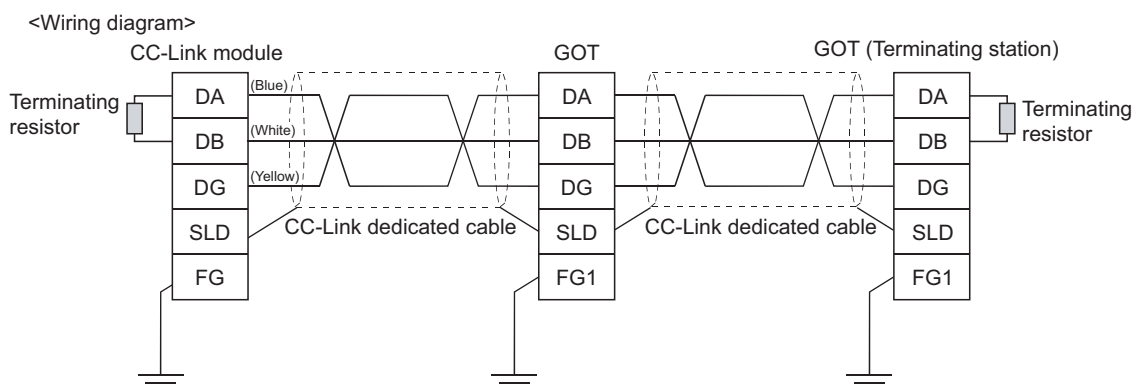(b) Wiring diagram




(2) When MODEL GT15-75J61BT13-Z CC-Link communication unit is used

! CAUTION


- Always ground the FG terminal of the GOT power supply and the FG1 terminal of this unit to the protective ground conductor.
Be sure to ground the GOT and this unit separately.
Failure to do so may cause an electric shock or malfunctions.
- Use applicable solderless terminals and tighten them with the specified torque.
If any solderless spade terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Be sure to tighten any unused terminal screws with a torque of 0.36 to 0.48N•m.
Failure to do so may cause a short circuit due to contact with a solderless terminal.

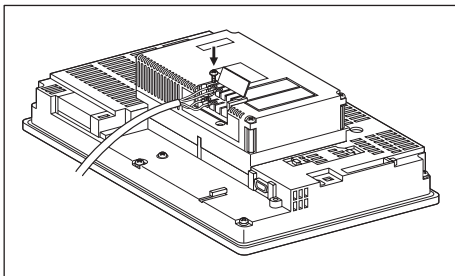(a) CC-Link dedicated cable connection method



- 1 Connect the CC-Link cable to the terminal block of the CC-Link communication unit.
If the CC-Link communication unit is terminal station of the network, be sure to connect a terminating resistor (packed together with the CC-Link module) to the terminal block.

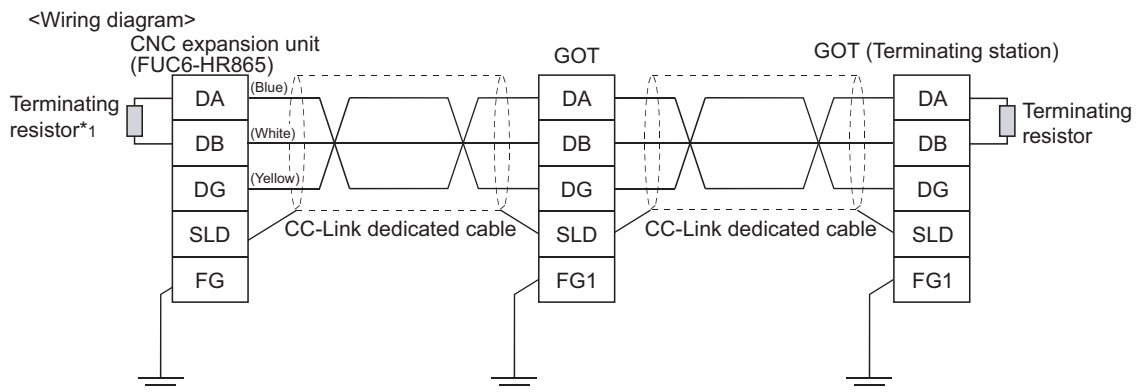(b) Wiring diagram



*1 When CNC is a terminal station, connect a terminating resistor to the CNC.

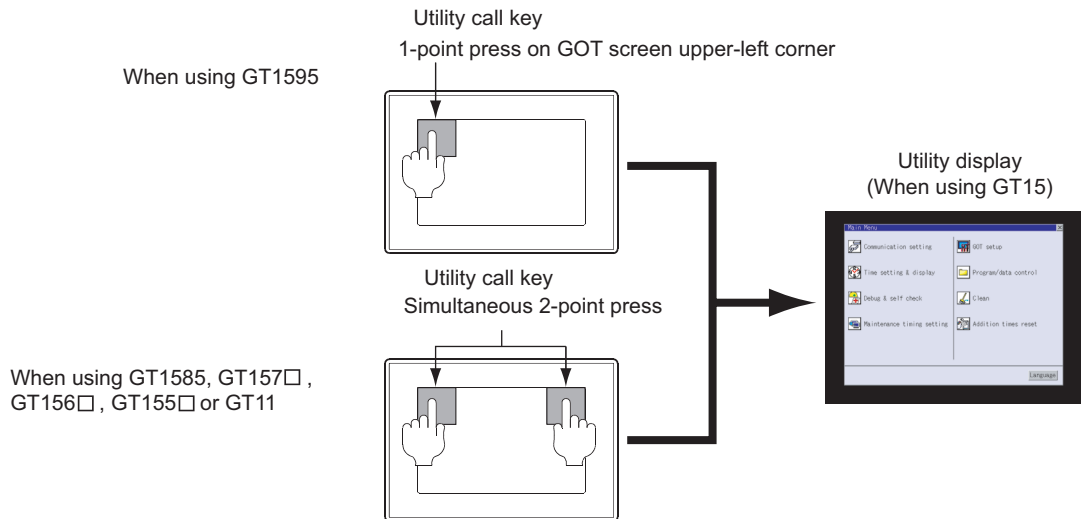
33.3.8 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point


When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

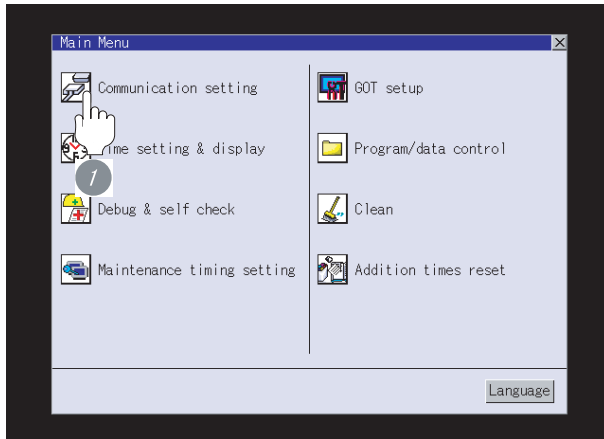☞ GT□ User's Manual



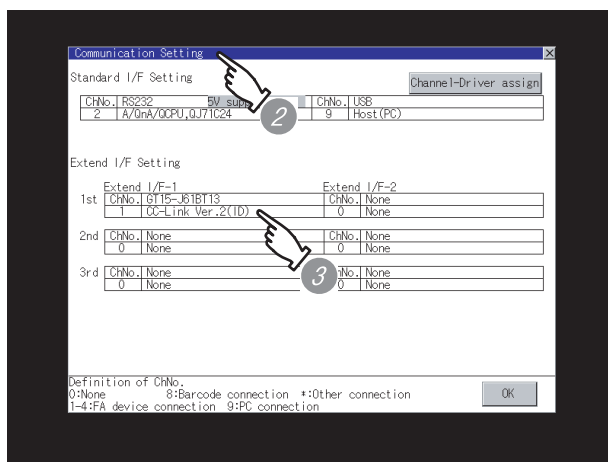- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver: (any of the following)
 - When MODEL GT15-J61BT13
CC-Link communication unit is used:
CC-Link Ver.2 (ID)
 - When MODEL GT15-75J61BT13-Z
CC-Link communication unit is used:
CC-Link (ID)

- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 33.3.2 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

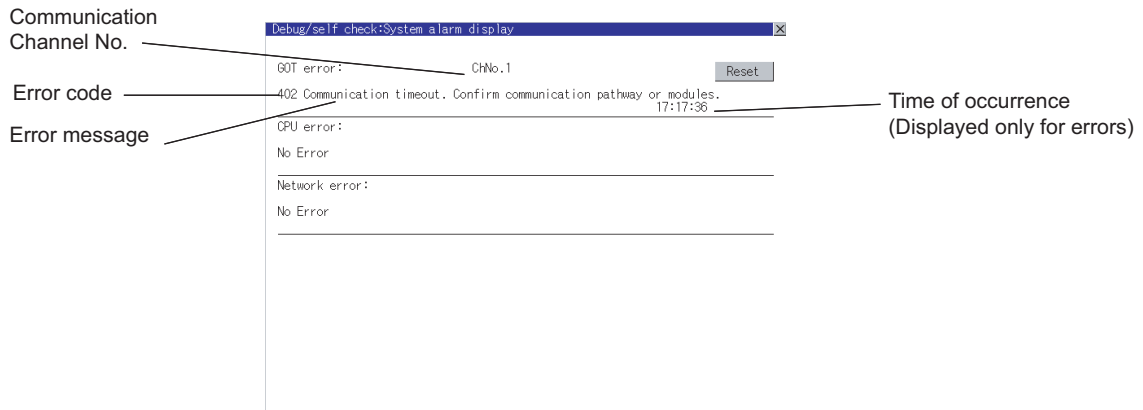
33.3.9 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT User's Manual (When using GT15)



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

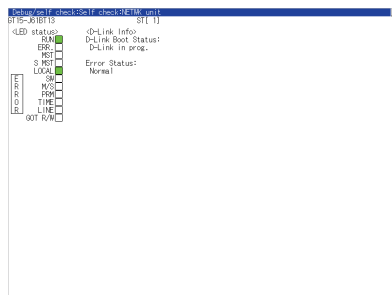
 GT Designer2 Version Screen Design Manual

2 Confirming the communication status with network unit by GOT

The communication status between the GOT and the CC-Link System can be confirmed by the Utility screen of the GOT.

For details on the operation method of the GOT Utility screen, refer to the following manual.

 GT15 User's Manual



Point

CC-Link communication unit when network module status display is made

When the network module status display is made, use the CC-Link communication unit of MODEL GT15-J61BT13.

When the model is GT15-75J61BT13-Z, the network module status display cannot be made.

3 Checking the wiring state of the CC-Link dedicated cable

Check if the CC-Link dedicated cable is connected correctly to all the modules in the CC-Link system. Perform the line test from the master station of the CC-Link System to check the wiring state of the CC-Link dedicated cable.

For the line testing method, refer to the following manuals.


 For details of the parameter setting, refer to the following.

 MELDAS C6/C64 NETWORK MANUAL BNP-B2373

4 Confirming the CNC side setting

When connecting the GOT, setting is required for the CNC side.

Confirm if the CNC side setting is correct.

 Section 33.3.10 CNC Side Settings

5 Checking if the GOT is correctly performed the data link

Use [Monitoring other station] of the GX Developer to check if the GOT is correctly performed the data link.

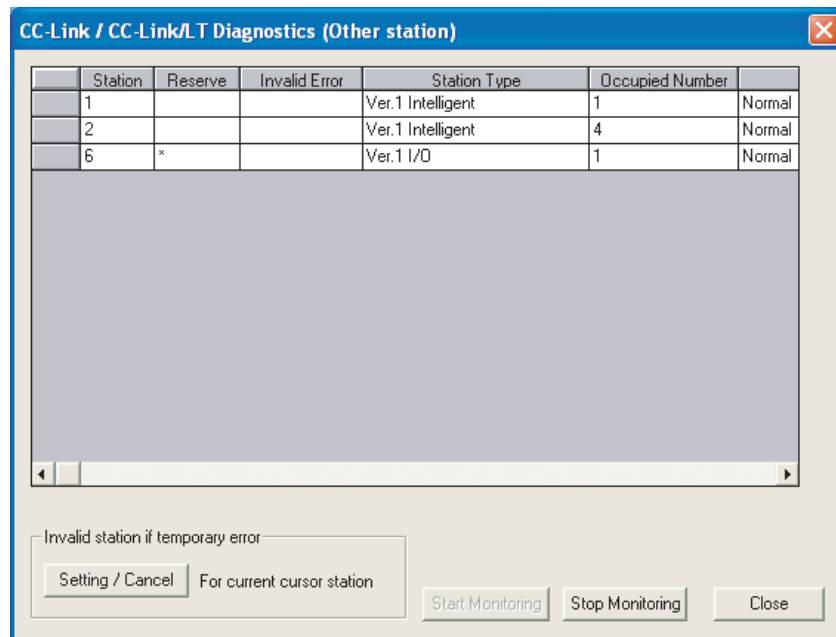
For the GX Developer operation method, refer to the following manual.

 CC-Link System Master/Local Module User's Manual QJ61BT11N

- (1) Checking the [Status] (The display example on the GX Developer Version 8)

Startup procedure

GX Developer → [Diagnostics] → [CC-Link / CC-Link/LT diagnostics] → Monitoring other station



All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

33.3.10 CNC Side Settings

1 Parameter Setting

Set parameters related to CC-Link connection with GX Developer and write them to CNC by PLC. However, in the case of using the local stations, it is not necessary to set the network parameters.

(1) Master station parameter


It is necessary to set and write the network parameters to CNC with GX Developer.

The following shows an example of parameter settings.

Set the first I/O No. as follows according to the expansion slot to which the unit is inserted.

(a) Start I/O No.

Slot	Start I/O No.
EXT1	0200
EXT2	0280

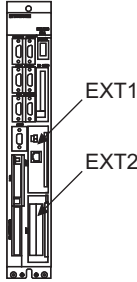

The diagram shows a vertical expansion slot rack. Two slots are labeled: 'EXT1' at the top and 'EXT2' below it. The rack contains various electronic components and connectors.

(b) Example of GX Developer setting

No. of boards in module: Boards Blank: no setting 0 boards: Set by the sequence program.

	1	2	3	4	5	6	7	8
Start I/O No.	0200	0280						
Type	Master station	Local station						
All connect count	7							
Remote input(RX)	M304	B0						
Remote output(RY)	M1008	B1000						
Remote register(RW/r)	D0	W0						
Remote register(RW/w)	D200	W1000						
Special relay(SB)								
Special register(SW)								
Retry count	3							
Automatic reconnection station count	1							
Wait master station No.	0							
PLC down select	Stop							
Scan mode setting	Asynchronously							
Delay information setting	0							
Station information setting	Station information							

Set if it is needed(No setting / Already set)

Setting item details:

Acknowledge XY assignment Clear Check End Cancel

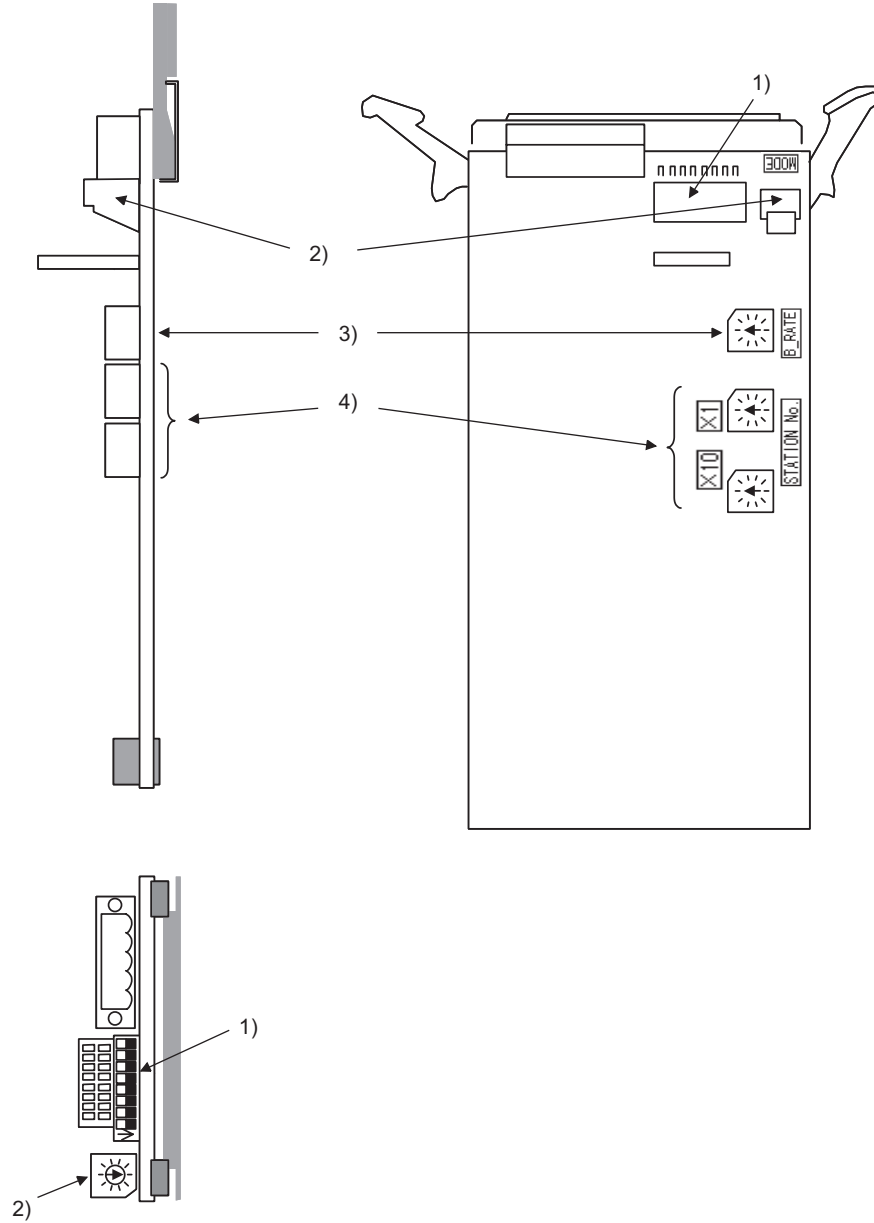
For details of the parameter setting, refer to the following.

 MELDAS C6/C64 NETWORK MANUAL BNP-B2373

2 Expansion unit settings

Make the communication settings by the setting switch in the expansion unit (FCU6-HR865).

(1) Expansion unit




1 Using cyclic transmission

(1) I/O signal for master station

Do not turn on the reserved output signals in the output signals (remote output: RY) to the GOT from the master station.

When the reserved output signal is turned on, the CNC system may be malfunctioned.

For the assignment of I/O signals in the GOT, refer to the following manual.

-  • MODEL GT15-J61BT13 CC-Link communication unit User's Manual
- GT15 CC-Link communication unit User's Manual

(2) CC-Link Mode

CNC is not compatible with CC-Link Ver.2.

(3) When GOT malfunctions, the cyclic output status remains the same as before becoming faulty.

2 For transient transmission

(1) Access range that can be monitored

The GOT can access to the CNC mounting the master and local station of the CC-Link System.

It cannot access another network via the CC-Link module.

3 GOT startup in CNC connection (CC-Link connection (Intelligent device station))

In the CNC connection (CC-Link connection (Intelligent device station)), the data link is started approximately 10 seconds after the GOT startup.

4 When a network error occurs in the system alarm

In the CNC connection (CC-Link connection (intelligent device station)), when a network error occurs in the system alarm, the system alarm message cannot be canceled even though the causes are removed.

5 Version of CNC

For MELDAS C6/C64, use NC system software version D0 or later.

33.4 Ethernet Connection



Connectable CNC is MELDAS C6/C64 series.
Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of ① System configuration and connection conditions correspond to the numbers (e.g. ①) of ② System equipment.
Use these numbers as references when confirming models and applications.

33.4.1 System Configuration



① System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	distance	
128 (recommended to 16 units or less)	100m or less* ² (max.)	


- *1 The destination connected with the twisted pair cable varies with the configuration of the applicable Ethernet network system.
Connect to the Ethernet module, hub, transceiver or other system equipment corresponding to the applicable Ethernet network system.
Use cables, connectors, and hubs that meet the IEEE802.3 10BASE-T/100BASE-TX standards.
- *2 A length between a hub and a node.

② System equipment


(1) GOT

Image	No.	Name	Model name
Ethernet	①	Ethernet communication unit • For Ethernet communication	GT15-J71E71-100

(2) CNC

Image	No.	Name	Model name
	2	Expansion unit	FUC6-EX875


*1 For the system configuration of the Ethernet module, refer to the following manuals.

 MELDAS C6/C64 CONNECTION AND MAINTENANCE MANUAL BNP-B2255
MELDAS C6/C64 NETWORK MANUAL BNP-B2373

*2 Select one of the following [Type] in [Ethernet setting] of GT Designer2.
For [Ethernet setting] of GT Designer2, refer to the following.


 Section 33.4.5 Setting communication interface (Communication settings)

(3) Cable

Image	No.	Name	Model name
	3	Twisted pair cable	Shielded twisted pair cable (STP) or unshielded twisted pair cable in category (UTP): 3, 4 and 5

33.4.2 Preparatory Procedures for Monitoring

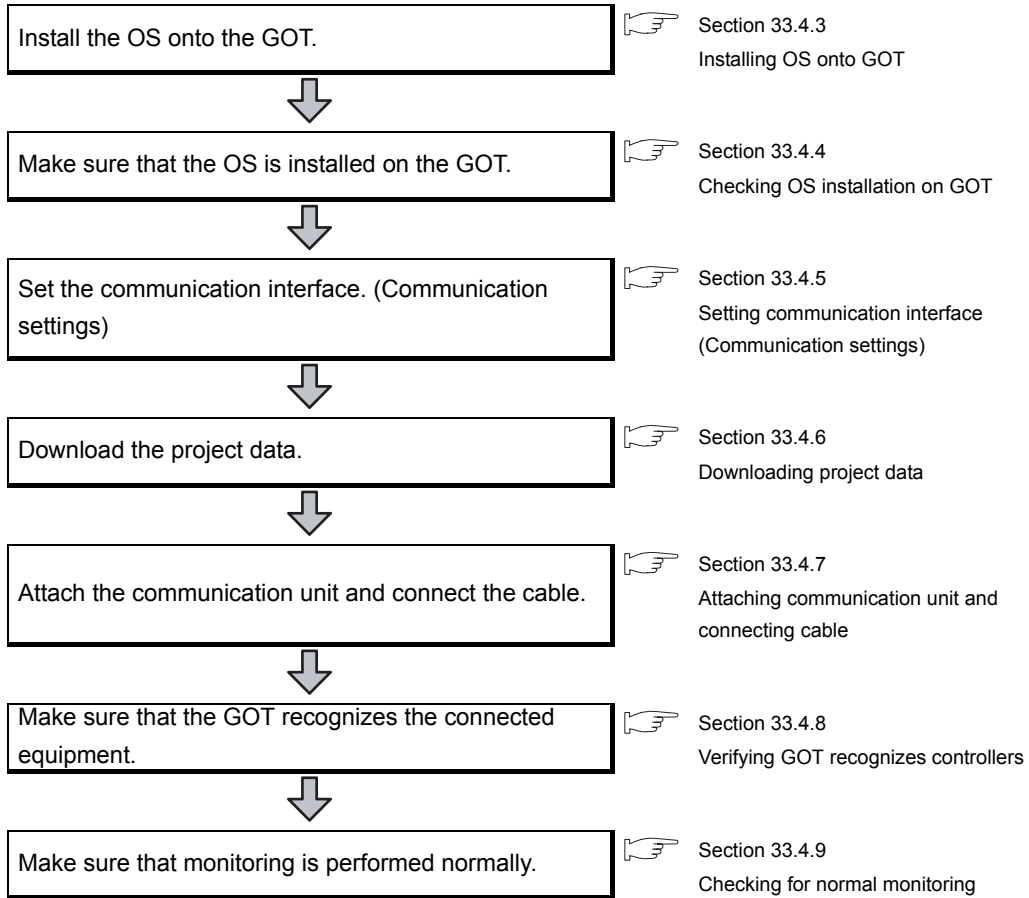The following shows the procedures to be taken before monitoring and corresponding reference sections.




Confirming the CNC side setting

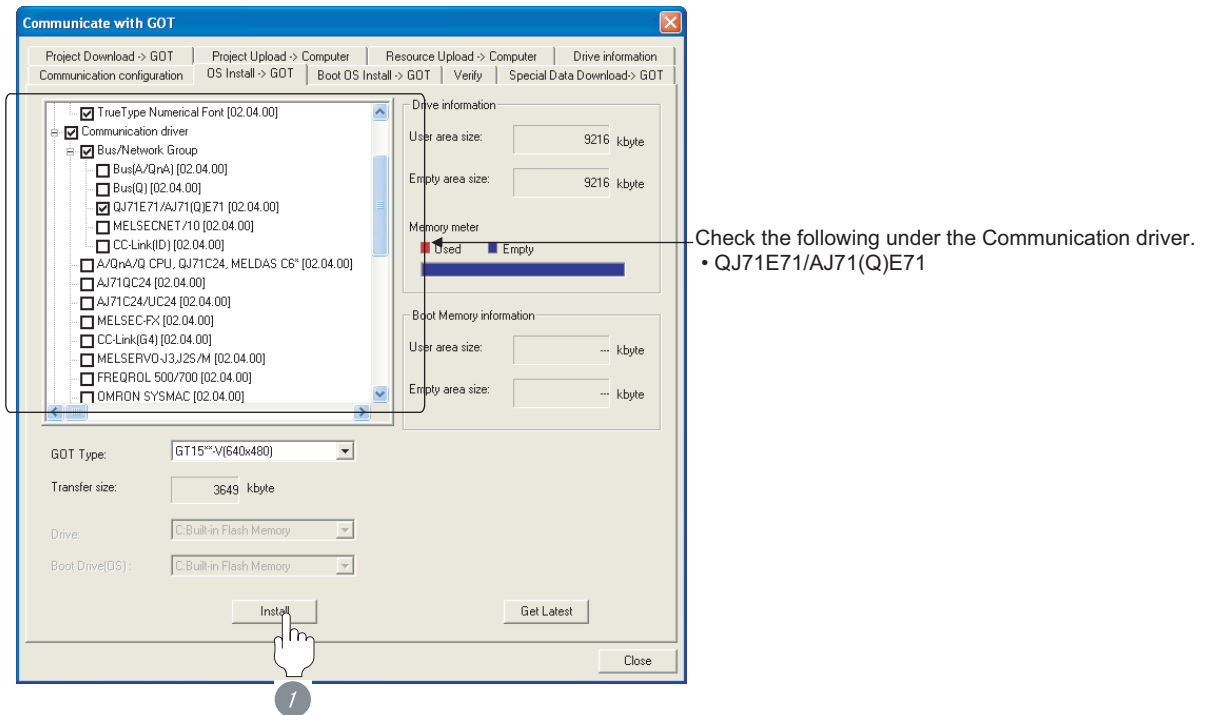
This section explains the GOT side setting.
When confirming the CNC side setting, refer to the following.

☞ Section 33.4.10 CNC Side Settings

33.4.3 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.


 GT Designer2 Version Basic Operation/Data Transfer Manual




- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

33.4.4 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

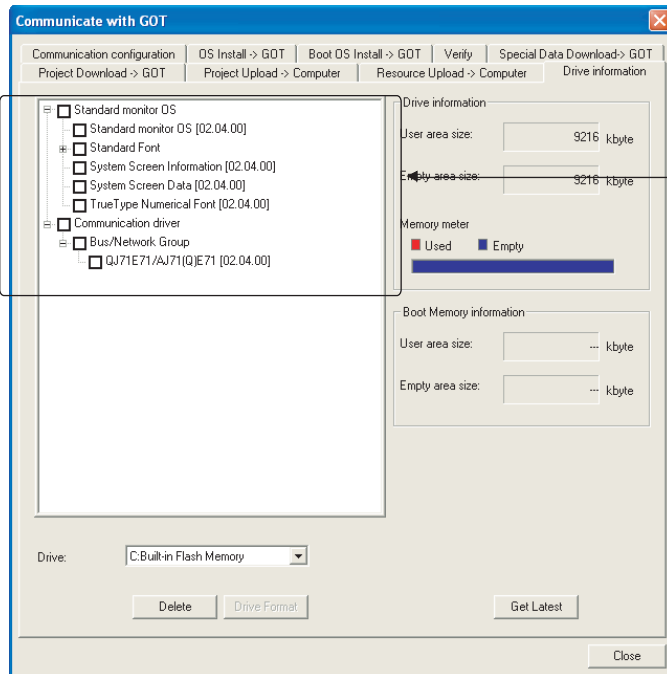 GT Designer2 Version Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT
if the following can be confirmed:

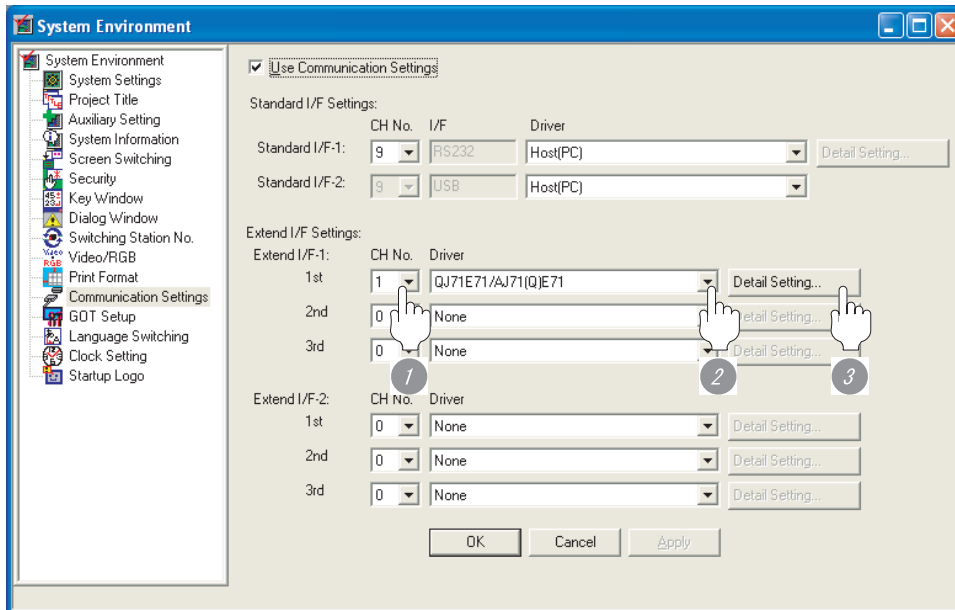
- 1) Standard monitor OS
- 2) Communication driver: QJ71E71/AJ71(Q)E71


33.4.5 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set "1" to the channel No. used.
- 2 Set the driver to "QJ71E71/AJ71(Q)E71".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
GOT NET No.	Set the network No. of the GOT. <Default: 1>	1 to 239
GOT PC No.	Set the station No. of the GOT. <Default: 1>	1 to 64
GOT IP Address	Set the IP address of the GOT. <Default: 192.168.0.18>	0.0.0.0 to 255.255.255.255
GOT Port No. (QJ71E71/AJ71(Q)E71)	Set the GOT port No. for the connection with the Ethernet module. <Default: 5001>	1024 to 5010, 5014 to 65534 (Except for 5011, 5012 and 5013)
GOT Port No. (Ethernet Download)	Set the GOT port No. for Ethernet download. <Default: 5014>	1024 to 5010, 5014 to 65534 (Except for 5011, 5012 and 5013)
Default Gateway	Set the router address of the default gateway where the GOT is connected. (Only for communication via router) <Default: 0.0.0.0>	0.0.0.0 to 255.255.255.255
Subnet Mask	Set the subnet mask for the sub network. (Only for connection via router) If the sub network is not used, the default value is set. <Default: 255.255.255.0>	0.0.0.0 to 255.255.255.255
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. <Default: 3 Sec>	3 to 255 Sec

(Continued to next page)

Item	Description	Range
Timeout Time*1	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 90 Sec
Delay Time	Set the delay time for reducing the load of the network/destination PLC. <Default: 0ms>	0 to 10000 (× 10 ms)

*1 To connect the GOT with the Ethernet module (Q Series) in the one-on-one relationship using a cross cable, set [Timeout Time] to 6 sec. or longer.




Example of communication detail settings

For examples of communication detail settings, refer to the following.

Section 33.4.10 CNC Side Settings

3 Ethernet setting

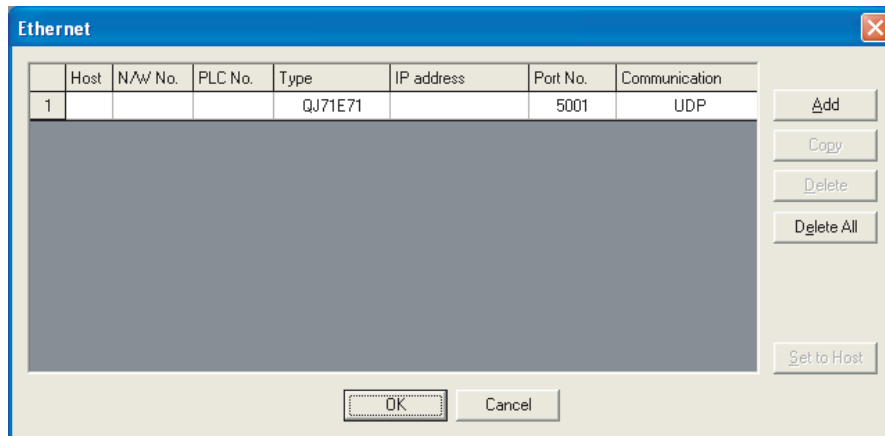(1) Ethernet setting



Item	Description	Range
Host	The host is displayed. (The host is indicated with an asterisk (*).)	—
N/W No.	Set the network No. of the connected Ethernet module. <Default: blank>	Network No. of CNC* ¹
PLC No.	Set the station No. of the connected Ethernet module. <Default: blank>	Station No. of CNC
Type* ¹	Set the type of the connected Ethernet module. <Default: QJ71E71>	AJ71QE71
IP address	Set the IP address of the connected Ethernet module. <Default: 192.168.0.1>	IP address of CNC
Port No.* ²	Set the port No. of the connected Ethernet module. <Default: 5001>	5001
Communication	UDP (fixed)	UDP (fixed)

*¹ For operating CNC monitor function, set N/W No. to "239".



Example of Ethernet setting

For examples of Ethernet setting, refer to the following.

☞ Section 33.4.10 CNC Side Settings

(1) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

 GT User's Manual


(2) Precedence in communication settings

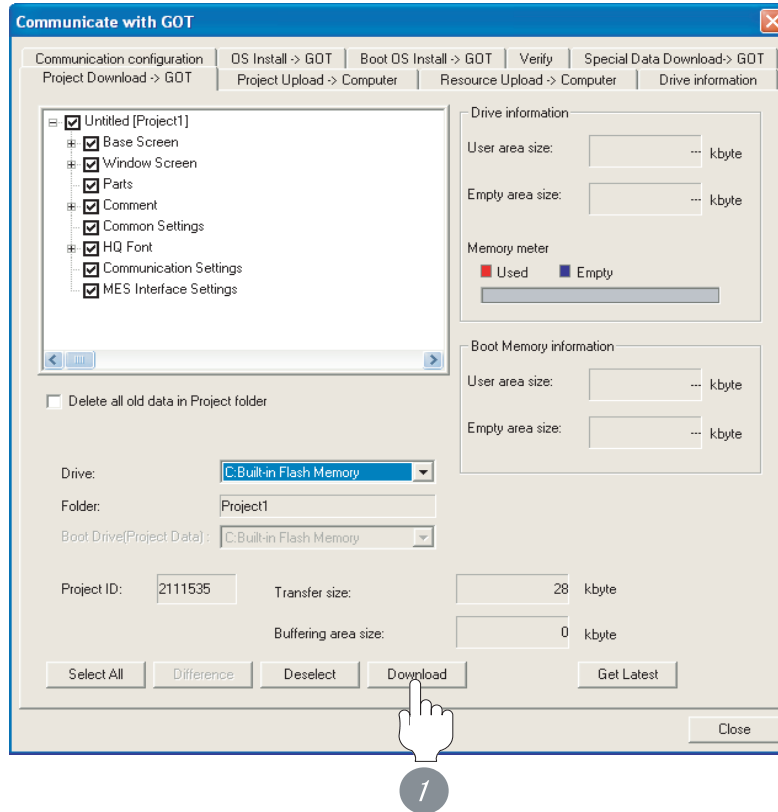
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

33.4.6 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


33.4.7 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

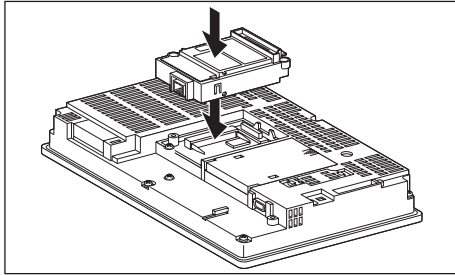1 Attaching the communication unit



- 1 Attach the Ethernet communication unit to the extension unit connector on the GOT.

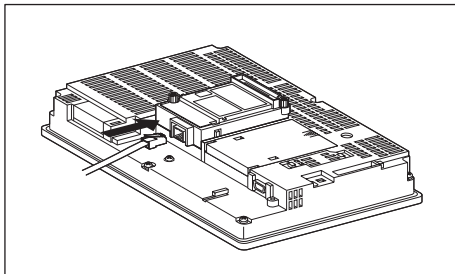


Ethernet communication unit

For details on the Ethernet communication unit, refer to the following manual:

GT15 Ethernet Communication Unit User's Manual

2 Connecting the cable



- 1 Connect the twisted pair cable to the Ethernet communication unit.

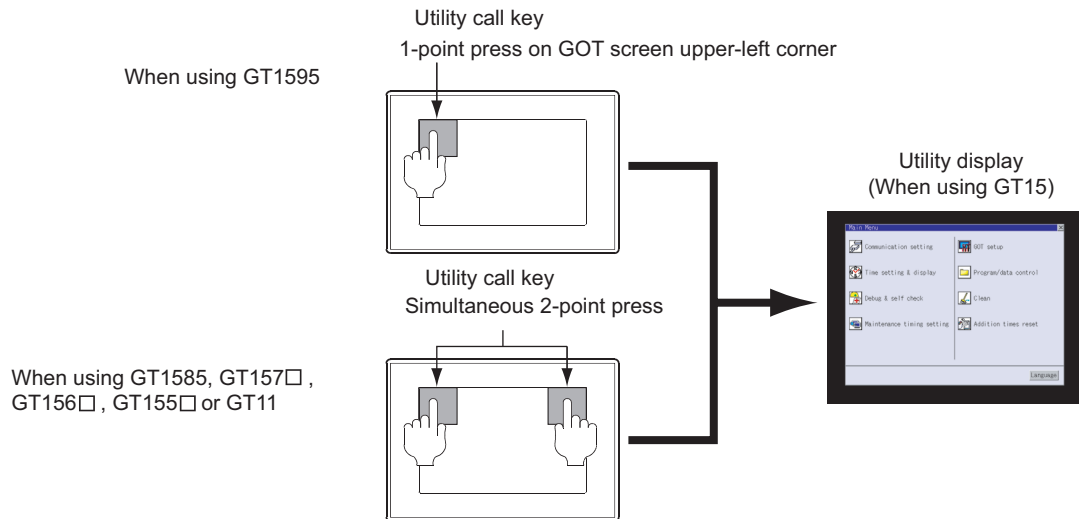
33.4.8 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

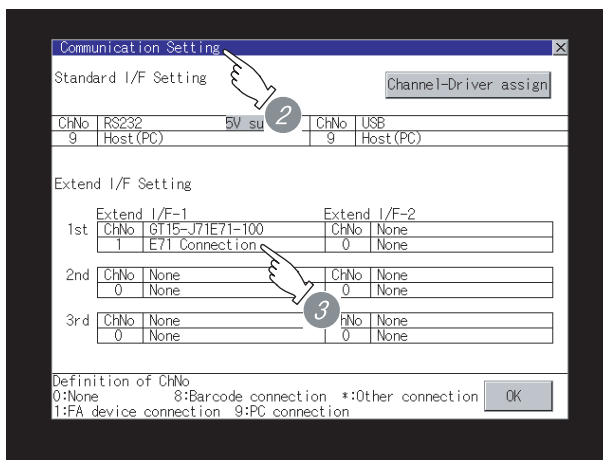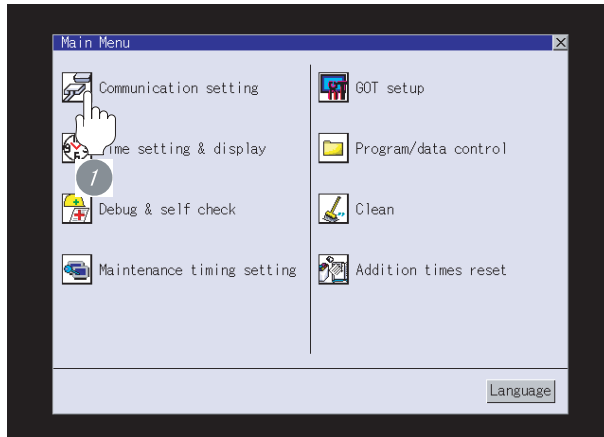 [GT□ User's Manual](#)



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver: E71 connection

4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 33.4.2 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility
 The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

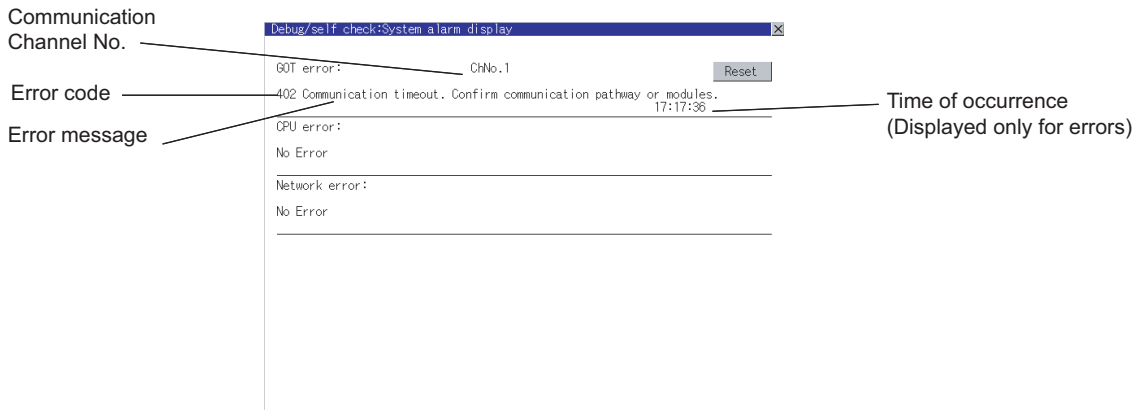
33.4.9 Checking for normal monitoring

1 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)



Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

2 Confirming the communication state of GOT

(1) When using the Command Prompt of Windows®

Execute a Ping command at the Command Prompt of Windows®.

(a) When normal communication

```
C:\>Ping 192.168.0.18
```

```
Reply from 192.168.0.18: bytes=32 time<1ms TTL=64
```

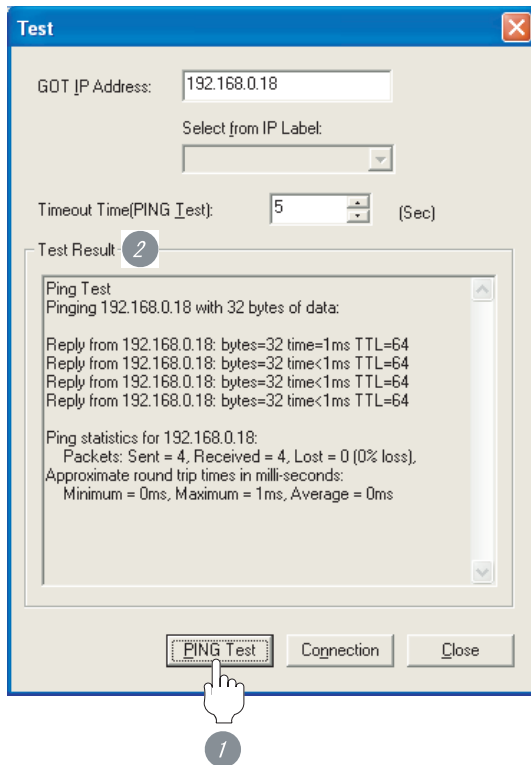
(b) When abnormal communication

```
C:\>Ping 192.168.0.18
```

```
Request timed out.
```

(2) When using the "PING Test" of GT Designer2

Select [Communication] → [Communication configuration] → "Ethernet" and **Test** to display "PING Test".



- 1 Specify the "GOT IP address" of the "PING Test" and click on the **PING Test** button.
- 2 The "Test Result" is displayed after the "PING Test" is finished.


(3) When abnormal communication

At abnormal communication, check the followings and execute the Ping command again.

- Mounting condition of Ethernet communication unit
- Cable connecting condition
- Confirmation of "Communication settings"
- IP address of GOT specified by Ping command

3 Confirming the CNC side setting

When connecting the GOT, setting is required for the CNC side.
Confirm if the CNC side setting is correct.

 Section 33.4.10 CNC Side Settings

4 Confirming the communication state to each station (station monitoring function)

The station monitoring function detects the faults (communication timeout) of the stations monitored by the GOT.

When detecting the abnormal state, it is confirming the response by executing a Ping command to the faulty station.

The station monitoring state can be confirmed by using GOT internal device.

(1) Station monitoring state

(a) No. of faulty station (GS230)

Total No. of the faulty CPU are stored.

The station No. of faulty stations are stored to GS231 through GS238. (b) Faulty station information (GS231 to GS238))

Device	b15 to b8	b7 to b0
GS230	(00H fixed)	No. of faulty stations



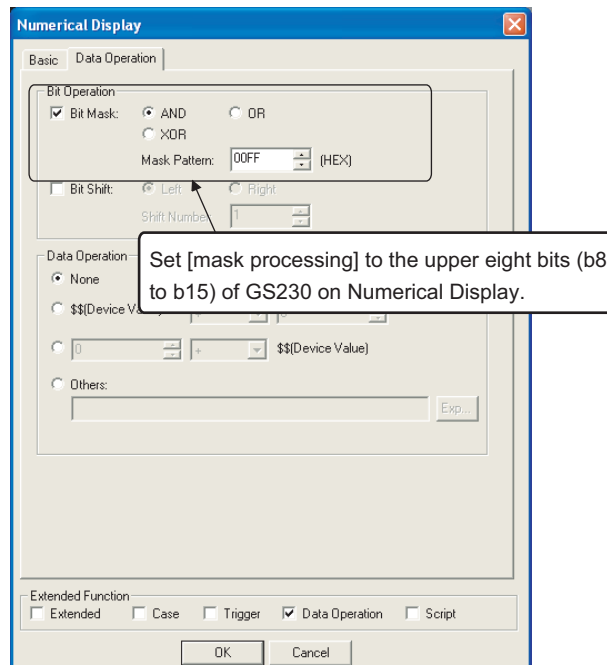
When monitoring GS230 on Numerical Display

When monitoring GS230 on Numerical Display, check [mask processing] with data operation tab as the following.

For the data operation, refer to the following manual.

GT Designer2 Version □ Screen Design Manual

<Numerical Display (Data Operation tab) >



(b) Faulty station information (GS231 to GS238)

- The bit of the Ethernet setting No. corresponding to the faulty station is set.
0: Normal
1: Abnormal
- The bit is reset after the fault is recovered.

GS231 bit 0

GS231 bit 1

GS231 bit 2

GS231 bit 3

Device	Ethernet setting No.															
	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
GS231	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
GS232	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
GS233	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33
GS234	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49
GS235	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65
GS236	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81
GS237	112	111	110	109	108	107	106	105	104	103	102	101	100	99	98	97
GS238	128	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113

(2) Precautions of station monitoring function

This function is not applicable to the multiple CPU system in which the CPU No. is assigned at the device setting of GT Designer2.

For details of GT Designer2, refer to the following manual.

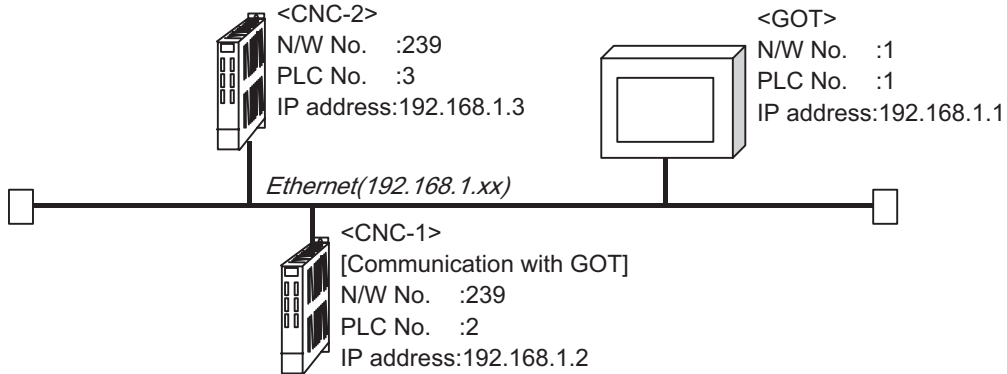
GT Designer2 Version□ Screen Design Manual

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

33.4.10 CNC Side Settings

1 System configuration

The following shows the example of the system configuration when using the CNC monitor function.



2 Parameter setting

Set parameters related to Ethernet with MELSEC's peripheral devices in the same way as parameter setting of MELSEC CPU, and write them on CNC by PC.

(1) Network parameter setting

Set the network parameters by peripheral device and write them on CNC. An example of parameter setting by GPPW is as follows.

Set the first I/O No. as follows according to the expansion slot to which the unit is inserted.

(a) Unit No.

Slot position	Start I/O No.	Mounting position of extension unit
EXT1	0200	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>[When mounted in EXT1 and EXT2]</p> </div> <div style="text-align: center;"> <p>[When mounted in EXT1 and EXT3]</p> </div> <div style="text-align: center;"> <p>[When mounted in EXT2 and EXT3]</p> </div> </div>
EXT2	0280	
EXT3	0300	
		<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>[When mounted in EXT1 only]</p> </div> <div style="text-align: center;"> <p>[When mounted in EXT2 only]</p> </div> <div style="text-align: center;"> <p>[When mounted in EXT3 only]</p> </div> </div>

(b) Example of GX Developer setting

Read PLC data

	Module No.1	Module No.2	Module No.3	Module No.4
Network type	Ethernet	None	None	None
Start I/O No.	0280			
Network No.	1			
Total stations				
Group No.	1			
Station No.	1			
IP addressDEC	IP Address Settings			
	Station No.<->IP information			
	FTP Parameters			
	Router relay parameter			

Necessary setting[No setting / Already set] Set if it is needed[No setting / Already set]

Interlink transmission parameters: Start I/O No.: Input the start I/O No. installed in the module in 16-point unit. Valid module during other station access: 1

Acknowledge XY assignment Routing parameters Check End Cancel

*1 For details of the parameter setting, refer to the following.

 MELDAS C6/C64 NETWORK MANUAL BNP-B2373



IP address setting

IP address setting on GX Developer is invalid.

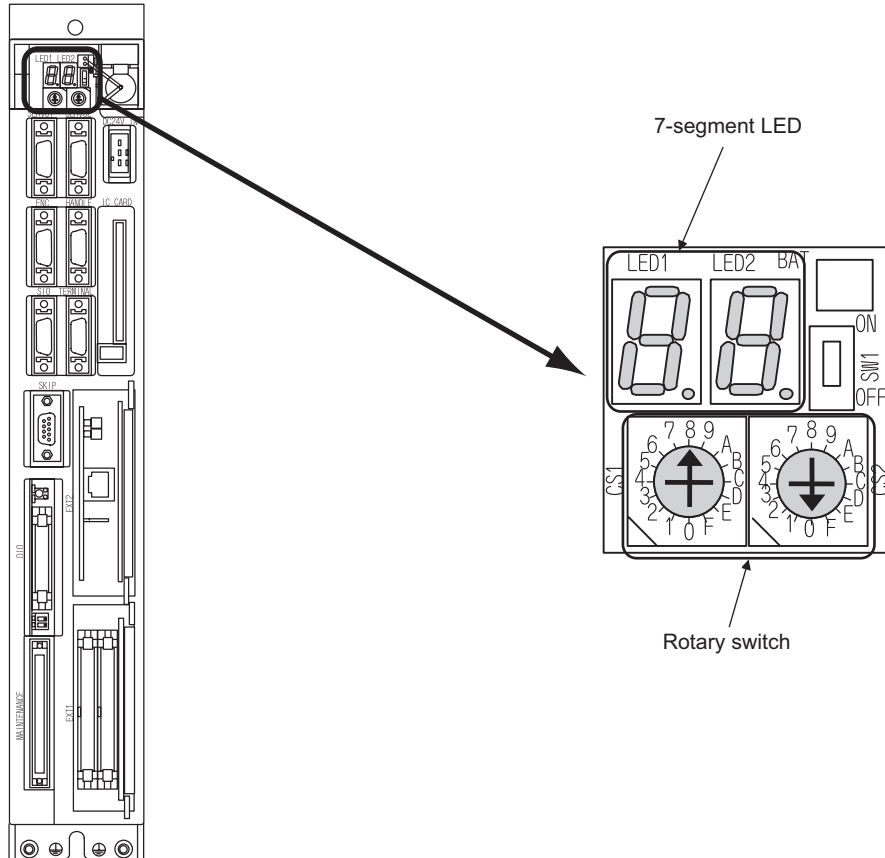
Set the IP address by the 7-segment LED and rotary switch of the CNC side, referring to the next page.

(2) CNC side parameter setting

Confirm the CNC side parameter setting with the settings of IP address, gateway address, subnet mask and port No. by the 7-segment LED and rotary switch of the CNC side.

For details of the parameter setting operation, refer to the following.

 MELDAS C6/C64 NETWORK MANUAL BNP-B2373 IV Setting the Ethernet IP Address



33.4.11 Precautions

1 Via network system

GOT with Ethernet communication cannot access the CNCs in another network via the CNC (network module, Ethernet module, etc.).

2 When connecting to multiple GOTs

When connecting two or more GOTs in the Ethernet network, set each "PC No." to the GOT.

☞ Section 33.4.5 Setting communication interface (Communication settings)

3 When connecting to the multiple network equipments (including GOT) in a segment

By increasing the network load, the transmission speed between the GOT and CNC may be reduced. The following actions may improve the communication performance.

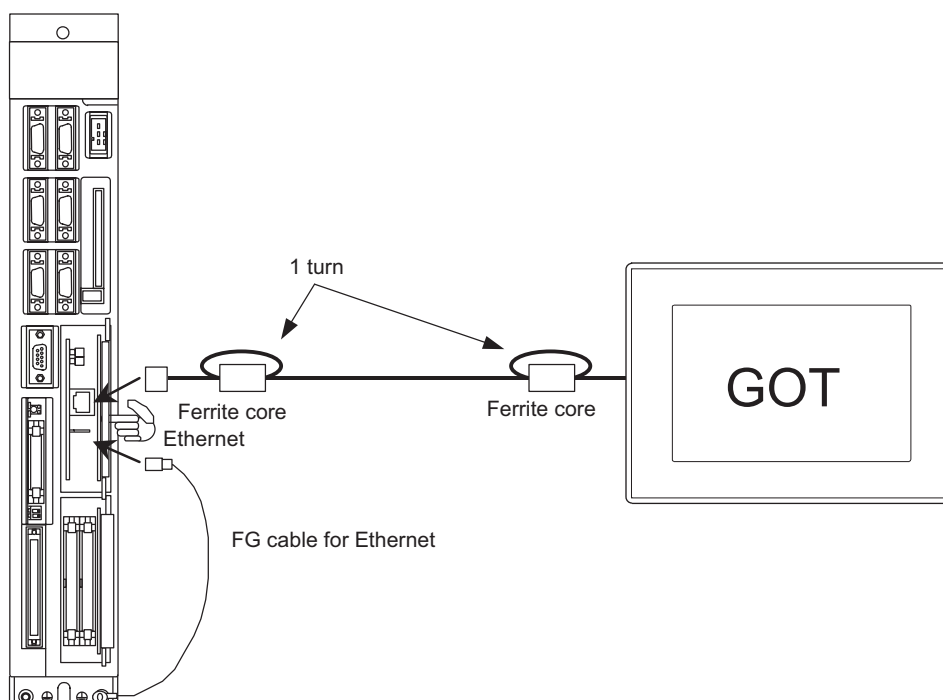
- Using a switching hub
- More high speed by 100BASE-TX (100Mbps)
- Reduction of the monitoring points on GOT

4 Ethernet cable connection

Ethernet cable is so susceptible to noise that you should wire power cables and electric supply cables separately. And you need to attach a ferrite core (attachment) on the control unit side.

For details of the Ethernet cable connection, refer to the following

☞ MELDAS C6/C64 NETWORK MANUAL BNP-B2373 IX Connection Function with GOT



5 Version of CNC

For MELDAS C6/C64, use NC system software version D0 or later.

33.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
CNC connection	Supporting the CNC connection	2.18U	Communication driver A/QnA/Q CPU, QJ71C24, MELDAS C6* [02.01.**] QJ71E71/AJ71(Q)E71 [02.01.**] MELSECNET/10 [02.01.**] CC-Link(ID) [02.01**]
CNC connection	<ul style="list-style-type: none"> • Supporting MELSECNET/10 mode of the communication unit for MELSECNET/H (Use GT15-J71LP23-25 or GT15-J71BR13 for a communication unit and MELSECNET/H for a communication driver.) • Supporting Ver.1 mode of the communication unit for CC-Link (Ver.2) (Use T15-J61BT13 for a communication unit and CC-Link Ver.2(ID) for a communication driver.) 	2.32J	Communication driver MELSECNET/H [03.00.**] CC-Link(V2) [03.00.**]
CNC connection	Changing the Communication driver names	2.43V	Communication driver A/QnA/Q CPU, QJ71C24 [03.01.**] AJ71C24, MELDAS C6* [03.01.**]

CONNECTION TO SOUND OUTPUT UNIT



34.1 System Configuration page 34-2

This section describes the equipment needed when connecting to the sound output function. Select a system suitable for your application.

34.2 Preparatory Procedures for Monitoring page 34-4

This section describes the procedures to be followed before monitoring in the sound output function. The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

34.3 Precautions page 34-12

This section describes the precautions on the sound output function. Be sure to read this when outputting the sound.

34.4 List of Functions Added by Version Upgrade page 34-13

This section describes the functions added by version upgrade of GT Designer2 or OS.



34.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs	Distance	
1	Varies according to the speaker's specifications.	

*1 For the PLC connection type and communication interface for the sound output function, refer to each chapter.





System configuration between the GOT and PLC

For the system configuration between the GOT and PLC, refer to each chapter.


- MITSUBISHI PLC CONNECTIONS (Chapter 2 to Chapter 8)
- THIRD PARTY PLC CONNECTIONS (Chapter 10 to Chapter 15)

2 System equipment

(1) GOT

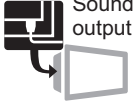Image	No.	Name	Model
 Sound output	1	Sound output unit	GT15-SOUT 

(2) Speaker

Image	No.	Name	Model
	2	Speaker	For applicable speakers, refer to the following.

Remark


For applicable speakers

Use a speaker with amplifier that satisfies the following specifications.

Item	Specifications
Sound output terminal	For connecting external L/R speakers, 1 channel for each speaker (2Vp-p, 0.4mW (for rated load 10k Ω))
Applicable jack	ϕ 3.5 stereo mini jack, straight type
Playable file	Windows WAV format 8.000KHz, 16 bits, mono (8 seconds/sound file)

34.2 Preparatory Procedures for Monitoring

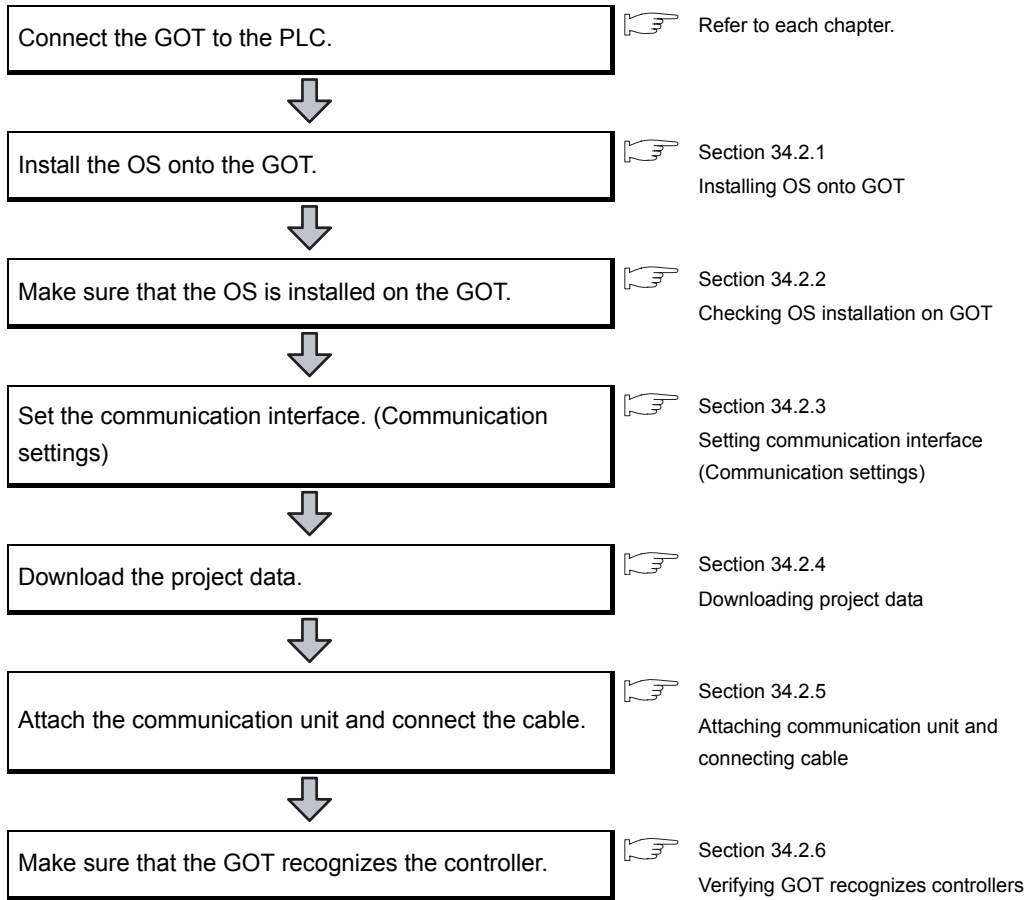The following shows the procedures to be taken before monitoring and corresponding reference sections.




34.2.1 Installing OS onto GOT

Install the extended function OS onto the GOT.

For the OS installation methods, refer to the following manual.

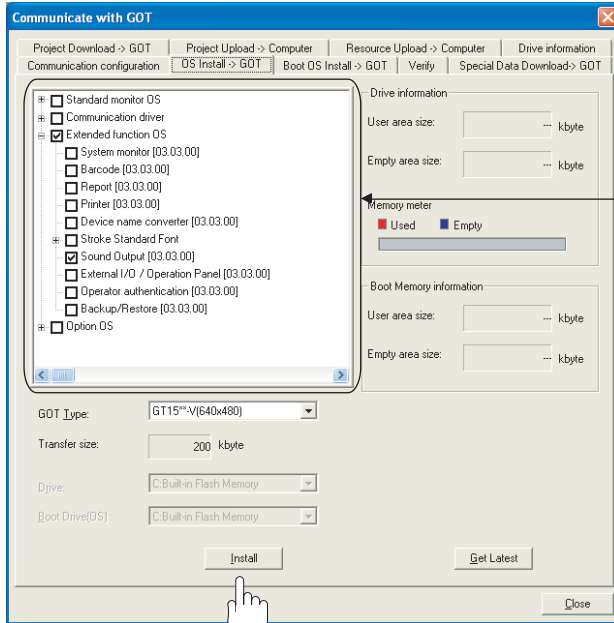 GT Designer2 Version Basic Operation/Data Transfer Manual



Check the following under the Communication driver.


- Depends on the connection type
- Sound output

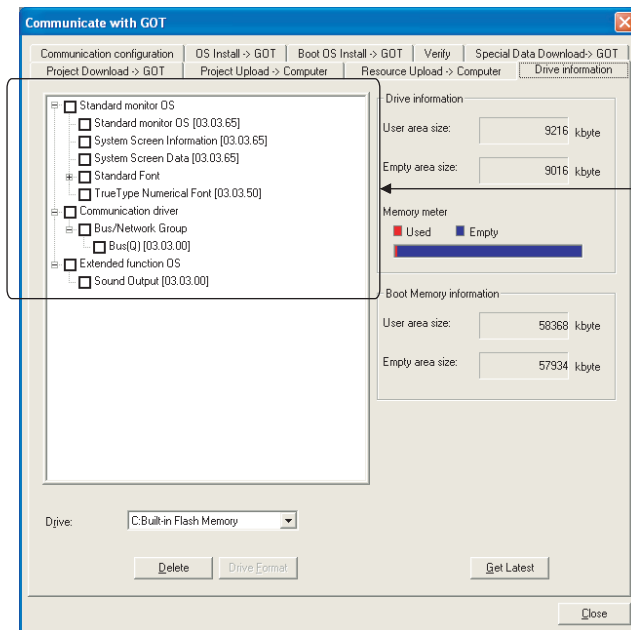
Check the following on the extended function OS.

1 Check-mark an extended function OS (Sound output), and click the button.

34.2.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

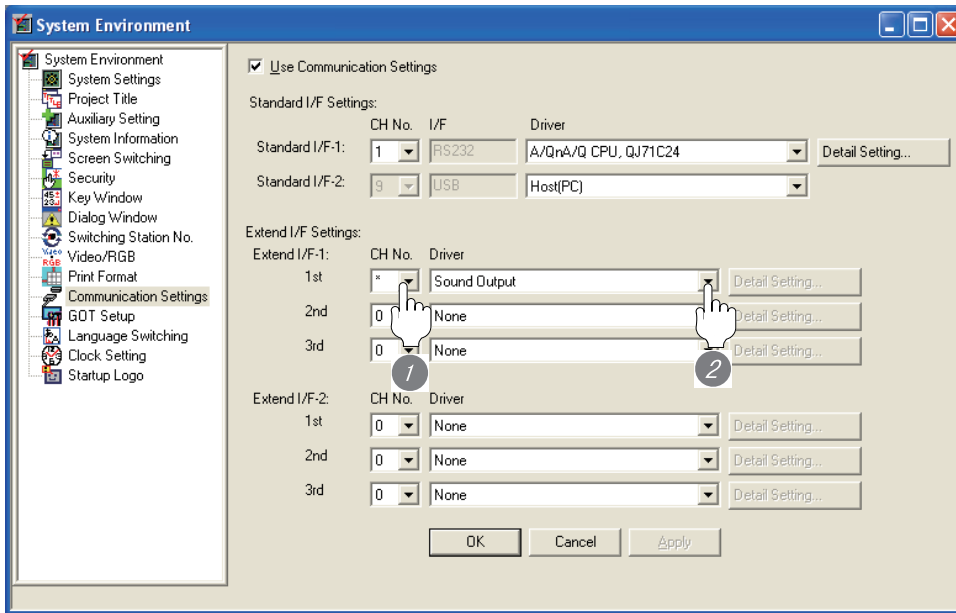
- 1) Standard monitor OS
- 2) Communication driver: Depends on the connection type
- 3) Extended function OS: Sound output

34.2.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set [*] to the channel No. used.
- 2 Set the driver to [Sound Output].

Point

- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.


 GT □ User's Manual

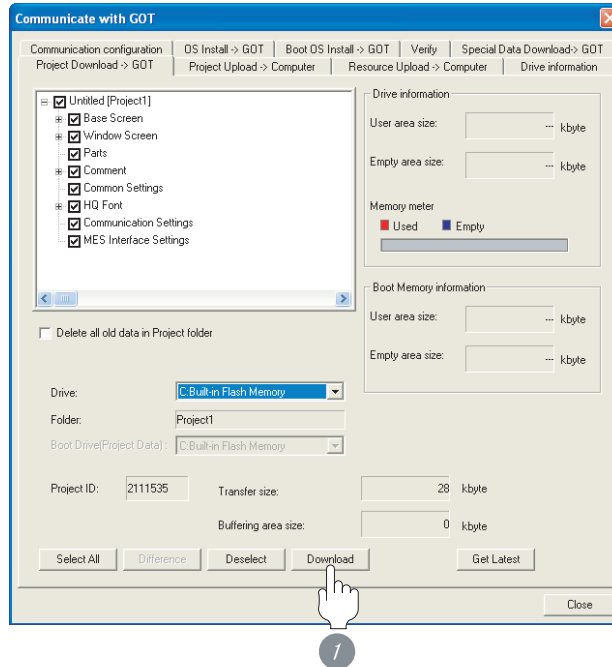
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

34.2.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


34.2.5 Attaching communication unit and connecting cable



Cautions when attaching the option unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

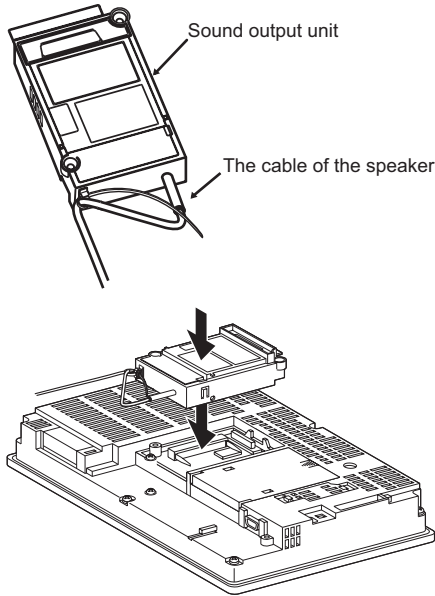1 Attaching the option unit



1 Connect the cable of the speaker to the sound output unit.

2 Attach the sound output unit to the extension unit connector on the GOT.



Sound output unit

For details on the sound output unit, refer to the following manual.

➔ GT15 Sound output unit User's Manual

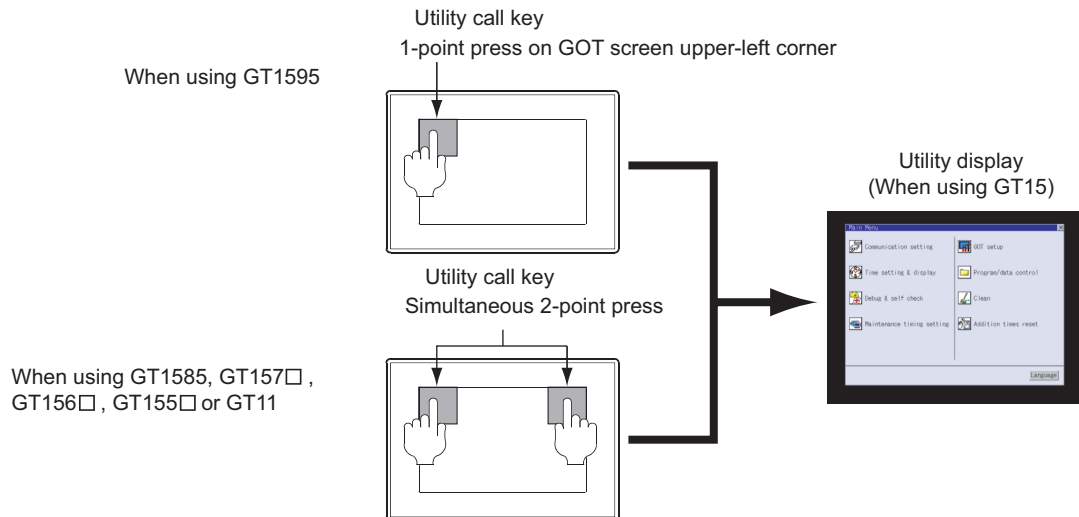
34.2.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

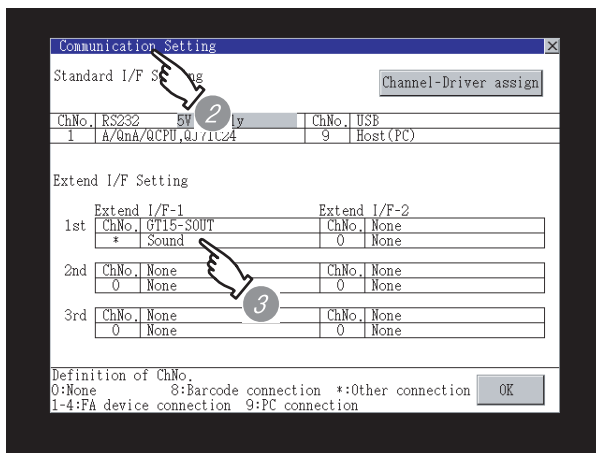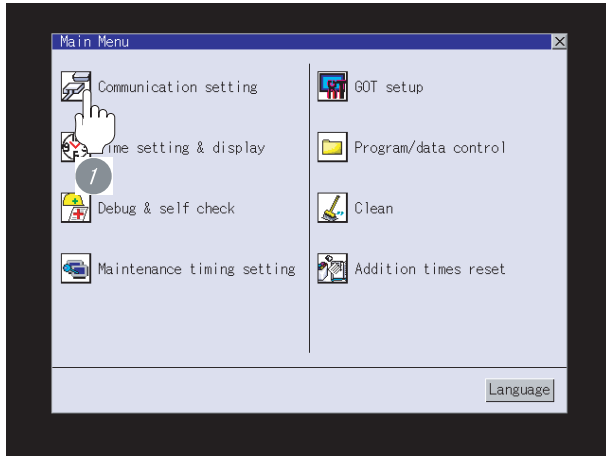☞ GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication Setting] from the Utility.

2 The [Communication Setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver: Sound output

4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 34.2 Preparatory Procedures for Monitoring



When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.

For details on the Utility, refer to the following manual.


☞ GT□ User's Manual

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

34.3 Precautions

1 Sound output function setting on GT Designer2

Before connecting the sound output unit, make the sound output file setting.
For details, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

34.4 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Sound output connection	Supporting the sound output function	2.58L	Extended function OS Sound output [03.03.**]

33

CNC CONNECTION

34

CONNECTION TO
SOUND OUTPUT UNIT

35

CONNECTION TO
EXTERNAL I/O DEVICE

36

BAR CODE READER
CONNECTION

37

VIDEO/RGB
CONNECTION

38

PRINTER
CONNECTION

39

MULTI-CHANNEL
FUNCTION

40

FA TRANSPARENT
FUNCTION

CONNECTION TO EXTERNAL I/O DEVICE



35.1 System Configuration page 35-2

This section describes the equipment and cables needed when connecting to the external I/O function. Select a system suitable for your application.

35.2 Connection Cable page 35-5

This section describes the cable specifications when connecting to an external I/O function. Confirm the connection cable specifications for your application.

35.3 Connection Diagram page 35-9

This section describes the wiring diagram of the external I/O function. Be sure to read this when connecting a user-created connection cable, etc.

35.4 Preparatory Procedures for Monitoring page 35-12

This section describes the procedures to be followed before monitoring in the external I/O function. The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

35.5 Precautions page 35-21

This section describes the precautions on the external I/O function. Be sure to read this when connecting the operation panel, etc.

35.6 List of Functions Added by Version Upgrade page 35-22

This section describes the functions added by version upgrade of GT Designer2 or OS.

35.1 System Configuration


Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of ① System configuration and connection conditions correspond to the numbers (e.g. ①) of ② System equipment.

Use these numbers as references when confirming models and applications.





① System configuration and connection conditions


Connection conditions	System configuration
When only inputting	
When inputting and outputting	
When inputting and outputting	

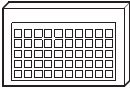2 System equipment

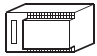
(1) GOT

Image	No.	Name	Model
	①	External I/O unit	GT15-DIO 

(2) Operation panel

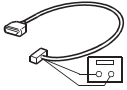
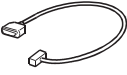

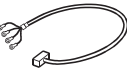
Image	No.	Name	Model
	②	Operation panel	(To be prepared by the user referring to Section 35.3.2.)

(3) Connector/terminal block convertor module

Image	No.	Name	Model
	③	Connector/terminal block convertor module *1*2	A6TBY36-E, A6TBY54-E

- *1 The power supply of 24VDC must be applied for the external I/O unit.
When the power supply of the external I/O unit is stopped in the operation, the operation panel becomes nonfunctional.
For using the operation panel again, reset the GOT after supplying the power to the external I/O unit.
- *2 When the connector/terminal block convertor module is used, the maximum input points are 64 points.

(4) Cable

Image	No.	Name	Model
	4	Connection cable between the GOT and the operation panel ^{*1}	(To be prepared by the user referring to Section 35.2.1.)
	5	Connection cable between the GOT and the connector/terminal block convertor module ^{*1}	(To be prepared by the user referring to Section 35.2.2.)
	6	Connection cable between the connector/terminal block convertor module and the general I/O device	(To be prepared by the user referring to Section 35.3.1.)
	7	Connection cable between the connector/terminal block convertor module and the operation panel	(To be prepared by the user referring to Section 35.3.2.)

^{*1} The power supply of 24VDC must be applied for the external I/O unit.
 When the power supply of the external I/O unit is stopped in the operation, the operation panel becomes nonfunctional.
 For using the operation panel again, reset the GOT after supplying the power to the external I/O unit.

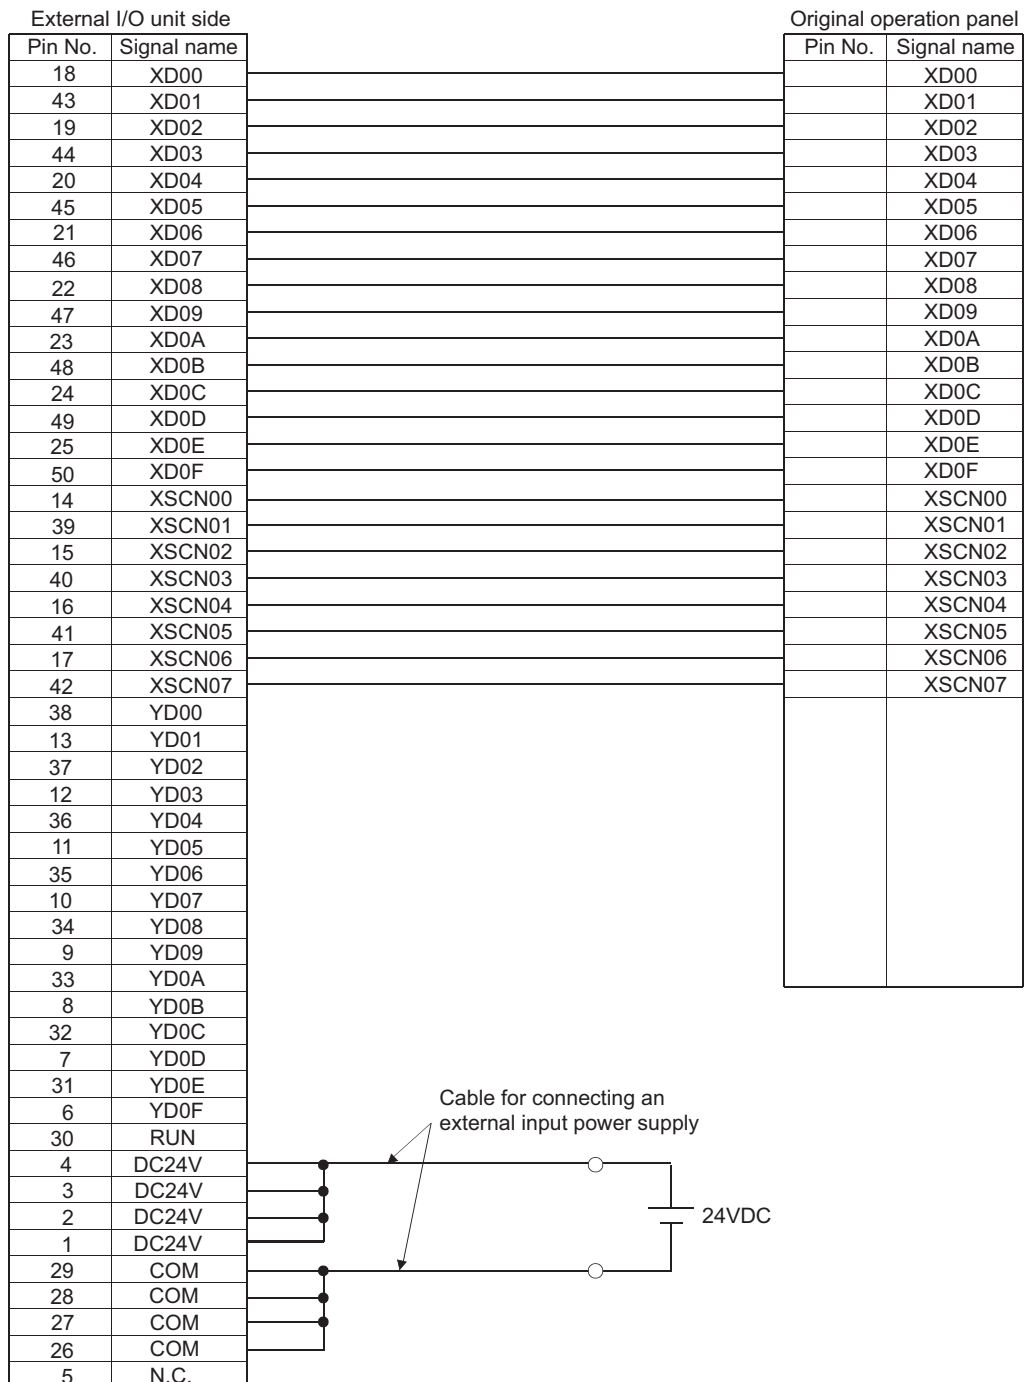
35.2 Connection Cable

The cable for connecting between the external I/O unit and the operation panel or connector/terminal block convertor module or between the connector/terminal block convertor module and the general I/O device can be prepared by the user.


35.2.1 Connection cable between external I/O unit and operation panel

The connection cable between the external I/O unit and the operation panel must be prepared by the user referring to the followings.

1 Connection diagram



2 Connector specifications

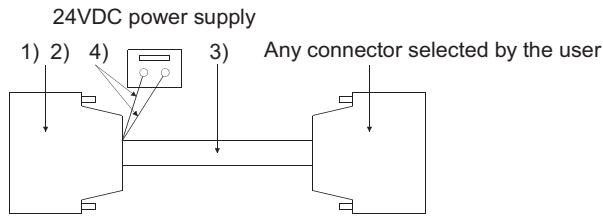


No.	Name	Model	Manufacturer
1)	Connector	PCR-E50FS+	Honda Tsushin Kogyo Co., Ltd.
2)	Connector cover	PCS-E50LA	
3)	Cable	UL 2464 AWG28 or equivalent	—
4)	Cable for connecting an external input power supply	UL 1007 AWG24 or equivalent	—

3 Precautions when preparing the cable


Maximum cable length differs depending on the cable used. Make the cable length within the range that can satisfy the I/O specifications of the external I/O unit.

4 User-created wiring diagram for the operation panel

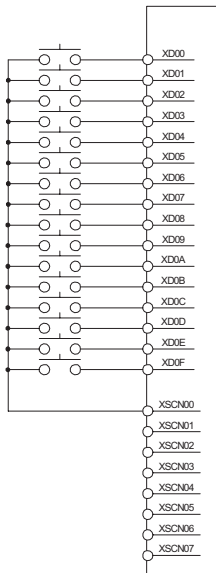For 16-point input



For 128-point input^{1, 2}

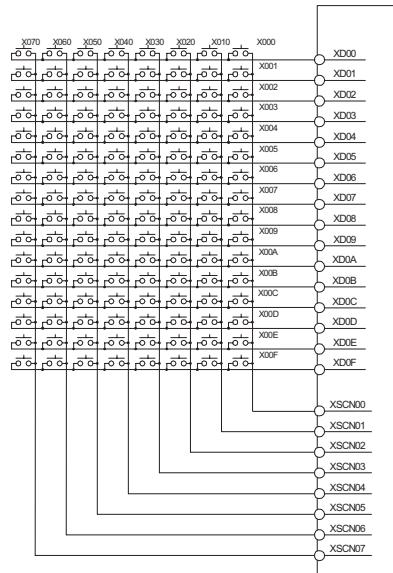

*1 The 128-point input can be executed with using a 16-point input signal (XD00 to XD0F) with an 8-point scan signal (XSCN00 to XSCN07).

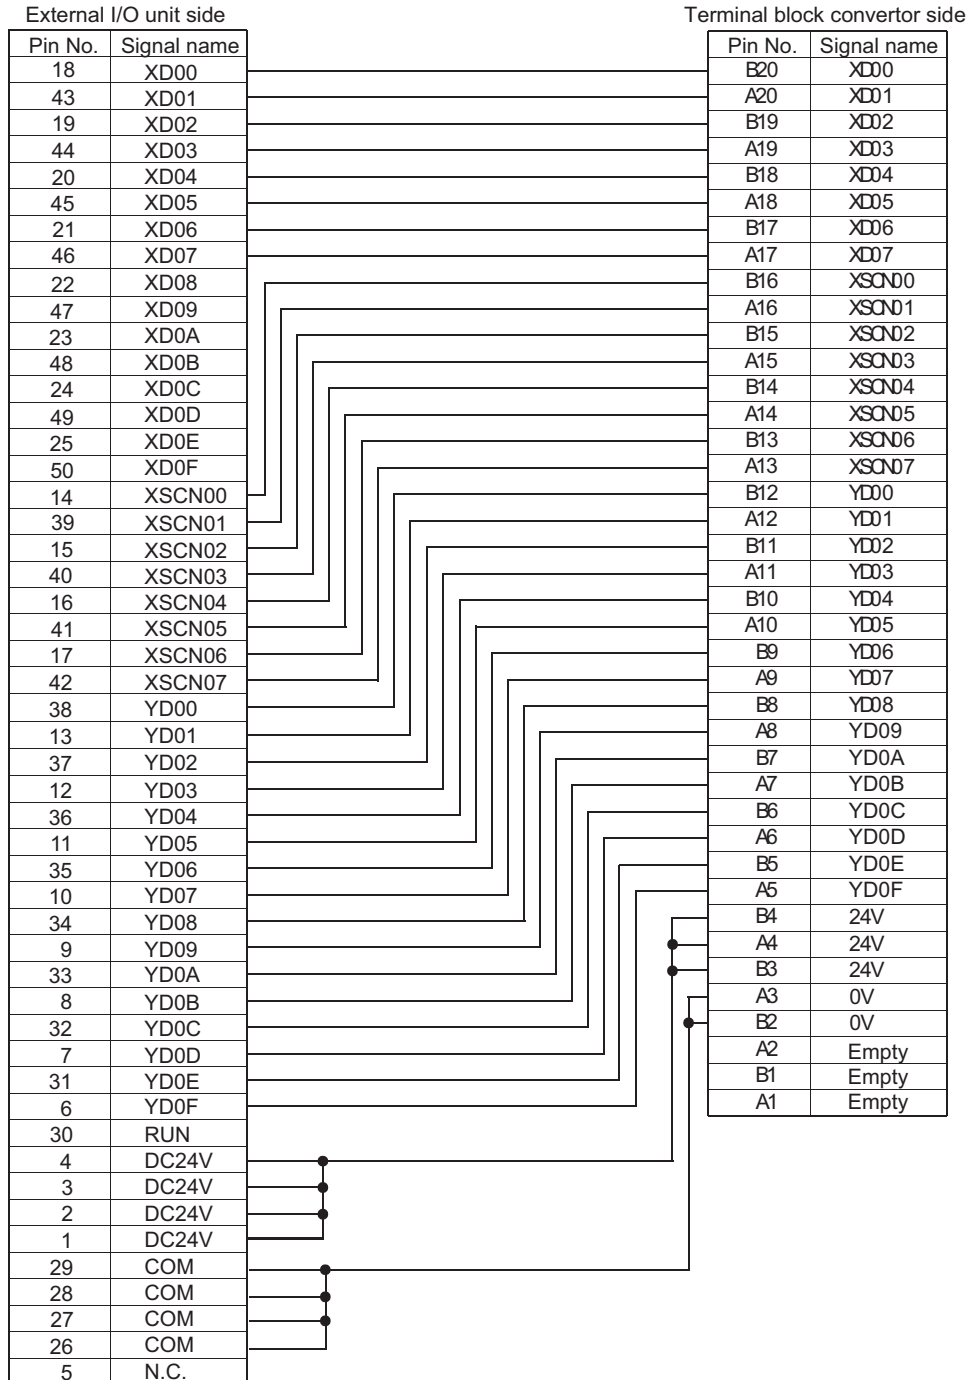
*2 When two or more switches are pressed simultaneously, be sure to put the diode to each switch. (Only for 128-point input)




35.2.2 Connection cable between external I/O unit and connector/terminal block converter module

The connection cable between the external I/O unit and the connector/terminal block converter module must be prepared by the user referring to the followings.

1 Connection diagram



2 Connector specifications

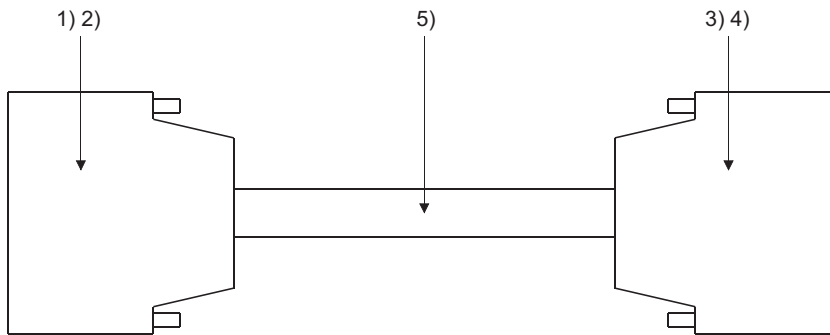

No.	Name	Model	Manufacturer
1)	Connector	PCR-E50FS+	Honda Tsushin Kogyo Co., Ltd.
2)	Connector cover	PCS-E50LA	
3), 4)	Connector (with a cover)	A6CON1	Mitsubishi Electric Corporation
3)	Connector	FCN-361J040-AU	FUJITSU COMPONENT LIMITED
4)	Connector cover	FCN-360C040-B	
5)	Cable	UL 2464 AWG28 or equivalent	—

3 Precautions when preparing the cable

Maximum cable length differs depending on the cable used.

Make the cable length within the range that can satisfy the I/O specifications of the external I/O unit.

35.3 Connection Diagram

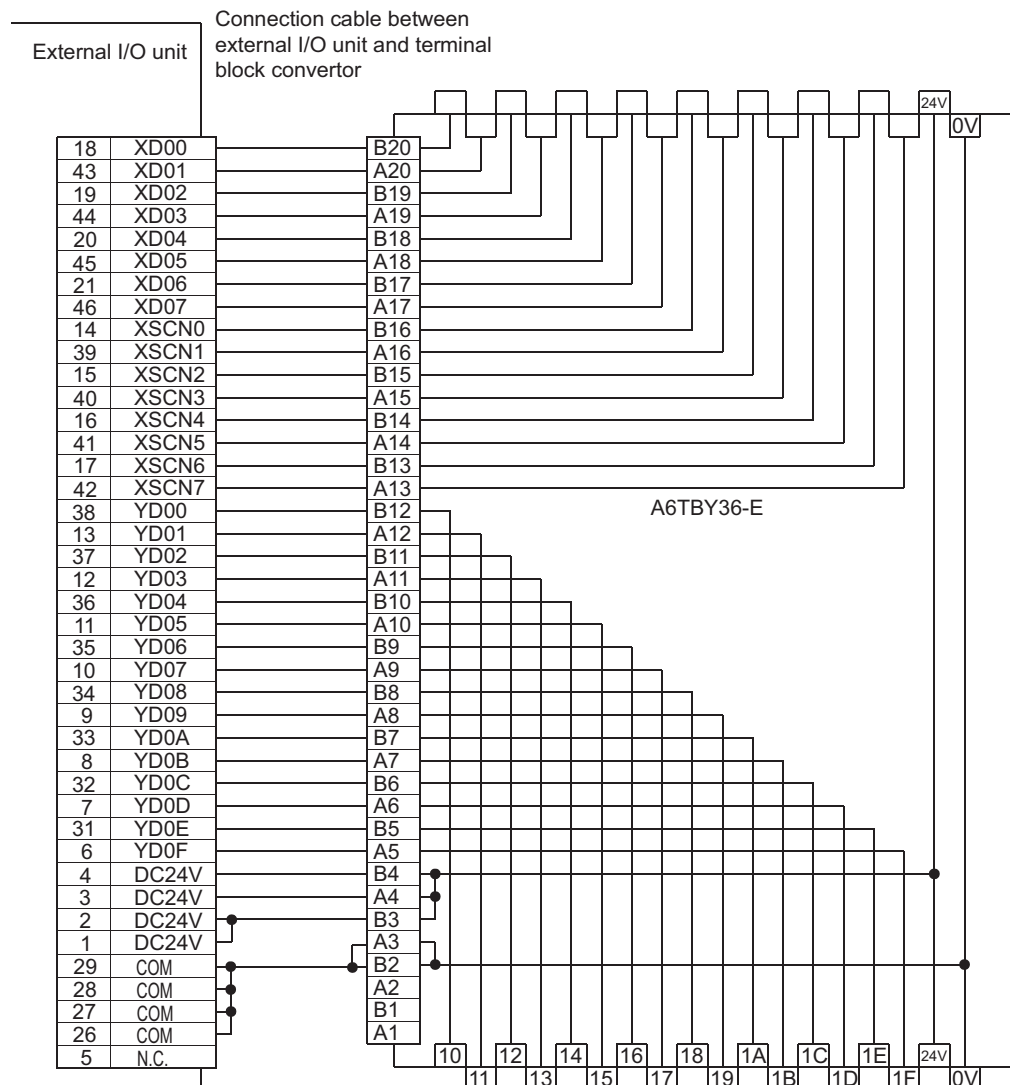
The cable for connecting between the external I/O unit and the user-created original operation panel or connector/terminal block converter module or between the connector/terminal block converter module and the general I/O device can be prepared by the user.

35.3.1 Connection diagram between external I/O unit and connector/terminal block converter module


The connection cable between the external I/O unit and the connector/terminal block converter module must be prepared by the user referring to the followings.

1 Connection diagram

(1) When using A6TBY36-E connector/terminal block module



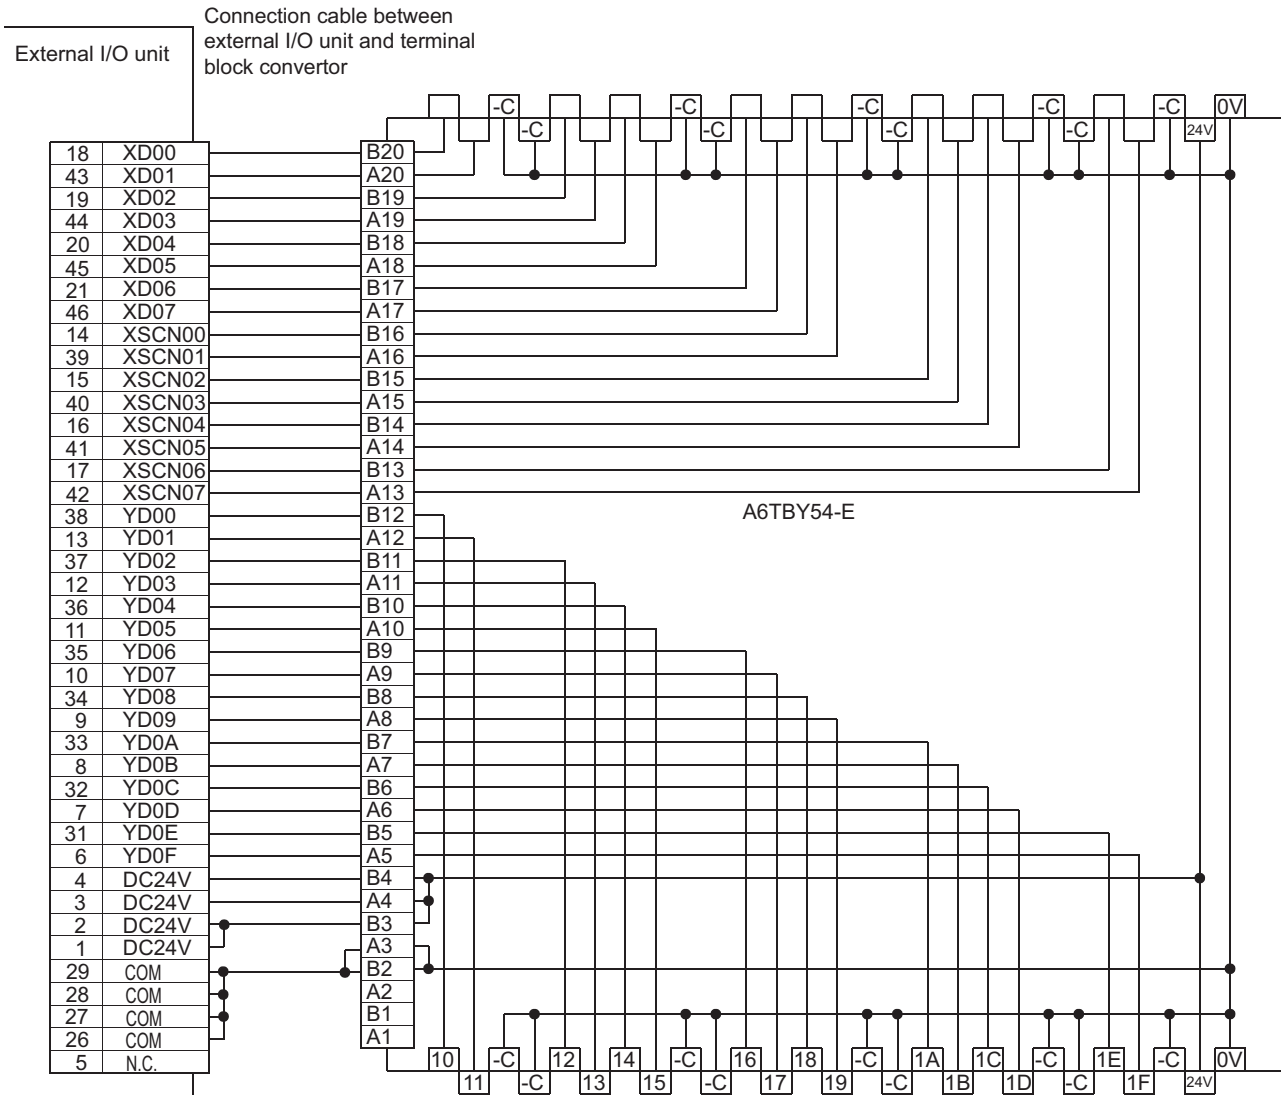(2) When using A6TBY54-E connector/terminal block module




35.3.2 Connection cable between connector/terminal block converter module and user-created original operation panel


The connection cable between the connector converter module and the user-created original operation panel must be prepared by the user referring to the followings.

1 Connection diagram

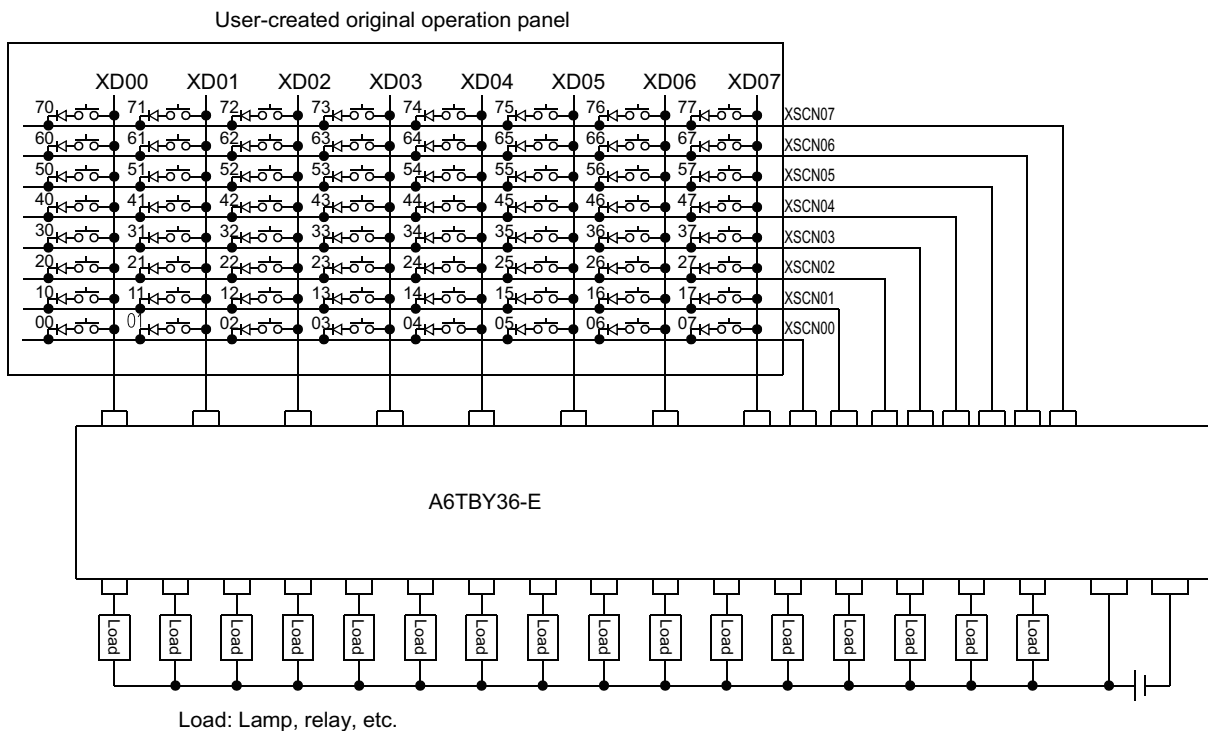(1) When using A6TBY36-E connector/terminal block module




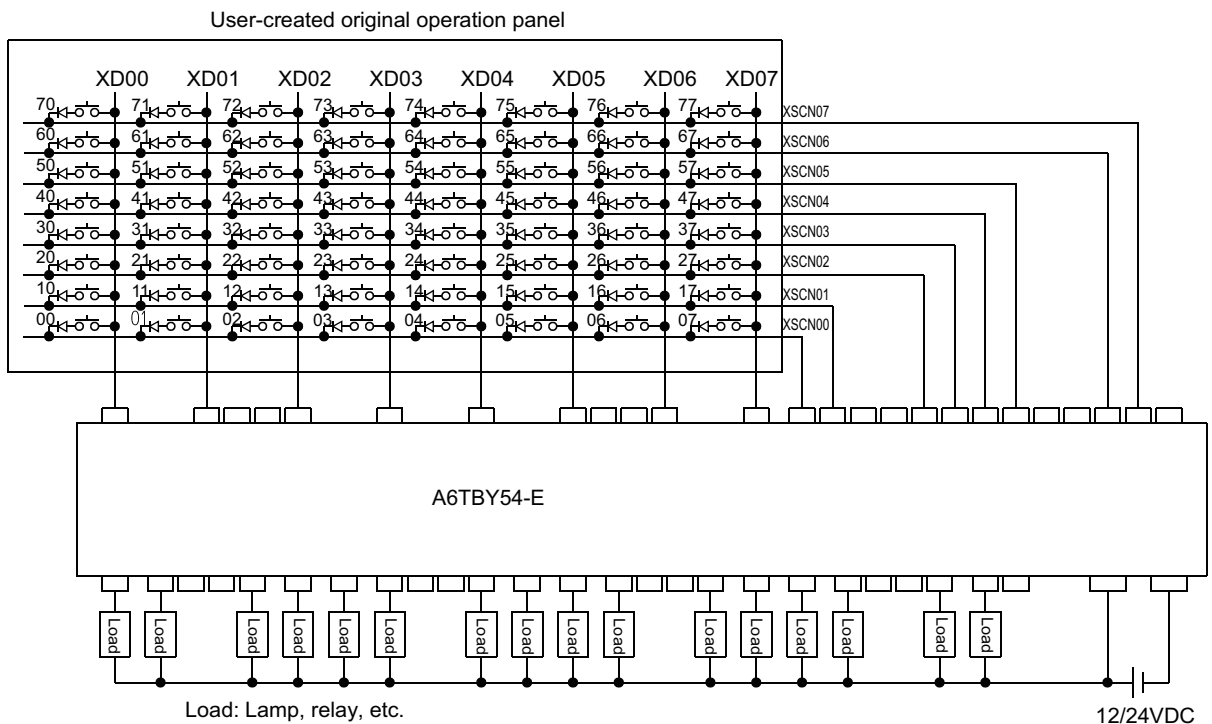(2) When using A6TBY54-E connector/terminal block module




35.4 Preparatory Procedures for Monitoring

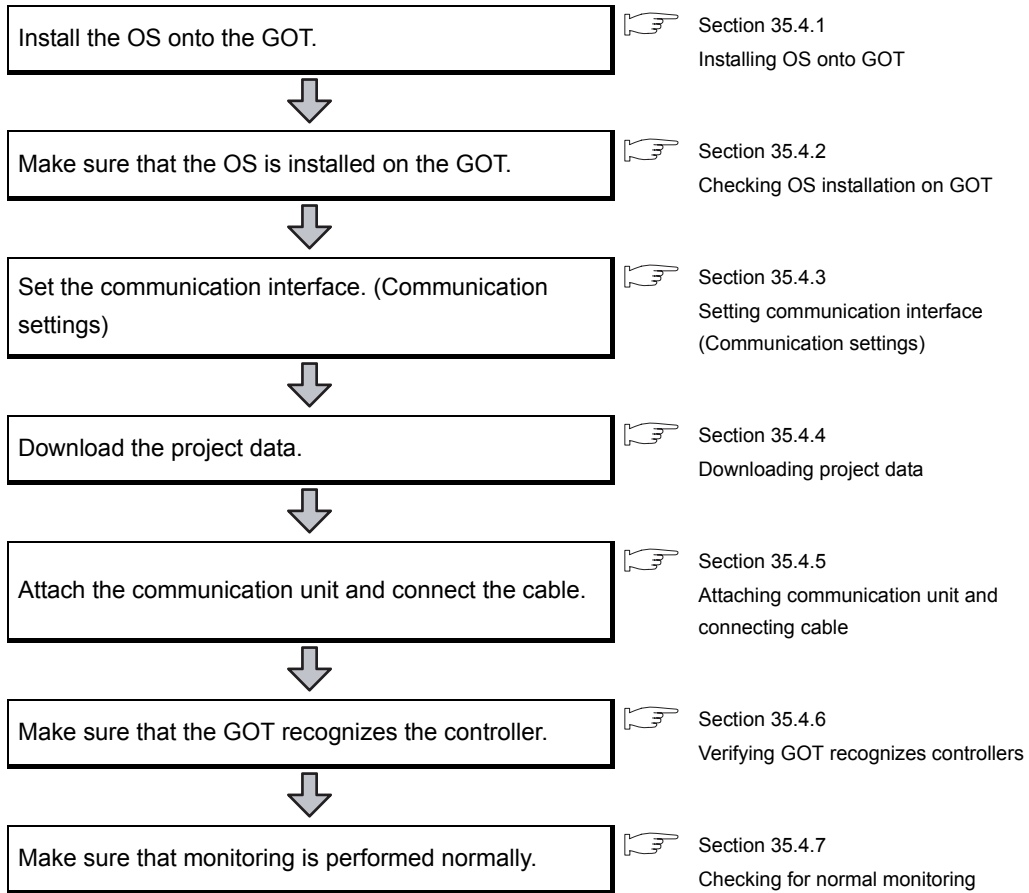
The following shows the procedures to be taken before monitoring and corresponding reference sections.



35.4.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

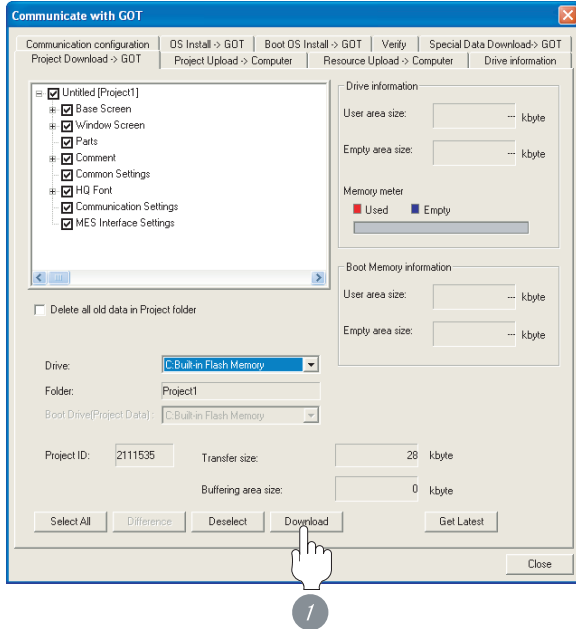
 GT Designer2 Version □ Basic Operation/Data Transfer Manual




1 Check-mark an extended function OS (External I/O / Operation panel), and click the **Install** button.

35.4.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

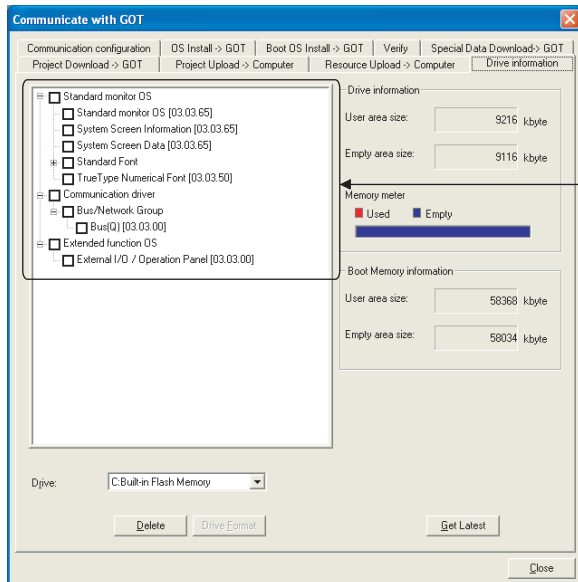 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

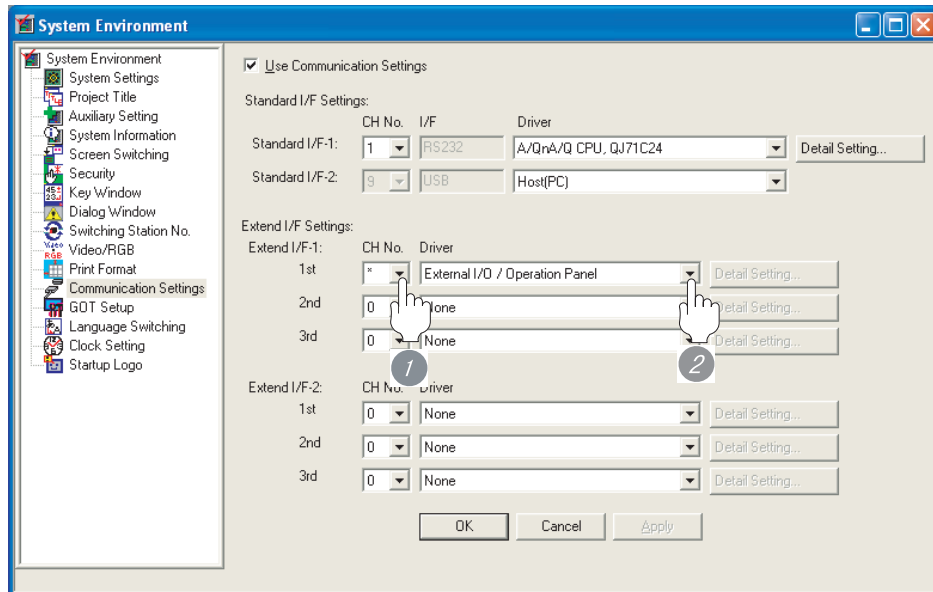
- 1) Standard monitor OS
- 2) Communication driver: Depends on the connection type
- 3) Extended function OS: External I/O / Operation Panel

35.4.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set [*] to the channel No. used.
- 2 Set the driver to [External I/O / Operation Panel].



- (1) Communication interface setting by Utility
The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
For details on the Utility, refer to the following manual.


 GT □ User's Manual

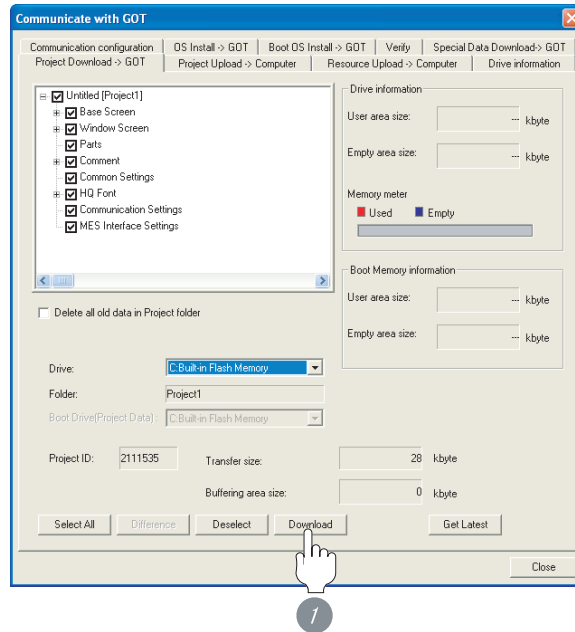
- (2) Precedence in communication settings
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

35.4.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


35.4.5 Attaching communication unit and connecting cable



Cautions when attaching the option unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the option unit and connecting the cable.

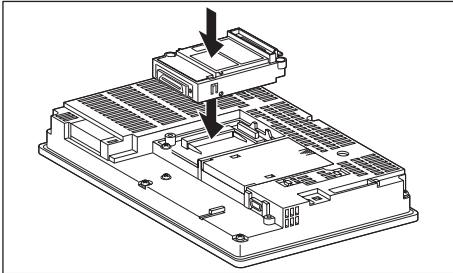1 Attaching the option unit



- 1 Attach the external I/O unit to the extension unit connector on the GOT.

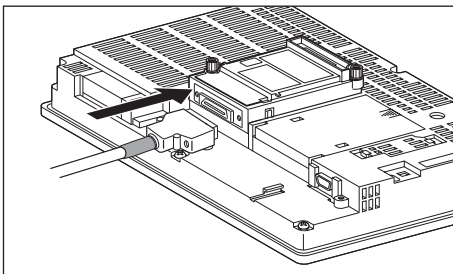


External I/O unit

For details on the external I/O unit, refer to the following manual.

GT15 External I/O unit User's Manual

2 How to connect the cable



- 2 Connect the cable to the external I/O unit.

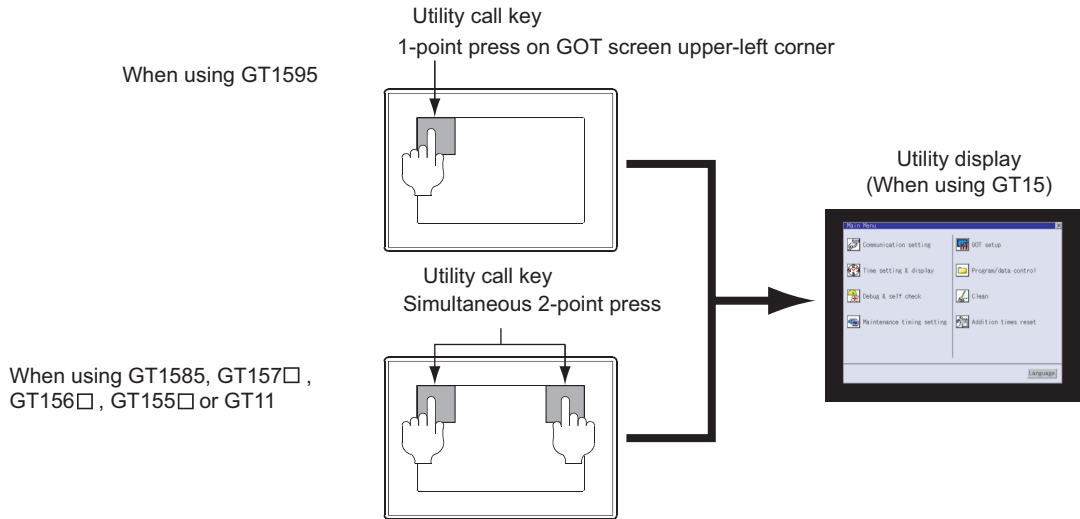
35.4.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

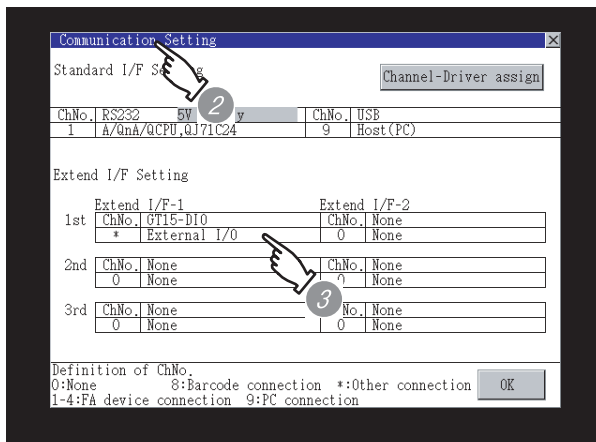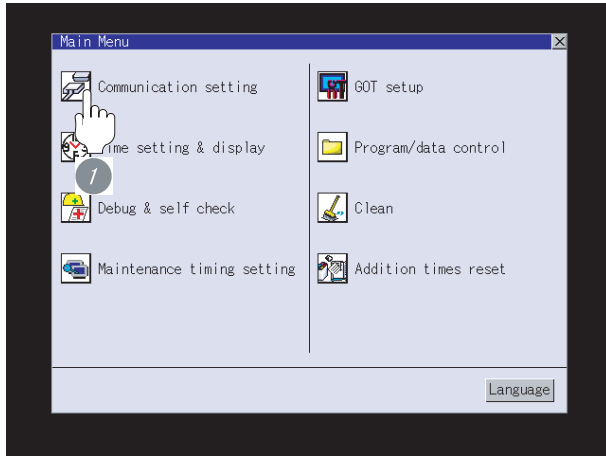GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication Setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver: External I/O / Operation Panel

4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 35.4 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

35.4.7 Checking for normal monitoring

1 Check for the I/O status

Pressing the numeric keypad or the button of the operation panel allows you to confirm that the input data is written to the GOT.

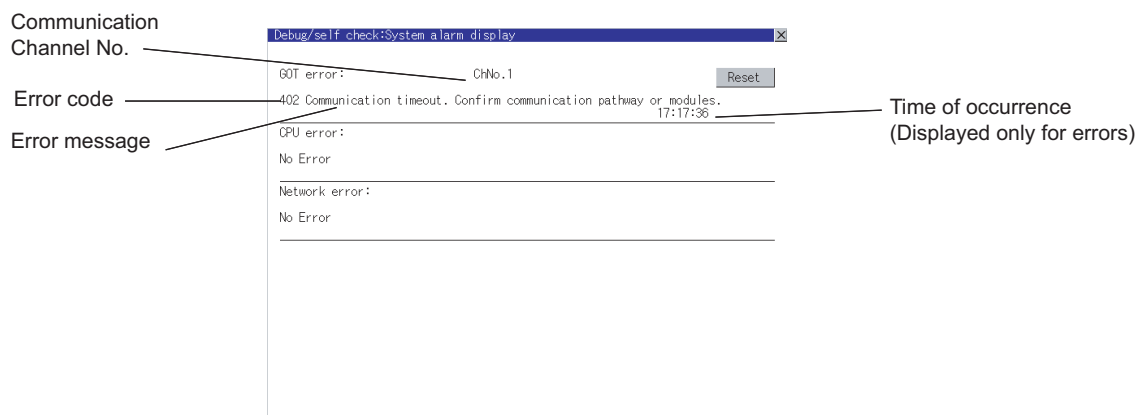
☞ Section 42.1 System Configuration

2 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT and communications.

For details on the system alarm, refer to the following manual.

☞ GT15 User's Manual



Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

☞ GT Designer2 Version □ Screen Design Manual


All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

35.5 Precautions

1 External I/O function setting on GT Designer2

Before using the operation panel, make the operation panel setting.

For details, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

35.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
External I/O function	Supporting the external I/O device	2.58L	Communication driver External I/O/Operation panel [03.03.**]

BAR CODE READER CONNECTION



36.1 System Configuration page 36-2

This section describes devices and cables needed for bar code reader connection.
Refer to this section to select the desired system.

36.2 Preparatory Procedures for Monitoring page 36-4

This section describes the preparatory procedures for the monitoring in the bar code reader connection.
The sequential checkup procedure will be helpful for those who communicate through the GOT for the first time.

36.3 Precautions page 36-14

This section describes the precautions for bar code reader connection.
Refer to this section without fail before starting bar code reader connection.

36.4 System Configuration Examples page 36-15

This section describes system configuration examples of the bar code reader connection.

36.5 List of Functions Added by Version Upgrade page 36-19

This section describes the functions added by version upgrade of GT Designer2 or OS.


36.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.



1 System configuration and connection conditions




Connection conditions		System Configuration
Number of GOT	Distance	
1	Varies according to the bar code reader's specifications.	<p>Connect to the PLC.*1</p> <p>Varies according to the connection type.</p> <p>② Bar code reader</p>

*1 The PLC connection type and communication interface for bar code reader connection are shown below.



GOT type	PLC ↔ GOT		GOT ↔ bar code
	Connection type	Communication interface of GOT	Communication interface of GOT
	Bus connection	Bus connection unit	RS-232 interface
	MELSECNET/10 connection (PLC to PLC network)	MELSECNET/10 communication unit	
	CC-Link connection (intelligent device station)	CC-Link communication unit	
	Ethernet connection	Ethernet communication unit	
	Direct CPU connection	RS-232 communication unit	
	Computer link connection	RS-422/485 communication unit	
	Third party PLC connection		RS-422 interface
	Direct CPU connection		
	Computer link connection		
	Third party PLC connection		

2 System equipment


(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)  

(2) Bar code reader

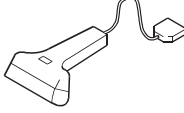Image	No.	Name	Model name
	2	Bar code reader*1	For connectable bar code readers and system equipment, refer to the following Technical News.  List of valid devices applicable for GOT1000 series (T10-0039)

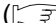
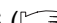
*1 For available bar code types, refer to the following Technical News.

 List of valid devices applicable for GOT1000 series (T10-0039)

Remark

(1) System configuration between GOT and PLC

For the system configuration between the GOT and PLC, refer to the corresponding section.

- MITSUBISHI PLC CONNECTIONS ( Sections 2 to 8)
- THIRD PARTY PLC CONNECTIONS ( Sections 9 to 18)

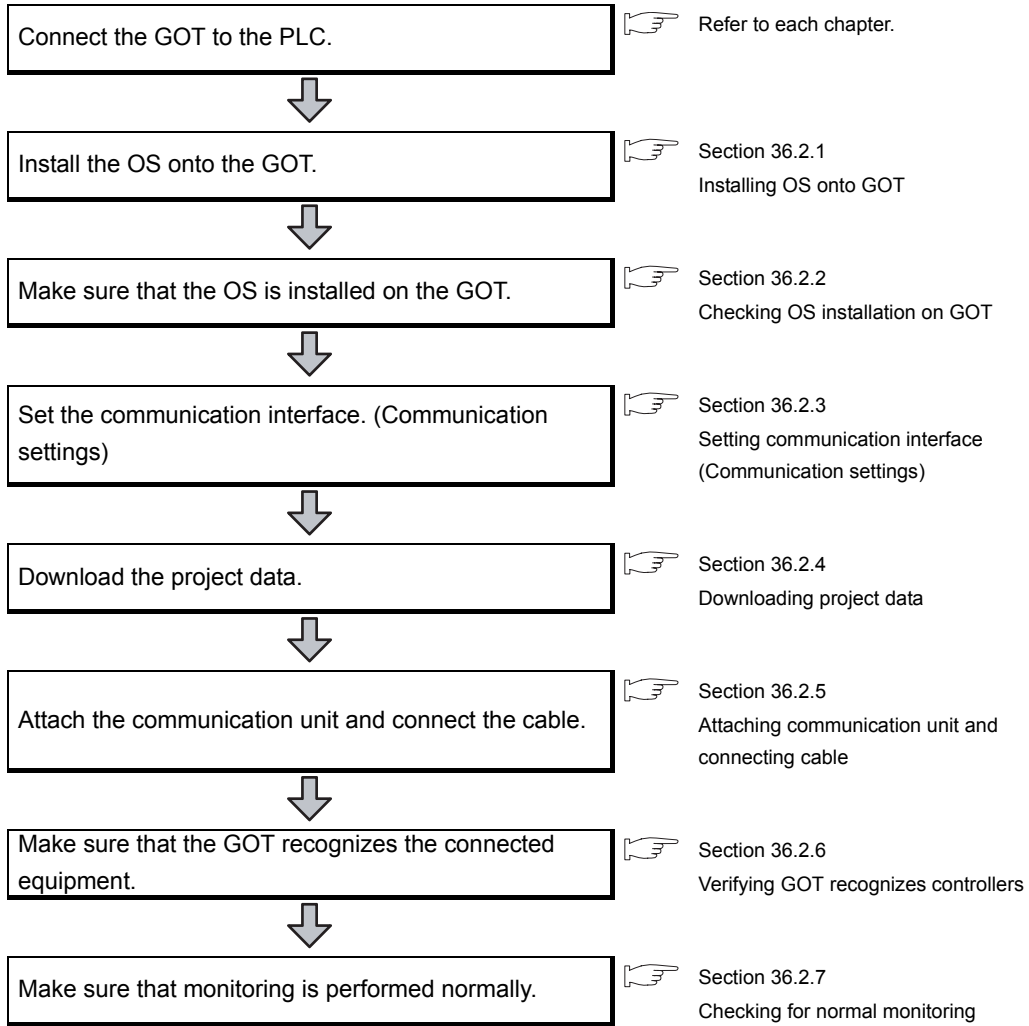
(2) Technical News

Visit the Mitsubishi Electric FA Equipment Information Service website (MELFANS web) to refer to the Technical News.

http://wwwf2.mitsubishielectric.co.jp/melfansweb/english/index_e.htm

36.2 Preparatory Procedures for Monitoring

The following shows the procedures to be taken before monitoring and corresponding reference sections.



On system configuration example

This section describes GOT side settings.

For system configuration examples of bar code reader connection, refer to the following.


Section 36.4 System Configuration Examples

36.2.1 Installing OS onto GOT

Install the extended function OS onto the GOT.

For the OS installation methods, refer to the following manual.

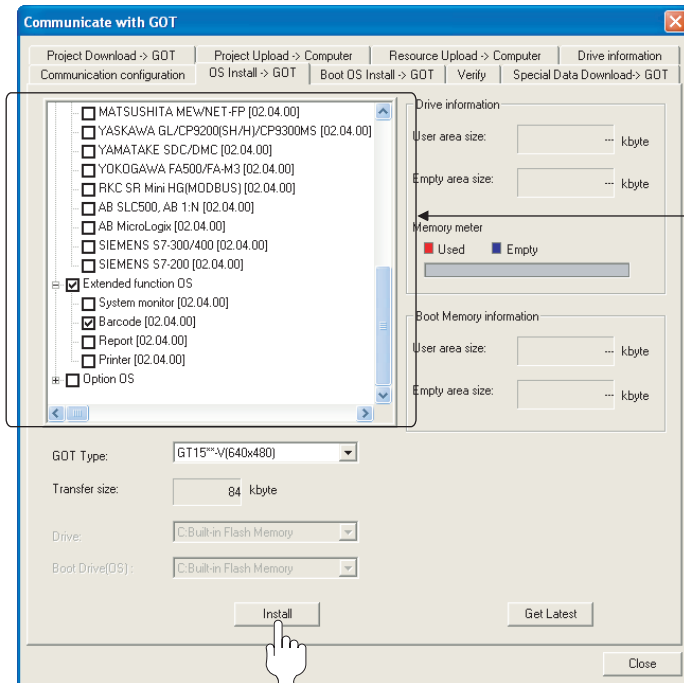 GT Designer2 Version □ Basic Operation/Data Transfer Manual



Check the following under the Communication driver.

- Depends on the connection type


Place a check mark in the box of the following item in the extended function OS.

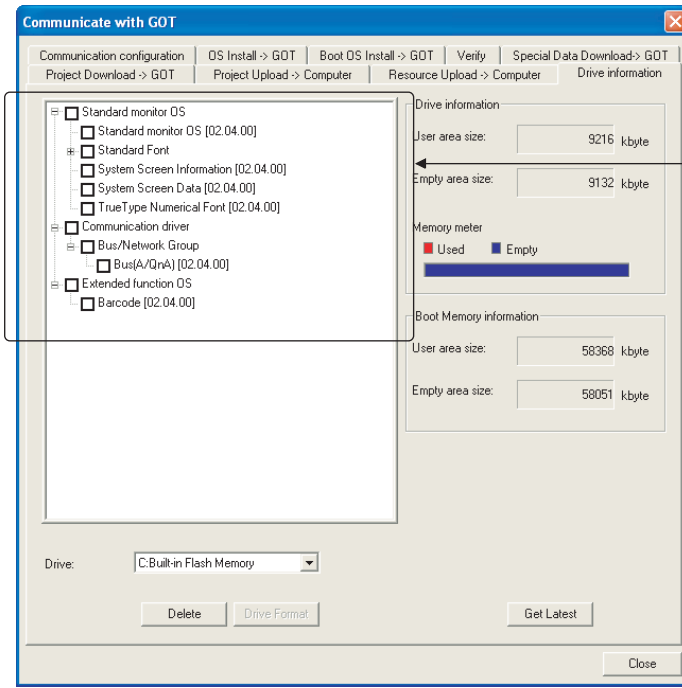
- Barcode

1 Check-mark a extended function OS (Barcode), and click the **Install** button.

36.2.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

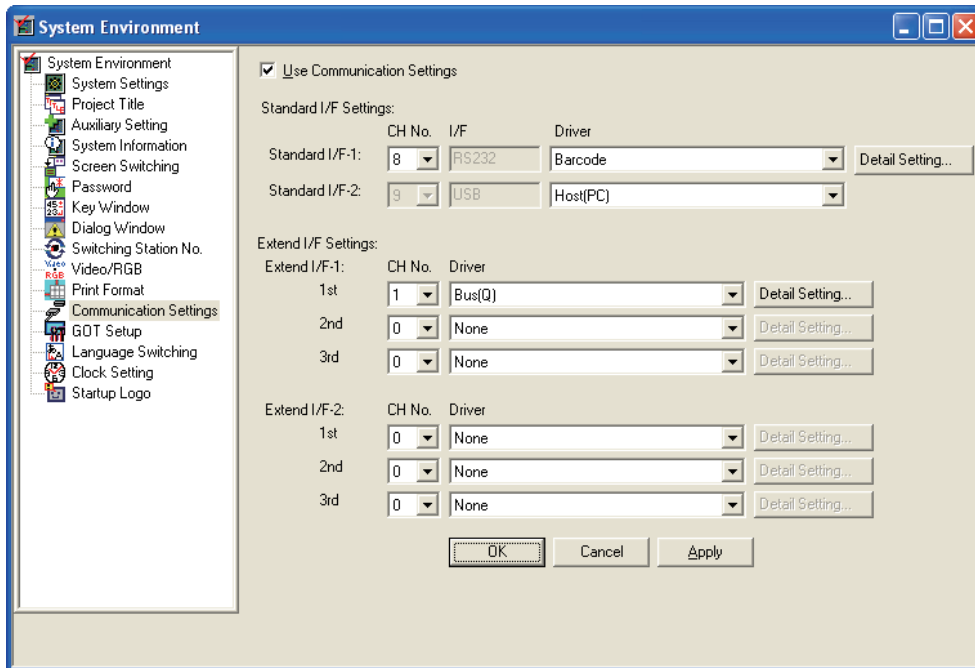
- 1) Standard monitor OS
- 2) Communication driver: Depends on the connection type
- 3) Extended function OS: Barcode


36.2.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



- 1 Set "8" to the channel No. used.
- 2 Set the driver to "Barcode".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

2 Communication detail settings

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps>	4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps
Data Bit	Set this item when change the data length used for communication with the connected equipment. <Default: 8bit>	7bit/8bit
Stop Bit	Specify the stop bit length for communications. <Default: 1bit>	1bit/2bit
Parity	Specify whether or not to perform a parity check, and how it is performed during communication. <Default: Even>	None Even Odd



(1) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

GT □ User's Manual


(2) Precedence in communication settings

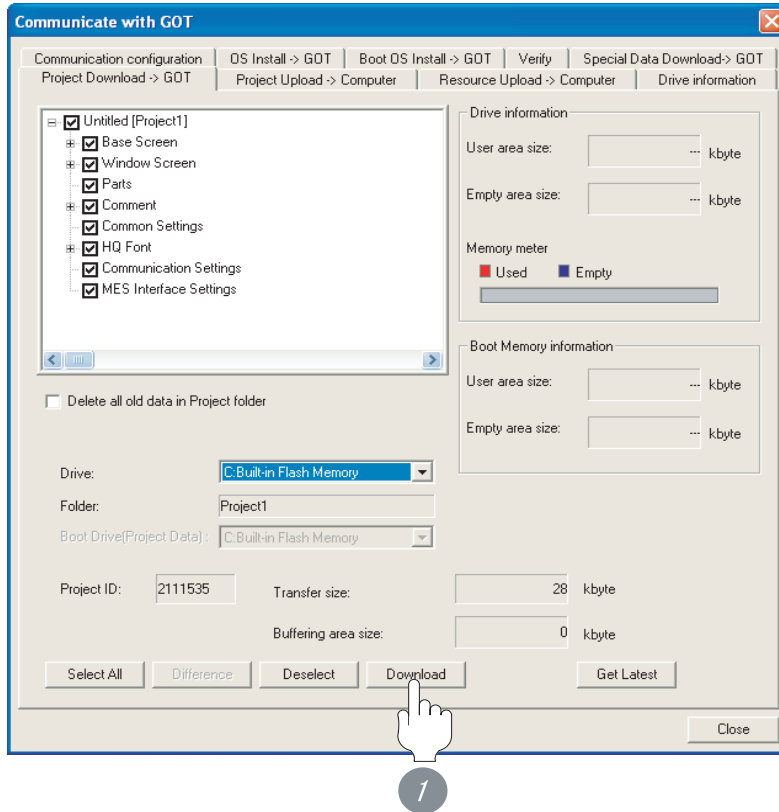
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

36.2.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.

36.2.5 Attaching communication unit and connecting cable



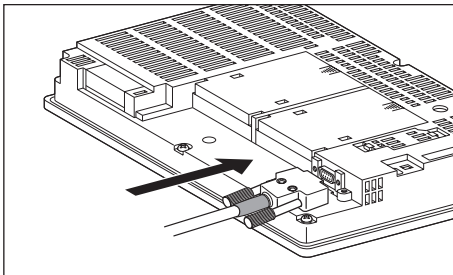
Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

1 How to connect the cable


(1) How to connect the RS-232 cable

(a) For the GT15



1 Connect the RS-232 cable to the RS-232 interface on the GOT.

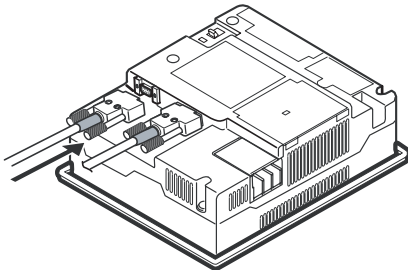(b) For the GT11



1 Connect the RS-232 cable to the RS-232 interface on the GOT.

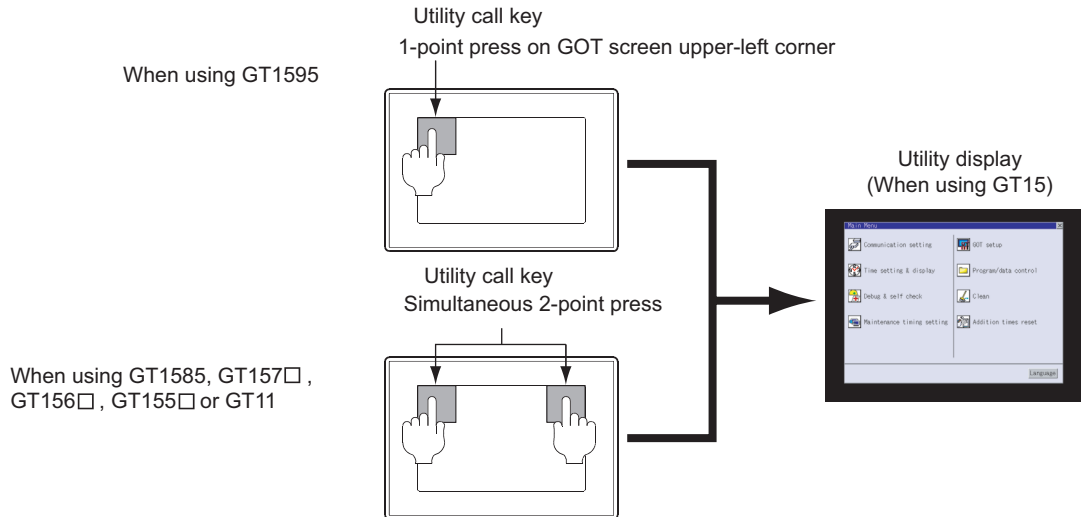
36.2.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point

When setting the utility call key to 1-point


When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.

For the setting of the utility call key, refer to the following.

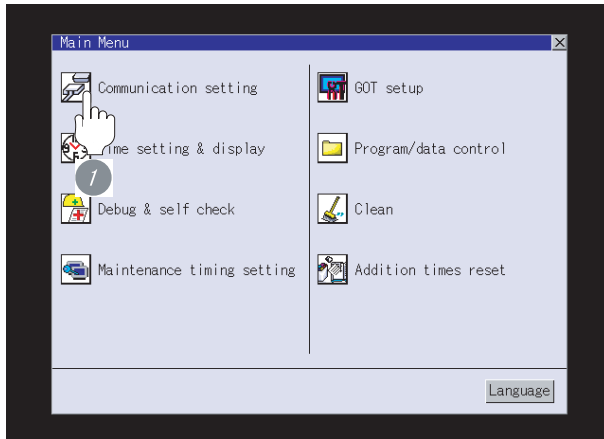 GT□ User's Manual



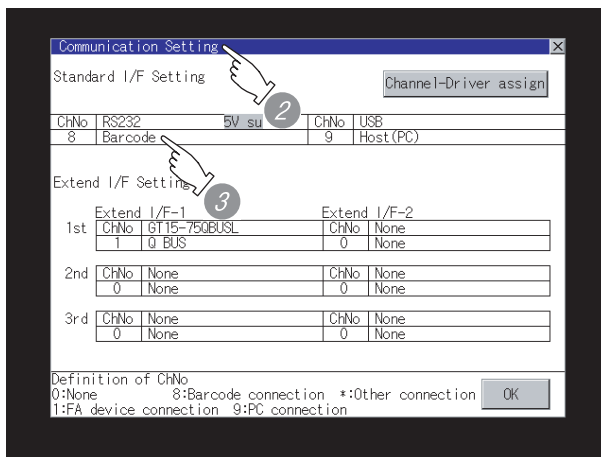- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver: Barcode
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 36.2 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility


The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

36.2.7 Checking for normal monitoring

1 Read the bar code

Read the bar code with a bar code reader and check that the read data are written into the PLC CPU.


 Section 36.4 System Configuration Examples

2 Check for errors occurring on the GOT.

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

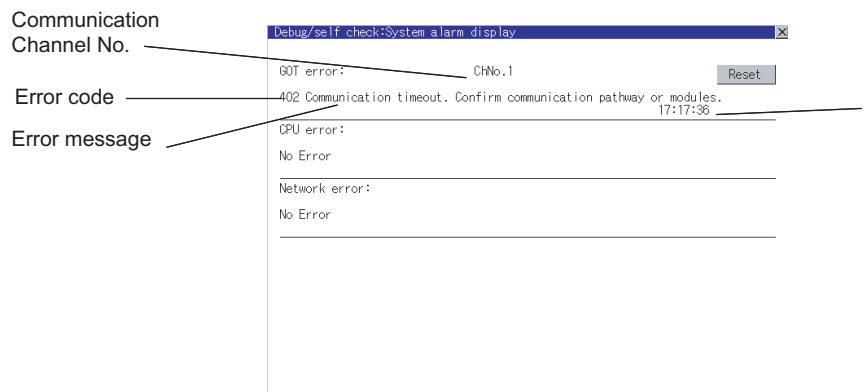 GT□ User's Manual (When using GT15)



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

36.3 Precautions

1 Bar code function setting on GT Designer2

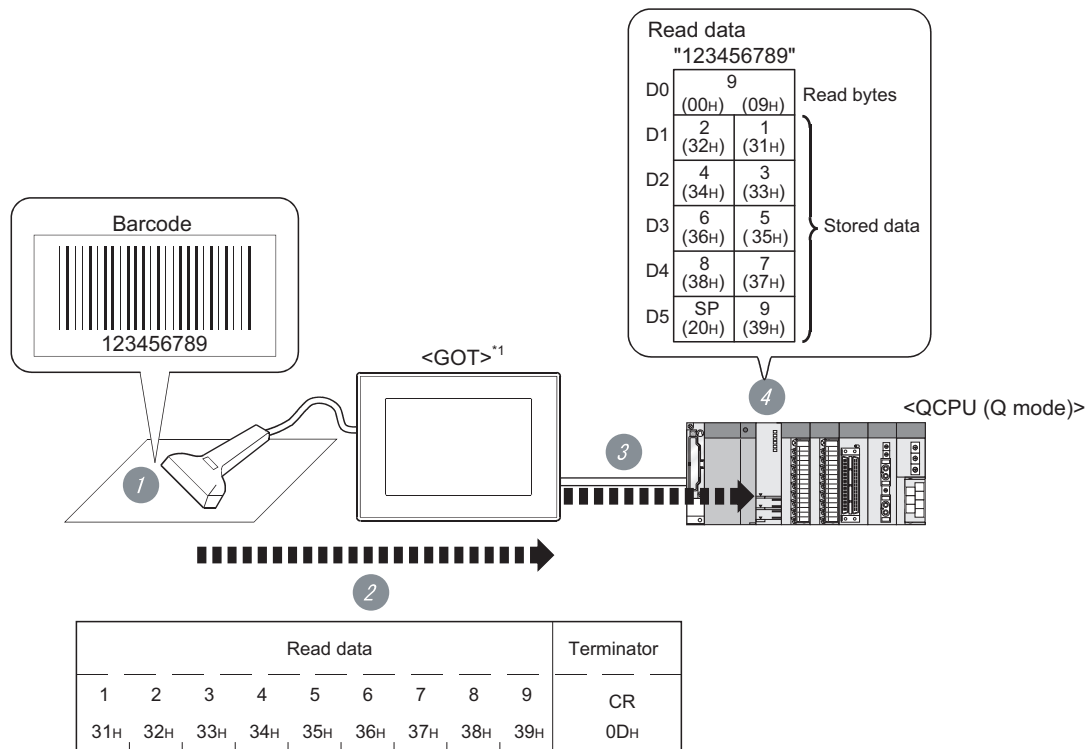
Before connecting the bar code reader, make the bar code function and system data settings.
For details, refer to the following manual.

 GT Designer2 Version□ Screen Design Manual

36.4 System Configuration Examples

A system configuration example for bar code reader connection is shown below.

1 System Configuration



*1 The GOT asnd QCPU (Q mode) are connected through a bus.
For bus connection, refer to the following.

☞ Chapter 2 BUS CONNECTION

- 1 The bar code is read with the bar code reader.
 - ☞ 2 Bar code reader setting
- 2 The GOT receives the data sent from the bar code reader.
 - ☞ 3 "Communication settings" in GT Designer2
- 3 The received data are written to the PLC CPU.
 - ☞ 4 "Bar Code" in GT Designer2
- 4 The data read with the bar code reader are written into the PLC CPU devices.
 - ☞ 5 Confirmation on PLC side

2 Bar code reader setting

The bar code reader shall be configured as shown below.

Item	Setting
Baud rate	9600bps
Data length	8bit
Stop bit	1bit
Parity	Even
Header	None
Terminator	CR



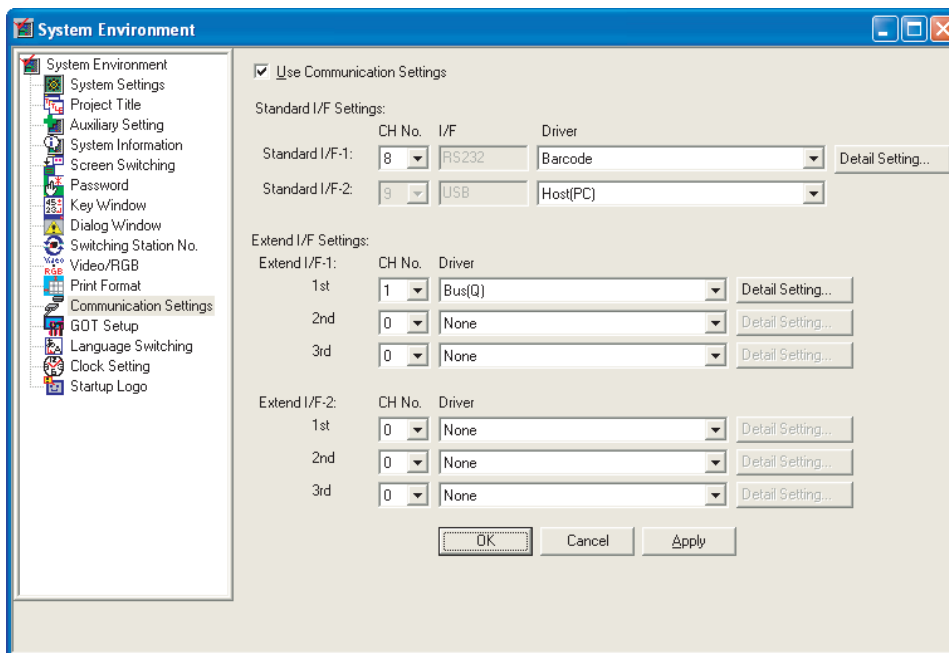
Bar code reader setting

For the bar code reader setting, refer to the following manual.

The User's Manual of the bar code reader you are using

3 "Communication settings" in GT Designer2

(1) Communication settings



(2) Barcode

Keep consistency with the bar code reader setting.

Item	Setting (Use default value.)
Transmission Speed	9600bps
Data Bit	8bit
Stop Bit	1bit
Parity	Even




"Communication settings" in GT Designer2

For the "Communication settings" in GT Designer2, refer to the following.

Section 36.2.3 Setting communication interface (Communication settings)

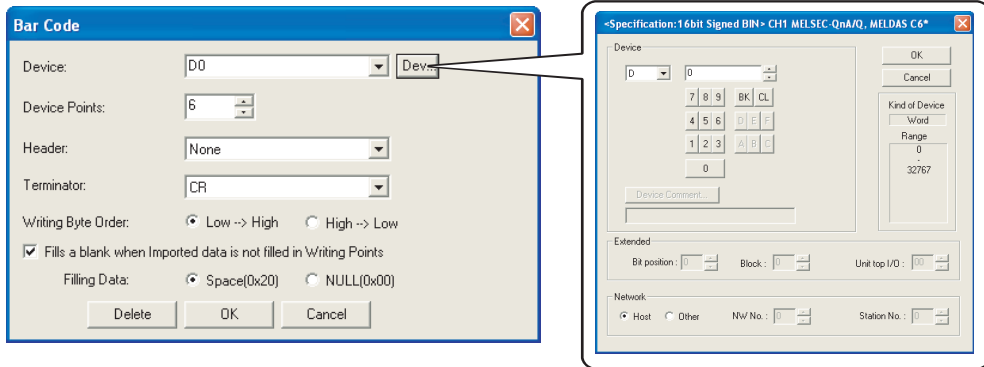4 "Bar Code" in GT Designer2



Item	Setting
Device	D0
Device Points	6
Header* ¹	None
Terminator* ¹	CR
Writing Byte Order	Low → High
Fills a blank when Imported data is not filled in Writing Points	Check (Filling Data is available)
Filling Data	Space (0 × 20)

*1 Keep consistency with the bar code reader setting.



"Bar Code" in GT Designer2

For the "Bar Code" setting in GT Designer2, refer to the following manual.

👉 GT Designer2 Version□ Screen Design Manual

5 Confirmation on PLC side

Connect GX Developer to the QCPU (Q-mode) and check if the data, which has been read with the bar code reader, are written in D0 to D5.

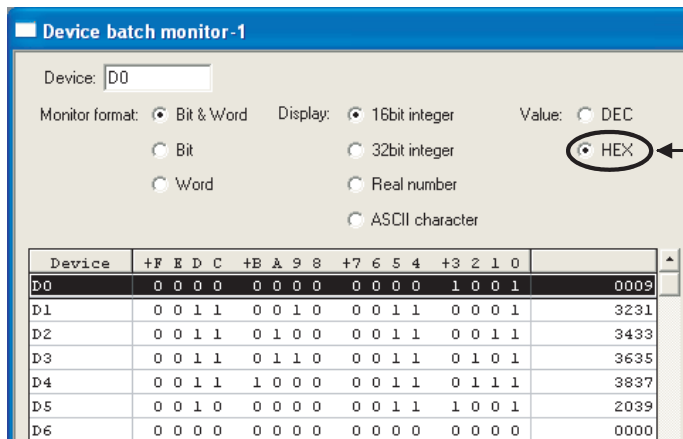
For GX Developer operations, refer to the following manual.

 GX Developer Version□ Operating Manual

- (1) Confirming the device values of D0 to D5 (when using GX Developer Version 8)

Starting procedure

GX Developer → [Online] → [Monitor] → [Device batch]



ASCII codes are hexadecimal.
Specify [HEX] for [Value] of the GX
Developer and confirm the read data.

36.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Bar code reader connection	Supporting the bar code reader connection	2.09K	Extended function OS Barcode [01,02,**]
Bar code reader connection	Supporting the 2D bar code reader connection	2.27D	Extended function OS Barcode [02,04,**]

33

CNC CONNECTION

34

CONNECTION TO SOUND OUTPUT UNIT

35

CONNECTION TO EXTERNAL I/O DEVICE

36

BAR CODE READER CONNECTION

37

VIDEO/RGB CONNECTION

38

PRINTER CONNECTION

39

MULTI-CHANNEL FUNCTION

40

FA TRANSPARENT FUNCTION

VIDEO/RGB CONNECTION



37.1 System Configuration page 37-2

This section describes the equipment and cables needed when connecting to Video/RGB. Select a system suitable for your application.

37.2 Connection Cable page 37-7

This section describes the specifications of the cables needed when connecting to a Video/RGB. Check the specifications of the connection cables.

37.3 Preparatory Procedures for Monitoring page 37-12

This section provides the procedures to be followed before performing monitoring in connection to Video/RGB. The procedures are written on the step-by-step basis so that even a novice GOT user can follow them to start communications.

37.4 Precautions page 37-22

This section describes the precautions about Video/RGB connection. Refer to this section without fail before starting Video/RGB connection.

37.5 List of Functions Added by Version Upgrade page 37-23

This section describes the functions added by version upgrade of GT Designer2 or OS.

37.1 System Configuration

The following GOT models support the Video/RGB connection.

GOT model
GT1585V-S
GT1575V-S

Select a system configuration suitable for your application.




Conventions used in this section

Numbers (e.g. ①) of ① System configuration and connection conditions correspond to the numbers (e.g. ①) of ② System equipment.

Use these numbers as references when confirming models and applications.


37.1.1 Displaying video image on GOT

Extended function OS



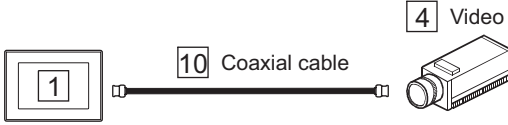
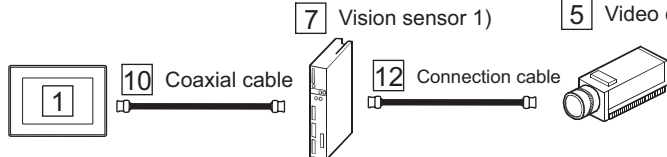
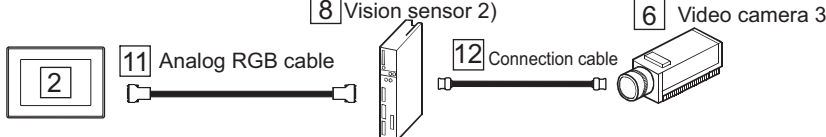



Video/RGB input

Communication driver



Connection type dependent

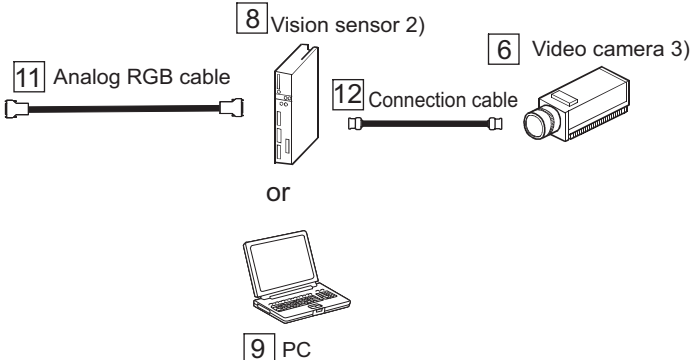1 System configuration and connection conditions





Connection conditions				System configuration
Number of GOTs	Number of Video/RGB equipment	Signal type	Distance	
1	4 (max)	NTSC/PAL		
1	4 (max)			
1	1	Analog RGB	*CP	
1	1			
1	4 (max)	NTSC/PAL		
	1	Analog RGB		

*1 The cable length differs depending on the specification of the video camera, vision sensor, or PC used by the user.


33 CNC CONNECTION
 34 CONNECTION TO SOUND OUTPUT UNIT
 35 CONNECTION TO EXTERNAL I/O DEVICE
 36 BAR CODE READER CONNECTION
 37 VIDEO/RGB CONNECTION
 38 PRINTER CONNECTION
 39 MULTI-CHANNEL FUNCTION
 40 FA TRANSPARENT FUNCTION

2 System equipment





(1) GOT

Image	No.	Name	Model name
	1	Video input unit • For connection between GOT and video camera*1	GT15-75V4 
		Video input unit • For connection between GOT and vision sensor	
	2	RGB input unit • For connection between GOT and PC/vision sensor	GT15-75R1 
	3	Video/RGB input unit • For connection between GOT and video camera*1 • For connection between GOT and PC/vision sensor	GT15-75V4R1 

*1For connectable video camera types, refer to the following Technical News.

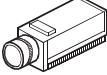 List of valid devices applicable for GOT1000 series (T10-0039)

(2) Video/RGB connection equipment

Image	No.	Name	Model name
	4	Video camera 1)	For connectable video camera types, refer to the following Technical News.  List of valid devices applicable for GOT1000 series (T10-0039)
	5	Video camera 2)	Select a model in accordance with the 7 vision sensor 1) specifications used by the user.
	6	Video camera 3)	Select a model in accordance with the 8 vision sensor 2) specifications used by the user.
	7	Vision sensor 1)	To be selected by the user.
	8	Vision sensor 2)	To be selected by the user.
	9	PC	To be selected by the user.






Remark

Technical News

Visit the Mitsubishi Electric FA Equipment Information Service website (MELFANS web) to refer to the Technical News.

http://wwwf2.mitsubishielectric.co.jp/melfansweb/english/index_e.htm

(3) Cable

Image	No.	Name	Model name
	10	Coaxial cable	(To be prepared by the user.  Section 37.2 Connection Cable)
	11	Analog RGB cable	
	12	Connection cable	To be prepared by the user, referring the following manual.  Manuals of a video camera and a vision sensor to be used

Point

(1) Power supply of video camera

Depending on the video camera type, noises from the power supply cable of the camera may cause a malfunction on the PLC or the GOT. In this case, apply the following line filter to the power line of the camera.

Recommended line filter: TDK ZHC2203-11 (or equivalent)

(2) Power supply of vision sensor

If a video camera is used via a vision sensor, a power supply module may be required depending on the vision sensor to be used.


(3) Selection of Video signal output source

Depending on the video camera or the system to be used, both the power supply module and the video camera can output video signals. If video signals are output from both the video camera and the power supply module, the voltage level of the signals become lower and the video image cannot be correctly displayed. In this case, use the output from the video camera.



(4) Power-On of video camera

Turn on the video camera simultaneously with the GOT.

37.1.2 Displaying GOT screen on external monitor





1 System configuration and connection conditions

Connection conditions				System configuration
Number of GOTs	Number of Video/RGB equipment	Signal type	Distance	
1	1	Analog RGB	*1	<div style="display: flex; align-items: center; justify-content: space-around;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">1</div> <div style="text-align: center;">  <p>3 Analog RGB cable</p> </div> <div style="border: 1px solid black; padding: 5px; text-align: center;">2</div> </div> <p style="text-align: right;">Connection type dependent</p> 


*1 The cable length differs depending on the specification of the external monitor used by the user.

2 System equipment



(1) GOT

Image	No.	Name	Model name
	1	RGB output unit • For connection between GOT and external monitor*1	GT15-75ROUT 

*1For connectable external monitor types, refer to the following Technical News.

 List of valid devices applicable for GOT1000 series (T10-0039)

(2) Video/RGB connection equipment

Image	No.	Name	Model name
	2	External monitor	For connectable external monitor types, refer to the following Technical News.  List of valid devices applicable for GOT1000 series (T10-0039)





Technical News

Visit the Mitsubishi Electric FA Equipment Information Service website (MELFANS web) to refer to the Technical News.

http://wwwf2.mitsubishielectric.co.jp/melfansweb/english/index_e.htm

(3) Cable

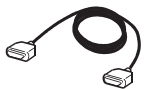Image	No.	Name	Model name
	3	Analog RGB cable	(To be prepared by the user.  Section 37.2 Connection Cable)

37.2 Connection Cable

The coaxial cable/analog RGB cable to connect the GOT to the Video/RGB equipment must be prepared by the user.

The following provides connection diagrams for each cable, connector specifications and other information.

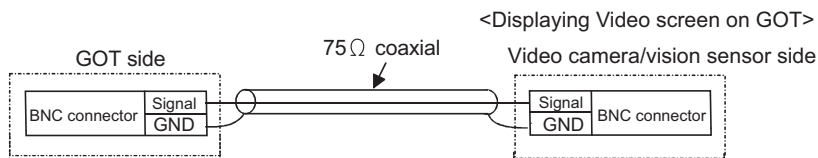
37.2.1 Coaxial cable

The following provides the specifications, the connectors and creation method of the coaxial cable to connect the GOT to the video output equipment.

CAUTION

- Solder the coaxial cable connectors properly. Insufficient soldering may result in malfunctions.


1 Connection diagram








Cable specification

Item	Specifications
Applicable cable	3C-2V,5C-2V (JIS C 3501 compliant)

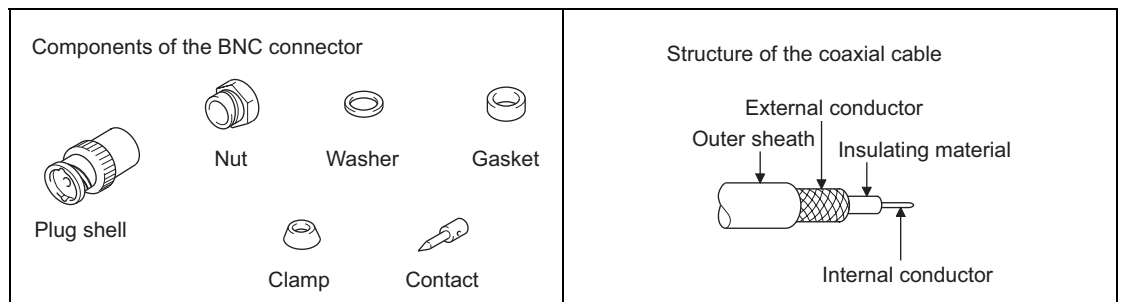- Connecting the BNC connector to the coaxial cable
 - Components of the BNC connector and the coaxial cable



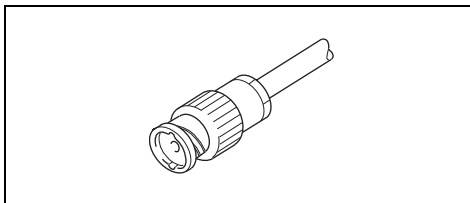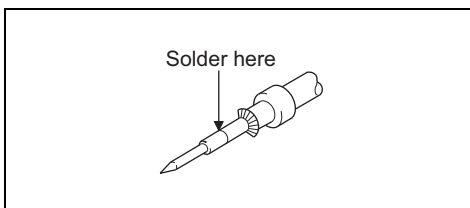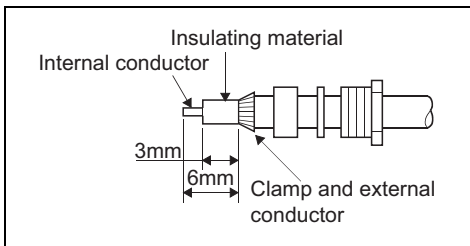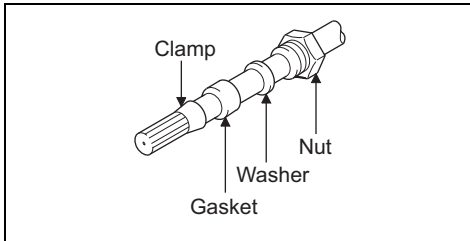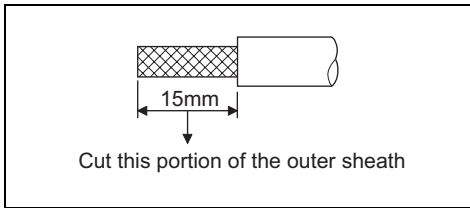(b) Connection method



1 Remove the external sheath of the coaxial cable with dimensions as shown on the left.

2 Pass the nut, washer, gasket, and clamp through the coaxial cable as shown on the left and loosen the external conductor.

3 Cut the external conductor, insulating material, and internal conductor with the dimensions as shown on the left.
Note that the external conductor should be cut to the same dimension as the tapered section of the clamp and smoothed down to the clamp.

4 Solder the contact to the internal conductor.

5 Insert the connector assembly shown in 4 into the plug shell and screw the nut into the plug shell.

Point

Precautions for soldering

Note the following precautions when soldering the internal conductor and contact.

- Make sure that the solder does not bead up at the soldered section.
- Make sure there are no gaps between the connector and cable insulator or they do not cut into each other.
- Perform soldering quickly so the insulation material does not become deformed.

2 Connector specifications

(1) GOT side connector

The following connector is used for the video input unit.

For the GOT side connector of the coaxial cable, use a connector applicable to the GOT connector.

GOT	Connector model	Connector type	Manufacturer
GT15V-75V4	227161-4	BNC	Tyco International, Ltd.

(2) Video camera/vision sensor side connector

Use a connector compatible with the video camera/vision sensor to be used.

3 Precautions when preparing a cable

The cable length differs depending on the specification of the video camera or vision sensor to be used.

Create a cable under the specifications of the video camera/vision sensor.

Remark

When the coaxial cable is long

When the coaxial cable is long, video signals are attenuated by the cable.

The use of a video signal amplifier is recommended to correct the attenuated signals.

Connect a video signal amplifier in reference to the following:

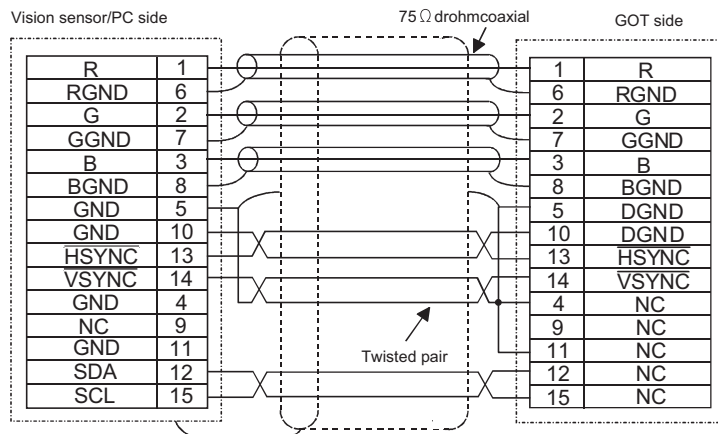
- Coaxial cable: The cable length is 100m or more when 3C-2V is used.
- Coaxial cable: The cable length is 200m or more when 5C-2V is used.

37.2.2 Analog RGB cable


The following provides the specifications, the connection diagrams and the connectors of the cable connecting the GOT to the RGB output type vision sensor/PC.

1 Connection diagram

<Displaying video image on GOT>


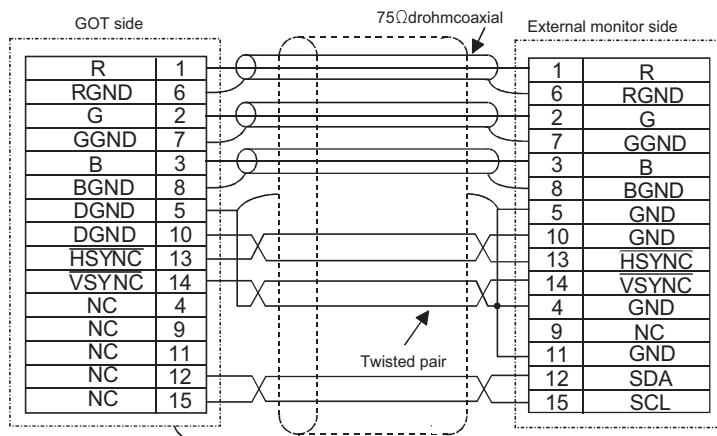
<Displaying GOT screen on external monitor>



Cable specification

Item	Specifications
Applicable cable	SP23-23352A UL20276-SB or equivalent
Applicable wire size	9-core combined cable (recommended)

2 Connector specifications

(1) GOT side connector

The following connector is used for the Video/RGB input unit, RGB input unit and RGB output unit. For the GOT side connector and connector cover of the analog RGB cable, use the ones applicable to the GOT connector.

GOT	Connector model	Connector type	Manufacturer
GT15V-75R1	17HE-R13150-73MC2	15-pin D-sub (male)	DDK Ltd.
GT15V-75V4R1			
GT15V-75ROUT			

(2) Vision sensor/PC side connector

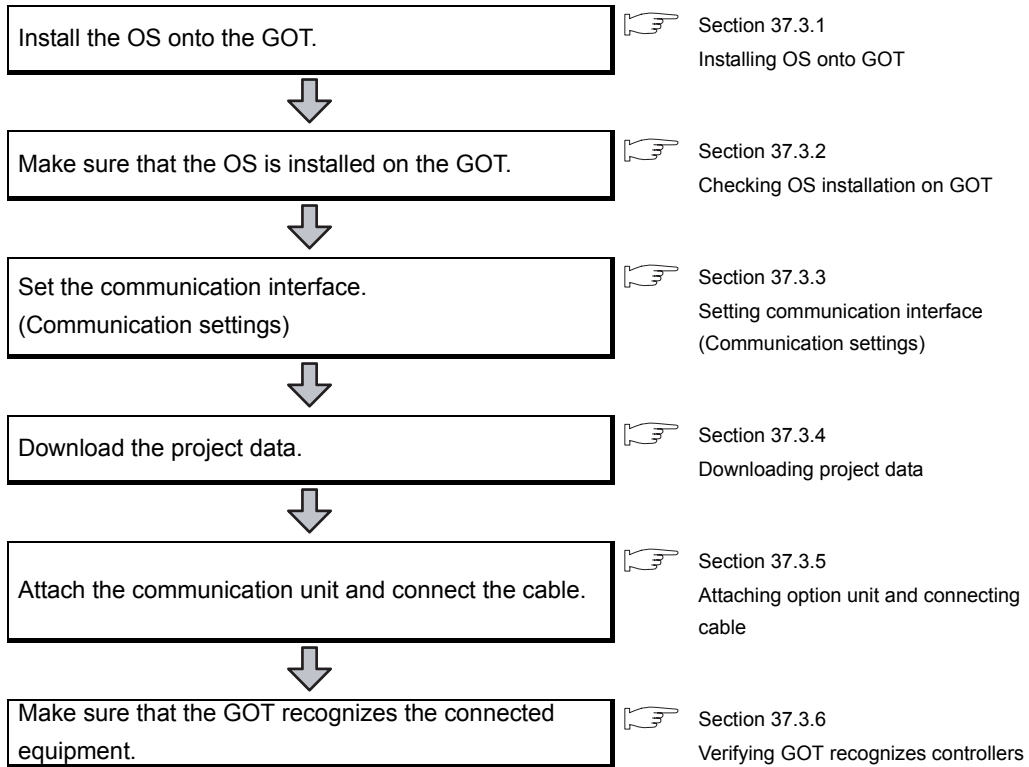
Use a connector compatible with the vision sensor/PC to be used.

3 Precautions when preparing a cable

The cable length differs depending on the specification of the vision sensor/PC to be used. Create a cable under the specifications of the vision sensor/PC.

37.3 Preparatory Procedures for Monitoring


The following the procedures to be taken before monitoring and corresponding reference sections.




37.3.1 Installing OS onto GOT

Install the extended function OS onto the GOT.

For the OS installation methods, refer to the following manual.

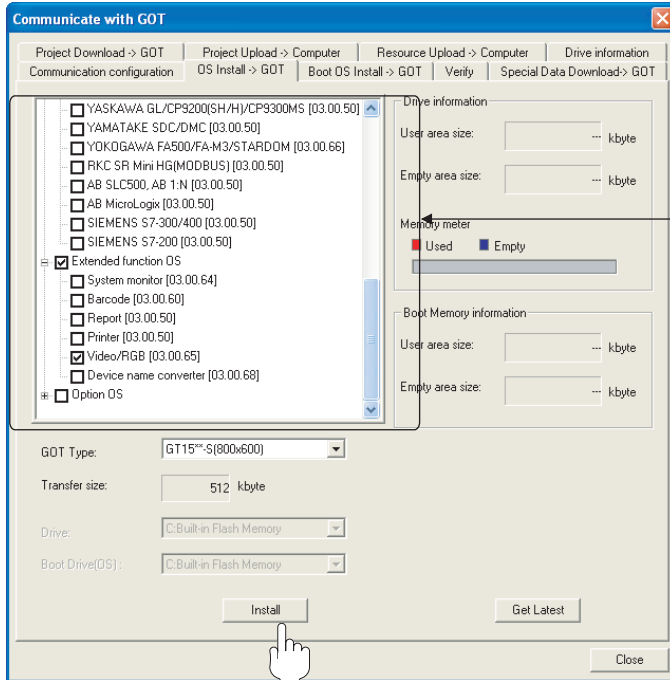 GT Designer2 Version Basic Operation/Data Transfer Manual



Check the following under the Communication driver.

- Depends on the connection type

Place a check mark in the box of the following item in the extended function OS.

- Video/RGB

- 1 Check-mark a extended function OS (Video/RGB), and click the **Install** button.




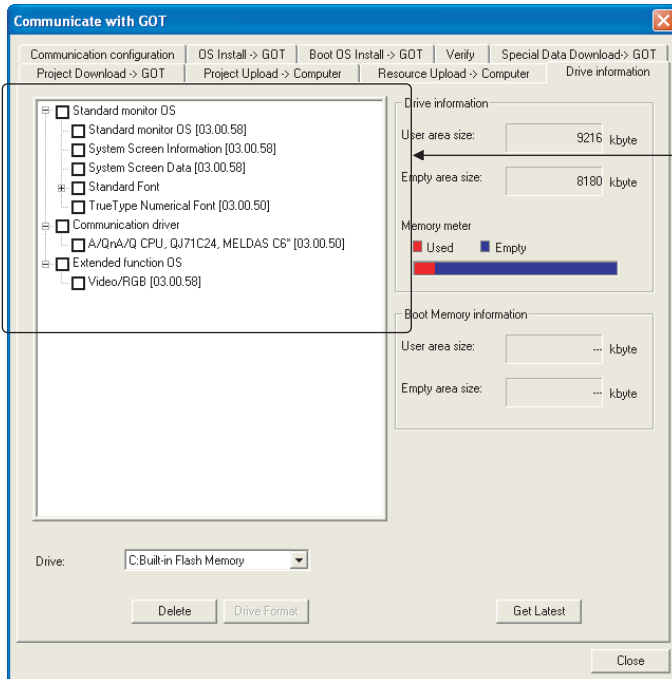
Displaying GOT screen on external monitor

Installing the extended function OS is not needed.

37.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT
if the following can be confirmed:

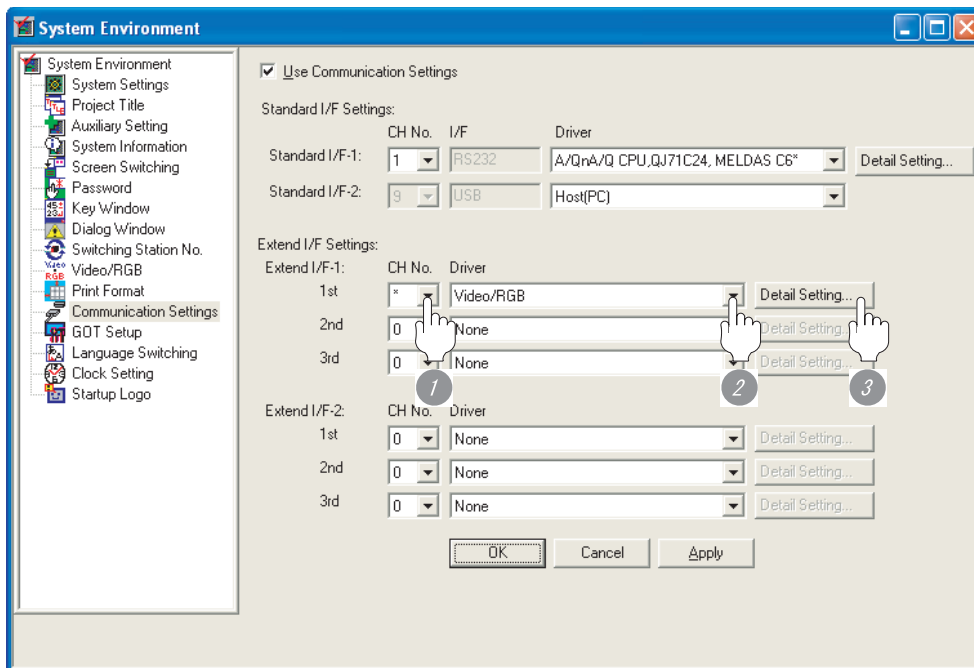
- 1) Standard monitor OS
- 2) Communication driver: Depends on the connection type
- 3) Extended function OS: Video/RGB

37.3.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings



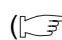
- 1 Set "*" to the channel No. used.
- 2 Set the driver as follows:
To display a video image on the GOT: "Video/RGB"
To display a GOT screen on the external monitor: "RGB output"
- 3 Perform the detailed settings for the driver.

 2 Communication detail settings (only when "Video/RGB" has been set)




Extend I/F-1 setting position

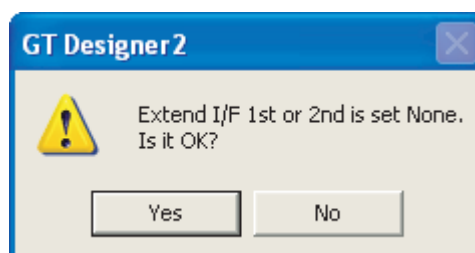Setting cannot be made for other stages except 1st of the Extend I/F-1. If setting is made, the following error message will appear.



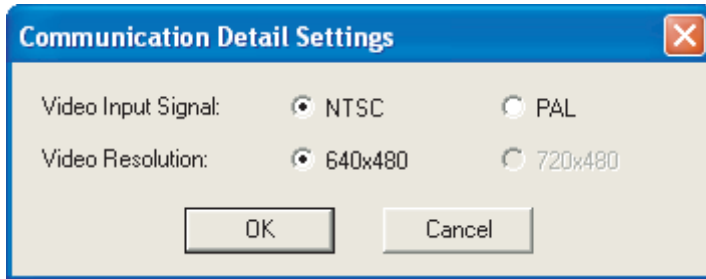
2 Communication detail settings (only when "Video/RGB" has been set)



Item	Description	Range
Video input signal	Set the video input signal. <Default: NTSC>	NTSC, PAL
Video resolution	Set the video resolution. <Default: 640×480>	640×480, 720×480




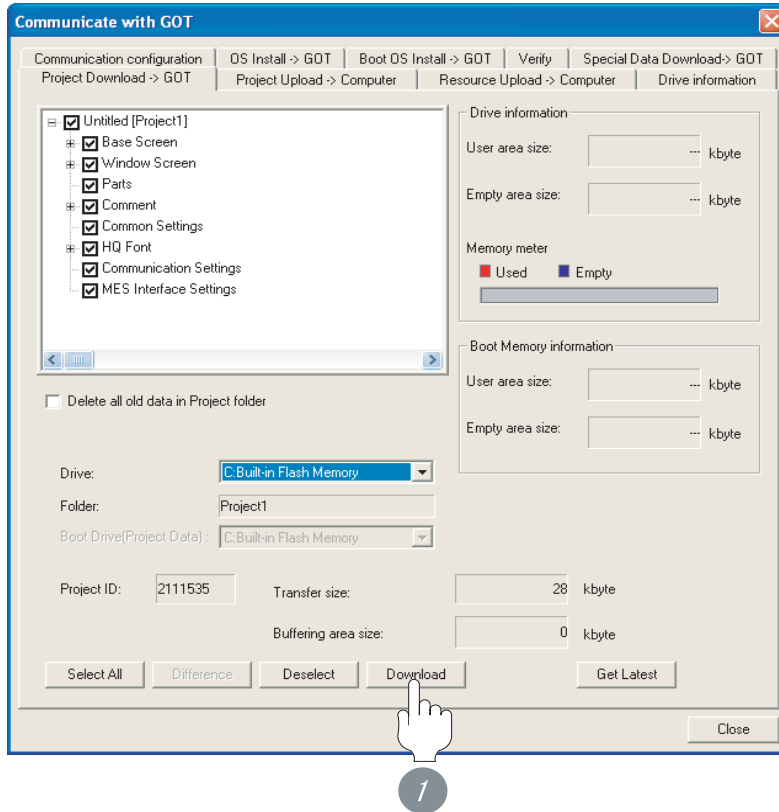
- (1) Communication interface setting by Utility
 The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
 For details on the Utility, refer to the following manual.
 [GT □ User's Manual](#)
- (2) Precedence in communication settings
 When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

37.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


37.3.5 Attaching option unit and connecting cable



Precautions when attaching the Video/RGB unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the Video/RGB unit and connecting the cable.

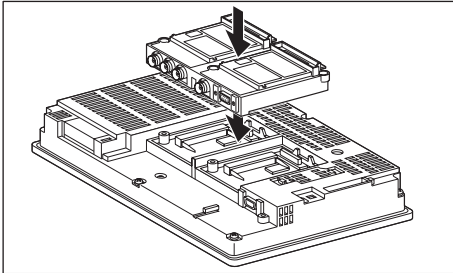1 Attaching the option unit



- 1 Attach the Video/RGB unit to the extension unit connector on the GOT as necessary.



Video/RGB unit

(1) Details of attaching method

For the details of attaching the Video/RGB unit, refer to the following manual.

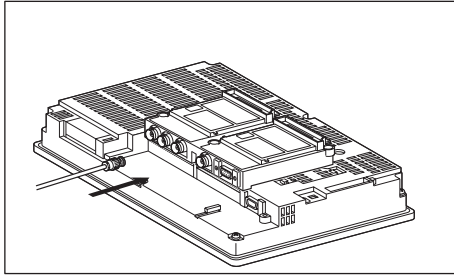
- ☞ · User's Manual for MODEL GT15V-75V4R1 Video/RGB Input Unit
MODEL GT15V-75V4 Video Input Unit
MODEL GT15V-75R1 RGB Input Unit
- User's Manual for MODEL GT15V-75ROUT RGB Output Unit

(2) Attaching multiple units

Multiple Video/RGB units cannot be attached to the GOT.

2 Connecting the cable


(1) Coaxial cable connection method



- 1 Connect the coaxial cable to the Video/RGB input unit on the GOT.


(2) Analog RGB cable connection method

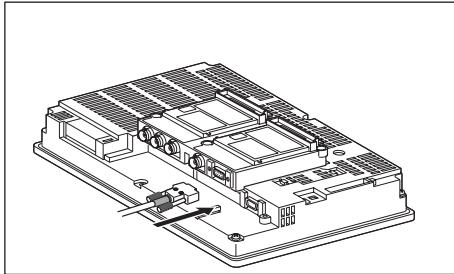(a) Displaying video image on GOT



- 1 Connect the analog RGB cable to the Video/RGB input unit or the RGB input unit on the GOT.

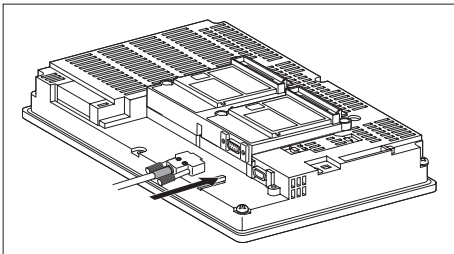(b) Displaying GOT screen on external monitor



- 1 Connect the analog RGB cable to the RGB output unit on the GOT.

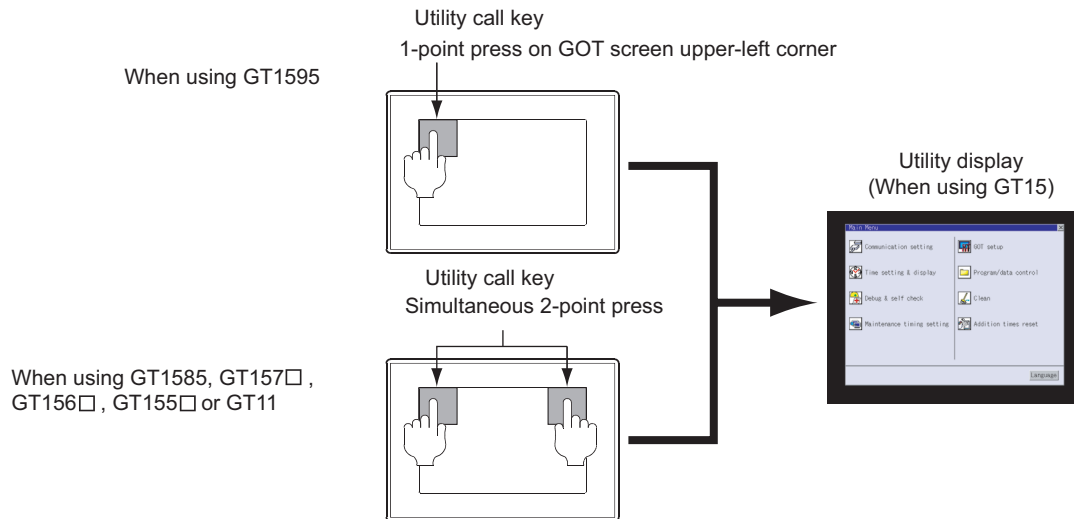
37.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

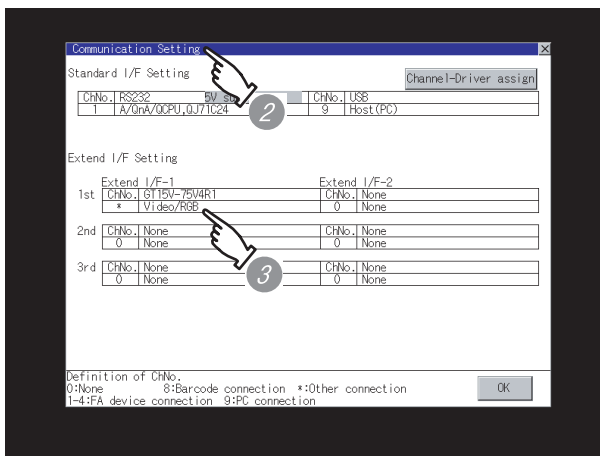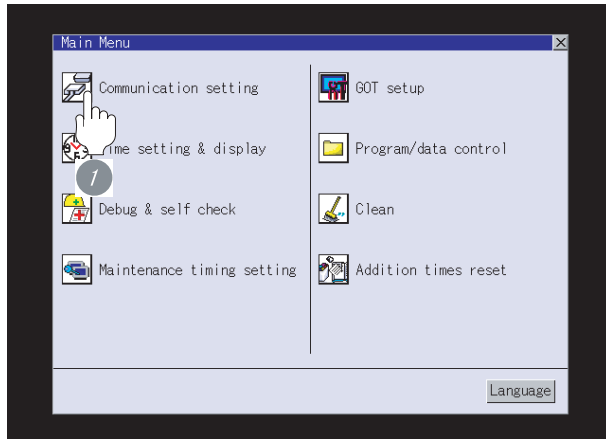 GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Extended function OS
 <To display a video image on the GOT>
 Video/RGB
 <To display a GOT screen on the external monitor>
 RGB output

4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 37.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

All settings related to communications are complete now.
 Create screens on GT Designer2 and download the project data again.

37.4 Precautions

37.4.1 Connecting to PC

When connecting to a PC, ground the earth wire of the PC.

37.4.2 Connecting to NEC PC-9800 (PC-9801, PC-9821, etc.) series

The 640×400 dot screen of NEC PC-9800 series is not supported.

37.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Video/RGB connection	Supporting the Video/RGB connection	2.32J	Extended function OS Video/RGB input 03.00.**

PRINTER CONNECTION



38.1 System Configuration page 38-2

This section describes devices and cables needed for printer connection.
Refer to this section to select the desired system.

38.2 Preparatory Procedures for Monitoring page 38-4

This section describes the preparatory procedures for the monitoring in the printer connection.
The sequential checkup procedure will be helpful for those who communicate through the GOT for the first time.

38.3 Precautions page 38-12

This section describes the precautions for printer connection.
Refer to this section without fail before starting printer connection.

38.4 List of Functions Added by Version Upgrade page 38-13

This section describes the functions added by version upgrade of GT Designer2 or OS.


38.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.
Use these numbers as references when confirming models and applications.



1 System configuration and connection conditions

Connection conditions		System Configuration
Number of GOT	Distance	
1	Varies according to the printer's specifications.	

*1 The PLC connection type and communication interface for printer connection are shown below.

GOT type	PLC ↔ GOT		GOT ↔ printer
	Connection type	Communication interface of GOT	Communication interface of GOT
	Bus connection	Bus connection unit	RS-232 interface
	Ethernet connection	Ethernet communication unit	
	Direct CPU connection	RS-232 communication unit	
	Computer link connection	RS-422/485 communication unit	
	Third party PLC connection	RS-422/485 communication unit (Model:GT15-RS4-9S only)	





System configuration between GOT and PLC

For the system configuration between the GOT and PLC, refer to the corresponding section.

- MITSUBISHI PLC CONNECTIONS (☞ Sections 2 to 8)
- THIRD PARTY PLC CONNECTIONS (☞ Sections 9 to 18)


2 System equipment

(1) GOT



Image	No.	Name	Model name
	1	Printer unit • For communication between GOT and PictBridge Compatible Printer*1	GT15-PRN 

*1 GOT does not support some PictBridge Compatible Printers. For connectable printer types, refer to the following Technical News.

http://wwwf2.mitsubishielectric.co.jp/melfansweb/english/index_e.htm

 List of valid devices applicable for GOT1000 series (T10-0039)

(2) Printer

Image	No.	Name	Model name
	2	PictBridge Compatible Printer	For connectable printers and system equipment, refer to the following Technical News.  List of valid devices applicable for GOT1000 series (T10-0039)


Remark

Technical News

Visit the Mitsubishi Electric FA Equipment Information Service website (MELFANS web) to refer to the Technical News.


http://wwwf2.mitsubishielectric.co.jp/melfansweb/english/index_e.htm

(3) Cable

Image	No.	Name	Model name
	3	cable for printer connection only	GT09-C30USB-5P(3m)(packed together with the printer unit)

38.2 Preparatory Procedures for Monitoring

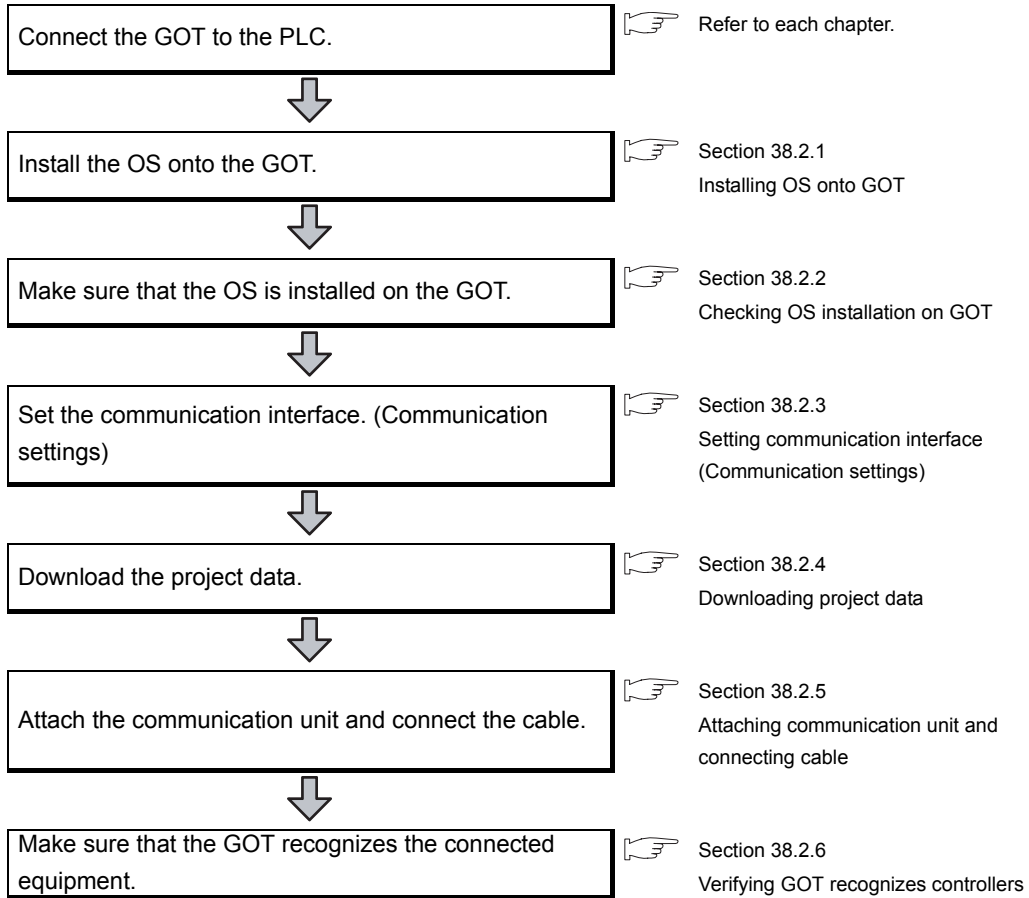
The following shows the procedures to be taken before monitoring and corresponding reference sections.




38.2.1 Installing OS onto GOT

Install the extended function OS onto the GOT.

For the OS installation methods, refer to the following manual.

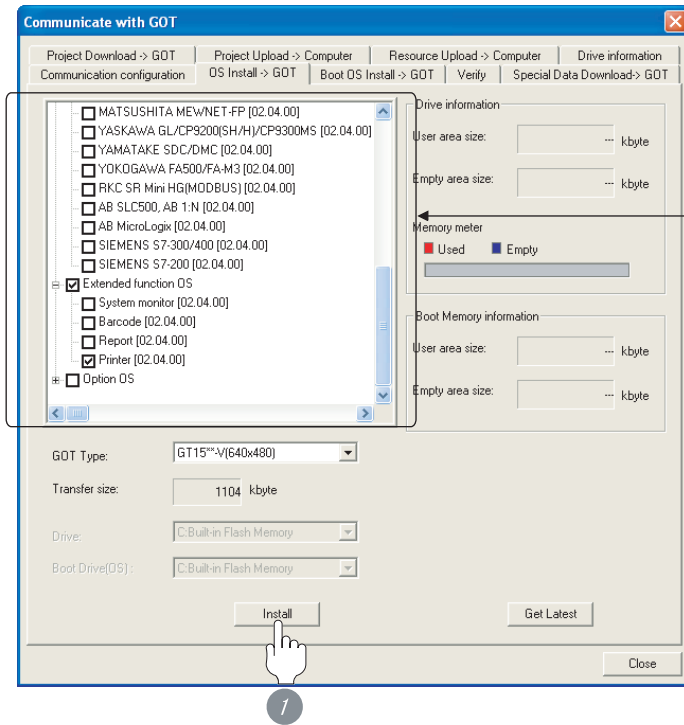 GT Designer2 Version □ Basic Operation/Data Transfer Manual



Check the following under the Communication driver.

- Depends on the connection type


Place a check mark in the box of the following item in the extended function OS.

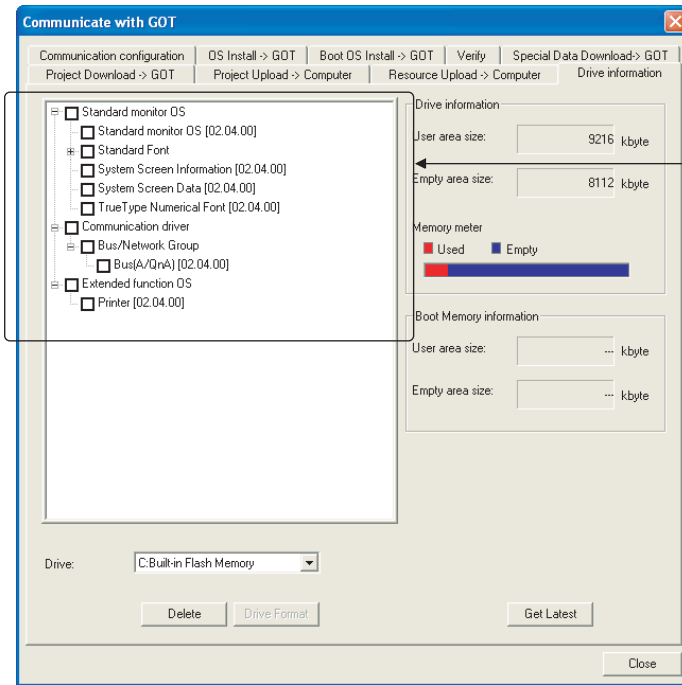
- Printer

1 Check-mark a extended function OS (Printer), and click the **Install** button.

38.2.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

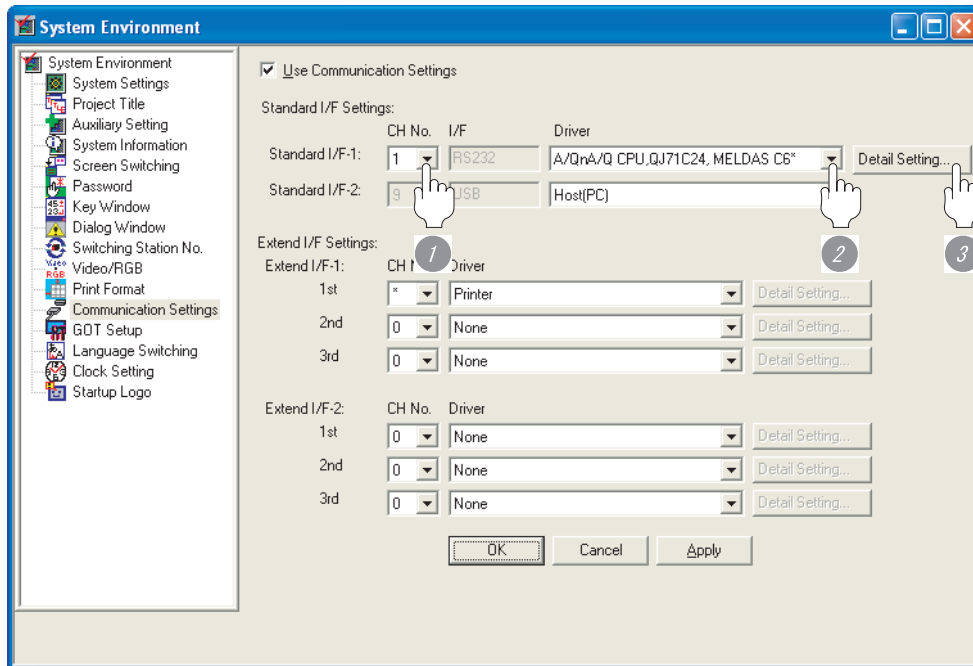
- 1) Standard monitor OS
- 2) Communication driver: Depends on the connection type
- 3) Extended function OS: Printer

38.2.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings




- 1 Set "*" to the channel No. used.
- 2 Set the driver to "Printer".
- 3 Perform the detailed settings for the driver.

Point

Number of available printer drivers

Two or more drivers cannot be set.

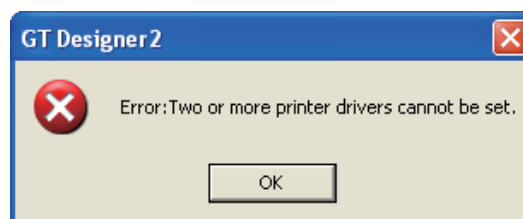
If two or more printer drivers are set, the following error message will appear.




38.2.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

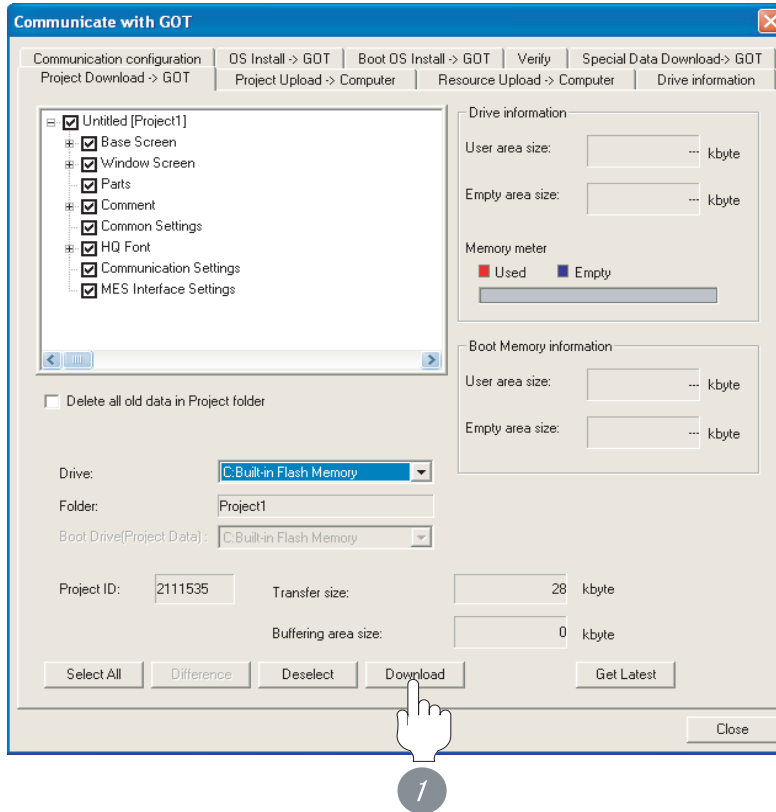 GT Designer2 Version □ Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


38.2.5 Attaching communication unit and connecting cable




Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

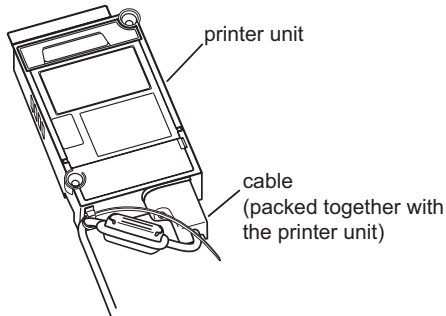1 Attaching the communication unit



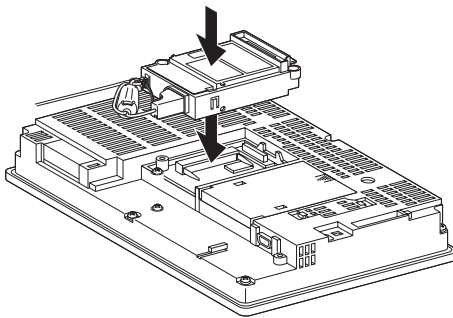- 1 Connect the cable (packed together with the printer unit) to the printer unit.



- 2 Attach the printer unit to the extension unit connector on the GOT.



Printer unit

For details on the printer unit, refer to the following manual:

👉 GT15 Printer unit User's Manual

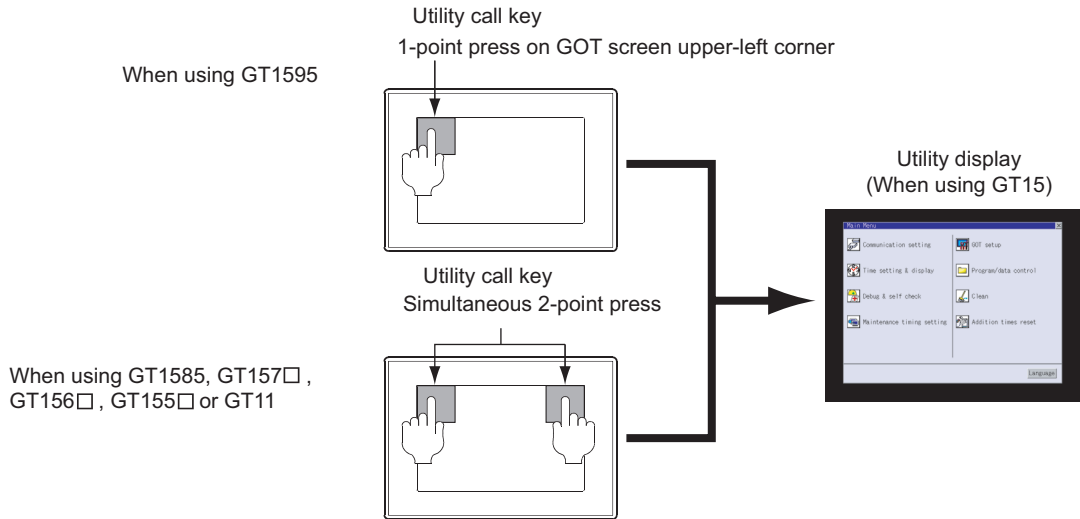
38.2.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point


When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

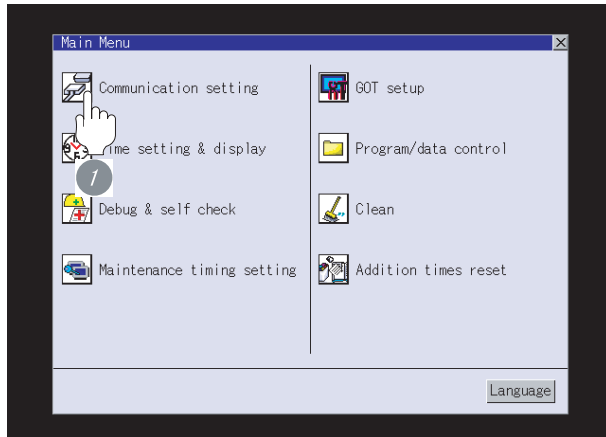GT□ User's Manual



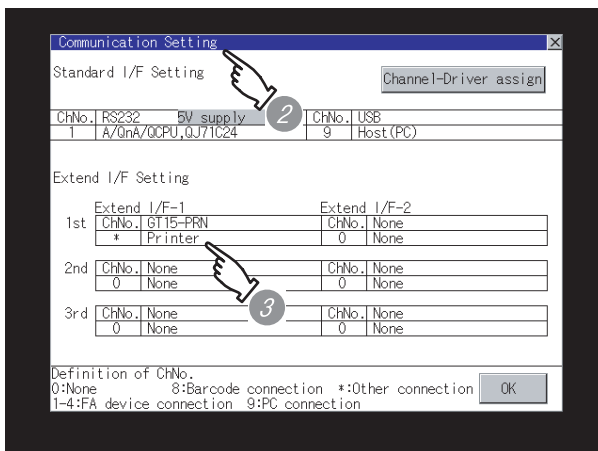- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver: Printer
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 38.2 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

38.3 Precautions

1 Connection/disconnection of USB cable during print operation

When the USB cable is disconnected during print operation, the printer hangs up depending on the model of PictBrige compatible printer. In this case, turn on the main power of the printer and then restart it.


2 When a printer cannot perform print operation

While the initialization of the printer is being carried out at boot time, some models of PictBrige compatible printers send "Print Ready" signal to GOT. If printing operation is started from GOT, an error will occur and the printing operation will be disabled.

If this occurs, restart a printer with the following procedure.

- 1 Disconnect the USB cable from the printer.
- 2 Turn the power of the printer OFF.
- 3 Disconnect the power supply cable of the printer and stop the printer completely.
- 4 Connect the power supply cable to the printer.
- 5 Turn the power of the printer ON and wait until the initialization processing of the printer is completed.
- 6 Connect the USB cable to the printer.

For the handling errors occurred on the printer, refer to the following.

 Manual for the printer being used

38.4 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
printer connection	Supporting the printer connection	2.27D	Extended function OS Printer[02.04.**]

33

CNC CONNECTION

34

CONNECTION TO SOUND OUTPUT UNIT

35

CONNECTION TO EXTERNAL I/O DEVICE

36

BAR CODE READER CONNECTION

37

VIDEO/RGB CONNECTION

38

PRINTER CONNECTION

39

MULTI-CHANNEL FUNCTION

40

FA TRANSPARENT FUNCTION



OTHER FUNCTIONS

Chapter39 MULTI-CHANNEL FUNCTION

Chapter40 FA TRANSPARENT FUNCTION

Chapter41 MULTIPLE-GT11, GT10 CONNECTION FUNCTION

Chapter42 GATEWAY FUNCTION

Chapter43 MES INTERFACE FUNCTION

MULTI-CHANNEL FUNCTION



39.1 What is Multi-channel Function?
 page 39-2

This section provides the outline of multi-channel function.

39.2 System Configuration Examples
 page 39-3

This section describes the system configuration examples explained in this section.

39.3 Preparatory Procedures for Monitoring
 page 39-4

This section provides the procedures to be followed before performing monitoring in connection to FA controllers.

39.4 Connected Equipment Side Settings.
 page 39-14

Refer to the controller side settings indicated by each chapter.

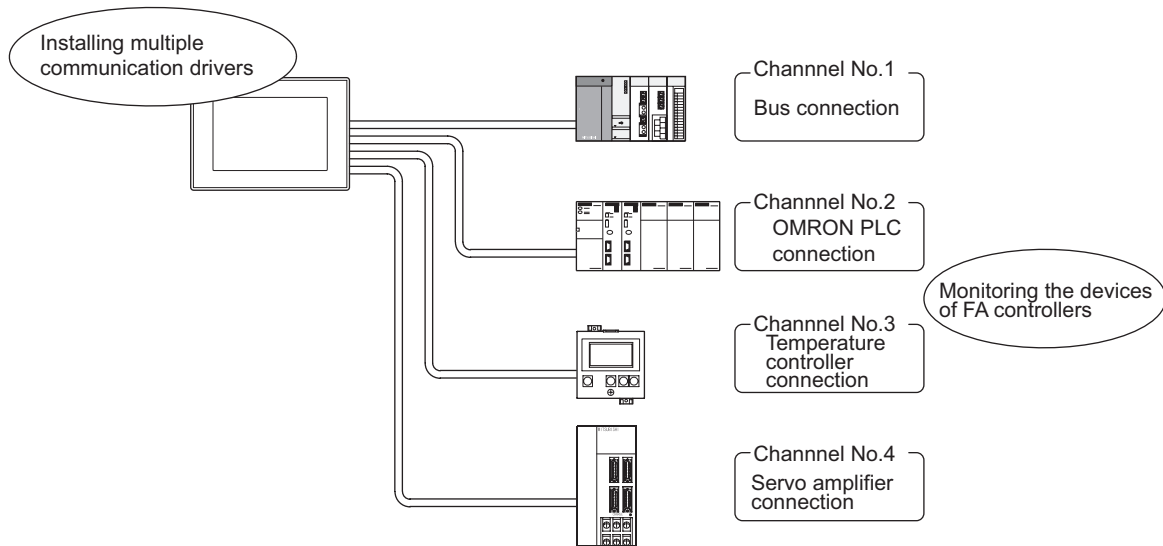
39.5 List of Functions Added by Version Upgrade
 page 39-15

This section describes the functions added by version upgrade of GT Designer2 or OS.

39.1 What is Multi-channel Function?

Multi-channel Function is a function to monitor up to four FA controllers (PLC CPU, temperature controller, inverter, etc.) on one GOT by installing multiple communication drivers in the GOT .

(For GT155□, up to two controllers (two channels))



Point

(1) Before using the multi-channel function

This manual only describes the procedure for using the multi-channel function based on a system configuration example shown in Section 27.2. When using the multi-channel function, refer to the following manual first to select a system or a communication unit which is mounted to GOT.

☞ GT Designer2 Version□ Screen Design Manual (Section 2.8 Multi-channel Function)

(2) System configuration when the multi-channel function is used


The system configuration between GOT and the controllers is the same as that of when not using the multi-channel function.

For the system configuration between GOT and the controllers, refer to the following.










☞ Each chapter indicating the system configuration

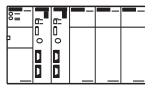39.2 System Configuration Examples

This manual uses the following system configuration as an example.








1 System configuration

Connection conditions		System configuration
Number of GOTs	Distance	
Differ according to connection type.		<p>Cable selected according to connection type.</p> <p>QCPU   Bus connection (Channel No.1)</p> <p>OMRON PLC   Direct CPU connection (Channel No.2)</p> <p>OMRON temperature controller   Temperature controller connection (Channel No.3) </p> <p>MELSERVO-J2-Super series   Servo amplifier connection (Channel No.4)</p>

2 System equipment

(1) GOT

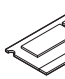Image	No.	Name	Model name
 Terminal	1	Bus connection unit • For terminal GOT	GT15-QBUS
 RS-232		RS-232 interface • For direct CPU connection	— (Built into GOT)
 RS-232		RS-232 Communication unit • For temperature controller connection	GT15-RS2-9P
 RS-422/485		RS-422/485 Communication unit • For servo amplifier connection	GT15-RS4-9S
		Option function board • For optional function	GT15-QFNB, GT15-QFNB16M, GT15-QFNB32M, GT15-QFNB48M

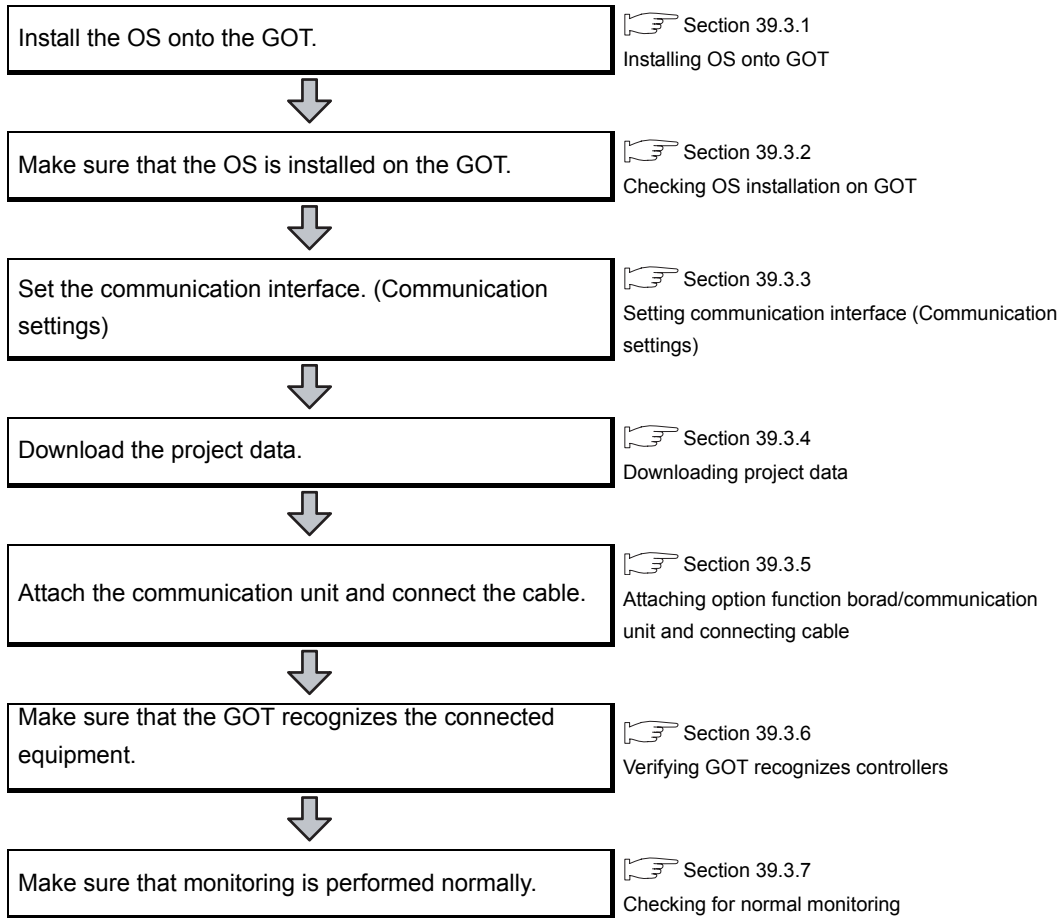
(2) Cable

For selecting the cable, refer to each chapter indicating the system configuration.

33 CNC CONNECTION
34 CONNECTION TO SOUND OUTPUT UNIT
35 CONNECTION TO EXTERNAL I/O DEVICE
36 BAR CODE READER CONNECTION
37 VIDEO/RGB CONNECTION
38 PRINTER CONNECTION
39 MULTI-CHANNEL FUNCTION
40 FA TRANSPARENT FUNCTION


39.3 Preparatory Procedures for Monitoring


The following shows the procedures to be taken before monitoring and corresponding reference sections.



39.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

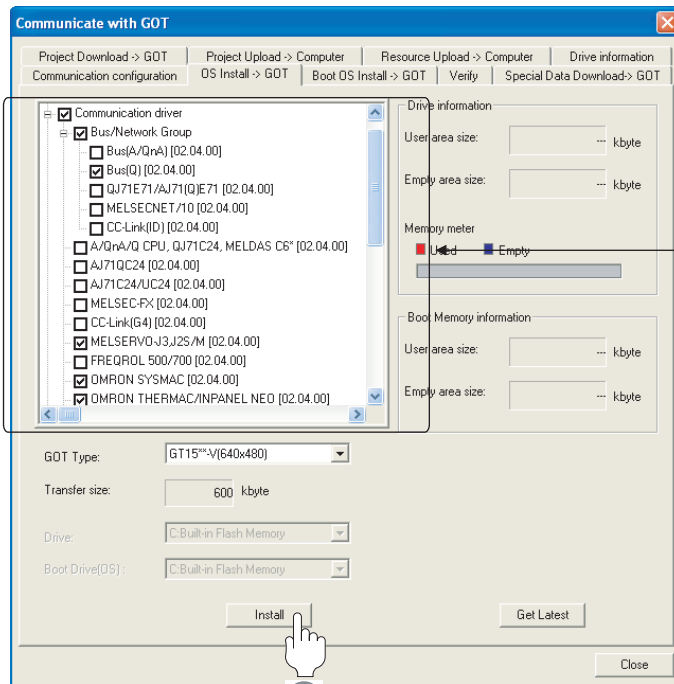 GT Designer2 Version □ Basic Operation/Data Transfer Manual




Check the following under the Communication driver.

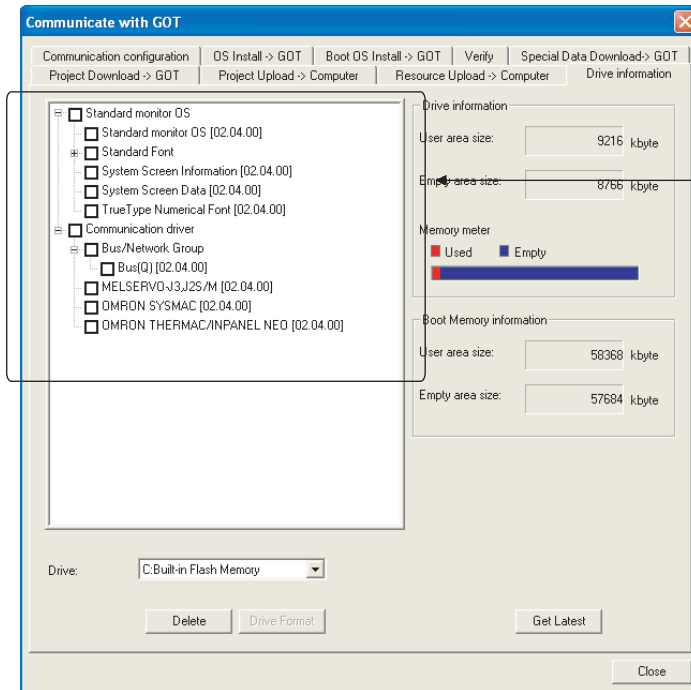
- Bus (Q)
- OMRON SYSMAC
- OMRON THERMAC/INPANEL NEO
- MELSERVO-J3,J2S/M

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

39.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed:

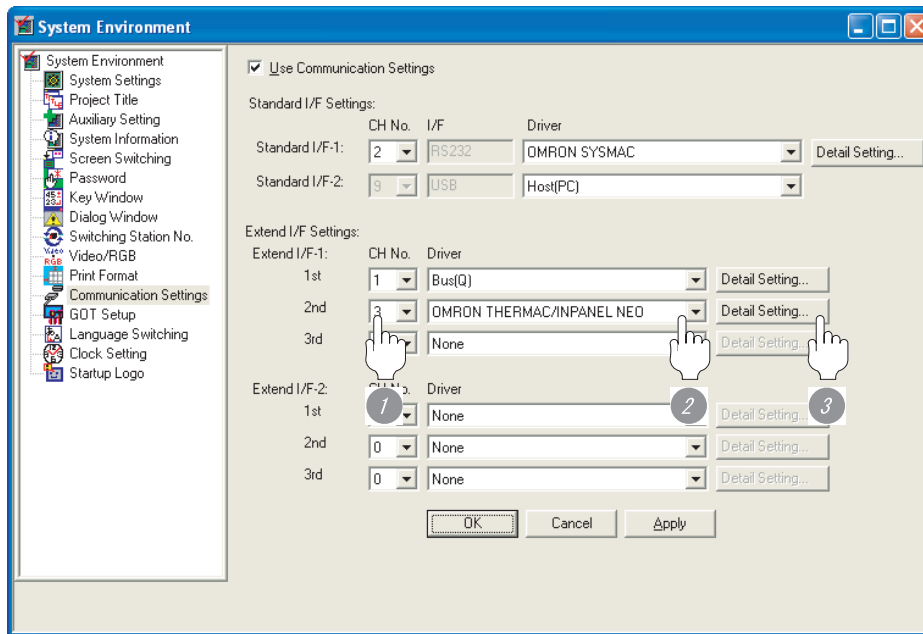
- 1) Standard monitor OS
- 2) Communication driver
 - Bus (Q)
 - OMRON SYSMAC
 - OMRON THERMAC/INPANEL NEO
 - MELSERVO-J3,J2S/M


39.3.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

1 Communication settings




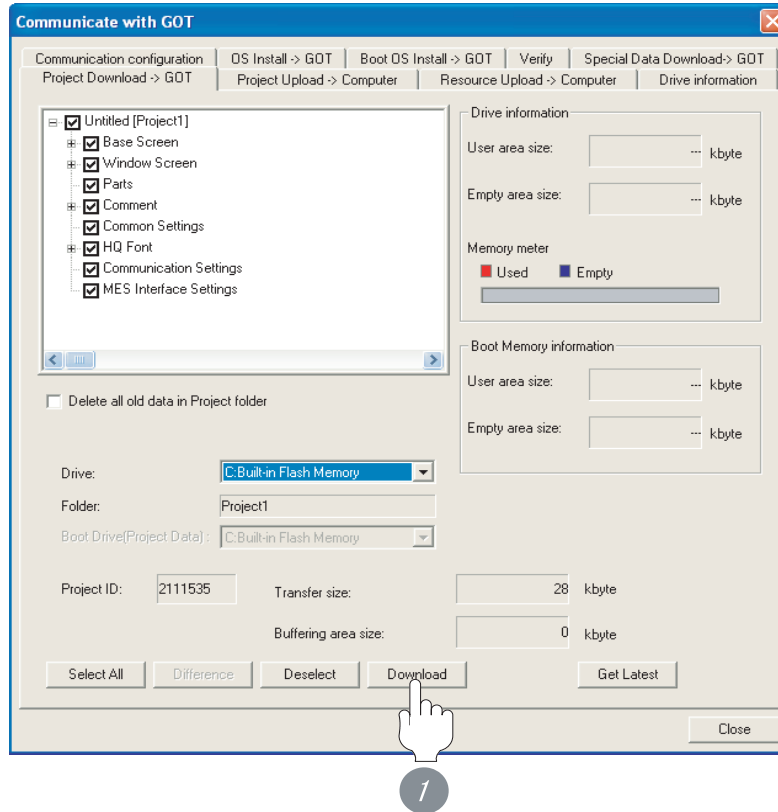
- 1 Set the CH No. according to the position of communication unit to be mounted to the GOT.
- 2 Set the communication driver to each CH No..
 - Channel No.1: Bus(Q)
 - Channel No.2: OMRON SYSMAC
 - Channel No.3: OMRON THERMAC/INPANEL NEO
 - Channel No.4: MELSERVO-J3,J2S/M
- 3 Perform the detailed settings for the driver. ( Communication detail settings of each chapter.)

39.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




- 1 Check the necessary items and click the **Download** button.

39.3.5 Attaching option function board/communication unit and connecting cable

The communication unit attachment method and the cable connection method differ according to connection type.

For attaching option function board/communication unit and connecting cable, refer to the following manual.

 Each chapter indicating the Attaching communication unit and connecting cable

For installing procedure of the option function board, refer to the following manual.

 GT15 User's Manual (Section 8.3 Option Function Board)

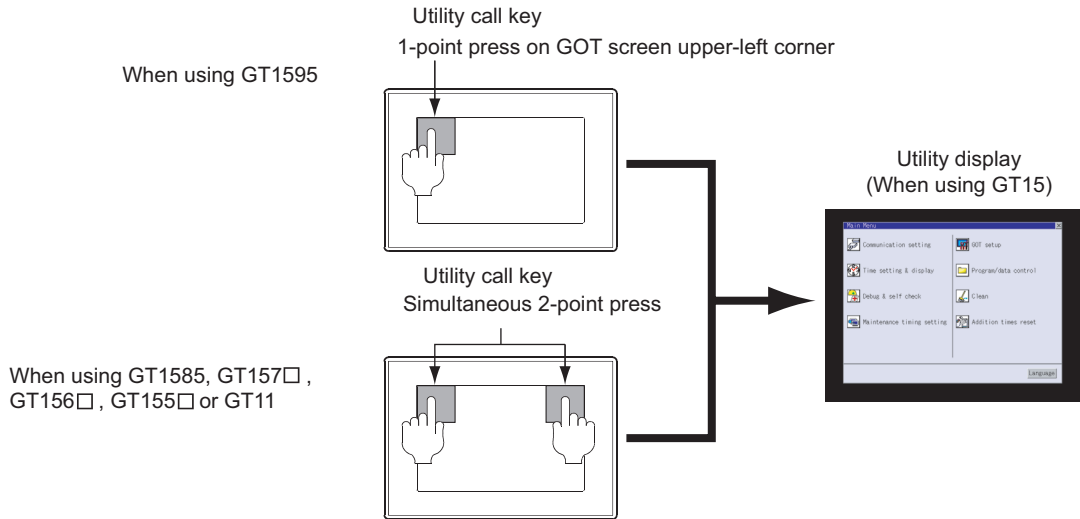
39.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

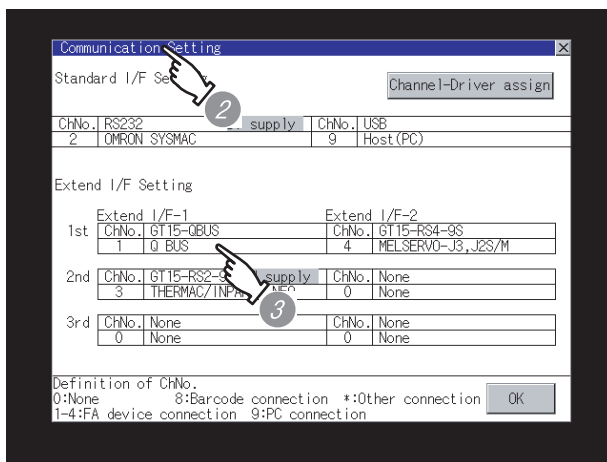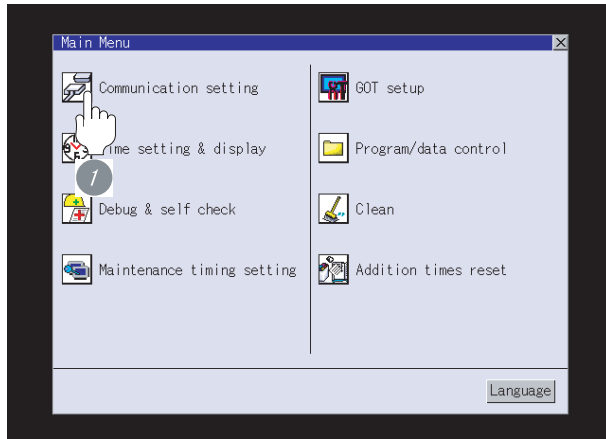 GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication Settings] from the Utility.

2 The [Communication Settings] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver
 Bus (Q)
 OMRON SYSMAC
 OMRON THERMAC/INPANEL NEO
 MELSERVO-J3,J2S/M

4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 39.3 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

☞ GT □ User's Manual

39.3.7 Checking for normal monitoring

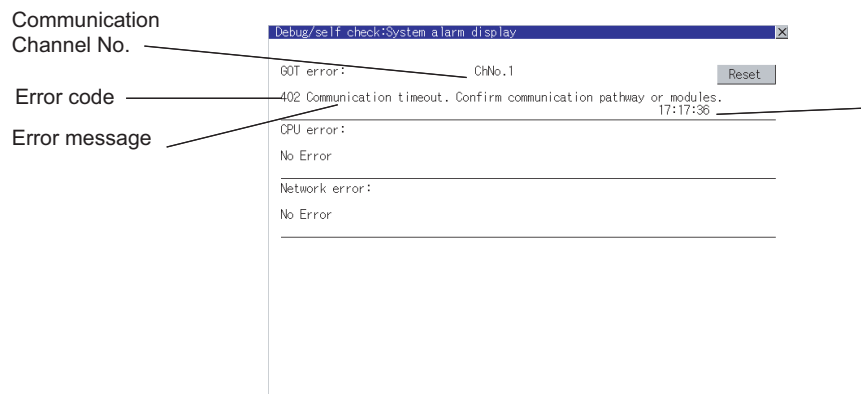
1 Check for errors occurring on the GOT

(1) System alarm

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)



Advanced alarm popup display

With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

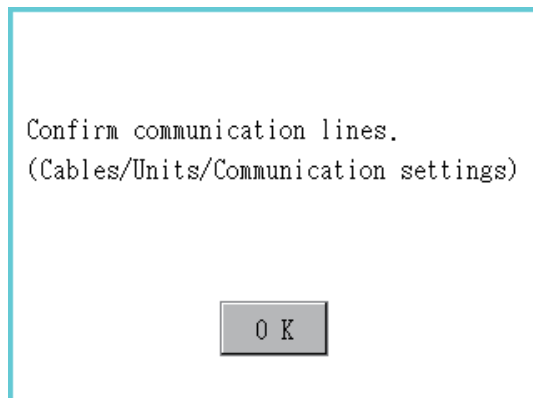
Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual


(2) Dialog box display

When CH No.1 has a communication error, GOT display the following dialog box. When a communication error occurs on one of CH No.2 to No.4, nothing appears on GOT display.



2 Checking procedure except for system alarm


Checking procedure except for system alarm differs according to the connection type.
For the checking procedure of each connection type, refer to the following manual.

 Each chapter indicating the Checking for normal monitoring

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

39.4 Connected Equipment Side Settings

Communication settings of the controller differ according to the connection type.
For communication settings of the controller, refer to the followings.

 Each chapter indicating the checking for normal monitoring

39.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Multi-channel function	Supporting the Multi-channel function	2.18U	Standard monitor OS [0.2.01.**] communication driver The communication drivers are applicable only to the software version [02.01.**] and above.

33

CNC CONNECTION

34

CONNECTION TO SOUND OUTPUT UNIT

35

CONNECTION TO EXTERNAL I/O DEVICE

36

BAR CODE READER CONNECTION

37

VIDEO/RGB CONNECTION

38

PRINTER CONNECTION

39

MULTI-CHANNEL FUNCTION

40

FA TRANSPARENT FUNCTION

FA TRANSPARENT FUNCTION



40.1 FA Transparent Function page 40-2

This section provides the outline of the FA transparent function.

40.2 System Configuration page 40-2

This section describes the devices and cables needed to using the FA transparent function.
In this section, select a system suitable for your application.

40.3 Compatible Software page 40-15

This section describes the software compatible with the FA transparent function.
In this section, select a software suitable for your application.

40.4 Preparatory Procedure for Accessing page 40-18

This section describes the procedures to be followed before accessing the PLC using the FA transparent function.

40.5 Precautions page 40-34

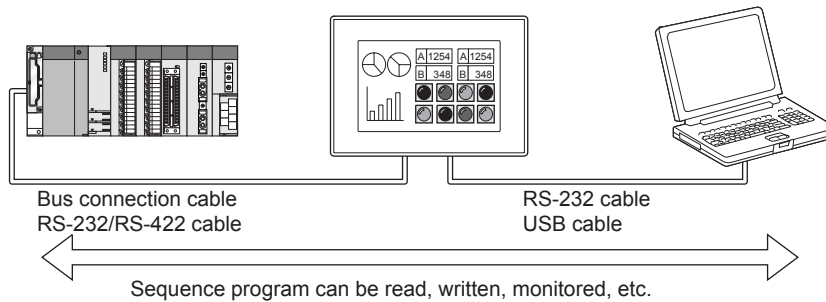
This section provides the cautions on the FA transparent function.
Be sure to read this when using the FA transparent function.

40.6 List of Functions Added by Version Upgrade page 40-41

This section describes the functions added by version upgrade of GT Designer2 or OS.

40.1 FA Transparent Function

The FA transparent function allows the sequence programs of the Mitsubishi PLC to be read, written and monitored from a PC connected via a GOT.



40.2 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.


40.2.1 GX Developer



The following PLC series support FA transparent function.

PLC series
QCPU, QnCPU, ACPU, FXCPU, Motion controller CPU (A Series)*1




*1 GT10 is not supporting the connection to Motion controller CPU (A Series).



1 System configuration and connection conditions








Connection conditions between GOT and PC	System configuration*1
RS-232	<p>· Bus connection · Direct CPU connection</p> <p>Differs according to the connection method</p>
	<p>· Direct CPU connection</p> <p>Differs according to the connection method</p>
	<p>Direct CPU connection</p> <p>Differs according to the connection method</p>
USB	<p>· Bus connection · Direct CPU connection</p> <p>Differs according to the connection method</p>

*1 The following shows the types of connections to the PLC and the corresponding communication interfaces.



GOT type	PLC ↔ GOT		GOT ↔ PC
	Connection type	Communication interface of GOT	Communication interface of GOT
	Bus connection	Bus connection unit	RS-232 interface
			USB interface
	Direct CPU connection	RS-232 interface	USB interface
		RS-422 conversion unit	USB interface
	Direct CPU connection	RS-232 communication unit	RS-232 interface
		RS-422/485 communication unit (Model:GT15-RS4-9S only)	USB interface
	Bus connection	Bus interface	RS-232 interface
			USB interface
	Direct CPU connection	RS-232 interface	USB interface
		RS-422 interface	RS-232 interface
		USB interface	
	Direct CPU connection	RS-232 interface	RS-232 interface
		RS-422 interface	RS-232 interface

2 System equipment



(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)   
	2	USB interface • For USB communication	— (Built into GOT)  

(2) PC

Image	No.	Name	Model name
	3	PC	For compatible software refer to the following.  Section 40.3 Compatible Software

(3) conversion adaptor

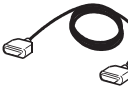








Image	No.	Name	Model name
	4	RS-232/USB Conversion adaptor*1	GT10-RS2TUSB-5S*2 

*1 The use of RS-232/USB conversion adaptor requires an installation of the dedicated communication driver onto PC. For the details, refer to the following manual.

 RS-232/USB Conversion adaptor User's Manual

*2 Not compatible with the peripheral S/W FX-PCS/WIN.

(4) Cable

Image	No	Name	Model name
	5	RS-232 cable 1)	GT01-C30R2-9S(3m)  
	6	RS-232 cable 2)	GT01-C30R2-6P(3m) 
	7	USB cable *	GT09-C30USB-5P(3m) GT09-C20USB-5P(2m)   

*: Use the dedicated cable.



System configuration between GOT and Mitsubishi PLC

For details on the system configuration between a GOT and a Mitsubishi PLC, refer to the following.

 Chapter 2 BUS CONNECTION


 Chapter 3 DIRECT CONNECTION TO CPU

40.2.2 PX Developer, GX Configurator



The following PLC series support FA transparent function.

PLC series
QCPU



1 System configuration and connection conditions







Connection conditions between GOT and PC	System configuration*1
RS-232	<p>· Bus connection · Direct CPU connection</p> <p>Differs according to the connection method</p>
USB	<p>· Bus connection · Direct CPU connection</p> <p>Differs according to the connection method</p>

*1 The following shows the types of connections to the PLC and the corresponding communication interfaces.



GOT type	PLC ↔ GOT		GOT ↔ PC
	Connection type	Communication interface of GOT	Communication interface of GOT
	Bus connection	Bus connection unit	RS-232 interface
		USB interface	
	Direct CPU connection	RS-232 interface	USB interface
		RS-422 conversion unit	
	Bus connection	RS-232 communication unit	RS-232 interface
		RS-422/485 communication unit (Model:GT15-RS4-9S only)	USB interface
	Direct CPU connection	Bus interface	RS-232 interface
		RS-232 interface	USB interface
		RS-422 interface	RS-232 interface
			USB interface

2 System equipment



(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)  
	2	USB interface • For USB communication	— (Built into GOT)  

(2) PC

Image	No.	Name	Model name
	3	PC	For compatible software refer to the following.  Section 40.3 Compatible Software)

(3) Cable

Image	No.	Name	Model name
	4	RS-232 cable	GT01-C30R2-9S(3m)
	5	USB cable *	GT09-C30USB-5P(3m) GT09-C20USB-5P(2m)

*: Use the dedicated cable.



System configuration between GOT and Mitsubishi PLC

For details on the system configuration between a GOT and a Mitsubishi PLC, refer to the following.

 Chapter 2 BUS CONNECTION


 Chapter 3 DIRECT CONNECTION TO CPU

40.2.3 MT Developer



The following is the series name of the PLC CPU for which the FA transparent is available.

Series name
Motion controller CPU (Q series)



1 System configuration and connection conditions







Connection condition between GOT and personal computer	System configuration ^{*1}
RS-232	<p>QCPU + Motion controller CPU (Q series)</p> <p>• Bus connection • Direct CPU connection</p> <p>Varies according to the connection type.</p> <p>5 RS-232 cable 1)</p> <p>3 Personal computer</p> <p>MAX3m</p>
USB	<p>QCPU + Motion controller CPU (Q series)</p> <p>• Bus connection • Direct CPU connection</p> <p>Varies according to the connection type.</p> <p>7 USB cable</p> <p>3 Personal computer</p>

*1 The following shows the PLC connection type and communication interface when the FA transparent function is used.


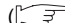
GOT type	PLC ↔ GOT side		GOT ↔ Personal computer side
	Connection type	Communication interface of GOT	Communication interface of GOT
	Bus connection	Bus connection unit	RS-232 interface
		USB interface	
	Direct CPU connection	RS-232 interface	USB interface
		RS-422 conversion unit	
Direct CPU connection	RS-232 communication unit	RS-232 interface	
	RS-422/485 communication unit (Model: GT15-RS4-9S only)	USB interface	
	Bus connection	Bus interface	RS-232 interface
		USB interface	
	Direct CPU connection	RS-232 interface	USB interface
		RS-422 interface	RS-232 interface
		USB interface	

2 System equipment



(1) GOT (Communication interface to the personal computer)

Image	No.	Name	Model
	1	RS-232 interface • For RS-232 communication	(Built into GOT)  
	2	USB interface • For USB communication	(Built into GOT)  

(2) Personal computer

Image	No.	Name	Model
	3	Personal computer	For the applicable software, refer to the following.  Section 40.3 Compatible Software)

(3) Cable


Image	No.	Name	Model
	5	RS-232 cable 1)	GT01-C30R2-9S (3m)
	7	USB cable*	GT09-C30USB-5P (3m) GT09-C20USB-5P (2m)

* Use the dedicated cable.



System configuration between GOT and MITSUBISHI PLC

For the system configuration between GOT and MITSUBISHI PLC, refer to the following.

 Chapter 2 BUS CONNECTION


 Chapter 3 DIRECT CONNECTION TO CPU

40.2.4 MR Configurator




The following is the series names of the PLC CPU and servo amplifier for which the FA transparent is available.



Series name	Model name
Motion controller CPU (Q series)	Q173HCPU, Q172HCPU, Q173HCPU-T, Q172HCPU-T
MELSERVO-J3 series	MR-J3-□B

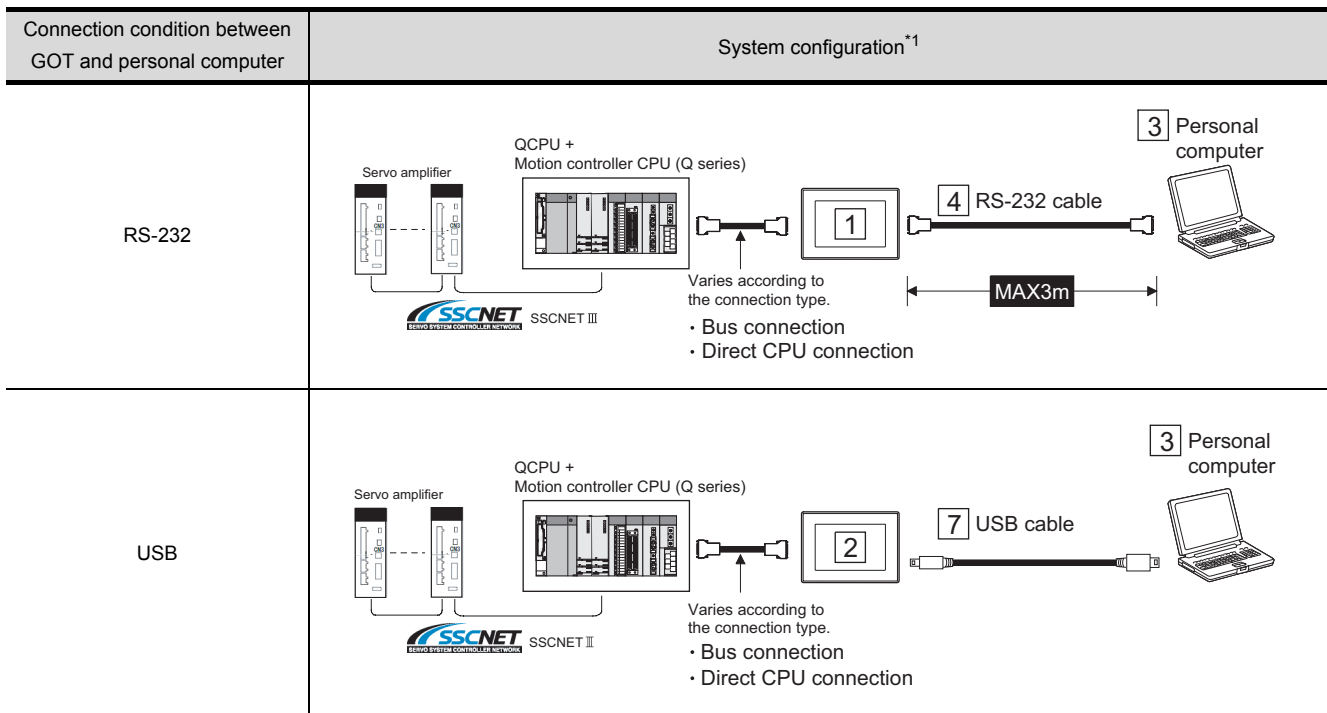

1 System configuration and connection conditions









*1 The following shows the PLC connection type and communication interface when the FA transparent function is used.


GOT type	PLC ↔ GOT side		GOT ↔ Personal computer side
	Connection type	Communication interface of GOT	Communication interface of GOT
	Bus connection	Bus connection unit	RS-232 interface
			USB interface
	Direct CPU connection	RS-232 interface RS-422 conversion unit RS-232 communication unit RS-422/485 communication unit (Model: GT15-RS4-9S only)	USB interface
			RS-232 interface USB interface
	Bus connection	Bus interface	RS-232 interface
			USB interface
	Direct CPU connection	RS-232 interface RS-422 interface	USB interface
			RS-232 interface USB interface

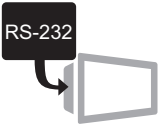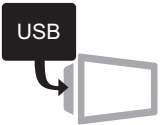2 System equipment

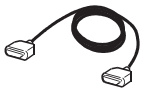

(1) GOT (Communication interface to the personal computer)

Image	No.	Name	Model
	1	RS-232 interface • For RS-232 communication	(Built into GOT)  
	2	USB interface • For USB communication	(Built into GOT)  

(2) Personal computer

Image	No.	Name	Model
	3	Personal computer	For the applicable software, refer to the following. (☞ Section 40.3 Compatible Software)

(3) Cable

Image	No.	Name	Model
	5	RS-232 cable 1)	GT01-C30R2-9S (3m)
	7	USB cable*	GT09-C30USB-5P (3m) GT09-C20USB-5P (2m)

* Use the dedicated cable.



System configuration between GOT and MITSUBISHI PLC

For the system configuration between GOT and MITSUBISHI PLC, refer to the following.

 Chapter 2 BUS CONNECTION


 Chapter 3 DIRECT CONNECTION TO CPU

40.2.5 FR Configurator




The following inverter series support FA transparent function.

Series
FREQROL A700/F700 Series



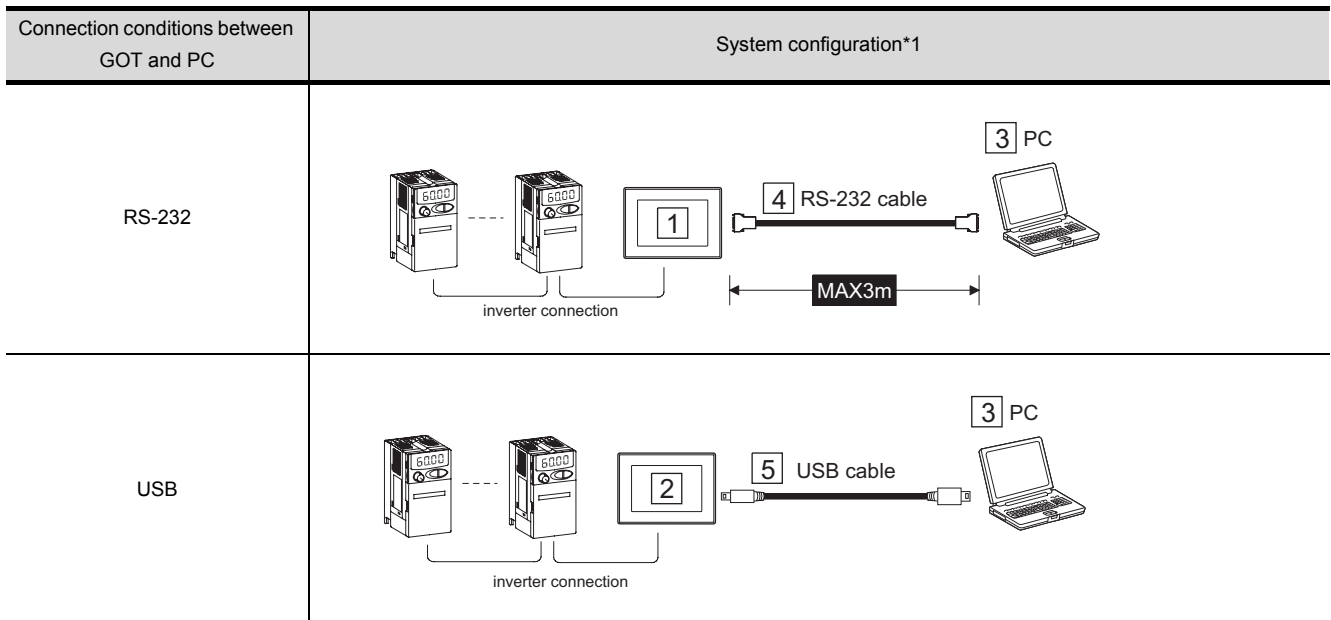1 System configuration and connection conditions









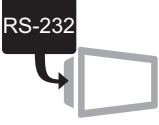*1 The following shows the types of connections to the inverter and the corresponding communication interfaces.



GOT type	Inverter ↔ GOT	GOT ↔ PC
	Communication interface of GOT	Communication interface of GOT
	RS-422 conversion unit	USB interface
	RS-422/485 communication unit (Model:GT15-RS4-9S only)	RS-232 interface USB interface
	RS-422 interface	RS-232 interface
		USB interface

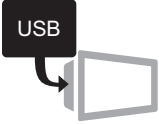2 System equipment

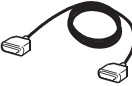

(1) GOT

Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	— (Built into GOT)  
	2	USB interface • For USB communication	— (Built into GOT)  

(2) PC

Image	No.	Name	Model name
	3	PC	For compatible software refer to the following.  Section 40.3 Compatible Software

(3) Cable

Image	No	Name	Model name
	4	RS-232 cable	GT01-C30R2-9S(3m)
	5	USB cable *	GT09-C30USB-5P(3m) GT09-C20USB-5P(2m)

*: Use the dedicated cable.



System configuration between GOT and Mitsubishi inverter

For details on the system configuration between GOT and Mitsubishi inverter, refer to the following.

 Chapter 31 INVERTER CONNECTION




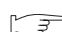
40.3 Compatible Software

The following shows the software compatible with the FA transparent function.

Point

- (1) The range accessible by software when FA transparent function is used
Use of the FA transparent function does not affect the range accessible by the software.
For details on accessible range, refer to the manual for the respective software.

- (2) The software settings when using FA transparent function
For the software settings, refer to the following when using FA transparent function.

-  Section 40.4.4
Accessing the PLC by the GX Developer, PX Developer, GX Configurator
-  Section 40.4.5 Accessing by the MT Developer
-  Section 40.4.6 Accessing the servo amplifier by the MR Configurator
-  Section 40.4.7 Accessing the inverter by the FR Configurator

1 Connecting the GOT and PC with RS-232

- (1) Bus connection

The following shows the software and the accessible PLC CPUs.

PLC CPU	Software
QCPU(Q mode)	GX Developer ^{*1} PX Developer ^{*4} GX Configurator ^{*5} -AD/DA/SC/CT/TI/TC/AS/FL/PT
Q/QnA/ACPU, motion controller CPU (A Series)	GX Developer ^{*1}
Motion controller CPU (Q Series)	MT Developer ^{*2} SW6RN-GSV13P, SW6RN-GSV22P, SW6RN-GSV43P, SW6RN-GSV54P, SW6RN-GSVDOSCP, SW6RN-GSVSNETP (for user API) MR Configurator ^{*3}

*1 GX Developer Version 8 or later is required to use the FA transparent function.

*2 MT Developer (SW6RNC-GSVE) Version 00N or later is required to use the FA transparent function.

*3 MR Configurator (MRZJW3-SETUP221E) Version B1 or later is required to use the FA transparent function.

*4 PX Developer Version 1.09K or later is required to use the FA transparent function.

*5 GX Configurator-AD: Version 2.03D or later , GX Configurator-DA: Version 2.04E or later
GX Configurator-SC: Version 2.10L or later , GX Configurator-CT: Version 1.23Z or later
GX Configurator-TI: Version 1.22Y or later , GX Configurator-TC: Version 1.21X or later
GX Configurator-AS: Version 1.20W or later , GX Configurator-FL: Version 1.21X or later
GX Configurator-PT: Version 1.20W or later

(2) Direct CPU connection

The following shows the software and the accessible PLC CPUs.

PLC CPU	Software
QCPU(Q mode)	GX Developer PX Developer ^{*3} GX Configurator ^{*4} -AD/DA/SC/CT/TI/TC/AS/FL/PT
QCPU(A mode),QnA/ACPU	GX Developer
FXCPU	GX Developer, FX-PCS/WIN
Motion controller CPU (Q Series)	MT Developer SW6RN-GSV13P, SW6RN-GSV22P, SW6RN-GSV43P, SW6RN-GSV54P SW6RN-GSVDOSCP, SW6RN-GSVSNETP (for user API) MR Configurator ^{*1}
Motion controller CPU (A Series)	GX Developer SW3RN-GSV13P, SW3RN-GSV22P, SW3RN-GSV43P, SW3RN-GSV51P
FREQROL A700/F700 Series	FR Configurator ^{*2}

*1 MR Configurator (MRZJW3-SETUP221E) Version B1 or later is required to use the FA transparent function.

*2 FR Configurator Version 1.02 or later is required to use the FA transparent function.

*3 PX Developer Version 1.09K or later is required to use the FA transparent function.

*4 GX Configurator-AD: Version 2.03D or later , GX Configurator-DA: Version 2.04E or later
GX Configurator-SC: Version 2.10L or later , GX Configurator-CT: Version 1.23Z or later
GX Configurator-TI: Version 1.22Y or later , GX Configurator-TC: Version 1.21X or later
GX Configurator-AS: Version 1.20W or later , GX Configurator-FL: Version 1.21X or later
GX Configurator-PT: Version 1.20W or later

2 Connecting the GOT and PC with USB

(1) Bus connection

The following shows the software and the accessible PLC CPUs.

PLC CPU	Software
QCPU(Q mode)	GX Developer ^{*1} PX Developer ^{*5} GX Configurator ^{*6} -AD/DA/SC/CT/TI/TC/AS/FL/PT
QCPU(A mode),QnA/ACPU, motion controller CPU (A Series)	GX Developer ^{*1}
Motion controller CPU (Q Series)	MT Developer ^{*2} SW6RN-GSV13P, SW6RN-GSV22P, SW6RN-GSV43P, SW6RN-GSV54P, SW6RN-GSVDOSCP, SW6RN-GSVSNETP (for user API) MR Configurator ^{*3}
FREQROL A700/F700 Series	FR Configurator ^{*4}

*1 GX Developer Version 8.22Y or later is required to use the FA transparent function.

*2 MT Developer (SW6RNC-GSVE) Version 00N or later is required to use the FA transparent function.

*3 MR Configurator (MRZJW3-SETUP221E) Version B1 or later is required to use the FA transparent function.

*4 FR Configurator Version 1.02 or later is required to use the FA transparent function.

*5 PX Developer Version 1.09K or later is required to use the FA transparent function.

*6 GX Configurator-AD: Version 2.03D or later , GX Configurator-DA: Version 2.04E or later
GX Configurator-SC: Version 2.10L or later , GX Configurator-CT: Version 1.23Z or later
GX Configurator-TI: Version 1.22Y or later , GX Configurator-TC: Version 1.21X or later
GX Configurator-AS: Version 1.20W or later , GX Configurator-FL: Version 1.21X or later
GX Configurator-PT: Version 1.20W or later

(2) Direct CPU connection

The following shows the software and the accessible PLC CPUs.

PLC CPU	Software
QCPU(Q mode)	GX Developer ^{*1} PX Developer ^{*5} GX Configurator ^{*6} -AD/DA/SC/CT/TI/TC/AS/FL/PT
QCPU(A mode),QnA/ACPU,FXCPU motion controller CPU (A Series)	GX Developer ^{*1}
Motion controller CPU (Q Series)	MT Developer ^{*2} SW6RN-GSV13P, SW6RN-GSV22P, SW6RN-GSV43P, SW6RN-GSV54P, SW6RN-GSVDOSCP, SW6RN-GSVSNETP (for user API) MR Configurator ^{*3}
FREQROL A700/F700 Series	FR Configurator ^{*4}

*1 GX Developer Version 8.22Y or later is required to use the FA transparent function.

*2 MT Developer (SW6RNC-GSVE) Version 00N or later is required to use the FA transparent function.

*3 MR Configurator (MRZJW3-SETUP221E) Version B1 or later is required to use the FA transparent function.

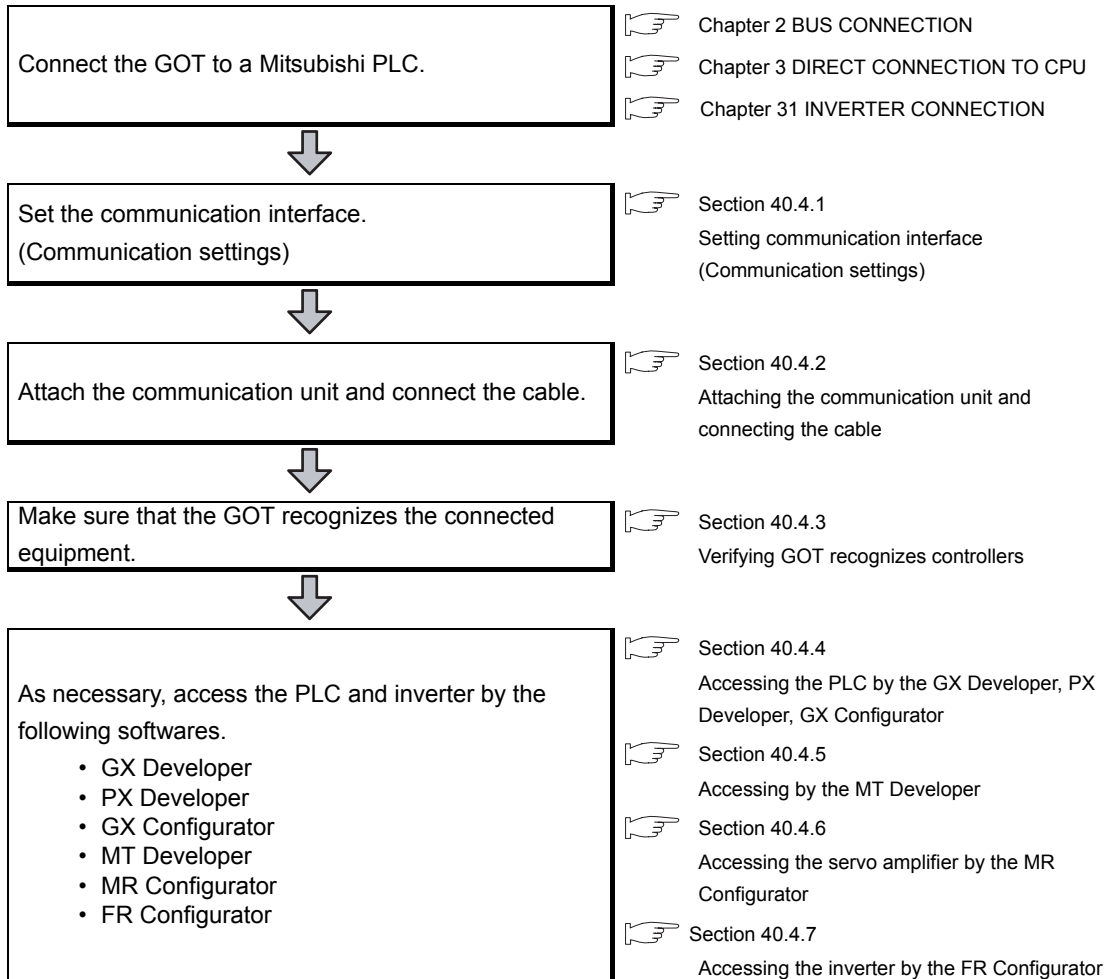
*4 FR Configurator Version 1.02 or later is required to use the FA transparent function.

*5 PX Developer Version 1.09K or later is required to use the FA transparent function.

*6 GX Configurator-AD: Version 2.03D or later , GX Configurator-DA: Version 2.04E or later
GX Configurator-SC: Version 2.10L or later , GX Configurator-CT: Version 1.23Z or later
GX Configurator-TI: Version 1.22Y or later , GX Configurator-TC: Version 1.21X or later
GX Configurator-AS: Version 1.20W or later , GX Configurator-FL: Version 1.21X or later
GX Configurator-PT: Version 1.20W or later


40.4 Preparatory Procedure for Accessing

The following shows the procedures to be followed before accessing and corresponding reference sections.




40.4.1 Setting communication interface (Communication settings)

Set the communication interface of the GOT at [Communication settings] in GT Designer2. For details on [Communication settings] of GT Designer2, refer to the following manual:

 GT Designer2 Version Screen Design Manual

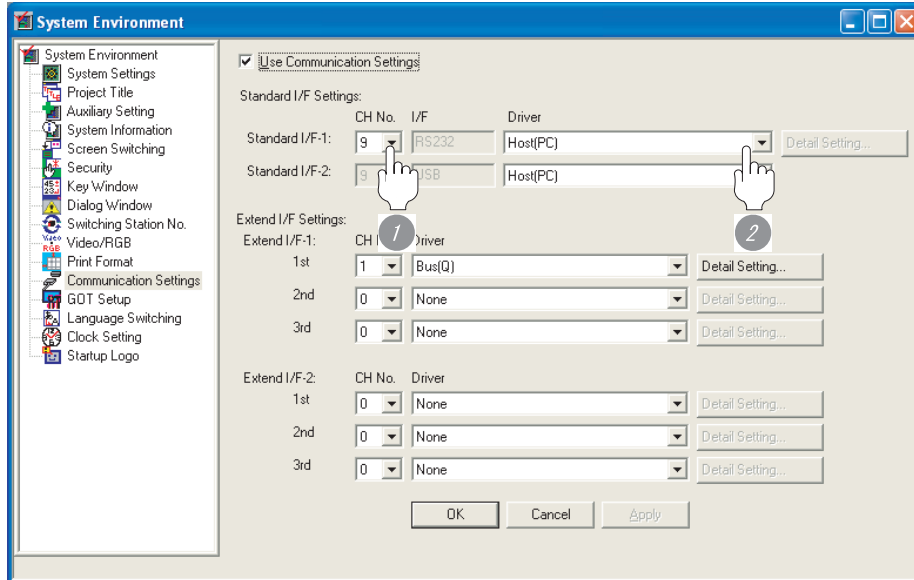1 Communication settings



1 Set "9" to the No. of the to be used.

2 Set the driver to "Host(PC)".



(1) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

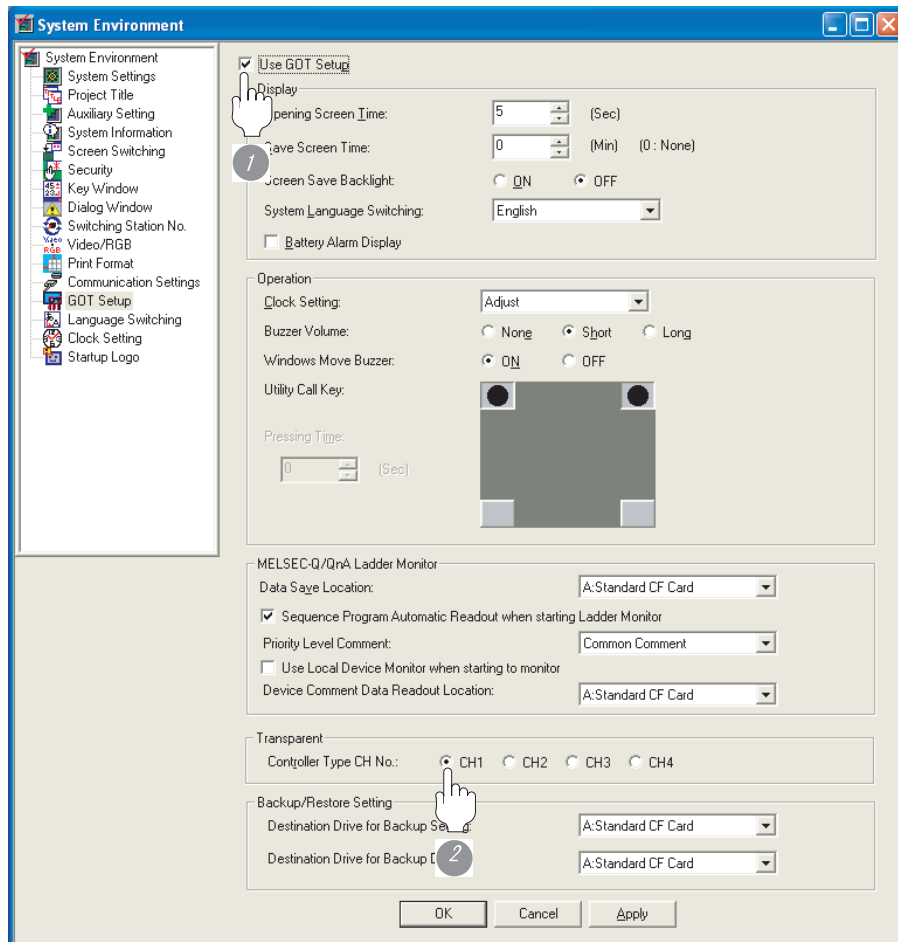
 GT □ User's Manual

(2) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

2 GOT Setup

When using the multi-channel function (only GT15), specify the channel No. on which FA transparent function is executed.



- 1 Check [Use GOT Setup].
- 2 As necessary, check one of [CH1] to [CH4].(Default: CH1)



Transparent setting on the utility screen

Transparent setting can be performed by the GOT.

For details of the operating, refer to the following.

👉 GT15 User's Manual

(Chapter 11. DISPLAY AND OPERATION SETTINGS(GOT SET UP))

40.4.2 Attaching the communication unit and connecting the cable



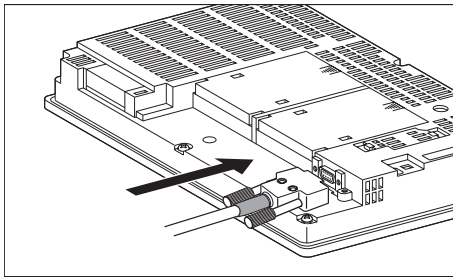
Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

1 How to connect the cable


(1) How to connect the RS-232 cable

(a) For the GT15




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

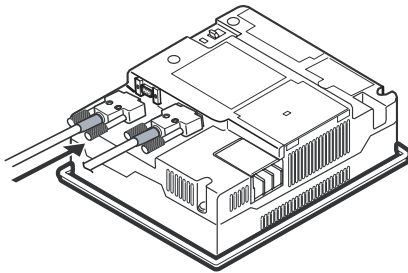(b) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

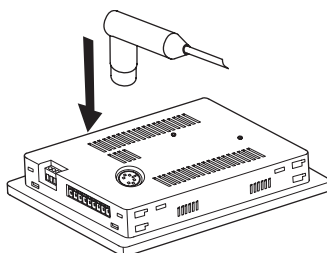(c) For the GT10



- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

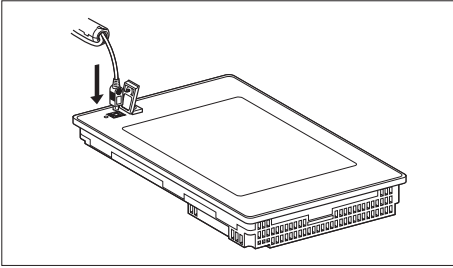(2) How to connect the USB cable



- 2 Connect the USB cable to the USB interface on the GOT.

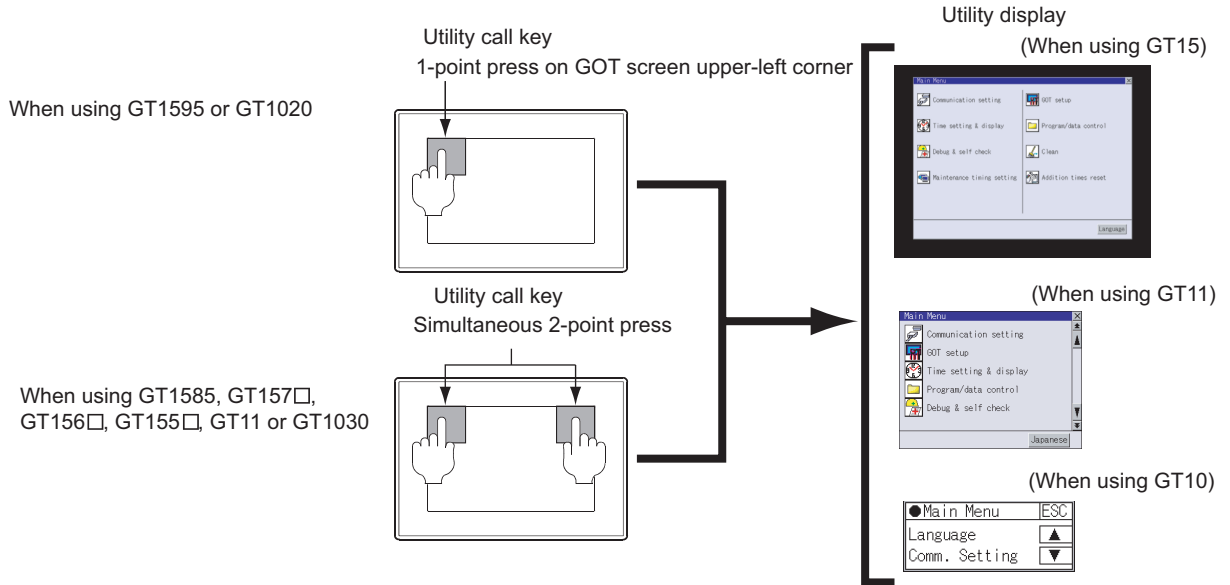
40.4.3 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point


When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

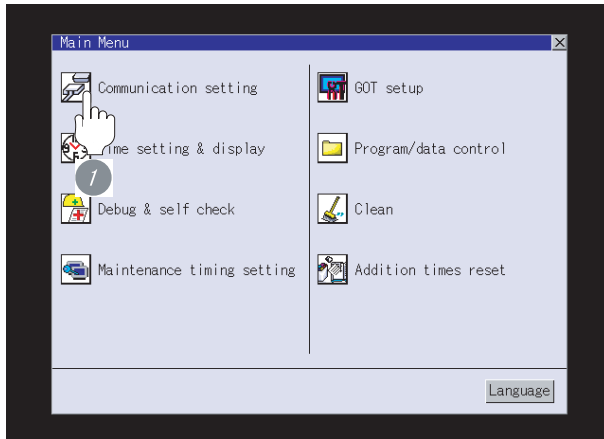☞ GT□ User's Manual



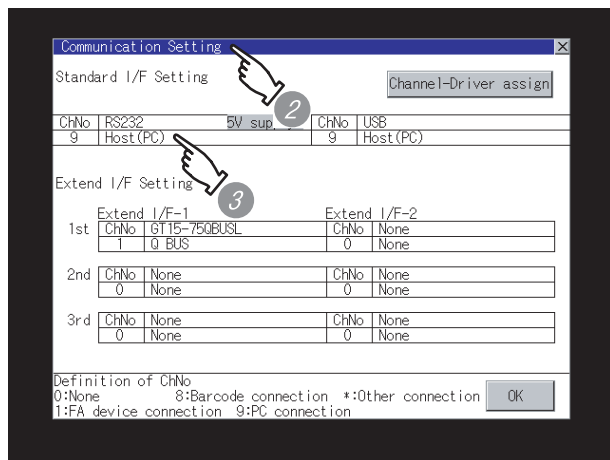- 1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.



- 2 The [Communication setting] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Host(PC)

- 4 When the communication driver name is not displayed normally, carry out the following procedure again.

☞ Section 40.4 Preparatory Procedure for Accessing



- (1) For GT15, GT11

- (a) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

☞ GT15 User's Manual, GT11 User's Manual

- (b) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

- (2) For GT10

- (a) Communication interface setting by the Utility

Although the communication interface setting can be checked, it cannot be changed.

For details on the Utility, refer to the following manual.

☞ GT10 User's Manual

- (b) Communication settings

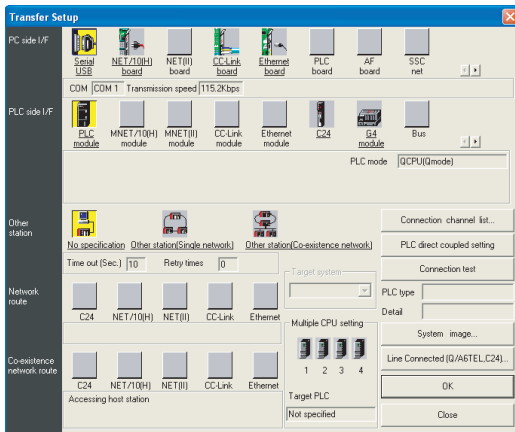
Communication settings can be changed on only GT Designer2.

40.4.4 Accessing the PLC by the GX Developer, PX Developer, GX Configurator


The setting method for the FA transparent function of GX Developer is used as an example. GX Configurator is an add-on software of GX Developer.

1 When connecting the GOT and PC with RS-232

The following shows an access example by GX Developer (when connected to the QCPU (Q mode)) when the GOT and PC are connected by RS-232.



(For bus connection only)



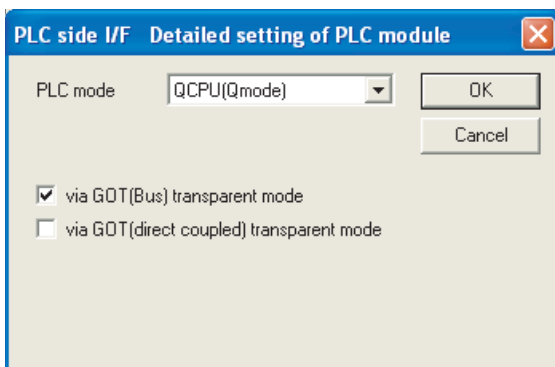


- 1 Click [Online] → [Read from PLC] in GX Developer.
- 2 Set the [PLC Series] to [QCPU (Q mode)].
- 3 The [Connection Setup] is displayed.
- 4 Set the [Connection Setup]:
 PC side I/F : Serial USB (COM)
 PLC side I/F : PLC module
 Other station : No specification
- 5 When bus connection has been made, double-click the [PLC module] on the PLC side I/F to display the [PLC side I/F Detailed setting of PLC module].
- 6 On the [PLC side I/F Detailed setting of PLC module], mark the [via GOT(Direct coupled) transparent mode] checkbox.
Direct CPU connection *1
 For direct CPU connection, mark the [via GOT (direct coupled) transparent mode] checkbox.
 *1 This is operation required in the case of using GX Developer of which version is 8.22Y and above.
- 7 The screen returns to the [Connection Setup]. Click the Communication to check if GX Developer has been connected to the QCPU (Q mode).

2 When connecting the GOT and PC with USB

(1) When the Q/QnA/ACPU, motion controller CPU (A Series) is connected

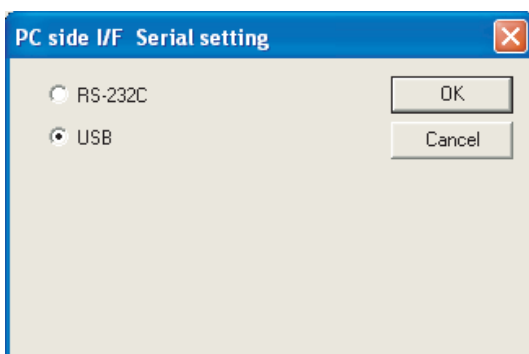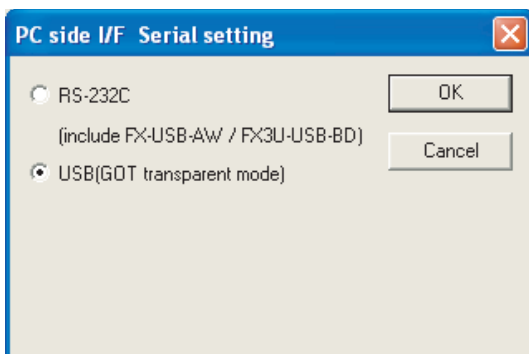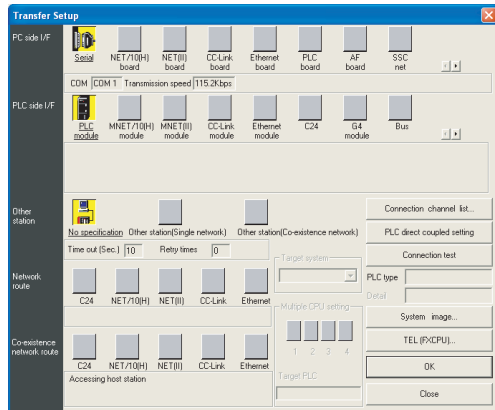The following is an access example by GX Developer (When connected to the A Series) when the GOT and PC are connected by USB.



1 Click [Online] → [Read from PLC] in GX Developer.

2 Set the [PLC Series] to [ACPU].

3 The [Connection Setup] is displayed.

4 Set the [Connection Setup]:
 PC side I/F : Serial
 PLC side I/F : PLC module
 Other station : No specification

5 Double-click [PLC module] of the PLC side I/F to display [PLC side IF Detailed setting of PLC module].

6 Check-mark either of the following in [PLC side IF Detailed setting of PLC module].

Bus connection

[via GOT (Bus) transparent mode]

Direct CPU connection

[via GOT (direct coupled) transparent mode]

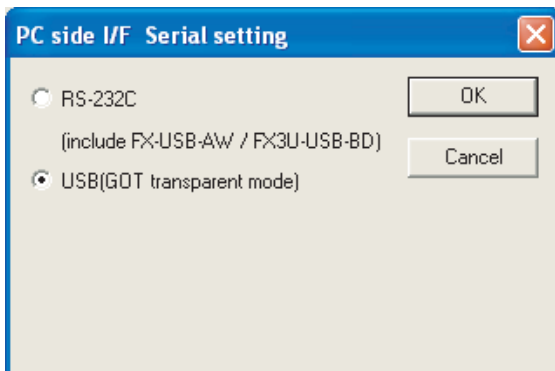
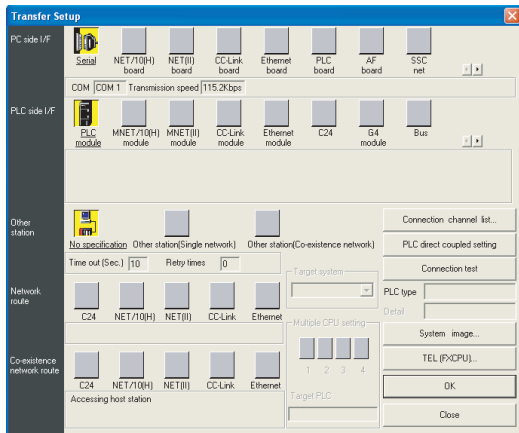
7 Return to [Transfer Setup] and double-click [Serial] of the PC side I/F to display [PC side I/F Serial setting].

8 Select [USB] in [PC side I/F Serial setting].

9 The screen returns to the [Connection Setup]. Click the Communication to check if GX Developer has been connected to the ACPUs.

(2) When the FXCPU is connected

The following shows an access example by GX Developer when the GOT and PC are connected by USB.



1 Click [Online] → [Read from PLC] in GX Developer.

2 Set the [PLC Series] to [FXCPU].

3 The [Connection Setup] is displayed.

4 Set the [Connection Setup]:
 PC side I/F : Serial
 PLC side I/F : PLC module
 Other station : No specification

5 Double-click [Serial] of the PC side I/F to display [PC side I/F Serial setting].

6 Select [USB (GOT transparent mode) in [PC side I/F Serial setting].

7 The screen returns to the [Connection Setup]. Click the [Communication] to check if GX Developer has been connected to the FXCPU.



How to operate GX Developer

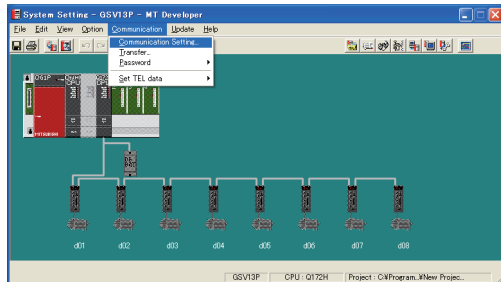
For details on GX Developer operations, refer to the following manual:

☞ GX Developer Version Operating Manual


40.4.5 Accessing by the MT Developer

1 When connecting the GOT and PC with RS-232


The following shows an access example by MT Developer (when connected to the motion controller CPU (Q series)) when the GOT and PC are connected by RS-232.



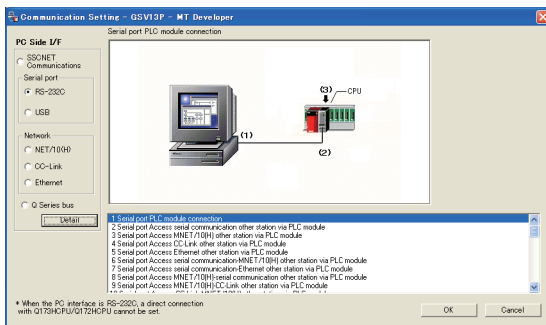- 1 Click [Communication] → [Communication Setting] in MT Developer.



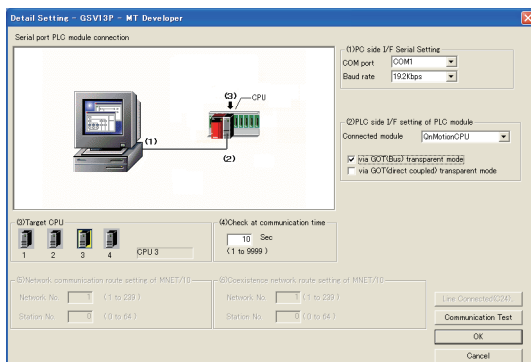- 2 Check-mark [RS-232C] in [Serial port].
- 3 Click [Detail].



- 4 Check-mark either of the following in [PLC side I/F setting of PLC module].

Bus connection

[via GOT(Bus) transparent mode]

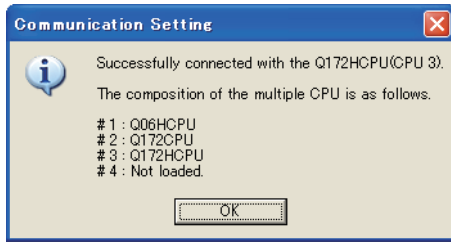
Direct CPU connection

[via GOT(direct coupled) transparent mode]

- 5 As necessary, select a CPU that is targeted by using the transparent function in [CPU].

- 6 Click [Communication Test].








- 7 Confirm that the PC is connected to the motion controller CPU (Q series).

2 When connecting the GOT and PC with USB

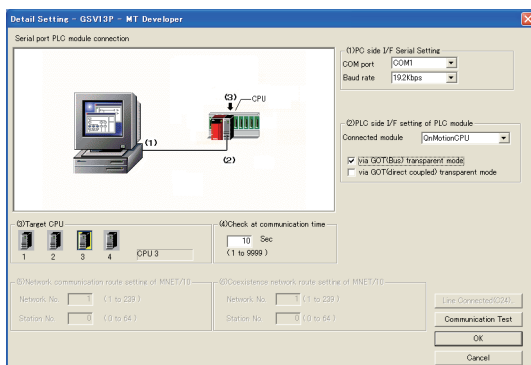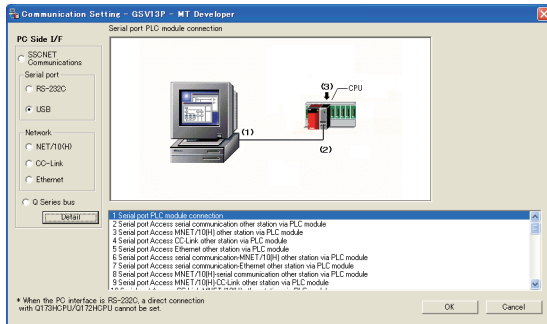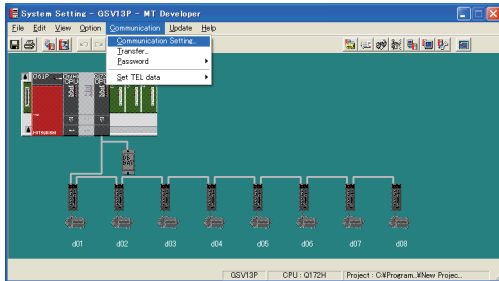The following shows an access example by MT Developer (when connected to the motion controller CPU (Q series)) when the GOT and PC are connected by USB.



1 Click [Communication] → [Communication Setting] in MT Developer.

2 Check-mark [USB] in [Serial port].

3 Click [Detail].

4 Check-mark either of the following in [PLC side I/F setting of PLC module].

Bus connection

[via GOT(Bus) transparent mode]

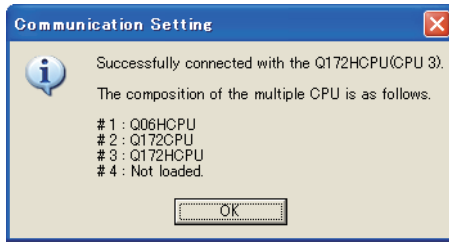
Direct CPU connection

[via GOT(direct coupled) transparent mode]

5 As necessary, select a CPU that is targeted by using the transparent function in [CPU].


6 Click [Communication Test].

- 7 Confirm that the PC is connected to the motion controller CPU (Q series).



40.4.6 Accessing the servo amplifier by the MR Configurator


Make the FA transparent settings with the of MT Developer.
For details, refer to the following:

 Section 40.4.5 Accessing by the MT Developer


40.4.7 Accessing the inverter by the FR Configurator

1 When connecting the GOT and PC with RS-232

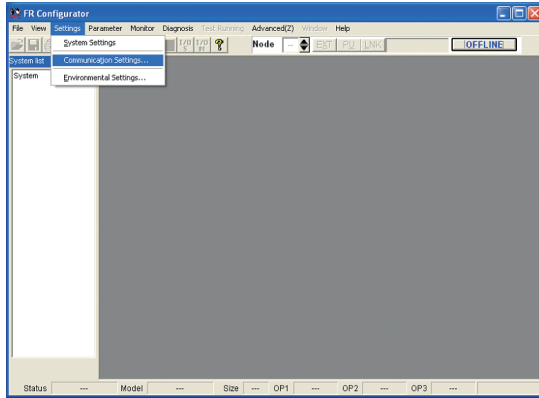
The following shows an access example by MT Developer (when connected to the FREQROL A700/F700 Series) when the GOT and PC are connected by RS-232.



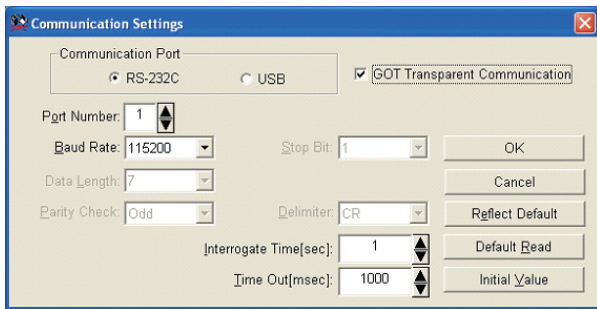- 1 Click [Settings] → [Communication Settings...] in FR Configurator.



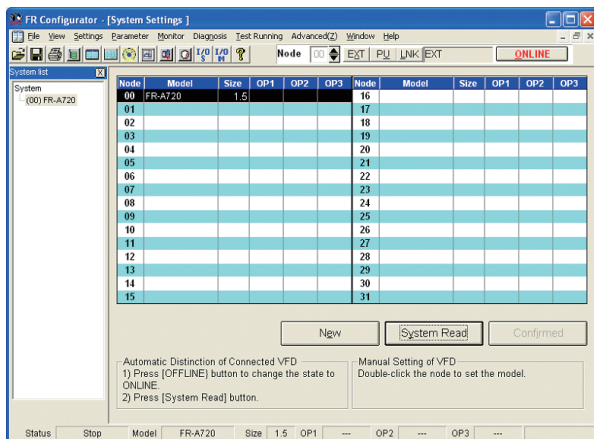
- 2 On the [Communication Port], mark the [RS-232C] checkbox.
- 3 Click the [GOT Transparent Communication].
- 4 Click the [OK].




- 5 Click [OFFLINE] to make it [ONLINE].
- 6 Click the [System Read], then check if GOT has been connected to FREQROL A700/F700 series normally.

2 When connecting the GOT and PC with USB

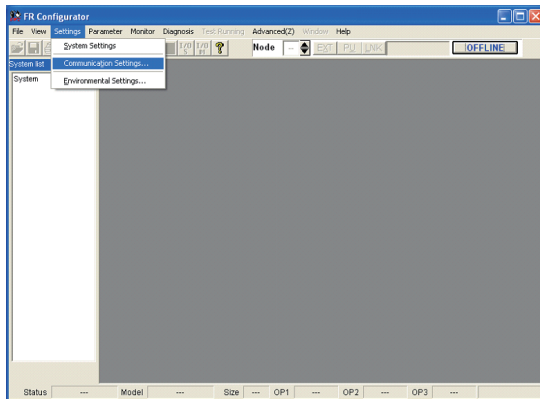
The following shows an access example by MT Developer (when connected to the FREQROL A700/F700 Series) when the GOT and PC are connected by USB



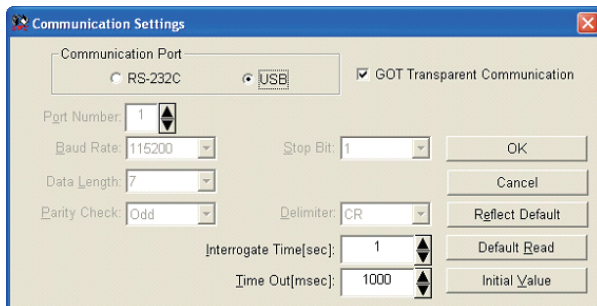- 1 Click [Settings] → [Communication Settings...] in FR Configurator.



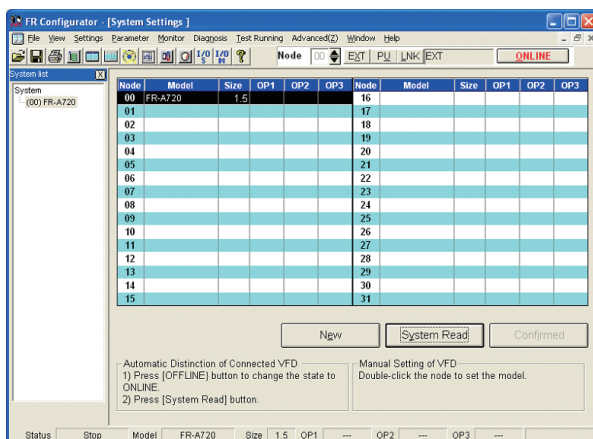- 2 On the [Communication Port], mark the [USB] checkbox.
- 3 Click the [GOT Transparent Communication].
- 4 Click the [OK].



- 5 Click [OFFLINE] to make it [ONLINE].
- 6 Click the [System Read], then check if GOT has been connected to FREQROL A700/F700 series normally.

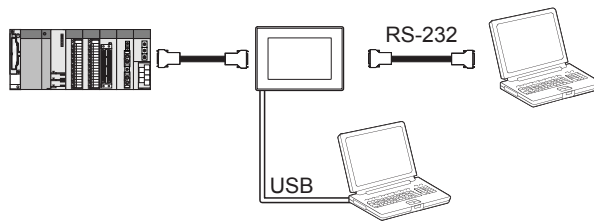
40.5 Precautions

40.5.1 Precautions common to each software

1 GOT interface required to use the FA transparent function

Connect the PC, to which GX Developer or any other relevant software has been installed, to the RS-232 interface or USB interface of the GOT.

When performing the FA transparent function, use either RS-232 interface or USB interface of the GOT. Using both of them to perform the FA transparent function concurrently is not allowed.



2 Conditions for suspending the FA transparent function

The FA transparent function is also suspended when any of the following operations, which stop the GOT monitor, is performed.

Note that the FA transparent function will not be stopped while using the optional function such as the Utility display or ladder monitor function.

- (1) When project data is downloaded/uploaded by GT Designer2, or when the OS is installed*¹
- (2) When the GOT is set up.*¹
- (3) When no communication request (online monitor, etc.) has been issued from GX Developer for 45 minutes

*¹ A timeout error occurs in GX Developer.

3 When monitoring the PLC CPU from a PC

When monitoring the PLC CPU from a PC, the GOT and PC refresh the display slower.

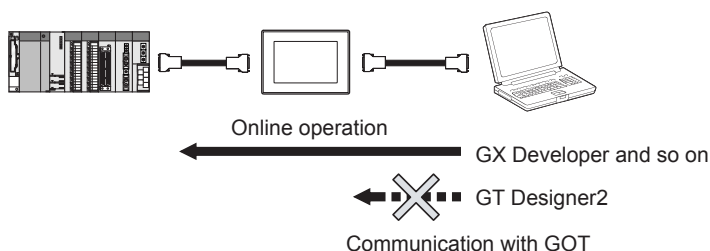
4 Software available for the FA transparent function

When multiple kinds of software are activated on one PC, only one of them is available for communications using the FA transparent function.

Do not concurrently perform any communications using the FA transparent function.

(Offline operation with each software is available.)

Also, do not perform communications with the GOT (e.g. downloading project data) from GT Designer2 during execution of communications using the FA transparent function.



5 When the FA transparent function is used in a bus connection

(1) When GOT monitoring is faulty

The FA transparent function cannot be used in case that the GOT monitoring is faulty due to PLC CPU errors or faulty communication between the PLC CPU and GOT.

When GOT monitoring is faulty, check the following.

1 Whether the PLC CPU operates normally

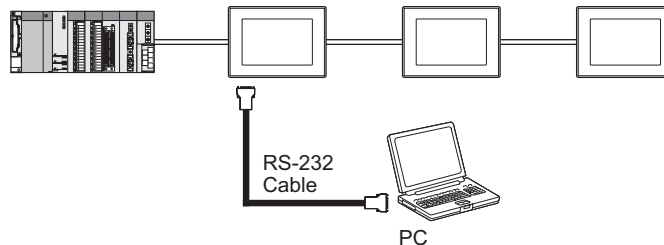
☞ Refer to the User's Manual of the PLC CPU you use.

2 Whether the PLC CPU and GOT are connected normally

☞ • Chapter 2 BUS CONNECTION
• Chapter 3 DIRECT CONNECTION TO CPU

(2) When multiple GOTs are bus-connected

When multiple GOTs are bus-connected, the FA transparent function can be used on each GOT. However, note that the monitoring performance of each GOT slows down as the number of monitoring GOTs and PCs increases.



(3) When the FA transparent function is used in a bus connection


When the FA transparent function is used in a bus connection, the following GX Developer functions cannot be executed.

The message "The executed function is not supported. Please check the manual and other documentation." is displayed on GX Developer

Unsupported GX Developer functions	Remarks
<ul style="list-style-type: none"> • Remote Reset • Remote system reset 	—
<ul style="list-style-type: none"> • Remote RUN • Remote STOP • Remote PAUSE • Remote STEP-RUN • Remote latch clear • Write clock data • Clear malfunction log 	Inexecutable only when specify all stations/groups has been performed.


6 When using together with the Multiple-GT11, GT10 connection function

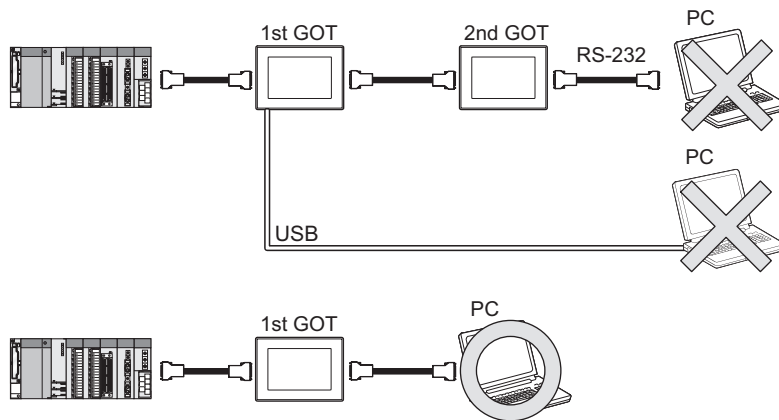When multiple GOTs are connected, the FA transparent function is not available even if the RS-232 interface or USB interface is used for the connection.



7 When PLC power disconnection occurs with the FA transparent function being used

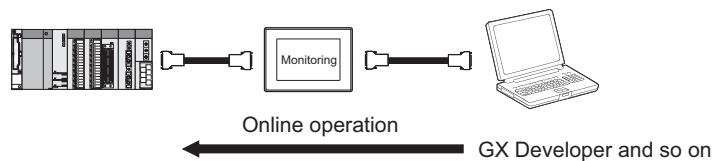While the FA transparent function is being used, if the communication between the PLC and the GOT is stopped due to PLC power disconnection or a disconnection of the communication cable between the PLC and the GOT, the GOT waits for timeout against the communication request from the peripheral devices (GX Developer, etc.), and recovery of monitoring between the PLC and the GOT is delayed.



40.5.2 When using GX Developer

1 When connecting to QCPU (A mode)

When connecting to QCPU (A mode), set the PLC type to "A4UCPU" or "QCPU (A mode)" on GX Developer.

2 Connecting the GOT and GX Developer with RS-232

The [Transmission speed] setting in [PC side I/F Serial setting] of [Transfer Setup] must be within the range supported by the connected CPU.

CPU connected	Transmission speed
QCPU, FXCPU	9600bps, 19200bps, 38400bps, 57600bps, 115200bps
QnACPU	9600bps, 19200bps, 38400bps
ACPU	9600bps, 19200bps
Motion controller CPU (A series)	9600bps

3 When [monitor conditions] have been set on GX Developer

- (1) Monitoring performance of the GOT is temporarily suspended.
- (2) The GOT cannot respond to the touch switch operation and numerical/ascii inputs.
- (3) Writing to PLC results in a system alarm occurrence and displays the message, "315 Device writing error. Correct device."
- (4) While setting the monitor conditions, do not perform any operation which makes the GOT restart (e.g. downloading project data, changing utility data).
Doing so may display a system alarm, "402 Communication timeout. Confirm communication pathway or modules." when the GOT restarts.
When the monitor conditions setting for the PLC CPU has not been cancelled, reconnect GX Developer to cancel the setting. (An error may be output when the monitor conditions setting is cancelled.)
- (5) When the time check of GX Developer is set to 30 seconds or more in the monitor condition settings, the message "402 Communication timeout. Confirm communication pathway or modules." may appear.
Set the time check time of GX Developer to 30 seconds or less.

4 When exiting GX Developer

For 45 seconds after GX Developer has been exited, the GOT continues monitoring at the same speed as when the FA transparent function is working.

5 When performing [Read to PLC], [Write to PLC] and other file operations on GX Developer

If any of the following GOT functions is executed during the file operation such as [Read to PLC], [Write to PLC], this may cause the GOT or GX Developer to develop an error.

In this case, take the following corrective action :

GOT functions	Error messages on GOT	Corrective action on GOT side	Error messages on GX Developer error message	Corrective action on GX Developer
File reading in the ladder monitor function for MELSEC-Q	The file is not found.	With no file operation being executed on GX Developer, re-execute the file reading.	File access failure. Please retry.	With no file reading being executed in the ladder monitor function for MELSEC-Q, re-execute the file operation.
Read/write of values of the file register specified for the recipe function	358 PLC file access failure. Confirm PLC drive.*1	Stop the file operation on GX Developer and turn ON the trigger device for the recipe function again.	File access failure. Please retry. PLC file system error. Unable to communicate with PLC.	Execute the file access operation again with the recipe in-process signal in GOT system information ON.
Reading TC monitor set value in the system monitor function	No message is displayed. (The TC set value space is blank.)	With no file operation being executed on GX Developer, re-execute the TC monitor.	File access failure. Please retry.	With no TC set value being read, re-execute the file operation.

*1 The numerical indicates the system alarm No.

6 When PLC write is failed while using the FA transparent function

The execution of PLC write using the FA transparent function may be failed due to some reason such as cable disconnection.

When this occurs, re-execute the PLC write from the same PC, or reset the PLC CPU.

7 Restrictions on GX Developer during backup/restore execution

- (1) When reading/writing data from/to a PLC, monitoring a PLC, and others are executed with GX Developer with the FA transparent function during the backup/restore execution with the GOT, the backup/restore is stopped.
Check that reading/writing data from/to the PLC, monitoring the PLC, and others are not executed with GX Developer with the FA transparent function. Execute the backup/restore with the GOT again.
- (2) When the backup/restore is executed with the GOT while reading/writing data from/to a PLC, monitoring a PLC, and others are executed with GX Developer with the FA transparent function, errors occur on GX Developer.
The backup/restore with the GOT is correctly executed.

40.5.3 When using MT Developer

1 When exiting MT Developer

For 45 seconds after GX Developer has been exited, the GOT continues monitoring at the same speed as when the FA transparent function is working.

2 When PLC write is failed while using the FA transparent function

The execution of PLC write using the FA transparent function may be failed due to some reasons such as cable disconnection.

When this occurs, re-execute the PLC write from the same PC, or reset the motion controller CPU.

3 When a cable disconnection has occurred

When the cable between the GOT and the motion CPU is disconnected, it takes time until a timeout error occurs in MT Developer.

40.5.4 When using MR Configurator

1 Unavailable functions and restrictions

For the use via the motion controller, there are unavailable functions and restrictions. For details on the restrictions, refer to the help screen of MR Configurator.

2 Monitor speed of GOT

Since the FA transparent function is used via the motion CPU, the monitor speed of GOT is slow.

40.5.5 When using FR Configurator

1 GOT monitoring when using FA transparent function

When FA transparent function is used, GOT suspends monitoring on channels supporting FA transparent function.




Point Cancelling the suspended GOT monitoring immediately

To cancel the suspended (45 seconds) GOT monitoring immediately after FA transparent is executed, input "1" to device GS457. Then GOT resumes monitoring.

If FA transparent is resumed even if "1" is already input to device GS457, an error will occur on FR Configurator.

For the details of the device, refer to the following manual.

 GT Designer2 Version□ Screen Design Manual

2 When using the oscilloscope function specified sampling











Since the monitoring of the inverter data may be not performed at the specified sampling intervals depending on the settings of oscilloscope function, adjust the communication setting, a sampling interval, etc.

3 About PU mode operation command source selection

On the setting of PU mode operation command source selection (Pr:551) of the inverter, specify the terminal (1:RS-485 terminals, 2:PU connected) connected to GOT.

40.6 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
  USB connection	Supporting USB connection between the PC and GOT.	2.09K	GT15: • Standard monitor OS [01.02.**] GT11: • Standard monitor OS [01.02.**] • BootOS [01.02.**.C]
  software	Supporting FR Configurator	2.27D	GT15: • Standard monitor OS [02.04.**] GT11: • Standard monitor OS [02.04.**]
  software	Supporting PX Developer, GX Configurator	2.32J	• Standard monitor OS [03.00.**]
  software	MT Developer • Supporting USB connection between the PC and GOT • Supporting Bus connection between the GOT and programmable controller Supporting MR Configurator	2.58L	• Standard monitor OS [03.03.**]
 GT10 connection	Supporting FA transparent when connecting to the GT1020	2.43V	• Standard monitor OS [01.02.**]
 GT10 connection	Supporting FA transparent when connecting to the GT1030	2.58L	• Standard monitor OS [01.03.**]

MULTIPLE-GT11, GT10 CONNECTION FUNCTION



41.1 System Configuration page 41-2

This section describes devices and cables needed for connection of multiple GOTs.
Refer to this section to select the desired system.

41.2 Connection Cable page 41-5

This section describes the specifications of the cables needed for connection of multiple GOTs.
Refer to this section to check the specifications of the connection cable to be used.

41.3 Preparatory Procedures for Monitoring page 41-7

This section describes the preparatory procedures for monitoring in multiple-GT11 connection.
The sequential checkup procedure will be helpful for those who communicate through the GOT for the first time.

41.4 Precautions page 41-23

This section describes precautions for multiple-GT11 connection.
Refer to this section without fail before starting multiple-GT11 connection.

41.5 List of Functions Added by Version Upgrade page 41-25

This section describes the functions added by version upgrade of GT Designer2 or OS.

41.1 System Configuration

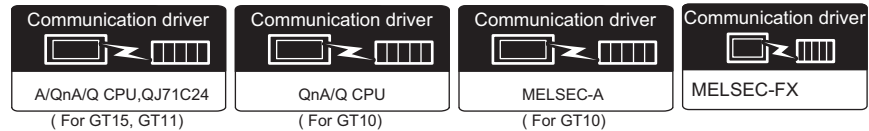
Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.

Use these numbers as references when confirming models and applications.



1 System configuration and connection conditions

(1) Connecting 1st GOT to MITSUBISHI PLC via RS-232 interface

Connection conditions		System configuration ^{*1}
Number of GOTs	Distance	
2 (max.)	(See the right column.)	<p> · Direct CPU connection · Computer link connection </p> <p>Connect to RS-232 interface of GT11.</p> <p>② RS-422 cable</p> <p>MAX30m</p> <p>GT11 Serial</p>
2 (max.)	(See the right column.)	<p> · Direct CPU connection </p> <p>Connect to RS-232 interface of GT10.</p> <p>④ RS-232 cable 2)</p> <p>GT10 24V (RS-232)</p> <p>^{*2}</p>

*1 When GT11 and GT10 exist in the same system, the multiple connection function is not supported.

*2 The 2nd GOT connected to the GT10 must have built-in RS-232 interface.

(2) Connecting 1st GOT to MITSUBISHI PLC via RS-422 interface








Connection conditions		System configuration ^{*1}
Number of GOTs	Distance	
2 (max.)	(See the right column.)	<p> · Direct CPU connection · Computer link connection </p> <p> Connect to RS-422 interface of GT11. </p> <p> MAX15m </p> <p> 3 RS-232 cable 1 </p> <p> GT11 Serial </p>
2 (max.)	(See the right column.)	<p> · Direct CPU connection </p> <p> Connect to RS-422 interface of GT10. </p> <p> 4 RS-232 cable 2 </p> <p> *2 </p> <p> GT10 24V (RS-422) GT10 5V (RS-422) </p>

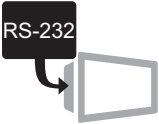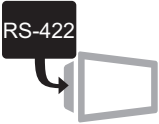*1 When GT11 and GT10 are intermingled, the Multiple connection function is not supported.







*2 For the GT10, 2nd GT10(input power supply : 24V) must be a RS-232 built-in product.


2 System equipment

(1) GOT

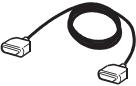Image	No.	Name	Model name
	1	RS-232 interface • For RS-232 communication	- (Built into GOT)   (RS-232)
		RS-422 interface • For RS-422 communication	- (Built into GOT)   (RS-422)  (RS-422)

(2) Cable

Image	No.	Name	Model name
	2	RS-422 cable	(To be prepared by the user.  Section 38.2 Connection Cable) 
	3	RS-232 cable 1)	GT01-C30R2-9S(3m) 
	4	RS-232 cable 2)* ¹	GT10-C30R2-6P(3m) 

*1 For the connection to 2nd GOT, refer to the cable connection diagram. ( Section 38.2 Connection Cable)

Point

Connection type applicable to the multiple-GT11, GT10 connection function

The multiple-GT11, GT10 connection function is available for the following types of connection of the GOT and a MITSUBISHI PLC. For the system configuration between the GOT and MITSUBISHI PLC, refer to the corresponding section.

- Direct CPU connection ( Chapter 3 DIRECT CONNECTION TO CPU)

41.2 Connection Cable

The RS-422 cables for connecting multiple GT11s must be prepared by the user.
The following provides connection diagrams for each cable, connector specifications and other information.

1 Connection diagram


(1) RS-422 cable (for only GT11)

GOT side		Cable connection and signal direction	GOT side	
Signal name	Pin No.		Signal name	Pin No.
SDA	1		1	SDA
RDA	2		2	RDA
RSA	3		3	RSA
CSA	4		4	CSA
SG	5		5	SG
SDB	6		6	SDB
RDB	7		7	RDB
RSB	8		8	RSB
CSB	9		9	CSB

(2) RS-232 cable 1) (for only GT11)

GOT side		Cable connection and signal direction	GOT side	
Signal name	Pin No.		Signal name	Pin No.
CD	1		1	CD
RD(RXD)	2		2	RD(RXD)
SD(TXD)	3		3	SD(TXD)
ER(DTR)	4		4	ER(DTR)
SG	5		5	SG
DR(DSR)	6		6	DR(DSR)
RS(RTS)	7		7	RS(RTS)
CS(CTS)	8		8	CS(CTS)
—	9		9	—

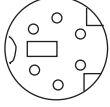(3) RS-232 cable 2) (for only GT10)

Second GOT Side	Cable connection	Untied wire color of GT10-C30R2-6P	First GOT side
Signal name			Pin layout
SD		Brown	 <p>MINI-DIN 6Pin: male</p>
RD		Red	
ER		Blue	
DR		Yellow	
SG		Green	
RS		Purple	
CS			
NC			
NC			

2 Connector specifications

(1) GOT side connector

Use the following as the RS-422 interface connector on the GOT.

For the GOT side of the RS-422 cable, use a connector and connector cover applicable to the GOT connector.

(a) Connector type

9-pin D-sub (female)

(b) Connector model


GOT	Model	Manufacturer
GT11	17LE-13090-27(D3AC)	DDK Ltd.

3 Precautions when preparing a cable

The length of the RS-422 cable must be 30m or less.

41.3 Preparatory Procedures for Monitoring

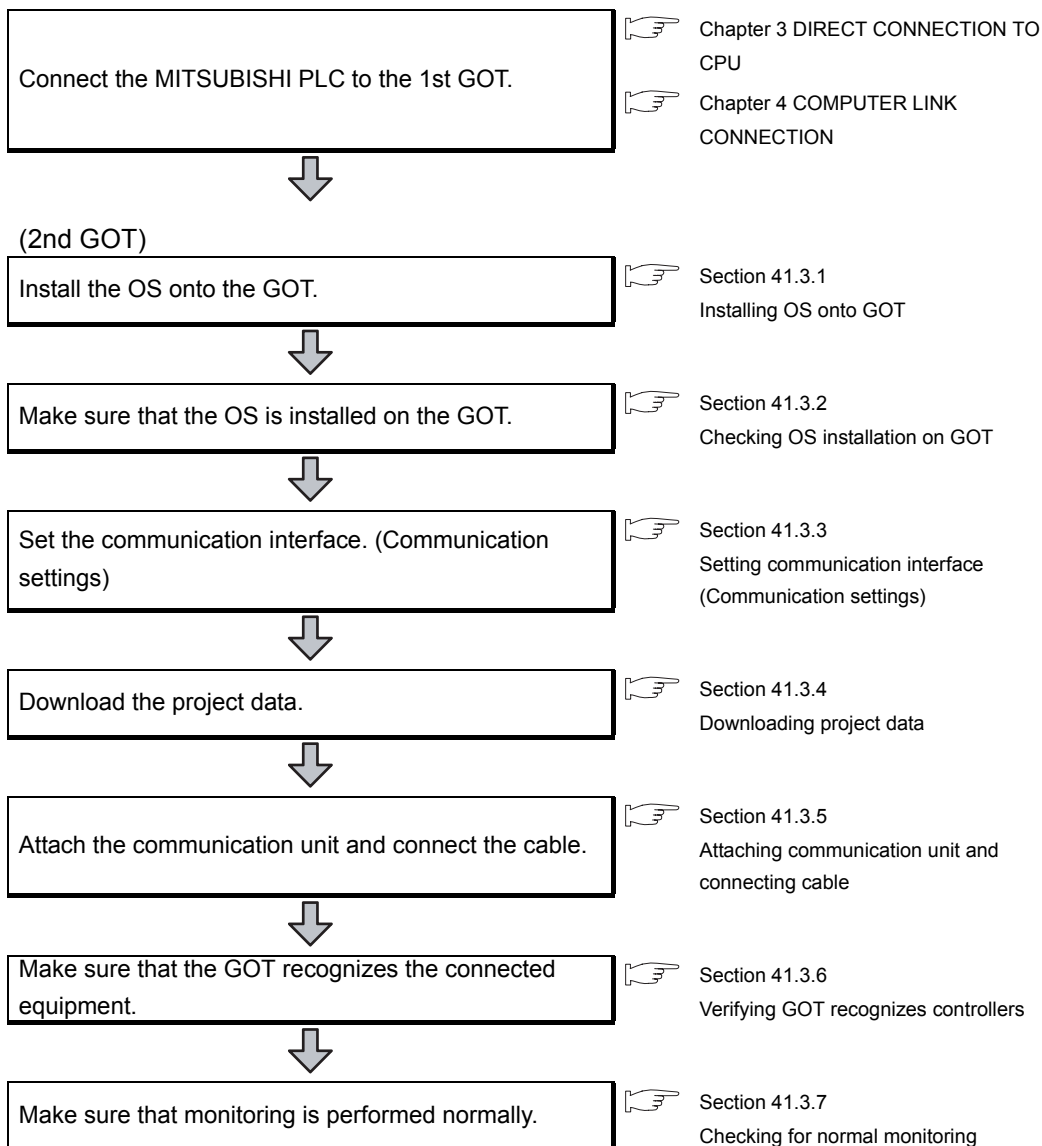
The following shows the procedures to be taken before monitoring and corresponding reference sections.



41.3.1 Installing OS onto GOT

Install the standard monitor OS, communication driver and option OS onto the GOT.
For the OS installation methods, refer to the following manual.

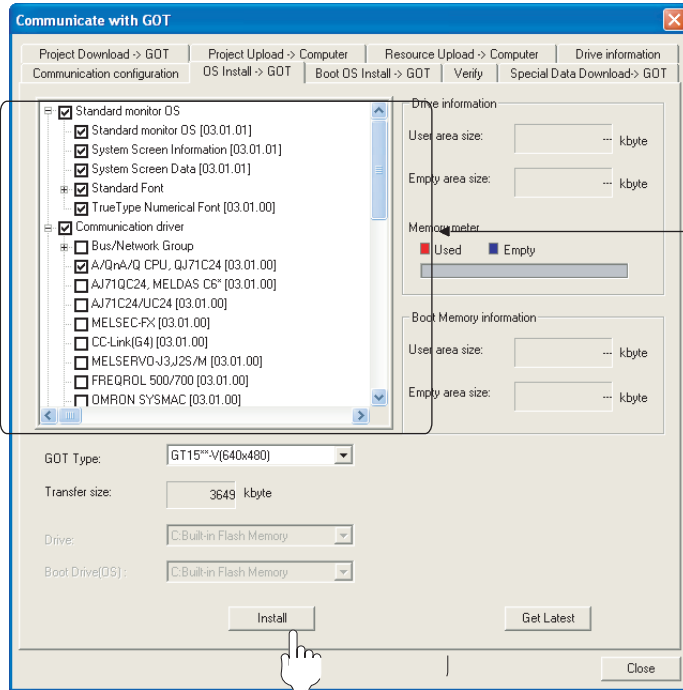GT Designer2 Version □ Basic Operation/Data Transfer Manual



Place a check mark in either box of the following items under the Communication driver, according to the connection type of the 1st GOT.

<For GT15, GT11>

- When connecting to A/QnA/QCPU or a motion controller CPU: A/QnA/Q CPU, QJ71C24
- When connecting to FXCPU: MELSEC-FX

<For GT10>

- When connecting to QnA/QCPU: QnA/Q CPU
- When connecting to ACPU: MELSEC-A
- When connecting to FXCPU: MELSEC-FX

- 1 Check-mark a desired standard monitor OS, communication driver, option OS, and extended function OS, and click the **Install** button.

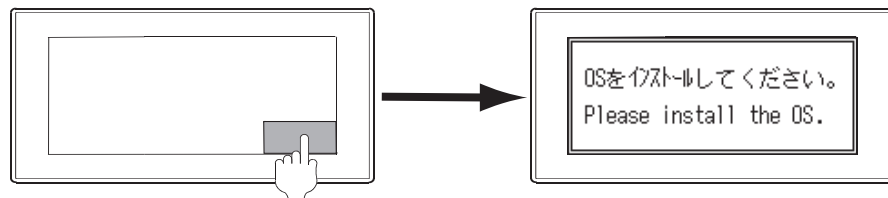
Point

Installing communication driver onto GT10

When installing communication driver onto the GOT, turn on the GOT in the OS transfer mode. For details, refer to the following manual.

GT10 User's Manual


(Operating of transmission mode)




Turn on the GOT while the bottom right corner is touched.

41.3.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

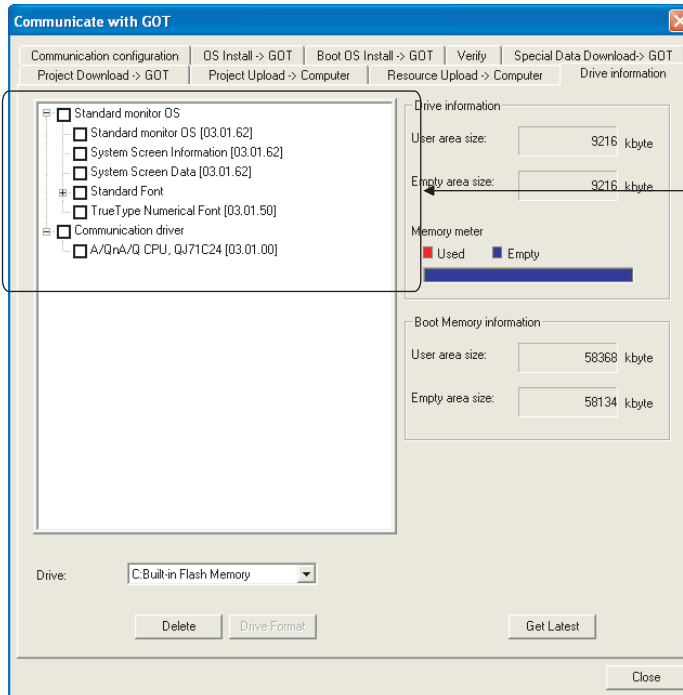 GT Designer2 Version □ Basic Operation/Data Transfer Manual



The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver (either of the following)

<For GT15, GT11>

- A/QnA/Q CPU, QJ71C24
- MELSEC-FX

<For GT10>

- QnA/Q CPU
- MELSEC-A
- MELSEC-FX

41.3.3 Setting communication interface (Communication settings)

Make the GOT communication interface settings on [Communication Settings] of GT Designer2.
 Select the same communication driver as the one installed on the GOT for each communication interface.
 For details on [Communication Settings] of GT Designer2, refer to the following manual.

GT Designer2 Version □ Screen Design Manual


1 Communication settings

The following is an example of communication settings on GT11.


Select "1: A/QnA/QCPU, QJ71C24 or MELSEC-FX" as a communication interface used for connecting the MITSUBISHI PLC or the GOT on the preceding stage.

Select "9: Host (PC)" as a communication interface used for connecting the GOT on the next stage.

Example: To connect the 1st GOT to the QCPU via RS-232 interface



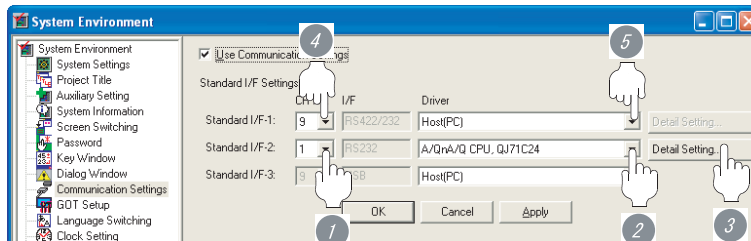(1) The 1st GOT




(a) Setting the communication interface connected to the QCPU (RS-232 interface)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "A/QnA/QCPU, QJ71C24".
- 3 Perform the detailed settings for the driver. (2 Communication detail settings)

(b) Setting the communication interface connected to the 2nd GOT (RS-422 interface)

- 4 Set "9" to the channel No. used.
- 5 Set the driver to "Host (PC)".

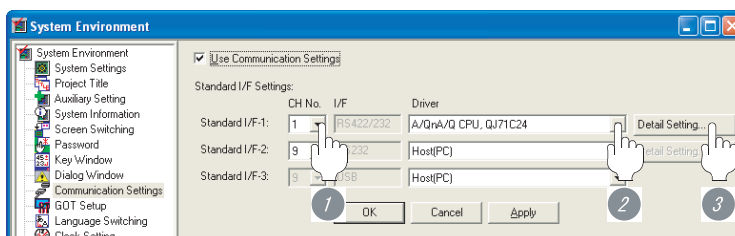(2) The 2nd GOT




(3) Setting the communication interface connected to the 1st GOT (RS-422 interface)

- 1 Set "1" to the channel No. used.
- 2 Set the driver to "A/QnA/QCPU, QJ71C24".
- 3 Perform the detailed settings for the driver. (2 Communication detail settings)

2 Communication detail settings

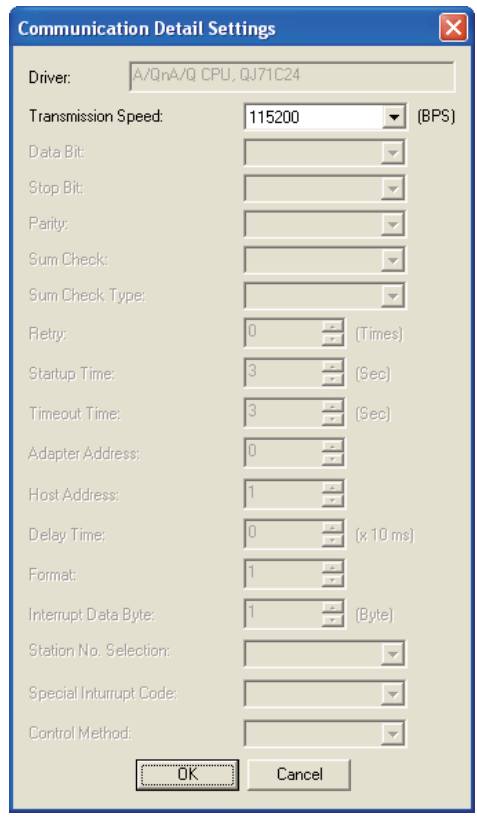(1) A/QnA/QCPU, QJ71C24



Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 115200bps> When the setting exceeds the limit of the connected equipment, communication is performed at the fastest transmission speed supported by the connected equipment	9600bps, 19200bps, 38400bps, 57600bps, 115200bps

(2) MELSEC-FX

The screenshot shows a 'Communication Detail Settings' dialog box with the following fields and values:

- Driver: MELSEC-FX
- Transmission Speed: 38400 (BPS)
- Data Bit: [Dropdown]
- Stop Bit: [Dropdown]
- Parity: [Dropdown]
- Sum Check: [Dropdown]
- Sum Check Type: [Dropdown]
- Retry: 0 (Times)
- Startup Time: 3 (Sec)
- Timeout Time: 3 (Sec)
- Adapter Address: 0
- Host Address: 1
- Delay Time: 0 (x 10 ms)
- Format: 1
- Interrupt Data Byte: 1 (Byte)
- Station No. Selection: [Dropdown]
- Special Interrupt Code: [Dropdown]
- Control Method: [Dropdown]

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 38400bps>	9600bps, 19200bps, 38400bps, 57600bps, 115200bps

(3) QnA/Q CPU

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 115200bps> When the setting exceeds the limit of the connected equipment, communication is performed at the fastest transmission speed supported by the connected equipment.	9600bps, 19200bps, 38400bps, 57600bps, 115200bps

(4) MELSEC-A

Item	Description	Range
Transmission Speed	Set this item when change the transmission speed used for communication with the connected equipment. <Default: 9600bps> When the setting exceeds the limit of the connected equipment, communication is performed at the fastest transmission speed supported by the connected equipment.	9600bps,



(1) For GT11

(a) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.

For details on the Utility, refer to the following manual.

GT11 User's Manual

(b) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

(2) For GT10

(a) Communication interface setting by the Utility

Although the communication interface setting can be checked, it cannot be changed.

For details on the Utility, refer to the following manual.

GT10 User's Manual

(b) Communication settings

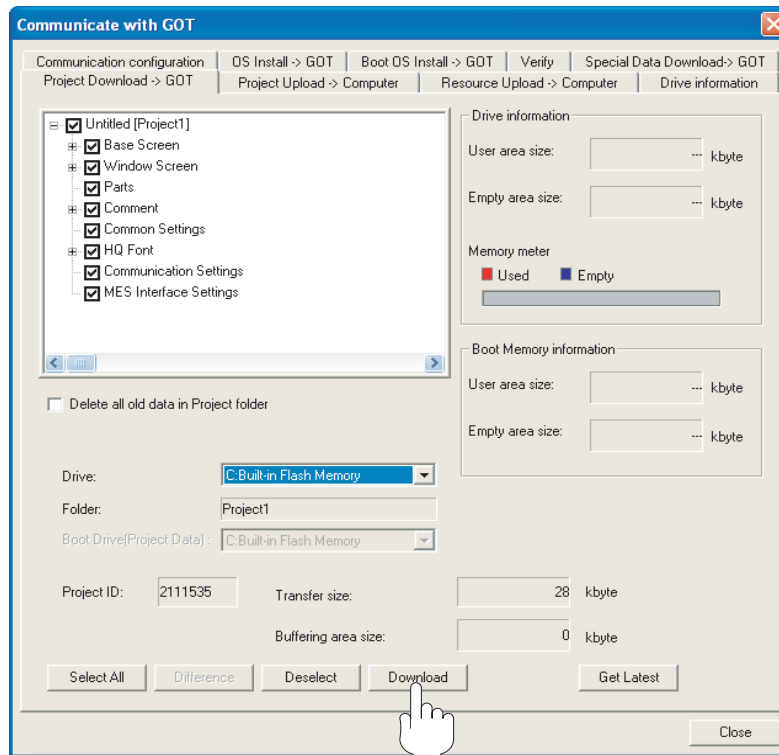
Communication settings can be changed on only GT Designer2.

41.3.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.

41.3.5 Attaching communication unit and connecting cable



Cautions when attaching the communication unit and connecting the cable

Shut off all phases of the GOT power supply before attaching the communication unit and connecting the cable.

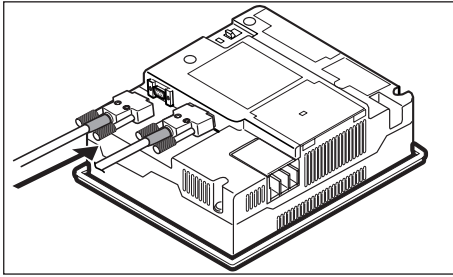
1 How to connect the cable

Using the RS-232 and RS-422 interfaces alternately, connect the GOTs (connection in series).
(The USB interface is not usable for the multiple-GT11 connection.)

Up to two GOTs can be connected.


(1) How to connect the RS-232 cable

(a) For the GT11




- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

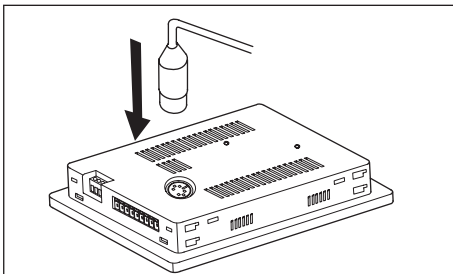(b) For the GT10



- 1 Connect the RS-232 cable to the RS-232 interface on the GOT.

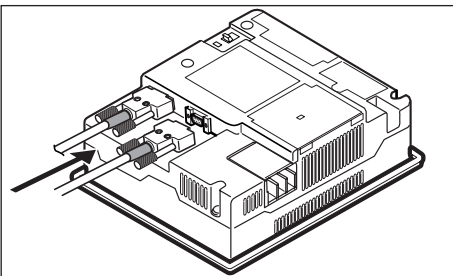(2) How to connect the RS-422 cable



- 1 Connect the RS-422 cable to the RS-422 conversion unit.

41.3.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status

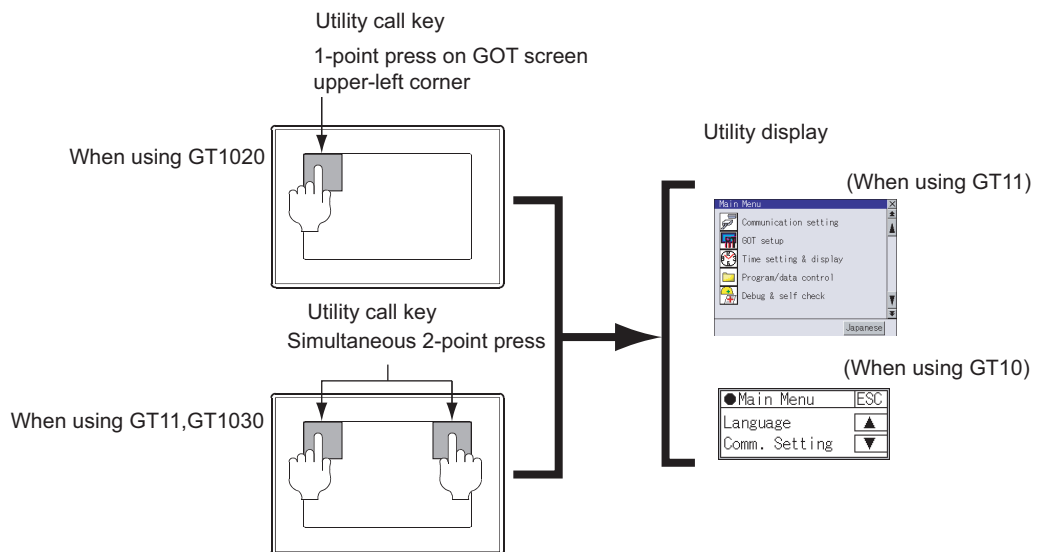
Remark

How to display Utility (at default)

To display the Utility (at default), touch the upper right and upper left positions on the screen at the same time (pressing 2 points).

For how to start and operate the Utility, refer to the following manual.

☞ GT □ User's Manual




Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds.

For the setting of the utility call key, refer to the following.

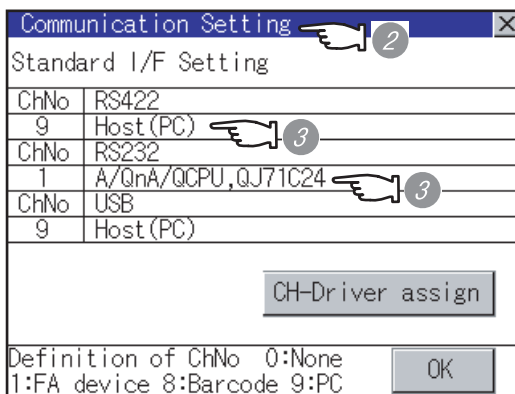☞ GT □ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication setting] from the Utility.

2 The [Communication setting] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver of the communication interface connected to MITSUBISHI PLC or the GOT on the preceding stage (either of the following)

<For GT15, GT11>

A/QnA/QCPU, QJ71C24
MELSEC-FX


<For GT10>

QnA/QCPU
MELSEC-A
MELSEC-FX

- Communication driver of the communication interface connected to the GOT on the next stage
Host (PC)


- (1) For GT11
 - (a) Communication interface setting by the Utility

The communication interface setting can be changed on the Utility's "Communication setting" after downloading "Communication setting" of project data.
For details on the Utility, refer to the following manual.

 GT11 User's Manual
 - (b) Precedence in communication settings

When settings are made by GT Designer 2 or the Utility, the latest setting is effective.
- (2) For GT10
 - (a) Communication interface setting by the Utility

Although the communication interface setting can be checked, it cannot be changed.
For details on the Utility, refer to the following manual.

 GT10 User's Manual
 - (b) Communication settings

Communication settings can be changed on only GT Designer2.

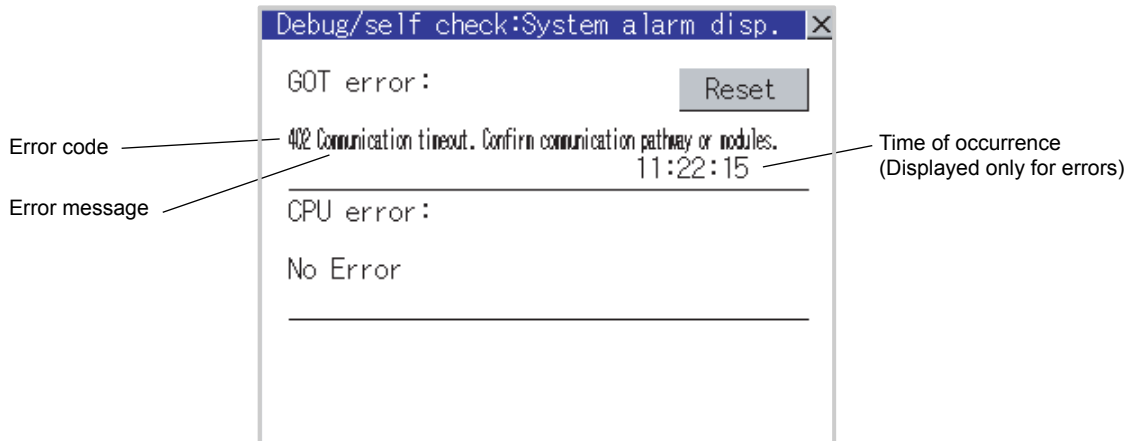
41.3.7 Checking for normal monitoring

1 Check for errors occurring on the GOT(for GT11)

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT11 User's Manual




2 Perform an I/O check(for GT11)

Whether the PLC can communicate with the GOT or not can be checked by the I/O check function. If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the I/O check screen by [Main Menu] → [Debug & self check] → [Self check] → [I/O check].
For details on the I/O check, refer to the following manual:

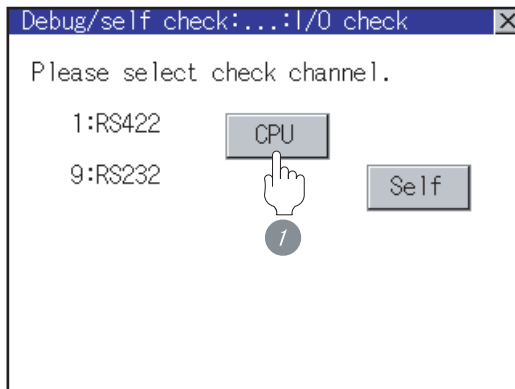 GT□ User's Manual



- 1 Touch [CPU] on the I/O check screen. Touching [CPU] executes the communication check with the connected PLC.

- 2 When the communication screen ends successfully, the screen on the left is displayed.

3 Communication monitoring function(for GT10)

The communication monitoring is a function that checks whether the PLC can communicate with the GOT.

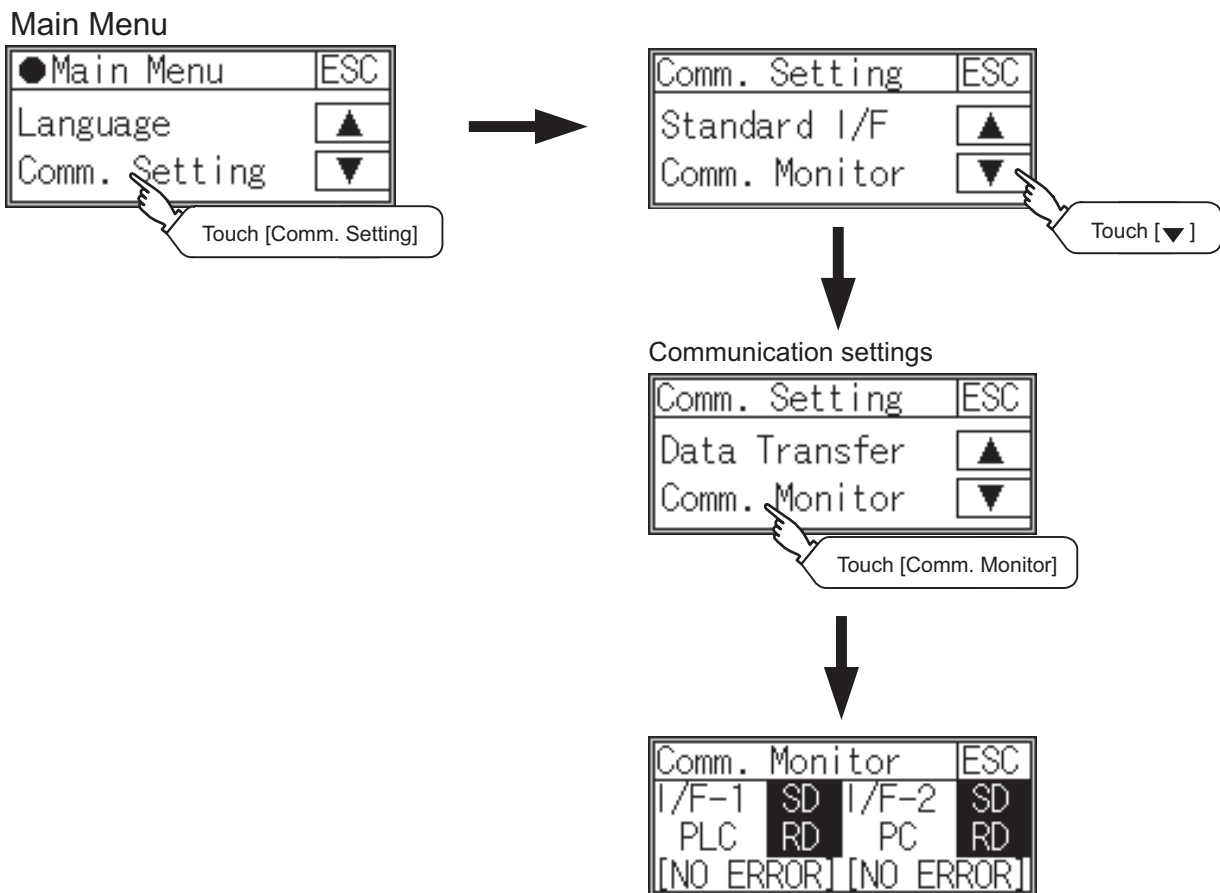
If this check ends successfully, it means correct communication interface settings and proper cable connection.

Display the communication monitoring function screen by [Main Menu] → [Comm. Setting] → [Comm. Monitor] .

For details on the communication monitoring function, refer to the following manual:

 GT10 User's Manual

(Operation of communication monitoring function screen)



All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.

41.4 Precautions

1 Communication settings

The communication driver names differs depending on the GT Designer2 versions.

GT Designer2 versions	
2.32J or before	2.43V or later
A/QnA/Q CPU, QJ71C24, MELDAS C6*	A/QnA/Q CPU, QJ71C24
AJ71QC24	AJ71QC24, MELDAS C6*

2 GOT's communication timing

(1) GOT's communication timing

Adjust the communication timing so that, after applying the power to the system, the communication with the connected device (MITSUBISHI PLC) is performed in order starting from the first GOT (from the 1st GOT to the 2nd, and so on).

When the communication is failed, retries are performed. And if the predetermined time has elapsed, a communication error occurs.

(2) Adjusting communication timing

(a) When powering up the system simultaneously

Using the utility or selecting [GOT Setup] - [Opening Screen Time] from GT Designer2, set the opening screen time adding a delay to each setting for the GOTs. During the opening process, communication with the connected device does not start.

Example: Set value of "Opening Screen Time" (Inside ()): set value)

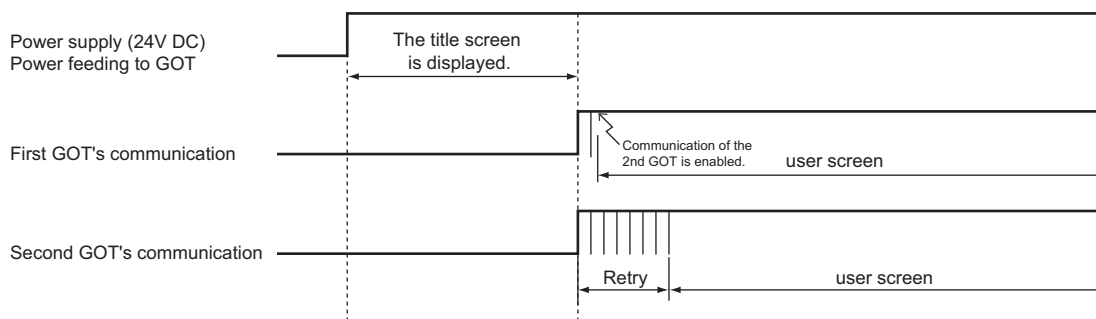
First module (5s) → Second module (10s)

(b) When powering on devices individually

Turn on the connected device first, and then the first GOT, the second GOT, and so on.


*1 If the first GOT is turned on after a while the second GOT is turned on, because the communication start of the second GOT is delayed, a communication error may be detected at the second GOT.

*2 If the system power is turned on simultaneously and it takes time to start the communication of the second GOT, a communication error may be developed.



3 Using the FA transparent function

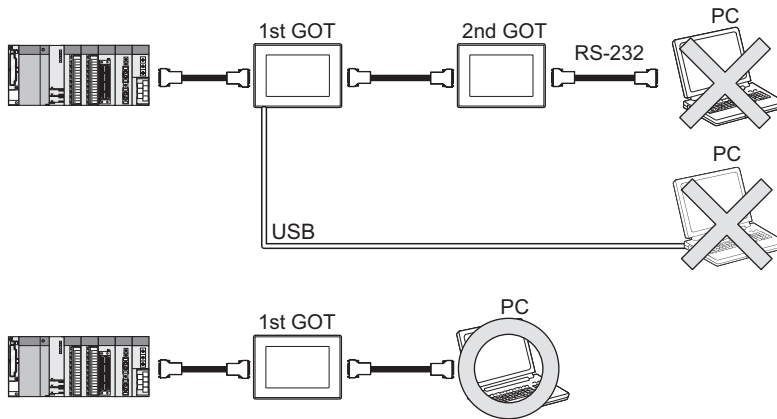When multiple GOTs are connected, using the FA transparent function through connection via the RS-232 interface or USB interface of the GOT is not allowed.




4 Monitoring stop condition for the GOT in the multiple-GT11 connection

In the system where multiple GOTs are connected, performing either of the following monitoring stop operations on the preceding stage (the first GOT) also stops monitoring of the GOT on the next stage (the second GOT).

When the GOT on the preceding stage resumes monitoring, the GOT on the next stage also resumes it.


- (1) When project data is downloaded/uploaded by GT Designer2, or when the OS is installed^{*1}
- (2) When the GOT is set up^{*1}

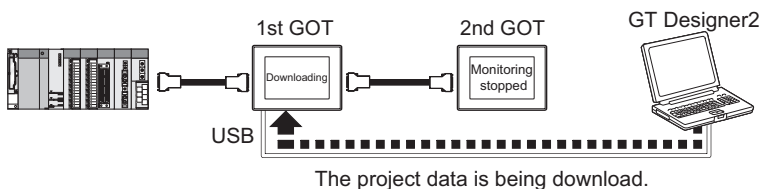^{*1} A timeout error occurs in GX Developer.






5 When PLC power disconnection occurs in the multiple-GOT connection

In the system where multiple GOTs are connected, when the communication between the PLC and the first GOT is stopped due to PLC power disconnection and a disconnection of the communication cable between the PLC and the first GOT, the GOT waits for timeout against the communication request from the peripheral devices (GX Developer, etc.), and recovery of monitoring between the PLC and the GOT is delayed.



41.5 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
 Multiple-GT11 connection function	Supporting the multiple-GT11 connection function	2.09K	Standard monitor OS [01.02.**] BootOS[01.02.**.C]
 Multiple-GT11, GT10 connection function	Supporting the multiple-GT10 connection function	2.43V	Standard monitor OS [01.02.**]
 Multiple-GT11, GT10 connection function	Supporting the multiple-GT1030 connection function	2.58L	Standard monitor OS [01.03.**]

GATEWAY FUNCTION



42.1 System Configuration page 42 - 2

This section describes devices and cables needed for the gateway function.

Refer to this section to select the desired system.

42.2 Preparatory Procedures for Monitoring page 42 - 6

This section describes the preparatory procedures for connecting to the Ethernet and monitoring the connected device.

The sequential checkup procedure will be helpful for those who communicate through the GOT for the first time.

42.3 List of Functions Added by Version Upgrade page 42 - 21

This section describes the functions added by version upgrade of GT Designer2 or OS.



Descriptions given in this chapter

This section describes only the connection for using the gateway function. For details of the gateway function, refer to the following manual.

 GOT1000 Series Gateway Functions Manual.

42.1 System Configuration

Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. 1) of 1 System configuration and connection conditions correspond to the numbers (e.g. 1) of 2 System equipment.

Use these numbers as references when confirming models and applications.



1 System configuration and connection conditions

Connection conditions		System configuration
Number of GOTs*1	Distance	
64 (max.)	Within 100m (max.)	<ul style="list-style-type: none"> ▪ Direct CPU connection ▪ Computer link connection ▪ Ethernet connection ▪ Third party PLC connection ▪ Microcomputer connection ▪ Temperature controller connection ▪ MELSECNET/H connection (PLC to PLC network) ▪ MELSECNET/10 connection (PLC to PLC network)*3 ▪ CC-Link connection (Intelligent device station)*4

- *1 Includes the GOT (server function), the GOT (client function) and the PC used for communication with the GOT.
- *2 The destination connected with the twisted pair cable varies with the configuration of the applicable Ethernet network system.
Connect to the Ethernet module, hub, transceiver or other system equipment corresponding to the applicable Ethernet network system.
- *3 When establishing a MELSECNET/10 connection, use the MELSECNET/H communication unit.
- *4 When establishing a CC-Link connection, use the CC-Link communication unit (GT15-J61BT13).




PLC connection type and communication interface

The PLC connection types and the communication interfaces for systems using the gateway function are shown below.





PLC ↔ GOT		GOT ↔ PC
Connection type	Communication interface of GOT	Communication interface of GOT
Direct CPU connection Computer link connection Third party PLC connection Microcomputer connection Temperature controller connection	RS-232 interface	Ethernet communication units
	RS-422 conversion unit	
	RS-232 communication unit	
	RS-422/485 communication unit	
BUS connection	BUS connection unit	
Ethernet connection	Ethernet communication unit ^{*1}	
MELSECNET/H connection (PLC to PLC network) MELSECNET/10 connection (PLC to PLC network)	MELSECNET/H communication unit	
CC-Link connection (Intelligent device station)	CC-Link communication unit (GT15-J61BT13)	

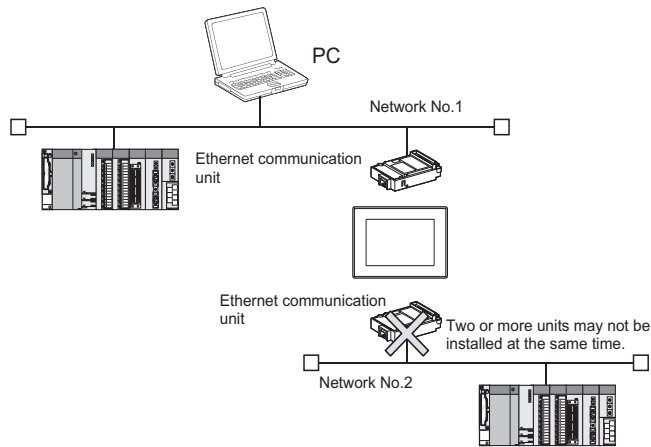*1 Connect the PLC to the same Ethernet communication unit as that used for connection between the GOT and PC.
Ethernet connection is available between the GOT or PC that uses the gateway function and the PLC within the same network. (Two or more Ethernet communication units may not be installed at the same time.)




2 System equipment

(1) GOT

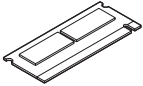Image	No.	Name	Model name
 Ethernet	1	Ethernet communication unit • For Ethernet communication	GT15-J71E71-100 
		Option function board • For optional function	GT15-FNB, GT15-QFNB, GT15-QFNB16M, GT15-QFNB32M, GT15-QFNB48M 


(2) PC

Image	No.	Name	Model name
	2	PC	Software to be used: MX Component, Version 3 or later*1

*1 For the accessing range for use of the gateway function, refer to the following manual.

 GOT1000 Series Gateway Functions Manual.



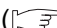
(3) Cable

Image	No.	Name	Model name
	3	Twisted pair cable	Shielded twisted pair cable (STP) or unshielded twisted pair cable in category (UTP): 3, 4 and 5

Point

(1) System configuration between the GOT and PLC

For the system configuration between the GOT and PLC, refer to each chapter.

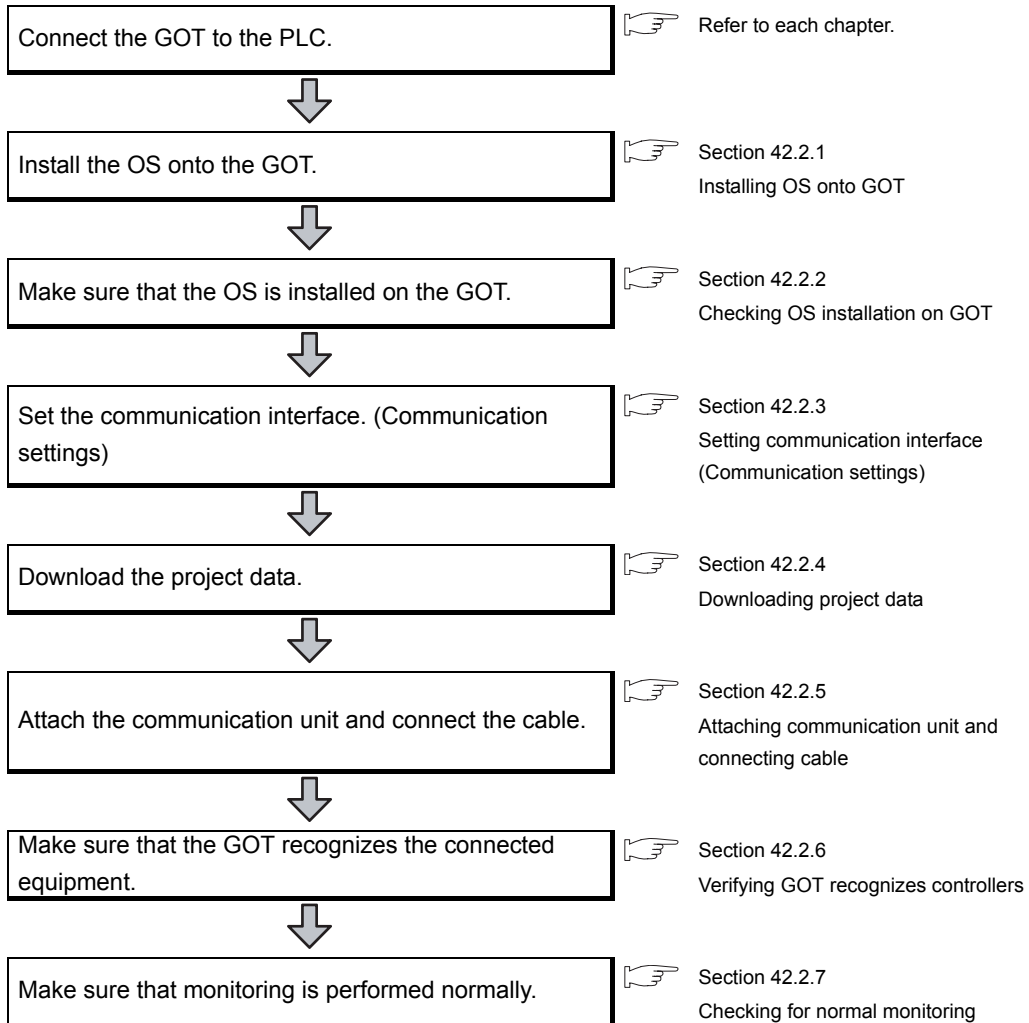
- MITSUBISHI PLC CONNECTIONS ( Chapter 2 to Chapter 8)
- THIRD PARTY PLC CONNECTIONS ( Chapter 9 to Chapter 17)
- MICROCOMPUTER CONNECTION ( Chapter 23)

(2) System configuration for use of the mail send function

The SMTP mail server must be established in the intranet to use the mail send function.

42.2 Preparatory Procedures for Monitoring


The following shows the procedures to be taken before monitoring and corresponding reference sections.




42.2.1 Installing OS onto GOT

Install the option OS onto the GOT.

For the OS installation methods, refer to the following manual.

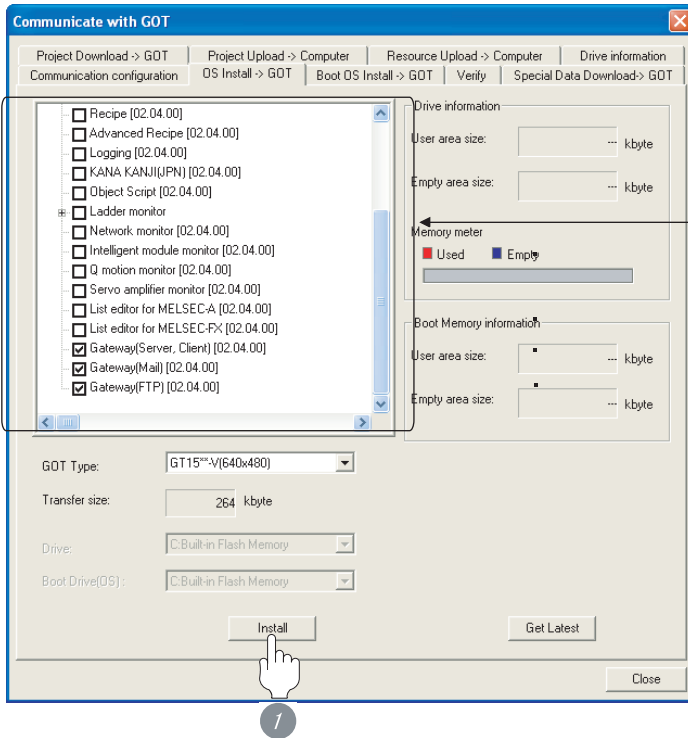 GT Designer2 Version □ Basic Operation/Data Transfer Manual



Check the following under the Communication driver.

Depends on the connection type

Place a check mark in the box of the function used in Option OS.

Gateway (Server, Client)


Gateway (Mail)

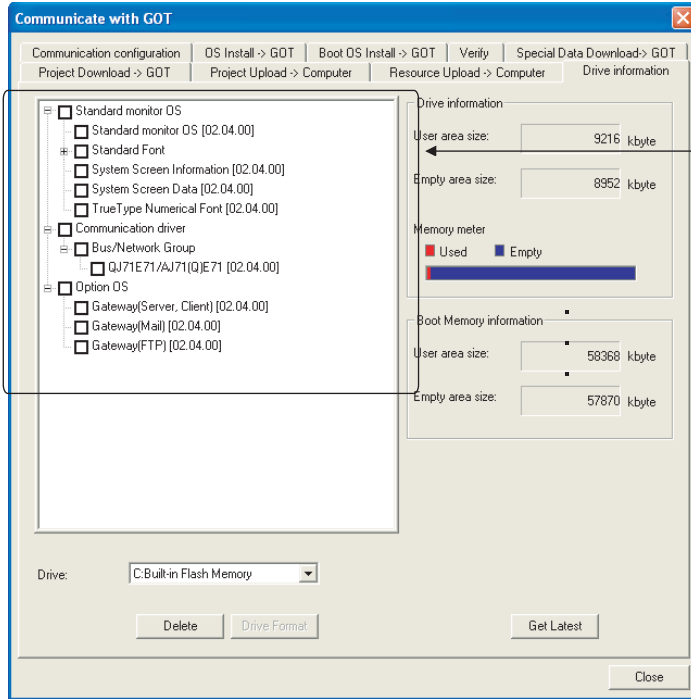
Gateway (FTP)

1 Check-mark a desired option OS (gateway function), and click the **Install** button.

42.2.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version □ Basic Operation/Data Transfer Manual



The OS has been installed successfully on the GOT if the following can be confirmed:

- 1) Standard monitor OS
- 2) Communication driver : Depends on the connection type
- 3) Option OS (Functions to be used)


Gateway (Server, Client)

Gateway (Mail)

Gateway (FTP)

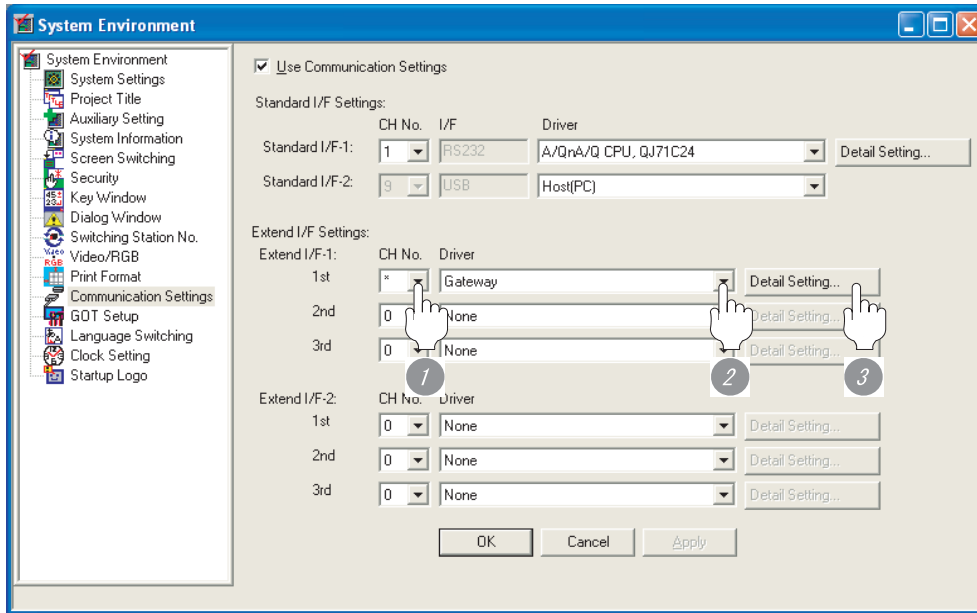
42.2.3 Setting communication interface (Communication settings)


Make the GOT communication interface settings on [Communication Settings] of GT Designer2. Select the same communication driver as the one installed on the GOT for each communication interface. For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual


1 Communication settings

- (1) When the connection type is other than "Ethernet connection"



- 1 Set "1" to the channel No. used.
- 2 Set the driver to "Gateway".
- 3 Perform the detailed settings for the driver. ( 2 Communication detail settings)

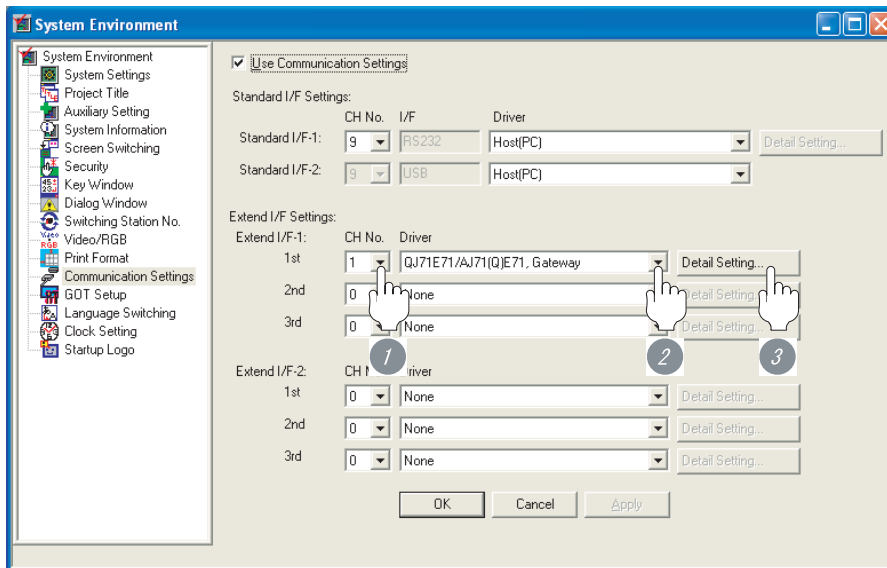
(2) When the connection type is "Ethernet connection"



- 1 Set [1] to the channel No. used.
- 2 Set the driver.
 - When MITSUBISHI PLC is used : [QJ71E71/AJ71(Q)E71/Gateway]
 - When YASKAWA PLC is used : [Ethernet(YASKAWA)/Gateway]
 - When YOKOGAWA PLC is used : [Ethernet(YOKOGAWA)/Gateway]
 - When Allen-Bradley PLC is used : [EtherNet(AB)/Gateway]
- 3 Perform the detailed settings for the driver. (☞ 2 Communication detail settings)

2 Communication detail settings

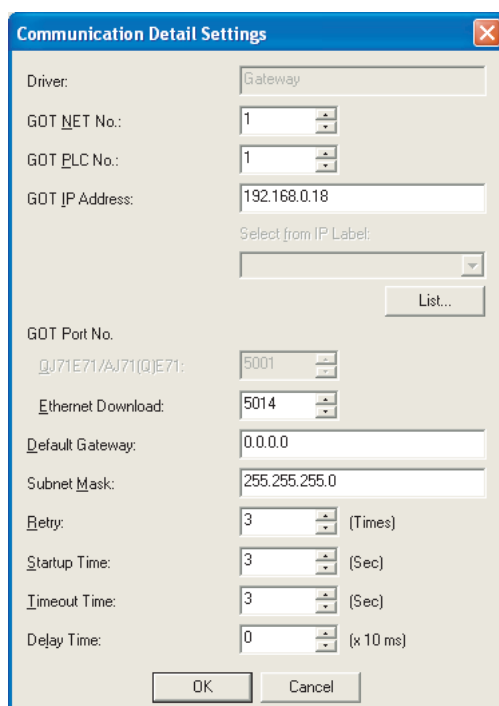(1) Gateway



Item	Description	Range
GOT NET No.	Set the network No. of the GOT. <Default: 1>	1 to 239
GOT PC No.	Set the station No. of the GOT. <Default: 1>	1 to 64
GOT IP Address	Set the IP address of the GOT. <Default: 192.168.0.18>	0.0.0.0 to 255.255.255.255
GOT Port No.*1 (Communication)*2	Set the GOT port No. for the connection with the connected equipment. <ul style="list-style-type: none"> • MITSUBISHI PLC <Default: 5001> • YASKAWA PLC <Default: 5016> • YOKOGAWA PLC <Default: 5017> 	1024 to 5010, 5014 to 65534 (Except for 5011, 5012 and 5013)
GOT Port No. (Ethernet Download)	Set the GOT port No. for Ethernet download. <Default: 5014>	1024 to 5010, 5014 to 65534 (Except for 5011, 5012 and 5013)
Default Gateway	Set the router address of the default gateway where the GOT is connected. (Only for communication via router) <Default: 0.0.0.0>	0.0.0.0 to 255.255.255.255
Subnet Mask	Set the subnet mask for the sub network. (Only for connection via router) If the sub network is not used, the default value is set. <Default: 255.255.255.0>	0.0.0.0 to 255.255.255.255
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. <Default: 3 Sec>	3 to 255 Sec
Timeout Time*3*4	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 90 Sec
Delay Time*5	Set the delay time for reducing the load of the network/destination PLC. <Default: 0ms>	0 to 10000 (× 10 ms)

*1 When using the Gateway function only, the setting of [GOT port No.] is invalid.

*2 No setting is required for "Gateway" of the communication details setting.

*3 When using the mail send function:


Specify the "Timeout Time" after connection to the SMTP server. (However, the communication timeout time of about one minute is fixed for the case where connection with the SMTP server is failed after starting mail transmission.)

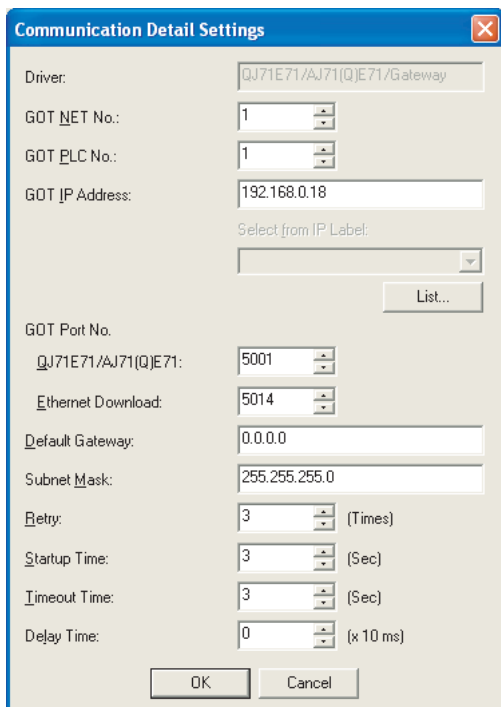
*4 To connect the GOT with the Ethernet module (Q Series) in the one-on-one relationship using a cross cable, set [Timeout Time] to 6 sec. or longer.

*5 When using the mail send function:

Specify the time of transmission interval between one mail and the next mail when sending multiple mails.

- (2) QJ71E71/AJ71(Q)E71/Gateway
For the setting items, refer to the following.

 2 (1) Gateway



Communication Detail Settings

Driver: QJ71E71/AJ71(Q)E71/Gateway

GOT NET No.: 1

GOT PLC No.: 1

GOT IP Address: 192.168.0.18

Select from IP Label:

List...

GOT Port No.

QJ71E71/AJ71(Q)E71: 5001

Ethernet Download: 5014

Default Gateway: 0.0.0.0

Subnet Mask: 255.255.255.0

Retry: 3 (Times)


Startup Time: 3 (Sec)

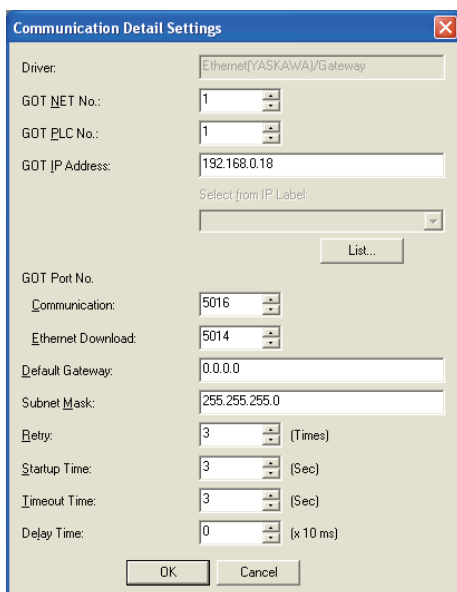
Timeout Time: 3 (Sec)

Delay Time: 0 (x 10 ms)

OK Cancel

- (3) Ethernet (YASKAWA) /Gateway
For the setting items, refer to the following.

 2 (1) Gateway



Communication Detail Settings

Driver: Ethernet(YASKAWA)/Gateway

GOT NET No.: 1

GOT PLC No.: 1

GOT IP Address: 192.168.0.18

Select from IP Label:

List...

GOT Port No.

Communication: 5016

Ethernet Download: 5014

Default Gateway: 0.0.0.0

Subnet Mask: 255.255.255.0

Retry: 3 (Times)


Startup Time: 3 (Sec)

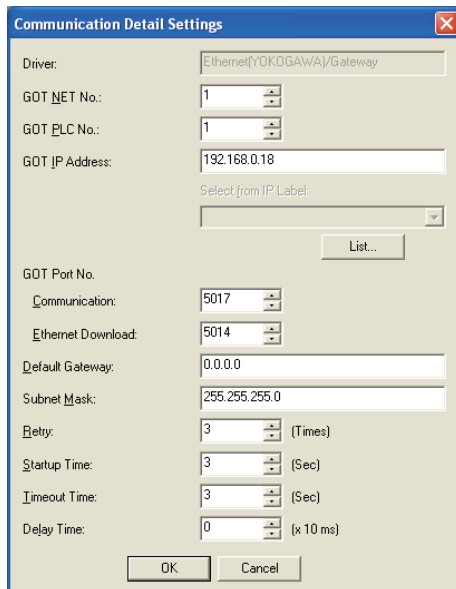
Timeout Time: 3 (Sec)

Delay Time: 0 (x 10 ms)


OK Cancel


- (4) Ethernet (YOKOGAWA) /Gateway
For the setting items, refer to the following.

 2 (1) Gateway



- (5) EtherNet/IP(AB)/Gateway
For the setting items, refer to the following.

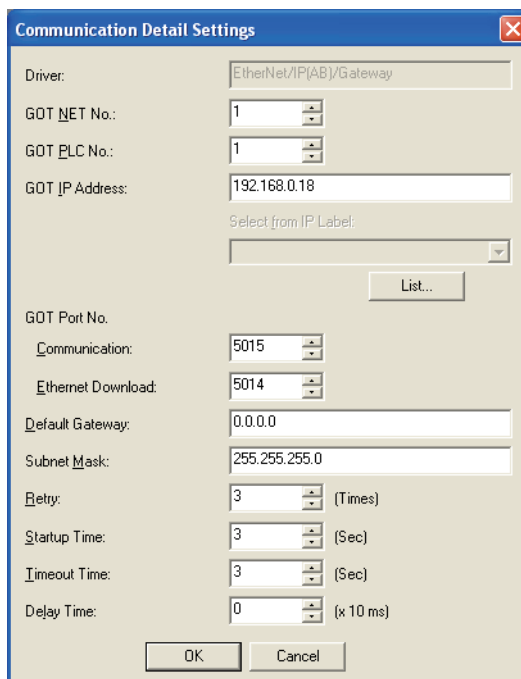 2 (1) Gateway





(1) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's [Communication Settings] after downloading [Communication Settings] of project data.

For details on the Utility, refer to the following manual.

 GT □ User's Manual


(2) Precedence in communication settings

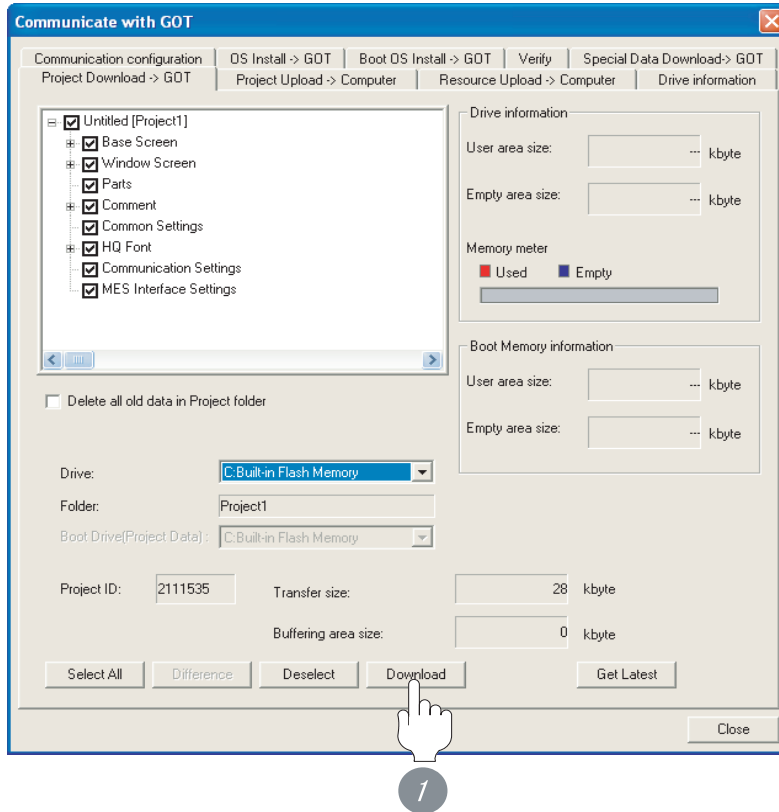
When settings are made by GT Designer 2 or the Utility, the latest setting is effective.

42.2.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



- 1 Check the necessary items and click the **Download** button.


42.2.5 Attaching communication unit and connecting cable



Precautions for cable connection or installation of the option function board or communication unit

Before installing the option function board or communication unit or connecting cables, shut off all phases of the power supply to the GOT.

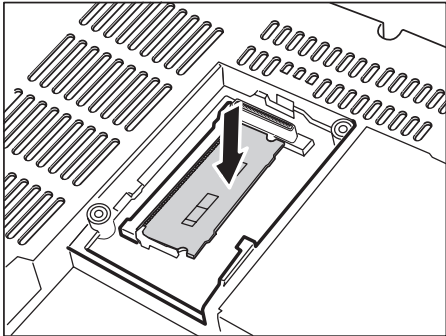1 Attaching the option function board



- 1 Attach the option function board to the option function board interface on the GOT.




Option function board

For details on the option function board, refer to the following manual:

➔ GT15 OPTION FUNCTION BOARD/OPTION FUNCTION BOARD WITH ADD-ON MEMORY User's Manual

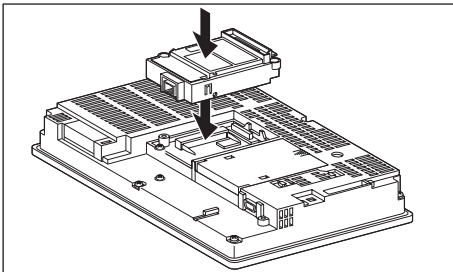2 Attaching the communication unit



- 1 Attach the Ethernet communication unit to the extension unit connector on the GOT.

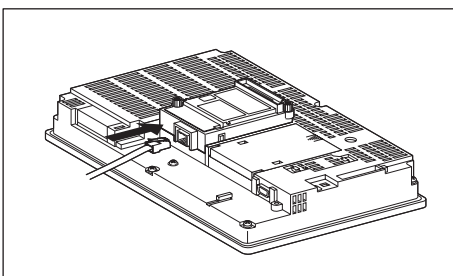


Ethernet communication unit

For details on the Ethernet communication unit, refer to the following manual:

➔ GT15 Ethernet Communication Unit User's Manual

3 Connecting the cable



- 1 Connect the twisted pair cable to the Ethernet communication unit.

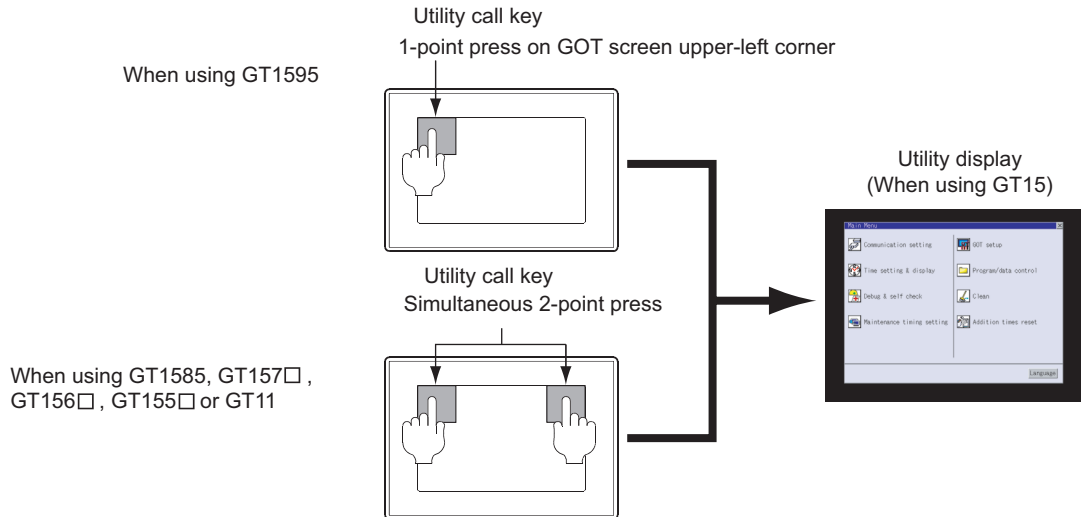
42.2.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)




Point


When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

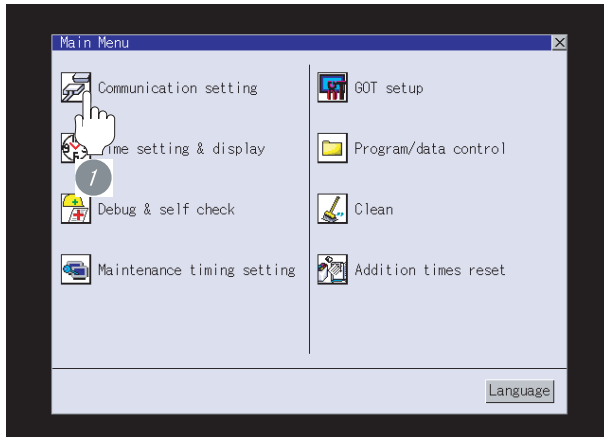☞ GT□ User's Manual



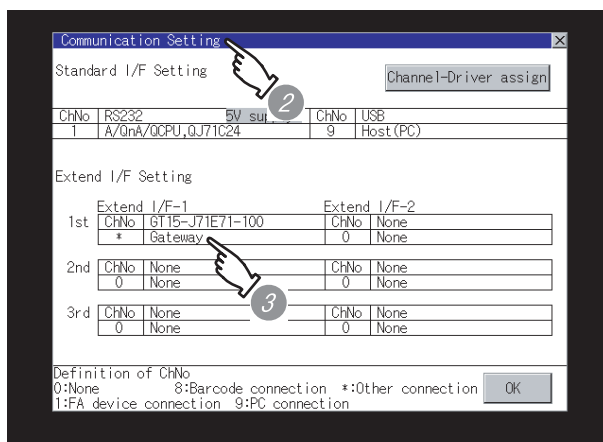- 1 After powering up the GOT, touch [Main Menu] → [Communication Settings] from the Utility.



- 2 The [Communication Settings] appears.
- 3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.
 - Communication driver (either of the following)
 - Gateway
 - E71/gateway
 - Ethernet(YASKAWA)
 - Ethernet(YOKOGAWA)
 - Ethernet/IP(AB)
- 4 When the communication driver name is not displayed normally, carry out the following procedure again.
 - Section 42.2 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
 For details on the Utility, refer to the following manual.

GT User's Manual

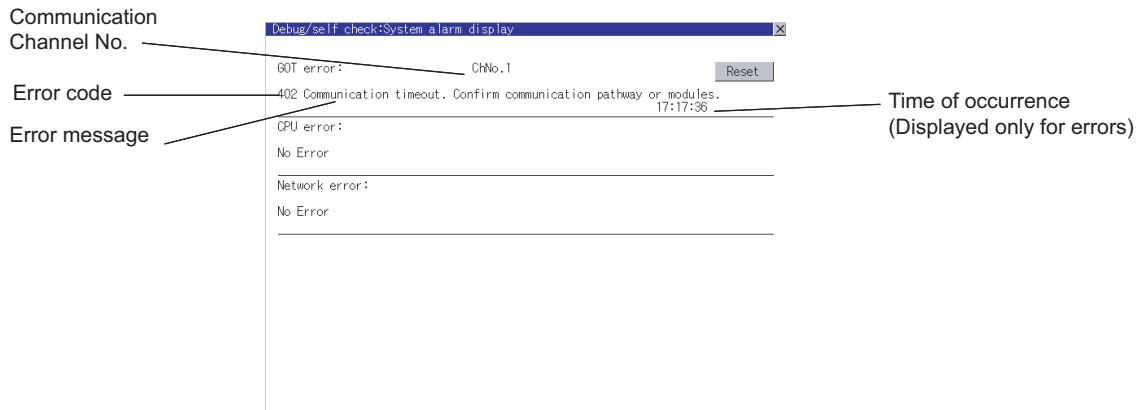
42.2.7 Checking for normal monitoring

1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.

 GT□ User's Manual (When using GT15)



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

 GT Designer2 Version □ Screen Design Manual

2 Confirming the communication state of GOT

(1) When using the Command Prompt of Windows®

Execute a Ping command at the Command Prompt of Windows®

(a) When normal communication

```
C:\>Ping 192.168.0.18
```

```
Reply from 192.168.0.18: bytes=32 time<1ms TTL=64
```

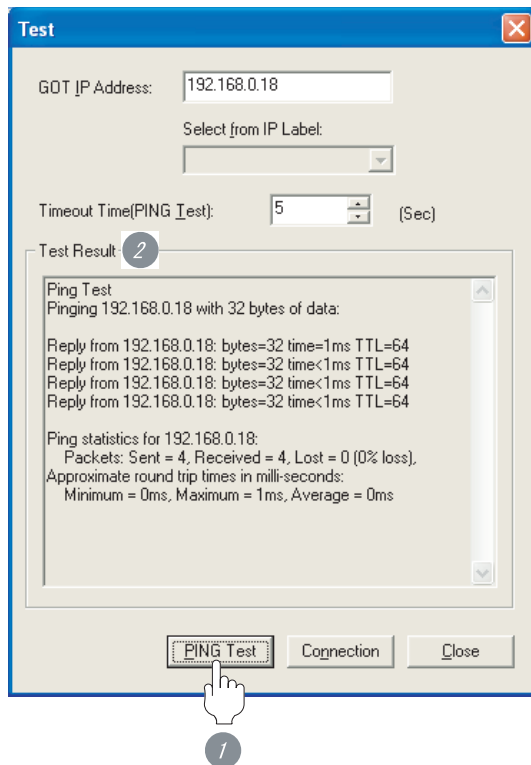
(b) When abnormal communication

```
C:\>Ping 192.168.0.18
```

```
Request timed out.
```

(2) When using the [PING Test] of GT Designer2

Select [Communication] → [Communication configuration] → [Ethernet] and **Test** to display [PING Test].



1 Specify the [GOT IP address] of the [PING Test] and click on the **PING Test** button.

2 The [Test Result] is displayed after the [PING Test] is finished.

(3) When abnormal communication

At abnormal communication, check the followings and execute the Ping command again.

- Mounting condition of Ethernet communication unit
- Cable connecting condition
- Confirmation of [Communication Settings]
- IP address of GOT specified by Ping command



Ethernet diagnostics of GX Developer (available only with Mitsubishi PLCs)

Ethernet diagnostics of GX Developer is available to a Ping test from the PLC.

For details of Ethernet diagnostics of GX Developer, refer to the following manual.



User's Manual of the Ethernet module

All settings related to communications are complete now.

Create screens on GT Designer2 and download the project data again.



If all the communication settings are completed

Set up the gateway function to be used.



GOT1000 Series Gateway Functions Manual

42.3 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
Gateway function	Supporting the gateway function	2.09K	Standard monitor OS [01.02.**] Option OS • Gateway (Sever, Client) [01.02.**] • Gateway (Mail) [01.02.**]
Gateway function	Function to transfer the files stored in the GOT, including recipe and alarm data, with the personal computer.	2.18U	Option OS • Gateway FTP [02.02.**]
Gateway function	Enables transferring binary data with the FTP server function.	2.43V	Option OS • Gateway FTP [03.01.**]

MES INTERFACE FUNCTION



43.1 System Configuration page 43 - 2

This section describes devices and cables needed for the MES interface function.

Refer to this section to select the desired system.

43.2 Preparatory Procedures for Monitoring page 43 - 5

This section describes the preparatory procedures for connecting to the Ethernet and monitoring the connected device.

The sequential checkup procedure will be helpful for those who communicate through the GOT for the first time.

43.3 List of Functions Added by Version Upgrade page 43 - 18

This section describes the functions added by version upgrade of GT Designer2 or OS.



Descriptions given in this chapter

This section describes only the connection for using the MES function.
For details of the MES function, refer to the following manual.

 GOT1000 Series MES Interface Function Manual

43.1 System Configuration



Select a system configuration suitable for your application.



Conventions used in this section

Numbers (e.g. ①) of 1 System configuration and connection conditions correspond to the numbers (e.g. ①) of 2 System equipment.

Use these numbers as references when confirming models and applications.



1 System configuration and connection conditions

Connection conditions		System configuration
Number of servers*1	Distance	
8*2 (max.)	Within 100m (max.)	<ul style="list-style-type: none"> • Bus connection • Direct CPU connection • Computer link connection • Ethernet connection • Third party PLC connection • Microcomputer connection • Temperature controller connection • MELSECNET/H connection (PLC to PLC network) • MELSECNET/10 connection (PLC to PLC network) *4 • CC-Link connection (Intelligent device station) *5 • Inverter connection • Servo amplifier connection

*1 Number of server that one GOT can communicate.

*2 Total number of data base server and application server.

*3 The destination connected with the twisted pair cable varies with the configuration of the applicable Ethernet network system.

Connect to the Ethernet module, hub, transceiver or other system equipment corresponding to the applicable Ethernet network system.

*4 When establishing a MELSECNET/10 connection, use the MELSECNET/H communication unit.


*5 When establishing a CC-Link connection, use the CC-Link communication unit (GT15-J61BT13).

PLC connection type and communication interface

The PLC connection types and the communication interfaces for systems using the MES interface function are shown below.





PLC ↔ GOT		GOT ↔ PC
Connection type	Communication interface of GOT	Communication interface of GOT
Direct CPU connection	RS-232 interface	Ethernet communication units
Computer link connection	RS-422 conversion unit	
Third party PLC connection	RS-232 communication unit	
Microcomputer connection	RS-422/485 communication unit	
Temperature controller Connection		
Inverter connection		
Servo amplifier connection		
BUS connection	BUS connection unit	
Ethernet connection	Ethernet communication unit*1	
MELSECNET/H connection (PLC to PLC network)	MELSECNET/H communication unit	
MELSECNET/10 connection (PLC to PLC network)		
CC-Link connection (Intelligent device station)	CC-Link communication unit (GT15-J61BT13)	

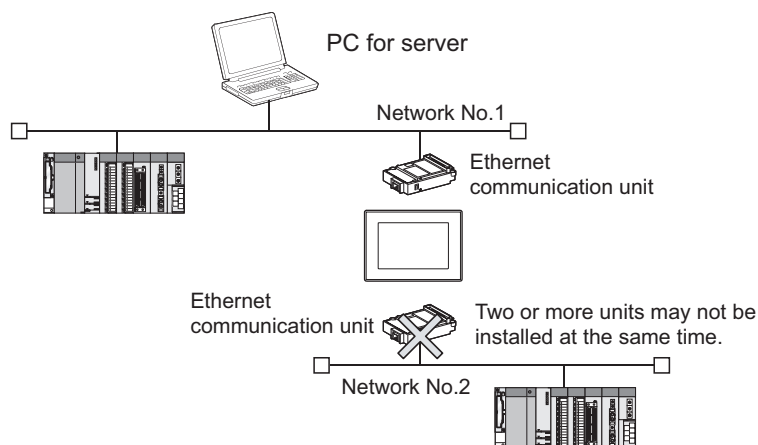*1 Connect the PLC to the same Ethernet communication unit as that used for connection between the GOT and PC.
 Ethernet connection is available between the GOT or PC that uses the MES interface function and the PLC within the same network. (Two or more Ethernet communication units may not be installed at the same time.)




2 System equipment

(1) GOT

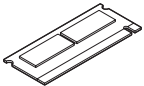Image	No.	Name	Model name
 Ethernet	1	Ethernet communication unit • For Ethernet communication	GT15-J71E71-100 
		Option function board • For optional function	GT15-MESB48M 


(2) PC for server

Image	No.	Name	Model name
	2	PC	Software to be used in MES interface function: DB connection service, DB connection service setting tool*1

*1 For the setting of the DB connection service, refer to the following manual.

 GOT1000 Series MES Interface Function Manual



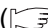
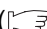

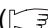
(3) Cable

Image	No.	Name	Model name
	3	Twisted pair cable	Shielded twisted pair cable (STP) or unshielded twisted pair cable in category (UTP): 3, 4 and 5



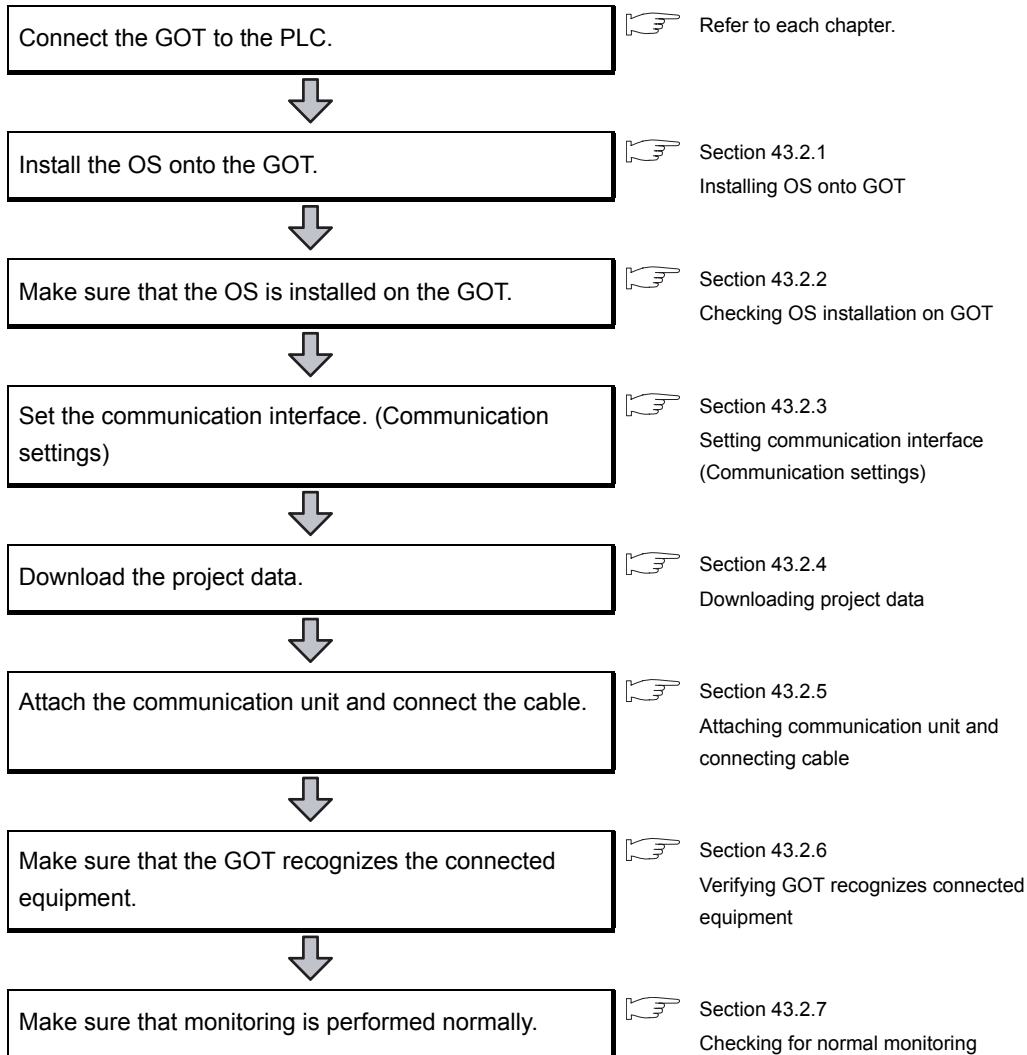
(1) System configuration between the GOT and PLC

For the system configuration between the GOT and PLC, refer to each chapter.

- MITSUBISHI PLC CONNECTIONS ( Chapter 2 to Chapter 9)
- THIRD PARTY PLC CONNECTIONS ( Chapter 10 to Chapter 15)
- MICROCOMPUTER CONNECTION ( Chapter 23)
- TEMPERATURE CONTROLLER CONNECTIONS ( Chapter 24 to Chapter 29)
- INVERTER CONNECTION ( Chapter 31)
- SERVO AMPLIFIER CONNECTION ( Chapter 32)

43.2 Preparatory Procedures for Monitoring

The following shows the procedures to be taken before monitoring and corresponding reference sections.




43.2.1 Installing OS onto GOT

Install the option OS onto the GOT.

For the OS installation methods, refer to the following manual.

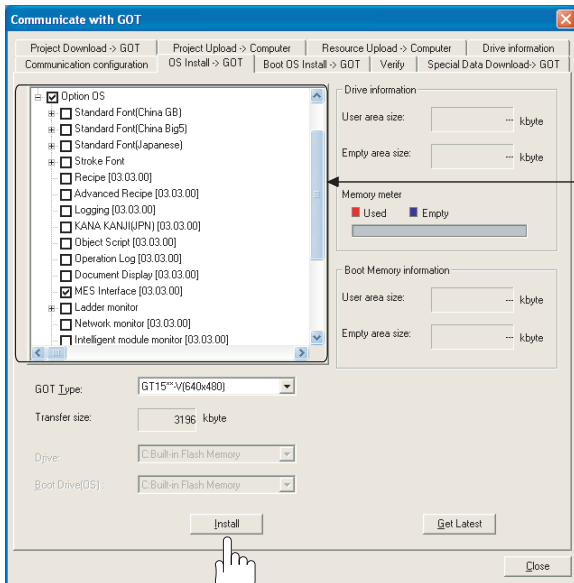☞ GT Designer2 Version □ Basic Operation/Data Transfer Manual



Check the following under the Communication driver.

- Depends on the connection type


Place a check-mark in the box of the function used in Option OS.

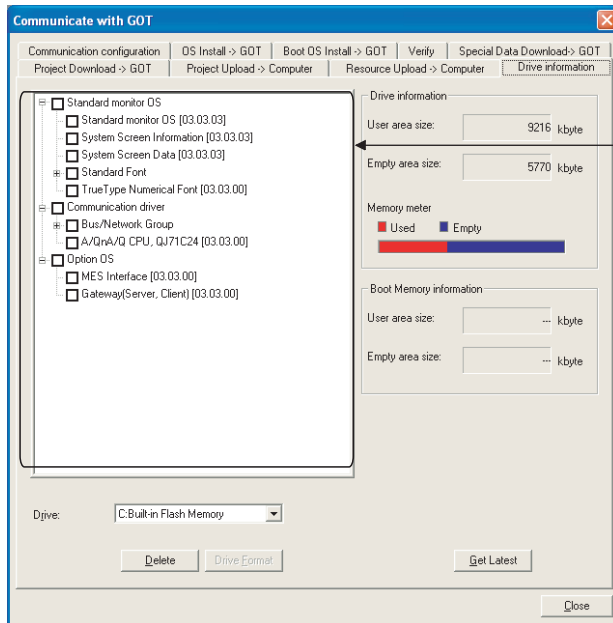
- MES Interface

1 Check-mark a desired option OS (MES interface function), and click the **Install** button.

43.2.2 Checking OS installation on GOT

Check if the OS is properly installed or not on the Drive information tab of GT Designer2.
For the operation on the Drive information tab, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual




The OS has been installed successfully on the GOT if the following can be confirmed.

- 1) Standard monitor OS
- 2) Communication driver: Depends on the connection type
- 3) Option OS (Functions to be used)
 - MES Interface

43.2.3 Setting communication interface (Communication settings)

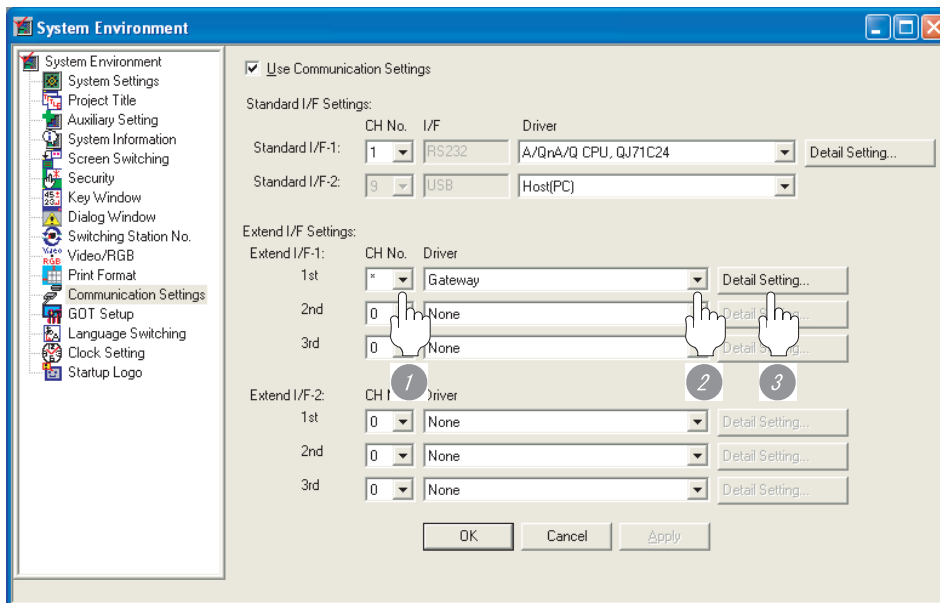
Make the GOT communication interface settings on [Communication Settings] of GT Designer2.
Select the same communication driver as the one installed on the GOT for each communication interface.
For details on [Communication Settings] of GT Designer2, refer to the following manual.

 GT Designer2 Version□ Screen Design Manual

1 Communication settings

When using the MES interface function, set either of the following setting in the communication settings.
In addition, set the IP address at the communication detail settings.

- (1) When the connection type is other than Ethernet connection



- 1 Set [*] to the channel No. used.

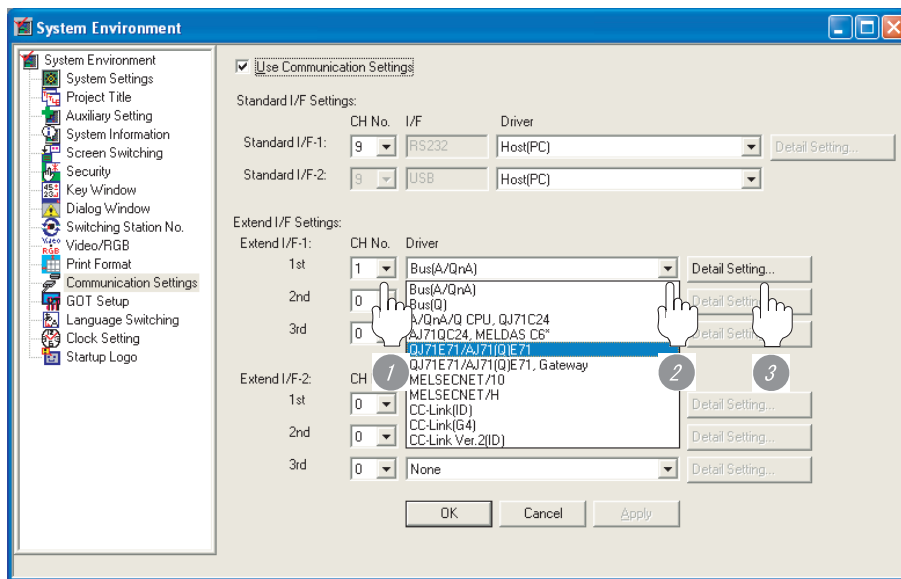
- 2 Set the driver.

When using the MES interface function only, set to [Ethernet Download].

When using the gateway function in combination with the MES interface function, set to [Gateway].

- 5 Perform the detailed settings for the driver. ( 2 Communication detail settings)

(2) When the connection type is Ethernet connection



- 1 Set [1] to the channel No. used.
- 2 Set the driver.
 - When MITSUBISHI PLC is used (only for the MES interface function): [QJ71E71/AJ71(Q)E71/Gateway]
 - When MITSUBISHI PLC is used (for use with the gateway function): [QJ71E71/AJ71(Q)E71/Gateway]
 - When YASKAWA PLC is used: [Ethernet(YASKAWA)/Gateway]
 - When YOKOGAWA PLC is used: [Ethernet(YOKOGAWA)/Gateway]
 - When Allen-Bradley PLC is used: [Ethernet(AB)/Gateway]
- 3 Perform the detailed settings for the driver. (☞ 2 Communication detail settings)

2 Communication detail settings

Communication Detail Settings

Driver: Ethernet Download

GOT NET No.: 1

GOT PLC No.: 1

GOT IP Address: 192.168.0.18
Select from IP Label:
List...

GOT Port No.

Communication: 5001

Ethernet Download: 5014

Default Gateway: 0.0.0.0

Subnet Mask: 255.255.255.0

Retry: 3 (Times)

Startup Time: 3 (Sec)

Timeout Time: 3 (Sec)

Delay Time: 0 (x 10 ms)

OK Cancel

When Ethernet download

Item	Description	Range
GOT NET No.	Set the network No. of the GOT. <Default: 1>	1 to 239
GOT PC No.	Set the station No. of the GOT. <Default: 1>	1 to 64
GOT IP Address	Set the IP address of the GOT. <Default: 192.168.0.18>	0.0.0.0 to 255.255.255.255
GOT Port No.*1 (Communication)*2	Set the GOT port No. for the connection with the connected equipment. • MITSUBISHI PLC <Default: 5001> • YASKAWA PLC <Default: 5016> • YOKOGAWA PLC <Default: 5017>	1024 to 5010, 5014 to 65534 (Except for 5011, 5012 and 5013)
GOT Port No.*1 (Ethernet Download)	Set the GOT port No. for Ethernet download. <Default:5014>	1024 to 5010, 5014 to 65534 (Except for 5011, 5012 and 5013)
Default Gateway	Set the router address of the default gateway where the GOT is connected. (Only for communication via router) <Default:0.0.0.0>	0.0.0.0 to 255.255.255.255
Subnet Mask	Set the subnet mask for the sub network. (Only for connection via router) If the sub network is not used, the default value is set. <Default: 255.255.255.0>	0.0.0.0 to 255.255.255.255
Retry	Set the number of retries to be performed when a communication error occurs. When receiving no response after retries, the communication times out. <Default: 3 Times>	0 to 5 Times
Startup Time	Specify the time period from the GOT startup until GOT starts the communication with the PLC CPU. <Default: 3 Sec>	3 to 255 Sec
Timeout Time*3	Set the time period for a communication to time out. <Default: 3 Sec>	3 to 90 Sec
Delay Time	Set the delay time for reducing the load of the network/destination PLC. <Default: 0ms>	0 to 10000 (× 10ms)

*1 When using the MES interface function only, the setting at [GOT port No.] is invalid.

*2 No setting is required for [Gateway] and [Ethernet Download] of the communication detail settings.

*3 To connect the GOT with the Ethernet module (Q Series) in the one-on-one relationship using a cross cable, set [Timeout Time] to 6 sec. or longer.



(1) Communication interface setting by Utility

The communication interface setting can be changed on the Utility's [Communication Settings] after downloading [Communication Settings] of project data.

For details on the Utility, refer to the following manual.

GT User's Manual


(2) Precedence in communication settings

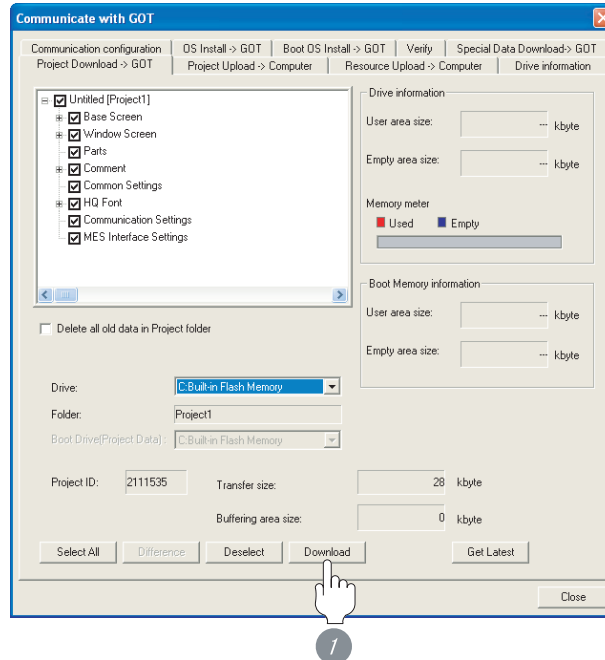
When settings are made by GT Designer2 or the Utility, the latest setting is effective.

43.2.4 Downloading project data

Download project data to the GOT.

For how to download project data, refer to the following manual.

 GT Designer2 Version Basic Operation/Data Transfer Manual



1 Check the necessary items and click the **Download** button.


43.2.5 Attaching communication unit and connecting cable



Precautions for cable connection or installation of the option function board or communication unit

Before installing the option function board or communication unit or connecting cables, shut off all phases of the power supply to the GOT.

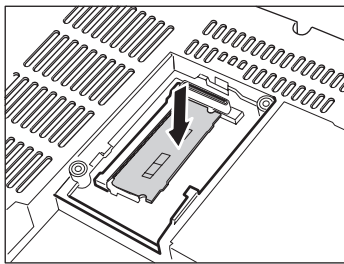1 Attaching the option function board



- 1 Attach the option function board to the option function board interface on the GOT




Option function board

For details on the option function board, refer to the following manual:

GT15 OPTION FUNCTION BOARD/OPTION FUNCTION BOARD WITH ADD-ON MEMORY User's Manual

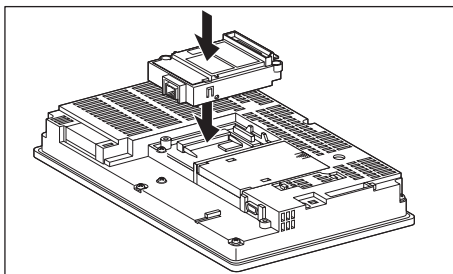2 Attaching the communication unit



- 1 Attach the Ethernet communication unit to the extension unit connector on the GOT.

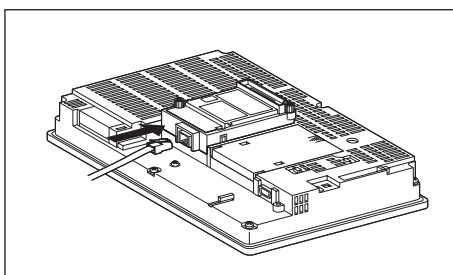


Ethernet communication unit

For details on the Ethernet communication unit, refer to the following manual:

GT15 Ethernet Communication Unit User's Manual

3 Connecting the cable



- 1 Connect the twisted pair cable to the Ethernet communication unit.

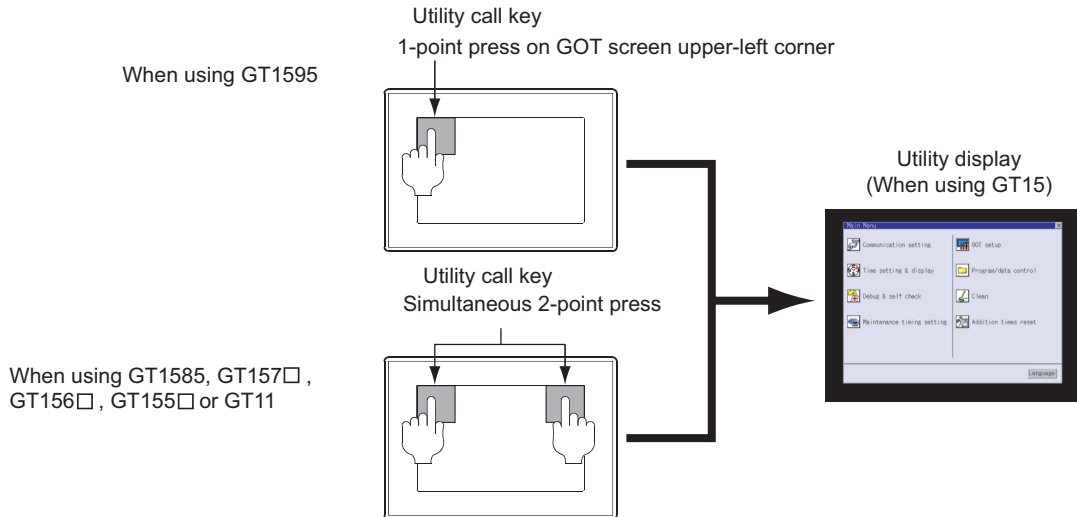
43.2.6 Verifying GOT recognizes controllers

Verify the GOT recognizes controllers on [Communication Settings] of the Utility.

- Channel number of communication interface, communication drivers allocation status
- Communication unit installation status

Remark

How to display Utility(at default)





Point

When setting the utility call key to 1-point

When setting [Pressing Time] to other than 0 second on the setting screen of the utility call key, press and hold the utility call key until the buzzer sounds. For the setting of the utility call key, refer to the following.

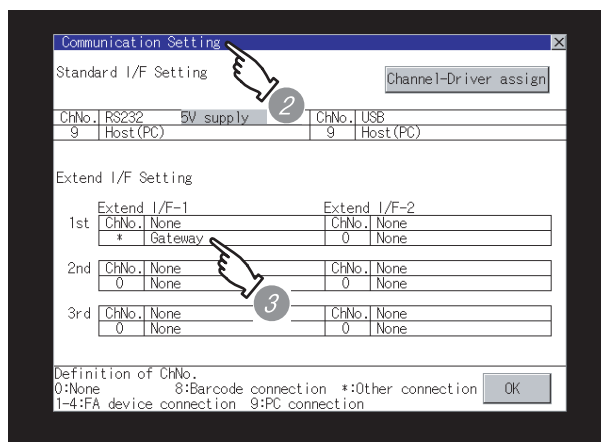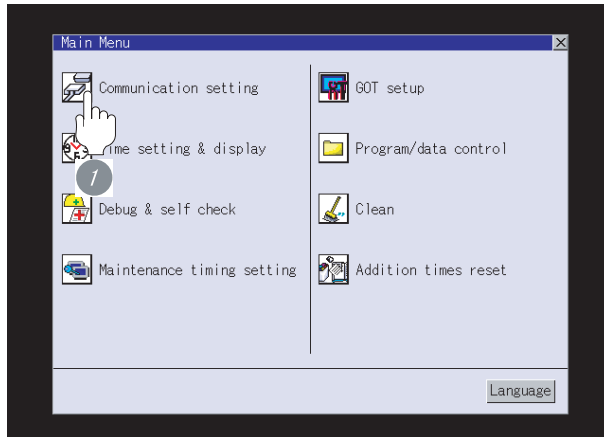 GT□ User's Manual



1 After powering up the GOT, touch [Main Menu] → [Communication Settings] from the Utility.

2 The [Communication Settings] appears.

3 Verify that the following communication driver name is displayed in the box for the communication interface to be used.

- Communication driver (either of the following)
 - Gateway
 - E71 connection
 - E71/gateway
 - Ethernet(YASKAWA)
 - Ethernet(YOKOGAWA)
 - Ethernet/IP(AB)

4 When the communication driver name is not displayed normally, carry out the following procedure again.

Section 43.2 Preparatory Procedures for Monitoring

Point

When changing communication interface setting by Utility

The communication interface setting can be changed by the Utility.
For details on the Utility, refer to the following manual.

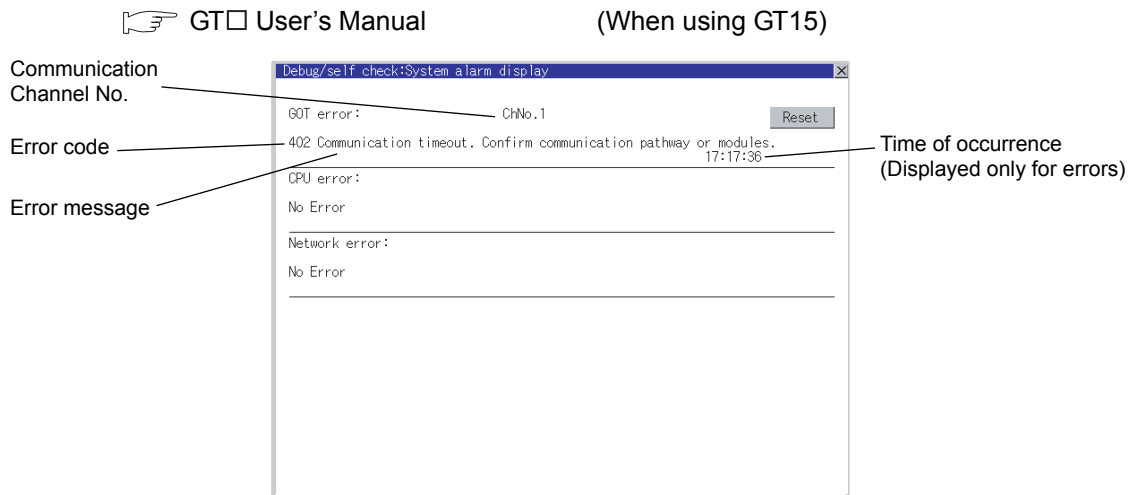
GT □ User's Manual

43.2.7 Checking for normal monitoring

1 Check for errors occurring on the GOT

Presetting the system alarm to project data allows you to identify errors occurred on the GOT, PLC CPU, servo amplifier and communications.

For details on the system alarm, refer to the following manual.



Advanced alarm popup display



With the advanced alarm popup display function, alarms are displayed as a popup display regardless of whether an alarm display object is placed on the screen or not (regardless of the display screen).

Since comments can be flown from right to left, even a long comment can be displayed all.

For details of the advanced popup display, refer to the following manual.

☞ GT Designer2 Version □ Screen Design Manual

2 Confirming the communication state of GOT

(1) When using the Command Prompt of Windows®

Execute a Ping command at the Command Prompt of Windows®

(a) When normal communication

```
C:\>Ping 192.168.0.18
```

```
Reply from 192.168.0.18: bytes=32 time<1ms TTL=64
```

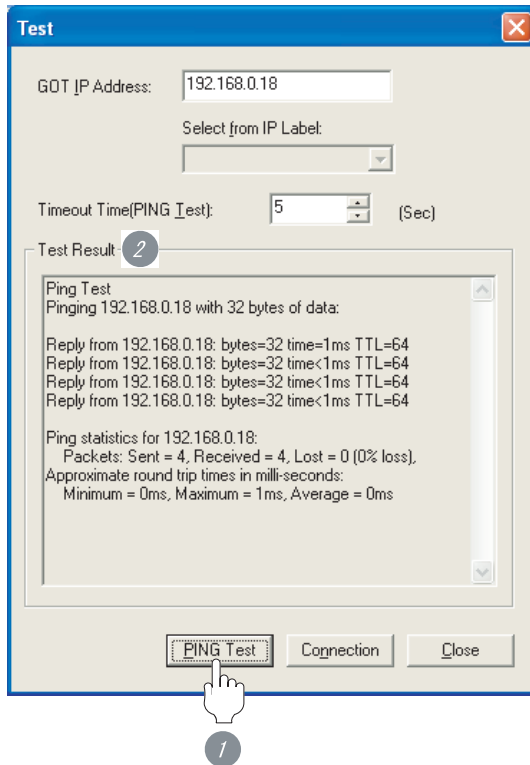
(b) When abnormal communication

```
C:\>Ping 192.168.0.18
```

```
Request timed out.
```

(2) When using the [PING Test] of GT Designer2

Select [Communication] → [Communication configuration] → [Ethernet] and **Test** to display [PING Test].



1 Specify the [GOT IP address] of the [PING Test] and click on the **PING Test** button.

2 The [Test Result] is displayed after the [PING Test] is finished.

(3) When abnormal communication

At abnormal communication, check the followings and execute the Ping command again.

- Mounting condition of Ethernet communication unit
- Cable connecting condition
- Confirmation of [Communication Settings]
- IP address of GOT specified by Ping command



Ethernet diagnostics of GX Developer (available only with Mitsubishi PLCs)

Ethernet diagnostics of GX Developer is available to a Ping test from the PLC.

For details of Ethernet diagnostics of GX Developer, refer to the following manual.



User's Manual of the Ethernet module

All settings related to communications are complete now.
Create screens on GT Designer2 and download the project data again.



If all the communication settings are completed

Set up the MES interface function to be used.



GOT1000 Series MES Interface Function Manual

43.3 List of Functions Added by Version Upgrade

The following describes the function added by version upgrade of GT Designer2 or OS.
For using the function below, use the GT Designer2 or OS of the stated version or later.

Item	Description	Version of GT Designer2	Version of OS
MES interface function	Function to realize data linkage between the control system and the information system.	2.43V	Standard monitor OS [03.01.**] Option OS • MES Interface [03.01.**]

INDEX

[A]	Accessing the inverter by the FR Configurator .. 40-32
	Accessing the PLC by the GX Developer..... 40-25
	Allen-Bradley PLC
	Control/Compact/FlexLogix..... 21-6
	MicroLogix1000/1200/1500 Series 21-4
	SLC500 Series..... 21-2
	AnCPU type
	Bus connection 2-5
	CC-Link connection (intelligent device station) .. 7-2
	Computer link connection 4-15
	Direct connection to a CPU..... 3-5
	Ethernet connection..... 9-2,33-68
	MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
	AnSCPU type
	Bus connection 2-8
	CC-Link connection (intelligent device station) .. 7-2
	Computer link connection 4-17
	Direct connection to a CPU..... 3-5
	Ethernet connection..... 9-2,33-68
	MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
[B]	
	Bar code reader connection 36-1
	Bus connection 2-1
[C]	
	CC-Link connection (intelligent device station)..... 7-1
	CC-Link connection (via G4) 8-1
	CHINO CONTROLLER
	GT120 26-7
	LT230,LT830..... 26-5
	LT300,LT400,DZ1000,DZ2000 26-2
	CNC CONNECTION
	CC-Link Connection(Intelligent Device Station)
 33-44
	Direct Connection To CPU..... 33-2
	Ethernet Connection 33-68
	MELSECNET/10 Connection (PLC To PLC
	Network)..... 33-21
	CNC connection
	Ethernet connection 19-37,20-39,21-32
	Communication check sheet 2-51
	Computer link connection 4-1
[D]	
	Direct connection to a CPU 3-1
[E]	
	Ethernet connection..... 9-1
	EXTERNAL I/O DEVICE 35-1
[F]	
	FA transparent function 40-1
	FUJI FA PLC
	MICREX-F120S/140S/150S..... 17-7
	MICREX-F55 17-2
	MICREX-F70 17-4
	FUJI SYS TEMPERATURE CONTROLLER
	PXG4, PXG5, PXG9, PXH9 25-4,27-4
	PXR3, PXR4, PXR5, PXR9
 25-2,25-5,27-2,29-2,29-6,29-8
	FXCPU(Direct connection to a CPU)
 3-9,3-12,3-17,3-20
[G]	
	Gateway function 42-1
[H]	
	HITACHI IES PLC
	H-200 to 252 series, H series board type, EH-150
	series..... 15-5
	Large-sized H series 15-2
	HITACHI PLC
	S10mini Series 16-5
	S10V Series 16-2
[I]	
	INVERTER CONNECTION
	FREQROL A500/F500 31-2
	FREQROL A700/F700 31-7
	FREQROL E500/S500 31-5
[J]	
	JTEKT PLC
	PC2J 13-9,17-7
	PC2JC, PC2J16P, PC2J16PR 13-12
	PC3J, PC3JL..... 13-5,16-5,17-4
	PC3JG, PC3JG-P 13-2,16-2,17-2
[K]	
	KEYENCE PLC
	KV-1000 11-3
	KV-700 11-6
[M]	
	MATSUSHITA PLC
	FP SIGMA 18-17
	FP0-C16CT, FP0-C32CT 18-2
	FP10 (S)..... 18-12
	FP10SH..... 18-14
	FP1-C24C, FP1-C40C 18-4
	FP2, FP2SH 18-6
	FP3..... 18-8
	FP5..... 18-10

FP-M (C20TC), FP-M (C32TC).....	18-16
FP-X.....	18-19
MELSECNET/10 connection (PLC to PLC network)	6-1
MELSECNET/H connection (PLC to PLC network)	5-1
MES INTERFACE FUNCTION.....	43-1
Microcomputer connection.....	23-1
Motion controller CPU (A Series)	
Bus connection.....	2-16,2-20
CC-Link connection (intelligent device station) ..	7-2
Computer link connection.....	4-19
Direct connection to a CPU.....	3-25,3-27
Ethernet connection.....	9-2,33-68
MELSECNET/10 connection (PLC to PLC network)	6-3,6-5
Motion controller CPU (Q Series)	
Bus connection.....	2-15
CC-Link connection (intelligent device station) ..	7-2
CC-Link connection (via G4).....	8-2
Computer link connection.....	4-19
Direct connection to a CPU.....	3-25,3-27
Ethernet connection.....	9-2,33-68
MELSECNET/10 connection (PLC to PLC network)	6-3,6-5
MELSECNET/H connection (PLC to PLC network)	5-3,5-5
MULTI-CHANNEL FUNCTION.....	39-1
Multiple-GT11 connection function.....	41-1
[O]	
OMRON PLC	
C1000H/C2000H, CV500/CV1000/CV2000, CVM1	10-18
C200HS, C200H, C200H, CS1.....	10-12
CPM1, CPM1A, CPM2A, CPM2C.....	10-2
CQM1, CQM1H, CJ1.....	10-6
OMRON TEMPERATURE CONTROLLER	
E5AN, E5EN.....	24-2
E5CN, E5GN.....	24-4
E5ZN.....	24-6
[P]	
PLC Side Settings	
CC-Link connection (intelligent device station)	7-25
CC-Link connection (via G4).....	8-18
Computer link connection.....	4-46
Ethernet connection.....	9-20
FUJI FA PLC.....	17-30
HITACHI PLC.....	16-26
JTEKT PLC.....	13-36
KEYENCE PLC.....	11-33
MATSUSHITA PLC.....	18-39
MELSECNET/10 connection (PLC to PLC network)	6-27
MELSECNET/H connection (PLC to PLC network)	5-25
SHARP PLC.....	12-35
TOSHIBA PLC.....	14-26

Precautions	
Bar code reader connection.....	36-14,38-12
Bus connection.....	2-44
CC-Link connection (intelligent device station) ..	7-58
CHINO CONTROLLER.....	26-40
CNC CONNECTION.....	33-20,33-43,33-67,33-89
Ethernet connection.....	9-38,19-59
EXTERNAL I/O DEVICE.....	35-21
FA transparent function.....	40-34
FUJI FA PLC.....	17-40
FUJI SYS TEMPERATURE CONTROLLER..	27-37
INVERTER CONNECTION.....	31-30
JTEKT PLC.....	13-42
MELSECNET/10 connection (PLC to PLC network)	6-49
MELSECNET/H connection (PLC to PLC network)	5-31
Multiple-GT11 connection function.....	41-23
OMRON TEMPERATURE CONTROLLER... ..	24-32
PRINTER CONNECTION.....	38-12
RKC TEMPERATURE CONTROLLER.....	28-43
SERVO AMPLIFIER CONNECTION.....	32-33
SHINKO TECHNOS INDICATING CONTROLLER	25-26
SIEMENS PLC.....	22-25
SOUND OUTPUT UNIT.....	34-12
Video/RGB connection.....	37-22
YAMATAKE TEMPERATURE CONTROLLER	30-49
YOKOGAWA PLC.....	20-38
YOKOGAWA TEMPERATURE CONTROLLER	29-46
Preparatory procedures for accessing FA transparent function.....	40-18
Preparatory procedures for monitoring	
Allen-Bradley PLC.....	21-11,21-34
Bar code reader connection.....	36-4,38-4
Bus connection.....	2-26
CC-Link connection (intelligent device station) ..	7-7
CC-Link connection (via G4).....	8-5
CHINO CONTROLLER.....	26-19
CNC CONNECTION.....	33-6,33-23,33-46,33-70
Computer link connection.....	4-27
Direct connection to a CPU.....	3-32
Ethernet connection.....	9-4
EXTERNAL I/O DEVICE.....	35-12
FUJI FA PLC.....	17-15
FUJI SYS TEMPERATURE CONTROLLER..	27-14
Gateway function.....	42-6
HITACHI IES PLC.....	15-11
HITACHI PLC.....	16-11
INVERTER CONNECTION.....	31-15
JTEKT PLC.....	13-21
KEYENCE PLC.....	11-17
MATSUSHITA PLC.....	18-27
MELSECNET/10 connection (PLC to PLC network)	6-7,33-23
MELSECNET/H connection (PLC to PLC network)	5-7

- MES INTERFACE FUNCTION 43-5
 Microcomputer connection 23-78
 MULTI-CHANNEL FUNCTION 39-4
 Multiple-GT11 connection function 41-7
 OMRON PLC 10-31
 OMRON TEMPERATURE CONTROLLER ... 24-14
 PRINTER CONNECTION 38-4
 RKC TEMPERATURE CONTROLLER 30-23
 SERVO AMPLIFIER CONNECTION 32-14
 SHARP PLC 12-21
 SHINKO TECHNOS INDICATING CONTROLLER
 25-10
 SIEMENS PLC 22-7
 SOUND OUTPUT UNIT 34-4
 TOSHIBA PLC 14-12
 Video/RGB CONNECTION 37-12
 YAMATAKE TEMPERATURE CONTROLLER
 28-24
 YASKAWA PLC 19-22,19-40
 YOKOGAWA PLC 20-14,20-41
 YOKOGAWA TEMPERATURE CONTROLLER
 29-23
 PRINTER CONNECTION 38-1
- [Q]
 QCPU (A mode)
 CC-Link connection (intelligent device station) .. 7-2
 Computer link connection 4-6
 Direct connection to a CPU 3-2
 Ethernet connection 9-2,33-68
 MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
 QCPU (Q mode)
 Bus connection 2-3
 CC-Link connection (intelligent device station) .. 7-2
 CC-Link connection (via G4) 8-2
 Computer link connection 4-2
 Direct connection to a CPU 3-2
 Ethernet connection 9-2,33-68
 MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
 MELSECNET/H connection (PLC to PLC network)
 5-3,5-5
 QnACPU type
 Bus connection 2-5
 CC-Link connection (intelligent device station) .. 7-2
 Computer link connection 4-8
 Direct connection to a CPU 3-5
 Ethernet connection 9-2,33-68
 MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
 QnASCPU type
 Bus connection 2-8
 CC-Link connection (intelligent device station) .. 7-2
 Computer link connection 4-12
 Direct connection to a CPU 3-5
 Ethernet connection 9-2,33-68
 MELSECNET/10 connection (PLC to PLC network)
 6-3,6-5
- [R]
 Remote I/O station in the MELSECNET/H network
 system
 Computer link connection 4-19
 Direct connection to a CPU 3-25
 RKC TEMPERATURE CONTROLLER
 H-PCP-A, H-PCP-B 30-6
 H-PCP-J 30-2
 SRZ 30-9
- [S]
 SERVO AMPLIFIER
 MELSERVO-J2M Series 32-4
 MELSERVO-J2-Super Series 32-2
 MELSERVO-J3 Series 32-31
 Servo amplifier connection 32-1
 Setting on servo amplifier side 32-28
 SHARP PLC
 JW-21CU, JW-22CU 12-2
 JW-31CUH, JW-32CUH, JW-33CUH 12-5
 JW-50CUH 12-8
 JW-70CUH, JW-100CUH, JW-100CU 12-10
 Z-512J 12-13
 SHINKO TECHNOS INDICATING CONTROLLER
 ACS-13A, JC, JCM-33A, JIR-301-M Series 25-2
 DCL-33A Series 25-5
 FCD-100, FCR-100, FCR-23A, FIR, PC-900 Series
 25-4
 SIEMENS PLC
 SIMATIC S7-200 Series 22-4
 SIMATIC S7-300/400 Series 22-3
 SOUND OUTPUT UNIT 34-1
 Station NO. settings
 CHINO CONTROLLER 26-39
 FUJI FA PLC 17-39
 FUJI SYS TEMPERATURE CONTROLLER .. 27-36
 INVERTER CONNECTION 31-28
 JTEKT PLC 13-41
 OMRON TEMPERATURE CONTROLLER 24-31
 RKC TEMPERATURE CONTROLLER 30-48
 SERVO AMPLIFIER CONNECTION 32-32
 SHINKO TECHNOS INDICATING CONTROLLER
 25-25
 YAMATAKE TEMPERATURE CONTROLLER
 28-42
 YOKOGAWA TEMPERATURE CONTROLLER
 29-45
- [T]
 TEMPERATURE CONTROLLER
 OMRON TEMPERATURE CONTROLLER 24-1
 RKC TEMPERATURE CONTROLLER 30-1
 YAMATAKE TEMPERATURE CONTROLLER 28-1
 TOSHIBA PLC
 model 3000 (S2/S3) 14-5
 T2 (PU224), T2E, T2N, T3, T3H 14-2

[V]
Video/RGB CONNECTION 37-1

[Y]
YAMATAKE TEMPERATURE CONTROLLER
DMC10 28-2
SDC15, SDC25/26, SDC35/36 28-4
SDC20/21 28-6
SDC30/31 28-9
SDC40A/40B/40G 28-11
YASKAWA PLC
MP-920 19-37
MP2200, MP2300 19-39
CP-9200SH 19-11
GL120, GL130 19-2
GL60S, GL60H, GL70H 19-4
MP-920/930, CP-9300MS/9200(H), PROGIC-8
..... 19-6
MP-940 19-9
YOKOGAWA PLC
FA500 20-5
FA-M3 20-2,20-39,21-32
STARDOM 20-7
YOKOGAWA TEMPERATURE CONTROLLER
GREEN Series 29-2
UT100 Series 29-6
UT2000 Series 29-8

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company. However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 2. Failure caused by unapproved modifications, etc., to the product by the user.
 3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation of damages caused by any cause found not to be the responsibility of Mitsubishi, loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products, special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products, replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

6. Product application

- (1) In using the Mitsubishi graphic operation terminal, the usage conditions shall be that the application will not lead to a major accident even if any problem or fault should occur in the graphic operation terminal device, and that backup and fail-safe functions are systematically provided outside of the device for any problem or fault.
- (2) The Mitsubishi graphic operation terminal has been designed and manufactured for applications in general industries, etc. Thus, applications in which the public could be affected such as in nuclear power plants and other power plants operated by respective power companies, and applications in which a special quality assurance system is required, such as for Railway companies or Public service purposes shall be excluded from the graphic operation terminal applications. In addition, applications in which human life or property that could be greatly affected, such as in aircraft, medical applications, incineration and fuel devices, manned transportation, equipment for recreation and amusement, and safety devices, shall also be excluded from the graphic operation terminal range of applications. However, in certain cases, some applications may be possible, providing the user consults their local Mitsubishi representative outlining the special requirements of the project, and providing that all parties concerned agree to the special circumstances, solely at the users discretion.

Microsoft Windows, Microsoft Windows NT are registered trademarks of Microsoft Corporation in the United States and other countries.

Other company and product names herein are either trademarks or registered trademarks of their respective owners.

GRAPHIC OPERATION TERMINAL

GOT1000

GOT1000 Series Connection Manual 3/3

MODEL	GT1000-U(CON)-E
MODEL CODE	1D7M26
SH(NA)-080532ENG-H 3/3(0705)MEE	

 **MITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.